



---

*Errata*

**2**

---

# Manual: 19958

---

## Manual Index: 0300

### *Table of Contents:*

1. *Reference: Page 3 - 4, Chapter 3.3, Table 3-1* ..... 2 - 3



This page has been intentionally left blank.



## 1. Reference: Page 3 - 4, Chapter 3.3, Table 3-1

The referenced information (table) is superseded by the following table.

**Table 3-1: PB-SIO4A Jumper Settings**

JUMPER/ CHANNEL		SETTING	DEFAULT RS422	DEFAULT RS485	FUNCTION
B53	A	2-3		X	receiver and driver line connected pull-up resistor for driver line pull-up resistor for receiver line pull-up resistor for driver and receiver line
B55	B	1-2	X		
B57	C	1-3			
B59	D	1-2-3			
B54	A	2-3			X
B56	B	1-2	X		
B58	C	1-3			
B60	D				
B61	D	closed open		X	X
B62	A				
B63	B				
B64	C				
B65	C	1-2	X	X	receiver control by driver enabled receiver control permanent enabled
B66	D	1-3			
B67	A				
B68	B				
B51 and B52		closed	*	*	VCCext and GNDext from piggyback * (This is the operational configuration when optocouplers <b>are not</b> installed.)
		open	**	**	VCCext and GNDext from external source ** (This is the operational configuration when optocouplers <b>are</b> installed.)



This page has been intentionally left blank.

