



SmartClient-SLUx-170-P

Doc. User Guide, Rev. 1.0

Doc. ID: [To be Determined]

This page has been intentionally left blank

 SMARTCLIENT-SLUX-170-P - USER GUIDE

Disclaimer

Kontron would like to point out that the information contained in this user guide may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the user guide or any product characteristics set out in the user guide. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this user guide are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this user guide only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This user guide is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this user guide is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this user guide only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners.

©2020 by Kontron AG

Kontron AG

Lise-Meitner-Str. 3-5
86156 Augsburg
Germany
www.kontron.com

High Risk Applications Hazard Notice

THIS DEVICE AND ASSOCIATED SOFTWARE ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE FOR THE OPERATION OF NUCLEAR FACILITIES, THE NAVIGATION, CONTROL OR COMMUNICATION SYSTEMS FOR AIRCRAFT OR OTHER TRANSPORTATION, AIR TRAFFIC CONTROL, LIFE SUPPORT OR LIFE SUSTAINING APPLICATIONS, WEAPONS SYSTEMS, OR ANY OTHER APPLICATION IN A HAZARDOUS ENVIRONMENT, OR REQUIRING FAIL-SAFE PERFORMANCE, OR IN WHICH THE FAILURE OF PRODUCTS COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY, "HIGH RISK APPLICATIONS").

You understand and agree that your use of Kontron devices as a component in High Risk Applications is entirely at your risk. To minimize the risks associated with your products and applications, you should provide adequate design and operating safeguards. You are solely responsible for compliance with all legal, regulatory, safety, and security related requirements concerning your products. You are responsible to ensure that your systems (and any Kontron hardware or software components incorporated in your systems) meet all applicable requirements. Unless otherwise stated in the product documentation, the Kontron device is not provided with error-tolerance capabilities and cannot therefore be deemed as being engineered, manufactured or setup to be compliant for implementation or for resale as device in High Risk Applications. All application and safety related information in this document (including application descriptions, suggested safety measures, suggested Kontron products, and other materials) is provided for reference only.

Revision History

Revision	Brief Description of Changes	Date of Issue
1.0	Initial Issue	2020-Jun-5

Terms and Conditions

Kontron warrants products in accordance with defined regional warranty periods. For more information about warranty compliance and conformity, and the warranty period in your region, visit <http://www.kontron.com/terms-and-conditions>.

Kontron sells products worldwide and declares regional General Terms & Conditions of Sale, and Purchase Order Terms & Conditions. Visit <http://www.kontron.com/terms-and-conditions>.

For contact information, refer to the corporate offices contact information on the last page of this user guide or visit our website [CONTACT US](#).

Customer Support

Find Kontron contacts by visiting: <http://www.kontron.com/support>.

Customer Service

As a trusted technology innovator and global solutions provider, Kontron extends its embedded market strengths into a services portfolio allowing companies to break the barriers of traditional product lifecycles. Proven product expertise coupled with collaborative and highly-experienced support enables Kontron to provide exceptional peace of mind to build and maintain successful products.

For more details on Kontron's service offerings such as: enhanced repair services, extended warranty, Kontron training academy, and more visit <http://www.kontron.com/support-and-services/services>.

Customer Comments

If you have any difficulties using this user guide, discover an error, or just want to provide some feedback, contact [Kontron support](#). Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website.

Symbols

The following symbols may be used in this user guide

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

NOTICE indicates a property damage message.

⚠ CAUTION

CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Electric Shock!

This symbol and title warn of hazards due to electrical shocks (> 60 V) when touching products or parts of products. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.



ESD Sensitive Device!

This symbol and title inform that the electronic boards and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.



HOT Surface!

Do NOT touch! Allow to cool before servicing.



Laser!

This symbol inform of the risk of exposure to laser beam and light emitting devices (LEDs) from an electrical device. Eye protection per manufacturer notice shall review before servicing.



This symbol indicates general information about the product and the user guide.

This symbol also indicates detail information about the specific product configuration.



This symbol precedes helpful hints and tips for daily use.

For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

High Voltage Safety Instructions

As a precaution and in case of danger, the power connector must be easily accessible. The power connector is the product's main disconnect device.

CAUTION

Warning

All operations on this product must be carried out by sufficiently skilled personnel only.

CAUTION



Electric Shock!

Before installing a non hot-swappable Kontron product into a system always ensure that your mains power is switched off. This also applies to the installation of piggybacks. Serious electrical shock hazards can exist during all installation, repair, and maintenance operations on this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing any work on this product.

Earth ground connection to vehicle's chassis or a central grounding point shall remain connected. The earth ground cable shall be the last cable to be disconnected or the first cable to be connected when performing installation or removal procedures on this product.

Special Handling and Unpacking Instruction

NOTICE



ESD Sensitive Device!

Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the product is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the product.

Lithium Battery Precautions

If your product is equipped with a lithium battery, take the following precautions when replacing the battery.

CAUTION

Danger of explosion if the battery is replaced incorrectly.

- ▶ Replace only with same or equivalent battery type recommended by the manufacturer.
- ▶ Dispose of used batteries according to the manufacturer's instructions.

General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the product, that are not explicitly approved by Kontron and described in this user guide or received from Kontron Support as a special handling instruction, will void your warranty.

This product should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This also applies to the operational temperature range of the specific board version that must not be exceeded. If batteries are present, their temperature restrictions must be taken into account.

In performing all necessary installation and application operations, only follow the instructions supplied by the present user guide.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the product then re-pack it in the same manner as it was delivered.

Special care is necessary when handling or unpacking the product. See Special Handling and Unpacking Instruction.

Quality and Environmental Management

Kontron aims to deliver reliable high-end products designed and built for quality, and aims to complying with environmental laws, regulations, and other environmentally oriented requirements. For more information regarding Kontron's quality and environmental responsibilities, visit <http://www.kontron.com/about-kontron/corporate-responsibility/quality-management>.

Disposal and Recycling

Kontron's products are manufactured to satisfy environmental protection requirements where possible. Many of the components used are capable of being recycled. Final disposal of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

WEEE Compliance

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to:

- ▶ Reduce waste arising from electrical and electronic equipment (EEE)
- ▶ Make producers of EEE responsible for the environmental impact of their products, especially when the product become waste
- ▶ Encourage separate collection and subsequent treatment, reuse, recovery, recycling and sound environmental disposal of EEE
- ▶ Improve the environmental performance of all those involved during the lifecycle of EEE



Environmental protection is a high priority with Kontron.

Kontron follows the WEEE directive

You are encouraged to return our products for proper disposal.

Table of Contents

Symbols.....	6
For Your Safety	7
High Voltage Safety Instructions	7
Special Handling and Unpacking Instruction	7
Lithium Battery Precautions.....	8
General Instructions on Usage	8
Quality and Environmental Management	8
Disposal and Recycling.....	8
WEEE Compliance.....	8
Table of Contents	9
List of Tables	10
List of Figures	11
1/ General Safety Instructions for IT Equipment	12
1.1. Electrostatic Discharge (ESD).....	14
1.1.1. Grounding Methods	14
1.2. Lithium Battery Replacement	14
2/ Shipment and Unpacking	15
2.1. Unpacking	15
2.2. Scope of Delivery	15
3/ System Overview	16
3.1. System Expansion Capabilities.....	16
3.1.1. System Expansion via SATA Interface	16
3.1.2. System Expansion via mPCIe Card Interface.....	16
3.1.3. System Expansion via M.2 Card Interface	17
3.2. Rear I/O Panel.....	18
3.2.1. 2-pin Phoenix DC-In Power Connector.....	18
3.2.2. Power Switch.....	18
3.2.3. HDMI 2.0.....	19
3.2.4. DP	19
3.2.5. Line-In	19
3.2.6. Line-Out.....	19
3.2.7. Mic-In	19
3.2.8. GbE.....	19
3.2.9. USB 3.0.....	19
3.2.10. RS232/422/485.....	20
3.2.11. DIO.....	20
3.2.12. Power LED.....	20
3.2.13. Storage LED	20
4/ Thermal Considerations	21
4.1. Available Processors	21
4.2. Convection Cooling	21
4.3. System Clearance.....	21
4.4. Maximum Temperatures.....	21
4.5. Third Party Components.....	21
5/ Installation Instructions	22
5.1. System Mounting	23

5.1.1. System Mounting by Use of the Mounting Clamps.....	23
5.1.2. System Mounting by Use of a VESA Mounting Kit	25
5.2. DC Power Connection.....	28
5.2.1. Cabling.....	28
6/ Starting Up.....	29
6.1. Connecting to DC Power Supply.....	29
6.2. Operating System and Hardware Component Drivers	31
7/ Maintenance and Cleaning	32
7.1. Touch Screen Care and Cleaning.....	32
7.2. Replacing the Lithium Battery.....	32
8/ Technical Specifications.....	33
8.1. Mechanical Specifications	34
8.1.1. Mechanical Drawing.....	34
8.2. Environmental Conditions.....	35
9/ Standard Interfaces – Pin Assignments	36
9.1.1. Phoenix Connector.....	36
9.1.2. Ethernet Connectors.....	36
9.1.3. USB 3.0 Port.....	36
9.1.4. HDMI Connector	37
9.1.5. DP Connector.....	37
9.1.6. RS232/422/485 Serial Port	38
9.1.7. DIO Port	38
9.1.8. Line-In Connector	38
9.1.9. Line-Out Connector.....	39
9.1.10. Mic-In Connector.....	39
10/ uEFI BIOS	40
10.1. Starting the uEFI BIOS.....	40
10.2. Setup Menus	41
10.2.1. Main Setup Menu	41
10.2.2. Advanced Setup Menu.....	43
10.2.3. Power Setup Menu	57
10.2.4. Boot Setup Menu.....	59
10.2.5. Security Setup Menu	60
10.2.5.1. Remember the password	61
10.2.6. Save & Exit Setup Menu.....	62
Appendix A: List of Acronyms.....	63
About Kontron	64

List of Tables

Table 1: Specification for mounting by use of the mounting clamps.....	23
Table 2: Technical Specifications.....	33
Table 3: Mechanical Specifications	34
Table 4: Environmental Conditions	35
Table 5: Phoenix Connector (see Figure 1, pos.1)	36
Table 6: Ethernet Connector (see Figure 1, pos. 8).....	36
Table 7: USB 3.0 Port (see Figure 1, pos. 9).....	36
Table 8: HDMI Connector (see Figure 1, pos. 3)	37
Table 9: DP Connector (see Figure 1, pos. 4).....	37
Table 10: RS232/422/485 Serial Port (see Figure 1, pos. 10).....	38

Table 11: DIO Port (see Figure 1, pos. 11)	38
Table 12: Line-In Connector (see Figure 1, pos. 5).....	38
Table 13: Line-Out Connector (see Figure 1, pos. 6)	39
Table 14: Mic-In Connector (see Figure 1, pos. 7).....	39
Table 15: Navigation Hot Keys Available in the Legend Bar	40
Table 16: Main Setup Menu Sub-Screens and Functions	41
Table 17: List of Acronyms	63

List of Figures

Figure 1: Rear I/O Panel	18
Figure 2: Ethernet LED Status.....	19
Figure 3: Mounting clamp.....	23
Figure 4: Insert the system into the cutout	24
Figure 5: Hook mounting clamps into mounting openings.....	24
Figure 6: VESA mounting hole locations	25
Figure 7: Optional VESA mounting kit	25
Figure 8: Secure the base mounting bracket	26
Figure 9: Secure the hooked mounting bracket onto the SmartClient-SLUx-170-P.....	26
Figure 10: Secure the SmartClient-SLUx-170-P onto the mounting surface.....	27
Figure 11: Phoenix power plug terminal.....	28
Figure 12: Mechanical Drawing	34
Figure 13: BIOS Main Menu Screen System Data and Time	42
Figure 14: BIOS Advanced Menu	44
Figure 15: BIOS Advanced Menu - Display Configuration.....	45
Figure 16: BIOS Advanced Menu - Super IO Configuration.....	47
Figure 17: BIOS Advanced Menu - Super IO Configuration - Serial Port 1 Configuration.....	47
Figure 18: BIOS Advanced Menu - Super IO Configuration - Serial Port 2 Configuration	48
Figure 19: BIOS Advanced Menu - CPU Chipset Configuration.....	49
Figure 20: BIOS Advanced Menu - SATA Configuration	50
Figure 21: BIOS Advanced Menu - USB Configuration	51
Figure 22: BIOS Advanced Menu - AMT Configuration.....	52
Figure 23: BIOS Advanced Menu - Trusted Computing.....	53
Figure 24: BIOS Advanced Menu - Network Stack.....	54
Figure 25: BIOS Advanced Menu - DIO Configuration	55
Figure 26: BIOS Advanced Menu - H/W Monitor.....	56
Figure 27: BIOS Power Setup Menu	57
Figure 28: BIOS Power Setup Menu - WatchDog Timer Configuration	57
Figure 29: BIOS Boot Setup Menu	59
Figure 30: BIOS Security Setup Menu.....	60
Figure 31: BIOS Save & Exit Setup Menu	62

1/ General Safety Instructions for IT Equipment

⚠ WARNING

Please read this chapter carefully and take careful note of the instructions, which have been compiled for your safety and to ensure to apply in accordance with intended regulations. If the following general safety instructions are not observed, it could lead to injuries to the operator and/or damage of the product; in cases of nonobservance of the instructions Kontron is exempt from accident liability, this also applies during the warranty period.

The product has been built and tested according to the basic safety requirements for low voltage (LVD) applications and has left the manufacturer in safety-related, flawless condition. To maintain this condition and also to ensure safe operation, the operator must not only observe the correct operating conditions for the product but also the following general safety instructions:

- ▶ The product must be used as specified in the product documentation, in which the instructions for safety for the product and for the operator are described. These contain guidelines for setting up, installation and assembly, maintenance, transport or storage.
- ▶ The on-site electrical installation must meet the requirements of the country's specific local regulations.
- ▶ If a power cable comes with the product, only this cable should be used. Do not use an extension cable to connect the product.
- ▶ To guarantee that sufficient air circulation is available to cool the product, please ensure that the ventilation openings are not covered or blocked. If an air filter is provided, this should be cleaned regularly. Do not place the system close to heat sources or damp places. Make sure the system is well ventilated.
- ▶ Only devices or parts which fulfill the requirements of SELV circuits (Safety Extra Low Voltage) as stipulated by IEC 60950-1 may be connected to the available interfaces.
- ▶ Before opening the device, make sure that the device is disconnected from the mains.
- ▶ Switching off the device by its power button does not disconnect it from the mains. Complete disconnection is only possible if the power cable is removed from the wall plug or from the device. Ensure that there is free and easy access to enable disconnection.
- ▶ The device may only be opened for the insertion or removal of add-on cards (depending on the configuration of the system). This may only be carried out by qualified operators.
- ▶ If extensions are being carried out, the following must be observed:
 - ▶ All effective legal regulations and all technical data are adhered to.
 - ▶ The power consumption of any add-on card does not exceed the specified limitations.
 - ▶ The current consumption of the system does not exceed the value stated on the product label.
- ▶ Only original accessories that have been approved by Kontron can be used.
- ▶ Please note: safe operation is no longer possible when any of the following applies:
 - ▶ The device has visible damages.
 - ▶ The device is no longer functioning.

In this case the device must be switched off and it must be ensured that the device can no longer be operated.

Additional safety instructions for DC power supply circuits

- ▶ To guarantee safe operation of devices with DC power supply voltages larger than 60 volts DC or a power consumption larger than 240 VA, please observe that:
 - ▶ the device is set up, installed and operated in a room or enclosure marked with "RESTRICTED ACCESS", if there are no safety messages on product as safety signs and labels on the device itself.
 - ▶ no cables or parts without insulation in electrical circuits with dangerous voltage or power should be touched directly or indirectly
 - ▶ a reliable protective earthing connection is provided
 - ▶ a suitable, easily accessible disconnecting device is used in the application (e.g. overcurrent protective device), if the device itself is not disconnectable
 - ▶ a disconnect device, if provided in or as part of the equipment, shall disconnect both poles simultaneously
 - ▶ interconnecting power circuits of different devices cause no electrical hazards
- ▶ A sufficient dimensioning of the power cable wires must be selected – according to the maximum electrical specifications on the product label – as stipulated by EN60950-1 or VDE0100 or EN60204 or UL508 regulations.
- ▶ The devices do not generally fulfill the requirements for "centralized DC power systems" (UL 60950-1, Annex NAB; D2) and therefore may not be connected to such devices!

1.1. Electrostatic Discharge (ESD)



A sudden discharge of electrostatic electricity can destroy static-sensitive devices or micro-circuitry.

Therefore proper packaging and grounding techniques are necessary precautions to prevent damage. Always take the following precautions:

1. Transport boards in ESD-safe containers such as boxes or bags.
2. Keep electrostatic sensitive parts in their containers until they arrive at the ESD-safe workplace.
3. Always be properly grounded when touching a sensitive board, component, or assembly.
4. Store electrostatic-sensitive boards in protective packaging or on antistatic mats.

1.1.1. Grounding Methods

By adhering to the guidelines below, electrostatic damage to the device can be avoided:

1. Cover workstations with approved antistatic material. Always wear a wrist strap connected to workplace. Always use properly grounded tools and equipment.
2. Use antistatic mats, heel straps, or air ionizers for more protection.
3. Always handle electrostatically sensitive components by their edge or by their casing.
4. Avoid contact with pins, leads, or circuitry.
5. Turn off power and input signals before inserting and removing connectors or connecting test equipment.
6. Keep work area free of non-conductive materials such as ordinary plastic assembly aids and Styrofoam.
7. Use only field service tools which are conductive, such as cutters, screwdrivers, and vacuum cleaners.
8. Always place drives and boards PCB-assembly-side down on the foam.

1.2. Lithium Battery Replacement

If replacing the lithium battery, follow the replacement precautions stated below.

▲WARNING

Danger of explosion when replacing with wrong type of battery. Replace only with the same or equivalent type recommended by the manufacturer. The lithium battery type must be UL recognized.



Do not dispose of lithium batteries in general trash collection. Dispose of the battery according to the local regulations dealing with the disposal of these special materials, (e.g. to the collecting points for dispose of batteries).

2/ Shipment and Unpacking

Please check that your package is complete, and contains the items below (according to the ordered unit configuration). If you discover damaged or missing items, please contact your dealer.

2.1. Unpacking

Proceed as follows to unpack the unit:

1. Remove packaging.
2. Do not discard the original packaging. Keep it for future relocation.
3. Check the delivery for completeness by comparing it with your order.
4. Please keep the associated paperwork. It contains important information for handling the unit.
5. Check the contents for visible shipping damage.
6. If you notice any shipping damage or inconsistencies between the contents and your order, please contact Kontron for help and information.

2.2. Scope of Delivery

- ▶ 1x SmartClient-SLUx-170-P
- ▶ 1x Power adapter
- ▶ 1x Power cord
- ▶ Mounting Clamps with Screws

3/ System Overview

Kontron SmartClient-SLUx-170-P integrates an industrial PC with an integrated touch screen display. The rugged design offers excellent mechanical stability for operation in harsh industrial environments.

Users may choose the implementation of a 2.5" SATA HDD / SSD and / or an M.2 (Key B) SSD card as storage media.

The following interfaces are available with the SmartClient-SLUx-170-P:

Standard Rear Panel:

- ▶ 1x HDMI 2.0
- ▶ 1x DP
- ▶ 1x Line-in
- ▶ 1x Line-out
- ▶ 1x Mic-in
- ▶ 2x GbE LAN
- ▶ 4x USB 3.0
- ▶ 2x RS232/422/485
- ▶ 1x DIO
- ▶ 1x Phoenix Power Connector
- ▶ 1x Power Switch
- ▶ 1x Power LED
- ▶ 1x Storage LED

Standard Baseboard and System Expansion Capabilities:

- ▶ 2x 260-pin DDR4 SO-DIMM memory socket (DIMM1 & DIMM2 socket)
- ▶ 1x SATA 3.0 connector (SATA1 or 2 connector) for 2.5" SATA 3.0 HDD / SSD
- ▶ 1x full-sized mPCIe socket (MPCIE1 socket) for mPCIe expansion card
- ▶ 1x M.2 Key B socket (CON1 socket) for M.2 SSD or M.2 expansion card

The device is designed to be operated in:

- ▶ Vertical position: mounted in an instrument / wall / other cabinet (with the corresponding supplied mounting clamps) or on the wall / VESA stand / VESA pole (with an optional VESA mounting kit)

NOTICE

To provide sufficient heat dissipation by the cooling of the device, please keep clearance for air circulation when installing the system.

3.1. System Expansion Capabilities

3.1.1. System Expansion via SATA Interface

The system reserves space allowing users to expand the SmartClient-SLUx-170-P with a 2.5" SATA 3.0 HDD / SSD drive via one of the onboard SATA 3.0 interface connectors.

3.1.2. System Expansion via mPCIe Card Interface


The baseboard comes with an onboard full-sized mPCIe interface connector.

3.1.3. System Expansion via M.2 Card Interface

The baseboard comes with an onboard M.2 interface connector with Key B Type 2242 support. The connector is intended to be used to install an M.2 SSD card drive.

3.2. Rear I/O Panel

Figure 1: Rear I/O Panel

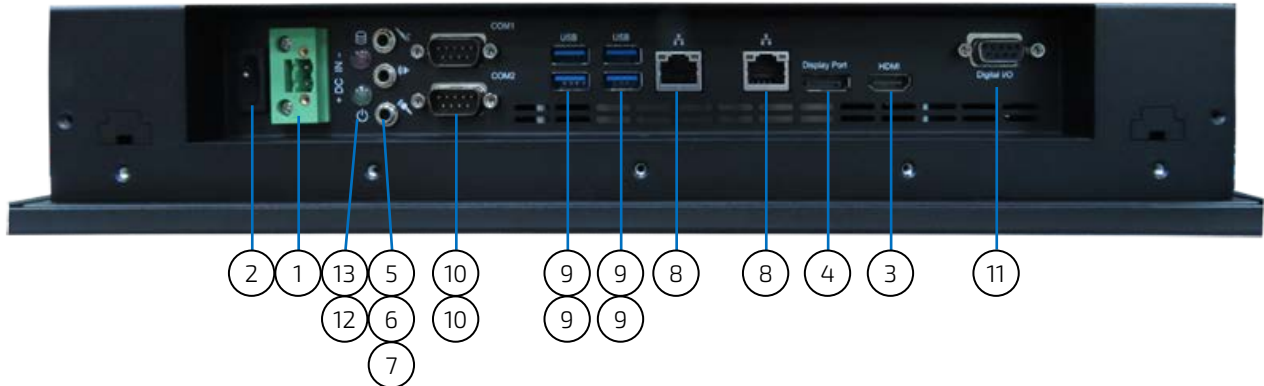

- 1 2-pin Phoenix DC-In Power Connector (see Chapter 3.2.1)
- 2 Power Switch (see Chapter 3.2.2)
- 3 HDMI 2.0 (see Chapter 3.2.3)
- 4 DP (see Chapter 3.2.4)
- 5 Line-In (see Chapter 3.2.5)
- 6 Line-Out (see Chapter 3.2.6)
- 7 Mic-In (see Chapter 3.2.7)
- 8 GbE (see Chapter 3.2.8)
- 9 USB 3.0 (see Chapter 3.2.9)
- 10 RS232/422/485 (see Chapter 3.2.10)
- 11 DIO (see Chapter 3.2.11)
- 12 Power LED (see Chapter 3.2.12)
- 13 Storage LED (see Chapter 3.2.13)

3.2.1. 2-pin Phoenix DC-In Power Connector

The power adapter converts AC power to DC for use with this 2-pin Phoenix connector. Power supplied through this connector supplies power to the PC. To prevent damage to the PC, always use a power adapter with correct output voltage.

3.2.2. Power Switch

Press this switch to turn the system on or off.

⚠ WARNING

Even when the system is turned off via the power switch there is still a standby voltage on

the baseboard. The unit is only completely disconnected from the DC mains, when the power is removed.

3.2.3. HDMI 2.0

The SmartClient-SLUx-170-P provides one HDMI 2.0 connector. One external (digital) display can be connected to this HDMI 2.0 connector.

3.2.4. DP

The SmartClient-SLUx-170-P provides one DP connector. One external (digital) display can be connected to this DP connector.

3.2.5. Line-In

The Line-in jack is designed to take input from a higher-powered sound source.

3.2.6. Line-Out

The stereo headphone jack is used to connect the system's audio out signal to amplified speakers or headphones.


3.2.7. Mic-In

The microphone jack is designed to connect the microphone used for video conferencing, voice narrations, or simple audio recordings.

3.2.8. GbE

These connectors are Gigabit Ethernet 10/100/1000 Mbit/s, IEEE 1588 capable interfaces. The connectors are standard 8-pin RJ45 type connectors with status LEDs:

Figure 2: Ethernet LED Status

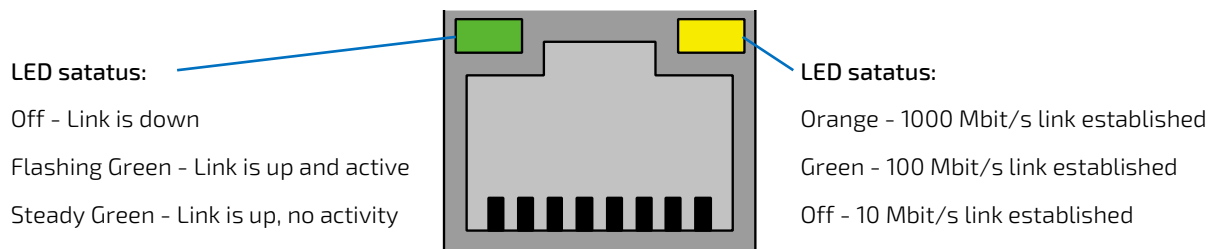

3.2.9. USB 3.0

The SmartClient-SLUx-170-P provides four USB 3.0 / 2.0 interface. These connectors allow connection of USB 3.0 or USB 2.0 compatible device to the system.

3.2.10. RS232/422/485

COM 1 and COM 2 are provided as a 9-pin D-SUB connector and allow the connection of a serial peripheral. They are designed to support RS232/422/485 serial communication which can be configured via BIOS setup.

3.2.11. DIO

The SmartClient-SLUx-170-P provides one 9-pin female D-SUB connector and allow the connection of digital signals for input and output purposes.

3.2.12. Power LED

The power LED lights up green if the system powered on.

Prerequisite: The system must be attached by means of the power cord to an appropriate mains (DC).

3.2.13. Storage LED

The Storage LED blinks red when the data is being written into or read from the HDD / SSD.

4/ Thermal Considerations

4.1. Available Processors

Please refer to the chapter 8/ "Technical Specifications".



The list of processors may be extended over the product lifetime.

4.2. Convection Cooling

The applied cooling method provides adequate cooling of the device during operation and performs a one-way thermal transfer to the chassis.

4.3. System Clearance

To provide a maximum of airflow through the rear side of the device, proper distances to the rear side must be observed.

4.4. Maximum Temperatures



The maximum system ambient temperature depends mostly on the power consumption of the processor and the chipset.

For the temperature evaluation a specialised tool from Intel® was used to set the processor to a defined workload. Depending on the power consumption one or more cores were set to 75% workload. This includes the graphics core. The tool also handles the usage of the "Turbo Mode" of certain processor types.



The processor utilization depends highly on the software used. Software using multicore feature will run on several cores whereas standard software will only utilize one core. In this case the processor will use the "Turbo Mode" to increase the clock for the core with the highest workload, as long as the temperature is within limits.

4.5. Third Party Components

When the SmartClient-SLUx-170-P is extended and configured with third party components like mPCIe expansion card and hard drives (HDD or SSD), it has to be taken into account that the air temperature inside the system is higher than the ambient temperature. An approximately internal temperature rise is given for assistance.

5/ Installation Instructions

The SmartClient-SLUx-170-P system is designed for operating:

- ▶ in an instrument / wall / other cabinet by use of the corresponding supplied mounting clamps
- ▶ onto a wall / VESA stand / VESA pole by use of a VESA mounting kit.

NOTICE

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of the system chassis.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Prior any installation work, ensure that there are no live wires on the installation site.

Do not handle the device if there is any damage visible.

Do not operate the SmartClient-SLUx-170-P with foreign objects inside the chassis.

Further do not insert any retrieval device into the device while it is connected to power.

Kontron rejects all liability for any and all damages resulting from operation of the unit with foreign objects inside the chassis.

The SmartClient-SLUx-170-P has to be installed and operated only by trained and qualified personnel.

Only personnel with appropriate qualifications, trainings and authorization are permitted to install and work with the Kontron SmartClient-SLUx-170-P.

This device shall only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements.

The unit must be placed such that there is sufficient space in rear of it for connecting the cables to the I/O interface connectors and for operating the power button.

Leave sufficient free space around the unit to prevent the device from possibly overheating!

The SmartClient-SLUx-170-P must be firmly attached to a clean flat and solid mounting surface. Use proper fastening materials suitable for the mounting surface. Ensure that the mounting surface type and the used mounting solution safely support the load of the SmartClient-SLUx-170-P and the attached components.

Please follow the local/national regulations for grounding.

The voltage feeds must not be overloaded. Adjust the cabling and the overcurrent protection to correspond with the electrical figures indicated on the type label.

The type label is located on the rear side of the system.

It is recommended that the last cable attached to the system should be the power cable! Refer to the section 5.2 "DC Power Connection" and chapter 6/ "Starting Up".

5.1. System Mounting

In order to adapt the SmartClient-SLUx-170-P for mounting Kontron offers different mounting solution such as:

- ▶ Panel mount: SmartClient-SLUx-170-P configuration with the corresponding supplied mounting clamps for vertical installation into an instrument / wall / other cabinet
- ▶ VESA mount: SmartClient-SLUx-170-P configuration with a VESA mounting kit for vertical installation onto a wall / VESA stand / VESA pole

5.1.1. System Mounting by Use of the Mounting Clamps

Depending on the ordered SmartClient-SLUx-170-P configuration, your system is supplied with a number of the corresponding mounting clamps (Figure 3) sufficient to mount the system into an instrument / wall / other cabinet.

Figure 3: Mounting clamp



Table 1: Specification for mounting by use of the mounting clamps

Model	SmartClient-SLUx-170-P
Cut-out for mounting to a wall / panel (W x H) [mm]	378.3 x 318.9 mm (14.89" x 12.56")
Thickness for the mounting wall / panel for proper mounting [mm]	1.5 ~ 6
Number of the clamps with screws for mounting to a wall / panel	11 (3 for top / right / left side, 2 for bottom side)
Required tool	Phillips screwdriver

NOTICE

In order to ensure IP65 front sealing against dust and water, *mount the system on a non-textured surface.*

Before you install the SmartClient-SLUx-170-P into a panel or a wall, verify the perfect condition of the gasket at the rear of the front bezel.

The gasket has to be in place without surface imperfections / defects and dirt.

Ensure the vertical and horizontal alignment of the system.

⚠ WARNING


The screen of the SmartClient-SLUx-170-P is fragile. Handle with care to prevent personal injury or material damage. Always use two hands when carrying the device.

The screen of the SmartClient-SLUx-170-P is provided with a protective film. Only remove this protective material after the installation of the SmartClient-SLUx-170-P.

To mount the system to a wall or to a panel, please proceed according to the steps described:


1. Depending on the dimension of your SmartClient-SLUx-170-P, prepare a cutout in the wall / panel. The maximum thickness of the wall / panel is 6 mm. Refer to Table 1 and Figure 4 for the wall / panel cutout dimensions or to Figure 12 for the corresponding mechanical drawings of your SmartClient-SLUx-170-P.
2. The system must be properly powered down and disconnected from the power source and peripherals.
3. The wall / panel where you intend to install the system must be accessible from both sides (front as well as rear). The material strength and stiffness must be sufficient to hold the system unit.
4. Insert the system into the wall / panel cutout from the front as shown in Figure 4.

Figure 4: Insert the system into the cutout

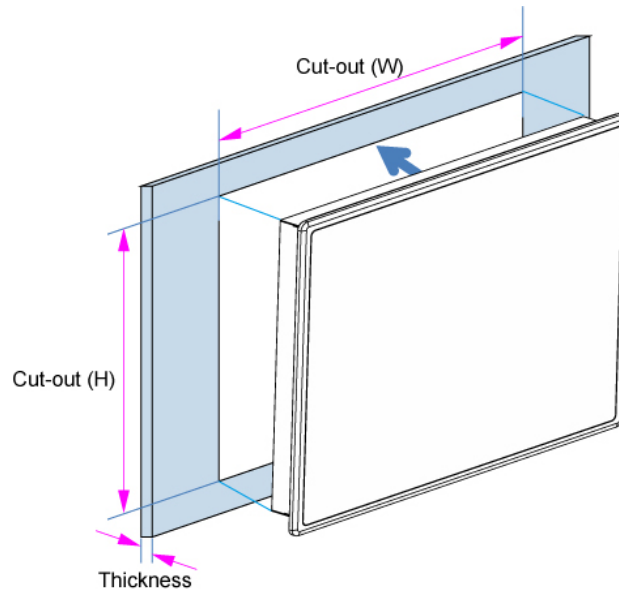

5. In order to ensure the protection class IP65 on the front side in the installed condition, the contact surface with the gasket must be clean and flush.
6. Remove the mounting opening covers from the chassis with Phillips screwdriver. The number of mounting openings (Table 1) varies depending on the ordered SmartClient-SLUx-170-P configuration.
7. Hook the mounting clamps with screws (Figure 3) from the rear side of the wall / panel into the corresponding mounting openings as shown in Figure 5.

Figure 5: Hook mounting clamps into mounting openings

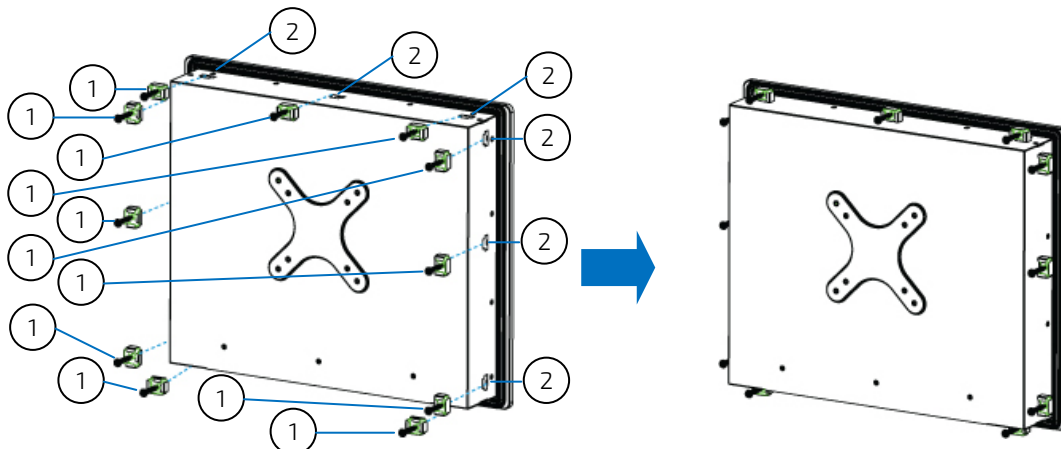


- 1 Mounting Clamp with Screw
 - 2 Mounting Opening with Cover (Remove the cover before hooking the mounting clamp into it.)
8. The system must be attached firmly by tightening the screws. Always tighten screws on the opposite side of the front panel.

5.1.2. System Mounting by Use of a VESA Mounting Kit

The SmartClient-SLUx-170-P comes with VESA FDMI 100 standard mounting holes (Figure 6).

Figure 6: VESA mounting hole locations

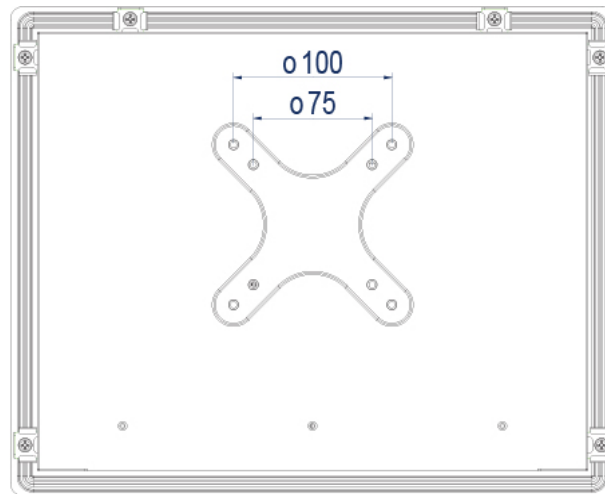

Depending on the ordered SmartClient-SLUx-170-P configuration, your system may be supplied with a VESA mounting kit (Figure 7). The kit consists of two parts: a base bracket (Figure 7, pos. 1) to be fixed permanently on the mounting surface and another hooked bracket to hold the SmartClient-SLUx-170-P with a hand-screw knob (Figure 7, pos. 2) to secure two brackets.

Figure 7: Optional VESA mounting kit




- 1 Base mounting bracket
- 2 Hooked mounting bracket with a hand-screw knob

To mount the SmartClient-SLUx-170-P please proceed according to the steps described:


1. Prepare the mounting surface with sufficient screws (six screws for base mounting bracket) and if necessary anchors corresponding to the mounting surface type if no screw holes are available.
2. Secure the base mounting bracket to the mounting surface with screws (Figure 8).

Figure 8: Secure the base mounting bracket

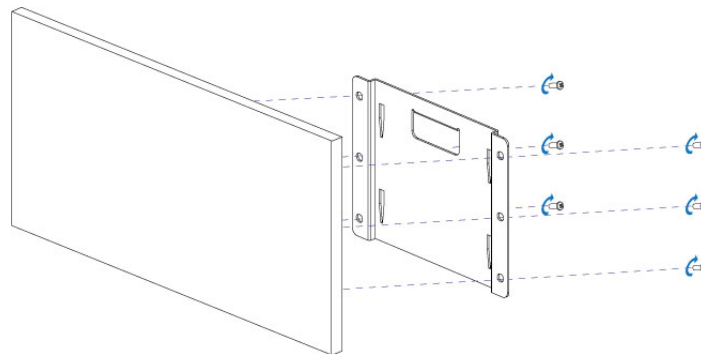


3. Secure the hooked mounting bracket onto the rear side of the SmartClient-SLUx-170-P (Figure 9).

Figure 9: Secure the hooked mounting bracket onto the SmartClient-SLUx-170-P

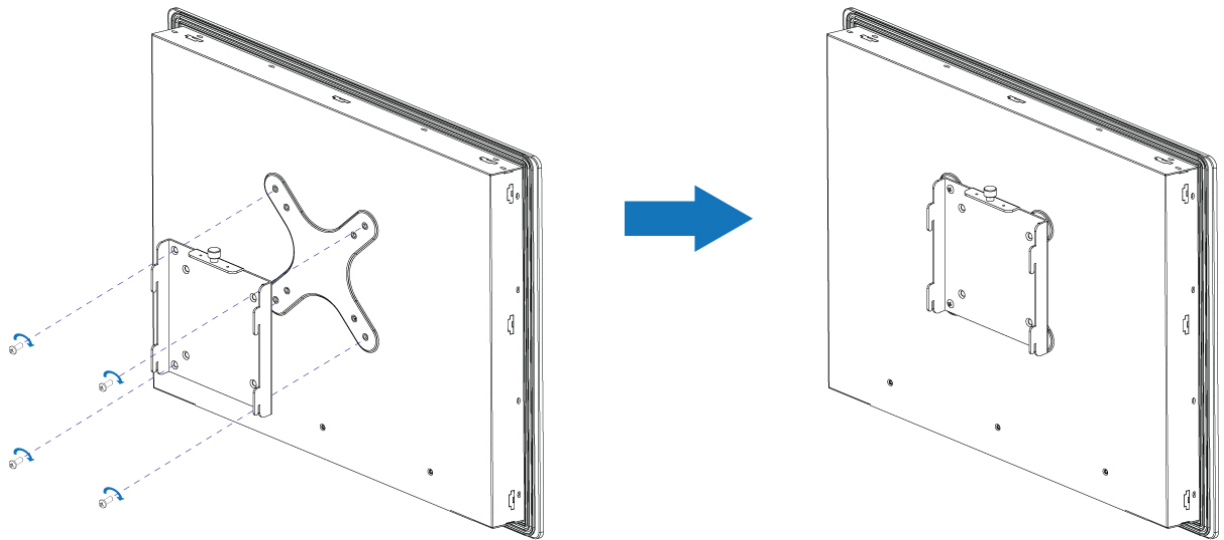

4. Place the SmartClient-SLUx-170-P onto the mounting surface by sliding the hooked mounting bracket into the based mounting bracket (Figure 10).
5. Secure the hand-screw knob located on the hooked mounting bracket to fix two brackets (Figure 10).


Figure 10: Secure the SmartClient-SLUx-170-P onto the mounting surface

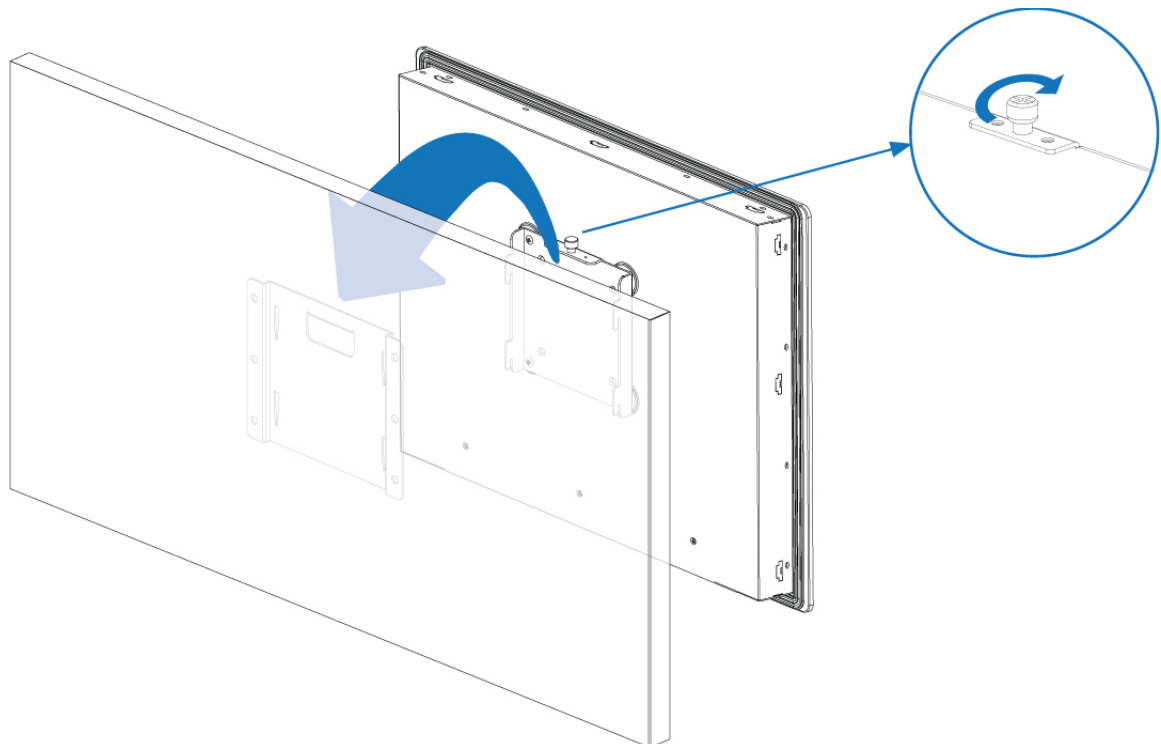

5.2. DC Power Connection

The SmartClient-SLUx-170-P is delivered with a power adapter with a 2-pin Phoenix power plug terminal attached as well as a power cable. Users can (2-pin Phoenix connector) attached to a supplied power adapter. Users can use the supplied power cord and power adapter to carry AC power from AC power source and then convert it into DC 12 V. Users can also detach the Phoenix plug terminal from the power adapter and use it to prepare the connecting wires for DC connection. DC power voltage should be 12 V.

Figure 11: Phoenix power plug terminal

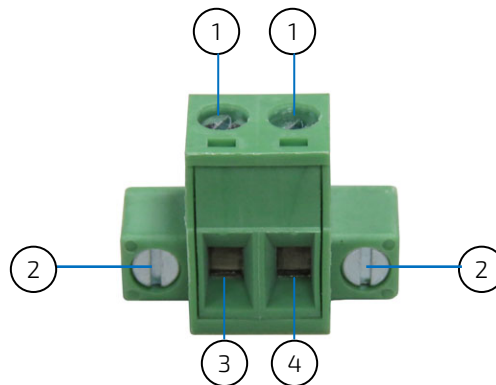

- 1 Slotted pan head screw for securing the wire
- 2 Slotted pan head screw for securing the Phoenix plug terminal to the Phoenix connector
- 3 Location for inserting the positive (+) input wire
- 4 Location for inserting the negative (-) input wire

5.2.1. Cabling

For the pin assignment Phoenix power plug terminal refer to the subsection 9.1.1 "Power Input Connector".

1. Cut the required length two isolated wires (1mm²) AWG 18 and strip each end 5 ~ 7 mm.
2. Twist the striped wire-ends and provide them with ferrules.
3. Loosen the two slotted pan head screws of the DC plug terminal far enough so that you can insert the end of the prepared wires.
4. Insert the wires into the corresponding clamp of the Phoenix plug terminal. Make sure that you have the right polarity of the connection [refer to Figure 11 or subsection 9.1.1 "Power Input Connector"].
5. Fasten the screws to secure the wires into the clamps of the plug terminal.

6/ Starting Up



The SmartClient-SLUx-170-P must be only operated with the nominal voltage of 12V DC of type SELV. For details refer to the chapter 8/ "Technical Specifications".

6.1. Connecting to DC Power Supply

The DC power input connector (Figure 1, pos. 1) is located on the rear side of the SmartClient-SLUx-170-P. The SmartClient-SLUx-170-P will be connected either to a supplied AC-to-DC power adapter via the attached Phoenix power plug terminal (see Figure 11) and corresponding power cable, or to a DC main power supply via the supplied Phoenix power plug terminal (see Figure 11) and corresponding power wired.



Before using your system, become familiar with the system components and check that everything is connected properly. Following a proper cabling procedure will prevent a false power-on condition, which could result in unit operational failure.

When you install/disconnect the unit, the functional earth connection must always be made first and disconnected last.

Also, it is recommended that the last connections attached to the system should be the power wires!

NOTICE

The SmartClient-SLUx-170-P must be connected DC power supply complying with the SELV (Safety Extra Low Voltage) requirements of EN 60950-1 standard. It must be observed that wiring and short-circuit/overcurrent protection is performed according to the applicable standards, regulations and respect to the electrical specification of the SmartClient-SLUx-170-P.

Even when the system is turned off via the power switch (Figure 1, pos. 2) parts of the system are still energized.

The disconnecting device (fuse/circuit breaker) rating must be in accordance with the wire cross-section and the rated current of the SmartClient-SLUx-170-P.



The cables must have some form of support so as to minimize the strain on the unit's connectors.

To connect the SmartClient-SLUx-170-P to a corresponding DC power supply, please perform the following steps:

For connection to the supplied AC-to-DC power adapter:

1. Connect the power adapter cable with Phoenix power plus terminal to the Phoenix connector (DC IN, Figure 1, pos. 1) of the SmartClient-SLUx-170-P.
2. Connect the power cable to the power adapter.
3. Connect the power cable to a power outlet.

For connection to DC main power supply:

1. Ensure that the DC power source is switched off via a disconnecting device (circuit breaker), in order to ensure that no power is flowing from the external DC power source during the connection procedure.
2. Connect the Phoenix power terminal prepared as described in the subsection 5.2.1 "Cabling" to the DC input connector (Figure 1, pos. 1) of the SmartClient-SLUx-170-P. The DC input connector is located on the rear side.
3. Connect the other ends of the DC power wires to the connections of the DC main power supply. Pay attention to the polarity of the connections.
4. Switch on the disconnecting device (circuit breaker) in order to apply voltage to the terminals of the power wires.
5. Press the power switch (Figure 1, pos. 2) on the rear panel to turn on the system.

6.2. Operating System and Hardware Component Drivers

Your system can be supplied optionally with a pre-installed operating system.

If you have ordered your SmartClient-SLUx-170-P with a pre-installed operating system, all drivers are installed in accordance with the system configuration ordered (optional hardware components). Your system is fully operational when you switch it on for the first time. Please pay attention to the following note.



Important information on the use of the pre-installed "WINDOWS 7 ULTIMATE FOR EMBEDDED SYSTEMS" or "WINDOWS 7 PROFESSIONAL FOR EMBEDDED SYSTEMS" operating systems:

The terms and conditions for the use of the pre-installed operating systems are specified in the document "MICROSOFT SOFTWARE LICENSE TERMS".

You can download this document from our web site www.kontron.com by selecting **Product/ Downloads tab/Windows.**

If you have ordered the SmartClient-SLUx-170-P without a pre-installed operating system, you will need to install the operating system and the appropriate drivers for the system configuration you have ordered (optional hardware components) yourself.



You can download the relevant drivers for the installed hardware from our web site at www.kontron.com by selecting the product.

Pay attention to the manufacturer specifications of the operating system and the integrated hardware components.



Latest Linux Distribution and Kernel shall be used in order to properly support the Skylake graphics engine.

7/ Maintenance and Cleaning

Kontron systems require minimal maintenance and care to keep operation correctly.

- ▶ Occasionally wipe the SmartClient-SLUx-170-P with a soft dry microfiber cloth.
- ▶ You should only remove persistent dirt by use of a soft, slightly damp cloth and mild detergent.

7.1. Touch Screen Care and Cleaning

NOTICE

The touch screen is covered by an anti-glare glass plate and care should be taken when cleaning it. The front side of the touch display unit is sealed against dust and liquids.

The touch screen is protected by an anti-glare glass surface. Care should be taken to avoid using sharp objects such as knife, pen or pencil tips. Sharp objects may permanently damage the surface of the anti-glare glass plate.

Mild detergent and water is recommended for cleaning the touch screen. Use of strong solvents must be avoided. Wet the glass plate with a microfiber cloth lightly moistened with warm water and mild glass cleaner.

7.2. Replacing the Lithium Battery

NOTICE

The lithium battery is located on the baseboard and is not a serviceable part. Please contact Kontron support if the lithium battery needs to be replaced.

8/ Technical Specifications

Table 2: Technical Specifications

System		
Processor	6th Generation Intel® Core™ / Celeron® U-Series Processors	
Memory	2x DDR4 SO-DIMM memory socket	
Video		
Display	Size	17"
	Ratio	5:4
	Backlight	LED
	Resolution	1280 x 1024 SXGA
	Touch	10-point PCT
Display Interface	<ul style="list-style-type: none"> ▶ 1x HDMI 2.0 (on rear) ▶ 1x DP (on rear) 	
Multiple Display	Triple	
Audio		
Audio Codec	Realtek ALC662	
Audio Interface	<ul style="list-style-type: none"> ▶ 1x Line-in (on rear) ▶ 1x Line-out (on rear) ▶ 1x Mic-in (on rear) 	
Network Connection		
Ethernet	2x GbE LAN (RJ45 on rear, 1x Intel® I219-LM, 1x Intel® I210-AT)	
Peripheral Connection		
USB	4x USB 3.0 (Type A on rear)	
Serial Port	2x RS232/422/485 (DB9 on rear, w/ auto flow control for RS485)	
Other I/O	1x DIO (DB9 Female on rear)	
Storage & Expansion		
Storage & Expansion	<ul style="list-style-type: none"> ▶ 1x 2.5" SATA 3.0 HDD / SSD ▶ 1x mPCIe (full size) ▶ 1x M.2 Key B Socket (Type 2242, mixed w/ USB 2.0 or SATA) 	
Power		
Input Voltage	DC 12 V	
Connector	2-pin Phoenix Connector (on rear)	
Firmware		
BIOS	AMI uEFI BIOS w/ 128 Mb SPI Flash	
Watchdog	Programmable WDT to generate system reset event	
H/W Monitor	Voltages, Temperatures	
Real Time Clock	Processor integrated RTC	
TPM	TPM 1.2 support for Core™ i7 / i5 (Infineon SLB 9660)	
System Control & Monitoring		
Button, Switch & Indicator	<ul style="list-style-type: none"> 1x Power Switch (on rear) 1x Power LED (on rear) 1x Storage LED (on rear) 	

Cooling	
Cooling Method	Passive
Software	
OS Support	Windows 7, Windows 8, Windows 10, Linux


8.1. Mechanical Specifications

Table 3: Mechanical Specifications

Construction	Glass Surface + Slim Aluminum Frame + Metal Chassis
Dimensions (W x H x D)	413.0 mm x 343.9 mm x 70.3 mm (16.26" x 13.54" x 2.77")
Weight	5,700 g (12.57 lb)
Mounting	Panel Mount, VESA Mount

8.1.1. Mechanical Drawing

Figure 12: Mechanical Drawing

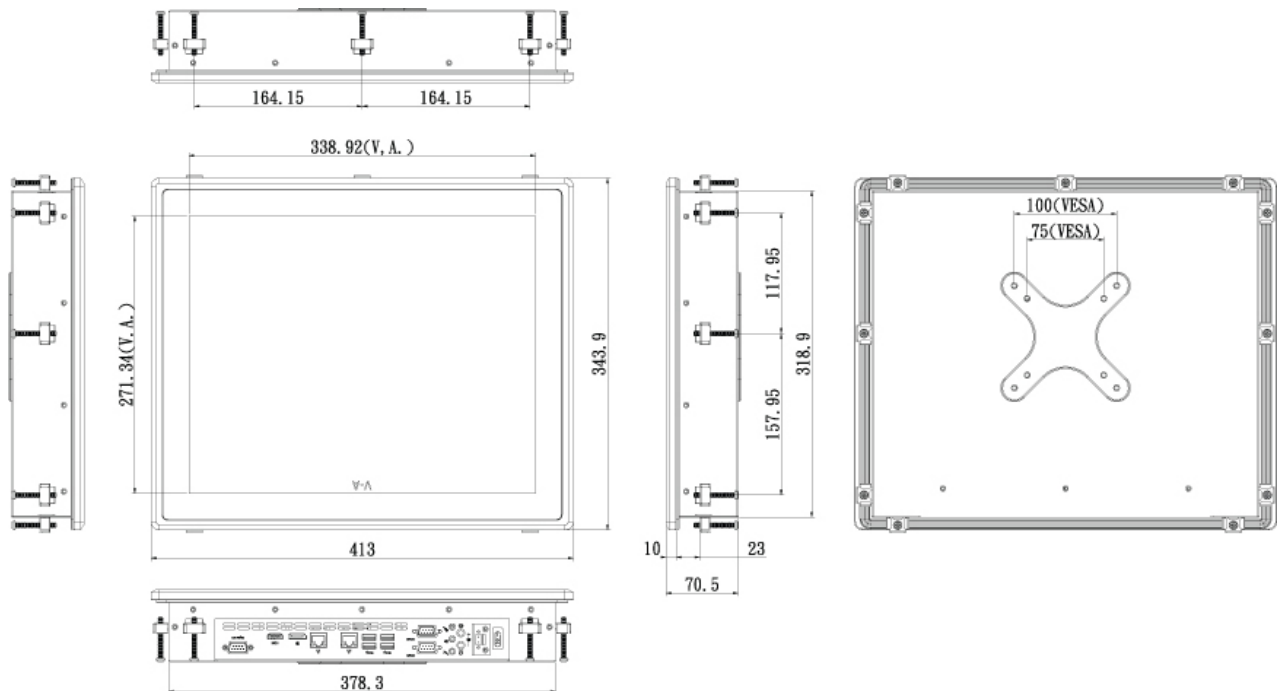

(unit: mm)

8.2. Environmental Conditions

Table 4: Environmental Conditions


Operating Temperature	0 °C ~ 50 °C / 32 °F ~ 122 °F
Storage Temperature	-20 °C ~ 70 °C / -4 °F ~ 158 °F
Humidity	0 % ~ 95 %

9/ Standard Interfaces – Pin Assignments

Low-active signals are indicated by a minus sign.


9.1.1. Phoenix Connector

Table 5: Phoenix Connector (see Figure 1, pos.1)

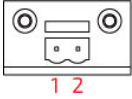Pin	Signal Name	2-pin Phoenix Connector (female)
1	12VDC (input)	
2	0V (input)	


9.1.2. Ethernet Connectors

Table 6: Ethernet Connector (see Figure 1, pos. 8)

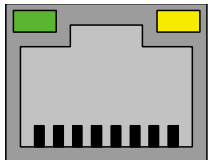Pin	Signal Name	LAN1, LAN2 (RJ45)
1	TX1+	
2	TX1-	
3	TX2+	
4	TX3+	
5	TX3-	
6	TX2-	
7	TX4+	
8	TX4-	


9.1.3. USB 3.0 Port

Table 7: USB 3.0 Port (see Figure 1, pos. 9)

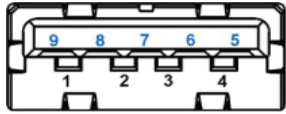USB 2.0 Contact Pins		USB 3.0 Contact Pins		9-pin USB Connector Type A Version 3.0 / 2.0
Pin	Signal Name	Pin	Signal Name	
1	+USBVCC	5	USB_RX-	
2	USB_D-	6	USB_RX+	
3	USB_D+	7	GND	
4	GND	8	USB_TX-	
		9	USB_TX+	


9.1.4. HDMI Connector

Table 8: HDMI Connector (see Figure 1, pos. 3)

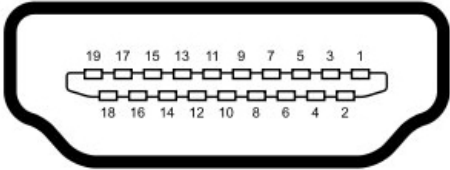Pin	Signal Name	HDMI Connector Type A Version 2.0
1	TMD_Data2+	
2	GND	
3	TMD_Data2-	
4	TMD_Data1+	
5	GND	
6	TMD_Data1-	
7	TMD_Data0+	
8	GND	
9	TMD_Data0-	
10	TMD_CLK+	
11	GND	
12	TMD_CLK-	
13	CEC	
14	Reserved	
15	DDC_CLK	
16	DDC_DATA	
17	GND	
18	5V	
19	HPET	

9.1.5. DP Connector


Table 9: DP Connector (see Figure 1, pos. 4)

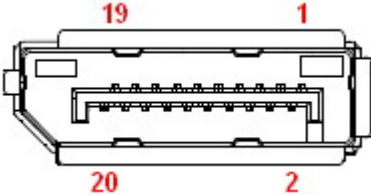Pin	Signal Name	20-pin DP Connector
1	TX0+	
2	GND	
3	TX0-	
4	TX1+	
5	GND	
6	TX1-	
7	TX2+	
8	GND	
9	TX2-	
10	TX3+	
11	GND	
12	TX3-	
13	GND	
14	GND	
15	AUX+	

Pin	Signal Name	20-pin DP Connector
16	GND	
17	AUX-	
18	HPD	
19	GND	
20	PWR	


9.1.6. RS232/422/485 Serial Port

Table 10: RS232/422/485 Serial Port (see Figure 1, pos. 10)

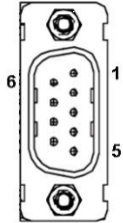Pin	RS232	RS422	RS485 Half Duplex	RS485 Full Duplex	COM1, COM2 (9-pin D-SUB Male Connector)
1	DCD	TX-	DATA-	TX-	
2	RXD	TX+	DATA+	TX+	
3	TXD	RX+	N/A	RX+	
4	DTR	RX-	N/A	RX-	
5	GND	GND	GND	GND	
6	DSR	N/A	N/A	N/A	
7	RTS	N/A	N/A	N/A	
8	CTS	N/A	N/A	N/A	
9	RI	N/A	N/A	N/A	


9.1.7. DIO Port

Table 11: DIO Port (see Figure 1, pos. 11)

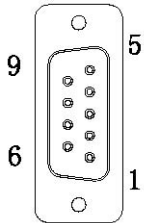Pin	Signal Name	DIO (9-pin D-SUB Female Connector)
1	Digital Output 0	
2	Digital Input 0	
3	Digital Output 1	
4	Digital Input 1	
5	Digital Output 2	
6	Digital Input 2	
7	Digital Output 3	
8	Digital Input 3	
9	+5V	


9.1.8. Line-In Connector

Table 12: Line-In Connector (see Figure 1, pos. 5)

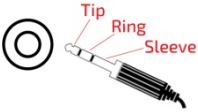Pin	Signal Name	Line-In Connector & Corresponding Audio Jack
Tip	Line-In_L	
Ring	Line-In_R	
Sleeve	GND	


9.1.9. Line-Out Connector

Table 13: Line-Out Connector (see Figure 1, pos. 6)

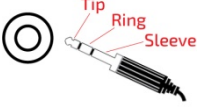Pin	Signal Name	Line-Out Connector & Corresponding Audio Jack
Tip	Line-Out_L	
Ring	Line-Out_R	
Sleeve	GND	

9.1.10. Mic-In Connector

Table 14: Mic-In Connector (see Figure 1, pos. 7)

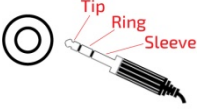Pin	Signal Name	Mic-In Connector & Corresponding Audio Jack
Tip	Mic-In_L	
Ring	Mic-In_R	
Sleeve	GND	

10/ uEFI BIOS

10.1. Starting the uEFI BIOS

The SmartClient-SLUx-170-P is provided with a Kontron-customized, pre-installed and configured version of AMI Aptio® V uEFI BIOS. AMI BIOS firmware is based on the Unified Extensible Firmware Interface (uEFI) specification and the Intel® Platform Innovation Framework for EFI. This uEFI BIOS provides a variety of new and enhanced functions specifically tailored to the hardware features of the SmartClient-SLUx-170-P.



The BIOS version covered in this document might not be the latest version. The latest version might have certain differences to the BIOS options and features described in this chapter.

The uEFI BIOS comes with a setup program that provides quick and easy access to the individual function settings for control or modification of the uEFI BIOS configuration. The setup program allows the accessing of various menus that provide functions or access to sub-menus with more specific functions of their own.

To start the uEFI BIOS setup program, follow the steps below:

1. Power on the board.
2. Wait until the first characters appear on the screen (POST messages or splash screen).
3. Press the key.
4. If the uEFI BIOS is password-protected, a request for password will appear. Enter either the User Password or the Supervisor Password (see Security menu), press <RETURN>, and proceed with step 5.
5. A setup menu will appear.

The SmartClient-SLUx-170-P uEFI BIOS setup program uses a hot key-based navigation system. A hot key legend bar is located on the bottom of the setup screens.

The following table provides information concerning the usage of these hot keys.

Table 15: Navigation Hot Keys Available in the Legend Bar

Hotkeys	Description
<F1>	The <F1> key invokes the General Help window.
<->	The <Minus> key selects the next lower value within a field.
<+>	The <Plus> key selects the next higher value within a field.
<F2>	The <F2> key loads the previous values.
<F3>	The <F3> key loads the standard default values.
<F4>	The <F4> key saves the current settings and exit the uEFI BIOS setup.
<→> or <←>	The <Left/Right> arrows selects major setup menus on the menu bar. For example: Main, Advanced, Security, etc.
<↑> or <↓>	The <Up/Down> arrows selects fields in the current menu. For example: A setup function or a sub-screen.
<ESC>	The <ESC> key exits a major setup menu and enter the Exit setup menu. Pressing the <ESC> key in a sub-menu displays the next higher menu level.
<RERURN>	The <RETURN> key executes a command or select a submenu.

10.2. Setup Menus

The Setup utility features shows six menus in the selection bar at the top of the screen:

- ▶ Main
- ▶ Advanced
- ▶ Power
- ▶ Boot
- ▶ Security
- ▶ Save & Exit

The Setup menus are selected via the left and right arrow keys. The currently active menu and the currently active uEFI BIOS Setup item are highlighted in white. Each Setup menu provides two main frames. The left frame displays all available functions. Functions that can be configured are displayed in blue. Functions displayed in gray provide information about the status or the operational configuration. The right frame displays an Item Specific Help window providing an explanation of the respective function.

10.2.1. Main Setup Menu

Upon entering the uEFI BIOS Setup program, the Main Setup menu is displayed. This screen lists the Main Setup menu sub-screens and provides basic system information. Additionally functions for setting the system time and date are offered.

Table 16: Main Setup Menu Sub-Screens and Functions

Function	Description
BIOS Information	Read only field. Displays information about the system BIOS
Memory Information	Read only field. Displays information about total memory
ME Information	Read only field. Displays information about Intel Management Engine (ME) version
Firmware Information	Code version and firmware information
System Date	Set System Date
System Time	Set System Time

Figure 13: BIOS Main Menu Screen System Data and Time

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Product Information					
Product Name		SmartClient-SLU1-170-P			
BIOS Version		R 0.0C (x64)			
BIOS Build Date		06/26/2017			
ME FW Version		11.6.29.3287			
CPU Information					
Intel® Core™ i3-6100U CPU @ 2.30GHz					
Microcode Revision		BA			
Processor Cores		2Core(s) / 4Thread(s)		→ ←: Select Screen	
Memory Information					
Total Size		4096 MB (DDR4)		↑ ↓: Select Item	
Frequency		2133 MHz		Enter: Select	
System Date		[Wed 08/09/2017]		+/-: Change Opt.	
System Time		[11:20:40]		F1: General Help	
Access Level		Administrator		F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
System Date	[dd/mm/yyyy]	Set the Date. Use Tab to switch between Data elements.
System Time	[hh:mm:ss]	Set the Time. Use Tab to switch between Time elements.

10.2.2. Advanced Setup Menu

The Advanced setup menu provides sub-screens and functions for advanced configurations. The following sub-screen functions are included in the menu:

- ▶ LAN & Audio Configuration
- ▶ Display Configuration
- ▶ Super IO Configuration
- ▶ CPU Chipset Configuration
- ▶ SATA Configuration
- ▶ USB Configuration
- ▶ AMT Configuration
- ▶ Trusted Computing
- ▶ Network Stack
- ▶ DIO Configuration
- ▶ H/W Monitor

NOTICE

Setting items on this screen to incorrect values may cause the system to malfunction.

Figure 14: BIOS Advanced Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Onboard LAN1 Controller		[Enabled]			
Onboard LAN1 Boot		[Disabled]			
Onboard LAN2 Controller		[Enabled]			
Onboard LAN2 Boot		[Disabled]			
Audio Controller		[Enabled]			
> Display Configuration					
> Super IO Configuration					
> CPU Chipset Configuration					
> SATA Configuration					
> USB Configuration					
> AMT Configuration					
> Trusted Computing					
> Network Stack					
> DIO Configuration					
> H/W Monitor					
				→ ←: Select Screen	
				↑ ↓: Select Item	
				Enter: Select	
				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Onboard LAN1 Controller	[Disabled], [Enabled]	Select whether to enable or disable Onboard LAN1 Controller.
Onboard LAN1 Boot	[Disabled], [Enabled]	Select whether to enable or disable load onboard PXE (Preboot Execution Environment).
Onboard LAN2 Controller	[Disabled], [Enabled]	Select whether to enable or disable Onboard LAN2 Controller.
Onboard LAN2 Boot	[Disabled], [Enabled]	Select whether to enable or disable load onboard PXE (Preboot Execution Environment).
Audio Controller	[Disabled], [Enabled]	Select whether to enable or disable Audio Controller.

Figure 15: BIOS Advanced Menu - Display Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Display Configuration					
Primary Display		[Auto]			
Aperture Size		[256MB]			
DVMT Pre-Allocated		[64MB]		→ ←: Select Screen	
DVMT Total Gfx Mem		[256MB]		↑ ↓: Select Item	
Primary IGFX Boot Display		[VBIOS Default]		Enter: Select	
Active LVDS		[Enabled]		+/-: Change Opt.	
LVDS Panel Type		[1920x1080 2CH]		F1: General Help	
LVDS Panel Color Depth		[24Bit]		F2: Previous Values	
PWM Backlight Control		[By External]		F3: Optimized Defaults	
LVDS Backlight Control - PWM		190		F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Primary Display	[Auto], [IGFX], [PCIE]	Select which graphic controller to be used as the primary display device.
Aperture Size	[128MB], [256MB], [512MB], [1024MB], [2048MB]	Select the Aperture Size.
DVMT Pre-Allocated	[32M], [64M], [4M], [8M], [12M], [16M], [20M], [24M], [28M], [32M/F7], [36M], [40M], [44M], [48M], [52M], [56M], [60M]	Select DVMT Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.
DVMT Total Gfx Mem	[128M], [256M], [MAX]	Select DVMT Total Graphic Memory size used by the Internal Graphics Device.
Primary IGFX Boot Display	[VBIOS Default], [DP], [HDMI], [LVDS]	Select the Video Device which will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. DOS modes will be supported only on primary display.
Active LVDS	[Disabled], [Enabled]	Select Active LVDS Configuration. [Disabled]: VBIOS does not enable LVDS. [Enabled]: VBIOS will enable LVDS.
LVDS Panel Type	[800x600 1CH], [1024x768 1CH], [1280x1024 2CH], [1366x768 1CH], [1366x768 2CH], [1600x1200 2CH], [1920x1080 2CH]	Select the appropriate setup item for LVDS panel.
LVDS Panel Color	[18Bit], [24Bit]	Select the appropriate setup item for LVDS panel color depth.

Feature	Option	Description
Depth		
PWM Backlight Control	[By External], [By Internal]	Select the PWM backlight controller. [By External]: Control by external HW circuit. [By Internal]: Control by LBKLT_CTL on the Intel Chipset.

Figure 16: BIOS Advanced Menu - Super IO Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Super IO Configuration					
> Serial Port 1 Configuration > Serial Port 2 Configuration				→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Figure 17: BIOS Advanced Menu - Super IO Configuration - Serial Port 1 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 1 Configuration					
Serial Port		[Enabled]		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Device Settings		IO=3F8h; IRQ=4;			
Change Setting		[Auto]			
Serial Port 1 Type		[RS232]			
RS485 Deplx Mode*		[Half Duplex]			
RS485 Auto Flow Control*		[Disabled]			
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

* These items appear only when selecting RS485 for the Serial Port 1 Type.

Feature	Option	Description
Serial Port	[Disabled], [Enabled]	Select whether to enable or disable Serial Port (COM).
Change Settings	[Auto], [IO=3F8h; IRQ=4;], [IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;]	Select an optional setting for Super IO device.

Feature	Option	Description
Serial Port 1 Type	[RS232], [RS422], [RS485]	Select an appropriate type for Serial Port 1.
RS485 Duplex Mode	[Half Duplex], [Full Duplex]	Select an appropriate RS485 Duplex Mode.
RS485 Auto Flow Control	[Disabled], [Enabled]	Select whether to enable or disable RS485 Auto Flow Control

Figure 18: BIOS Advanced Menu - Super IO Configuration - Serial Port 2 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 2 Configuration					
Serial Port		[Enabled]		→ ←: Select Screen	
Device Settings		IO=2F8h; IRQ=3;		↑ ↓: Select Item	
Change Setting		[Auto]		Enter: Select	
Serial Port 2 Type		[RS232]		+/-: Change Opt.	
RS485 Deplx Mode*		[Half Duplex]		F1: General Help	
RS485 Auto Flow Control*		[Disabled]		F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

* These items appear only when selecting RS485 for the Serial Port 2 Type.

Feature	Option	Description
Serial Port	[Disabled], [Enabled]	Select whether to enable or disable Serial Port (COM).
Change Settings	[Auto], [IO=2F8h; IRQ=3;], [IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;]	Select an optional setting for Super IO device.
Serial Port 2 Type	[RS232], [RS422], [RS485]	Select an appropriate type for Serial Port 2.
RS485 Duplex Mode	[Half Duplex], [Full Duplex]	Select an appropriate RS485 Duplex Mode.
RS485 Auto Flow Control	[Disabled], [Enabled]	Select whether to enable or disable RS485 Auto Flow Control

Figure 19: BIOS Advanced Menu - CPU Chipset Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
CPU Chipset Configuration					
EIST		[Enabled]		→ ←: Select Screen	
Turbo Mode		[Enabled]		↑ ↓: Select Item	
Hyper-threading		[Enabled]		Enter: Select	
VT-d		[Enabled]		+/-: Change Opt.	
Active Processor Cores		[All]		F1: General Help	
Intel (VMX) Virtualization Technology		[Enabled]		F2: Previous Values	
Intel Trusted Execution Technology		[Disabled]		F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
EIST	[Disabled], [Enabled]	Select whether to enable or disable Enhanced Intel SpeedStep Technology.
Turbo Mode	[Disabled], [Enabled]	Select whether to enable or disable turbo mode.
Hyper-threading	[Disabled], [Enabled]	Select whether to enable or disable Hyper-threading technology. [Enabled] for Windows XP and Linux (OS optimized for Hyper-Threading Technology). [Disabled] for other OS (OS not optimized for Hyper-Threading Technology).
VT-d	[Disabled], [Enabled]	Select whether to enable or disable VT-d capability.
Active Processor Cores	[All], [1]	Select the number of cores to enable in each processor package.
Intel (VMX) Virtualization Technology	[Disabled], [Enabled]	Select whether to enable or disable Intel (VMX) Virtualization Technology.
Intel Trusted Execution Technology	[Disabled], [Enabled]	Select whether to enable or disable Intel Trusted Execution Technology.

Figure 20: BIOS Advanced Menu - SATA Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
SATA Configuration					
SATA Controller(s)		[Enabled]	→ ←: Select Screen		
SATA Mode Selection		[AHCI]	↑ ↓: Select Item		
Serial ATA Port 1		Empty	Enter: Select		
Port 1		[Enabled]	+/-: Change Opt.		
Serial ATA Port 2		Empty	F1: General Help		
Port 2		[Enabled]	F2: Previous Values		
M.2 SATA Port 1		M.2 SATA M3B (32.0GB)	F3: Optimized Defaults		
Port 1		[Enabled]	F4: Save & Exit		
			ESC: Exit		
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
SATA Controller(s)	[Enabled], [Disabled]	Select whether to enable or disable SATA Device.
SATA Mode Selection	[AHCI], [Intel RST Premium]	Determine how SATA controller(s) operate.
Port 1..2	[Disabled], [Enabled]	Select whether to enable or disable SATA Port 1..2 / M.2 SATA Port 1.

Figure 21: BIOS Advanced Menu - USB Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
USB Configuration					
USB Devices: 1 Keyboard, 1 Mouse, 1 Point				→ ←: Select Screen ↑ ↓: Select Item Enter: Select	
Legacy USB Support		[Enabled]		+/-: Change Opt.	
XHCI Hand-off		[Enabled]		F1: General Help	
USB Mass Storage Driver Support		[Enabled]		F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Legacy USB Support	[Enabled], [Disabled], [Auto]	Select whether to enable or disable Legacy USB support. AUTO option disables legacy support if no USB devices are connected.
XHCI Hand-off	[Enabled], [Disabled]	Select whether to enable or disable XHCI Hand-off function. This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	[Disabled], [Enabled]	Select whether to enable or disable USB Mass Storage Driver Support.

Figure 22: BIOS Advanced Menu - AMT Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
AMT Configuration					
AMT BIOS Features		[Enabled]	→ ←: Select Screen		
Unconfigure ME		[Disabled]	↑ ↓: Select Item		
			Enter: Select		
			+/-: Change Opt.		
			F1: General Help		
			F2: Previous Values		
			F3: Optimized Defaults		
			F4: Save & Exit		
			ESC: Exit		
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
AMT BIOS Features	[Disabled], [Enabled]	Select whether to enable or disable Intel AMT (Active Management Technology) BIOS Features.
Unconfigure ME	[Disabled], [Enabled]	Select whether to enable or disable unconfigure ME (Management Engine).

Figure 23: BIOS Advanced Menu - Trusted Computing

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Configuration					
Security Device Support		[Disabled]			
NO Security Device Found				→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Security Device Support	[Disabled], [Enabled]	Select whether to enable or disable security device support.

Figure 24: BIOS Advanced Menu - Network Stack

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Network Stack		[Disabled]			
				→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Network Stack	[Disabled], [Enabled]	Select whether to enable or disable network stack.

Figure 25: BIOS Advanced Menu - DIO Configuration

BIOS SETUP UTILITY							
Main	Advanced	Power	Boot	Security	Save & Exit		
DIO Configuration							
User Configuration		[Disabled]					
DO_1*		[Output Low]					
DO_2*		[Output Low]					
DO_3*		[Output Low]					
DO_4*		[Output Low]					
DI_1		1		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit			
DI_2		1					
DI_3		1					
DI_4		1					
DO_1		0					
DO_2		0					
DO_3		0					
DO_4		0					
Version 2.17.1255. Copyright (C) 2016, American Megatrends, Inc.							

* These items appear only when enabling User Configuration.

Feature	Option	Description
User Configuration	[Enabled], [Disabled]	Select whether or not to allow user to set the DO pin output value.
DO_1..4	[Output Low], [Output High]	Set up the DO pin output value.

Figure 26: BIOS Advanced Menu - H/W Monitor

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
PC Health Status					
CPU Temperature		: +46 C			
Memory Temperature		: +46 C			
System Temperature		: +45 C		→ ←: Select Screen	
+V CORE		: +0.920 V		↑ ↓: Select Item	
+VIN		: +12.000 V		Enter: Select	
+3VCC		: +3.360 V		+/-: Change Opt.	
+3VSB		: +3.360 V		F1: General Help	
+VBAT		: +3.120 V		F2: Previous Values	
+5VA		: +5.160 V		F3: Optimized Defaults	
+3VA		: +3.296 V		F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

10.2.3. Power Setup Menu

The Power setup menu provides functions and a sub-screen for power configurations. The following sub-screen function is included in the menu:

- ▶ WatchDog Timer Configuration

Figure 27: BIOS Power Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Power Configuration					
ACPI Sleep State		[S3 (Suspend to RAM)]			
Restore AC Power Loss		[Power Off]			
Power Saving Mode		[Disabled]		→ ←: Select Screen	
Resume Event Control				↑ ↓: Select Item	
Resume By LAN Device		[Disabled]		Enter: Select	
Resume By PCI-E Device		[Disabled]		+/-: Change Opt.	
Resume By Ring Device		[Disabled]		F1: General Help	
Resume By RTC Alarm		[Disabled]		F2: Previous Values	
> WatchDog Timer Configuration				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
ACPI Sleep State	[S3 (Suspend to RAM)]	Select whether to enable or disable suspend function and determine an appropriate suspend mode.
Restore AC Power Loss	[Power Off], [Power On], [Last State]	Control whether the system will stay on after AC power is removed and then restored. Select [Power Off] if you want the system to remain off after power restored. Select [Power On] if you use a power strip to turn the system on.
Power Saving Mode	[Disabled], [EUP Enabled], [DeepSx Enabled]	Select whether to enable Power Saving Mode.
Resume By LAN Device	[Disabled], [Enabled]	Select whether to enable or disable Wake from LAN Device.
Resume By PCI-E Device	[Disabled], [Enabled]	Select whether to enable or disable Wake from PCIE Device.
Resume By Ring Device	[Disabled], [Enabled]	Select whether to enable or disable Wake from Ring Device.
Resume By RTC Alarm	[Disabled], [Enabled]	Select whether to enable or disable Wake Up on Alarm, to turn on your system on a special day of the month.

Figure 28: BIOS Power Setup Menu - WatchDog Timer Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
WatchDog Timer Configuration					
WDT Function		[Disabled]		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
WDT Function	[Disabled], [Enabled]	Select whether to enable or disable WatchDog Timer function.

10.2.4. Boot Setup Menu

The boot setup menu lists the for boot device priority order, that is generated dynamically.

Figure 29: BIOS Boot Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Boot Configuration					
Full Screen LOGO Display		[Disabled]			
Setup Prompt Timeout		1		→ ←: Select Screen	
Bootup NumLock State		[On]		↑ ↓: Select Item	
CSM Support		[Enabled]		Enter: Select	
Boot Option Filter		[UEFI and Legacy]		+/-: Change Opt.	
Boot Option Priorities				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Full Screen LOGO Display	[Disabled], [Enabled]	Select whether to enable or disable to display logo screen.
Bootup NumLock State	[On], [Off]	Select the state of the NumLock feature of the keyboard after Startup. [On]: The keys on the keypad will act as numeric keys. [Off]: The keys on the keypad will act as cursor keys.
CSM Support	[Enabled], [Disabled]	Select whether to enable or disable CSM support.
Boot Option Filter	[UEFI and Legacy], [Legacy only], [UEFI only]	Control Legacy / UEFI ROMs priority.

10.2.5. Security Setup Menu

The Security setup menu provides information about the passwords and functions for specifying the security settings. The passwords are case-sensitive. The SmartClient-SLUx-170-P provides no factory-set passwords.

NOTICE

If there is already a password installed, the system asks for this first. To clear a password, simply enter nothing and acknowledge by pressing <RETURN>. To set a password, enter it twice and acknowledge by pressing <RETURN>.

Figure 30: BIOS Security Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Password Description					
If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup					
If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights					
The password length must be in the following range:				→ ←: Select Screen	
Minimum Length		3		↑ ↓: Select Item	
Maximum length		20		Enter: Select	
Administrator Password				+/-: Change Opt.	
User Password				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Description
Administrator Password	Set administrator password
User Password	Set user password



If only the administrator's password is set, then only access to setup is limited. The password is only entered when entering setup.

If only the user's password is set, then the password is a power on password and must be entered to boot or enter setup. Within the setup menu the user has administrator rights.

Password length requirements are maximum 20 characters and minimum 3 characters.

10.2.5.1. Remember the password

It is highly recommended to keep a record of all passwords in a safe place. Forgotten passwords results in being locked out of the system.

If the system cannot be booted because the User Password or the Supervisor Password are not know, contact Kontron Support for further assistance.



HDD security passwords cannot be cleared using the above method.

10.2.6. Save & Exit Setup Menu

The exit setup menu provides functions for handling changes made to the UEFI BIOS settings and the exiting of the setup program.

Figure 31: BIOS Save & Exit Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Save Changes and Reset					
Discard Changes and Reset					
Save Options				→ ←: Select Screen	
Save Changes				↑ ↓: Select Item	
Discard Changes				Enter: Select	
Restore Defaults				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Description
Save Changes and Exit	Exit system setup after saving the changes. Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved to the CMOS RAM. The CMOS RAM is sustained by an onboard backup battery and stays on even when the PC is turned off. When you select this option, a confirmation window appears. Select [Yes] to save changes and exit.
Discard Changes and Exit	Exit system setup without saving any changes. Select this option only if you do not want to save the changes that you made to the Setup program. If you made changes to fields other than system date, system time, and password, the BIOS asks for a confirmation before exiting.
Save Changes	Save changes done so far to any of the setup values. This option allows you to save the selections you made. After selecting this option, a confirmation appears. Select [Yes] to save any changes.
Discard Changes	Discards changes done so far to any of the setup values. This option allows you to discard the selections you made and restore the previously saved values. After selecting this option, a confirmation appears. Select [Yes] to discard any changes and load the previously saved values.
Restore Defaults	Restore Default values for all the setup values. This option allows you to load optimal default values for each of the parameters on the Setup menus, which will provide the best performance settings for your system. The F9 key can be used for this operation.



About Kontron

Kontron is a global leader in embedded computing technology (ECT). As a part of technology group S&T, Kontron offers a combined portfolio of secure hardware, middleware and services for Internet of Things (IoT) and Industry 4.0 applications. With its standard products and tailor-made solutions based on highly reliable state-of-the-art embedded technologies, Kontron provides secure and innovative applications for a variety of industries. As a result, customers benefit from accelerated time-to-market, reduced total cost of ownership, product longevity and the best fully integrated applications overall. Kontron is a listed company. Its shares are traded in the Prime Standard segment of the Frankfurt Stock Exchange and on other exchanges under the symbol "KBC". For more information, please visit: www.kontron.com / www.kontron-asia.com

▼

PRODUCT CONTACT
POINT

KONTRON ASIA INC.

4F, No. 415, Ti-Ding Blvd.,
Sec. 2, Neihu District,
Taipei, Taiwan 114741
Tel.: + 886 2 2799 2789
Fax: + 886 2 2799 7399
SalesAsia@kontron.com