


» VM6250 «

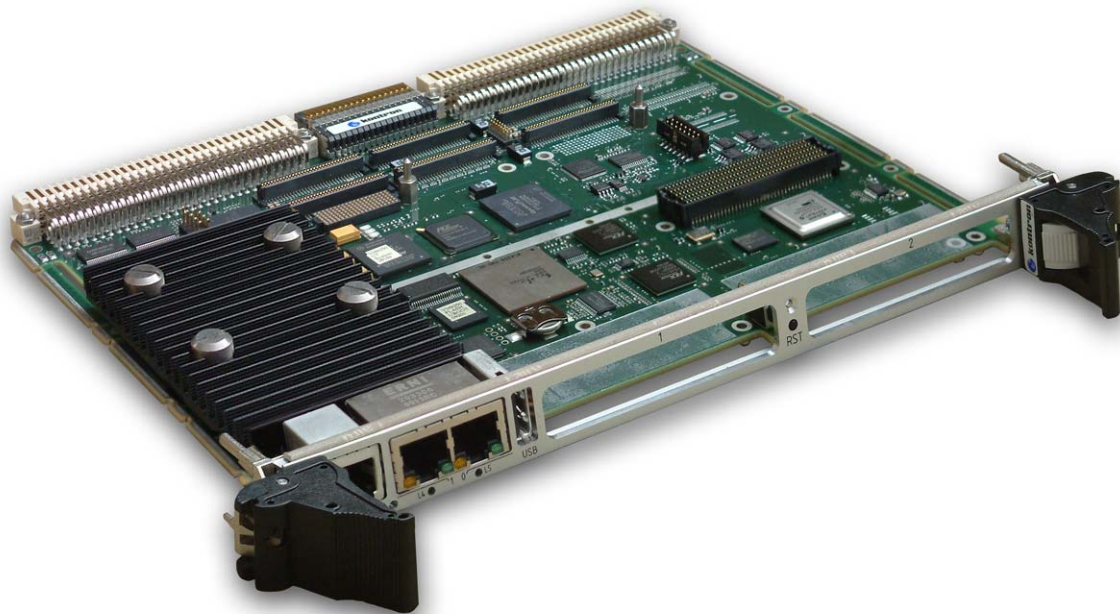

6U VME PowerPC SBC User's Guide

CA.DT.A65-4e - January 2012

Revision History

| Publication Title: | | VM6250 User's Guide |
|--------------------|--|---------------------|
| Doc. ID: | | CA.DT.A65-4e |
| Rev. | Brief Description of Changes | Date of Issue |
| 4e | Add of VITA 57 Option Order Code and Sata Manufacturing Option modified | 01-2012 |
| 3e | Update Order Code Information Table (Section 1.2.3) CRP3846 - Update 6.2.7 Section page 96 | 12-2010 |
| 2e | Add information related to WA versions. Update thermal information, and power consumption. Add information related to SATA kit disk (KIT-DISK25-SATA, KIT-DISK18-SATA). | 11-2010 |
| 1e | Updates on COM1/COM2 on Serial front panel | 01-2010 |
| 0e | Initial Version | 10-2009 |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Copyright © 2012 Kontron AG. All rights reserved. All data is for information purposes only and not guaranteed for legal purposes. Information has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. Kontron and the Kontron logo and all other trademarks or registered trademarks are the property of their respective owners and are recognized. Specifications are subject to change without notice.

Proprietary Note

This document contains information proprietary to Kontron. It may not be copied or transmitted by any means, disclosed to others, or stored in any retrieval system or media without the prior written consent of Kontron or one of its authorized agents.

The information contained in this document is, to the best of our knowledge, entirely correct. However, Kontron cannot accept liability for any inaccuracies or the consequences thereof, or for any liability arising from the use or application of any circuit, product, or example shown in this document.

Kontron reserves the right to change, modify, or improve this document or the product described herein, as seen fit by Kontron without further notice.


Trademarks

This document may include names, company logos and trademarks, which are registered trademarks and, therefore, proprietary to their respective owners.

Environmental Protection Statement

This product has been manufactured to satisfy environmental protection requirements where possible. Many of the components used (structural parts, printed circuit boards, connectors, batteries, etc.) are capable of being recycled.

Final disposition of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

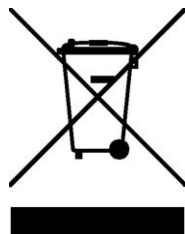

Environmental protection is a high priority with Kontron.

Kontron follows the DEEE/WEEE directive.

You are encouraged to return our products for proper disposal.

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to:

- > reduce waste arising from electrical and electronic equipment (EEE)
- > make producers of EEE responsible for the environmental impact of their products, especially when they become waste
- > encourage separate collection and subsequent treatment, reuse, recovery, recycling and sound environmental disposal of EEE
- > improve the environmental performance of all those involved during the lifecycle of EEE

Conventions

This guide uses several types of notice: Note, Caution, ESD.



Note: this notice calls attention to important features or instructions.



Caution: this notice alert you to system damage, loss of data, or risk of personal injury.



ESD: This banner indicates an Electrostatic Sensitive Device.

All numbers are expressed in decimal, except addresses and memory or register data, which are expressed in hexadecimal. The prefix `0x` shows a hexadecimal number, following the `C` programming language convention.

The multipliers `k`, `M` and `G` have their conventional scientific and engineering meanings of $*10^3$, $*10^6$ and $*10^9$ respectively. The only exception to this is in the description of the size of memory areas, when `K`, `M` and `G` mean $*2^{10}$, $*2^{20}$ and $*2^{30}$ respectively.



When describing transfer rates, `k` `M` and `G` mean $*10^3$, $*10^6$ and $*10^9$ *not* $*2^{10}$ $*2^{20}$ and $*2^{30}$.

In PowerPC terminology, multiple bit fields are numbered from 0 to n, where 0 is the MSB and n is the LSB. PCI and CompactPCI terminology follows the more familiar convention that bit 0 is the LSB and n is the MSB.

Signal names ending with an asterisk (*) or a hash (#) denote active low signals; all other signals are active high.

Signal names follow the PICMG 2.0 R3.0 CompactPCI Specification and the PCI Local Bus 2.3 Specification.

For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

High Voltage Safety Instructions



Warning!

All operations on this device must be carried out by sufficiently skilled personnel only.



Caution, Electric Shock!

Before installing a not hot-swappable Kontron product into a system always ensure that your mains power is switched off. This applies also to the installation of piggybacks. Serious electrical shock hazards can exist during all installation, repair and maintenance operations with this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing work.

Special Handling and Unpacking Instructions



ESD Sensitive Device!

Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the board is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the board.

General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the device, which are not explicitly approved by Kontron and described in this manual or received from Kontron's Technical Support as a special handling instruction, will void your warranty.

This device should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This applies also to the operational temperature range of the specific board version, which must not be exceeded. If batteries are present, their temperature restrictions must be taken into account.

In performing all necessary installation and application operations, please follow only the instructions supplied by the present manual.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the board, please re-pack it as nearly as possible in the manner in which it was delivered.

Special care is necessary when handling or unpacking the product. Please consult the special handling and unpacking instruction on the previous page of this manual.

Table Of Contents

| | |
|---|-----------|
| Chapter 1 - Introduction | 1 |
| 1.1 Manual Overview | 3 |
| 1.1.1 Objectives | 3 |
| 1.1.2 Audience | 3 |
| 1.1.3 Scope | 3 |
| 1.1.4 Structure | 3 |
| 1.2 Board Overview | 4 |
| 1.2.1 Main Features | 4 |
| 1.2.2 I/O Interfaces | 6 |
| 1.2.3 Ordering Information | 7 |
| 1.2.3.1 <i>SATA Manufacturing Option</i> | 8 |
| 1.2.3.2 <i>FMC Manufacturing Option</i> | 8 |
| 1.2.4 Block Diagram | 9 |
| 1.2.5 Front Panel | 10 |
| 1.2.6 Components Layout | 12 |
| 1.2.7 VM6250-WA Specificities | 14 |
| 1.2.8 VM6250-VITA 57 Specifications | 15 |
| 1.3 Technical Specification | 16 |
| 1.3.1 MTBF Data | 20 |
| 1.4 Software Support | 21 |
| 1.5 Standards | 21 |
| 1.6 Environmental Specifications | 22 |
| 1.7 Related Publications | 23 |
| Chapter 2 - Functional Description | 24 |
| 2.1 Processor and Memory | 25 |
| 2.1.1 Processor | 25 |
| 2.1.2 Memory | 27 |
| 2.2 PCI-Express Buses | 27 |
| 2.3 ALMA2f PCI to VME Bridge | 28 |
| 2.3.1 VMEbus Master Access | 29 |
| 2.3.2 VMEbus Slave Access | 29 |
| 2.3.3 VMEbus Arbitration | 30 |
| 2.3.4 DMA Channels | 30 |
| 2.3.5 Interrupt Management | 30 |
| 2.4 Storage | 31 |
| 2.4.1 Flash Memory | 31 |
| 2.4.1.1 <i>NAND Flash</i> | 31 |
| 2.4.1.2 <i>Firmware Flash</i> | 31 |
| 2.4.2 Serial EEPROMs | 31 |

| | | |
|-----------|--|----|
| 2.4.3 | SPI EEPROM | 31 |
| 2.4.4 | NOVRAM | 31 |
| 2.4.5 | Dual Serial ATA | 31 |
| 2.5 | Peripherals | 32 |
| 2.5.1 | Timer | 32 |
| 2.5.2 | Watchdog Timer | 32 |
| 2.5.3 | Power Monitor and Reset Generation | 32 |
| 2.6 | System FPGA | 32 |
| 2.7 | Connectors Layout | 33 |
| 2.8 | Board Interfaces | 35 |
| 2.8.1 | Serial Interfaces | 35 |
| 2.8.2 | USB Interfaces | 36 |
| 2.8.3 | Gigabit Ethernet Interfaces | 39 |
| 2.8.3.1 | <i>ETH0 and ETH1 Pinouts</i> | 40 |
| 2.8.3.2 | <i>Ethernet LED Status</i> | 40 |
| 2.8.4 | SATA Interface | 41 |
| 2.8.5 | VME Bus Interface - P0 Connector | 42 |
| 2.8.5.1 | <i>P0 Connector Pin Assignment</i> | 42 |
| 2.8.5.2 | <i>P0 Signal Description</i> | 43 |
| 2.8.6 | VME Bus Interface - P1 Connector | 44 |
| 2.8.6.1 | <i>P1 and P2 Row B (VMEbus) Connector Pin Assignment</i> | 44 |
| 2.8.6.2 | <i>Geographical Address Pin Assignment</i> | 45 |
| 2.8.6.3 | <i>VMEbus Signal Description</i> | 46 |
| 2.8.7 | VME Bus Interface - P2 Connector | 48 |
| 2.8.7.1 | <i>P2 Connector Pin Assignment</i> | 48 |
| 2.8.7.2 | <i>P2 Signal Description</i> | 49 |
| 2.8.8 | PMC J11 and J21 Connector Pin Assignments | 50 |
| 2.8.9 | PMC J12 and J22 Connector Pin Assignments | 50 |
| 2.8.10 | PMC J13 and J23 Connector Pin Assignments | 51 |
| 2.8.11 | PMC J14 and J24 Connector Pin Assignment | 51 |
| 2.8.12 | PMC Signal Description | 52 |
| 2.8.13 | XMC J15 and 25 Connector Pin Assignments | 54 |
| 2.8.14 | XMC Signal Description | 55 |
| 2.8.15 | FMC Interface - P4 and P6 Connectors | 56 |
| 2.9 | PMC Site | 57 |
| 2.9.1 | PCI 64 XMC/PMC Site 1 | 58 |
| 2.9.2 | PCI 64 XMC/PMC Site 2 | 59 |
| 2.9.3 | Signaling Voltage Keying Pin | 60 |
| Chapter 3 | Installation | 61 |
| 3.1 | Safety Requirements | 61 |
| 3.2 | Board Identification | 62 |
| 3.3 | Board Configuration | 63 |
| 3.3.1 | DIP Switch SW1 Description | 64 |

| | | |
|--------------------|--|-----------|
| 3.3.2 | DIP Switch SW2 Description | 64 |
| 3.3.3 | DIP Switch SW3 Description | 64 |
| 3.3.4 | DIP Switch SW4 Description | 64 |
| 3.3.5 | DIP Switch SW5 Description | 64 |
| 3.4 | Package Content | 65 |
| 3.5 | Initial Installation Procedure | 66 |
| 3.6 | Standard Removal Procedure | 67 |
| 3.7 | Installation of Peripheral Devices | 68 |
| 3.7.1 | USB Device Installation | 69 |
| 3.7.2 | Battery Replacement | 69 |
| 3.7.3 | Serial ATA Extension Module | 70 |
| 3.7.4 | PMC Installation | 71 |
| 3.7.5 | XMC Installation | 73 |
| 3.7.6 | FMC Installation | 75 |
| 3.8 | Software Installation | 77 |
| Chapter 4 - | Programming Interface | 78 |
| 4.1 | Interrupt Routing | 78 |
| 4.2 | Chip Select Lines Usage | 79 |
| Chapter 5 - | Power and Thermal Considerations | 80 |
| 5.1 | Power Considerations | 80 |
| 5.1.1 | System Power | 80 |
| 5.1.1.1 | <i>VM6250 Baseboard</i> | <i>80</i> |
| 5.1.1.2 | <i>Backplane</i> | <i>80</i> |
| 5.1.1.3 | <i>Power Supply Units</i> | <i>81</i> |
| 5.1.2 | Power Consumption | 83 |
| 5.1.2.1 | <i>Real Applications</i> | <i>83</i> |
| 5.2 | Thermal Considerations | 84 |
| 5.2.1 | Thermal Monitoring | 84 |
| 5.2.1.1 | <i>Placement of the Temperature Sensors</i> | <i>84</i> |
| 5.3 | CPU Internal Thermal Regulation | 85 |
| 5.4 | External Thermal Regulation | 86 |
| 5.4.1 | Air Flow Direction | 86 |
| 5.4.2 | Thermal Functional Point | 87 |
| Chapter 6 - | VM6250-RTM Characteristics | 90 |
| 6.1 | Installation of the Rear Transition Module | 91 |
| 6.2 | Connectors | 92 |
| 6.2.1 | RP0 Connector Pin Assignment | 92 |
| 6.2.2 | RP2 Connector Pin Assignment | 92 |
| 6.2.3 | H1 (ETHERNET 0) & H2 (ETHERNET 1) - Gigabit ETHERNET Connector | 93 |

| | | |
|--------|--|-----|
| 6.2.4 | H4 (USB1) - USB Connector | 94 |
| 6.2.5 | H5 - SMB Connector | 94 |
| 6.2.6 | H7 (S0/COM1) & H8 (S1/COM2) - SERIAL Connector | 95 |
| 6.2.7 | H9 - GPIOs and MISC Signals | 96 |
| 6.2.8 | H10 (SATA0) and H11 (SATA1) - Serial ATA Connector | 97 |
| 6.2.9 | H12 - PCI Express Connector | 98 |
| 6.2.10 | PCI 64 PIM Site 1 Connector | 99 |
| 6.2.11 | PCI 64 PIM Site 2 Connector | 101 |
| 6.2.12 | Reset | 103 |
| 6.2.13 | Mechanical Ground | 103 |
| 6.2.14 | Power Supplies | 103 |
| 6.3 | Cables | 104 |
| 6.3.1 | SATA Cable | 104 |
| 6.3.2 | Ethernet Cable | 104 |
| 6.3.3 | PCI-Express Cable | 104 |
| 6.3.4 | USB 2.0 Cable | 105 |

List Of Figures

| | |
|--|----|
| Figure 1: VM6250-SA Overview | 1 |
| Figure 2: VM6250-WA Overview | 2 |
| Figure 3: VM6250 Functional Block Diagram | 9 |
| Figure 4: Front Panel Connectors | 10 |
| Figure 5: Reset Button and LEDs | 10 |
| Figure 6: Components Layout (Top View) | 12 |
| Figure 7: Components Layout (Bottom View) | 13 |
| Figure 8: VM6250-WA - Location of the Tighteners | 14 |
| Figure 9: MPC8641D Block Diagram | 26 |
| Figure 10: PCI to VME Bridge Block Diagram | 28 |
| Figure 11: Connector Layout (Top View) | 33 |
| Figure 12: Front Panel Connector Layout | 33 |
| Figure 13: Connector Layout (Bottom View) | 34 |
| Figure 14: Serial Connector | 35 |
| Figure 15: USB Connector | 36 |
| Figure 16: USB onboard Connector | 37 |
| Figure 17: USB Flash Disk Overview | 38 |
| Figure 18: Dual Gigabit Ethernet Connector | 39 |
| Figure 19: SATA onboard Connector | 41 |
| Figure 20: FMC Connectors Layout (Top View) | 56 |
| Figure 21: PMC Site Locations | 57 |
| Figure 22: Board Identification (Bottom View) | 62 |
| Figure 23: Board Configuration | 63 |
| Figure 24: Onboard Devices | 68 |
| Figure 25: USB Flash Disk Bottom View | 69 |
| Figure 26: Battery Location | 69 |
| Figure 27: SATA Extension Module: front and Bottom Views | 70 |
| Figure 28: PMC Installation on PMC Site 1 | 72 |
| Figure 29: PMC Installation on PMC Site 2 | 72 |
| Figure 30: Example of XMC Board | 73 |
| Figure 31: XMC Installation on PMC Site 1 | 73 |
| Figure 32: XMC Installation on PMC Site 2 | 74 |
| Figure 33: Example of FMC Board | 75 |
| Figure 34: FMC Installation on FMC Site | 76 |
| Figure 35: Board Temperature Sensor Placement (Top View) | 84 |
| Figure 36: Air Flow from PMC Slots to CPU Area | 86 |
| Figure 37: Air Flow from CPU Area to PMC Slots | 86 |

| | |
|--|-----|
| Figure 38: VM6250-SA/WA Thermal Performance: No PMC fitted | 88 |
| Figure 39: VM6250-SA/WA Thermal Performance: PMCs fitted | 89 |
| Figure 40: PBV36-P0-VM6-00 Module Overview | 90 |
| Figure 41: Installing the VM6250-RTM | 91 |
| Figure 42: VM6250-RTM Connectors Location | 92 |
| Figure 43: Serial ATA Cable | 104 |
| Figure 44: Gigabit Ethernet Cable | 104 |
| Figure 45: USB 2.0 Cable | 105 |

List Of Tables

| | |
|--|----|
| Table 1: I/O Interfaces | 6 |
| Table 2: Peripheral Connectivity | 6 |
| Table 3: Order Code Table | 7 |
| Table 4: Order Code Table (SATA onboard) | 8 |
| Table 5: Ethernet LEDs Status Definition | 11 |
| Table 6: VM6250 Main Specifications | 19 |
| Table 7: VM6250-SA and VM6250-WA MTBF Data | 20 |
| Table 8: VM6250-RC MTBF Data | 20 |
| Table 9: Standards | 21 |
| Table 10: Environmental Specifications | 22 |
| Table 11: Related Publications | 23 |
| Table 12: Serial Connector Pinout | 35 |
| Table 13: USB Connector Pinout | 36 |
| Table 14: USB onboard P3 Pinout | 37 |
| Table 15: Gigabit Ethernet Connectors ETH0 and ETH1 Pinout | 40 |
| Table 16: Ethernet LEDs Status Definition | 40 |
| Table 17: SATA onboard Ethernet Pinout | 41 |
| Table 18: P0 Connector Pin Assignment | 43 |
| Table 19: P0 Signal Description | 43 |
| Table 20: P1 and P2 (Row B) Connector Pin Assignment | 44 |
| Table 21: VME Signal Description | 47 |
| Table 22: P2 Connector Pin Assignment | 48 |
| Table 23: P2 Signal Description | 49 |
| Table 24: PMC J11 and J21 Connector Pin Assignment | 50 |
| Table 25: PMC J12 and J22 Connector Pin Assignment | 50 |
| Table 26: PMC J13 and J23 Connector Pin Assignment | 51 |
| Table 27: PMC J14 and J24 Connector Pin Assignment | 51 |
| Table 28: PMC Signal Description | 53 |
| Table 29: XMC J15 and J25 Connector Pin Assignments | 54 |
| Table 30: XMC Signal Description | 55 |
| Table 31: PCI 64 XMC/PMC Site 1 Information | 58 |
| Table 32: PCI 64 XMC/PMC Site 2 Information | 59 |
| Table 33: CPU Interrupts | 78 |
| Table 34: Chip Select | 79 |
| Table 35: Maximum Input Power | 80 |
| Table 36: DC Operational Input Voltage Ranges | 80 |
| Table 37: Input Voltage Characteristics | 82 |

| | |
|---|----|
| Table 38: Power Consumption: U-Boot or Linux IDLE Mode | 83 |
| Table 39: Power Consumption: Linux 100% Processor Load | 83 |
| Table 40: Air Speed and Air Flow Measurements for SA Boards | 87 |
| Table 41: Air Speed and Air Flow Measurements for WA Boards | 87 |

Chapter 1 - Introduction

The VM6250 is built around Freescale's state-of-the-art MPC8640/8641 single or dual-core e600 processor.

The VM6250 provides exceptional I/O capabilities onboard and outstanding flexibility by being the first 6U VME board to provide support for PMC, XMC and FMC mezzanine cards.

The VM6250's high performance, 2eSST, VME interface helps customers preserve their investment in legacy VME equipment.


The VM6250 was designed to be Kontron's next generation VME SBC providing substantial price and performance over previous generations of VME computers.

In this document, the term:

» VM6250 will be associated to 6U VME boards, air-cooled and conduction-cooled versions:

- > VM6250-SA Air-cooled version
- > VM6250-WA Air-cooled extension temperature version
- > VM6250-RC Conduction-cooled version

» VM6250-RTM will be associated to the 6U VME Rear Transition Module (RTM)

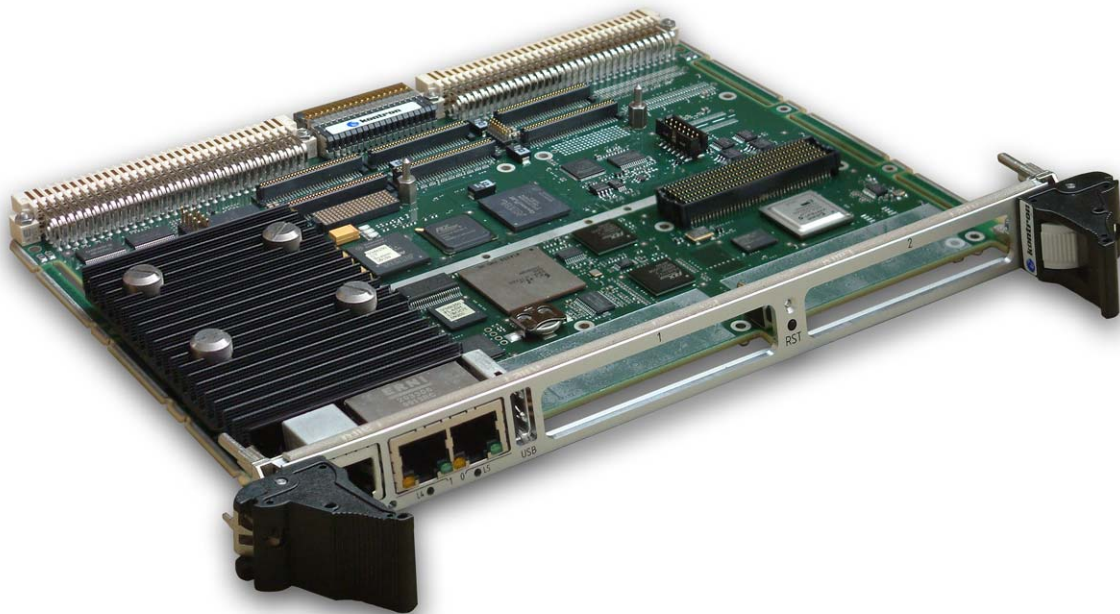

Non contractual photography

Figure 1: VM6250-SA Overview

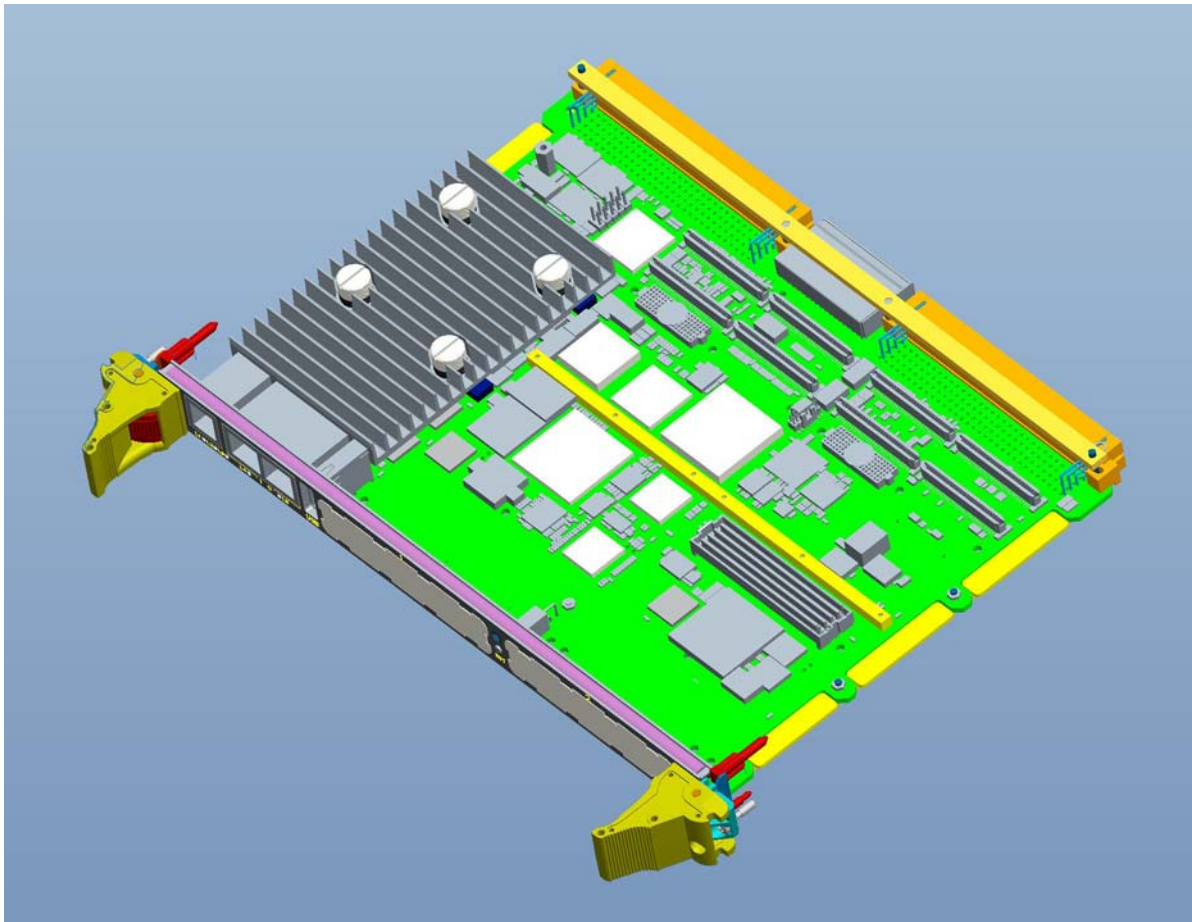


Figure 2: VM6250-WA Overview

1.1 Manual Overview

1.1.1 Objectives

This guide provides general information, hardware preparation and installation instructions, operating instructions and a functional description of the VM6250 board. The onboard programming, onboard firmware and other software (e.g. drivers and BSPs) are described in detail in separate guides (see section 1.7 "Related Publications" page 23).



As the standard policy for all the Kontron, hardware technical documentation reflects the most recent version of our products. The "Hardware Release Notes" (see section 1.7 "Related Publications" page 23) is to help to keep track of various evolutions that have happened during the early steps of the VM6250 ramp-up or later in its lifetime.



Functional changes that differ from previous version of the document are identified by a vertical bar in the margin.

1.1.2 Audience

This guide is written to cover, as far as possible, the range of people who will handle or use the VM6250, from unpackers/inspectors, through system managers and installation technicians to hardware and software engineers. Most chapters assume a certain amount of knowledge on the subjects of single board computer architecture, interfaces, peripherals, systems, cabling, grounding and communications.

1.1.3 Scope

This guide describes all variants of the VM6250 series. It does not cover any PMC/XMC or FMC modules which are described in specific guides (see section 1.7 "Related Publications" page 23).

1.1.4 Structure

This guide is structured in a way that will reflect the sequence of operations from receipt of the board up to getting it working in your system. Each topic is covered in a separate chapter and each chapter begins with a brief introduction that tells you what the chapter contains. In this way, you can skip any chapters that are not applicable or with which you are already familiar.

The chapters are:

- > Chapter 1 - Introduction (this chapter)
- > Chapter 2 - Functional Description
- > Chapter 3 - Installation
- > Chapter 4 - Programming Interface
- > Chapter 5 - Power and Thermal Considerations
- > Chapter 6 - VM6250-RTM Characteristics

1.2 Board Overview

1.2.1 Main Features

» Powerful Freescale MPC864x PowerPC Architecture

The Freescale MPC864x processor features an AltiVec engine to perform 128-bit wide parallel processing instructions (SIMD), and a four channel DMA controller to accelerate data transfers.

In order to fit all the requirements with the best compromise between performance and dissipation, the VM6250 is available in several different configurations. It can be equipped with:

- a Freescale MPC8640 single processor at a frequency of 1 GHz
- a Freescale MPC8640D dual processor at frequencies of 1 GHz and 1.25 GHz
- a Freescale MPC8641D dual processor at a frequency of 1.33 GHz

» Soldered DDR2 Memories with the Support of ECC

The MPC864x provides DDR2 memory controllers operating up to 533 MHz with 72-bit wide DDR2 SDRAM configured with 8 bits for Error-Correcting Code (ECC). The peak memory bandwidth is 4.3 GB/s.

» Numerous Storage Interfaces

128 KB of Auto-store, Non-Volatile Random Access Memory allows backup of critical data when power is removed. Dual redundant 32 Mb NOR Flash are used to store firmware code and built-in tests, and two serial 256 Kb EEPROMs are dedicated to system and application date storage.

A USB 2.0 Flash drive slot is available onboard supporting low standard profile USB 2.0 Flash disk modules up to 8 GB.

Depending on the SATA Manufacturing Option, a SATA drive slot is available onboard supporting SATA HDD up to 120 GB.

The VM6250 is equipped with the ALMA2f VME controller supporting the VME64x and 2eSST protocols offering up to 320 MB/s peak throughput.

» Backplane Switch

Two Gigabit Ethernet links are available on P0 connector. P0 Ethernet routing supports VITA 31.1 backplane networking.

In addition, one 4x PCI Express link is available on P0, which, optionally may be configured as one 4x Serial RapidIO link.

» Extensive I/O Connectivity

The VM6250 provides up to four 10/100/1000 BASE-TX Ethernet interfaces, two EIA-232 serial lines, three general purpose I/Os (GPIO), three USB 2.0 links, two SATA II interfaces and one 4x PCI-Express link.

Two onboard mezzanine sites support PCI, PCI-Express and FMC cards (VITA 57 FPGA I/O).

» FMC Support, VITA 57

The VM6250 is one of the first high-performance 6U VME cards to support the new FPGA Mezzanine Card (FMC) standard defined by VITA 57.

To implement custom interfaces using VM6250, the customer develops his IP using Xilinx tools, and designs a specific FMC. The FPGA image is loaded to a flash on VM6250. A rescue FLASH is also present to ease developments and secure deployments.

» Legacy Compatibility

The VM6250 has been designed to offer a legacy I/O compatibility with the Kontron's VMPC6x and PowerEngine7 boards to provide an easy path for technology insertion into existing systems.

» Software

The VM6250 is delivered with PowerOn Built-in-Test and the OpenSource U-Boot firmware.

The VM6250 supports Wind River's VxWorks 6.x Real Time Operating System Software and and Fedora 9 Linux distributions. Consult factory for other O/ support.

» Designed to meet the Requirements of Harsh Environments

The VM6250 has been designed using the same PCB for both air and conduction-cooled boards. Build variants span a complete range of temperature, shock and vibration requirements as specified in the VITA 47 standards.

» 10-year Long Life Cycle

Investing in a new project is always a challenge and risky. Maximizing the lifetime of an application is therefore a critical issue when it comes to saving development investments.

The VM6250 has been designed with long life cycle components. Beyond the use of standard commercially available components, Kontron offers Longevity of Supply services which are designed to make the VM6250 available for then years or longer.

» Carrier Board

The VM6250 supports the V2PMC2, a 6U VME PCI-X/PMC carrier card that holds up to two single-width or one double-width PCI-X/PMC modules.

» Rear Transition Module

The VM6250 supports the VM6250-RTM, a 6U VME Rear Transition Module compliant with PMC I/O Module Standard VITA 36 - 199x Draft 0.1 July 19, 1999 (mechanical and PIM format).

1.2.2 I/O Interfaces

| FUNCTION | DESCRIPTION |
|-------------------|--|
| Ethernet | Broadcom BCM5466R low-power quad Gigabit Ethernet Transceiver: - Two 10/100/1000BASE-TX ports available on RJ-45 front panel connectors - Two 10/100/1000BASE-TX ports available on the rear P0 connector |
| USB | Four USB 2.0 channels - USB port 0 9-pin USB pin header, horizontal USB flash disk module - USB port 1 One USB port available on the VM6250 front panel - USB ports 2, 3 Two USB ports available on rear P0 connector |
| Serial ATA (SATA) | Depending on the SATA Manufacturing option: - Two SATA II ports are available on rear P0 connector or - One SATA II port is available on rear P0 connector, and one SATA II port is available onboard. |
| Serial Ports | Two serial ports EIA-232 - COM1 EIA-232 (simplified) port on RJ-12 front panel connector or on the rear P2 connector - COM2 EIA-232 (simplified) port on RJ-12 front panel connector or on the rear P2 connector |
| GPIO | Three General Purpose I/O on rear P0 connector. |
| LED | Five status LEDs on front panel: L1, L2, L3, L4, L5 |
| Reset | One reset button on front panel. |

Table 1: I/O Interfaces

| FUNCTION | VM6250 | | VM6250-RTM | |
|-------------------------------------|-------------|-----------|-------------|------------|
| | Front Panel | Onboard | Front Panel | Onboard |
| Gigabit Ethernet | Y (x2) | - | Y (x2) | - |
| USB0 | - | Y (9-pin) | - | - |
| USB1 | Y | - | - | - |
| USB2, USB3 | - | - | Y (x2) | - |
| SATA (P0 Manufacturing Option) | - | - | Y (x2) | - |
| SATA (onboard Manufacturing Option) | - | Y | Y | - |
| COM1 (EIA-232) | Y | - | - | Y (10-pin) |
| COM2 (EIA-232) | Y | - | - | Y (10-pin) |
| GPIO | - | - | - | Y (x3) |
| LED | Y (x5) | - | - | - |
| Reset Button | Y | - | - | - |
| PCI-Express | - | - | Y | - |
| SMB | - | - | - | Y |

Table 2: Peripheral Connectivity

1.2.3 Ordering Information

| Article | Order Number | Description |
|----------------|--------------------|--|
| | | Air-cooled version ⁽¹⁾ |
| VM6250 | VM6250-1SA24-10110 | 8640 1 GHz/533 MHz 1GB DDR2 SDRAM 128K NVRAM 2x PMC |
| VM6250 | VM6250-2SA25-11110 | 8640D 1 GHz/533 MHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |
| VM6250 | VM6250-2SA35-11110 | 8640D 1.25 GHz/500 MHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |
| VM6250 | VM6250-2SA45-11110 | 8641D 1.33 GHz/533 MHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |
| | | Air-cooled extended temperature version ⁽¹⁾ |
| VM6250 | VM6250-1WA24-10110 | 8640 1 GHz/533 MHz 1GB DDR2 SDRAM 128K NVRAM 2x PMC |
| VM6250 | VM6250-2WA25-11110 | 8640D 1 GHz/533 MHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |
| VM6250 | VM6250-2WA35-11110 | 8640D 1.25 GHz/500 MHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |
| | | Conduction-cooled version ⁽¹⁾ |
| VM6250 | VM6250-1RC24-10110 | 8640 1 GHz/533 MHz 1GB DDR2 SDRAM 128K NVRAM 2x PMC |
| VM6250 | VM6250-1RC35-11110 | 8640 1.25 GHz/500 MHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC |
| VM6250 | VM6250-2RC25-11110 | 8640D 1 GHz/533 MHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |
| VM6250 | VM6250-2RC35-11110 | 8640D 1.25 GHz/500 MHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |
| | | Associated Product |
| RTM | PBV36-P0-VM6-00 | 6U VME Air-Cooled Rear Transition Module |
| Console Cable | KIT-RJ12DB9 | Adaptation Cable RJ-12 <-> DB-9 |
| PMCs Carrier | V2PMC2-SA | 6U VME Air-Cooled Dual PMCs Carrier Card |
| PMCs Carrier | V2PMC2-RC | 6U VME Conduction-Cooled Dual PMCs Carrier Card |
| USB Flash Disk | FDM-USB-xGB-L2-IV | USB Flash Disk Module (contact Kontron for the available capacity) |
| Kit Disk SATA | KIT-DISK25-SATA | Kit Disk SATA; compatible with SATA disk 2.5-inch |
| EZ-VM6250 | EZ-VM6250 | Laboratory 6U VME Air-Cooled Development System |

⁽¹⁾ Other features supported on demand. Please, contact, Kontron for availability.

Table 3: Order Code Table



The following options:

- FMC/XMC
- SATA HDD
- FMC

are not present at the same time on a board. Check carefully the order code you are interested in to choose the right option.

1.2.3.1 SATA Manufacturing Option

Depending on the SATA manufacturing option:

SATA on P0: Two SATA II ports are available on rear P0 connector

or

SATA onboard: One SATA II port is available on rear P0 connector, and one SATA II port is available onboard.

This specific option is encoded in the order code, 2nd digit of the third part of the order code.

| Article | Order Number | Description |
|------------------|--------------------|--|
| | | Air-cooled version ⁽¹⁾ |
| VM6250 | VM6250-1SA24-14110 | 8640 1 GHz/533 MHz 1GB DDR2 SDRAM 128K NVRAM 2 PMC slots + connector for SATA disk Carrier support |
| VM6250 | VM6250-2SA24-14110 | 8640 1 GHz/533 MHz 1GB DDR2 SDRAM 128K NVRAM 2 PMC slots + connector for SATA disk Carrier support |
| VM6250 | VM6250-2SA25-15110 | 8640 1 GHz/533 MHz 2GB DDR2 SDRAM 128K NVRAM 2 PMC/XMC slots + connector for SATA disk Carrier support |
| VM6250 | VM6250-2SA35-15110 | 8640 1.25 GHz/500 MHz 2GB DDR2 SDRAM 128K NVRAM 2 PMC/XMC slots + connector for SATA disk Carrier support |
| VM6250 | VM6250-2SA45-15110 | 8641 1.33 GHz/533 MHz 2GB DDR2 SDRAM 128K NVRAM 2 PMC/XMC slots + connector for SATA disk Carrier support |
| KIT DISK SATA | KIT-DISK25-SATA | 2.5" SATA HDD onboard mounting kit for VM6250-xSAxx-x4xxx and VM6250-xSAxx-x5xxx. This kit is mounted on right-hand mezzanine slot |

Table 4: Order Code Table (SATA onboard)

⁽¹⁾ Other features supported on demand. Please, contact, Kontron for availability.

SATA disk carrier option is available for extended and rugged air cooled classes versions, please contact Kontron.

The KIT-DISK25-SATA is required for SATA disk 2"5 support, please refer to paragraph 3.7.3 for more details

1.2.3.2 FMC Manufacturing Option

| Article | Order Number | Description |
|---------|------------------|-------------------|
| VM6250 | VM6250-xXXx-x2xx | 1 PMC + 1 FMC |
| VM6250 | VM6250-xXXx-x3xx | 1 PMC/XMC + 1 FMC |

1.2.4 Block Diagram

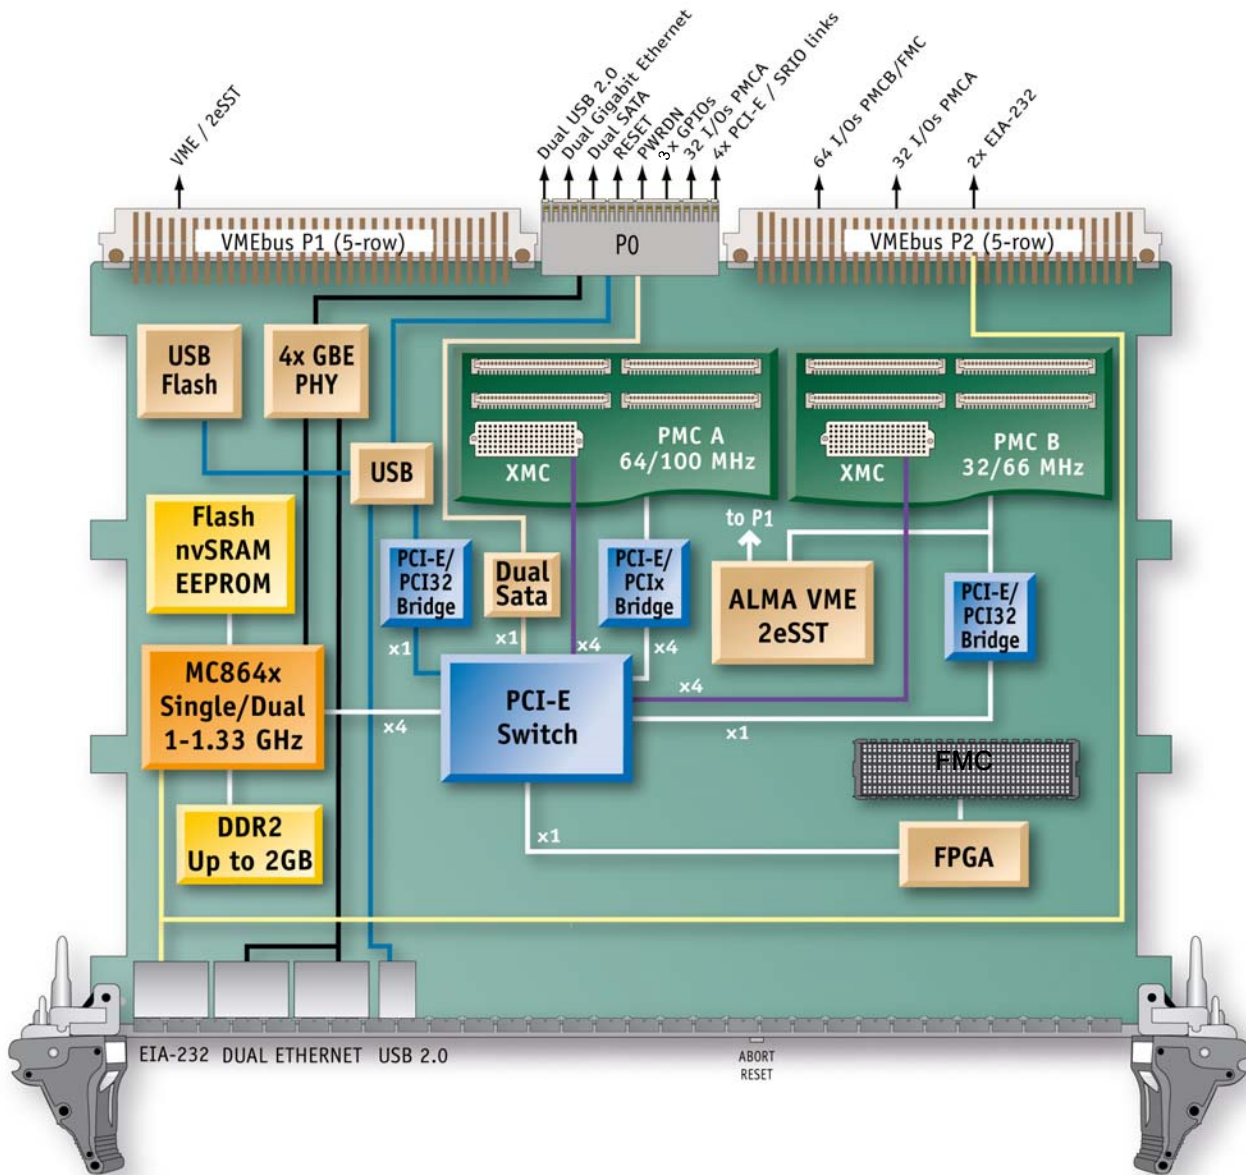


Figure 3: VM6250 Functional Block Diagram

1.2.5 Front Panel



Figure 4: Front Panel Connectors

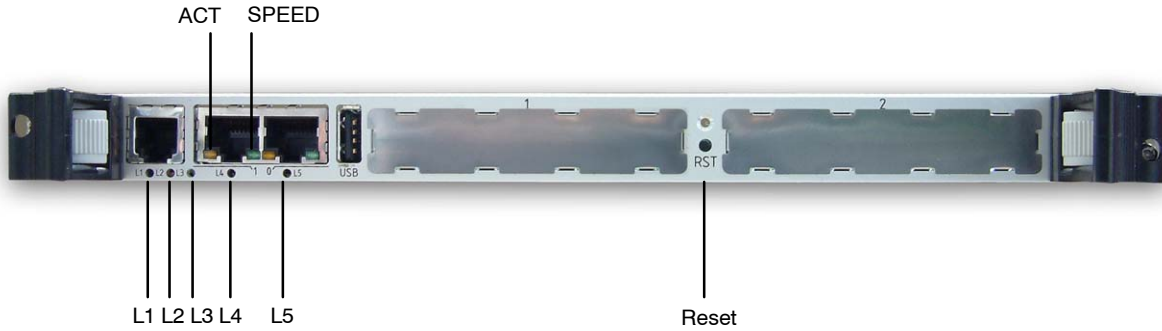


Figure 5: Reset Button and LEDs

» Reset Button

» Status LEDs Default Settings

- ▶ L1 **red/green** Reserved
- ▶ L2 **red** Reset is activated
 green Activity on Rear LAN links
- ▶ L3 **red** MPC864x is in a checkstop state
 green Activity on MPC864x Local Bus
- ▶ L4 **red** Board over-temperature alarm
 green Activity on SATA link
- ▶ L5 **red** Factory mode is activated
 green Activity on VME bus

» Gigabit Ethernet LEDs

| Status | | SPEED LED green | ACT LED yellow |
|----------------------------------|---------------------------|--------------------|-------------------|
| Ethernet link is not established | | OFF | OFF |
| 10/100 Mbps | Ethernet link established | OFF | ON |
| | Ethernet Link Activity | OFF | BLINK |
| 1000 Mbps | Ethernet link established | ON | ON |
| | Ethernet Link Activity | ON | BLINK |

Table 5: Ethernet LEDs Status Definition

1.2.6 Components Layout

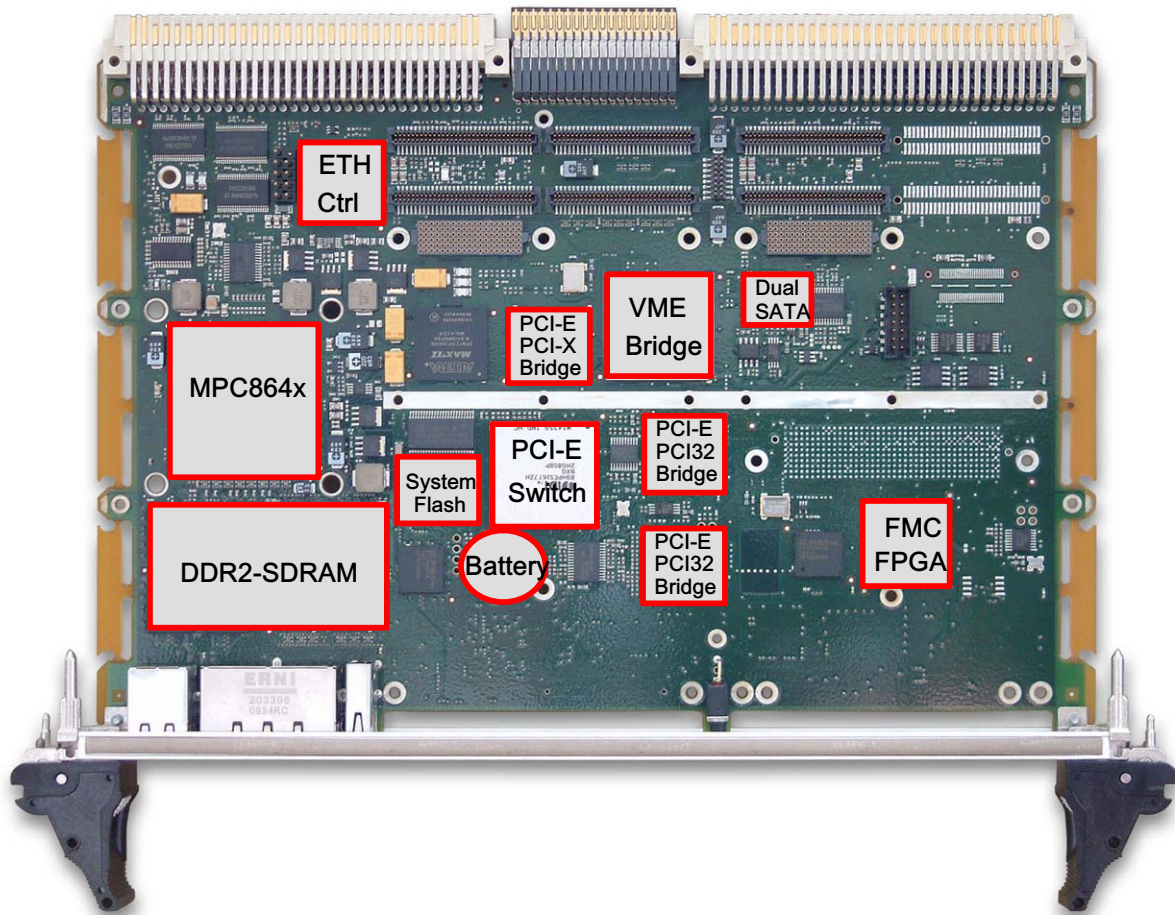


Figure 6: Components Layout (Top View)

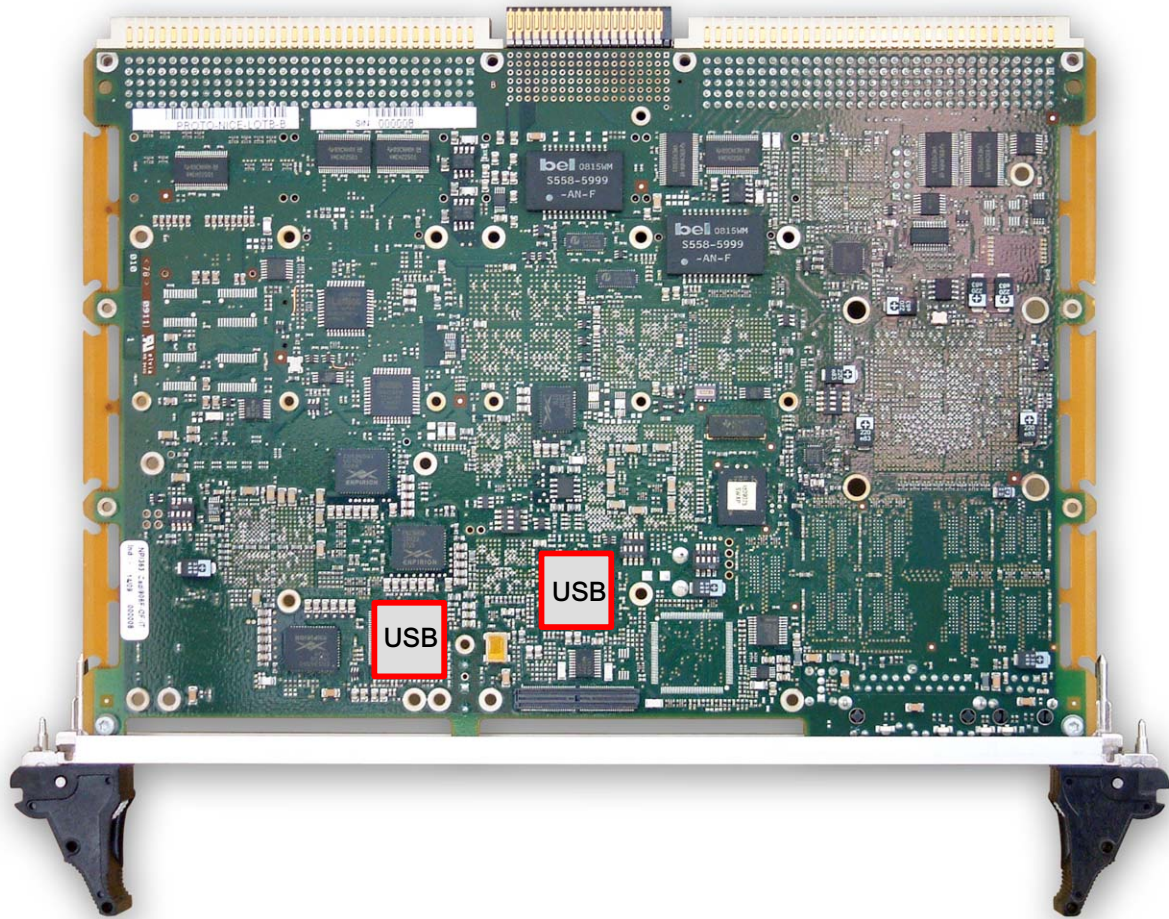


Figure 7: Components Layout (Bottom View)

1.2.7 VM6250-WA Specificities

This section sums up the main specificities of the VM6250-WA boards:

- Environmental Specifications, see also section 1.6 page 22.

| | | |
|--|---|--|
| WA Air-Cooled Extended Temperature | VITA 47 Conformal Coating | Yes |
| | Airflow | up to 3.0 ms (depending on the processor frequency) |
| | Temperature VITA 47-Class AC1 VITA 47-Class C1/C2 | Cooling Method: Convection Operating: -20°C to +65°C Storage: -45°C to +85°C |
| | Vibration Sine (Operating) VITA 47-Class V1 | 2g / 20-500 Hz acceleration / frequency range |
| | Shock (Operating) VITA 47 - Forced Air Cooled Class | 20g / 11ms peak acceleration / shock duration half sine |
| | Altitude (Operating) | -1,640 to 33,000 ft |
| | Climatic Humidity | 95% non-condensing |
| | Board Weight | ~ 500g |

- Specific tighteners (x8) have been added on the PCB (see arrows in figure below):

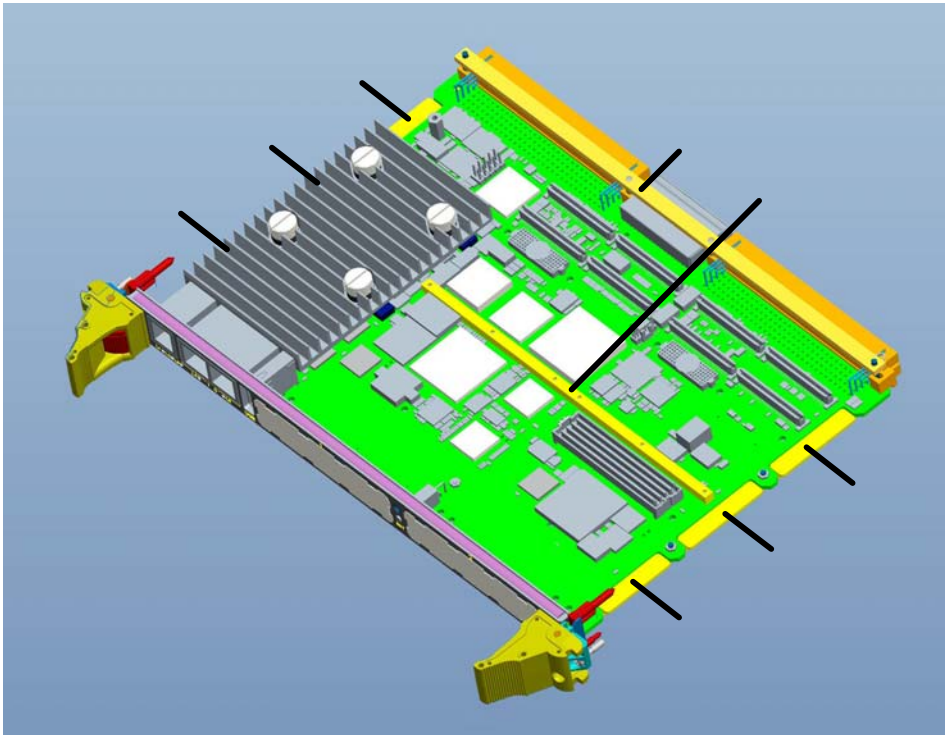


Figure 8: VM6250-WA - Location of the Tighteners

1.2.8 VM6250-VITA 57 Specifications

VM6250, with the FMC option, features a Xilinx Virtex-5 FPGA (XC5VLX20T) featuring a PCIe endpoint and user I/Os. The PCIe FPGA endpoint is connected to a PCIe switch

Kontron also offers a Development Kit containing: FMC-SER0 a sample FMC with wrapping areas, a simple FPGA IP and a LINUX package with drivers, utilities and test programs. This kit allows non regression tests and is the base for customized derivative work.

1.3 Technical Specification

| VM6250 | SPECIFICATIONS |
|-----------------------------|---|
| Processor and Memory | |
| CPU | <p>The VM6250 supports one of the following microprocessors:</p> <ul style="list-style-type: none"> - Freescale MPC8640 Single-Core PowerPC, 1 GHz - Freescale MPC8640D Dual-Core PowerPC, 1 GHz or 1.25 GHz - Freescale MPC8641D Dual-Core PowerPC, 1.33 GHz |
| Memory | <p>System Memory:</p> <ul style="list-style-type: none"> - 1 or 2 GB DDR2-533 SDRAM, 64-bit wide, soldered - Error Checking and Correction (ECC) provided <p>Cache structure:</p> <ul style="list-style-type: none"> - 96 kB L1 on die full speed processor cache <ul style="list-style-type: none"> - 1 x 32 kB for instruction cache - 2 x 32 kB for data cache - 2 MB L2 on die full speed processor cache (1 MB by core) <p>Firmware Boot Device:</p> <ul style="list-style-type: none"> - 2 x 32 Mb soldered NOR flash for NetBootLoader or U-Boot firmware, redundant boot device <p>NOVRAM:</p> <ul style="list-style-type: none"> - 128 KB of Non-Volatile RandomAccess memory (Semtek) for autostore operation <p>EEPROM:</p> <ul style="list-style-type: none"> - two serial 256 Kb EEPROMs for systems and application data storage <p>Nand Flash:</p> <ul style="list-style-type: none"> - Socket for USB Nand Flash Module, Low Profile, 2.54 pitch connector, up to 8 MB |
| Page 1 of 4 | |

| VM6250 | SPECIFICATIONS |
|------------------------|--|
| Interfaces | |
| Rear I/O | <p>The following interfaces are routed to the Rear P0 connector:</p> <ul style="list-style-type: none"> - 2x USB 2.0 - 2x Gigabit Ethernet - Up to 2x SATA II dependign on SATA Manufacturing option - 3x General Purpose Inputs and Outputs Signals (GPIOs) - x1/x4 PCI-Express links (if no RapidIO option) - x1/x4 Serial RapidIO links (multiplexed with PCI-Express) - 32 I/Os PMC#1 <p>The following interfaces are routed to the Rear P2 connector:</p> <ul style="list-style-type: none"> - 32 I/Os PMC#2 - 32 I/Os PMC#2 / FMC - 2x EIA-232 |
| Gigabit Ethernet | <p>Four Gigabit Ethernet interfaces, based on the Broadcom BCM5466R Ethernet, low-power quad gigabit ethernet transceiver with Serdes and copper media interface.</p> <ul style="list-style-type: none"> - Two ports available on the front panel, dual RJ-45 connector - Two ports routed to the Rear P0 connector - Automatic mode recognition - Automatic cabling configuration recognition <p>Cabling requirement: Category 5, UTP, four-pair cabling</p> |
| USB | <p>Four USB ports supporting UHCI and EHCI on VM6250:</p> <ul style="list-style-type: none"> - One onboard to connect the optional Flash Disk Module - One USB 2.0 connectors on the front panel - Two USB 2.0 connectors on the Rear P0 connector |
| Serial Lines | <p>Two EIA-232 simplified serial lines</p> <ul style="list-style-type: none"> - One on the front panel or on Rear P2 connector - One on rear P2 connector |
| Mass Storage | <p>SATA II: Dual Integrated Serial ATA Host Controller (Sil3132) Depending on the SATAT manufacturing option:</p> <ul style="list-style-type: none"> - Two ports available on Rear P0 connector <p>or</p> <ul style="list-style-type: none"> - One port available on Rear P0 connector and one port onboard |
| VME | ALMA2f VME controller (2eSST supported) |
| FPGA Configurable I/Os | One optional FPGA (using one PMC/XMC slot) with VITA 57 connectivity for customized modules |
| Sockets | |
| Front Panel Connectors | <ul style="list-style-type: none"> - SERIAL: one 6-pin RJ-11 connector - Ethernet: two RJ-45 connectors - USB: one 4-pin connector |
| Onboard Connectors | <ul style="list-style-type: none"> - VME Connector P0, P1 and P2 - USB: onboard connector for Flash Disk Module - PMC#1 and XMC#1 connectors - PMC#2 and XMC#2 connectors - FMC connector (VITA 57, using one of the PMC/XMC slot) - JTAG/COP port for emulation probe connection - H8 serial line for test and debug |
| Page 2 of 4 | |

| VM6250 | | SPECIFICATIONS | |
|----------------------------|---|----------------|--------------------------|
| Hardware Monitoring | | | |
| LEDS | System status: - L1, L2, L3, L4 and L5 Gigabit Ethernet status: - SPEED (green): Network Speed - ACT (yellow): Network/Link Activity | | |
| Watchdog | Software configurable dual-stage Watchdog timer with programmable timeout from 125 ms to 256 s, generates IRQ or reset or IRQ/reset cascaded (EPLD implementation) | | |
| RTC | Real Time Clock RV-8546-C2 from Micro-Crystal Switzerland | | |
| Software | | | |
| U-Boot Firmware | Onboard 2 x 32 Mb NOR Flash Memory - Flash-write protection implemented under software control U-Boot features: - QuickBoot - QuietBoot - BootBlock - LAN boot capability for diskless systems (standard PXE) - Boot from USB floppy disk drive - Firmware parameters are saved in the EEPROM - Board serial number is saved within the EEPROM | | |
| Operating Systems | Operating systems supported: - Fedora 9 Linux - Wind River VxWorks 6.x RTOS Please contact Kontron for further information concerning other operating systems. | | |
| General | | | |
| Mechanical | 6U, VME compliant form factor | | |
| Power Supply | 3.3V, 5V, +12V/-12V if required for mezzanine | | |
| Power Consumption | MPC8640 | 1.00 GHz | Max. / Typ. 33W / 27W |
| | MPC8640 | 1.25 GHz | 43W / 35W |
| | MPC8640D | 1.25 GHz | 52W / 41W |
| | MPC8641D | 1.33 GHz | 61W / 45W |

| VM6250 | SPECIFICATIONS |
|-------------------|--|
| General | |
| Temperature Range | <p>SA environmental class Operational: 0°C to +55°C (air flow: 1.2 to 2.5 m/s depending on processor frequency) Storage: -45°C to +85°C</p> <p>WA environmental class Operational: -20°C to +65°C (air flow: up to 3.0 m/s depending on processor frequency) Storage: -45°C to +85°C</p> <p>RC environmental class Operational: -40°C to +71°C or +85°C (depending on processor frequency) Storage: -45°C to +100°C</p> <p>NOTE: When a battery is installed, refer to the operational specifications of the battery as this determines the storage temperature of the VM6250 (See "Battery" below).</p> |
| Climatic Humidity | <p>SA environmental class 90% non-condensing</p> <p>WA environmental class 95% non-condensing</p> <p>RC environmental class 95% non-condensing</p> |
| Dimensions | 233 mm x 160 mm |
| Board Weight | <p>SA environmental class: ~ 430g</p> <p>RC environmental class: ~ 500g</p> <p>RC environmental class: ~ 700g</p> |
| MTBF | Refer to section 1.3.1 "MTBF Data" page 20 |
| Battery | <p>3.0V battery for RTC with battery socket.</p> <p>Temperature ranges: Operational (load): -40°C to +85°C typical (refer to the battery manufacturer's specifications for exact range) Storage (no load): -55°C to +125°C typical (no discharge)</p> |

Table 6: VM6250 Main Specifications



For a detailed description of the VM6250-RTM (Rear Transition Module), refer to Chapter 6 "VM6250-RTM Characteristics" page 90.

1.3.1 MTBF Data

Calculations are made according to the standard MIL-HDBK217F-2 for following types of environment:

- > Ground Benign (GB)
- > Air Inhabited Cargo (AIC)
- > Naval Sheltered (NS),
- > Air Rotary Wing (ARW)

» VM6250-SA and VM6250-WA

| | GB (Hours) | | AIC (Hours) | NS (Hours) | | ARW (Hours) |
|---|------------|---------|-------------|------------|--------|-------------|
| | 25°C | 40°C | 40°C | 25°C | 40°C | 55°C |
| VM6250/SA Order Code: VM6250-2SA25-11110 | 216 191 | 161 565 | 31 071 | 39 119 | 34 192 | 8 505 |
| VM6250/WA Order Code: VM6250-2AA25-11110 | | | | | | |

Table 7: VM6250-SA and VM6250-WA MTBF Data

» VM6250-RC

| | GB (Hours) | | AIC (Hours) | NS (Hours) | | ARW (Hours) |
|---|------------|---------|-------------|------------|--------|-------------|
| | 25°C | 40°C | 40°C | 25°C | 40°C | 55°C |
| VM6250/RC Order Code: VM6250-2RC25-11110 | 329 216 | 241 625 | 48 204 | 63 832 | 53 360 | 11 976 |

Table 8: VM6250-RC MTBF Data

1.4 Software Support

Kontron is one of the few CompactPCI, VME and VPX vendors providing inhouse support for most of the industry-proven real-time operating systems that are currently available. Due to its close relationship with the software manufacturers, Kontron is able to produce and support BSPs and drivers for the latest operating system revisions thereby taking advantage of the changes in technology.

Finally, Kontron grants his customers owners of a maintenance agreement a hotline software support and regular software updates. A dedicated web site is also available for online updates and release downloads.

1.5 Standards

This Kontron product complies with the requirements of the following standards.

| TYPE | ASPECT | DESCRIPTION |
|---------------|-----------------------|---|
| CE | EMC | EN55082 EN55022 Class A |
| Mechanical | Mechanical Dimensions | IEEE1101.10 |
| Environmental | WEEE | Waste electrical and electronic equipment |
| | RoHS | Restriction of the use of certain hazardous substances in electrical and electronic equipment |

Table 9: Standards

1.6 Environmental Specifications

| Version | | |
|---|---|---|
| Environmental Specifications SA Standard Commercial | Conformal Coating | Optional |
| | Airflow | 1.2m/s to 2.4/s (depending on the processor frequency) |
| | Temperature VITA 47-Class AC1 VITA 47-Class C1 | Cooling Method: Convection Operating: 0°C to +55°C Storage: -45°C to +85°C |
| | Vibration Sine (Operating) | 2g / 20-500 Hz acceleration / frequency range |
| | Random | VITA 47-Class V1 |
| | Shock (Operating) VITA 47 - Forced Air Cooled Class | 20g / 11ms peak acceleration / shock duration half sine |
| | Altitude (Operating) | -1,640 to 15,000 ft |
| | Climatic Humidity | 90% non-condensing |
| WA Air-Cooled Extended Temperature | VITA 47 Conformal Coating | Yes |
| | Airflow | up to 3.0 m/s (depending on the processor frequency) |
| | Temperature VITA 47-Class AC1 VITA 47-Class C1/C2 | Cooling Method: Convection Operating: -20°C to +65°C Storage: -45°C to +85°C |
| | Vibration Sine (Operating) VITA 47-Class V1 | 2g / 20-500 Hz acceleration / frequency range |
| | Shock (Operating) VITA 47 - Forced Air Cooled Class | 20g / 11ms peak acceleration / shock duration half sine |
| | Altitude (Operating) | -1,640 to 33,000 ft |
| | Climatic Humidity | 95% non-condensing |
| RC Rugged Conduction Cooled | VITA 47 Conformal Coating | Yes |
| | Temperature VITA 47-Class CC4 VITA 47-Class C1/C2 | Cooling Method: Convection Operating: -40°C to +65°C Storage: -45°C to +100°C |
| | Vibration Sine (Operating) VITA 47-Class V3 | 5g / 20-2000 Hz acceleration / frequency range |
| | Shock (Operating) VITA 47 - Conduction Cooled Class | 20g / 11ms peak acceleration / shock duration half sine |
| | Altitude (Operating) | -1,640 to 66,000 ft |
| | Climatic Humidity | 95% non-condensing |

Table 10: Environmental Specifications

1.7 Related Publications

The following publications contain information relating to this product:

| PRODUCT / STANDARD | PUBLICATION | |
|--------------------------------------|---|--|
| VM6250 Boards | VM6250 Hardware Release Notes | CA.DT.A66 |
| | VM6250/RC User's Guide Supplement | CA.DT.A75 |
| | VM6250 PBIT User's Guide | SD.DT.F35 |
| | VM6250 U-Boot User Manual | SD.DT.F36 |
| | VM6250 Release Notes Fedora9 | SD.DT.F37 |
| | VM6250 VxWorks BSP User's Guide | SD.DT.F44 |
| VITA 57 | VITA 57 Development Kit User's Guide | SD.DT.F79 |
| | VITA 57 FPGA Configuration | SD.DT.F74 |
| CNET | MIL HDBK 217F, CNET RDF93 and CNET RDF2000 Reliability models | |
| EN | EN55082 and EN55022 Class A Electromagnetic compatibility - Generic immunity standard - Industrial environment - Information technology equipment - Radio disturbances characteristics - Limits and methods of measurements | |
| IEEE | IEEE Std 1101.2-1992 IEEE P1386-2001 IEEE P1386.1-2001 Mezzanine Cards (PMC) | IEEE Standard for Mechanical Core Specifications for Conduction Cooled Eurocards Common Mezzanine Card Family CMC Standard Physical and Environmental Layers for PCI |
| Intel - Hewlett-Packard - NEC - Dell | IPMI v1.5 Document Revision 1.1, february 20, 2002 | Intelligent Platform Management Interface Specification - |
| Serial ATA | Serial ATA 1.0a Specification | |
| VITA | VITA 1-1994 VITA 1.1-199x VITA 35-199x Standard VITA 31.1-200x VITA 20-2000x VITA 38-2003 VITA 47 for Plug-In Units VITA 57 | VME64 Specification VME64 Extension Draft Specification PMC-P4 Pin Out Mapping to VME-P0 and VME64x-P2 Draft Gigabit Ethernet on VME64x Backplane Draft Standard Conduction Cooled PCI mezzanine Card (CCPMC) System Management on VME Environmental, Design and Construction, Safety, and Quality FPGA IO Mezzanine Standard |
| Underwriters Laboratories | UL94-V0 Mezzanine Cards (PMC) | Standard Physical and environmental Mayers for PCI |

Table 11: Related Publications

Chapter 2 - Functional Description

Refer to following sections for detailed information:

| | |
|-----------------------------|------------------------------------|
| Section 2.1 page 25 | Processor and System Memory |
| > Section 2.1.1 page 25 | Processor |
| > Section 2.1.2 page 27 | System Memory |
| Section 2.2 page 27 | PCI-Express Buses |
| Section 2.3 page 28 | ALMA2f PCI to VME Bridge |
| Section 2.4 page 31 | Storage |
| > Section 2.4.1 page 31 | Flash Memory |
| > Section 2.4.2 page 31 | Serial EEPROMs |
| > Section 2.4.3 page 31 | SPI EEPROM |
| > Section 2.4.4 page 31 | NOVRAM |
| > Section 2.4.5 page 31 | Dual Serial ATA |
| Section 2.5 page 32 | Peripherals |
| > Section 2.5.1 page 32 | Timer |
| > Section 2.5.2 page 32 | Watchdog Timer |
| > Section 2.5.3 page 32 | Power Monitor and Reset Generation |
| Section 2.6 page 32 | System FPGA |
| Section 2.7 page 33 | Connectors Layout |
| Section 2.8 page 2.8 | Board Interfaces |
| > Section 2.8.1 page 35 | Serial Interfaces |
| > Section 2.8.2 page 36 | USB Interfaces |
| > Section 2.8.3 page 39 | Gigabit Ethernet Interfaces |
| > Section 2.8.4 page 41 | SATA Interfaces |
| > Section 2.8.5 page 42 | VME Bus Interface - P0 Connector |
| > Section 2.8.6 page 44 | VME Bus Interface - P1 Connector |
| > Section 2.8.7 page 48 | VME Bus Interface - P2 Connector |
| > Section 2.8.8 page 50 | PMC J11 and J21 Connectors |
| > Section 2.8.9 page 50 | PMC J12 and J22 Connectors |
| > Section 2.8.10 page 51 | PMC J13 and J23 Connectors |
| > Section 2.8.11 page 51 | PMC J14 and J24 Connectors |
| > Section 2.8.12 page 52 | PMC Signal Description |
| > Section 2.8.13 page 54 | XMC J15 and J25 Connectors |
| > Section 2.8.14 page 55 | XMC Signal Description |
| > Section 2.8.15 page 56 | FMC Interface - P4 Connector |
| Section 2.9 page 57 | PMC Site |

2.1 Processor and Memory

2.1.1 Processor

The VM6250 is built around Freescale's state-of-the-art MPC8641 single or dual-core e600 processor.

Depending on the VM6250 board order code (refer to Table 3 "Order Code Table" page 7), following processor is used:

- Freescale MPC8640 single-core e600 processor @1.0 GHz
- Freescale MPC8640D dual-core e600 processor @1.25 GHz
- Freescale MPC8641D dual-core e600 processor @1.33 GHz



The MPC8640D processor features software, package and pin-for-pin compatibility with the MPC864D processor.

The MPC8640D is a lower power version of the high-performance MPC8641D dual-core processor

The MPC8641D processor includes two e600 cores each having 32 kB L1 instruction cache, 32 kB L1 data cache and 1 MB L2 cache. The processor further provides a DDR2 SDRAM memory controller, a local bus controller (LBC), a programmable interrupt controller (PIC), two I²C controllers, a four-channel DMA controller, and a dual universal asynchronous receiver/ transmitter (DUART). For high-speed interconnect, the MPC8641D provides two sets of multiplexed pins that support two interface standards: 1x/4x Serial RapidIO (with message unit) and 1x/2x/4x/8x/ PCI Express. Furthermore, four integrated 10 Mbit/s, 100 Mbit/s and 1 Gbit/s Ethernet controllers offer TCP offload and classification capabilities. The MPC8641D processor delivers optimized power-efficient computing and outstanding dual-core performance with low power consumption and high system integration.

The MPC8641D processor supports symmetric multiprocessing (SMP) and asymmetric multiprocessing (AMP). SMP allows a platform to run one operating system on both cores. AMP allows a platform to run multiple operating systems and applications on the two cores independently from each other, for example, one real-time optimized operating system is run on the first core while the other core manages non-real-time tasks.

To enhance the CPU performance, each core of the MPC8641D is suited with a 64-bit floatingpoint unit (FPU) and the powerful AltiVec vector processing unit.

The following list sets out some of the key features of the Freescale MPC8641D dual-core processor:

- Two e600 cores with the following characteristics:
 - ▶ 32-bit, high-performance, superscalar microprocessor
 - ▶ 64-bit floating-point unit (FPU)
 - ▶ AltiVec support
 - ▶ L1 cache: two separate 32 kB instruction and data caches
 - ▶ L2 cache: integrated 1 MB, eight-way set-associative unified instruction and data cache with ECC support
- MPX coherency module (MCM)
- DDR2 memory controller:
 - ▶ 64-bit memory controller (72-bit with ECC)
 - ▶ Support for up to 600 MHz DDR2 SDRAM
- Serial RapidIO interface:
 - ▶ Compliant with the RapidIO Interconnect Specification Revision 1.2
 - ▶ 1x and 4x LP-serial link interfaces
 - ▶ Transmission rates of 1.25, 2.5 and 3.125 Gbaud (data rates of 1.0, 2.0 and 2.5 Gbps) per lane

- PCI Express interface:
 - ▶ Compliant with the PCI Express Base Specification Revision 1.0a
 - ▶ Support for x1, x2 and x4 link widths
 - ▶ 2.5 Gbaud, 2.0 Gbps lane
- Four identical enhanced three-speed Ethernet controllers (eTSECs):
 - ▶ Each TSEC incorporates a media access control sublayer (MAC) that supports 10 Mbps, 100 Mbps and 1 Gbps networks
 - ▶ Compliant with IEEE 802.3, 802.3u, 802.3x, 802.3z, 802.3ac and 802.3ab
 - ▶ Support of full-duplex FIFO mode for high-efficiency ASIC connectivity
 - ▶ TCP/IP Offload
 - ▶ Header parsing
 - ▶ Quality of service support
 - ▶ VLAN insertion and deletion
 - ▶ MAC address recognition
- Programmable interrupt controller (PIC) with support for PCI Express message shared interrupts (MSI)
- Local bus controller (LBC)
- Integrated four-channel DMA controller
- Device performance monitor
- Dual I²C controllers
- Dual universal asynchronous receiver/transmitter (DUART):
 - ▶ Two 4-wire interfaces (SIN, SOUT, RTS, CTS)
 - ▶ Programming model compatible with the original 16450 UART and the PC 16550D
- IEEE 1149.1-compliant, JTAG boundary scan

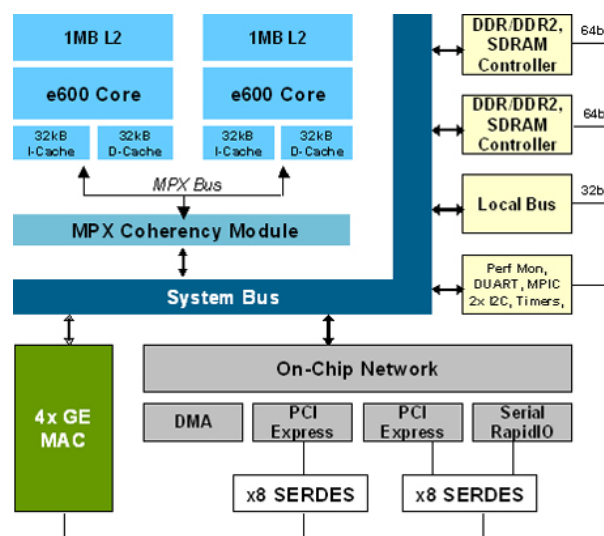


Figure 9: MPC8641D Block Diagram

2.1.2 Memory

The VM6250 supports a single-channel (72-bit), registered Double Data Rate (DDR2) memory with Error Checking and Correcting (ECC) running up to 600 MHz (PC3200). The available memory configuration can be either 1 GB or 2 GB. ECC is able to correct single-bit errors and detect multiple-bit errors.

2.2 PCI-Express Buses

The VM6250 provides two flexible high-speed interfaces each supporting eight lanes, fully compliant with PCI-Express (PCI-E) and Serial RapidIO (sRIO) standards.

In PCI-E mode of operation either a root complex or an endpoint configuration is possible.

The sRIO mode of operation is limited to four lanes which the speed of 1.25 or 2.5 or 3.125 Gbit/s is configurable.

PCI-E bus interface operates at 2.5 Gbps on each lane resulting in a peak bandwidth of 250 MB/s per lane (250 MB/s on receive way and 250 MB/s on transmit way). This bandwidth must be multiplied by the link width for 2x, 4x, 8x links. As an example, the bandwidth of a 4x PCI-E link is 1 GB/s (4x250 MB/s per way).

2.3 ALMA2f PCI to VME Bridge

The ALMA2f PCI to VME bridge is an ASIC/FPGA developed by Kontron. This component is a highly integrated single chip solution to interface the VME64 and the 64-bit PCI bus of the VM6250. Features include a system controller, a bus requester, a master interface, a slave interface, an interrupt handler, an interrupt generator and a 2-channel DMA controller.

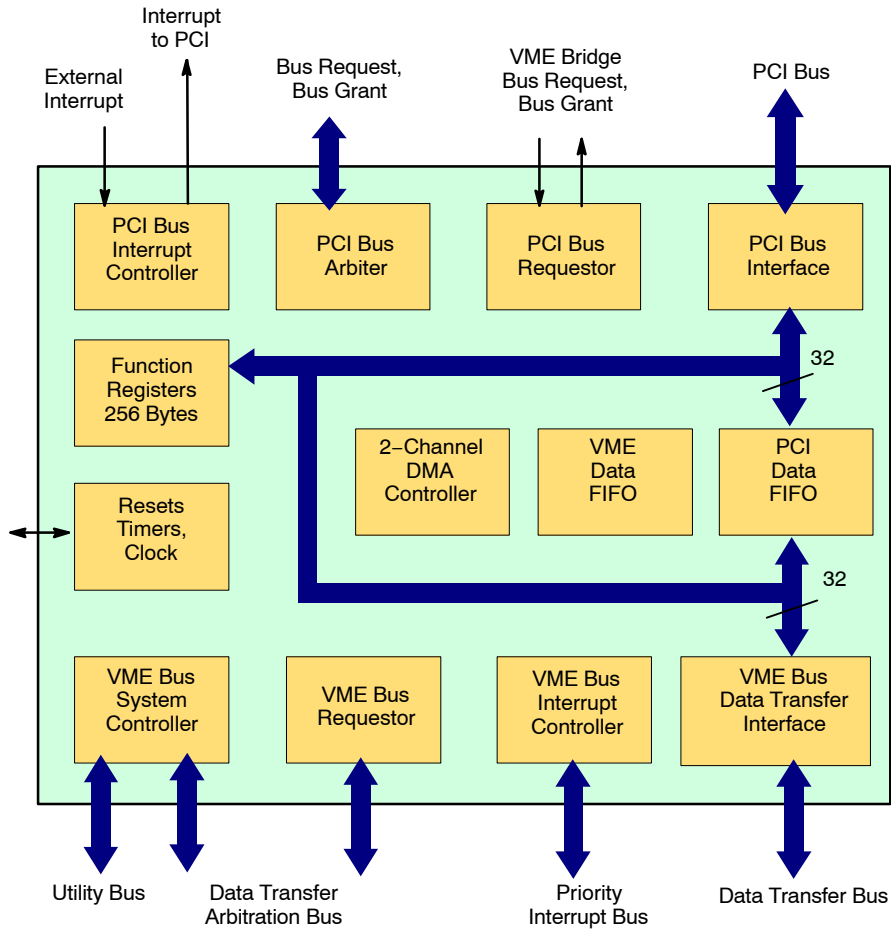


Figure 10: PCI to VME Bridge Block Diagram

ALMA2f main features are:

- > Programmable 2eSST support:
 - ▶ A32/64 - D64 2eSST
- > VME64 master/slave capability
- > Full VME system controller and interrupt generator/handlet capacity
- > 2eSST capability
- > 2 KB data fifo
- > Flexible address mapping
- > Two DMA channels
- > Hardware semaphores for multiprocessing
- > ANSI/VITA 1 - 1994 VME64 compliant
- > ANSI/VITA 1.1 - 1997 VME64 Extensions

2.3.1 VMEbus Master Access

The VME module provides D32, D16, D8 and UAT under A32, A24 or A16 addressing modes plus D64MBLT and D32BLT under A32 and A24 addressing modes. In addition, the newly introduced ALMA2f VME/PCI bridge features A64 addressing mode for D64BLT, D32BLT and single transfers. All Address Modifier (AM) combinations are supported.

The VME block mode, D64 or D32, can be automatically started from a PCI burst. The use of 2 KB internal FIFOs with programmable thresholds allows maximum speed in decoupled mode (Read-Ahead or Write-Posting). In the same way, since the PCI bus is much faster than the VME bus, even a suite of single PCI write transfers can be translated into VME D32BLT (BB2BLT mode). The ALMA2f VME/PCI bridge improves the MBLT64 transfers that were implemented in the ALMA_V64 VME/PCI bridge.

ALMA2f also introduces the 2eSST standard with data rate up to 180 MB/s peak for the master.

2eSST rate: ALMA2f enables SST160, SST267 and SST320 up to 320 MB/s peak. The 320MB/s VME 2eSST speed is not recommended with the VM6250 board. Depending on your backplane, 2eSST speed has to be adjust to 160 MB/s or 267 MB/s.



Rack Type: 5 rows backplane is mandatory for 2eSST functionality.

Rack Size: 6 slots recommended for now. As one of the key factors is the backplane tracks length, short backplanes are best suited for the 2eSST signals whatever the VME buffer technology.

Backplanes larger than 6 slots can also be used as long as the VME signals can meet the requirement described in rule 3.2 of VITA 1.5--200x.

2.3.2 VMEbus Slave Access

The VME slave interface supports the same addressing mode and data size as the VME master interface. Sixteen decoding channels are available for accessing the PCI bus from the VME bus (ALMA2f doubles the number of VME slave windows implemented in the earlier ALMA_V64). Each channel is independently configurable in the A64, A32, A24 or A16 address space. The 2eSST mode is supported only for the eight additional slave windows. These channels allow the user to program the PCI bus access parameters with a minimum granularity of 1MB.

2.3.3 VMEbus Arbitration

➤ **VME bus requester:**

The VME/PCI bridge drives the bus requests on the four levels, BR0 to BR3 and the release of the bus can be managed with ROR (Release On Request), ROC (Release On Clear) or RNE (Release NEver) policy.

➤ **VME System Controller:**

The VM6250 board is VME system controller when the board is fitted in slot 0 or if it is the first board of the bus grant daisy chain. The system controller mode is automatically detected (Auto System Controller).

➤ **VM6250 Identification on the VMEbus:**

Each SBC in a rack or station must have a unique identification on the VME bus. This ID depends on the setting of the board into the VME rack and is used to calculate two VME base addresses to reach the PCI/VME bridge internal registers and the VM6250 SDRAM, respectively. The value of the VME BOARD ID, is stored in the serial access EEPROM.

2.3.4 DMA Channels

Two DMA channels are available to the user. The priority between channels is programmable and blocks may be interlaced or not. DMA completion can be signalled via an interrupt to the PCI bus.

2.3.5 Interrupt Management

The VME/PCI bridge Interrupt Controller can handle different interrupt sources:

- 7 VME interrupts (IRQ7*-IRQ1*),
- 8 mail box interrupts (they occur when a specific 8-bit register is addressed in write mode from the PCI or the VME),
- ACFAIL* and SYSFAIL* on VMEbus,
- internal exceptions (end of DMA, error acknowledges on PCI bus or VME bus, VMEbus arbitration timeout, ...).

All these interrupts can be masked and can drive either the INTA PCI bus interrupt which is the dedicated PCI interrupt pin, or any of the three programmable interrupt pins (INT1 to INT3).

2.4 Storage

2.4.1 Flash Memory

There are three Flash devices available as described below, two for the NetBootLoader and one for the NAND Flash Disk Controller.

2.4.1.1 NAND Flash

The VM6250 supports up to 8 GB of USB NAND Flash memory

2.4.1.2 Firmware Flash

The VM6250 provides two 32 Mb, redundant Firmware Flash (MirrorBit® NOR Flash) chips (for U-Boot firmware).

The fail-over mechanism for the Firmware recovery can be controlled via the SW2 DIP switch. If one Firmware Flash is corrupted, the second Firmware Flash can be enabled and boot the system again.

2.4.2 Serial EEPROMs

There are two 256-kbit onboard serial EEPROMs:

- One is used to store the Operating System boot parameters and user data and is connected to the I2C controller.
- One is used to store system information (serial number, board configuration parameters, ...) and is connected to the FPGA.

2.4.3 SPI EEPROM

Serial EEPROM using the Serial Peripheral Interface (SPI) protocol.

2.4.4 NOVRAM

A 128 KB NOVRAM (NONVolatile Random Access Memory) is implemented.

During standard operations, software applications read and write in the autostore NOVRAM just like in a standard SRAM.

Upon detection of a power loss, an autostore cycle is performed and all the 128 KB are automatically moved from the onchip SRAM to the onchip EEPROM using the energy stored in an onboard capacity.

At the next system power up, a recall cycle is performed to dump the EEPROM contents back to the SRAM.

The number of recall cycles is unlimited. The maximum of store cycles is 500 00, and the data retention period is 20 years at maximum temperature (+85°C).

2.4.5 Dual Serial ATA

Depending on the SATA manufacturing option, either:

- Two Serial ATA II (SATA II - 3 Gbps) ports are available on P0 connector.
- One Serial ATA II (SATA II - 3 Gbps) port is available on P0 connector, and one Serial ATA II port is available onboard.

Refer to section 2.8.5 "VME Bus Interface - P0 Connector" page 42 for more information on P0 pin assignment.

2.5 Peripherals

The following standard peripherals are available on the VM6250 board:

2.5.1 Timer

The VM6250 is equipped with the following timers:

➤ Real-Time Clock (RTC)

The VM6250 is equipped with an onboard high-precision real-time clock RV-8564-C2. The RV-8564-C2 RTC is register-compatible with the PCF8564A RTC from Philips/NXP. Additionally, it provides a very tight frequency tolerance at low power consumption. The VM6250 does not include a 3 V lithium battery or a GoldCap power source for RTC backup. The RTC can be powered from the management power. However, if this power is switched off, the RTC will lose its data.

➤ Hardware delay timer for short reliable delay times

2.5.2 Watchdog Timer

The VM6250 provides a Watchdog Timer that is programmable for a timeout period ranging from 125 ms to 256 s in 12 steps. Failure to trigger the Watchdog Timer in time results in an interrupt or a system reset. In the dual-stage mode, a combination of both interrupt and reset is generated if the Watchdog is not serviced. A hardware status flag will be provided to determine if the Watchdog Timer generated the reset.

2.5.3 Power Monitor and Reset Generation

All onboard voltages on the VM6250 are supervised, which guarantees controlled power-up of the board. This is done by activating a stable power-up reset signals after the threshold voltages have been passed.

2.6 System FPGA

The following functions are implemented in the FPGA device:

- CPU reset configuration
- Board reset control
- Board registers
- LED control port
- Watchdog timer
- Delay timer
- Ethernet PHY configuration
- Serial hardware debug port
- I²C master interface

2.7 Connectors Layout

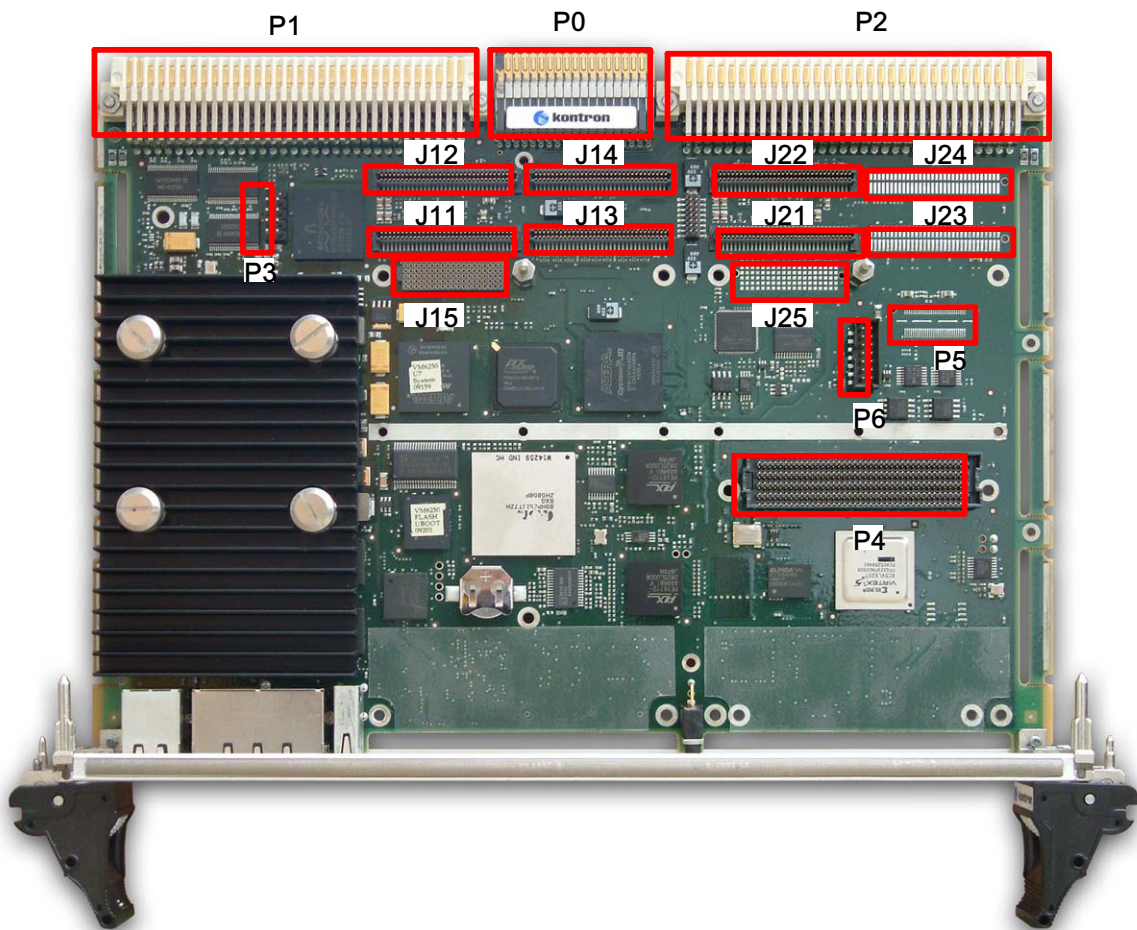


Figure 11: Connector Layout (Top View)



Figure 12: Front Panel Connector Layout

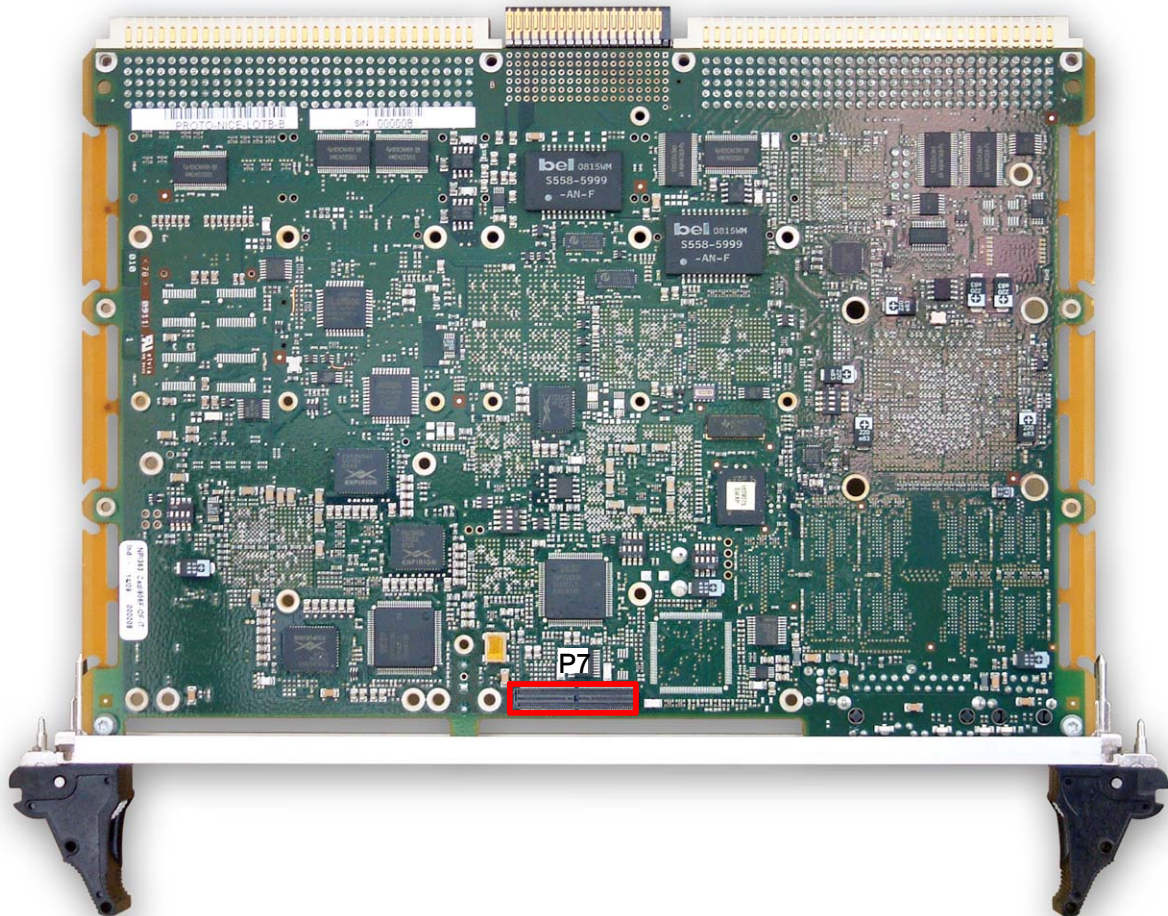


Figure 13: Connector Layout (Bottom View)

Refer to the following sections for detailed information:

- Section 2.8.1 page 35 Serial Interfaces
- Section 2.8.2 page 36 USB Interfaces
- Section 2.8.3 page 39 Gigabit Ethernet Interfaces
- Section 2.8.4 page 41 SATA Interfaces
- Section 2.8.5 page 42 VME Bus Interface - P0 Connector
- Section 2.8.6 page 44 VME Bus Interface - P1 Connector
- Section 2.8.7 page 48 VME Bus Interface - P2 Connector
- Section 2.8.8 page 50 PMC J11 and J21 Connectors
- Section 2.8.9 page 50 PMC J12 and J22 Connectors
- Section 2.8.10 page 51 PMC J13 and J23 Connectors
- Section 2.8.11 page 51 PMC J14 and J24 Connectors
- Section 2.8.12 page 52 PMC Signal Description
- Section 2.8.13 page 54 XMC J15 and J25 Connectors
- Section 2.8.14 page 55 XMC Signal Description
- Section 2.8.15 page 56 FMC Interface - P4 Connector

2.8 Board Interfaces

2.8.1 Serial Interfaces

The VM6250 supports two serial EIA-232 simplified interfaces available:

- COM1: EIA-232 (simplified) port on RJ-12 front panel connector or on the rear P2 connector
- COM2: EIA-232 (simplified) port on RJ-12 front panel connector or on the rear P2 connector

Refer to section 2.8.7 “VME Bus Interface - P2 Connector” page 48 for more information on the serial lines pin assignment on P2 connector.

Serial Front Panel

| Pin | Signal | Description |
|-----|----------|----------------------------|
| 1 | COM2 TXD | COM2 EIA-232 Transmit Data |
| 2 | Shell | Chassis Ground |
| 3 | COM1 TXD | COM1 EIA-232 Transmit Data |
| 4 | COM1 RXD | COM1 EIA-232 ReceiveData |
| 5 | GND | Ground |
| 6 | COM2 RXD | COM2 EIA-232 Receive Data |

Table 12: Serial Connector Pinout

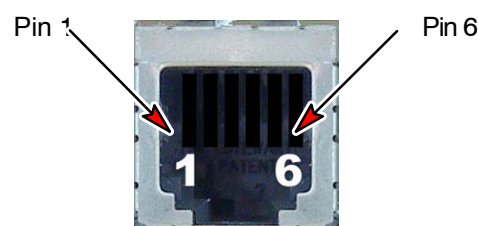


Figure 14: Serial Connector

Serial Cable Designation

Serial cable:

- ▶ RJ-14 (6-pin, 4-conductor): simplified EIA-232 on COM1
 - ▶ RJ-12 (6-pin, 6-conductor): simplified EIA-232 on COM1 and COM2
- ⚠ - Use of a cable type RJ-12 (6-pin, 6-conductor), implies that COM1 and COM2 serial lines must be used from the Serial front panel. .
- ⚠ - Use of a cable type RJ-14 (6-pin, 4-conductor), lets COM2 serial line available on P2 connector.

⚠ A serial line should only be used via one connector at the same time, either the Serial front panel connector or the P2 connector.



Kontron provides a specific connection kit Order Code: KIT-RJ12DB9. It includes RJ-12 cable and a DB9 female adapter.

| Pin Connector DB9 | Signal | Pin Connector RJ-12 |
|-------------------|--------|---------------------|
| 1 | RTS | 1 |
| 2 | TXD | 3 |
| 3 | RXD | 4 |
| 4 | CTS | 6 |
| 5 | GBD | 5 |



2.8.2 USB Interfaces

The VM6250 supports four USB 2.0 ports:

- > one on the front panel
- > one onboard to connect a flash disk module
- > two on the rear P0 connector

On the USB 2.0 front panel port, USB cable with up to 1.8 meters in length can be used.

On the USB 2.0 Rear I/O ports, it is strongly recommended to use a cable below 1.8 meters in length for USB 2.0 devices.

The USB 2.0 ports are high-speed, full-speed, and low-speed capable. Hi-speed USB 2.0 allows data transfers of up to 480 Mb/s - 40 times faster than a full-speed USB (USB 1.1).

One USB peripheral may be connected to each port.


To connect more USB devices than there are available ports, an external hub is required.

Refer to section 2.8.5 "VME Bus Interface - P0 Connector" page 48 for more information on the serial lines pin assignment on P2 connector.

» USB Front Panel

| PIN | SIGNAL | FUNCTION | I/O |
|-----|---------|-------------------|-----|
| 1 | VCC | VCC | -- |
| 2 | USB1_D- | Differential USB- | I/O |
| 3 | USB1_D+ | Differential USB+ | I/O |
| 4 | GND | GND | -- |

Table 13: USB Connector Pinout

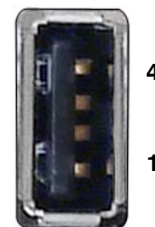

USB

Figure 15: USB Connector



The VM6250 host interfaces can be used with maximum 500 mA continuous load current as specified in the Universal Serial Bus Specification, Revision 2.0. Short-circuit protection is provided. All the signal lines are EMI-filtered.

» USB onboard

The onboard USB device (P3 connector) is used to connect an USB flash disk module. The following figure and table provide pinout information for the onboard USB connector P3:

| PIN | SIGNAL | FUNCTION | I/O |
|-----|----------|-------------------|-----|
| 1 | USB0_PWR | VCC | -- |
| 2 | N.C. | Not Connected | -- |
| 3 | USB0_D- | Differential USB- | I/O |
| 4 | N.C. | Not Connected | -- |
| 5 | USB0_D+ | Differential USB+ | I/O |
| 6 | N.C. | Not Connected | -- |
| 7 | GND | GND | -- |
| 8 | N.C. | Not Connected | -- |
| 9 | N.C. | Not Connected | -- |
| 10 | N.C. | Not Connected | -- |

Table 14: USB onboard P3 Pinout

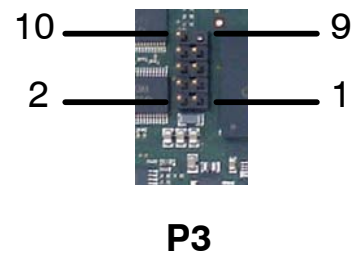


Figure 16: USB onboard Connector

The USB Flash module is fixed to the board, by using on one side the P3 connector, and on the other side, a standoff screwed to the VM6250 board and to the USB Flash module.

Order Code for the USB flash disk:

FDM-USB-xGB-L2-IV: industrial version with conformal coating (x GB)



Contact Kontron for available capacity.

► USB Flash Disk Layout

- ▶ Maximum space reserved for USB flash disk is 50 mm x 30 mm (LxW)
- ▶ The distance between connector and screw hole is 27.3 mm~27.9mm
- ▶ Maximum allowable connector height is 9.78 mm

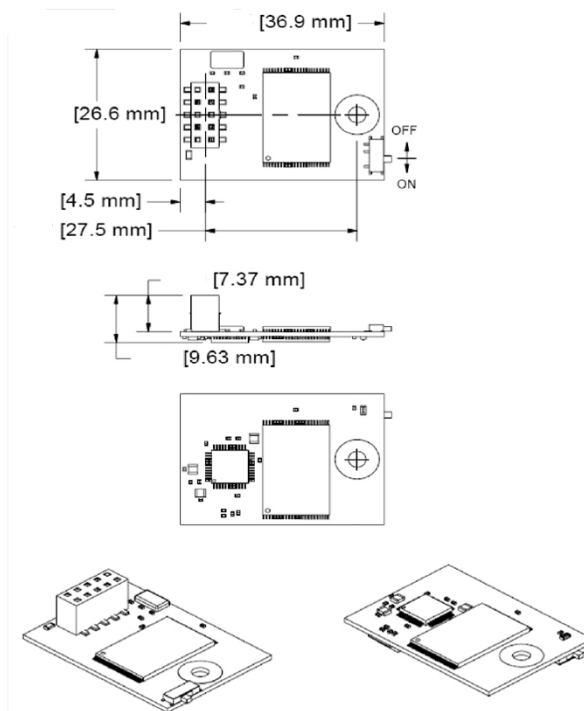


Figure 17: USB Flash Disk Overview

2.8.3 Gigabit Ethernet Interfaces

The Freescale MPC864x processor integrates four Triple-Speed Ethernet controllers which are associated on the VM6250 board with an external BCM5466R quad Gigabit Ethernet PHY.

The Ethernet channels 0 and 1 are routed to the front panel RJ-45 connectors, configured to be 1000BASE-T by default.

The Ethernet channels 2 and 3 are routed to the P0 connector.

Refer to section 2.8.5 "VME Bus Interface - P0 Connector" page 48 for more information on the gigabit ethernet pin assignment on P2 connector.

» Front Panel Gigabit Ethernet

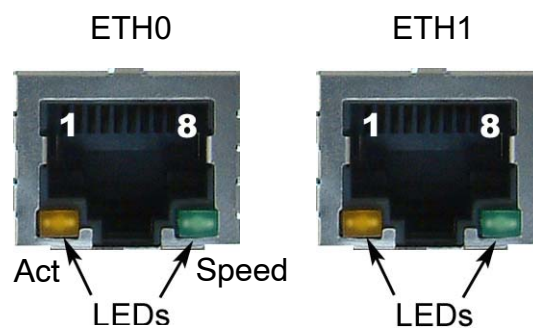


Figure 18: Dual Gigabit Ethernet Connector



The Ethernet transmission can operate effectively using a CAT5 cable with a maximum length of 100 m.

The Ethernet connectors are realized as RJ-45 connectors. The interfaces provide automatic detection and switching between 10Base-T, 100Base-TX and 1000Base-T data transmission (Auto-Negotiation). Auto-wire switching for crossed cables is also supported (Auto-MDI/X).

2.8.3.1 ETH0 and ETH1 Pinouts

The ETH0 / ETH1 connectors supply the 10Base-T, 100Base-TX and 1000Base-T interfaces to the Ethernet controller.

| PIN | 10BASE-T | | 100BASE-TX | | 1000BASE-T | |
|-----|----------|--------|------------|--------|------------|--------|
| | I/O | SIGNAL | I/O | SIGNAL | I/O | SIGNAL |
| 1 | O | TX+ | O | TX+ | I/O | BI_DA+ |
| 2 | O | TX- | O | TX- | I/O | BI_DA- |
| 3 | I | RX+ | I | RX+ | I/O | BI_DB+ |
| 4 | - | - | - | - | I/O | BI_DC+ |
| 5 | - | - | - | - | I/O | BI_DC- |
| 6 | I | TX- | I | RX- | I/O | BI_DB- |
| 7 | - | - | - | - | I/O | BI_DD+ |
| 8 | - | - | - | - | I/O | BI_DD- |

Table 15: Gigabit Ethernet Connectors ETH0 and ETH1 Pinout

2.8.3.2 Ethernet LED Status

» ACT (yellow)

This LED monitors network connection and activity. The LED lights up when a valid link (cable connection) has been established. The LED goes temporarily off if network packets are being sent or received through the RJ-45 port. When this LED remains off, a valid link has not been established due to a missing or a faulty cable connection.

» SPEED (green)

| STATUS | | SPEED LED green | ACT LED yellow |
|----------------------------------|---------------------------|--------------------|-------------------|
| Ethernet link is not established | | OFF | OFF |
| 10/100 Mbps | Ethernet link established | OFF | ON |
| | Ethernet Link Activity | OFF | BLINK |
| 1000 Mbps | Ethernet link established | ON | ON |
| | Ethernet Link Activity | ON | BLINK |

Table 16: Ethernet LEDs Status Definition

2.8.4 SATA Interface



This interface is available only on the boards featuring the SATA onboard manufacturing option. In such a configuration, only one SATA II port will be available on rear P0 connector.

The onboard SATA device (P5 connector) is used to connect a SATA HDD. The following table provides pinout information for the onboard SATA connector P5:

| PIN | SIGNAL | FUNCTION | I/O |
|---------------------|-----------|-------------------------|-----|
| GND1 ... GND4 | GND | Ground Signal | -- |
| 1 | GND | Ground Signal | -- |
| 2 .. 6 | N.C. | Not Connected | -- |
| 7 | GND | Ground Signal | -- |
| 8 .. 12 | N.C. | Not Connected | -- |
| 13 | GND | Ground Signal | -- |
| 14 | N.C. | Not Connected | -- |
| 15 | SATA1 RX- | Differential Receive - | |
| 16 | GND | Ground Signal | -- |
| 17 | SATA1 RX+ | Differential Receive + | |
| 18 | +5V | | -- |
| 19 | GND | Ground Signal | -- |
| 20 | +5V | | -- |
| 21 | SATA1 TX+ | Differential Transmit + | O |
| 22 | +5V | | -- |
| 23 | SATA1 TX- | Differential Transmit - | O |
| 24 .. 25 | GND | Ground Signal | -- |
| 26 | +3.3V | | -- |
| 27 | N.C. | Not Connected | -- |
| 28 | +3.3V | | -- |
| 29 .. 60 | N.C. | Not Connected | -- |

Table 17: SATA onboard Ethernet Pinout



P5

Figure 19: SATA onboard Connector

2.8.5 VME Bus Interface - P0 Connector

2.8.5.1 P0 Connector Pin Assignment

| Pin | P0 connector | | | | | |
|-----|-------------------|-------------------|-------------------|-------------------|-------------------|----------------------|
| | Row a | Row b | Row c | Row d | Row e | Row f ⁽²⁾ |
| 1 | PMC1 IO 39 (1) | PMC1 IO 38 (1) | PMC1 IO 37 (1) | PMC1 IO 36 (1) | PMC1 IO 35 (1) | GND |
| 2 | ETH2 BI_DA+ | ETH2 BI_DA- | GND | ETH2 BI_DC+ | ETH2 BI_DC- | GND |
| 3 | ETH2 BI_DB+ | ETH2 BI_DB- | GND | ETH2 BI_DD+ | ETH2 BI_DD- | GND |
| 4 | ETH3 BI_DA+ | ETH3 BI_DA- | GND | ETH3 BI_DC+ | ETH3 BI_DC- | GND |
| 5 | ETH3 BI_DB+ | ETH3 BI_DB- | GND | ETH3 BI_DD+ | ETH3 BI_DD- | GND |
| 6 | RST_BP# | USB3 PWR | ISP_PAC_RST # | Reserved | USB2 PWR | GND |
| 7 | USB3 DA+ | USB3 DA- | GND | USB2 DA+ | USB2 DA- | GND |
| 8 | SATA0 TX+ | SATA0 TX- | GND | SATA0 RX+ | SATA0 RX- | GND |
| 9 | SATA1 TX+ (3) | SATA1 TX- (3) | GND | SATA1 RX+ (3) | SATA1 RX- (3) | GND |
| 10 | PMC1 IO 34 (1) | PMC1 IO 33 (1) | GPIO1 | GPIO2 | GPIO3 | GND |
| 11 | PMC1 IO 58 | PMC1 IO 60 | PMC1 IO 46 | PMC1 IO 48 | PMC1 IO 50 | GND |
| 12 | PMC1 IO 62 | PMC1 IO 64 | PMC1 IO 45 | PMC1 IO 52 | PMC1 IO 54 | GND |
| 13 | PMC1 IO 61 | PMC1 IO 63 | PMC1 IO 56 | PMC1 IO 51 | PMC1 IO 53 | GND |
| 14 | PMC1 IO 57 | PMC1 IO 59 | PMC1 IO 55 | PMC1 IO 47 | PMC1 IO 49 | GND |
| 15 | PEX RXL0+ | PEX RXL0- | GND | PEX TXL0+ | PEX TXL0- | GND |
| 16 | PEX RXL1+ | PEX RXL1- | GND | PEX TXL1+ | PEX TXL1- | GND |
| 17 | PEX RXL2+ | PEX RXL2- | GND | PEX TXL2+ | PEX TXL2- | GND |
| 18 | PEX RXL3+ | PEX RXL3- | GND | PEX TXL3+ | PEX TXL3- | GND |
| 19 | PMC1 IO 44 (1) | PMC1 IO 43 (1) | PMC1 IO 42 (1) | PMC1 IO 41 (1) | PMC1 IO 40 (1) | GND |

(1) In the column 1, 10 and 19, they may be signals or Not Connected (N.C.). The default is the signals listed. The N.C. option is made available by removing three, 0-ohm resistor packs. Please contact Kontron for more information on this topic.

(2) The f row is the metal shielded on the outside P0 connector.

(3) These signals are Not Connected (N.C.) for boards featuring the onboard SATA manufacturing option. In such configurations, the 2nd SATA device is available onboard.

Table 18: P0 Connector Pin Assignment

2.8.5.2 P0 Signal Description




 

 

 






 

 
 






| Mnemonic | Legend | Signal Description |
|---------------------------|---|--|
| ETH _x BI_DA+/- |   | Ethernet <i>x</i> : First pair of Transmit/Receive data. |
| ETH _x BI_DB+/- |   | Ethernet <i>x</i> : Second pair of Transmit/Receive data. |
| ETH _x BI_DC+/- |   | Ethernet <i>x</i> : Third pair of Transmit/Receive data. |
| ETH _x BI_DD+/- |   | Ethernet <i>x</i> : Fourth pair of Transmit/Receive data. |
| GND |  | Ground |
| GPIO _x |  | General Purpose I/O <i>x</i> |
| ISP_PAC_RST |  | Power Supply Reset Signal |
| PEX RXL _y +/- |  | x4 PCI Express (or Serial Rapid IO) Link - Receive+/- Lane <i>y</i> |
| PEX TXL _y +/- |  | x4 PCI Express (or Serial Rapid IO) Link - Transmit+/- Lane <i>y</i> |
| PMC1 IO <i>yy</i> |  | PMC Site #1 I/O signal <i>yy</i> |
| Reserved |  | Reserved (do not use) |
| RST_BP |  | Board Reset Signal |
| SATA _x RX+/RX- |   | Serial ATA <i>x</i> Receive +/- |
| SATA _x TX+/TX- |   | Serial ATA <i>x</i> Transmit +/- |
| USB _x DA+/- |   | Differential Data Pair of USB Line <i>x</i> |
| USB _x PWR |   | USB Line <i>x</i> |

Table 19: P0 Signal Description

2.8.6 VME Bus Interface - P1 Connector

2.8.6.1 P1 and P2 Row B (VMEbus) Connector Pin Assignment

| Pin | P1 | | | | | P2 |
|-----|-------|----------|-----------|-----------|------------|--------|
| | Row z | Row a | Row b | Row c | Row d | Row b |
| 1 | N.C. | D00 | BBSY* | D08 | +5V | +5V |
| 2 | GND | D01 | BCLR* | D09 | GND | GND |
| 3 | N.C. | D02 | ACFAIL* | D10 | N.C. | RETRY* |
| 4 | GND | D03 | BG0IN* | D11 | N.C. | A24 |
| 5 | N.C. | D04 | BG0OUT* | D12 | N.C. | A25 |
| 6 | GND | D05 | BG1IN* | D13 | N.C. | A26 |
| 7 | N.C. | D06 | BG1OUT* | D14 | N.C. | A27 |
| 8 | GND | D07 | BG2IN* | D15 | N.C. | A28 |
| 9 | N.C. | GND | BG2OUT* | GND | GAP* (1) | A29 |
| 10 | GND | SYSCLK | BG3IN* | SYSFAIL* | GA0* (1) | A30 |
| 11 | N.C. | GND | BG3OUT* | BERR* | GA1* (1) | A31 |
| 12 | GND | DS1* | BR0* | SYSRESET* | +3.3V | GND |
| 13 | N.C. | DS0* | BR1* | LWORD* | GA2* (1) | +5V |
| 14 | GND | WRITE* | BR2* | AM5 | +3.3V | D16 |
| 15 | N.C. | GND | BR3* | A23 | GA3* (1) | D17 |
| 16 | GND | DTACK* | AM0 | A22 | +3.3V | D18 |
| 17 | N.C. | GND | AM1 | A21 | GA4* (1) | D19 |
| 18 | GND | AS* | AM2 | A20 | +3.3V | D20 |
| 19 | N.C. | GND | AM3 | A19 | SMB_SCL | D21 |
| 20 | GND | IACK* | GND | A18 | +3.3V | D22 |
| 21 | N.C. | IACKIN* | IPMB_SCL | A17 | SMB_SDA | D23 |
| 22 | GND | IACKOUT* | IPMB_SDA | A16 | +3.3V | GND |
| 23 | N.C. | AM4 | GND | A15 | SMB_ALERT* | D24 |
| 24 | GND | A07 | IRQ7* | A14 | +3.3V | D25 |
| 25 | N.C. | A06 | IRQ6* | A13 | N.C. | D26 |
| 26 | GND | A05 | IRQ5* | A12 | +3.3V | D27 |
| 27 | N.C. | A04 | IRQ4* | A11 | N.C. | D28 |
| 28 | GND | A03 | IRQ3* | A10 | +3.3V | D29 |
| 29 | N.C. | A02 | IRQ2* | A09 | N.C. | D30 |
| 30 | GND | A01 | IRQ1* | A08 | +3.3V | D31 |
| 31 | N.C. | -12V | +5V_STAND | +12V | GND | GND |
| 32 | GND | +5V | +5V | +5V | +5V | +5V |

* VME signals active when low.

(1) Geographical address pins, refer to section 2.8.6.2 page 45 for more information.

Table 20: P1 and P2 (Row B) Connector Pin Assignment



Do not exceed the maximum rated input voltages or apply reversed bias to the assembly. If such conditions occur, *toxic fumes* may be produced due to the destruction of components. Only use the VM6250 in VME IEEE1014x or VME64 backplanes that supply power on both P1 and P2 connectors. Failure to observe this warning may result in damage to the board.

2.8.6.2 Geographical Address Pin Assignment

The 6 geographical address pins (GA0*, GA1*, GA2*, GA3*, GA4* and GAP*) shall be tied to ground or left open (floating) on the backplane J1 connector as defined in the table below.

| Slot Number | GAP* Pin | GA4* Pin | GA3* Pin | GA2* Pin | GA1* Pin | GA0* Pin |
|-------------|----------|----------|----------|----------|----------|----------|
| 1 | Open | Open | Open | Open | Open | GND |
| 2 | Open | Open | Open | Open | GND | Open |
| 3 | GND | Open | Open | Open | GND | GND |
| 4 | Open | Open | Open | GND | Open | Open |
| 5 | GND | Open | Open | GND | Open | GND |
| 6 | GND | Open | Open | GND | GND | Open |
| 7 | Open | Open | Open | GND | GND | GND |
| 8 | Open | Open | GND | Open | Open | Open |
| 9 | GND | Open | GND | Open | Open | GND |
| 10 | GND | Open | GND | Open | GND | Open |
| 11 | Open | Open | GND | Open | GND | GND |
| 12 | GND | Open | GND | GND | Open | Open |
| 13 | Open | Open | GND | GND | Open | GND |
| 14 | Open | Open | GND | GND | GND | Open |
| 15 | GND | Open | GND | GND | GND | GND |
| 16 | Open | GND | Open | Open | Open | Open |
| 17 | GND | GND | Open | Open | Open | GND |
| 18 | GND | GND | Open | Open | GND | Open |
| 19 | Open | GND | Open | Open | GND | GND |
| 20 | GND | GND | Open | GND | Open | Open |
| 21 | Open | GND | Open | GND | Open | GND |

The device that samples the levels of the geographical address pins will read the inverted value of the slot number into which the board is plugged. When the board is powered on without being plugged into a VME/VME64 backplane the slot number will be zero with a parity error (GAP* open).

2.8.6.3 VMEbus Signal Description

The VMEbus signals occupy rows a, b and c of the P1 connector and row b of the P2 connector.

| Mnemonic | Signal Description |
|--------------------|---|
| A01 to A15 | Address Bus (bits 1 to 15). Address lines that are used to broadcast a short, standard or extended address. |
| A16 to A23 | Address Bus (bits 16 to 23). Address lines that are used in conjunction with A01-A15 to broadcast a standard or extended address. |
| A24 to A31 | Address Bus (bits 24 to 31). Address lines that are used in conjunction with A01-A23 to broadcast an extended address. |
| ACFAIL* | AC Failure. This signal indicates when the AC input to the power supply is no longer being provided or that the required AC input voltage levels are not being met. |
| AM0 to AM5 | Address Modifier (bits 0 to 5). These signals are used to broadcast information such as the address size, cycle type, master identification or any combination of these. |
| AS* | Address Strobe. This signal indicates when a valid address has been placed on the address bus. |
| BBSY* | Bus Busy. This signal is driven low by the requester associated with the current bus master to indicate that its master is using the bus. |
| BCLR* | Bus Clear. This signal is generated by an arbiter to indicate that there is a higher priority request for the bus than the one being processed. This signal requests the current master to release the bus. |
| BERR* | Bus Error. This signal is generated by a slave or bus timer to tell the master that the data transfer was not completed. |
| BG0IN* to BG3IN* | Bus Grant (0 to 3) In. These signals are generated by the arbiter to tell the board receiving it that if it is requesting the bus on that level, then it has been granted use of the bus. Otherwise the board should pass the signal down the daisy chain. The BGxIN*/BGxOUT* signals form the bus grant daisy chain, i.e. the BGxOUT* of one board forms the BGxIN* of the next board in the daisy chain. |
| BG0OUT* to BG3OUT* | Bus Grant (0 to 3) Out. These signals are generated by requesters to tell the next board in the daisy chain that if it is requesting the bus on that level, then it may use the bus. Otherwise the board should pass the signal down the daisy chain. |
| BR0* to BR3* | Bus Request (0 to 3). A low level, generated by a requester, on one of these lines, shows that some master needs to use the bus. |
| D00 to D31 | Data Bus (0 to 31). These signals are used to transfer data between masters and slaves, and status/ID information from interrupters to interrupt handlers. |
| DS0*, DS1* | Data Strobe 0, 1. These signals are used with LWORD* and A01 to show how many byte locations are being accessed (1, 2, 3 or 4). Also, during a write cycle, the falling edge of the first data strobe shows that valid data is available on the bus. On a read cycle, the rising edge of the first data strobe shows that data has been accepted from the data bus. |
| DTACK* | Data Transfer Acknowledge. This signal is generated by a slave. The falling edge shows that valid data is available on the data bus during a read cycle, or that data has been accepted from the data bus during a write cycle. The rising edge shows that the slave has released the data bus at the end of a read cycle. |

| Mnemonic | Signal Description |
|-----------------------|--|
| GA0* to GA4* and GAP* | Geographical address pins (refer to the table in section 2.8.6.2). These pins indicate to the VME board which one of the backplane slot it currently uses (0 to 21). |
| GND | The DC voltage reference for the system. |
| IACK* | Interrupt Acknowledge. This signal is used by the interrupt handler to acknowledge an interrupt request. It is routed to the IACKIN* pin of slot 1, where it is monitored by the IACK daisy chain driver. |
| IACKIN* | Interrupt Acknowledge In. This signal tells the board receiving it that board can respond to the interrupt acknowledge cycle in process or pass it down the daisy chain. IACKIN*/IACKOUT* form the interrupt acknowledge daisy chain. |
| IACKOUT* | Interrupt Acknowledge Out. This signal is sent by a board to tell the next board in the daisy chain that it can respond to the interrupt acknowledge cycle in progress. |
| IPMB_SCL | Intelligent Platform Management Bus - Clock I2C |
| IPMB_SDA | Intelligent Platform Management Bus - Data I2C |
| IRQ1* to IRQ7* | Interrupt Request (1 to 7). These signals are driven low by interrupters to request an interrupt on the corresponding level. |
| LWORD* | Longword. This signal is used with DS0*, DS1* and A01 to select which byte location(s) within the 4-byte group are accessed during the data transfer. |
| N.C. | This pin is not connected. |
| SMB_ALERT* | System Management Bus - Alert |
| SMB_SCL | System Management Bus - Serial clock line from the SMBus master to SMBus slave devices. |
| SMB_SDA | System Management Bus - Bi-directional serial data line between the SMBus master and the SMBus slave device. |
| SYSCLK | System Clock. This signal provides a constant 16 MHz clock signal that is independent of any other bus timing. |
| SYSFAIL* | System Fail. This signal shows that a failure has occurred in the system. It can be generated by any board in the system. It is also asserted after a reset and released when the board reset self-tests are passed successfully. |
| SYSRESET* | System Reset. When this signal is low, it causes the system to be reset. |
| WRITE* | Write. This signal is generated by a master to show whether the data transfer cycle is a read or a write. |
| +3.3V | +3.3 Volts DC power. |
| +5V | +5 Volts DC power |
| +12V | +12 Volts DC power. |
| -12V | -12 Volts DC power. |

Page 2 of 2

Table 21: VME Signal Description

2.8.7 VME Bus Interface - P2 Connector

2.8.7.1 P2 Connector Pin Assignment

The VMEbus signals occupy rows a, b and c of the P1 connector and row b of the P2 connector. Refer to section 2.8.6.1 page 44 for a detailed description of the row b of the P2 connector.

| Pin | Row z | Row a | Row c | Row d |
|-----|------------|------------|------------|------------|
| 1 | PMC1 IO 02 | PMC2 IO 02 | PMC2 IO 01 | PMC1 IO 01 |
| 2 | GND | PMC2 IO 04 | PMC2 IO 03 | PMC1 IO 03 |
| 3 | PMC1 IO 05 | PMC2 IO 06 | PMC2 IO 05 | PMC1 IO 04 |
| 4 | GND | PMC2 IO 08 | PMC2 IO 07 | PMC1 IO 06 |
| 5 | PMC1 IO 08 | PMC2 IO 10 | PMC2 IO 09 | PMC1 IO 07 |
| 6 | GND | PMC2 IO 12 | PMC2 IO 11 | PMC1 IO 09 |
| 7 | PMC1 IO 11 | PMC2 IO 14 | PMC2 IO 13 | PMC1 IO10 |
| 8 | GND | PMC2 IO 16 | PMC2 IO 15 | PMC1 IO12 |
| 9 | PMC1 IO 14 | PMC2 IO 18 | PMC2 IO 17 | PMC1 IO 13 |
| 10 | GND | PMC2 IO 20 | PMC2 IO 19 | PMC1 IO 15 |
| 11 | PMC1 IO 17 | PMC2 IO 22 | PMC2 IO 21 | PMC1 IO 16 |
| 12 | GND | PMC2 IO 24 | PMC2 IO 23 | PMC1 IO 18 |
| 13 | PMC1 IO 20 | PMC2 IO 26 | PMC2 IO 25 | PMC1 IO 19 |
| 14 | GND | PMC2 IO 28 | PMC2 IO 27 | PMC1 IO 21 |
| 15 | PMC1 IO 23 | PMC2 IO 30 | PMC2 IO 29 | PMC1 IO 22 |
| 16 | GND | PMC2 IO 32 | PMC2 IO 31 | PMC1 IO 24 |
| 17 | PMC1 IO 26 | PMC2 IO 34 | PMC2 IO 33 | PMC1 IO 25 |
| 18 | GND | PMC2 IO 36 | PMC2 IO 35 | PMC1 IO 27 |
| 19 | PMC1 IO 29 | PMC2 IO 38 | PMC2 IO 37 | PMC1 IO 28 |
| 20 | GND | PMC2 IO 40 | PMC2 IO 39 | PMC1 IO 30 |
| 21 | PMC1 IO 32 | PMC2 IO 42 | PMC2 IO 41 | PMC1 IO 31 |
| 22 | GND | PMC2 IO 44 | PMC2 IO 43 | S0_TX |
| 23 | S1_TX | PMC2 IO 46 | PMC2 IO 45 | S0_RX |
| 24 | GND | PMC2 IO 48 | PMC2 IO 47 | S0-RTS |
| 25 | S1_RX | PMC2 IO 50 | PMC2 IO 49 | S0_CTS |
| 26 | GND | PMC2 IO 52 | PMC2 IO 51 | RFU |
| 27 | S1-RTS | PMC2 IO 54 | PMC2 IO 53 | RFU |
| 28 | GND | PMC2 IO 56 | PMC2 IO 55 | RFU |
| 29 | S1-CTS | PMC2 IO 58 | PMC2 IO 57 | RFU |
| 30 | GND | PMC2 IO 60 | PMC2 IO 59 | RFU |
| 31 | RFU | PMC2 IO 62 | PMC2 IO 61 | GND |
| 32 | GND | PMC2 IO 64 | PMC2 IO 63 | +5V |

* Signals active when low.

Table 22: P2 Connector Pin Assignment

2.8.7.2 P2 Signal Description

The VME signals (row b) are described in section 2.8.6.3.




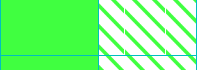

| Mnemonic | Legend | Signal Description |
|-----------------|---|--|
| GND | | Ground |
| PMC x IO yy |  | PMC Site x I/O signal yy |
| RFU | | Reserved for Future Use (serial lines) |
| S x _CTS |  | Channel EIA-232 x - Clear-To-Send |
| S x _RTS |  | Channel EIA-232 x - Ready-To-Send |
| S x _RX |  | Channel EIA-232 x - Receive Data |
| S x _TX |  | Channel EIA-232 x - TransmitData |
| +5V | | +5 Volts DC power |

Table 23: P2 Signal Description

2.8.8 PMC J11 and J21 Connector Pin Assignments

| Pin | Signal | Pin | Signal | Pin | Signal | Pin | Signal |
|-----|-----------|-----|------------|-----|------------|-----|------------|
| 1 | N.C. | 17 | REQ# | 33 | FRAME# | 49 | AD[09] |
| 2 | -12V | 18 | +5V | 34 | GND | 50 | +5V |
| 3 | GNG | 19 | V(I/O) (1) | 35 | GND | 51 | GND |
| 4 | INTA# | 20 | AD[31] | 36 | IRDY# | 52 | C/BE0# |
| 5 | INTB# | 21 | AD[28] | 37 | DEVSEL# | 53 | AD[06] |
| 6 | INTC# | 22 | AD[27] | 38 | .+5V | 54 | AD[05] |
| 7 | BUSMODE1# | 23 | AD[25] | 39 | PCIXCAP | 55 | AD[04] |
| 8 | +5V | 24 | GND | 40 | LOCK# | 56 | GND |
| 9 | INTD# | 25 | GND | 41 | SDONE# | 57 | V(I/O) (1) |
| 10 | N.C. | 26 | C/BE3# | 42 | SBO# | 58 | AD[03] |
| 11 | GND | 27 | AD[22] | 43 | PAR | 59 | AD[02] |
| 12 | +3.3V_SUS | 28 | AD[21] | 44 | GND | 60 | AD[01] |
| 13 | CLK | 29 | AD[19] | 45 | V(I/O) (1) | 61 | AD[00] |
| 14 | GND | 30 | +5V | 46 | AD[15] | 62 | +5V |
| 15 | GND | 31 | V(I/O) (1) | 47 | AD[12] | 63 | GND |
| 16 | GNT# | 32 | AD[17] | 48 | AD[11] | 64 | REQ64# |

(1) V(I/O) is 3.3V only. Neither PMC site provides a 3.3V keying pin

PCI signals active when low.

Table 24: PMC J11 and J21 Connector Pin Assignment

2.8.9 PMC J12 and J22 Connector Pin Assignments

| Pin | Signal | Pin | Signal | Pin | Signal | Pin | Signal |
|-----|--------------------------|-----|--------|-----|-------------|-----|------------|
| 1 | +12V | 17 | N.C. | 33 | GND | 49 | AD[08] |
| 2 | N.C. | 18 | GND | 34 | IDSEL B (1) | 50 | +3.3V |
| 3 | Pulled to +3.3V via 10K | 19 | AD[30] | 35 | TRDY# | 51 | AD[07] |
| 4 | Pulled to +3.3V via 10K | 20 | AD[29] | 36 | +3.3V | 52 | REQ B# (1) |
| 5 | Pulled to +3.3V via 10K | 21 | GND | 37 | GND | 53 | +3.3V |
| 6 | Ground | 22 | AD[26] | 38 | STOP# | 54 | GNT B# (1) |
| 7 | GND | 23 | AD[24] | 39 | PERR# | 55 | PMC-RSVD |
| 8 | N.C. | 24 | +3.3V | 40 | GND | 56 | GND |
| 9 | N.C. | 25 | IDSEL | 41 | +3.3V | 57 | PMC-RSVD |
| 10 | N.C. | 26 | AD[23] | 42 | SERR# | 58 | EREADEY |
| 11 | Pulled to +3.3V via 2.7K | 27 | +3.3V | 43 | C/BE1# | 59 | GND |
| 12 | +3.3V | 28 | AD[20] | 44 | GND | 60 | N.C. |
| 13 | RST# | 29 | AD[18] | 45 | AD[14] | 61 | ACK64# |
| 14 | GND | 30 | GND | 46 | AD[13] | 62 | +3.3V |
| 15 | +3.3V | 31 | AD[16] | 47 | M66EN | 63 | GND |
| 16 | GND | 32 | C/BE2# | 48 | AD[10] | 64 | N.C. |

(1) IDSEL B, REQ B# and GNT B# are provided for use by dual-function PMC modules or processor-PMC modules

PCI signals active when low.

Table 25: PMC J12 and J22 Connector Pin Assignment

2.8.10 PMC J13 and J23 Connector Pin Assignments

| Pin | Signal | Pin | Signal | Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|-----|--------|-----|--------|
| 1 | N.C. | 17 | AD[59] | 33 | GND | 49 | AD[37] |
| 2 | GND | 18 | AD[58] | 34 | AD[48] | 50 | GND |
| 3 | GND | 19 | AD[57] | 35 | AD[47] | 51 | GND |
| 4 | C/BE7# | 20 | GND | 36 | AD[46] | 52 | AD[36] |
| 5 | C/BE6# | 21 | V(I/O) | 37 | AD[45] | 53 | AD[35] |
| 6 | C/BE5# | 22 | AD[56] | 38 | GND | 54 | AD[34] |
| 7 | C/BE4# | 23 | AD[55] | 39 | V(I/O) | 55 | AD[33] |
| 8 | GND | 24 | AD[54] | 40 | AD[44] | 56 | GND |
| 9 | V(I/O) | 25 | AD[53] | 41 | AD[43] | 57 | V(I/O) |
| 10 | PAR64 | 26 | GND | 42 | AD[42] | 58 | AD[32] |
| 11 | AD[63] | 27 | GND | 43 | AD[41] | 59 | N.C. |
| 12 | AD[62] | 28 | AD[52] | 44 | GND | 60 | N.C. |
| 13 | AD[61] | 29 | AD[51] | 45 | GND | 61 | N.C. |
| 14 | GND | 30 | AD[50] | 46 | AD[40] | 62 | GND |
| 15 | GND | 31 | AD[49] | 47 | AD[39] | 63 | GND |
| 16 | AD[60] | 32 | GND | 48 | AD[38] | 64 | N.C. |

PCI signals active when low.

Table 26: PMC J13 and J23 Connector Pin Assignment

2.8.11 PMC J14 and J24 Connector Pin Assignment

| Pin | Signal | Pin | Signal | Pin | Signal | Pin | Signal |
|-----|-----------|-----|-----------|-----|-----------|-----|-----------|
| 1 | PMC IO 01 | 17 | PMC IO 17 | 33 | PMC IO 31 | 49 | PMC IO 49 |
| 2 | PMC IO 02 | 18 | PMC IO 18 | 34 | PMC IO 34 | 50 | PMC IO 50 |
| 3 | PMC IO 03 | 19 | PMC IO 19 | 35 | PMC IO 35 | 51 | PMC IO 51 |
| 4 | PMC IO 04 | 20 | PMC IO 20 | 36 | PMC IO 36 | 52 | PMC IO 52 |
| 5 | PMC IO 05 | 21 | PMC IO 21 | 37 | PMC IO 37 | 53 | PMC IO 53 |
| 6 | PMC IO 06 | 22 | PMC IO 22 | 38 | PMC IO 38 | 54 | PMC IO 54 |
| 7 | PMC IO 07 | 23 | PMC IO 23 | 39 | PMC IO 39 | 55 | PMC IO 55 |
| 8 | PMC IO 08 | 24 | PMC IO 24 | 40 | PMC IO 40 | 56 | PMC IO 56 |
| 9 | PMC IO 09 | 25 | PMC IO 25 | 41 | PMC IO 41 | 57 | PMC IO 57 |
| 10 | PMC IO 10 | 26 | PMC IO 26 | 42 | PMC IO 42 | 58 | PMC IO 58 |
| 11 | PMC IO 11 | 27 | PMC IO 27 | 43 | PMC IO 43 | 59 | PMC IO 59 |
| 12 | PMC IO 12 | 28 | PMC IO 28 | 44 | PMC IO 44 | 60 | PMC IO 60 |
| 13 | PMC IO 13 | 29 | PMC IO 29 | 45 | PMC IO 45 | 61 | PMC IO 61 |
| 14 | PMC IO 14 | 30 | PMC IO 30 | 46 | PMC IO 46 | 62 | PMC IO 62 |
| 15 | PMC IO 15 | 31 | PMC IO 31 | 47 | PMC IO 47 | 63 | PMC IO 63 |
| 16 | PMC IO 16 | 32 | PMC IO 32 | 48 | PMC IO 48 | 64 | PMC IO 64 |

Table 27: PMC J14 and J24 Connector Pin Assignment

2.8.12 PMC Signal Description

| Mnemonic | Signal Description |
|------------------------|---|
| AD[00] to AD[63] | Address/Data bits. Multiplexed address and data bus. AD32 to AD63 are specific to 64-bit bus extension. |
| ACK64# | Acknowledge 64-bit Transfer. Driven low by the device to indicate that the target is willing to transfer data using 64 bits. |
| BUSMODE1# | Bus Mode 1. Driven low by a PMC module to indicate that it supports the current bus mode. |
| C/BE0# to C/BE7# | Command/Byte Enables. During the address phase, these signals specify the type of cycle to carry out on the PCI bus. During the data phase the signals are byte enables that specify the active bytes on the bus. C/BE4# to C/BE7# are specific to 64-bit bus extension. |
| CLK | Clock. Except RST*, the 64-bit PCI bus signals are synchronous to 33 or 66 MHz clock. |
| DEVSEL# | Device Select. Driven low by a PCI agent to signal that it has decoded its address as the target of the current access. |
| FRAME# | FRAME. Driven low by the current master to signal the start and duration of an access. |
| EREADY | EREADY. Output of non-monarch PPMCs that indicates it has completed its onboard initialization and can respond to PCI bus enumeration by the monarch via configuration cycles. Input to the monarch PPMC that indicates all non-monarch PPMCs have completed their onboard initialization and can respond to PCI bus enumeration by the monarch via configuration cycles. |
| GNT# | Grant. Driven low by the arbiter to grant PCI bus ownership to a PCI agent. GNT B# is provided for use by dual-function PMC modules or processor-PMC modules. |
| IDSEL | Initialization Device Select. Device chip select during configuration cycles. IDSEL B is provided for use by dual-function PMC modules or processor-PMC modules. |
| INTA# to INTD# | Interrupt lines. Level-sensitive, active-low interrupt requests. |
| IRDY# | Initiator Ready. Driven low by the initiator to signal its ability to complete the current data phase. |
| LOCK# | LOCK. Driven low to indicate an atomic operation that may require multiple transactions to complete. |
| M66EN | 66 MHz Enable. Indicates to a device if the bus segment is operating at 66 or 33 MHz. If it is high then the bus speed is 66 MHz and if it is low then the bus speed is 33 MHz. |
| N.C. | This pin is not connected. |
| PAR | Parity. Parity protection bit for AD0 to AD31 and C/BE0# to C/BE3#. |
| PAR64 | Parity Upper DWORD. Parity protection bit for AD32 to AD63 and C/BE4# to C/BE7#. |
| PERR# | Parity Error. Driven low by a PCI agent to signal a parity error. |
| PMC IO 01 to PMC IO 64 | 64-bit PCI bus PMC 64 signals. Used to transmit I/O signals from PCI 64 PMC connector (J14) to P2 connector. |
| PMC-RSVD | Reserved. Do not connect this pin. |
| REQ# | Request. Driven low by a PCI agent to request ownership of the PCI bus. REQ B# is provided for use by dual-function PMC modules or processor-PMC modules. |

| Mnemonic | Signal Description |
|----------|--|
| REQ64# | Request 64-bit Transfer. Driven low by the current bus master, indicates that it desires to transfer data using 64 bits. |
| RST# | Reset. Driven low to reset the PCI bus. |
| SBO# | Snoop Backoff. Indicates a hit of a modified line asserted. |
| SDONE# | Snoop Done. Indicates the status of the snoop for the current access. |
| SERR# | System Error. Driven low by a PCI agent to signal a system error. |
| STOP# | STOP. Driven low by a PCI target to signal a disconnect or target-abort. |
| TRDY# | Target Ready. Driven low by the current target to signal its ability to complete the current data phase. |
| V(I/O) | Power supply delivered by the board. On the PCI 64 PMC slots, +3.3 Volts power is supplied. +5 Volts signaling PMCs are not supported. Contact Kontron for more information. |
| +3.3V | +3.3 Volts DC power |
| +5V | +5 Volts DC power |
| +12V | +12 Volts DC power |
| -12V | -12 Volts DC power |

Page 2 of 2

Table 28: PMC Signal Description

2.8.13 XMC J15 and 25 Connector Pin Assignments

Two XMC sites are provided to allow the installation of VITA 42.3, PCI-Express mezzanine cards. The signals assignments are as shown in the following table. The encoding for GA[2:0] should not conflict with other SMBus/IPMI devices.

| Pin | Row A | Row B | Row C | Row D | Row E | Row F |
|-----|----------|----------|----------|--------|--------|---------------------|
| 1 | PET0p0 | PET0n0 | 3.3V | PET0p1 | PET0n1 | VPWR ⁽¹⁾ |
| 2 | GND | GND | TRST# | GND | GND | MRSTI# |
| 3 | PET0p2 | PET0n2 | 3.3V | PET0p3 | PET0n3 | VPWR ⁽¹⁾ |
| 4 | GND | GND | TCK | GND | GND | MRSTO# |
| 5 | PET0p4 | PET0n4 | 3.3V | PET0p5 | PET0n5 | VPWR ⁽¹⁾ |
| 6 | GND | GND | TMS | GND | GND | +12V |
| 7 | PET0p6 | PET0n6 | 3.3V | PET0p7 | PET0n7 | VPWR ⁽¹⁾ |
| 8 | GND | GND | TDI | GND | GND | -12V |
| 9 | RFU | RFU | N.C. | RFU | RFU | VPWR |
| 10 | GND | GND | TDO | GND | GND | GA0 |
| 11 | PER0p0 | PER0n0 | MBIST# | PER0p1 | PER0n1 | VPWR |
| 12 | GND | GND | GA1 | GND | GND | MPRESENT# |
| 13 | PER0p2 | PER0n2 | 3.3V AUX | PER0p3 | PER0n3 | VPWR ⁽¹⁾ |
| 14 | GND | GND | GA2 | GND | GND | MSDA |
| 15 | PER0p4 | PER0n4 | N.C. | PER0p5 | PER0n5 | VPWR ⁽¹⁾ |
| 16 | GND | GND | NVMRO | GND | GND | MSCL |
| 17 | PER0p6 | PER0n6 | N.C. | PER0p7 | PER0n7 | N.C. |
| 18 | GND | GND | N.C. | GND | GND | N.C. |
| 19 | REFCLK+0 | REFCLK-0 | N.C. | N.C. | N.C. | N.C. |

⁽¹⁾ VPWR is connected to +12V via a 0 ohm resistor.

The 5V option is available, please contact Kontron for more information on this topic.

Signals active when low.

Table 29: XMC J15 and J25 Connector Pin Assignments

2.8.14 XMC Signal Description

| Mnemonic | Legend | Signal Description |
|---------------|--------|--|
| GA[0..2] | | I2C channel select. These signals allow a carrier to address a specific XMC slot on an IPMI I2C bus shared by multiple XMCs. |
| GND | | Ground |
| MBIST | | XMC Built In Self Test. This signal allows the carrier to determine whether an XMC has completed its built-in self test. |
| MPRESENT | | Module present. This signal allows the carrier to determine whether an XMC is present. |
| MRSTI | | XMC Reset In. When this signal is asserted low by the carrier, the mezzanine card shall initialize itself into a known state. |
| MRSTO | | XMC Reset Out. As input to the carrier, this optional signal provides an input to the carrier's reset logic in order to support a reset button or other reset source on the XMC. |
| MSCL | | IPMI I2C serial clock. |
| MSDA | | IPMI I2C serial data. |
| NVMRO | | XMC Write Prohibit. When this signal is asserted high, the XMC shall disable writes to non-volatile memory on the XMC. |
| N.C. | | Not Connected. Do not Used |
| PET0p/n[0..7] | | Link 0 Differential Transmit. These signals are used by the XMC to receive high-speed protocol-specific data TO the carrier over the PCI Express interface. |
| PER0p/n[0..7] | | Link 0 Differential Receive. These signals are used by the XMC to receive high-speed protocol-specific data FROM the carrier over the PCI Express interface. |
| REFCLK+/-0 | | Differential reference clock for Link 0 PCI Express interface. |
| RFU | | Reserved for Future Use |
| TCK | | JTAG Clock. |
| TDI | | JTAG Data In |
| TDO | | JTAG Data Out |
| TMS | | JTAG Mode Select |
| TRST | | JTAG Reset. |
| VPWR | | Power pins. These signals carry either 12V or 5V power from the carrier to the XMC. |
| 3.3V | | |
| 3.3V AUX | | |
| +/-12V | | |

Table 30: XMC Signal Description

2.8.15 FMC Interface - P4 and P6 Connectors

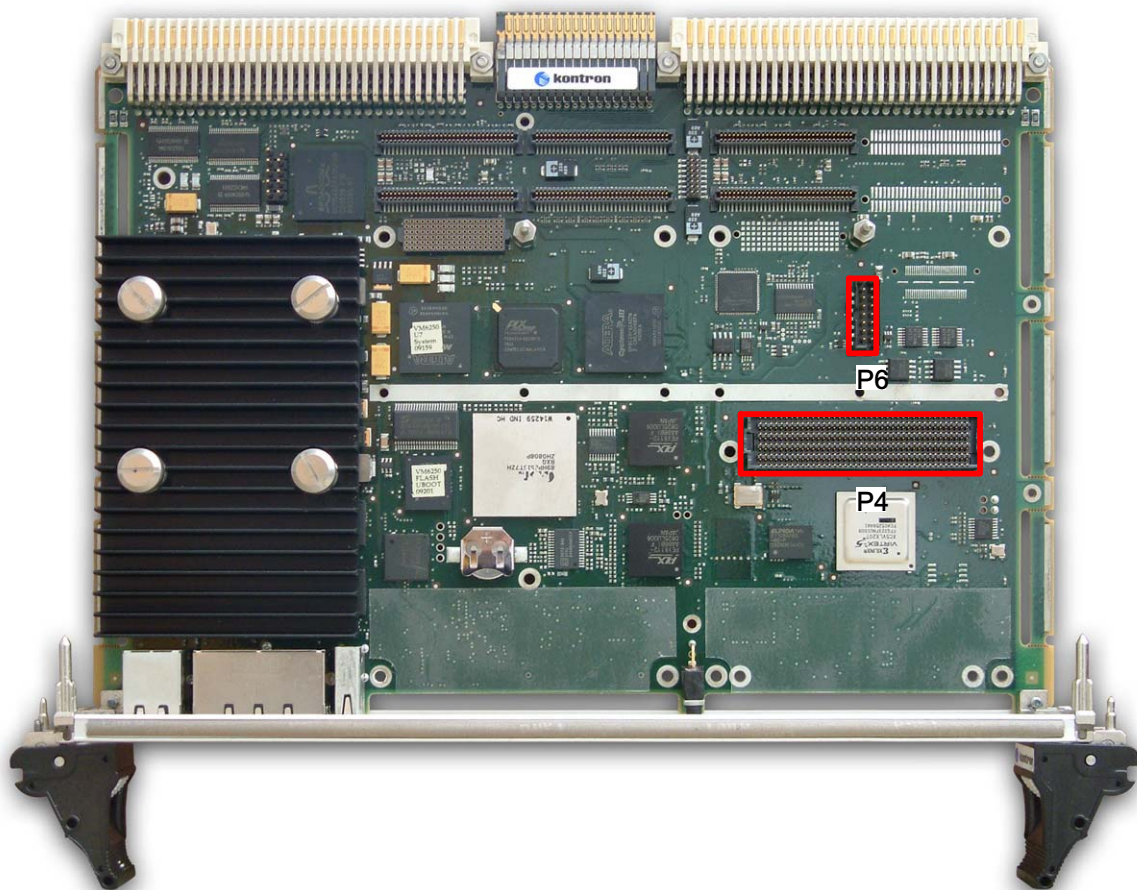


Figure 20: FMC Connectors Layout (Top View)

The following publications contain information relating to VITA 57:

- > VITA 57 - Development Kit User's Guide
- > VITA 57 - FPGA Configuration

SD.DT.F79

SD.DT.F74

2.9 PMC Site

The VM6250 provides two XMC/PMC sites:

- The PCI 64 XMC/PMC site 1, 64-bit wide, operates at 133 MHz (refer to Table 31 for more information about the PCI 64 PMC Site 1 configuration).
- The PCI 64 XMC/PMC site 2, 32-bit wide, operates at 66 MHz (refer to Table 32 for more information about the PCI 64 XMC/PMC Site 2 configuration).

Kontron products include standard XMCs/PMCs such as Graphics XMC (XMC-G72), Ethernet XMC (XMC-ETH2). Refer to the Release Notes associated with your operating system for more information about the supported PMCs.

For EMC protection reasons, when not used, the PMC slots are fitted with a blanking plate.



Figure 21: PMC Site Locations

2.9.1 PCI 64 XMC/PMC Site 1



Electrostatic Discharge (ESD) can damage components. To avoid ESD damage, the board should be kept in its protective antistatic packaging until it is ready to be installed. During installation make sure to wear an antistatic wrist strap to discharge static electricity.

PMC Site 1 can alternately be used as an XMC site with a x4 PCI-Express link to the MPC864x processor. A XMC card installed in this location uses its P5 (J15 on the VM6250) for the Express Link. The installed XMC should provide either front panel I/O or utilize a P4 (J14 on the VM6250) for I/O.

The following table sums up all information concerning the PCI 64 PMC Site 1. It gives information needed for software and hardware configuration.

| FUNCTION | VALUE | DESCRIPTION |
|--------------------------------------|------------------------------|---|
| PMC Connectors | J11 | Connects the signals for the 64-bit PCI bus. |
| | J12 | Connects the signals for the 64-bit PCI bus. |
| | J13 | Connects the signals for the 64-bit PCI bus. |
| | J14 | Connects the User Defines I/O signals. |
| XMC Connectors | J15 | Connects the signals for the switched communications. |
| V(I/O) Voltage Level | +3.3V | The signaling voltage of the 64-bit PCI bus is +3.3V. It is not +5V tolerant. The user must check that its PMC type is compatible with this signaling voltage (refer to section 2.9.3 page 60). |
| PCI Bus Mode | 64 Bits | The 64-bit PCI bus is in 64-bit mode. |
| PCI Bus Rate | 133 MHz | The 64-bit PCI bus can run at 133 MHz (refer to the Hardware Release Notes for possible restrictions). |
| PCI Interrupts | INTA INTB INTC INTD | Connected to the Interrupt Controller. |
| Bus Number | 6 | 64-bit PCI bus corresponds to PCI bus number 0. |
| Device Number | 4 | PMC Site 1 is device number 1 on the 64-bit PCI bus. |
| REQ/GNT IDSEL | 0 AD[20] | for single function PMC's |
| Alternate REQ/GNT Alternate IDSEL | 2 AD[24] | for dual function PMC's |

Table 31: PCI 64 XMC/PMC Site 1 Information

2.9.2 PCI 64 XMC/PMC Site 2



Electrostatic Discharge (ESD) can damage components. To avoid ESD damage, the board should be kept in its protective antistatic packaging until it is ready to be installed. During installation make sure to wear an antistatic wrist strap to discharge static electricity.

PMC Site 2 can alternately be used as an XMC site with a x4 PCI-Express link to the MPC8641x processor. A XMC card installed in this location uses its P5 (J25 on the VM6250) for the Express Link. The installed XMC should provide either front panel I/O or utilize a P4 (J24 on the VM6250) for I/O.

The following table sums up all information concerning the PCI 64 XMC/PMC Site 2. It gives information needed for software and hardware configuration.

| FUNCTION | VALUE | DESCRIPTION |
|--------------------------------------|------------------------------|---|
| PMC Connectors | J21 | Connects the signals for the 64-bit PCI bus. |
| | J22 | Connects the signals for the 64-bit PCI bus. |
| | J23 | Connects the signals for the 64-bit PCI bus. |
| | J24 | Connects the User Defines I/O signals. |
| XMC Connectors | J25 | Connects the signals for the switched communications. |
| V(I/O) Voltage Level | +3.3V | The signaling voltage of the 64-bit PCI bus is +3.3V. It is not +5V tolerant. The user must check that its PMC type is compatible with this signaling voltage (refer to section 2.9.3 page 60). |
| PCI Bus Mode | 32 Bits | The 64-bit PCI bus is in 32-bit mode. |
| PCI Bus Rate | 66 MHz | The PCI bus can run at 66 MHz (refer to the Hardware Release Notes for possible restrictions). |
| PCI Interrupts | INTA INTB INTC INTD | Connected to the Interrupt Controller. |
| Bus Number | 6 | 64-bit PCI bus corresponds to PCI bus number 0. |
| Device Number | 5 | XMC/PMC Site 2 is device number 1 on the 64-bit PCI bus. |
| REQ/GNT IDSEL | 1 AD[21] | for single function PMC's |
| Alternate REQ/GNT Alternate IDSEL | 3 AD[25] | for dual function PMC's |

Table 32: PCI 64 XMC/PMC Site 2 Information

2.9.3 Signaling Voltage Keying Pin

The 64-bit PCI bus of the VM6250 and the PMC plugged on the 64-bit PCI slot have to operate on the same signaling level.


The VM6250 sets the signaling level for the 64-bit PCI bus to +3.3V (i.e. $V(I/O)=+3.3V$). The $V(I/O)$ pins of the PCI 64 PMC are connected to +3.3V.

The distinction between PMC types is the signaling level they use, not the power rails they connect to, nor the component technology they contain.

On the VM6250 PCI 64 PMC slots, only two PMC types must be intalled:


> +3.3V PMC

It is designed to work only in a +3.3V signaling level and will only have a keying hole.

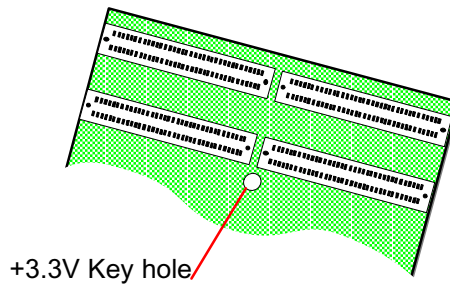


> Universal PMC

It supports both voltages (+5V and +3.3V). This PMC is capable of detecting the signaling level in use and adapting itself to that environment. It has two keying holes (+5V and +3.3V) and can, therefore, be plugged into either signaling level.

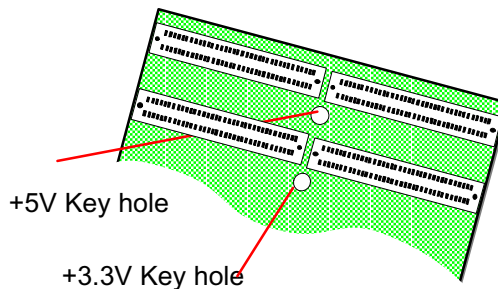

As no PMC voltage selection key is provided on the board, make sure not to insert a +5V PMC on the board. Failure to observe this restriction may result in damage to the PMC or the VM6250.

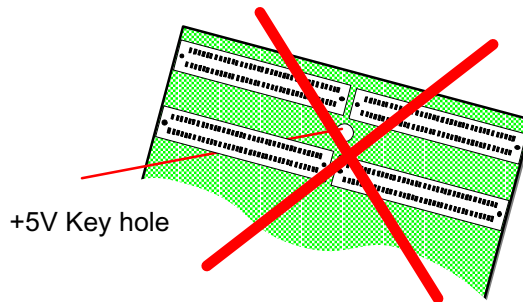

Chapter 3 - Installation

The VM6250 has been designed for easy installation. However, the following standard precautions, installation procedures, and general information must be observed to ensure proper installation and to preclude damage to the board, other system components, or injury to personnel.

3.1 Safety Requirements

The following safety precautions must be observed when installing or operating the VM6250. Kontron assumes no responsibility for any damage resulting from failure to comply with these requirements.



Due care should be exercised when handling the board due to the fact that the heat sink can get very hot. Do not touch the heat sink when installing or removing the board. In addition, the board should not be placed on any surface or in any form of storage container until such time as the board and heat sink have cooled down to room temperature.

3.2 Board Identification

The VM6250-SA boards are identified by labels fitted to the bottom side.

- A** "Board Identification" label and associated 2D barcode.
 - ▶ Order Code Top, left location
 - ▶ E.C. Level Top, right location
 - ▶ Serial Number Bottom, left location
 - ▶ Variant Bottom, right location
- B** "Ethernet Number" label for ETH0, ETH1, ETH2 and ETH3 interfaces and associated 2D barcode (address interfaces are in hexadecimal format).

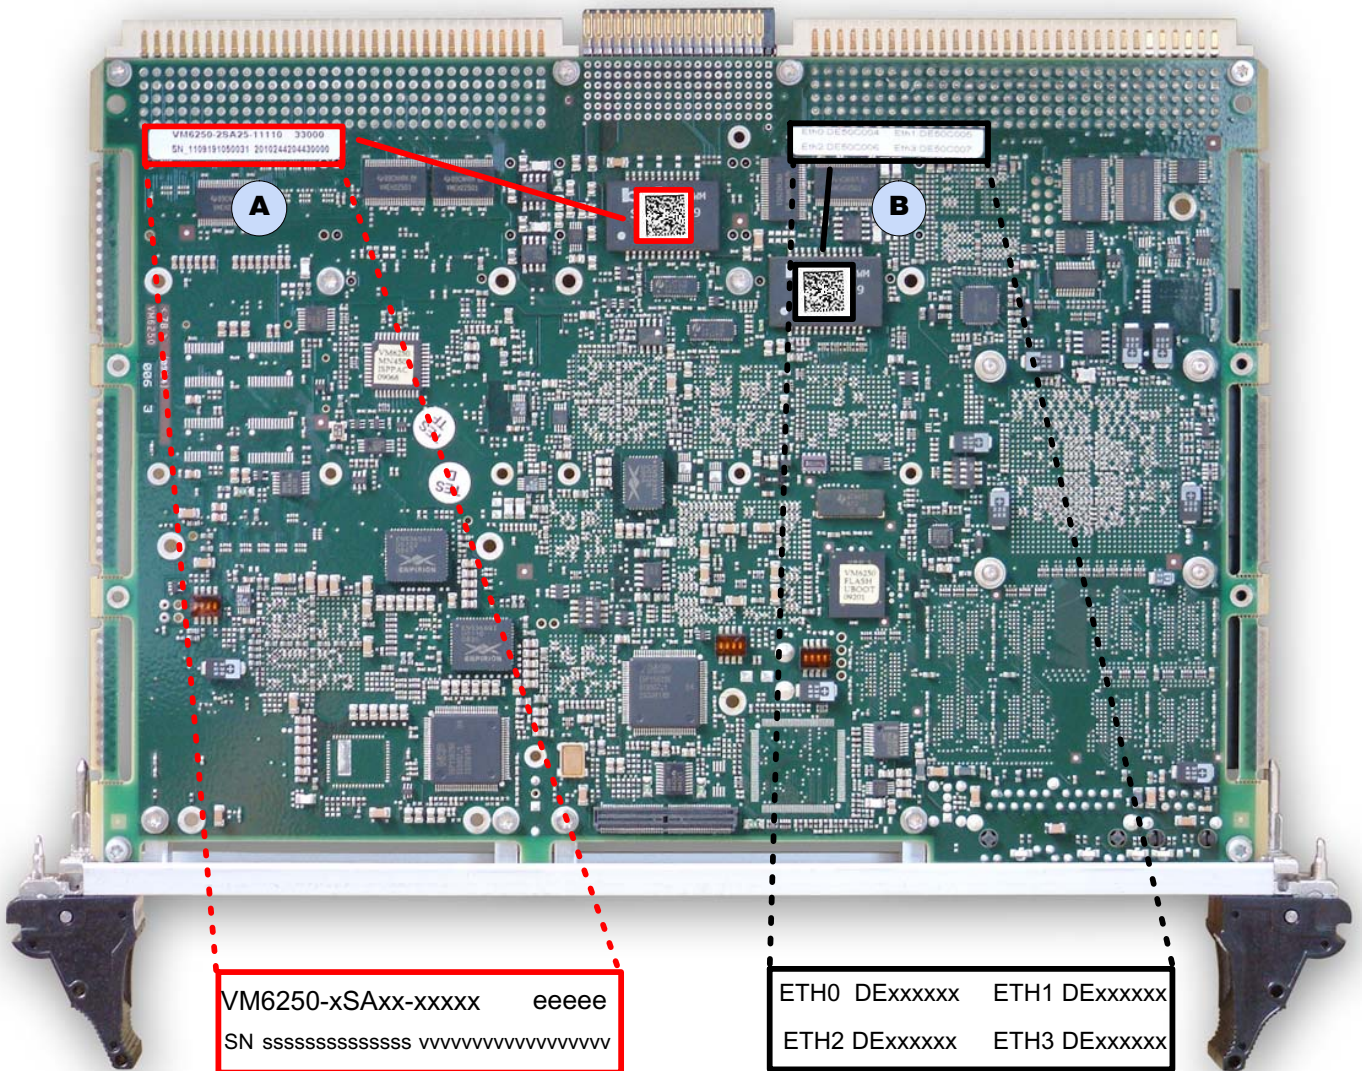


Figure 22: Board Identification (Bottom View)

3.3 Board Configuration

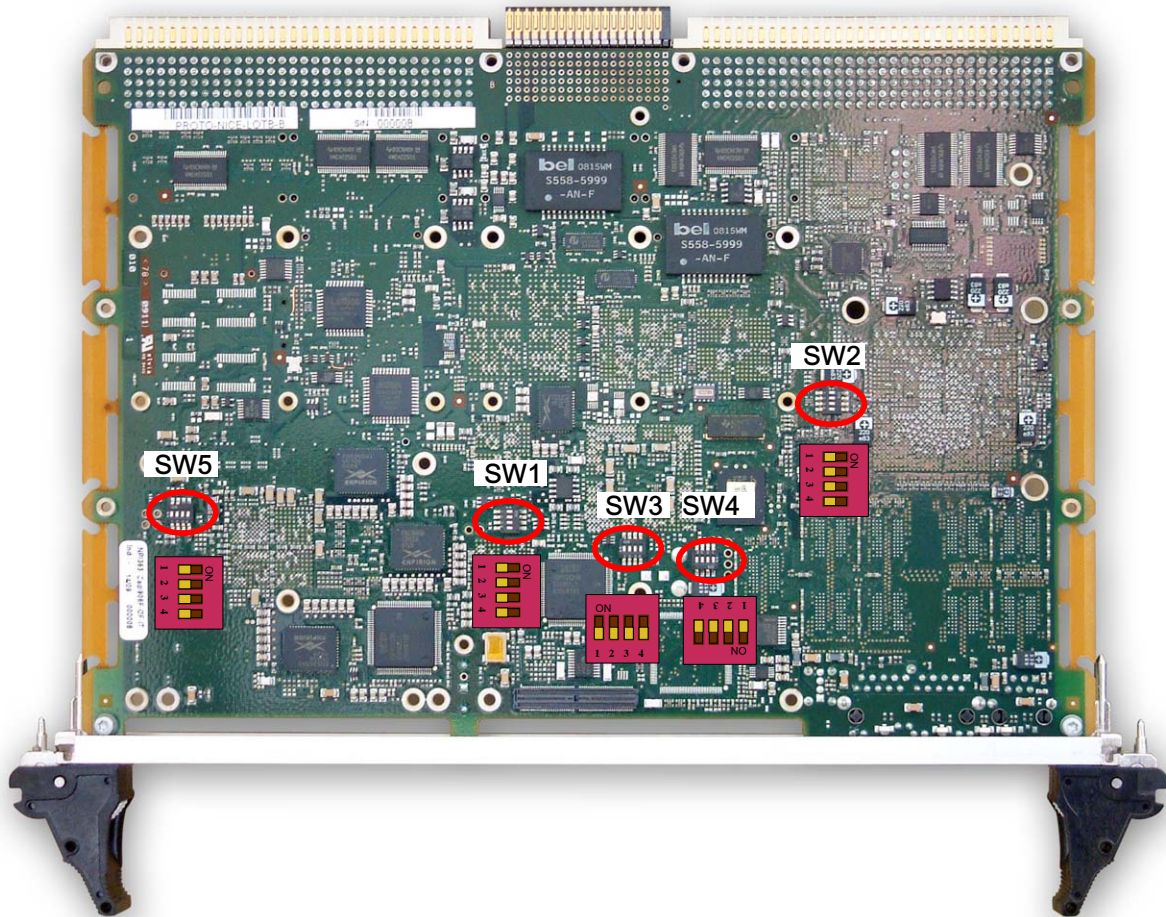


Figure 23: Board Configuration

Four 4-bit DIP switches are available on the VM6250: SW1, SW2, SW3, SW4 and SW5.

3.3.1 DIP Switch SW1 Description

| SW1 | Function | Description |
|--------|----------|-------------|
| 1 .. 4 | Reserved | Reserved |

3.3.2 DIP Switch SW2 Description

| SW2 | Function | Description |
|-----|----------------------|---|
| 1 | Reserved | Reserved |
| 2 | Boot Flash Selection | ON (0) Boot from Flash 1 OFF (1) Boot from Flash 0 |
| 3 | Reserved | Reserved |
| 4 | Reserved | Reserved |

3.3.3 DIP Switch SW3 Description

| SW3 | Function | Description |
|--------|----------|-------------|
| 1 .. 4 | Reserved | Reserved |

3.3.4 DIP Switch SW4 Description

| SW4 | Function | Description |
|--------|------------------|---|
| 1 | Boot Flash 0 WP# | ON (0) Boot Flash 0 Write Protected OFF (1) Boot Flash 0 Write Enabled |
| 2 | Boot Flash 1 WP# | ON (0) Boot Flash 1 Write Protected OFF (1) Boot Flash 1 Write Enabled |
| 2 .. 4 | Reserved | Reserved |

3.3.5 DIP Switch SW5 Description

| SW5 | Function | Description |
|-----|--|---|
| 1 | VITA 57 FPGA user EEPROM write protect | ON VITA 57 FPGA flash is write protected OFF VITA 57 FPGA flash is not write protected |
| 2 | VITA 57 FPGA rescue EEPROM write protect | ON VITA 57 FPGA rescue flash is write protected OFF VITA 57 FPGA rescue flash is not write protected |
| 3 | JTAG/SPI access selection | ON JTAG access mode is selected OFF SPI access mode is selected |
| 4 | VITA 57 FPGA rescue EEPROM selection | ON Rescue image is downloaded in FPGA VITA 57 OFF Normal operation - Default image is downloaded in FPGA VITA 57 |

3.4 Package Content

The VM6250 is packaged with several components. The packing contents of the VM6250 Series may vary depending on customer requests.

> CPU Module

- ▶ Order Code: VM6250-xxxxxxxx
- ▶ Processor specifications differ depending on Order Code
- ▶ Heat sink assembled on the board
- ▶ Battery assembled on the board
- ▶ Serial adaptation cable RJ-12 <-> DB-9 (Order Code: KIT-RJ12DB9)
- ▶ CD-ROM Technical Documentation

> PMCs Carrier

- ▶ Order Code: V2PMC2-xx

> Rear Transition Module

- ▶ Order Code: PBV36-P0-VM6-00

> USB Flash Disk Module

- ▶ Order Code: FDM-USB-xGB-L2-IV

3.5 Initial Installation Procedure

The following procedures are applicable only for the initial installation of the VM6250 in a system.

To perform an initial installation of the VM6250 in a system proceed as follows:

1. Ensure that the safety requirements indicated in Chapter 3.1 are observed.



Failure to comply with the instruction below may cause damage to the board or result in improper system operation.

2. Ensure that the board is properly configured for operation in accordance with application requirements before installing. For information regarding the configuration of the VM6250 refer to Chapter 4. For the installation of VM6250 specific peripheral devices and Rear I/O devices refer to the appropriate sections in Chapter 3.



Care must be taken when applying the procedures below to ensure that neither the VM6250 nor other system boards are physically damaged by the application of these procedures.

3. To install the VM6250 perform the following:

1. Ensure that no power is applied to the system before proceeding.



When performing the next step, DO NOT push the board into the backplane connectors. Use the ejector handles to seat the board into the backplane connectors.

2. Carefully insert the board into the slot designated by the application requirements for the board until it makes contact with the backplane connectors.
3. Using the ejector handle, engage the board with the backplane. When the ejector handle is locked, the board is engaged.
4. Fasten the two front panel retaining screws.
5. Connect all external interfacing cables to the board as required.
6. Ensure that the board and all required interfacing cables are properly secured.

The VM6250 is now ready for operation. For operation of the VM6250, refer to appropriate VM6250 specific software, application, and system documentation.

3.6 Standard Removal Procedure

To remove the board proceed as follows:

1. Ensure that the safety requirements indicated in Chapter 3.1 are observed. Particular attention must be paid to the warning regarding the heat sink!



Care must be taken when applying the procedures below to ensure that neither the VM6250 nor system boards are physically damaged by the application of these procedures.

2. Ensure that no power is applied to the system before proceeding.
3. Disconnect any interfacing cables that may be connected to the board.
4. Unscrew the two front panel retaining screws.
5. Disengage the board from the backplane by first unlocking the board ejection handles and then by pressing the handles as required until the board is disengaged.
6. After disengaging the board from the backplane, pull the board out of the slot.



Due care should be exercised when handling the board due to the fact that the heat sink can get very hot. Do not touch the heat sink when changing the board.

7. Dispose of the board as required.

3.7 Installation of Peripheral Devices

The VM6250 is designed to accommodate a variety of peripheral devices whose installation varies considerably. The following chapters provide information regarding installation aspects and not detailed procedures.

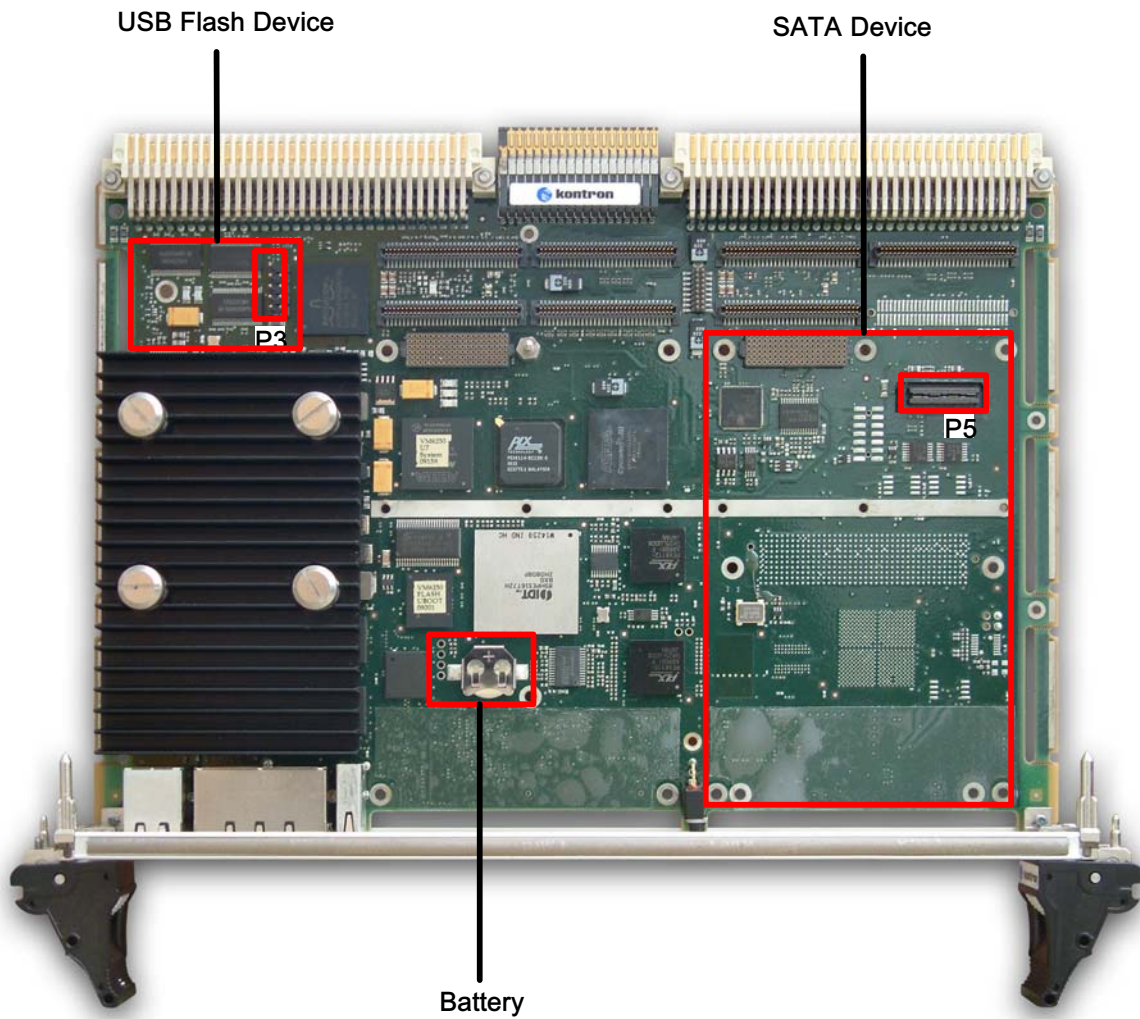


Figure 24: Onboard Devices

3.7.1 USB Device Installation

The VM6250 supports all USB plug and play computer peripherals.



All USB devices may be connected or removed while the host or other peripherals are powered up.

» USB Flash Disk Installation



The USB Flash module is fixed to the board, by using:

- ▶ on one side the P3 connector,
- ▶ on the other side, a standoff screwed to the VM6250 board and to the USB Flash module.

Figure 25: USB Flash Disk Bottom View

3.7.2 Battery Replacement

The lithium battery must be replaced with an identical battery or a battery type recommended by the manufacturer.

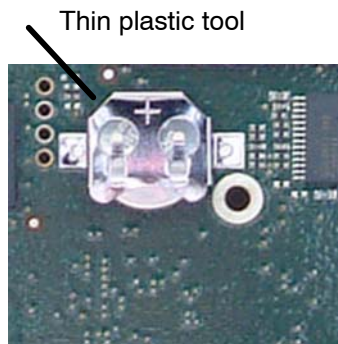


Figure 26: Battery Location

To replace the battery, proceed as follows:

- Turn off power.
- Use a thin plastic tool to push the battery outside the safety cache. Push from the right or left top side of the safety cache.
- Remove the battery.
- Place the new battery in the socket.
- Make sure that you insert the battery the right way round. The plus pole must be on the top!



Care must be taken to ensure that the battery is correctly replaced.

The battery should be replaced only with an identical or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

3.7.3 Serial ATA Extension Module

A Serial ATA Extension Module with up to 120 GB SATA HDD may be connected to the VM6250 via the onboard connector P5.



- This module must be installed only on the VM6250 boards that support the SATA onboard manufacturing option.
- The SATA onboard manufacturing option is not available on VM6250-RC boards.

If not already done, the SATA extension module must be physically installed on the VM6250 prior to installation of the VM6250 in a system.

During installation it is necessary to ensure that the SATA Flash module is properly seated in the onboard connector P5, i.e. the pins are aligned correctly and not bent.



Figure 27: SATA Extension Module: front and Bottom Views

The SATA extension module (order code: KIT-DISK25-SATA or KIT-DISK18-SATA) is made up of:

- > 1 plate fitted with SATA connectors
- > 4x screws CZX-M3X5-INOX
- > 4x screws CZX-M2.5X5-INOX

Installation process (if not already done):

1. Insert the SATA disk in the SATA connector. Example of SATA disk validated:
 - ▶ Manufacturer: Western Digital
 - ▶ Part No: SSD-D0015SI-5000
2. Fix the SATA disk to the plate using the four screws CZX-M3X5-INOX. Use medium strength threadlocker (recommended torque of 0.4 Nm).
3. Plug the kit (plate and disk) on the VM6250 board, SATA connector (P5)
4. Fix the kit to the VM6250 board using the four screws CZX-M2.5X5-INOX. Use medium strength threadlocker (recommended torque of 0.3 Nm).

3.7.4 PMC Installation

PMC modules are delivered with a full kit of parts for mounting them, and the user guide for the module normally contains instructions on how to fit the module.

The installation of the PMC on the VM6250 conforms to the IEEE P1386.1 standard.

To install the XMC/PMC module, refer to Figure 28 to Figure 32 and follow the steps below:



To avoid ESD damage, wear an antistatic wrist strap to discharge static electricity while performing any part of the installation that involves touching the VM6250 board or the XMC/PMC.


If you can't wear an antistatic wrist strap, touch one hand to the bare metal surface to provide grounding.

1. Place carefully the VM6250 with the backplane connectors facing you on a static dissipative surface connected to a common ground by a low-resistance connection. Do not slide the board over any surface.
2. Remove the blanking plate from the appropriate XMC/PMC slot of the VM6250.
3. Check that the standoffs are attached to the XMC/PMC.
4. Install the XMC/PMC, component-side down, aligning the PCI connectors with their mating connectors on the VM6250 and the XMC connector if available. Press them together so that the friction from the pins holds them together. Insert the standoff plug mounted on the VM6250 into the keyhole. The module's bezel will fill the slot and provide a connection to the module.



As no PMC voltage selection key is provided on the board, make sure not to insert a +5V PMC on the board. Failure to observe this restriction may result in damage to the PMC or the VM6250.

Refer to section 2.9.3 "Signaling Voltage Keying Pin" page 60 for more information on this topic.

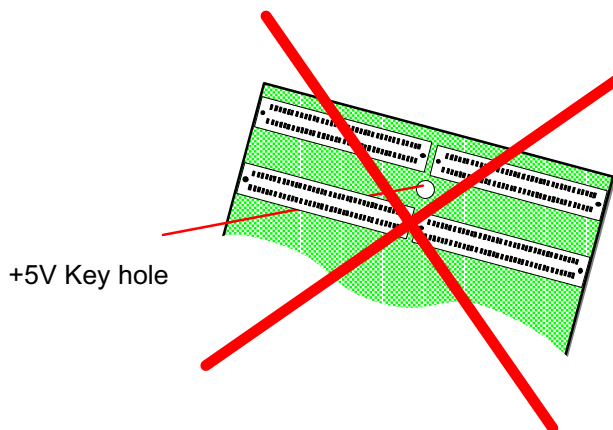

5. Screw the XMC/PMC in place using the 4 mounting points, on the bottom side of the VM6250. You need a Phillips screwdriver for this stage.
6. The XMC/PMC attachment is now complete.
7. Insert the VM6250 into the chassis making sure it is plugged into the backplane.

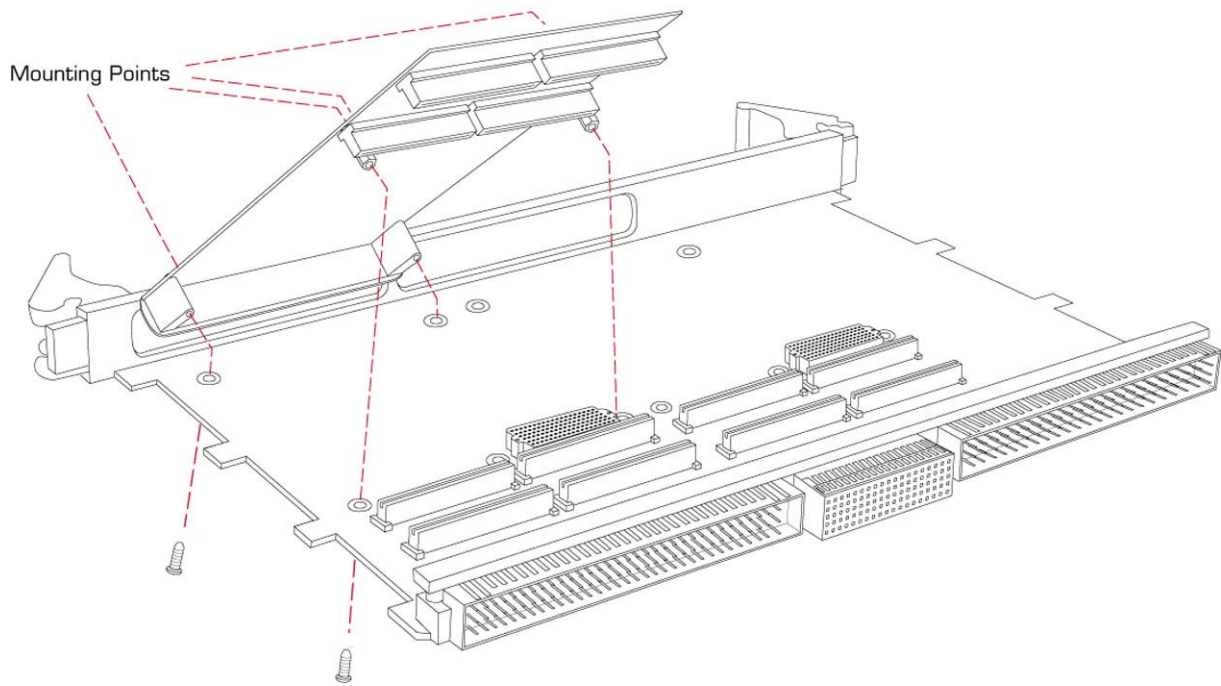


Figure 28: PMC Installation on PMC Site 1

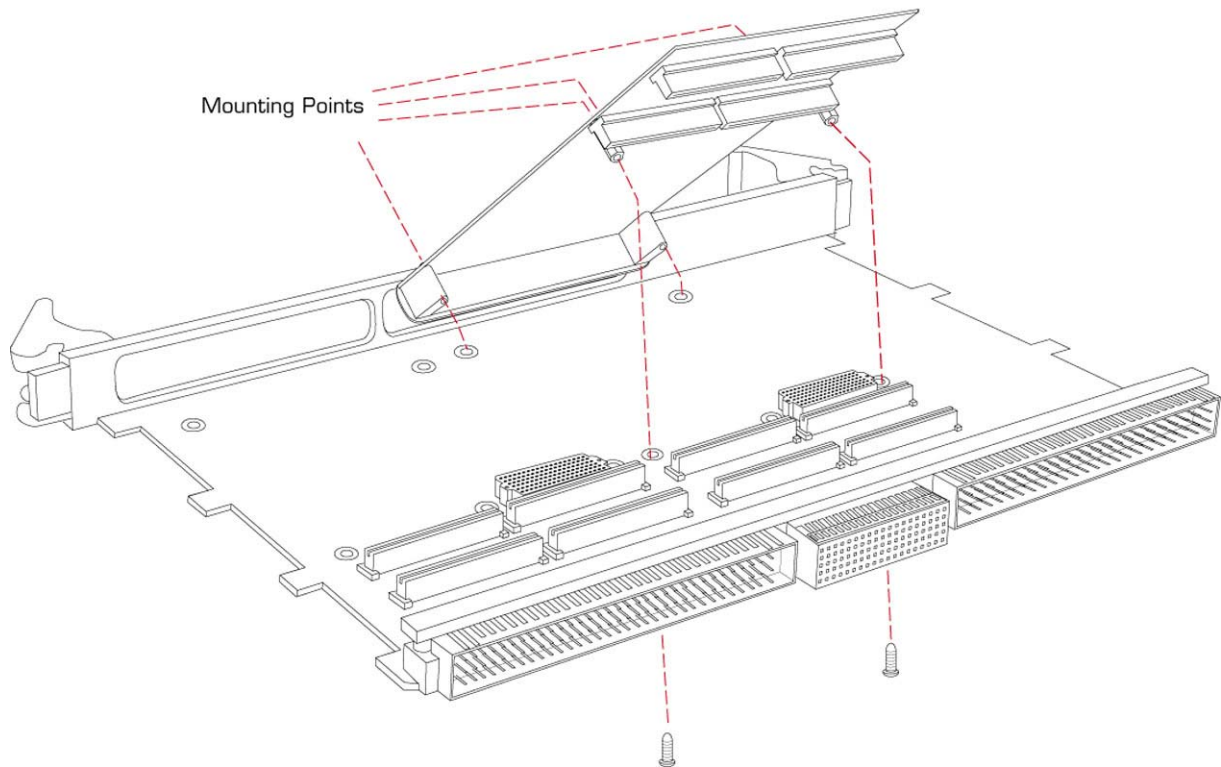


Figure 29: PMC Installation on PMC Site 2

3.7.5 XMC Installation

The XMC board standard is based on the PMC mechanical definition, and occupies the same board area.

The XMC board add one new connector to the connectors already on a PMC. The new connectors support high-speed differential signals for fabric communications.

Figure 30 shows a XMC fitted only with the XMC connector.

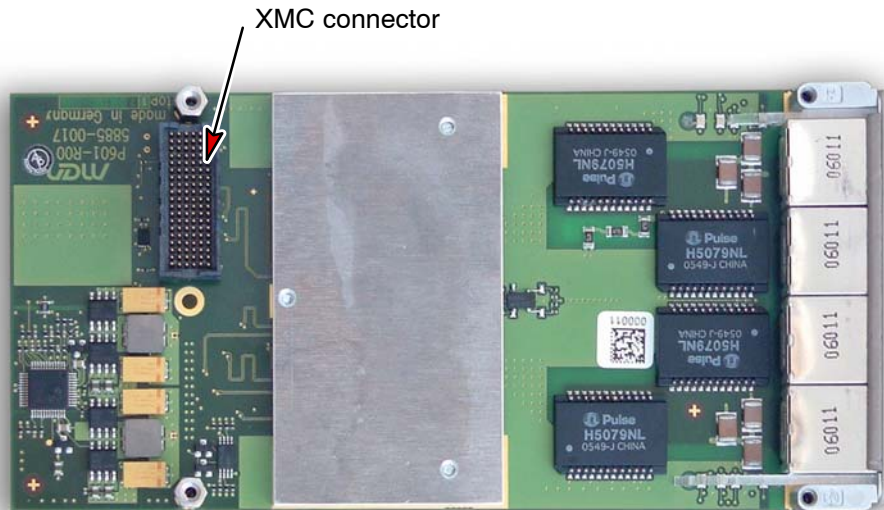


Figure 30: Example of XMC Board

Figure 31 shows a XMC installation on the PMC Site 1.

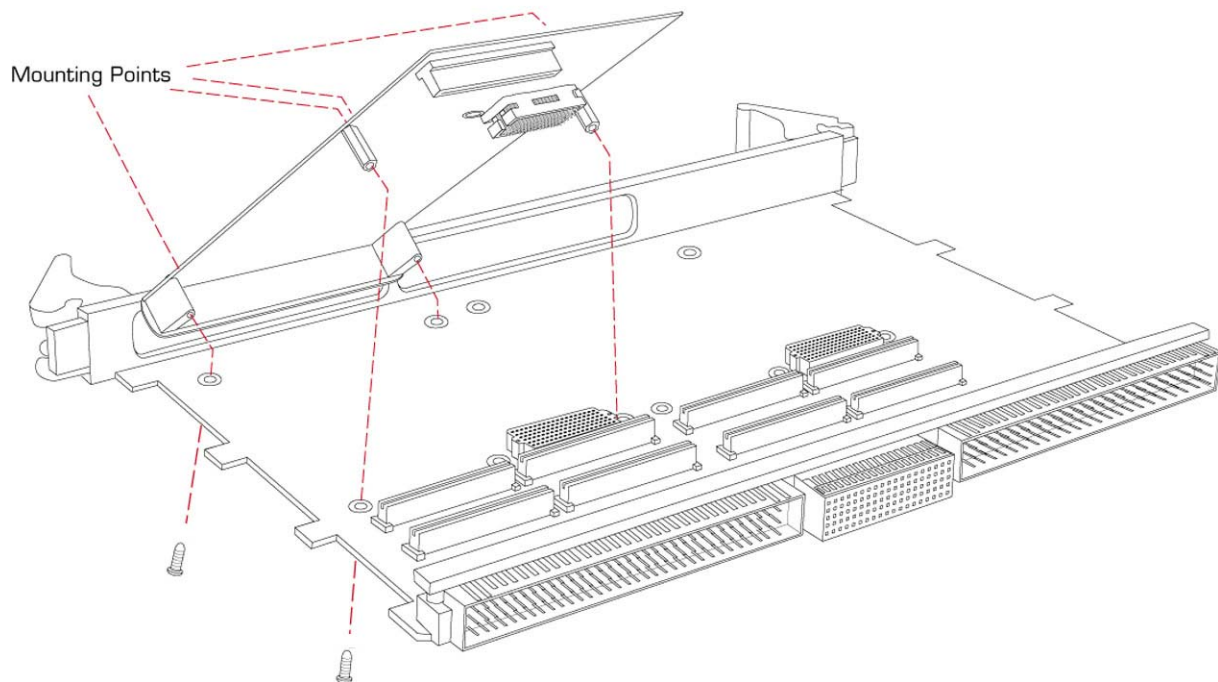


Figure 31: XMC Installation on PMC Site 1

Figure 32 shows a XMC installation on the PMC Site 2.


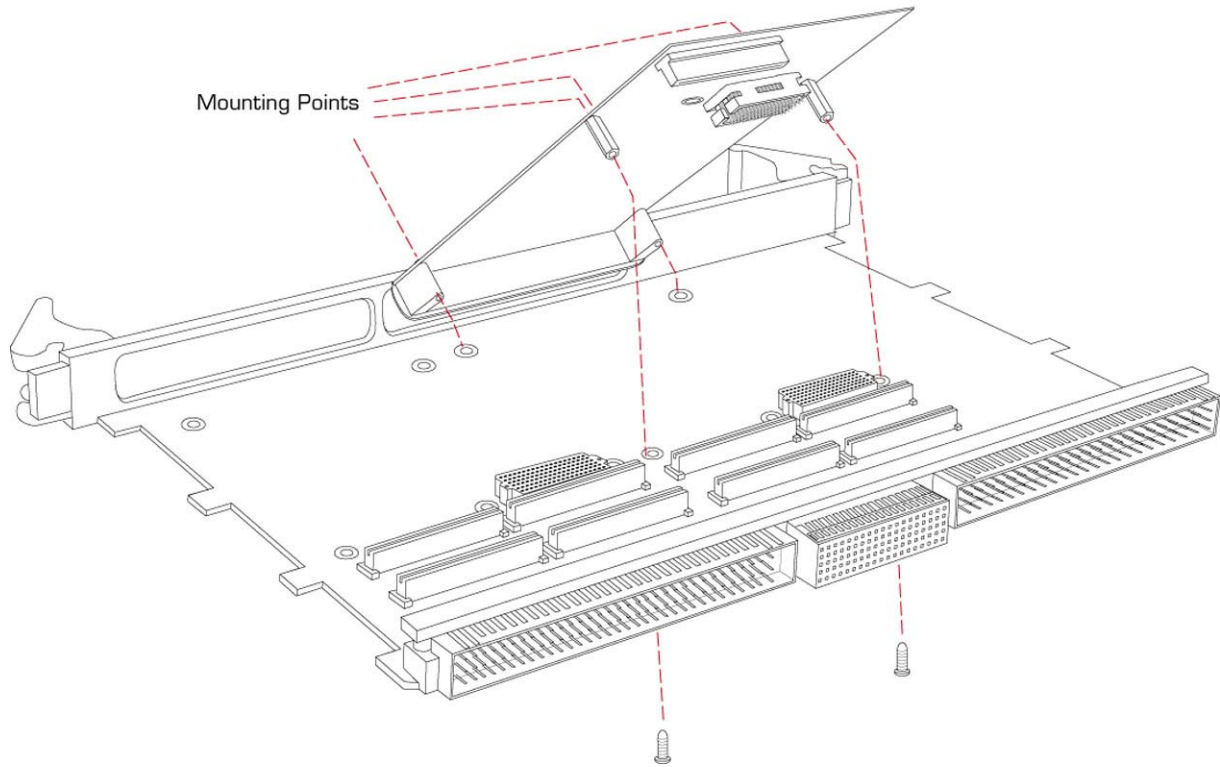


Figure 32: XMC Installation on PMC Site 2

3.7.6 FMC Installation

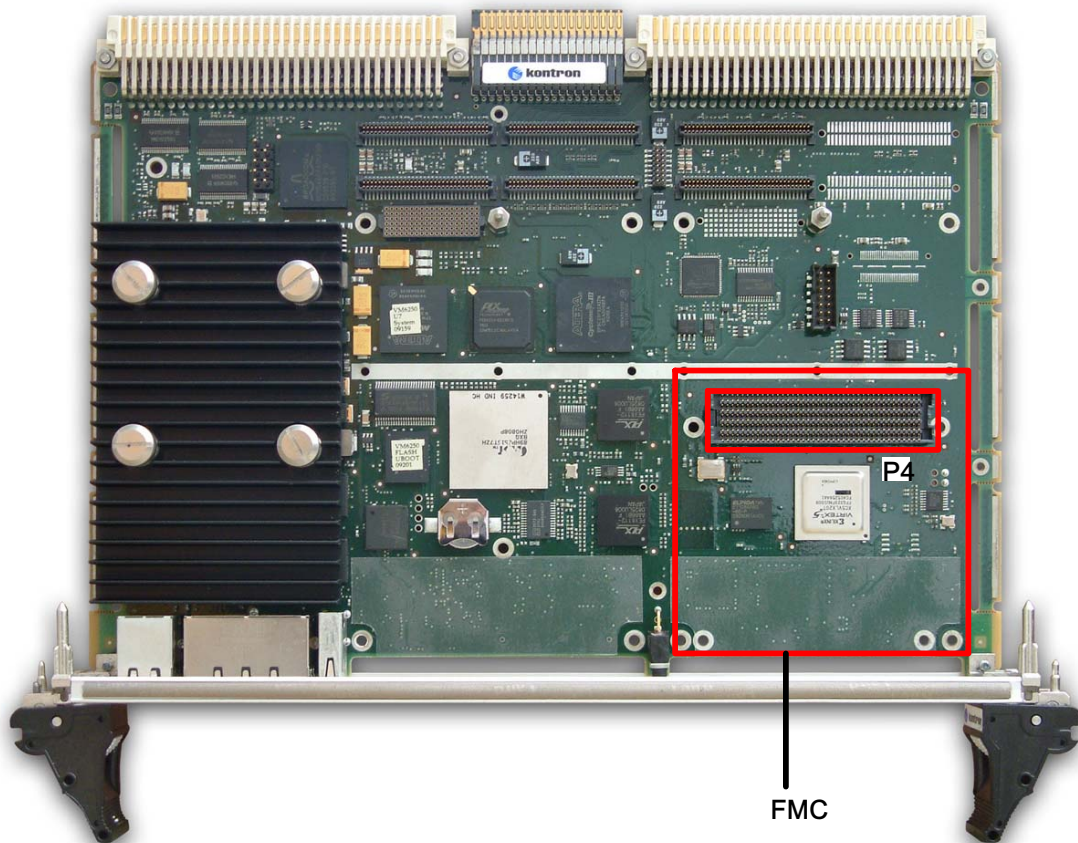

Please, contact Kontron for availability.

FPGA Mezzanine Card, or FMC, as defined in VITA 57, provides a specification describing an I/O mezzanine module with connection to an FPGA or other device with reconfigurable I/O capability.

The FMC mezzanine module uses a high-pin count 400 pin high-speed array connector, HPC.

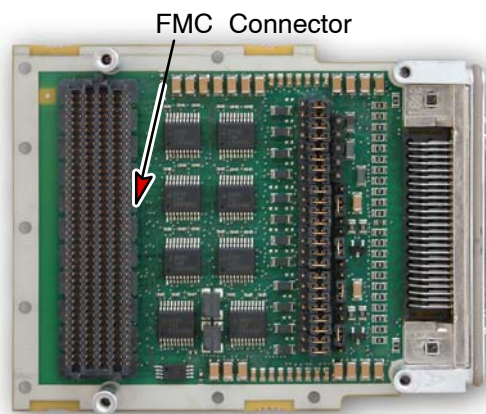


Figure 33: Example of FMC Board

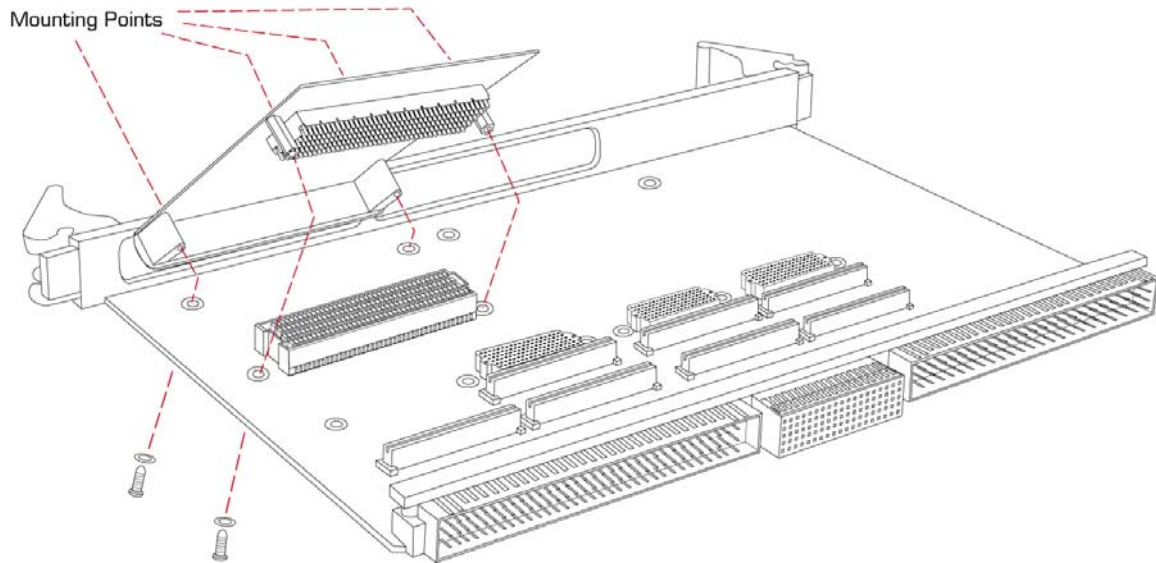


Figure 34: FMC Installation on FMC Site

The installation of the FMC on the VM6250 conforms to the ANSI/VITA 57.1 standard.

To install the FMC module, refer to Figure 34 and follow the steps below:



To avoid ESD damage, wear an antistatic wrist strap to discharge static electricity while performing any part of the installation that involves touching the VM6250 board or the XMC/PMC.

If you can't wear an antistatic wrist strap, touch one hand to the bare metal surface to provide grounding.

1. Place carefully the VM6250 with the backplane connectors facing you on a static dissipative surface connected to a common ground by a low-resistance connection. Do not slide the board over any surface.
2. Remove the blanking plate from the FMC slot of the VM6250.
3. Check that the standoffs are attached to the FMC.
4. Install the FMC, component-side down, aligning the FMC connectors with their mating connectors on the VM6250 and the XMC connector if available. Press them together so that the friction from the pins holds them together. Insert the standoff plug mounted on the VM6250 into the keyhole. The module's bezel will fill the slot and provide a connection to the module.
5. Screw the FMC in place using the 4 mounting points, on the bottom side of the VM6250 . You need a Phillips screwdriver for this stage.
6. The FMC attachment is now complete.
7. Insert the VM6250 into the chassis making sure it is plugged into the backplane.

3.8 Software Installation

The installation of all onboard peripheral drivers is described in detail in the relevant Driver Kit files or Board Support Packages (BSP).

The installation of an operating system is dependent of the OS software and is not addressed in this manual. Refer to appropriate OS software documentation for installation:

- ▶ VM6250 Release Notes Fedora9 SD.DT.F37
- ▶ VM6250 VxWorks BSP User's Guide SD.DT.F44

Chapter 4 - Programming Interface

4.1 Interrupt Routing

The Freescale MPC8641x processor has twelve dedicated interrupt inputs. These interrupts will be used on the VM6250 board according to the following table:

| Pin | Description |
|-------|--------------------------------------|
| IRQ0 | Reserved - PCIe1 INTA |
| IRQ1 | Reserved - PCIe1 INTB |
| IRQ2 | Reserved - PCIe1 INTC |
| IRQ3 | Reserved - PCIe1 INTD |
| IRQ4 | Reserved - PCIe2 INTA |
| IRQ5 | Reserved - PCIe2 INTB |
| IRQ6 | Reserved - PCIe2 INTC |
| IRQ7 | Reserved - PCIe2 INTD |
| IRQ8 | Watchdog Timer |
| IRQ9 | Thermal Alert |
| IRQ10 | GPIO Interrupt |
| IRQ11 | Ethernet PHY Channel 1..4 IRQ Shared |

Table 33: CPU Interrupts

| Device | CPU IRQ0 / INTA | CPU IRQ1 / INTB | CPU IRQ2 / INTC | CPU IRQ3 / INTD |
|------------------|-----------------|-----------------|-----------------|-----------------|
| USB FP/FLASH | INTA | - | - | - |
| USB P0 | - | - | - | INTA |
| SATA | INTD | INTA | INTB | INTC |
| XMC 2 / FPGA I/O | INTC | INTD | INTA | INTB |
| PMC 2 | INTB | INTC | INTD | INTA |
| ALMA2f | INTC | INTD | INTA | INTB |
| XMC 1 / PMC 1 | INTB | INTC | INTD | INTA |

4.2 Chip Select Lines Usage

| Chip Select | Description |
|--------------------|-----------------------|
| CS0 ⁽¹⁾ | Flash Boot 1 |
| CS1 ⁽¹⁾ | Flash Boot 2 |
| CS2 | Not Used |
| CS33 | System CPLD Registers |
| CS4 | NVSRAM Memory |
| CS5 | Not Used |

(1) CS0, CS1 and CS2 device selection can change depending on DIP switches configuration.

Table 34: Chip Select

Chapter 5 - Power and Thermal Considerations

5.1 Power Considerations

5.1.1 System Power

The considerations presented in the ensuing sections must be taken into account by system integrators when specifying the VM6250 system environment.

5.1.1.1 VM6250 Baseboard

The VM6250 board has been designed for optimal power input and distribution. Still it is necessary to observe certain criteria essential for application stability and reliability.

The table below indicates the absolute maximum input voltage ratings that must not be exceeded. Power supplies to be used with the VM6250 should be carefully tested to ensure compliance with these ratings.

| Supply Voltage | Maximum Permitted Voltage |
|-----------------|---------------------------|
| +3.3VDC | +3.6V |
| +5VDC | +6V |
| +12V/-12VDC (1) | +14V/-14V |

(1) if required for mezzanine.

Table 35: Maximum Input Power



The maximum permitted voltage indicated in the table above must not be exceeded. Failure to comply with these figures may result in damage to your board.

The following table specifies the range of the different input power voltages within the board is functional. The VM6250 is not guaranteed to function if the board is not operating within the prescribed limits.

| Input Supply Voltage | Absolute Range |
|----------------------|-----------------------------|
| +3.3V | 3.25V min. to 3.45V max. |
| +5V | 4.875V min to 5.25V max. |
| +12V (1) | 11.64V min. to 12.6V max. |
| -12V (1) | -12.6V min. to -11.64V max. |

(1) if required for mezzanine.

Table 36: DC Operational Input Voltage Ranges

5.1.1.2 Backplane

Backplanes to be used with the VM6250 must be adequately specified. The backplane must provide optimal power distribution for the +3.3V, +5V and +12V power inputs. It is recommended to use only backplanes which have at least two power planes for the +3.3V and +5V voltages.

Input power connections to the backplane itself should be carefully specified to ensure a minimum of power loss and to guarantee operational stability. Long input lines, under dimensioned cabling or bridges, high resistance connections, etc. must be avoided. It is recommended to use Positronic or M-type connector backplanes and power supplies where possible.

5.1.1.3 Power Supply Units

Power supplies for the VM6250 must be specified with enough reserve for the remaining system consumption. In order to guarantee a stable functionality of the system, it is recommended to provide more power than the system requires. An industrial power supply unit should be able to provide at least twice as much power as the entire system requires. An ATX power supply unit should be able to provide at least three times as much power as the entire system requires.

As the design of the VM6250 has been optimized for minimal power consumption, the power supply unit shall be stable even without minimum load.

Where possible, power supplies which support voltage sensing should be used. Depending on the system configuration this may require an appropriate backplane. The power supply should be sufficient to allow for die resistance variations.

» Start-Up Requirements

Power supplies must comply with the following guidelines, in order to be used with the VM6250.

- Beginning at 10% of the nominal output voltage, the voltage must rise within > 0.1 ms to < 20 ms to the specified regulation range of the voltage. Typically: > 5 ms to < 15 ms.
- There must be a smooth and continuous ramp of each DC output voltage from 10% to 90% of the regulation band.
- The slope of the turn-on waveform shall be a positive, almost linear voltage increase and have a value from 0V to nominal V_{out} .

» Power-UP Sequence

The +5 VDC output level must always be equal to or higher than the +3.3 VDC output during power-up and normal operation.

The time from +5 VDC until the output reaches its minimum in regulation level and from +3.3 VDC until the output reaches its minimum in regulation level must be < 20 ms.

» Tolerance

The following table provides information regarding the required characteristics for each board input voltage.

| VOLTAGE | NOMINAL VALUE | TOLERANCE | MAX. RIPPLE (P-P) | REMARKS |
|--------------------------------|--|-----------|-------------------|--------------------------|
| 5V | +5.0 VDC | +5%/-3% | 50 mV | Main voltage |
| 3.3V | +3.3 VDC | +5%/-3% | 50 mV | Main voltage |
| +12V | +12 VDC | +5%/-5% | 240 mV | Required |
| -12V | -12 VDC | +5%/-5% | 240 mV | Not Required |
| V I/O (PCI) singalling voltage | +3.3 VDC or +5 VDC | +5%/-3% | 50 mV | Depends on board version |
| GND | Ground, not directly connected to potential earth (PE) | | | |

Table 37: Input Voltage Characteristics

The output voltage overshoot generated during the application (load changes) or during the removal of the input voltage must be less than 5% of the nominal value. No voltage of reverse polarity may be present on any output during turn-on or turn-off.

» Regulation

The power supply shall be unconditionally stable under line, load, unload and transient load conditions including capacitive loads. The operation of the power supply must be consistent even without the minimum load on all output lines.



If the main power input is switched off, the supply voltages will not go to 0V instantly. It will take a couple of seconds until capacitors are discharged. If the voltage rises again before it went below a certain level, the circuits may enter a latch-up state where even a hard RESET will not help any more. The system must be switched off for at least 3 seconds before it may be switched on again. If problems still occur, turn off the main power for 30 seconds before turning it on again.

5.1.2 Power Consumption

The goal of this description is to provide a method to calculate the power consumption for the VM6250 baseboard and for additional configurations. The processor dissipates the majority of the thermal power.

The power consumption tables below list the voltage and power specifications for the VM6250 board and the VM6250 accessories. The values were measured using an 8-slot passive VME backplane with two power supplies: one for the CPU, and the other for the hard disk.

All measurements were conducted at a temperature of 25°C. The measured values varied, because the power consumption was dependent on processor activity.

5.1.2.1 Real Applications

The following tables indicate the power consumption using real applications with soldered DDR2 SDRAM. The Power Consumption was measured using U-Boot or Linux IDLE Mode.

| POWER | VM6250-1SA24-10110 | VM6250-2SA25-11110 | VM6250-2SA35-11110 | VM6250-2SA45-11110 |
|---------|---|---|---|---|
| Typical | $(2.4A \times 5V) + (4.7A \times 3.3V) = 27W$ | $(3.5A \times 5V) + (5.1A \times 3.3V) = 35W$ | $(4.7A \times 5V) + (5.1A \times 3.3V) = 41W$ | $(5.6A \times 5V) + (5.2A \times 3.3V) = 45W$ |

Table 38: Power Consumption: U_Boot or Linux IDLE Mode

The Power Consumption was measured using Linux with 100% processor load.

| POWER | VM6250-1SA24-10110 | VM6250-2SA25-11110 | VM6250-2SA35-11110 | VM6250-2SA45-11110 |
|---------|---|---|---|---|
| Maximal | $(3.0A \times 5V) + (5.3A \times 3.3V) = 33W$ | $(4.8A \times 5V) + (5.7A \times 3.3V) = 43W$ | $(6.7A \times 5V) + (5.6A \times 3.3V) = 52W$ | $(8.3A \times 5V) + (5.7A \times 3.3V) = 61W$ |

Table 39: Power Consumption: Linux 100% Processor Load

5.2 Thermal Considerations

The following sections provide system integrators with the necessary information to satisfy the thermal and airflow requirements when implementing VM6250 applications.

5.2.1 Thermal Monitoring

To ensure optimal and long-term reliability of the VM6250, all onboard components must remain within the maximum temperature specifications. The most critical components on the VM6250 are the processor and the memory. Operating the VM6250 above the maximum operating limits will result in permanent damage to the board. To ensure functionality at the maximum temperature, the Module Management Controller supports several temperature monitoring and control features.

The VM6250 includes four temperature sensors that are accessible via the Module Management Controller. They are distributed over the complete board to measure the onboard temperature values?

5.2.1.1 Placement of the Temperature Sensors

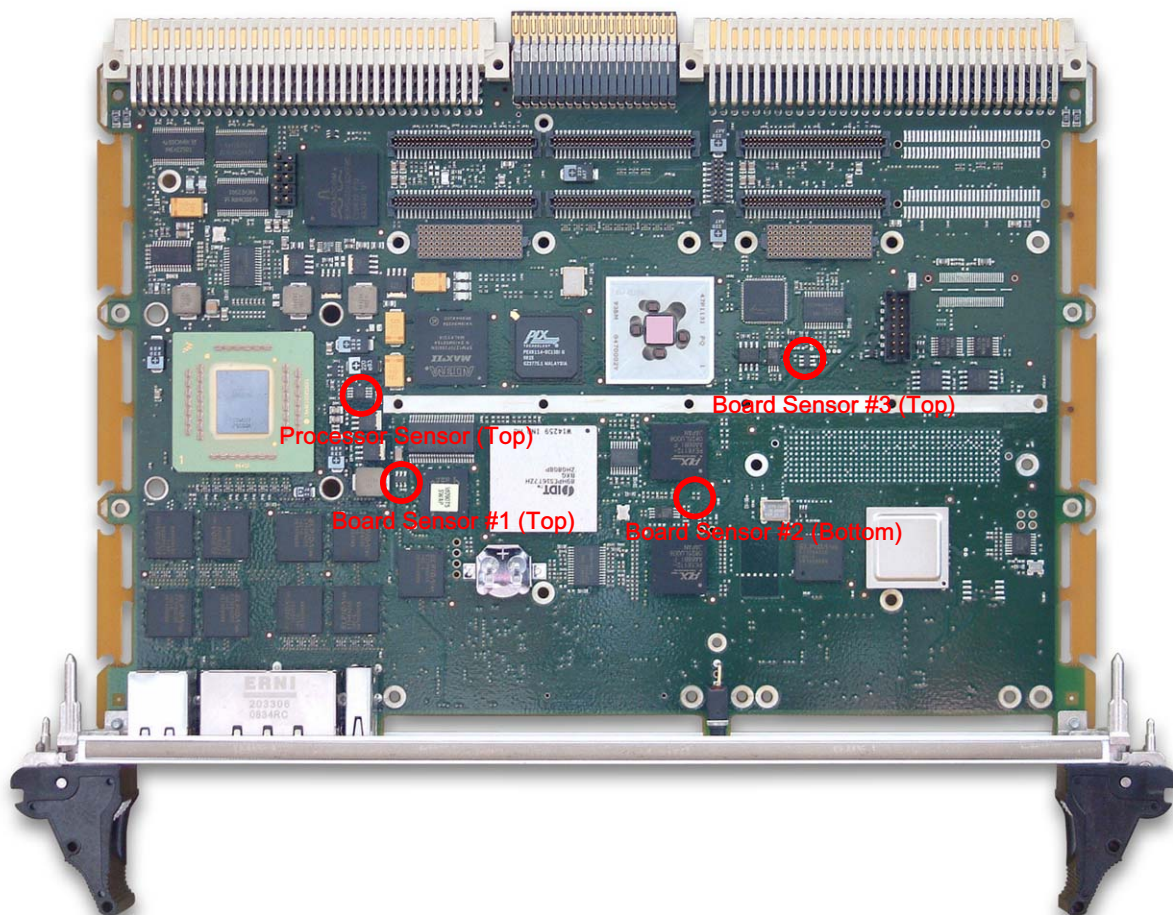


Figure 35: Board Temperature Sensor Placement (Top View)

» Board Thermal Monitoring

The VM6250 includes three board temperature sensors distributed over the complete board to measure the board temperature (see Figure 35 page 84). Board Sensor #1, #2 and #3, respectively with I2C addresses 0x4A, 0x48 and 0x49. Board Sensor #1 and #3 are located on the top side of the board, and Board Sensor #2 on the bottom side of the board.

Key Features:

- > Local temperature accuracy: +/- 2°C
- > Operating temperature: -40°C / 150°C

» Processor Thermal Monitoring

The Freescale MPC864x processor includes one die temperature sensor (Processor Sensor), as illustrated in Figure 35 page 84.

Processor Sensor, with I2C address 0x2B is located on the top side of the board.

Via the Processor Sensor, the Module Management Controller can measure the processor die temperature.

Key Features:

- > Local temperature accuracy: +/- 3°C
- > Remote temperature accuracy: +/- 0.75°C
- > Operating temperature: 0°C / 125°C

This sensor is dedicated to junction processor temperature and checks only maximal Tj temperature.

5.3 CPU Internal Thermal Regulation

The Instruction Cache Throttling mechanism allows for the reduction of the CPU's power consumption and thus the CPU's temperature. This mechanism requires a dedicated software such as a thermal application or an OS daemon. For further information about the Instruction Cache Throttling, refer to the MPC8640/MPC8640D or MPC8641D Integrated Host Processor Family Reference Manual.

5.4 External Thermal Regulation

The external thermal regulation of the VM6250 is realized using a dedicated heat sink in conjunction with a system chassis that provides thermal supervision, controlled system airflow and thermal protection, such as increased airflow, reduced ambient air temperature, or power removal.

The heat sink provided on the VM6250 has been specifically designed to ensure the best possible basis for operational stability and long-term reliability. The physical size, shape and construction of the heat sink ensures the lowest possible thermal resistance.

5.4.1 Air Flow Direction

» Air Flow from PMC Slots to CPU Area

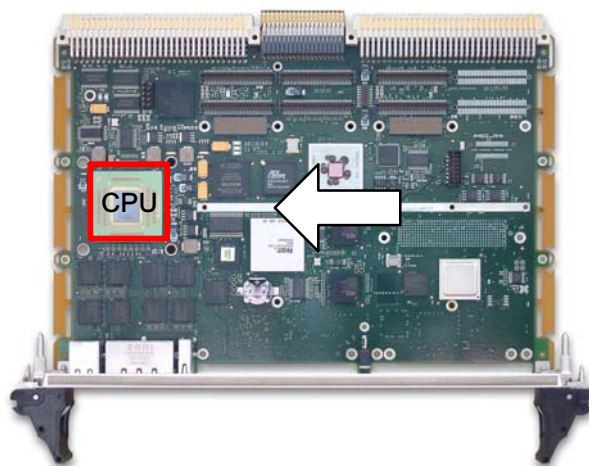


Figure 36: Air Flow from PMC Slots to CPU Area

» Air Flow from CPU Area to PMC Slots

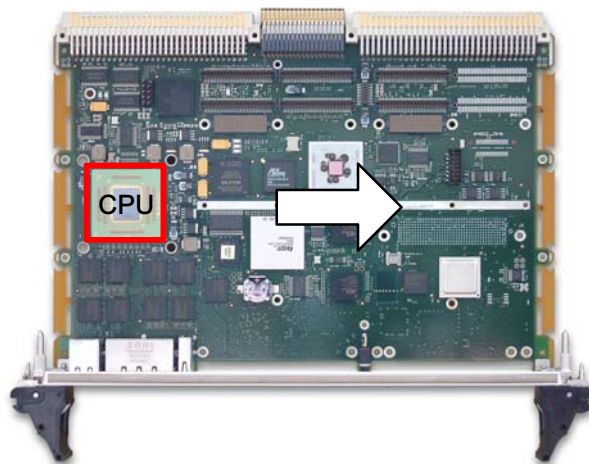


Figure 37: Air Flow from CPU Area to PMC Slots

5.4.2 Thermal Functional Point

Following table sums up air flow and air speed conditions for several VM6250 processor version. These measures are made for a CPU junction temperature (T_j) of 105°C, an ambient temperature of 55°C for SA boards, 65°C for WA boards.

» Air-cooled (SA) Boards

| Order Code | PCM Sites | Air Speed T_j 105°C (m/s) | Air Flow T_j 105°C (m ³ /s) | Air Flow T_j 105°C (cfm) |
|--------------------|----------------------------|-----------------------------------|--|----------------------------------|
| VM6250-1SA24-10110 | No PMCs No SATA HDD | 1.2 | 0.0061 | 12.9 |
| VM6250-2SA25-11110 | | 1.3 | 0.0066 | 14.0 |
| VM6250-2SA35-11110 | | 1.7 | 0.0086 | 18.2 |
| VM6250-2SA45-11110 | | 2.0 | 0.0101 | 21.5 |
| VM6250-1SA24-10110 | Two SBS PMC Gigabit-DT2 | 2.0 | 0.0066 | 14.0 |
| VM6250-2SA25-11110 | | 3.0 | 0.0076 | 16.1 |
| VM6250-2SA45-11110 | | 3.5 | 0.0120 | 25.6 |

Table 40: Air Speed and Air Flow Measurements for SA Boards

» Air-cooled Extended Temperature (WA) Boards

| Order Code | PCM Sites | Air Speed T_j 105°C (m/s) | Air Flow T_j 105°C (m ³ /s) | Air Flow T_j 105°C (cfm) |
|--------------------|----------------------------|-----------------------------------|--|----------------------------------|
| VM6250-1WA24-10110 | No PMCs No SATA HDD | 2.0 | 0.0101 | 21.5 |
| VM6250-2WA25-11110 | | 2.1 | 0.0105 | 22.4 |
| VM6250-2WA35-11110 | | 2.5 | 0.0125 | 26.7 |
| VM6250-1WA24-10110 | Two SBS PMC Gigabit-DT2 | 2.2 | 0.0110 | 23.5 |
| VM6250-2WA25-11110 | | 2.3 | 0.0116 | 24.6 |
| VM6250-2WA35-11110 | | 3.0 | 0.0151 | 32.3 |

Table 41: Air Speed and Air Flow Measurements for WA Boards

Following curve shows maximum acceptable temperature for the junction temperature of the processor in following configuration:

| | | |
|--------|--------------------|--|
| VM6250 | VM6250-2SA25-11110 | 8640D 1 GHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |
| VM6250 | VM6250-2WA25-11110 | 8640D 1 GHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |

with no PMC fitted on the PMC slots.

For instance,

- ▶ at 55°C, minimum air flow needed to cool enough the processor die is about 1.3 m/s.
- ▶ at 65°C, minimum air flow needed to cool enough the processor die is about 2.1 m/s.



Measurements have been made with the two air flow direction (from PMC slots to CPU area and from CPU area to PMC slots).

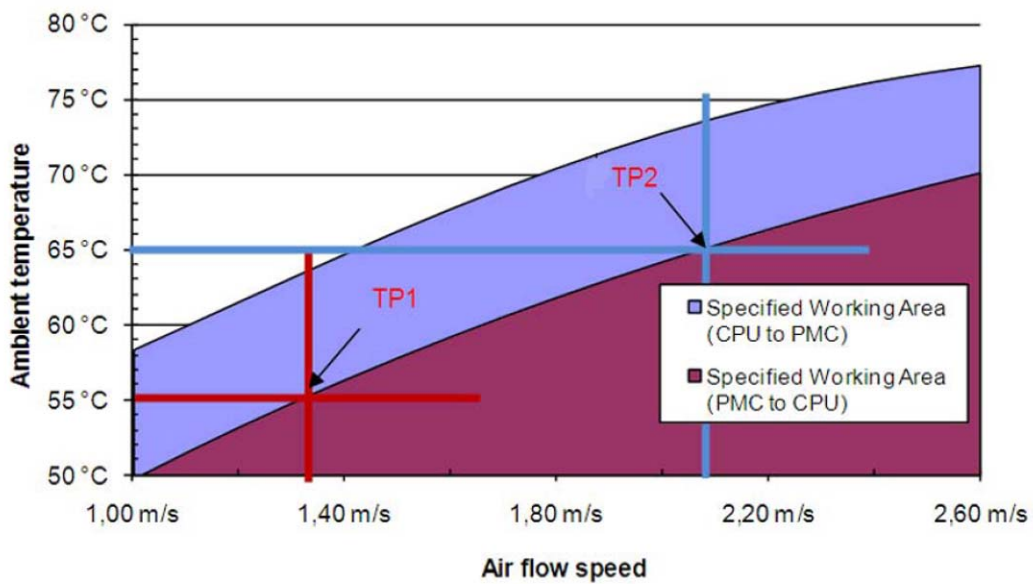


Figure 38: VM6250-SA/WA Thermal Performance: No PMC fitted

Following curve shows maximum acceptable temperature for the junction temperature of the processor in following configuration:

| | | |
|--------|--------------------|--|
| VM6250 | VM6250-2SA25-11110 | 8640D 1 GHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |
| VM6250 | VM6250-2WA25-11110 | 8640D 1 GHz 2GB DDR2 SDRAM 128K NVRAM 2x PMC/XMC |

with one PMC fitted on each PMC slot.

For instance,

- ▶ at 55°C, minimum air flow needed to cool enough the processor die is about 1.5 m/s.
- ▶ at 65°C, minimum air flow needed to cool enough the processor die is about 2.3 m/s.



Measurements have been made with the two air flow direction (from PMC slots to CPU area and from CPU area to PMC slots).

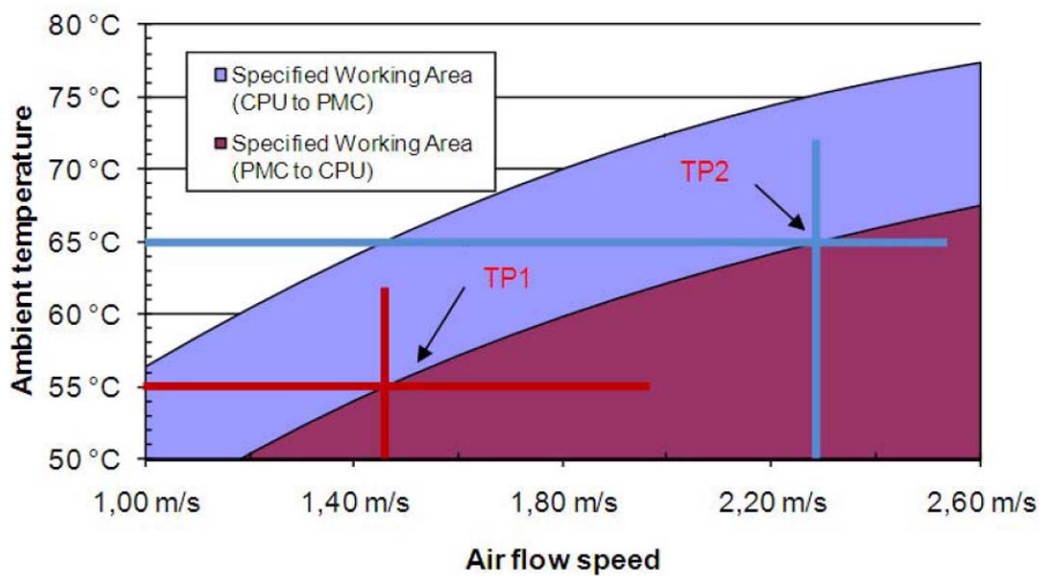


Figure 39: VM6250-SA/WA Thermal Performance: PMCs fitted

Chapter 6 - VM6250-RTM Characteristics

The VM6250-RTM (Order Code: PBV36-P0-VM6-00 rear transition module is compliant to PMC I/O Module Standard VITA 36 - 199x Draft 0.1 July 19, 1999 (mechanical and PIM format).

The main functionalities of the VM6250-RTM rear transition module are:

- Two 10/100/1000BASE-T Ethernet interface, **H1** and **H2** connectors on Figure 40
- One USB connector, **H4** on Figure 40
- One SMB connector, **H5** on Figure 40
- Two Serial lines ports available on two HE10 connectors (**H7**, **H8** on Figure 40)
- Three GPIOs signals available through an HE10 connector, **H9** connector on Figure 40
- Two Serial ATA connectors, **H10** and **H11** connector on Figure 40
- One PCI Express connector, **H12** connector on Figure 40
- PMC Site 1[64:1] I/O routed to **J14[32:1]** connector from **RP2** connector
- PMC Site 2[64:1] I/O routed to **J24[32:1]** connector from **RP2** connector (only on PBV36-P0-VM6-00 Rev. C)

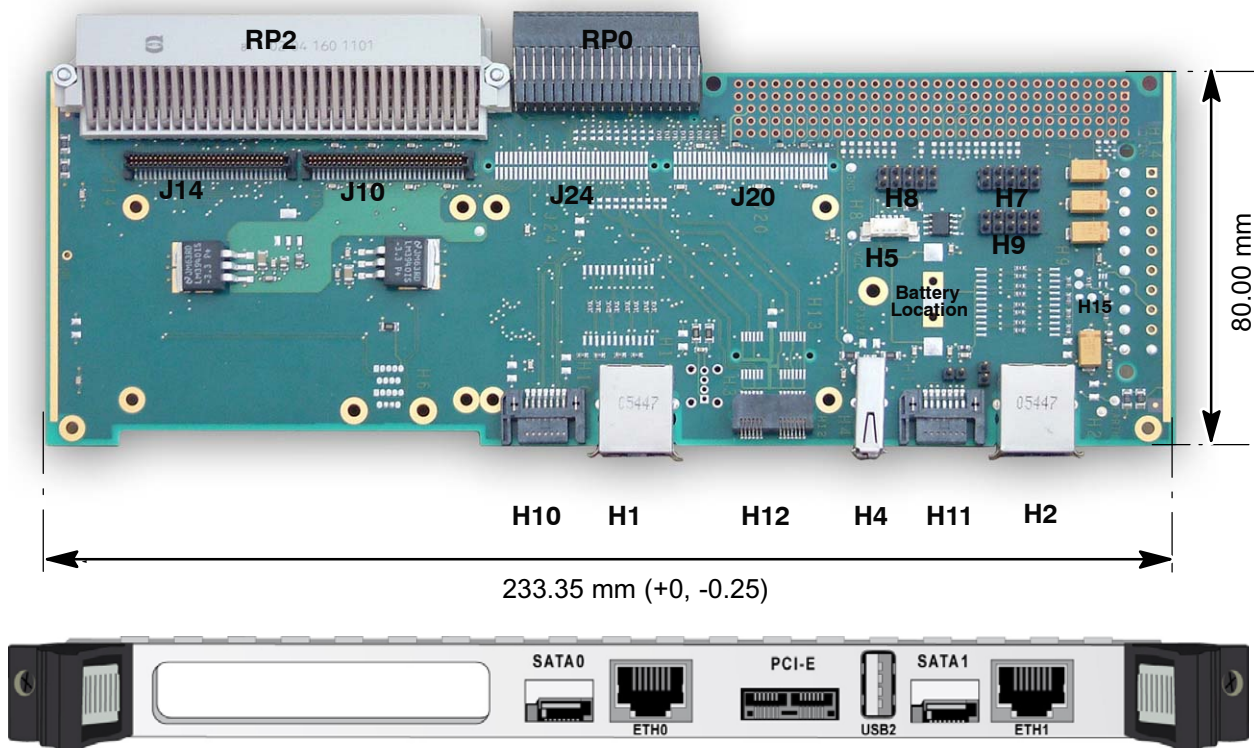


Figure 40: PBV36-P0-VM6-00 Module Overview

6.1 Installation of the Rear Transition Module

The VM6250-RTM module is designed to be used with a VME64 extensions backplane. Each slot in the backplane contains two 160-pin connectors and one connector with 95 user-defined pins. The top connector in each slot is designed J1, the middle connector is J0 and the bottom connector is J2.

The VM6250 rear transition module plugs into the J0, J1 and J2 connectors, on the back side of the VMEbus backplane, in the same slot as the VM6250 board (see Figure 41).

To install the rear transition module:

1. Make sure the system and peripheral equipment power are off.
2. Install the cables into the appropriate connectors on the transition module (see section 6.2 page 92).
3. Line-up the RP0 and RP2 connectors (also named P0 and P2 in this chapter) on the rear transition module with the J0 and J2 connectors on the backplane.
4. Press the outer edge of the transition module until the board is firmly seated in the connector.
5. Connect any additional cables.
6. Turn on system power.

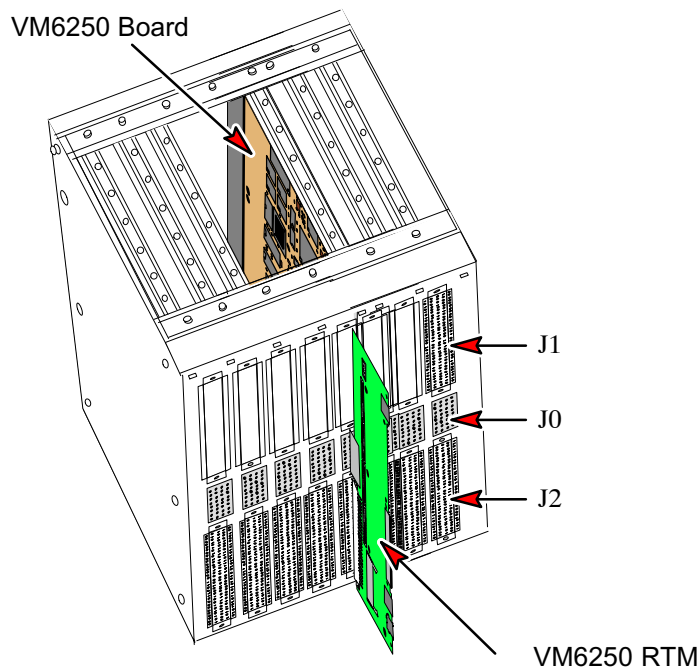


Figure 41: Installing the VM6250-RTM

6.2 Connectors

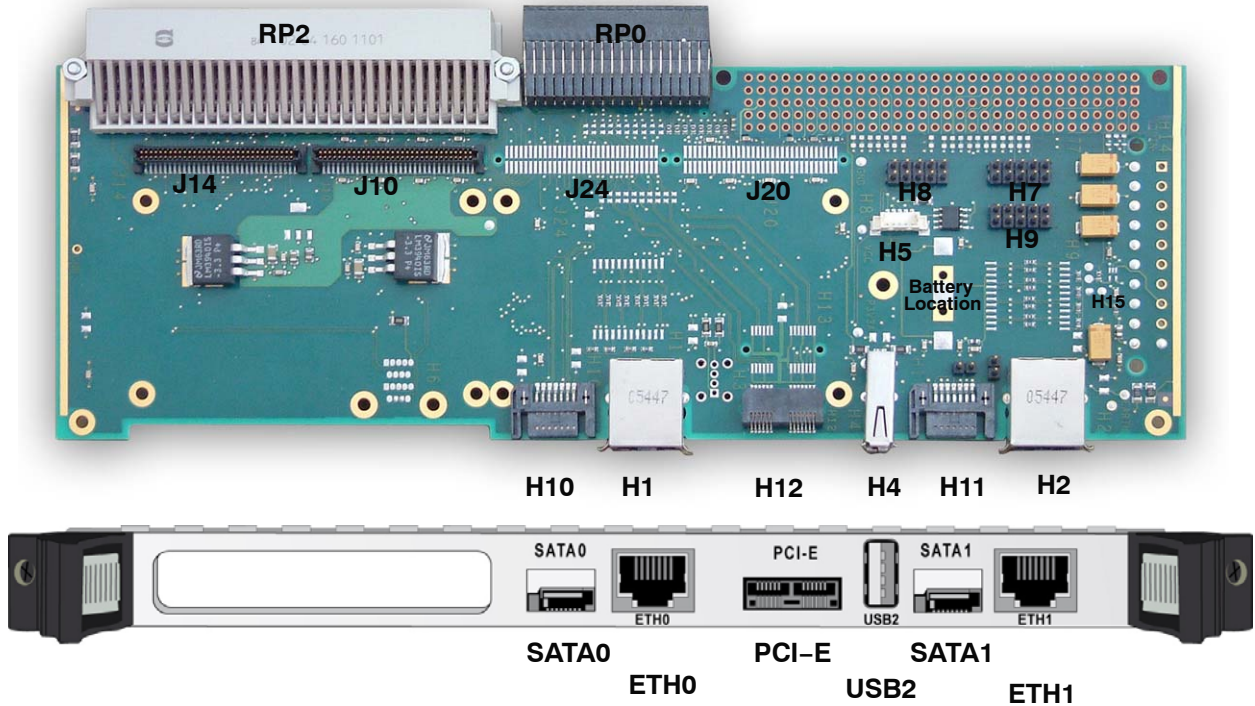


Figure 42: VM6250-RTM Connectors Location

6.2.1 RP0 Connector Pin Assignment

The RP0 connector has the same pin assignment as the P0 connector of the VM6250 board.

Refer to the "VME Bus Interface - P0 Connector" in section 2.8.5 page 42 for a complete information about the pin assignments of the RP0 connector.

6.2.2 RP2 Connector Pin Assignment

The RP2 connector has the same pin assignment as the P2 connector of the VM6250 board.

Refer to the "VME Bus Interface - P2 Connector" in section 2.8.7 page 48 for a complete information about the pin assignments of the RP2 connector.

6.2.3 H1 (ETHERNET 0) & H2 (ETHERNET 1) - Gigabit ETHERNET Connector

Routed from P0 to **H1** and **H2**, RJ-45 connectors (AMP - Part Number 106066-2).


Available through the **ETH0** and **ETH1** RTM front panel connectors.

» Connector Pin Assignment

Type of Connector

| Pin | Signal | Pin | Signal |
|-----|----------------|-----|------------|
| 1 | BI_DA+ | 2 | BI_DA- |
| 3 | BI_DB+ | 4 | BI_DC+ (*) |
| 5 | BI_DC- (*) | 6 | BI_DB- |
| 7 | BI_DD+ (*) | 8 | BI_DD- (*) |
| 9 | Chassis Ground | | |

H1 or H2

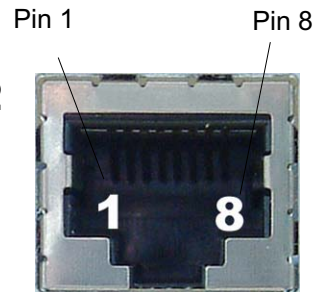

(*) : In 10BASE-T or 100BASE-T these signals are not used.

» Signal Description

| Mnemonic | Signal Description |
|----------|--|
| BI_DA+/- | In 1000BASE-T: First pair of Transmit/receive data In 10BASE-T/100BASE-T: Pair of Transmit data |
| BI_DB+/- | In 1000BASE-T: Second pair of Transmit/receive data In 10BASE-T/100BASE-T: Pair of Receive data |
| BI_DC+/- | In 1000BASE-T: Third pair of Transmit/receive data In 10BASE-T/100BASE-T: Unused. |
| BI_DD+/- | In 1000BASE-T: Fourth pair of Transmit/receive data In 10BASE-T/100BASE-T: Unused. |

6.2.4 H4 (USB1) - USB Connector


Routed from P0 to **H4**, a vertical USB connector.

Available through the **USB** RTM front panel connectors.

» Connector Pin Assignment

| Pin | Signal |
|------|------------|
| 1 | +5 V Fused |
| 2 | USB1 DATA- |
| 3 | USB1 DATA+ |
| 4 | GND |
| CASE | M GND |

Type of Connector

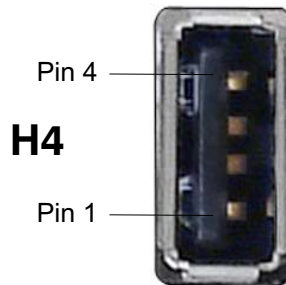


6.2.5 H5 - SMB Connector

Routed from P1 to **H5** (MOLEX - Part Number 53398-0590)

» Connector Pin Assignment

| Pin | Signal |
|-----|------------|
| 1 | SMB_SCL |
| 2 | GND |
| 3 | SMB_SDA |
| 4 | N.C. |
| 5 | SMB_ALERT# |

Type of Connector

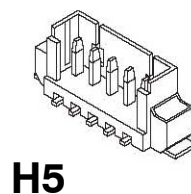

» Signal Description

| Mnemonic | Signal | Description |
|-----------|--|-------------|
| GND | Ground | |
| N.C. | Not Connected | |
| SMB_ALERT | System Management Bus - Alert | |
| SMB_SCL | System Management Bus - Serial clock line from the SMBus master to SMBus slave devices. | |
| SMB_SDA | System Management Bus - Bi-directional serial data line between the SMBus master and the SMBus slave device. | |

6.2.6 H7 (S0/COM1) & H8 (S1/COM2) - SERIAL Connector

Routed from P2 to **H7** and **H8**; individual 10-pin HE10 connectors



A serial line should only be used via one connector at the same time, either the Serial front panel connector or the P2 connector.

» H7 Connector Pin Assignment

» H8 Connector Pin Assignment

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | N.C. | 2 | S0_RX |
| 3 | S0_TX | 4 | N.C. |
| 5 | GND | 6 | N.C. |
| 7 | N.C. | 8 | N.C. |
| 9 | N.C. | 10 | N.C. |


| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | N.C. | 2 | S1_RX |
| 3 | S1_TX | 4 | N.C. |
| 5 | GND | 6 | N.C. |
| 7 | N.C. | 8 | N.C. |
| 9 | N.C. | 10 | N.C. |

» Signal Description

| Mnemonic | Signal Description |
|--------------------|--|
| GND | Ground |
| N.C. | Not Connected |
| S _x _RX | Channel EIA-232 <i>x</i> Receive Data |
| S _x _TX | Channel EIA-232 <i>x</i> Transmit Data |

» Type of Connector

Right angle HE10 10-pin connector, male, with board lock.

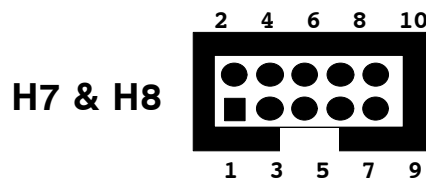

The H7 and H8 connectors can be connected via a NULL MODEM adapter on a VT100 console.

6.2.7 H9 - GPIOs and MISC Signals


Routed from P0 to **H9**; individual 10 pins HE10 connector.

» Connector Pin Assignment

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | GPIO1 | 2 | N.C. |
| 3 | GPIO2 | 4 | N.C. |
| 5 | GPIO3 | 6 | N.C. |
| 7 | N.C. | 8 | GND |
| 9 | N.C. | 10 | GND |

Type of Connector

Right angle HE10 10-pin connector, male, with board lock.

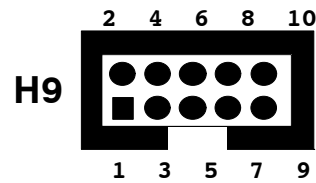

» Signal Meaning

| Mnemonic | Signal Description |
|-------------------|-------------------------|
| GPIO _x | GPIO <i>x</i> from cPLD |
| GND | Ground |
| N.C. | Not Connected |

6.2.8 H10 (SATA0) and H11 (SATA1) - Serial ATA Connector

Routed from P0 to **H10** and **H11**; SATA connector, right angle version with metal latch (MOLEX - Part Number 47080-4001)

Available through the **SATA0** and **SATA1** RTM front panel connectors.



Depending on the SATA manufacturing option of the associated VM6250 board:


- Two SATA devices are available through the SATA0 and SATA1 RTM front panel connectors: SATA on P0 manufacturing option.

- Only one SATA device is available through the SATA0 RTM front panel connectors: SATA onboard manufacturing option.

» Connector Pin Assignment

| Pin | Signal | Pin | Signal |
|-----|-----------------------|-----|-----------------------|
| 1 | GND | 2 | SATA _x TX+ |
| 3 | SATA _x TX- | 4 | GND |
| 5 | SATA _x RX- | 6 | SATA _x RX+ |
| 7 | GND | | |

Type of Connector

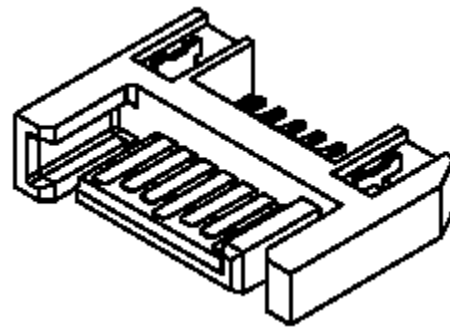

» Signal Description

| Mnemonic | Signal Description |
|---------------------------|----------------------------------|
| GND | Ground |
| SATA _x RX+/RX- | Serial ATA <i>x</i> Receive +/- |
| SATA _x TX+/TX- | Serial ATA <i>x</i> Transmit +/- |

6.2.9 H12 - PCI Express Connector

Routed from P0 connector to **H12**, a 26-pin right angle connector (SAMTEC - Order Code MEC8-RA)

Available through the **PCI-E** RTM front panel connectors.

» Connector Pin Assignment

Type of Connector

| Pin | Signal | Pin | Signal |
|-----|-----------|-----|-----------|
| 1 | GND | 2 | GND |
| 3 | PEX RXL0+ | 4 | PEX TXL0+ |
| 5 | PEX RXL0- | 6 | PEX TXL0- |
| 7 | GND | 8 | GND |
| 9 | PEX RX1L+ | 10 | PEX TXL1+ |
| 11 | PEX RXL1- | 12 | PEX TXL1- |
| 13 | GND | 14 | GND |
| 15 | PEX RXL2+ | 16 | PEX TXL2+ |
| 17 | PEX RXL2- | 18 | PEX TXL2- |
| 19 | GND | 20 | GND |
| 21 | PEX RXL3+ | 22 | PEX TXL3+ |
| 23 | PEX RXL3- | 24 | PEX TXL3- |
| 25 | GND | 26 | GND |



» Signal Meaning

| Mnemonic | Signal Description |
|------------------|---|
| PEX RXL[0..3]+/- | x4 PCI Express Link - Differential Receive Lane [0..3] |
| PEX TXL[0..3]+/- | x4 PCI Express Link - Differential Transmit Lane [0..3] |
| GND | Ground |

6.2.10 PCI 64 PIM Site 1 Connector

» J14 Connector Pin Assignment

| Pin | Signal | Pin | Signal |
|-----|-------------|-----|-------------|
| 1 | PMC64 IO 01 | 2 | PMC64 IO 02 |
| ... | ... | ... | ... |
| 63 | PMC64 IO 63 | 64 | PMC64 IO 64 |

» Signal Description

| Mnemonic | Signal Description |
|--------------------|--|
| PMC64 IO <i>xx</i> | I/O 01 through 64 of the motherboard PMC: J14[01 ... 64] for PMC Site 1 |
| N.C. | Not Connected |

» Known Limitations

- ▶ 4.8 mm high components have been placed under PIM site 1. This transgresses the VITA 36 standard which specifies 2.5 mm. Some PIMs may not fit in this site.

» J10 Connector Pin Assignment

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | N.C. | 2 | N.C. |
| 3 | N.C. | 4 | N.C. |
| 5 | +5V | 6 | N.C. |
| 7 | N.C. | 8 | N.C. |
| 9 | N.C. | 10 | +3.3V |
| 11 | N.C. | 12 | N.C. |
| 13 | GND | 14 | N.C. |
| 15 | N.C. | 16 | N.C. |
| 17 | N.C. | 18 | GND |
| 19 | N.C. | 20 | N.C. |
| 21 | +5V | 22 | N.C. |
| 23 | N.C. | 24 | N.C. |
| 25 | N.C. | 26 | +3.3V |
| 27 | N.C. | 28 | N.C. |
| 29 | GND | 30 | N.C. |
| 31 | N.C. | 32 | N.C. |
| 33 | N.C. | 34 | GND |
| 35 | N.C. | 36 | N.C. |
| 37 | +5V | 38 | N.C. |
| 39 | N.C. | 40 | N.C. |
| 41 | N.C. | 42 | +3.3V |
| 43 | N.C. | 44 | N.C. |
| 45 | GND | 46 | N.C. |
| 47 | N.C. | 48 | N.C. |
| 49 | N.C. | 50 | GND |
| 51 | N.C. | 52 | N.C. |
| 53 | +5V | 54 | N.C. |
| 55 | N.C. | 56 | N.C. |
| 57 | N.C. | 58 | +3.3V |
| 59 | N.C. | 60 | N.C. |
| 61 | N.C. | 62 | N.C. |
| 63 | N.C. | 64 | N.C. |

6.2.11 PCI 64 PIM Site 2 Connector



Up to PBV36-P0-VM6-00 Rev. C, the pinout of J20 and J24 connectors is reserved. If available, do not try to use these connectors.



From PBV36-P0-VM6-00 Rev. C, the pinout of the J20 and J24 connectors is available. See sections J24 and J20 Connector Pin Assignment below.



Installation of a PIM on the Site 2 of a PBV36-P0-VM6-00 Rev C. requires specific adjustments:
 - removing H10 (SATA0), H1 (ETH0) and H12 (PCI-E) connector on the RTM,
 - usage of a RTM specific front panel.

Contact your Kontron representative for more information on this topic.

» J24 Connector Pin Assignment

| Pin | Signal | Pin | Signal |
|-----|-------------|-----|-------------|
| 1 | PMC64 IO 01 | 2 | PMC64 IO 02 |
| ... | ... | ... | ... |
| 63 | PMC64 IO 63 | 64 | PMC64 IO 64 |

» Signal Description

| Mnemonic | Signal Description |
|--------------------|--|
| PMC64 IO <i>xx</i> | I/O 01 through 64 of the motherboard PMC: J24[01 ... 64] for PMC Site 2 |
| N.C. | Not Connected |

» Known Limitations

- ▶ The RTM does not include the 3 mm recess at the rear card edge on the area of PIM Site as required by VITA 36 standard. This may require removal or loosening of the rear panel in order to remove and install a PIM at Site 2.

» J20 Connector Pin Assignment

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | N.C. | 2 | N.C. |
| 3 | N.C. | 4 | N.C. |
| 5 | +5V | 6 | N.C. |
| 7 | N.C. | 8 | N.C. |
| 9 | N.C. | 10 | +3.3V |
| 11 | N.C. | 12 | N.C. |
| 13 | GND | 14 | N.C. |
| 15 | N.C. | 16 | N.C. |
| 17 | N.C. | 18 | GND |
| 19 | N.C. | 20 | N.C. |
| 21 | +5V | 22 | N.C. |
| 23 | N.C. | 24 | N.C. |
| 25 | N.C. | 26 | +3.3V |
| 27 | N.C. | 28 | N.C. |
| 29 | GND | 30 | N.C. |
| 31 | N.C. | 32 | N.C. |
| 33 | N.C. | 34 | GND |
| 35 | N.C. | 36 | N.C. |
| 37 | +5V | 38 | N.C. |
| 39 | N.C. | 40 | N.C. |
| 41 | N.C. | 42 | +3.3V |
| 43 | N.C. | 44 | N.C. |
| 45 | GND | 46 | N.C. |
| 47 | N.C. | 48 | N.C. |
| 49 | N.C. | 50 | GND |
| 51 | N.C. | 52 | N.C. |
| 53 | +5V | 54 | N.C. |
| 55 | N.C. | 56 | N.C. |
| 57 | N.C. | 58 | +3.3V |
| 59 | N.C. | 60 | N.C. |
| 61 | N.C. | 62 | N.C. |
| 63 | N.C. | 64 | N.C. |

6.2.12 Reset

The front panel reset toggle switch can be set to the RESET position to generate an hard reset.

6.2.13 Mechanical Ground

One HE10 2-pin connector is placed on the board to allow to hard connect electrical (GND) and mechanical (EARTH) grounds.

While adding a jumper on connector, both ground signals are tighten together.

» H15 Connector Pin Assignment

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | EARTH | 2 | GND |

» Signal Meaning

| Mnemonic | Signal Description |
|----------|--------------------|
| EARTH | Electrical Ground |
| GND | Mechanical Ground |


A metalized mechanical hole (3mm diameter) is located on the board to allow to fix an electrical pod in order to bring the mechanical ground from the chassis.

6.2.14 Power Supplies

- Two 800 mAmp voltage regulators are used on the board to provide 3.3V power supply to each PIM site.
- A standard lithium battery to supply CPU board's RTC is also available.

6.3 Cables

6.3.1 SATA Cable

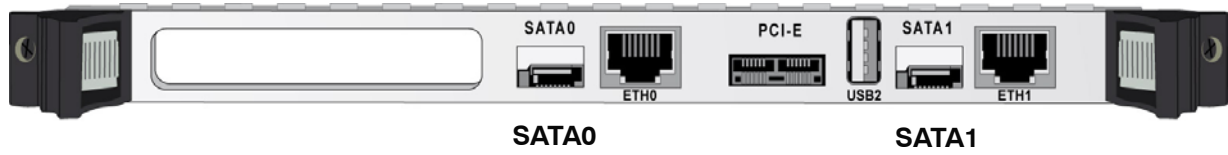


Serial ATA standard cable



Figure 43: Serial ATA Cable

6.3.2 Ethernet Cable

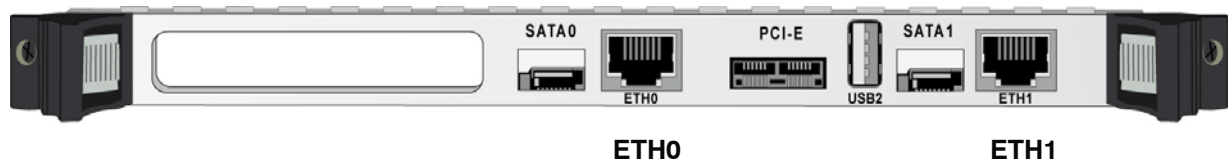

Gigabit Ethernet standard cable:
1000BASE-T requires category 5e, 5+ or 6 copper cable, with a maximal length of 100m for an UTP or FTP cable, and 150m for a STP or FSTP cable.

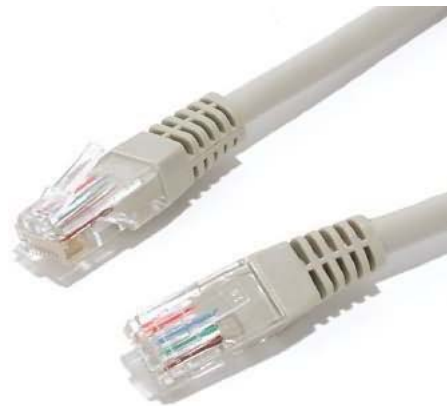



Figure 44: Gigabit Ethernet Cable

6.3.3 PCI-Express Cable



Please contact your Kontron representative for more information on this topic.

6.3.4 USB 2.0 Cable

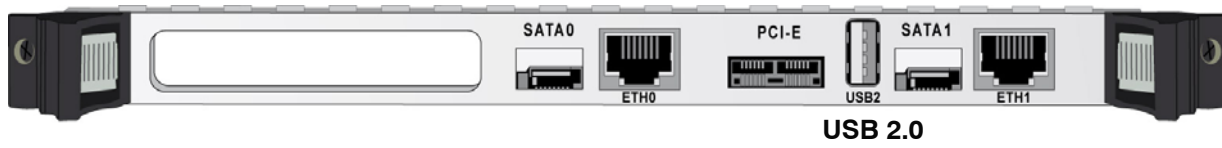

USB 2.0 standard cable



Figure 45: USB 2.0 Cable

MAILING ADDRESS

Kontron Modular Computers S.A.S.
150 rue Marcelin Berthelot - BP 244
ZI TOULON EST
83078 TOULON CEDEX - France

TELEPHONE AND E-MAIL

+33 (0) 4 98 16 34 00
sales@kontron.com
support-kom-sa@kontron.com

For further information about other Kontron products, please visit our Internet web site:
www.kontron.com.