


CLI Reference Manual

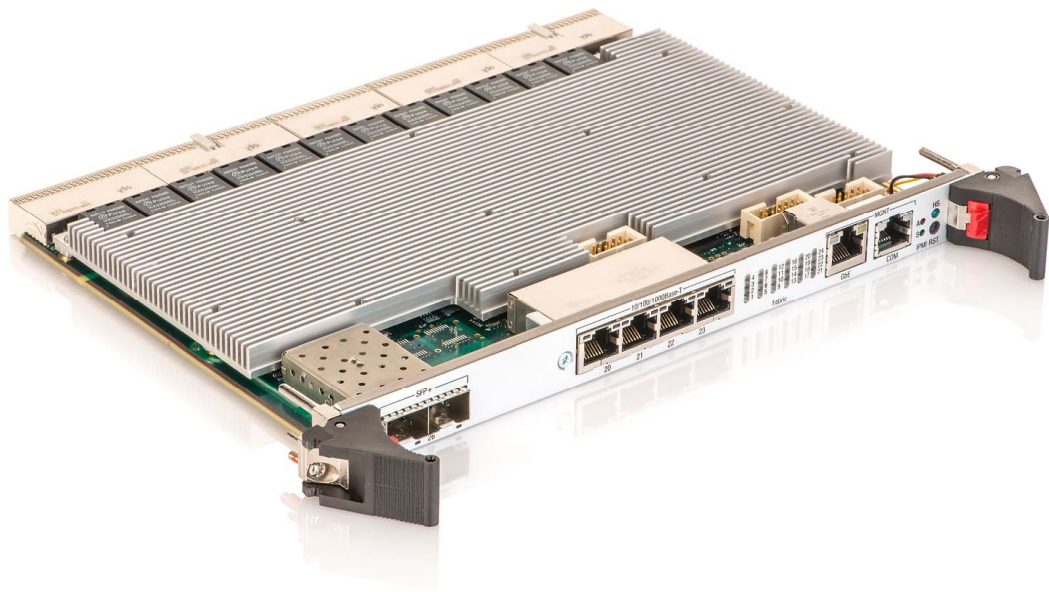

CP6924-1

Document Revision 1.1

Date: September 2016

Revision History

Rev. Index	Brief Description of Changes	Date of Issue
1.0	First Official version for CP6924-1 (1 GB) with FASTPATH 8.1 support	2015-11-16
1.1	Changes to cover FASTPATH 8.2 feature set	2016-09-09

Imprint

Kontron Europe GmbH may be contacted via the following:

MAILING ADDRESS

Kontron Europe GmbH
Lise-Meitner-Straße 3-5
D - 86156 Augsburg Germany

TELEPHONE AND E-MAIL

+49 (0) 800-SALESKONTRON
sales@kontron.com

For further information about other Kontron products, please visit our Internet web site: www.kontron.com.

Disclaimer

Copyright © 2016 Kontron AG. All rights reserved. All data is for information purposes only and not guaranteed for legal purposes. Information has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. Kontron and the Kontron logo and all other trademarks or registered trademarks are the property of their respective owners and are recognized. Specifications are subject to change without notice.

Contents

Revision History	2
Imprint.....	2
Disclaimer	2
About this Book.....	42
How to Use this Document	42
Proprietary Note	42
Trademarks.....	42
Environmental Protection Statement	42
Advisory Conventions	43
Safety Instructions.....	44
General Instructions on Usage.....	45
Two Year Warranty.....	45
 1 Using the Command-Line Interface	 46
1.1 Command Syntax	46
1.2 Command Conventions.....	47
1.3 Common Parameter Values.....	47
1.4 slot/port Naming Convention	48
1.5 Using the “No” Form of a Command	49
1.6 Executing Show Commands.....	49
1.7 CLI Output Filtering	49
1.8 FASTPATH Modules	50
1.9 Command Modes.....	51
1.10 Command Completion and Abbreviation	54
1.11 CLI Error Messages	54
1.12 CLI Line-Editing Conventions	55
1.13 Using CLI Help.....	56
1.14 Accessing the CLI.....	56
 2 Management Commands	 57
2.1 Network Interface Commands	57
2.1.1 enable (Privileged EXEC access)	57
2.1.2 do (Privileged EXEC commands)	57
2.1.3 serviceport ip	58
2.1.4 serviceport protocol	58
2.1.5 serviceport protocol dhcp	58
2.1.6 network parms	59
2.1.7 network protocol	59
2.1.8 network protocol dhcp	59

2.1.9	network mac-address	60
2.1.10	network mac-type	60
2.1.11	network javamode	60
2.1.12	show network	61
2.1.13	show serviceport	62
2.2	Console Port Access Commands.....	63
2.2.1	configure	63
2.2.2	line	63
2.2.3	serial baudrate	63
2.2.4	serial timeout	64
2.2.5	show serial	64
2.3	Telnet Commands.....	64
2.3.1	ip telnet server enable	64
2.3.2	ip telnet port	65
2.3.3	telnet	65
2.3.4	transport input telnet	65
2.3.5	transport output telnet	66
2.3.6	session-limit	66
2.3.7	session-timeout	66
2.3.8	telnetcon maxsessions	67
2.3.9	telnetcon timeout	67
2.3.10	show telnet	68
2.3.11	show telnetcon	68
2.4	Secure Shell Commands	68
2.4.1	ip ssh	69
2.4.2	ip ssh port	69
2.4.3	ip ssh protocol	69
2.4.4	ip ssh server enable	69
2.4.5	sshcon maxsessions	70
2.4.6	sshcon timeout	70
2.4.7	show ip ssh	70
2.5	Management Security Commands	71
2.5.1	crypto certificate generate	71
2.5.2	crypto key generate rsa	71
2.5.3	crypto key generate dsa	71
2.6	Hypertext Transfer Protocol Commands	72
2.6.1	ip http accounting exec, ip https accounting exec	72
2.6.2	ip http authentication	72
2.6.3	ip https authentication	73
2.6.4	ip http server	74
2.6.5	ip http secure-server	74
2.6.6	ip http java	74
2.6.7	ip http port	75
2.6.8	ip http rest-api port	75
2.6.9	ip http rest-api secure-port	75
2.6.10	ip http session hard-timeout	76
2.6.11	ip http session maxsessions	76

2.6.12	ip http session soft-timeout	76
2.6.13	ip http secure-session hard-timeout	77
2.6.14	ip http secure-session maxsessions	77
2.6.15	ip http secure-session soft-timeout	77
2.6.16	ip http secure-port	78
2.6.17	ip http secure-protocol	78
2.6.18	show ip http	78
2.7	Access Commands	79
2.7.1	disconnect	79
2.7.2	linuxsh	79
2.7.3	show loginsession	79
2.7.4	show loginsession long	80
2.8	User Account Commands	80
2.8.1	aaa authentication login	80
2.8.2	aaa authentication enable	81
2.8.3	aaa authorization	83
2.8.4	authorization commands	84
2.8.5	authorization exec	85
2.8.6	authorization exec default	85
2.8.7	show authorization methods	85
2.8.8	enable authentication	86
2.8.9	username (Global Config)	86
2.8.10	username nopassword	88
2.8.11	username unlock	88
2.8.12	username snmpv3 accessmode	88
2.8.13	username snmpv3 authentication	88
2.8.14	username snmpv3 encryption	89
2.8.15	username snmpv3 encryption encrypted	89
2.8.16	show users	90
2.8.17	show users long	90
2.8.18	show users accounts	90
2.8.19	show users login-history [long]	92
2.8.20	show users login-history [username]	92
2.8.21	login authentication	92
2.8.22	password	92
2.8.23	password (Line Configuration)	93
2.8.24	password (User EXEC)	93
2.8.25	password (aaa IAS User Config)	94
2.8.26	enable password (Privileged EXEC)	94
2.8.27	passwords min-length	95
2.8.28	passwords history	95
2.8.29	passwords aging	96
2.8.30	passwords lock-out	96
2.8.31	passwords strength-check	96
2.8.32	passwords strength maximum consecutive-characters	97
2.8.33	passwords strength maximum repeated-characters	97
2.8.34	passwords strength minimum uppercase-letters	97
2.8.35	passwords strength minimum lowercase-letters	97

2.8.36	passwords strength minimum numeric-characters	98
2.8.37	passwords strength minimum special-characters	98
2.8.38	passwords strength minimum character-classes	98
2.8.39	passwords strength exclude-keyword	98
2.8.40	show passwords configuration	99
2.8.41	show passwords result	99
2.8.42	aaa ias-user username	100
2.8.43	aaa session-id	100
2.8.44	aaa accounting	101
2.8.45	password (AAA IAS User Configuration)	102
2.8.46	clear aaa ias-users	103
2.8.47	show aaa ias-users	103
2.8.48	accounting	103
2.8.49	show accounting	104
2.8.50	show accounting methods	104
2.8.51	clear accounting statistics	105
2.8.52	show domain-name	105
2.9	SNMP Commands	105
2.9.1	snmp-server	105
2.9.2	snmp-server community	106
2.9.3	snmp-server community-group	106
2.9.4	snmp-server enable traps violation	107
2.9.5	snmp-server enable traps	107
2.9.6	snmp-server enable traps all	107
2.9.7	snmp-server port	108
2.9.8	snmp trap link-status	108
2.9.9	snmp trap link-status all	108
2.9.10	snmp-server enable traps linkmode	109
2.9.11	snmp-server enable traps multiusers	109
2.9.12	snmp-server enable traps stpmode	110
2.9.13	snmp-server engineID local	110
2.9.14	snmp-server filter	111
2.9.15	snmp-server group	111
2.9.16	snmp-server host	112
2.9.17	snmp-server user	112
2.9.18	snmp-server view	113
2.9.19	snmp-server v3-host	113
2.9.20	snmptrap source-interface	114
2.9.21	snmptrap ipaddr snmpversion	115
2.9.22	snmptrap ip6addr snmpversion	115
2.9.23	show snmp	115
2.9.24	show snmp engineID	116
2.9.25	show snmp filters	116
2.9.26	show snmp group	116
2.9.27	show snmp-server	117
2.9.28	show snmp source-interface	117
2.9.29	show snmp user	117
2.9.30	show snmp views	117
2.9.31	show trapflags	118

2.9.32	snmp-server enable traps all	118
2.9.33	show snmp-server	119
2.10	RADIUS Commands.....	119
2.10.1	aaa server radius dynamic-author	119
2.10.2	auth-type	119
2.10.3	authorization network radius	120
2.10.4	clear radius dynamic-author statistics	120
2.10.5	client	120
2.10.6	debug aaa coa	121
2.10.7	debug aaa pod	121
2.10.8	ignore server-key	121
2.10.9	ignore session-key	122
2.10.10	port	122
2.10.11	radius accounting mode	122
2.10.12	radius server attribute 4	123
2.10.13	radius server host	123
2.10.14	radius server key	125
2.10.15	radius server msgauth	125
2.10.16	radius server primary	126
2.10.17	radius server retransmit	126
2.10.18	radius source-interface	127
2.10.19	radius server timeout	127
2.10.20	server-key	128
2.10.21	show radius servers	128
2.10.22	show radius	129
2.10.23	show radius servers	129
2.10.24	show radius accounting	131
2.10.25	show radius accounting statistics	132
2.10.26	show radius source-interface	133
2.10.27	show radius statistics	133
2.11	TACACS+ Commands	134
2.11.1	tacacs-server host	134
2.11.2	tacacs-server key	135
2.11.3	tacacs-server keystore	135
2.11.4	tacacs-server source-interface	136
2.11.5	tacacs-server timeout	136
2.11.6	key	137
2.11.7	keystore	137
2.11.8	port	137
2.11.9	priority (TACACS Config)	137
2.11.10	timeout	138
2.11.11	show tacacs	138
2.11.12	show tacacs source-interface	138
2.12	Configuration Scripting Commands.....	138
2.12.1	script apply	139
2.12.2	script delete	139
2.12.3	script list	140
2.12.4	script show	140

2.12.5	script validate	140
2.13	Prelogin Banner, System Prompt, and Host Name Commands	140
2.13.1	copy (pre-login banner)	140
2.13.2	set prompt	141
2.13.3	hostname	141
2.13.4	show clibanner	141
2.13.5	set clibanner	141
3	Utility Commands	143
3.1	AutoInstall Commands	144
3.1.1	boot autoinstall	144
3.1.2	boot host retrycount	144
3.1.3	boot host dhcp	145
3.1.4	boot host autosave	145
3.1.5	boot host autoreboot	145
3.1.6	erase startup-config	146
3.1.7	erase factory-defaults	146
3.1.8	show autoinstall	146
3.1.9	boot autoinstall file	146
3.1.10	show autoinstall file	147
3.1.11	boot autoinstall file disable	147
3.1.12	boot autoinstall dhcp startup-config	148
3.2	CLI Output Filtering Commands	148
3.2.1	show xxx include "string"	148
3.2.2	show xxx include "string" exclude "string2"	148
3.2.3	show xxx exclude "string"	149
3.2.4	show xxx begin "string"	149
3.2.5	show xxx section "string"	149
3.2.6	show xxx section "string" "string2"	150
3.2.7	show xxx section "string" include "string2"	150
3.3	Dual Image Commands	150
3.3.1	delete	150
3.3.2	boot system	150
3.3.3	show bootvar	150
3.4	System Information and Statistics Commands	150
3.4.1	show arp switch	151
3.4.2	show eventlog	151
3.4.3	show hardware	151
3.4.4	show version	152
3.4.5	show platform vpd	152
3.4.6	show interface	153
3.4.7	show interfaces status	154
3.4.8	show interfaces traffic	154
3.4.9	show interface counters	155
3.4.10	show interface ethernet	156
3.4.11	show interface ethernet switchport	160

3.4.12	show interface lag	160
3.4.13	show fiber-ports optical-transceiver	161
3.4.14	show fiber-ports optical-transceiver-info	162
3.4.15	show mac-addr-table	163
3.4.16	process cpu threshold	164
3.4.17	show process app-list	164
3.4.18	show process app-resource-list	165
3.4.19	show process cpu	166
3.4.20	show process proc-list	167
3.4.21	show running-config	167
3.4.22	show running-config interface	168
3.4.23	show	169
3.4.24	dir	171
3.4.25	show sysinfo	171
3.4.26	show tech-support	172
3.4.27	length value	172
3.4.28	terminal length	173
3.4.29	show terminal length	173
3.4.30	memory free low-watermark processor	173
3.4.31	clear mac-addr-table	174
3.5	Logging Commands	174
3.5.1	logging buffered	174
3.5.2	logging buffered wrap	174
3.5.3	logging cli-command	175
3.5.4	logging console	175
3.5.5	logging host	176
3.5.6	logging host reconfigure	176
3.5.7	logging host remove	176
3.5.8	logging protocol	177
3.5.9	logging syslog	177
3.5.10	logging syslog port	177
3.5.11	logging syslog source-interface	177
3.5.12	show logging	178
3.5.13	show logging buffered	179
3.5.14	show logging hosts	179
3.5.15	show logging persistent	180
3.5.16	show logging traplogs	181
3.5.17	clear logging buffered	181
3.6	Email Alerting and Mail Server Commands	181
3.6.1	logging email	181
3.6.2	logging email urgent	182
3.6.3	logging email message-type to-addr	182
3.6.4	logging email from-addr	182
3.6.5	logging email message-type subject	183
3.6.6	logging email logtime	183
3.6.7	logging traps	183
3.6.8	logging email test message-type	184
3.6.9	show logging email config	184

3.6.10	show logging email statistics	184
3.6.11	clear logging email statistics	185
3.6.12	mail-server	185
3.6.13	security	185
3.6.14	port	185
3.6.15	username (Mail Server Config)	185
3.6.16	password	186
3.6.17	show mail-server config	186
3.7	System Utility and Clear Commands	186
3.7.1	traceroute	186
3.7.2	clear config	188
3.7.3	clear counters	189
3.7.4	clear igmpsnooping	189
3.7.5	clear ip access-list counters	189
3.7.6	clear ipv6 access-list counters	189
3.7.7	clear mac access-list counters	189
3.7.8	clear pass	189
3.7.9	clear traplog	190
3.7.10	clear vlan	190
3.7.11	logout	190
3.7.12	ping	190
3.7.13	quit	192
3.7.14	reload	192
3.7.15	copy	193
3.7.16	file verify	196
3.7.17	no file verify	196
3.7.18	write memory	196
3.7.19	set bootstopkey	197
3.7.20	set board root-password	197
3.7.21	show board port-map descr	197
3.7.22	show board address	197
3.7.23	show board cpu-load	197
3.7.24	show board memory-usage	197
3.7.25	show board post-status	198
3.7.26	show board version	198
3.7.27	clear board event-log	198
3.7.28	show logging errcounter	199
3.7.29	clear errcounter	199
3.7.30	show logging backtrace	199
3.8	SFP handling Commands	199
3.8.1	sfp auto-isolate	199
3.8.2	sfp auto-configure	200
3.8.3	sfp protocol	200
3.8.4	snmp-server enable traps sfp	200
3.8.5	show sfp	201
3.8.6	hardware profile portmode copper-sfp	201
3.8.7	show interfaces hardware profile	202
3.9	Commands to configure startup services	202

3.9.1	set chkconfig	202
3.9.2	show chkconfig	202
3.9.3	hardware profile eth-mux	203
3.9.4	show interfaces hardware profile eth-mux	203
3.10	Simple Network Time Protocol Commands	203
3.10.1	sntp broadcast client poll-interval	203
3.10.2	sntp client mode	203
3.10.3	sntp client port	204
3.10.4	sntp unicast client poll-interval	204
3.10.5	sntp unicast client poll-timeout	204
3.10.6	sntp multicast client poll-interval	205
3.10.7	sntp unicast client poll-retry	205
3.10.8	sntp server	205
3.10.9	sntp source-interface	206
3.10.10	show sntp	206
3.10.11	show sntp client	207
3.10.12	show sntp server	207
3.10.13	show sntp source-interface	208
3.11	Time Zone Commands	208
3.11.1	clock set	208
3.11.2	clock summer-time date	208
3.11.3	clock summer-time recurring	209
3.11.4	clock timezone	210
3.11.5	show clock	210
3.11.6	show clock detail	211
3.12	DHCP Server Commands.....	211
3.12.1	ip dhcp pool	211
3.12.2	client-identifier	212
3.12.3	client-name	212
3.12.4	default-router	212
3.12.5	dns-server	213
3.12.6	hardware-address	213
3.12.7	host	213
3.12.8	lease	214
3.12.9	network (DHCP Pool Config)	214
3.12.10	bootfile	214
3.12.11	domain-name	215
3.12.12	domain-name enable	215
3.12.13	netbios-name-server	215
3.12.14	netbios-node-type	216
3.12.15	next-server	216
3.12.16	option	217
3.12.17	ip dhcp excluded-address	217
3.12.18	ip dhcp ping packets	217
3.12.19	service dhcp	218
3.12.20	ip dhcp bootp automatic	218
3.12.21	ip dhcp conflict logging	218
3.12.22	clear ip dhcp binding	219

3.12.23	clear ip dhcp server statistics	219
3.12.24	clear ip dhcp conflict	219
3.12.25	show ip dhcp binding	219
3.12.26	show ip dhcp global configuration	220
3.12.27	show ip dhcp pool configuration	220
3.12.28	show ip dhcp server statistics	221
3.12.29	show ip dhcp conflict	221
3.12.30	ip dhcp option-61	222
3.12.31	show ip dhcp option-61	222
3.13	DNS Client Commands	223
3.13.1	ip domain lookup	223
3.13.2	ip domain name	223
3.13.3	ip domain list	223
3.13.4	ip name server	224
3.13.5	ip name source-interface	224
3.13.6	ip host	225
3.13.7	ipv6 host	225
3.13.8	ip domain retry	225
3.13.9	ip domain timeout	226
3.13.10	clear host	226
3.13.11	show hosts	226
3.13.12	show ip name source-interface	227
3.14	IP Address Conflict Commands	227
3.14.1	ip address-conflict-detect run	227
3.14.2	show ip address-conflict	228
3.14.3	clear ip address-conflict-detect	228
3.15	Serviceability Packet Tracing Commands	228
3.15.1	capture start	228
3.15.2	capture stop	229
3.15.3	capture file remote line	229
3.15.4	capture remote port	230
3.15.5	capture file size	230
3.15.6	capture line wrap	230
3.15.7	show capture packets	230
3.15.8	cpu-traffic direction interface	230
3.15.9	cpu-traffic direction match cust-filter	231
3.15.10	cpu-traffic direction match srcip	231
3.15.11	cpu-traffic direction match dstip	232
3.15.12	cpu-traffic direction match tcp	232
3.15.13	cpu-traffic direction match udp	232
3.15.14	cpu-traffic mode	233
3.15.15	cpu-traffic trace	233
3.15.16	show cpu-traffic interface	234
3.15.17	show cpu-traffic summary	234
3.15.18	show cpu-traffic trace	235
3.15.19	clear cpu-traffic	235
3.15.20	debug aaa accounting	236
3.15.21	debug aaa authorization	236

3.15.22 debug arp	236
3.15.23 debug authentication	237
3.15.24 debug auto-voip	237
3.15.25 debug clear	237
3.15.26 debug console	237
3.15.27 debug crashlog	238
3.15.28 debug dcbx packet	239
3.15.29 debug debug-config	239
3.15.30 debug dhcp packet	239
3.15.31 debug dot1ag	239
3.15.32 debug dot1x packet	240
3.15.33 debug fip-snooping packet	240
3.15.34 debug igmpsnooping packet	241
3.15.35 debug igmpsnooping packet transmit	241
3.15.36 debug igmpsnooping packet receive	242
3.15.37 debug ip acl	243
3.15.38 debug ip dvmrp packet	243
3.15.39 debug ip igmp packet	243
3.15.40 debug ip mcache packet	244
3.15.41 debug ip pimdm packet	244
3.15.42 debug ip pimsm packet	244
3.15.43 debug ip vrrp	245
3.15.44 debug ipv6 dhcp	245
3.15.45 debug ipv6 mcache packet	245
3.15.46 debug ipv6 mld packet	246
3.15.47 debug ipv6 ospfv3 packet	246
3.15.48 debug ipv6 pimdm packet	247
3.15.49 debug ipv6 pimsm packet	247
3.15.50 debug lacp packet	247
3.15.51 debug mldsnooping packet	248
3.15.52 debug ospf packet	248
3.15.53 debug ospfv3 packet	250
3.15.54 debug ping packet	250
3.15.55 debug rip packet	251
3.15.56 debug sflow packet	252
3.15.57 debug spanning-tree bpdu	252
3.15.58 debug spanning-tree bpdu receive	252
3.15.59 debug spanning-tree bpdu transmit	253
3.15.60 debug tacacs	254
3.15.61 debug telnetd start	254
3.15.62 debug telnetd stop	254
3.15.63 debug transfer	254
3.15.64 debug udld events	255
3.15.65 debug udld packet receive	255
3.15.66 debug udld packet transmit	255
3.15.67 show debugging	255
3.15.68 exception protocol	256
3.15.69 exception dump tftp-server	256
3.15.70 exception dump nfs	257

3.15.71	exception dump filepath	257
3.15.72	exception core-file	258
3.15.73	exception switch-chip-register	258
3.15.74	exception dump ftp-server	259
3.15.75	exception dump compression	259
3.15.76	exception dump stack-ip-address protocol	259
3.15.77	exception dump stack-ip-address add	260
3.15.78	exception dump stack-ip-address remove	260
3.15.79	exception nmi	260
3.15.80	write core	260
3.15.81	debug exception	261
3.15.82	show exception	261
3.15.83	show exception core-dump-file	261
3.15.84	show exception log	262
3.15.85	logging persistent	262
3.15.86	mbuf	262
3.15.87	show mbuf	262
3.15.88	show mbuf total	263
3.15.89	show msg-queue	263
3.15.90	debug packet-trace	264
3.15.91	packet-trace eth	264
3.15.92	packet-trace ipv4	264
3.15.93	packet-trace ipv6	264
3.15.94	packet-trace l4	264
3.15.95	show packet-trace ecmp	265
3.15.96	show packet-trace lag	265
3.15.97	show packet-trace packet-data	265
3.15.98	show packet-trace port	266
3.15.99	show packet-trace port eth	267
3.15.100	show packet-trace port ipv4	268
3.15.101	show packet-trace port ipv6	268
3.15.102	show packet-trace port tcpv4	269
3.15.103	show packet-trace port tcpv6	269
3.15.104	show packet-trace port udpv4	269
3.15.105	show packet-trace port udpv6	269
3.15.106	clear packet-trace packet-data	269
3.15.107	session start	270
3.15.108	session stop	270
3.15.109	watchdog clear	270
3.15.110	watchdog disable	270
3.15.111	watchdog enable	271
3.16	BCM Shell Command	271
3.16.1	bcmsh	271
3.17	Cable Test Command	271
3.17.1	cablestatus	271
3.18	sFlow Commands	272
3.18.1	sflow poller	272
3.18.2	sflow receiver	273

3.18.3	sflow receiver owner timeout	274
3.18.4	sflow receiver owner notimeout	274
3.18.5	sflow remote-agent ip	275
3.18.6	sflow remote-agent monitor-session	275
3.18.7	sflow remote-agent port	275
3.18.8	sflow sampler	276
3.18.9	sflow sampler rate	276
3.18.10	sflow sampler remote-agent	276
3.18.11	sflow sampler filter ip access-group	277
3.18.12	sflow sampler filter mac access-group	277
3.18.13	sflow source-interface	277
3.18.14	show sflow agent	278
3.18.15	show sflow pollers	278
3.18.16	show sflow receivers	279
3.18.17	show sflow remote-agents	280
3.18.18	show sflow samplers	280
3.18.19	show sflow source-interface	280
3.19	Switch Database Management Template Commands	281
3.19.1	sdm prefer	281
3.19.2	show sdm prefer	282
3.20	Remote Monitoring Commands	284
3.20.1	rmon ala^rm	284
3.20.2	rmon hcalarm	285
3.20.3	rmon event	286
3.20.4	rmon collection history	287
3.20.5	show rmon	288
3.20.6	show rmon collection history	289
3.20.7	show rmon events	290
3.20.8	show rmon history	291
3.20.9	show rmon log	293
3.20.10	show rmon statistics interfaces	293
3.20.11	show rmon hcalarms	295
3.21	Statistics Application Commands	296
3.21.1	stats group	297
3.21.2	stats flow-based	298
3.21.3	stats flow-based reporting	298
3.21.4	stats group	299
3.21.5	stats flow-based	299
3.21.6	show stats group	300
3.21.7	show stats flow-based	301
4	Switching Commands	303
4.1	Port Configuration Commands	304
4.1.1	interface	304
4.1.2	auto-negotiate	304
4.1.3	auto-negotiate all	304
4.1.4	description	305

4.1.5	media-type	305
4.1.6	mtu	305
4.1.7	shutdown	306
4.1.8	shutdown all	306
4.1.9	speed	307
4.1.10	speed all	307
4.1.11	show interface media-type	307
4.1.12	show port	308
4.1.13	show port advertise	309
4.1.14	show port description	310
4.1.15	advertise speed	310
4.1.16	show advertise speed	311
4.1.17	block	311
4.1.18	show block	311
4.1.19	mac-learn	311
4.1.20	show mac-learn	312
4.2	Spanning Tree Protocol Commands	312
4.2.1	spanning-tree	312
4.2.2	spanning-tree auto-edge	312
4.2.3	spanning-tree backbonefast	313
4.2.4	spanning-tree bpdupfilter	314
4.2.5	spanning-tree bpdupfilter default	314
4.2.6	spanning-tree bpdupflood	314
4.2.7	spanning-tree bpduguard	315
4.2.8	spanning-tree bpdumigrationcheck	315
4.2.9	spanning-tree configuration name	315
4.2.10	spanning-tree configuration revision	316
4.2.11	spanning-tree cost	316
4.2.12	spanning-tree edgeport	316
4.2.13	spanning-tree forceversion	317
4.2.14	spanning-tree forward-time	317
4.2.15	spanning-tree guard	318
4.2.16	spanning-tree max-age	318
4.2.17	spanning-tree max-hops	318
4.2.18	spanning-tree mode	319
4.2.19	spanning-tree mst	319
4.2.20	spanning-tree mst instance	320
4.2.21	spanning-tree mst priority	320
4.2.22	spanning-tree mst vlan	321
4.2.23	spanning-tree port mode	321
4.2.24	spanning-tree port mode all	322
4.2.25	spanning-tree port-priority	322
4.2.26	spanning-tree tcnguard	322
4.2.27	spanning-tree transmit	323
4.2.28	spanning-tree uplinkfast	323
4.2.29	spanning-tree vlan	324
4.2.30	spanning-tree vlan cost	324
4.2.31	spanning-tree vlan forward-time	324
4.2.32	spanning-tree vlan hello-time	324

4.2.33	spanning-tree vlan max-age	325
4.2.34	spanning-tree vlan root	325
4.2.35	spanning-tree vlan port-priority	325
4.2.36	spanning-tree vlan priority	326
4.2.37	show spanning-tree	326
4.2.38	show spanning-tree backbonefast	327
4.2.39	show spanning-tree brief	328
4.2.40	show spanning-tree interface	329
4.2.41	show spanning-tree mst detailed	330
4.2.42	show spanning-tree mst port detailed	331
4.2.43	show spanning-tree mst port summary	333
4.2.44	show spanning-tree mst port summary active	334
4.2.45	show spanning-tree mst summary	335
4.2.46	show spanning-tree summary	335
4.2.47	show spanning-tree uplinkfast	336
4.2.48	show spanning-tree vlan	336
4.2.49	set bpdu forwarding	337
4.2.50	show bpdu forwarding	337
4.3	Loop Protection Commands.....	338
4.3.1	keepalive (Global Config)	338
4.3.2	keepalive (Interface Config)	338
4.3.3	keepalive action	338
4.3.4	keepalive disable-timer	339
4.3.5	keepalive retry	339
4.3.6	show keepalive	340
4.3.7	show keepalive statistics	340
4.3.8	clear counters keepalive	340
4.4	VLAN Commands	341
4.4.1	vlan database	341
4.4.2	network mgmt_vlan	341
4.4.3	vlan	341
4.4.4	vlan acceptframe	341
4.4.5	vlan ingressfilter	342
4.4.6	vlan internal allocation	342
4.4.7	vlan makestatic	343
4.4.8	vlan name	343
4.4.9	vlan participation	343
4.4.10	vlan participation all	343
4.4.11	vlan port acceptframe all	344
4.4.12	vlan port ingressfilter all	344
4.4.13	vlan port pvid all	345
4.4.14	vlan port tagging all	345
4.4.15	vlan protocol group	345
4.4.16	vlan protocol group name	346
4.4.17	vlan protocol group add protocol	346
4.4.18	protocol group	346
4.4.19	protocol vlan group	347
4.4.20	protocol vlan group all	347

4.4.21	show port protocol	347
4.4.22	vlan pvid	348
4.4.23	vlan tagging	348
4.4.24	vlan association subnet	348
4.4.25	vlan association mac	349
4.4.26	remote-span	349
4.4.27	show vlan	349
4.4.28	show vlan internal usage	350
4.4.29	show vlan brief	350
4.4.30	show vlan port	351
4.4.31	show vlan association subnet	351
4.4.32	show vlan association mac	352
4.5	Double VLAN Commands	352
4.5.1	dvlan-tunnel ethertype (Interface Config)	352
4.5.2	dvlan-tunnel ethertype primary-tpid	353
4.5.3	mode dot1q-tunnel	353
4.5.4	mode dvlan-tunnel	353
4.5.5	show dot1q-tunnel	354
4.5.6	show dvlan-tunnel	354
4.6	Private VLAN Commands	355
4.6.1	switchport private-vlan	355
4.6.2	switchport mode private-vlan	356
4.6.3	private-vlan	356
4.7	Switch Ports	357
4.7.1	switchport mode	357
4.7.2	switchport trunk allowed vlan	357
4.7.3	switchport trunk native vlan	358
4.7.4	switchport access vlan	359
4.7.5	show interfaces switchport	359
4.7.6	show interfaces switchport	360
4.8	Voice VLAN Commands	360
4.8.1	voice vlan (Global Config)	361
4.8.2	voice vlan (Interface Config)	361
4.8.3	voice vlan data priority	361
4.8.4	show voice vlan	362
4.9	Provisioning (IEEE 802.1p) Commands	362
4.9.1	vlan port priority all	362
4.9.2	vlan priority	362
4.10	Asymmetric Flow Control	362
4.10.1	flowcontrol {symmetric asymmetric}	363
4.10.2	flowcontrol	363
4.10.3	show flowcontrol	364
4.11	Protected Ports Commands	364
4.11.1	switchport protected (Global Config)	365
4.11.2	switchport protected (Interface Config)	365
4.11.3	show switchport protected	365

4.11.4	show interfaces switchport	366
4.12	GARP Commands.....	366
4.12.1	set garp timer join	366
4.12.2	set garp timer leave	367
4.12.3	set garp timer leaveall	367
4.12.4	show garp	368
4.13	GVRP Commands	368
4.13.1	set gvrp adminmode	368
4.13.2	set gvrp interfacemode	368
4.13.3	show gvrp configuration	369
4.14	GMRP Commands	369
4.14.1	set gmrp adminmode	370
4.14.2	set gmrp interfacemode	370
4.14.3	show gmrp configuration	370
4.14.4	show mac-address-table gmrp	371
4.15	Port-Based Network Access Control Commands	371
4.15.1	aaa authentication dot1x default	371
4.15.2	clear dot1x statistics	372
4.15.3	clear dot1x authentication-history	372
4.15.4	clear radius statistics	372
4.15.5	dot1x eapolflood	372
4.15.6	dot1x dynamic-vlan enable	373
4.15.7	dot1x guest-vlan	373
4.15.8	dot1x initialize	373
4.15.9	dot1x max-req	373
4.15.10	dot1x max-users	374
4.15.11	dot1x port-control	374
4.15.12	dot1x port-control all	375
4.15.13	dot1x mac-auth-bypass	375
4.15.14	dot1x re-authenticate	375
4.15.15	dot1x re-authentication	376
4.15.16	dot1x system-auth-control	376
4.15.17	dot1x system-auth-control monitor	376
4.15.18	dot1x timeout	377
4.15.19	dot1x unauthenticated-vlan	378
4.15.20	dot1x user	378
4.15.21	authentication enable	378
4.15.22	authentication order	379
4.15.23	authentication priority	379
4.15.24	authentication timer restart	379
4.15.25	show authentication authentication-history	380
4.15.26	show authentication interface	380
4.15.27	show authentication methods	381
4.15.28	show authentication statistics	382
4.15.29	clear authentication statistics	383
4.15.30	clear authentication authentication-history	383
4.15.31	show dot1x	383

4.15.32	show dot1x authentication-history	387
4.15.33	show dot1x clients	387
4.15.34	show dot1x users	388
4.16	802.1X Supplicant Commands	388
4.16.1	dot1x pae	388
4.16.2	dot1x supplicant port-control	388
4.16.3	dot1x supplicant max-start	389
4.16.4	dot1x supplicant timeout start-period	389
4.16.5	dot1x supplicant timeout held-period	390
4.16.6	dot1x supplicant timeout auth-period	390
4.16.7	dot1x supplicant user	390
4.16.8	show dot1x statistics	390
4.17	Storm-Control Commands	391
4.17.1	storm-control broadcast	392
4.17.2	storm-control broadcast action	392
4.17.3	storm-control broadcast level	393
4.17.4	storm-control broadcast rate	393
4.17.5	storm-control multicast	394
4.17.6	storm-control multicast action	394
4.17.7	storm-control multicast level	394
4.17.8	storm-control multicast rate	395
4.17.9	storm-control unicast	395
4.17.10	storm-control unicast action	396
4.17.11	storm-control unicast level	396
4.17.12	storm-control unicast rate	397
4.17.13	show storm-control	397
4.18	Link Dependency Commands	398
4.18.1	link state group	399
4.18.2	link state group downstream	399
4.18.3	link state group upstream	399
4.18.4	show link state group	400
4.18.5	show link state group detail	400
4.19	Link Local Protocol Filtering Commands	401
4.19.1	llpf	401
4.19.2	show llpf interface	401
4.20	MVR Commands	402
4.20.1	mvr	402
4.20.2	mvr group	402
4.20.3	mvr immediate	402
4.20.4	mvr mode	403
4.20.5	mvr querytime	403
4.20.6	mvr type	403
4.20.7	mvr vlan	404
4.20.8	mvr vlan group	404
4.20.9	show mvr	404
4.20.10	show mvr members	405
4.20.11	show mvr interface	405

4.20.12	show mvr traffic	405
4.20.13	debug mvr trace	406
4.20.14	debug mvr packet	406
4.21	Port-Channel/LAG (802.3ad) Commands	407
4.21.1	port-channel	407
4.21.2	addport	407
4.21.3	deleteport (Interface Config)	408
4.21.4	deleteport (Global Config)	408
4.21.5	lacp admin key	408
4.21.6	lacp collector max-delay	408
4.21.7	lacp actor admin key	409
4.21.8	lacp actor admin state individual	409
4.21.9	lacp actor admin state longtimeout	409
4.21.10	lacp actor admin state passive	410
4.21.11	lacp actor admin state	410
4.21.12	lacp actor port priority	411
4.21.13	lacp partner admin key	411
4.21.14	lacp partner admin state individual	412
4.21.15	lacp partner admin state longtimeout	412
4.21.16	lacp partner admin state passive	412
4.21.17	lacp partner port id	413
4.21.18	lacp partner port priority	413
4.21.19	lacp partner system-id	414
4.21.20	lacp partner system priority	414
4.21.21	interface lag	414
4.21.22	port-channel static	415
4.21.23	port lacpmode	415
4.21.24	port lacpmode enable all	415
4.21.25	port lacptimeout (Interface Config)	416
4.21.26	port lacptimeout (Global Config)	416
4.21.27	port-channel adminmode	416
4.21.28	port-channel linktrap	417
4.21.29	port-channel load-balance	417
4.21.30	port-channel local-preference	418
4.21.31	port-channel min-links	418
4.21.32	port-channel name	419
4.21.33	port-channel system priority	419
4.21.34	show hashdest	419
4.21.35	show lacp actor	421
4.21.36	show lacp partner	421
4.21.37	show port-channel brief	421
4.21.38	show port-channel	422
4.21.39	show port-channel system priority	423
4.21.40	show port-channel counters	423
4.21.41	clear port-channel counters	424
4.21.42	clear port-channel all counters	424
4.21.43	port-channel hash multicast	424
4.21.44	show port-channel hash multicast	424

4.22	VPC Commands	425
4.22.1	vpc domain	425
4.22.2	feature vpc	425
4.22.3	peer detection enable	426
4.22.4	peer detection interval	426
4.22.5	peer-keepalive destination	426
4.22.6	peer-keepalive enable	427
4.22.7	peer-keepalive timeout	427
4.22.8	role priority	427
4.22.9	system-mac	428
4.22.10	system-priority	428
4.22.11	vpc	429
4.22.12	vpc peer-link	429
4.22.13	show running-config vpc	429
4.22.14	show vpc	430
4.22.15	show vpc brief	430
4.22.16	show vpc consistency-parameters	431
4.22.17	show vpc peer-keepalive	432
4.22.18	show vpc role	433
4.22.19	show vpc statistics	433
4.22.20	clear vpc statistics	434
4.22.21	debug vpc peer-keepalive	434
4.22.22	debug vpc peer-link data-message	435
4.22.23	debug vpc peer-link control-message async	435
4.22.24	debug vpc peer-link control-message bulk	435
4.22.25	debug vpc peer-link control-message ckpt	435
4.22.26	debug vpc peer detection	435
4.23	Port Mirroring Commands	436
4.23.1	monitor session source	436
4.23.2	monitor session destination	437
4.23.3	monitor session filter	438
4.23.4	monitor session mode	439
4.23.5	no monitor session	440
4.23.6	no monitor	440
4.23.7	show monitor session	440
4.23.8	show vlan remote-span	442
4.24	Static MAC Filtering Commands	442
4.24.1	macfilter	442
4.24.2	macfilter adddest	443
4.24.3	macfilter adddest all	444
4.24.4	macfilter addsrc	444
4.24.5	macfilter addsrc all	444
4.24.6	show mac-address-table static	445
4.24.7	show mac-address-table staticfiltering	445
4.25	DHCP L2 Relay Agent Commands	446
4.25.1	dhcp l2relay	446
4.25.2	dhcp l2relay circuit-id subscription	446

4.25.3	dhcp l2relay circuit-id vlan	446
4.25.4	dhcp l2relay remote-id subscription	447
4.25.5	dhcp l2relay remote-id vlan	447
4.25.6	dhcp l2relay subscription	448
4.25.7	dhcp l2relay trust	448
4.25.8	dhcp l2relay vlan	449
4.25.9	show dhcp l2relay all	449
4.25.10	show dhcp l2relay circuit-id vlan	450
4.25.11	show dhcp l2relay interface	450
4.25.12	show dhcp l2relay remote-id vlan	450
4.25.13	show dhcp l2relay stats interface	450
4.25.14	show dhcp l2relay subscription interface	451
4.25.15	show dhcp l2relay agent-option vlan	451
4.25.16	show dhcp l2relay vlan	452
4.25.17	clear dhcp l2relay statistics interface	452
4.26	DHCP Client Commands	452
4.26.1	dhcp client vendor-id-option	452
4.26.2	dhcp client vendor-id-option-string	452
4.26.3	show dhcp client vendor-id-option	453
4.26.4	ip dhcp force-client-id	453
4.26.5	show ip dhcp force-client-id	454
4.26.6	clear ip dhcp force-client-id	454
4.27	DHCP Snooping Configuration Commands	454
4.27.1	ip dhcp snooping	454
4.27.2	ip dhcp snooping vlan	454
4.27.3	ip dhcp snooping verify mac-address	455
4.27.4	ip dhcp snooping database	455
4.27.5	ip dhcp snooping database write-delay	455
4.27.6	ip dhcp snooping binding	455
4.27.7	ip dhcp filtering trust	456
4.27.8	ip verify binding	456
4.27.9	ip dhcp snooping limit	456
4.27.10	ip dhcp snooping log-invalid	457
4.27.11	ip dhcp snooping trust	457
4.27.12	ip verify source	457
4.27.13	show ip dhcp snooping	458
4.27.14	show ip dhcp snooping binding	458
4.27.15	show ip dhcp snooping database	459
4.27.16	show ip dhcp snooping interfaces	459
4.27.17	show ip dhcp snooping statistics	460
4.27.18	clear ip dhcp snooping binding	461
4.27.19	clear ip dhcp snooping statistics	461
4.27.20	show ip verify source	461
4.27.21	show ip verify interface	462
4.27.22	show ip source binding	462
4.28	Dynamic ARP Inspection Commands.....	462
4.28.1	ip arp inspection vlan	463
4.28.2	ip arp inspection validate	463

4.28.3	ip arp inspection vlan logging	463
4.28.4	ip arp inspection trust	464
4.28.5	ip arp inspection limit	464
4.28.6	ip arp inspection filter	464
4.28.7	arp access-list	465
4.28.8	permit ip host mac host	465
4.28.9	show ip arp inspection	465
4.28.10	show ip arp inspection statistics	466
4.28.11	clear ip arp inspection statistics	467
4.28.12	show ip arp inspection interfaces	467
4.28.13	show arp access-list	468
4.29	IGMP Snooping Configuration Commands	468
4.29.1	set igmp	468
4.29.2	set igmp header-validation	469
4.29.3	set igmp interfacemode	469
4.29.4	set igmp fast-leave	470
4.29.5	set igmp groupmembership-interval	470
4.29.6	set igmp maxresponse	471
4.29.7	set igmp mcrtexpiretime	471
4.29.8	set igmp mrouter	472
4.29.9	set igmp mrouter interface	472
4.29.10	set igmp report-suppression	472
4.29.11	show igmpsnooping	473
4.29.12	show igmpsnooping mrouter interface	474
4.29.13	show igmpsnooping mrouter vlan	474
4.29.14	show igmpsnooping ssm	475
4.29.15	show mac-address-table igmpsnooping	475
4.29.16	show igmpsnooping proxy-report	475
4.30	IGMP Snooping Querier Commands	476
4.30.1	set igmp querier	476
4.30.2	set igmp querier query-interval	477
4.30.3	set igmp querier timer expiry	477
4.30.4	set igmp querier version	477
4.30.5	set igmp querier election participate	478
4.30.6	show igmpsnooping querier	478
4.31	MLD Snooping Commands	479
4.31.1	set mld	479
4.31.2	set mld interfacemode	480
4.31.3	set mld fast-leave	480
4.31.4	set mld groupmembership-interval	481
4.31.5	set mld maxresponse	481
4.31.6	set mld mcrtexpiretime	482
4.31.7	set mld mrouter	482
4.31.8	set mld mrouter interface	482
4.31.9	show mldsnooping	483
4.31.10	show mldsnooping mrouter interface	484
4.31.11	show mldsnooping mrouter vlan	484
4.31.12	show mldsnooping ssm entries	484

4.31.13	show mldsnoping ssm stats	485
4.31.14	show mldsnoping ssm groups	485
4.31.15	show mac-address-table mldsnoping	485
4.31.16	clear mldsnoping	486
4.32	MLD Snooping Querier Commands	486
4.32.1	set mld querier	486
4.32.2	set mld querier query_interval	487
4.32.3	set mld querier timer expiry	487
4.32.4	set mld querier election participate	487
4.32.5	show mldsnoping querier	488
4.33	Port Security Commands.....	488
4.33.1	port-security	489
4.33.2	port-security max-dynamic	489
4.33.3	port-security max-static	489
4.33.4	port-security mac-address	490
4.33.5	port-security mac-address move	490
4.33.6	port-security mac-address sticky	490
4.33.7	show port-security	491
4.33.8	show port-security dynamic	491
4.33.9	show port-security static	492
4.33.10	show port-security violation	492
4.34	LLDP (802.1AB) Commands.....	492
4.34.1	lldp transmit	493
4.34.2	lldp receive	493
4.34.3	lldp timers	493
4.34.4	lldp transmit-tlv	494
4.34.5	lldp transmit-mgmt	494
4.34.6	lldp notification	494
4.34.7	lldp notification-interval	495
4.34.8	clear lldp statistics	495
4.34.9	clear lldp remote-data	495
4.34.10	show lldp	495
4.34.11	show lldp interface	495
4.34.12	show lldp statistics	496
4.34.13	show lldp remote-device	497
4.34.14	show lldp remote-device detail	497
4.34.15	show lldp local-device	498
4.34.16	show lldp local-device detail	499
4.35	LLDP-MED Commands	499
4.35.1	lldp med	499
4.35.2	lldp med confignotification	500
4.35.3	lldp med transmit-tlv	500
4.35.4	lldp med all	500
4.35.5	lldp med confignotification all	500
4.35.6	lldp med faststartrepeatcount	501
4.35.7	lldp med transmit-tlv all	501
4.35.8	show lldp med	501

4.35.9	show lldp med interface	502
4.35.10	show lldp med local-device detail	503
4.35.11	show lldp med remote-device	504
4.35.12	show lldp med remote-device detail	504
4.36	Denial of Service Commands.....	505
4.36.1	dos-control all	506
4.36.2	dos-control sipdip	506
4.36.3	dos-control firstfrag	507
4.36.4	dos-control tcpfrag	507
4.36.5	dos-control tcpflag	507
4.36.6	dos-control l4port	508
4.36.7	dos-control smacdmac	508
4.36.8	dos-control tcpport	509
4.36.9	dos-control udpport	509
4.36.10	dos-control tcpflagseq	510
4.36.11	dos-control tcpoffset	510
4.36.12	dos-control tcpsyn	511
4.36.13	dos-control tcpsynfin	511
4.36.14	dos-control tcpfinurgpsh	511
4.36.15	dos-control icmpv4	512
4.36.16	dos-control icmpv6	512
4.36.17	dos-control icmpfrag	513
4.36.18	show dos-control	513
4.37	MAC Database Commands	515
4.37.1	bridge aging-time	515
4.37.2	show forwardingdb agetime	515
4.37.3	show mac-address-table multicast	515
4.37.4	show mac-address-table stats	516
4.38	ISDP Commands.....	516
4.38.1	isdip run	516
4.38.2	isdip holdtime	517
4.38.3	isdip timer	517
4.38.4	isdip advertise-v2	517
4.38.5	isdip enable	517
4.38.6	clear isdp counters	518
4.38.7	clear isdp table	518
4.38.8	show isdp	518
4.38.9	show isdp interface	519
4.38.10	show isdp entry	520
4.38.11	show isdp neighbors	520
4.38.12	show isdp traffic	521
4.38.13	debug isdp packet	522
4.39	Interface Error Disable and Auto Recovery.....	522
4.39.1	errdisable recovery cause	523
4.39.2	errdisable recovery interval	523
4.39.3	show errdisable recovery	523
4.39.4	show interfaces status err-disabled	524

4.40	Multicast Handling Commands.....	525
4.40.1	multicast (interface)	525
4.40.2	show port multicast	525
4.40.3	multicast (VLAN)	525
4.40.4	show vlan multicast	525
4.40.5	set igmp proxy-report interfacemode	526
4.41	Port Bridging Commands	527
4.41.1	L2-port-bridge	527
4.41.2	show port L2-port-bridge	527
5	Routing Commands	528
5.1	Address Resolution Protocol Commands	528
5.1.1	arp	528
5.1.2	ip proxy-arp	529
5.1.3	ip local-proxy-arp	529
5.1.4	arp cachesize	529
5.1.5	arp dynamicrenew	530
5.1.6	arp purge	530
5.1.7	arp resptime	531
5.1.8	arp retries	531
5.1.9	arp timeout	531
5.1.10	clear arp-cache	532
5.1.11	clear arp-switch	532
5.1.12	show arp	532
5.1.13	show arp brief	533
5.1.14	show arp switch	533
5.2	IP Routing Commands.....	534
5.2.1	routing	534
5.2.2	ip routing	534
5.2.3	ip address	534
5.2.4	ip address dhcp	535
5.2.5	ip default-gateway	536
5.2.6	ip load-sharing	536
5.2.7	release dhcp	537
5.2.8	renew dhcp	537
5.2.9	renew dhcp network-port	537
5.2.10	renew dhcp service-port	537
5.2.11	ip route	538
5.2.12	ip route default	539
5.2.13	ip route distance	539
5.2.14	ip route net-prototype	540
5.2.15	ip netdirbcast	540
5.2.16	ip mtu	540
5.2.17	encapsulation	541
5.2.18	show dhcp lease	541
5.2.19	show ip brief	542
5.2.20	show ip interface	542

5.2.21	show ip interface brief	544
5.2.22	show ip load-sharing	545
5.2.23	show ip protocols	545
5.2.24	show ip route	547
5.2.25	show ip route ecmp-groups	550
5.2.26	show ip route hw-failure	550
5.2.27	show ip route net-prototype	551
5.2.28	show ip route summary	551
5.2.29	clear ip route counters	553
5.2.30	show ip route preferences	553
5.2.31	show ip stats	554
5.2.32	show routing heap summary	554
5.3	Routing Policy Commands.....	555
5.3.1	ip policy route-map	555
5.3.2	ip prefix-list	555
5.3.3	ip prefix-list description	556
5.3.4	ipv6 prefix-list	557
5.3.5	route-map	558
5.3.6	match ip address	559
5.3.7	match ip address <access-list-number access-list-name>	559
5.3.8	match ipv6 address	561
5.3.9	match length	562
5.3.10	match mac-list	562
5.3.11	set interface	564
5.3.12	set ip next-hop	564
5.3.13	set ip default next-hop	564
5.3.14	set ip precedence	565
5.3.15	show ip policy	566
5.3.16	show ip prefix-list	566
5.3.17	show ipv6 prefix-list	567
5.3.18	show route-map	568
5.3.19	clear ip prefix-list	569
5.3.20	clear ipv6 prefix-list	569
5.4	Router Discovery Protocol Commands.....	570
5.4.1	ip irdp	570
5.4.2	ip irdp address	570
5.4.3	ip irdp holdtime	570
5.4.4	ip irdp maxadvertinterval	571
5.4.5	ip irdp minadvertinterval	571
5.4.6	ip irdp multicast	571
5.4.7	ip irdp preference	572
5.4.8	show ip irdp	572
5.5	Virtual LAN Routing Commands.....	573
5.5.1	vlan routing	573
5.5.2	interface vlan	575
5.5.3	show ip vlan	575
5.6	Virtual Router Redundancy Protocol Commands	575

5.6.1	ip vrrp (Global Config)	575
5.6.2	ip vrrp (Interface Config)	575
5.6.3	ip vrrp mode	576
5.6.4	ip vrrp ip	576
5.6.5	ip vrrp accept-mode	577
5.6.6	ip vrrp authentication	577
5.6.7	ip vrrp preempt	577
5.6.8	ip vrrp priority	578
5.6.9	ip vrrp timers advertise	578
5.6.10	ip vrrp track interface	579
5.6.11	ip vrrp track ip route	579
5.6.12	show ip vrrp interface stats	580
5.6.13	show ip vrrp	580
5.6.14	show ip vrrp interface	581
5.6.15	show ip vrrp interface brief	582
5.7	DHCP and BOOTP Relay Commands	582
5.7.1	bootpdhcprelay cidoptmode	582
5.7.2	bootpdhcprelay maxhopcount	582
5.7.3	bootpdhcprelay minwaittime	583
5.7.4	bootpdhcprelay serverip	583
5.7.5	bootpdhcprelay enable	584
5.7.6	show bootpdhcprelay	584
5.7.7	show ip bootpdhcprelay	584
5.8	IP Helper Commands	585
5.8.1	clear ip helper statistics	586
5.8.2	ip helper-address (Global Config)	586
5.8.3	ip helper-address (Interface Config)	587
5.8.4	ip helper enable	589
5.8.5	show ip helper-address	589
5.8.6	show ip helper statistics	590
5.9	Open Shortest Path First Commands	591
5.9.1	router ospf	591
5.9.2	enable (OSPF)	591
5.9.3	network area (OSPF)	592
5.9.4	1583compatibility	592
5.9.5	area default-cost (OSPF)	592
5.9.6	area nssa (OSPF)	593
5.9.7	area nssa default-info-originate (OSPF)	593
5.9.8	area nssa no-redistribute (OSPF)	593
5.9.9	area nssa no-summary (OSPF)	593
5.9.10	area nssa translator-role (OSPF)	594
5.9.11	area nssa translator-stab-intv (OSPF)	594
5.9.12	area range (OSPF)	594
5.9.13	area stub (OSPF)	596
5.9.14	area stub no-summary (OSPF)	596
5.9.15	area virtual-link (OSPF)	596
5.9.16	area virtual-link authentication	597
5.9.17	area virtual-link dead-interval (OSPF)	597

5.9.18	area virtual-link hello-interval (OSPF)	597
5.9.19	area virtual-link retransmit-interval (OSPF)	598
5.9.20	area virtual-link transmit-delay (OSPF)	598
5.9.21	auto-cost (OSPF)	599
5.9.22	capability opaque	599
5.9.23	clear ip ospf	599
5.9.24	clear ip ospf configuration	600
5.9.25	clear ip ospf counters	600
5.9.26	clear ip ospf neighbor	600
5.9.27	clear ip ospf neighbor interface	600
5.9.28	clear ip ospf redistribution	600
5.9.29	default-information originate (OSPF)	601
5.9.30	default-metric (OSPF)	601
5.9.31	distance ospf (OSPF)	601
5.9.32	distribute-list out (OSPF)	602
5.9.33	exit-overflow-interval (OSPF)	602
5.9.34	external-lsdb-limit (OSPF)	602
5.9.35	log-adjacency-changes	603
5.9.36	prefix-suppression (Router OSPF Config)	603
5.9.37	prefix-suppression (Router OSPFv3 Config)	603
5.9.38	router-id (OSPF)	604
5.9.39	redistribute (OSPF)	604
5.9.40	maximum-paths (OSPF)	604
5.9.41	passive-interface default (OSPF)	605
5.9.42	passive-interface (OSPF)	605
5.9.43	timers pacing flood	605
5.9.44	timers pacing lsa-group	606
5.9.45	timers spf	606
5.9.46	trapflags (OSPF)	606
5.9.47	ip ospf area	608
5.9.48	bandwidth	608
5.9.49	ip ospf authentication	609
5.9.50	ip ospf cost	609
5.9.51	ip ospf database-filter all out	609
5.9.52	ip ospf dead-interval	610
5.9.53	ip ospf hello-interval	610
5.9.54	ip ospf network	610
5.9.55	ip ospf prefix-suppression	611
5.9.56	ip ospf priority	611
5.9.57	ip ospf retransmit-interval	612
5.9.58	ip ospf transmit-delay	612
5.9.59	ip ospf mtu-ignore	612
5.9.60	dampening	613
5.9.61	show dampening interface	613
5.9.62	show interface dampening	614
5.9.63	OSPF Graceful Restart Commands	614
5.9.64	nsf	615
5.9.65	nsf restart-interval	615
5.9.66	nsf helper	616

5.9.67	nsf ietf helper disable	616
5.9.68	nsf helper strict-lsa-checking	616
5.9.69	max-metric router-lsa	617
5.9.70	clear ip ospf stub-router	618
5.9.71	show ip ospf	618
5.9.72	show ip ospf abr	621
5.9.73	show ip ospf area	622
5.9.74	show ip ospf asbr	623
5.9.75	show ip ospf database	623
5.9.76	show ip ospf database database-summary	624
5.9.77	show ip ospf interface	625
5.9.78	show ip ospf interface brief	626
5.9.79	show ip ospf interface stats	627
5.9.80	show ip ospf lsa-group	628
5.9.81	show ip ospf neighbor	629
5.9.82	show ip ospf range	631
5.9.83	show ip ospf statistics	631
5.9.84	show ip ospf stub table	632
5.9.85	show ip ospf traffic	633
5.9.86	show ip ospf virtual-link	634
5.9.87	show ip ospf virtual-link brief	634
5.10	Routing Information Protocol Commands.....	635
5.10.1	router rip	635
5.10.2	enable (RIP)	635
5.10.3	ip rip	635
5.10.4	auto-summary	636
5.10.5	default-information originate (RIP)	636
5.10.6	default-metric (RIP)	636
5.10.7	distance rip	637
5.10.8	distribute-list out (RIP)	637
5.10.9	ip rip authentication	637
5.10.10	ip rip receive version	638
5.10.11	ip rip send version	638
5.10.12	hostroutesaccept	638
5.10.13	split-horizon	639
5.10.14	redistribute (RIP)	639
5.10.15	show ip rip	639
5.10.16	show ip rip interface brief	640
5.10.17	show ip rip interface	640
5.11	ICMP Throttling Commands	641
5.11.1	ip unreachable	641
5.11.2	ip redirects	641
5.11.3	ipv6 redirects	642
5.11.4	ip icmp echo-reply	642
5.11.5	ip icmp error-interval	642
5.12	Bidirectional Forwarding Detection Commands	643
5.12.1	bfd	643
5.12.2	feature bfd	643

5.12.3	bfd echo	644
5.12.4	bfd interval	644
5.12.5	bfd slow-timer	645
5.12.6	ip ospf bfd	646
5.12.7	debug bfd event	646
5.12.8	debug bfd packet	646
6	IPv6 Management Commands	647
6.1	IPv6 Management Commands	647
6.1.1	serviceport ipv6 enable	647
6.1.2	network ipv6 enable	648
6.1.3	serviceport ipv6 address	648
6.1.4	serviceport ipv6 gateway	649
6.1.5	serviceport ipv6 neighbor	649
6.1.6	network ipv6 address	650
6.1.7	network ipv6 gateway	650
6.1.8	network ipv6 neighbor	651
6.1.9	show network ipv6 neighbors	651
6.1.10	show serviceport ipv6 neighbors	652
6.1.11	ping ipv6	652
6.1.12	ping ipv6 interface	653
6.2	Tunnel Interface Commands	653
6.2.1	interface tunnel	653
6.2.2	tunnel source	654
6.2.3	tunnel destination	654
6.2.4	tunnel mode ipv6ip	654
6.2.5	show interface tunnel	654
6.3	Loopback Interface Commands	655
6.3.1	interface loopback	655
6.3.2	show interface loopback	655
6.4	IPv6 Routing Commands.....	656
6.4.1	ipv6 hop-limit	656
6.4.2	ipv6 unicast-routing	656
6.4.3	ipv6 enable	656
6.4.4	ipv6 address	657
6.4.5	ipv6 address autoconfig	658
6.4.6	ipv6 address dhcp	658
6.4.7	ipv6 route	658
6.4.8	ipv6 route distance	659
6.4.9	ipv6 route net-prototype	659
6.4.10	ipv6 mtu	660
6.4.11	ipv6 nd dad attempts	660
6.4.12	ipv6 nd managed-config-flag	660
6.4.13	ipv6 nd ns-interval	661
6.4.14	ipv6 nd other-config-flag	661
6.4.15	ipv6 nd ra-interval	662
6.4.16	ipv6 nd ra-lifetime	662

6.4.17	ipv6 nd ra hop-limit unspecified	662
6.4.18	ipv6 nd reachable-time	663
6.4.19	ipv6 nd router-preference	663
6.4.20	ipv6 nd suppress-ra	663
6.4.21	ipv6 nd prefix	664
6.4.22	ipv6 neighbor	664
6.4.23	ipv6 neighbors dynamicrenew	665
6.4.24	ipv6 nud	665
6.4.25	ipv6 prefix-list	666
6.4.26	ipv6 unreachable	667
6.4.27	ipv6 unresolved-traffic	667
6.4.28	ipv6 icmp error-interval	667
6.4.29	show ipv6 brief	668
6.4.30	show ipv6 interface	669
6.4.31	show ipv6 interface vlan	671
6.4.32	show ipv6 dhcp interface	671
6.4.33	show ipv6 nd rguard policy	672
6.4.34	show ipv6 neighbors	672
6.4.35	clear ipv6 neighbors	672
6.4.36	show ipv6 protocols	673
6.4.37	show ipv6 route	673
6.4.38	show ipv6 route ecmp-groups	675
6.4.39	show ipv6 route hw-failure	676
6.4.40	show ipv6 route net-prototype	676
6.4.41	show ipv6 route preferences	677
6.4.42	show ipv6 route summary	677
6.4.43	show ipv6 snooping counters	679
6.4.44	show ipv6 vlan	679
6.4.45	show ipv6 traffic	680
6.4.46	clear ipv6 route counters	683
6.4.47	clear ipv6 snooping counters	683
6.4.48	clear ipv6 statistics	683
6.5	OSPFv3 Commands	683
6.5.1	ipv6 router ospf	683
6.5.2	area default-cost (OSPFv3)	683
6.5.3	area nssa (OSPFv3)	684
6.5.4	area nssa default-info-originate (OSPFv3)	684
6.5.5	area nssa no-redistribute (OSPFv3)	684
6.5.6	area nssa no-summary (OSPFv3)	685
6.5.7	area nssa translator-role (OSPFv3)	685
6.5.8	area nssa translator-stab-intv (OSPFv3)	685
6.5.9	area range (OSPFv3)	685
6.5.10	area stub (OSPFv3)	686
6.5.11	area stub no-summary (OSPFv3)	686
6.5.12	area virtual-link (OSPFv3)	687
6.5.13	area virtual-link dead-interval (OSPFv3)	687
6.5.14	area virtual-link hello-interval (OSPFv3)	688
6.5.15	area virtual-link retransmit-interval (OSPFv3)	688
6.5.16	area virtual-link transmit-delay (OSPFv3)	688

6.5.17	auto-cost (OSPFv3)	689
6.5.18	clear ipv6 ospf	689
6.5.19	clear ipv6 ospf configuration	689
6.5.20	clear ipv6 ospf counters	689
6.5.21	clear ipv6 ospf neighbor	690
6.5.22	clear ipv6 ospf neighbor interface	690
6.5.23	clear ipv6 ospf redistribution	690
6.5.24	default-information originate (OSPFv3)	690
6.5.25	default-metric (OSPFv3)	690
6.5.26	distance ospf (OSPFv3)	691
6.5.27	enable (OSPFv3)	691
6.5.28	exit-overflow-interval (OSPFv3)	691
6.5.29	external-lsdb-limit (OSPFv3)	692
6.5.30	maximum-paths (OSPFv3)	692
6.5.31	passive-interface default (OSPFv3)	692
6.5.32	passive-interface (OSPFv3)	693
6.5.33	redistribute (OSPFv3)	693
6.5.34	router-id (OSPFv3)	694
6.5.35	timers pacing lsa-group	694
6.5.36	timers throttle spf	694
6.5.37	trapflags (OSPFv3)	695
6.5.38	ipv6 ospf area	696
6.5.39	ipv6 ospf cost	696
6.5.40	ipv6 ospf dead-interval	697
6.5.41	ipv6 ospf hello-interval	697
6.5.42	ipv6 ospf link-lsa-suppression	698
6.5.43	ipv6 ospf mtu-ignore	698
6.5.44	ipv6 ospf network	698
6.5.45	ipv6 ospf prefix-suppression	699
6.5.46	ipv6 ospf priority	699
6.5.47	ipv6 ospf retransmit-interval	700
6.5.48	ipv6 ospf transmit-delay	700
6.5.49	nsf (OSPFv3)	701
6.5.50	nsf restart-interval (OSPFv3)	701
6.5.51	nsf helper (OSPFv3)	702
6.5.52	nsf ietf helper disable (OSPFv3)	702
6.5.53	nsf helper strict-lsa-checking (OSPFv3)	703
6.5.54	max-metric router-lsa	703
6.5.55	clear ipv6 ospf stub-router	704
6.5.56	show ipv6 ospf	704
6.5.57	show ipv6 ospf abr	707
6.5.58	show ipv6 ospf area	707
6.5.59	show ipv6 ospf asbr	708
6.5.60	show ipv6 ospf database	709
6.5.61	show ipv6 ospf database database-summary	709
6.5.62	show ipv6 ospf interface	710
6.5.63	show ipv6 ospf interface brief	711
6.5.64	show ipv6 ospf interface stats	711
6.5.65	show ipv6 ospf lsa-group	712

6.5.66	show ipv6 ospf max-metric	713
6.5.67	show ipv6 ospf neighbor	714
6.5.68	show ipv6 ospf range	715
6.5.69	show ipv6 ospf statistics	715
6.5.70	show ipv6 ospf stub table	716
6.5.71	show ipv6 ospf virtual-link	717
6.5.72	show ipv6 ospf virtual-link brief	717
6.6	DHCPv6 Commands.....	718
6.6.1	service dhcpv6	718
6.6.2	ipv6 dhcp client pd	718
6.6.3	ipv6 dhcp server	719
6.6.4	ipv6 dhcp relay destination	719
6.6.5	ipv6 dhcp pool	719
6.6.6	address prefix (IPv6)	720
6.6.7	domain-name (IPv6)	720
6.6.8	dns-server (IPv6)	721
6.6.9	prefix-delegation (IPv6)	721
6.6.10	show ipv6 dhcp	721
6.6.11	show ipv6 dhcp statistics	722
6.6.12	show ipv6 dhcp interface	722
6.6.13	show ipv6 dhcp binding	723
6.6.14	show ipv6 dhcp pool	723
6.6.15	show network ipv6 dhcp statistics	724
6.6.16	show serviceport ipv6 dhcp statistics	725
6.6.17	clear ipv6 dhcp	726
6.6.18	clear ipv6 dhcp binding	726
6.6.19	clear network ipv6 dhcp statistics	726
6.6.20	clear serviceport ipv6 dhcp statistics	727
6.7	DHCPv6 Snooping Configuration Commands	727
6.7.1	ipv6 dhcp snooping	727
6.7.2	ipv6 dhcp snooping vlan	727
6.7.3	ipv6 dhcp snooping verify mac-address	727
6.7.4	ipv6 dhcp snooping database	728
6.7.5	ip dhcp snooping database write-delay	728
6.7.6	ipv6 dhcp snooping binding	728
6.7.7	ipv6 dhcp snooping trust	729
6.7.8	ipv6 dhcp snooping log-invalid	729
6.7.9	ipv6 dhcp snooping limit	729
6.7.10	ipv6 verify source	730
6.7.11	ipv6 verify binding	730
6.7.12	show ipv6 dhcp snooping	730
6.7.13	show ipv6 dhcp snooping binding	731
6.7.14	show ipv6 dhcp snooping database	732
6.7.15	show ipv6 dhcp snooping interfaces	732
6.7.16	show ipv6 dhcp snooping statistics	732
6.7.17	clear ipv6 dhcp snooping binding	733
6.7.18	clear ipv6 dhcp snooping statistics	733
6.7.19	show ipv6 verify	734

6.7.20	show ipv6 verify source	734
6.7.21	show ipv6 source binding	735
7	Quality of Service Commands	736
7.1	Class of Service Commands.....	736
7.1.1	classofservice dot1p-mapping	736
7.1.2	classofservice ip-dscp-mapping	737
7.1.3	classofservice ip-precedence-mapping	737
7.1.4	classofservice trust	738
7.1.5	cos-queue max-bandwidth	738
7.1.6	cos-queue min-bandwidth	739
7.1.7	cos-queue random-detect	739
7.1.8	cos-queue strict	740
7.1.9	random-detect	740
7.1.10	random-detect exponential weighting-constant	740
7.1.11	random-detect queue-parms	741
7.1.12	traffic-shape	741
7.1.13	show classofservice dot1p-mapping	742
7.1.14	show classofservice ip-dscp-mapping	742
7.1.15	show classofservice ip-precedence-mapping	742
7.1.16	show classofservice trust	743
7.1.17	show interfaces cos-queue	743
7.1.18	show interfaces random-detect	744
7.1.19	show interfaces tail-drop-threshold	744
7.1.20	show protection-group	744
7.1.21	protection-group (configure)	745
7.1.22	protection-group (interface)	745
7.2	Differentiated Services Commands.....	746
7.2.1	diffserv	746
7.3	DiffServ Class Commands	747
7.3.1	class-map	747
7.3.2	class-map rename	748
7.3.3	match ethertype	748
7.3.4	match any	748
7.3.5	match class-map	749
7.3.6	match cos	749
7.3.7	match secondary-cos	750
7.3.8	match destination-address mac	750
7.3.9	match dstip	750
7.3.10	match dstip6	751
7.3.11	match dstl4port	751
7.3.12	match ip dscp	751
7.3.13	match ip precedence	752
7.3.14	match ip tos	752
7.3.15	match ip6flowlbl	752
7.3.16	match protocol	753
7.3.17	match signature	753

7.3.18	match source-address mac	753
7.3.19	match srcip	754
7.3.20	match srcip6	754
7.3.21	match srcl4port	754
7.3.22	match src port	754
7.3.23	match vlan	754
7.3.24	match secondary-vlan	755
7.4	DiffServ Policy Commands.....	755
7.4.1	assign-queue	756
7.4.2	drop	756
7.4.3	mirror	756
7.4.4	redirect	756
7.4.5	conform-color	756
7.4.6	class	757
7.4.7	mark cos	757
7.4.8	mark secondary-cos	757
7.4.9	mark cos-as-sec-cos	758
7.4.10	mark ip-dscp	758
7.4.11	mark ip-precedence	758
7.4.12	police-simple	759
7.4.13	police-single-rate	759
7.4.14	police-two-rate	759
7.4.15	policy-map	760
7.4.16	policy-map rename	760
7.4.17	egress-mask	760
7.4.18	replace-port-bitmap	761
7.5	DiffServ Service Commands	761
7.5.1	service-policy	761
7.6	DiffServ Show Commands	762
7.6.1	show class-map	762
7.6.2	show diffserv	763
7.6.3	show policy-map	763
7.6.4	show diffserv service	765
7.6.5	show diffserv service brief	766
7.6.6	show policy-map interface	766
7.6.7	show service-policy	767
7.7	MAC Access Control List Commands.....	767
7.7.1	mac access-list extended	767
7.7.2	mac access-list extended rename	768
7.7.3	mac access-list resequence	768
7.7.4	{deny permit} (MAC ACL)	768
7.7.5	mac access-group	770
7.7.6	remark	771
7.7.7	show mac access-lists	772
7.8	IP Access Control List Commands.....	774
7.8.1	access-list	774
7.8.2	ip access-list	777

7.8.3	ip access-list rename	778
7.8.4	ip access-list resequence	778
7.8.5	{deny permit} (IP ACL)	779
7.8.6	ip access-group	783
7.8.7	acl-trapflags	784
7.8.8	show ip access-lists	784
7.8.9	show access-lists	786
7.8.10	show access-lists vlan	787
7.8.11	acl-traptime	787
7.8.12	show acl-traptime	787
7.9	IPv6 Access Control List Commands	788
7.9.1	ipv6 access-list	788
7.9.2	ipv6 access-list rename	788
7.9.3	ipv6 access-list resequence	788
7.9.4	{deny permit} (IPv6)	789
7.9.5	ipv6 traffic-filter	793
7.9.6	show ipv6 access-lists	794
7.10	Time Range Commands for Time-Based ACLs	796
7.10.1	time-range	796
7.10.2	absolute	796
7.10.3	periodic	797
7.10.4	show time-range	797
7.11	Auto-Voice over IP Commands	798
7.11.1	auto-voip	798
7.11.2	auto-voip oui	798
7.11.3	auto-voip oui-based priority	799
7.11.4	auto-voip protocol-based	799
7.11.5	auto-voip vlan	800
7.11.6	show auto-voip	800
7.11.7	show auto-voip oui-table	801
7.12	iSCSI Optimization Commands	802
7.12.1	iscsi aging time	802
7.12.2	iscsi cos	802
7.12.3	iscsi enable	803
7.12.4	iscsi target port	803
7.12.5	show iscsi	804
7.12.6	show iscsi sessions	805
8	IP Multicast Commands	807
8.1	Multicast Commands	807
8.1.1	ip mcast boundary	807
8.1.2	ip mroute	807
8.1.3	ip multicast	808
8.1.4	ip multicast ttl-threshold	808
8.1.5	show ip mcast	809
8.1.6	show ip mcast boundary	809

8.1.7	show ip mcast interface	809
8.1.8	show ip mroute	810
8.1.9	show ip mcast mroute group	813
8.1.10	show ip mcast mroute source	814
8.1.11	show ip mcast mroute static	814
8.1.12	clear ip mroute	815
8.2	DVMRP Commands.....	815
8.2.1	ip dvmrp	815
8.2.2	ip dvmrp metric	816
8.2.3	ip dvmrp trapflags	816
8.2.4	ip dvmrp	817
8.2.5	show ip dvmrp	817
8.2.6	show ip dvmrp interface	817
8.2.7	show ip dvmrp neighbor	818
8.2.8	show ip dvmrp nexthop	818
8.2.9	show ip dvmrp prune	819
8.2.10	show ip dvmrp route	819
8.3	PIM Commands	819
8.3.1	ip pim dense	820
8.3.2	ip pim sparse	820
8.3.3	ip pim	820
8.3.4	ip pim hello-interval	821
8.3.5	ip pim bsr-border	821
8.3.6	ip pim bsr-candidate	821
8.3.7	ip pim dr-priority	822
8.3.8	ip pim join-prune-interval	823
8.3.9	ip pim rp-address	823
8.3.10	ip pim rp-candidate	824
8.3.11	ip pim ssm	825
8.3.12	ip pim-trapflags	825
8.3.13	ip pim spt-threshold	825
8.3.14	show ip mfc	826
8.3.15	show ip pim	827
8.3.16	show ip pim ssm	828
8.3.17	show ip pim interface	828
8.3.18	show ip pim neighbor	829
8.3.19	show ip pim bsr-router	830
8.3.20	show ip pim rp-hash	831
8.3.21	show ip pim rp mapping	831
8.3.22	show ip pim statistics	832
8.4	Internet Group Message Protocol Commands	834
8.4.1	ip igmp	834
8.4.2	ip igmp header-validation	834
8.4.3	ip igmp version	834
8.4.4	ip igmp last-member-query-count	835
8.4.5	ip igmp last-member-query-interval	835
8.4.6	ip igmp query-interval	835
8.4.7	ip igmp query-max-response-time	836

8.4.8	ip igmp robustness	836
8.4.9	ip igmp startup-query-count	836
8.4.10	ip igmp startup-query-interval	837
8.4.11	show ip igmp	837
8.4.12	show ip igmp groups	837
8.4.13	show ip igmp interface	838
8.4.14	show ip igmp interface membership	839
8.4.15	show ip igmp interface stats	839
8.5	IGMP Proxy Commands	840
8.5.1	ip igmp-proxy	840
8.5.2	ip igmp-proxy unsolicit-rprt-interval	840
8.5.3	ip igmp-proxy reset-status	840
8.5.4	show ip igmp-proxy	841
8.5.5	show ip igmp-proxy interface	841
8.5.6	show ip igmp-proxy groups	842
8.5.7	show ip igmp-proxy groups detail	843
9	IPv6 Multicast Commands	845
9.1	IPv6 Multicast Forwarder	845
9.1.1	ipv6 mroute	845
9.1.2	show ipv6 mroute	846
9.1.3	show ipv6 mroute group	846
9.1.4	show ipv6 mroute source	847
9.1.5	show ipv6 mroute static	847
9.1.6	clear ipv6 mroute	848
9.2	IPv6 PIM Commands	848
9.2.1	ipv6 pim dense	848
9.2.2	ipv6 pim sparse	849
9.2.3	ipv6 pim	849
9.2.4	ipv6 pim hello-interval	849
9.2.5	ipv6 pim bsr-border	850
9.2.6	ipv6 pim bsr-candidate	850
9.2.7	ipv6 pim dr-priority	851
9.2.8	ipv6 pim join-prune-interval	851
9.2.9	ipv6 pim rp-address	852
9.2.10	ipv6 pim rp-candidate	853
9.2.11	ipv6 pim ssm	853
9.2.12	show ipv6 pim	854
9.2.13	show ipv6 pim ssm	855
9.2.14	show ipv6 pim interface	855
9.2.15	show ipv6 pim neighbor	856
9.2.16	show ipv6 pim bsr-router	857
9.2.17	show ipv6 pim rp-hash	858
9.2.18	show ipv6 pim rp mapping	858
9.3	IPv6 MLD Commands.....	859
9.3.1	ipv6 mld router	859
9.3.2	ipv6 mld query-interval	860

9.3.3	ipv6 mld query-max-response-time	860
9.3.4	ipv6 mld last-member-query-interval	860
9.3.5	ipv6 mld last-member-query-count	861
9.3.6	ipv6 mld version	861
9.3.7	show ipv6 mld groups	861
9.3.8	show ipv6 mld interface	863
9.3.9	show ipv6 mld traffic	864
9.3.10	clear ipv6 mld counters	864
9.3.11	clear ipv6 mld traffic	864
9.4	IPv6 MLD-Proxy Commands	865
9.4.1	ipv6 mld-proxy	865
9.4.2	ipv6 mld-proxy unsolicit-rprt-interval	865
9.4.3	ipv6 mld-proxy reset-status	865
9.4.4	show ipv6 mld-proxy	866
9.4.5	show ipv6 mld-proxy interface	866
9.4.6	show ipv6 mld-proxy groups	867
9.4.7	show ipv6 mld-proxy groups detail	868
10	FASTPATH Log Messages	870
10.1	Core	870
10.2	Utilities	872
10.3	Management.....	875
10.4	Switching.....	879
10.5	QoS.....	885
10.6	Routing/IPv6 Routing.....	886
10.7	Multicast.....	889
10.8	Technologies	894
10.9	O/S Support.....	895

About this Book

This document describes command-line interface (CLI) commands you use to view and configure FASTPATH software. You can access the CLI by using a direct connection to the serial port or by using telnet or SSH over a remote network connection.

This document is for system administrators who configure and operate systems using FASTPATH software. It provides an understanding of the configuration options of the FASTPATH software. Software engineers who integrate FASTPATH software into their hardware platform can also benefit from a description of the configuration options.

This document assumes that the reader has an understanding of the FASTPATH software base and has read the appropriate specification for the relevant networking device platform. It also assumes that the reader has a basic knowledge of Ethernet and networking concepts.

How to Use this Document

Chapter 1, See “Using the Command-Line Interface” on page 46., details the procedure to quickly become acquainted with the FASTPATH software.



Note...

Refer to the release notes for the FASTPATH application level code. The release notes detail the platform specific functionality of the Switching, Routing, SNMP, Config, Management, and Bandwidth Provisioning packages. The suite of features supported by the FASTPATH packages are not available on all the platforms to which FASTPATH has been ported.

Proprietary Note

This document contains information proprietary to Kontron AG. It may not be copied or transmitted by any means, disclosed to others, or stored in any retrieval system or media without the prior written consent of Kontron AG or one of its authorized agents.

The information contained in this document is, to the best of our knowledge, entirely correct. However, Kontron AG cannot accept liability for any inaccuracies or the consequences thereof, or for any liability arising from the use or application of any circuit, product, or example shown in this document.

Kontron AG reserves the right to change, modify, or improve this document or the product described herein, as seen fit by Kontron AG without further notice.

Trademarks

Broadcom[®], the pulse logo, Connecting everything[®], the Connecting everything logo, and FASTPATH[®] are among the trademarks of Broadcom Corporation and/or its affiliates in the United States, certain other countries and/or the EU. Any other trademarks or trade names mentioned are the property of their respective owners.

Linux is a registered trademark of Linus Torvalds.

Kontron AG and the *Kontron* logo are trade marks owned by Kontron AG, Germany. In addition, this document may include names, company logos and trademarks, which are registered trademarks and, therefore, proprietary to their respective owners.

Environmental Protection Statement

This product has been manufactured to satisfy environmental protection requirements where possible. Many of the components used (structural parts, printed circuit boards, connectors, batteries, etc.) are capable of being recycled.

Final disposition of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

Advisory Conventions



CAUTION



This symbol and title indicate potential damage to hardware and tells you how to avoid the problem.



CAUTION



Electric Shock

This symbol and title warn of hazards due to electrical shocks (> 60V) when touching products or parts of them. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.



WARNING



This symbol and title emphasize points which, if not fully understood and taken into consideration by the reader, may endanger your health and/or result in damage to your material.



ESD Sensitive Device

This symbol and title inform that electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Please read also the section "Special Handling and Unpacking Instructions".



Note...

This symbol and title emphasize aspects the reader should read through carefully for his or her own advantage.



CE Conformity

This symbol indicates that the product described in this manual is in compliance with all applied CE standards. Please refer also to the section „Regulatory compliance Statements“ in this manual.

Safety Instructions

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.



WARNING



All operations on this device must be carried out by sufficiently skilled personnel only.



WARNING



Do not connect a switch port to a telephone line.



WARNING



For installation in a Hot-Plug system, observe the safety instructions specific to the system. Read the relevant documentation.



CAUTION



Electric Shock

High voltages are present inside the chassis when the unit's power cord is plugged into an electrical outlet. Turn off system power, turn off the power supply, and then disconnect the power cord from its source before removing the chassis cover. Turning off the system power switch does not remove power to components.



CAUTION



Laser Lights!

Laser light from fiber-optic transmission cables and components can damage your eyes. The laser components plugged into the switch are Class 1 laser components. Class 1 laser is considered incapable of producing damaging radiation levels during normal operation or maintenance.

To avoid damaging your eyes and to continue safe operation in case of abnormal circumstances:

- Never look directly into the outlets of fiber-optic transmission components or fiber-optic cables with unprotected eyes.
- Never allow fiber-optic transmission path to operate until all the connections have been made.
- Always fit protective plugs to any unused ports of the switch.

General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the device, which are not explicitly approved by Kontron AG and described in this manual or received from Kontron's Technical Support as a special handling instruction, will void your warranty.

This device should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This applies also to the operational temperature range of the specific board version, which must not be exceeded. If batteries are present their temperature restrictions must be taken into account.

Two Year Warranty

Kontron AG grants the original purchaser of Kontron's products a *TWO YEAR LIMITED HARDWARE WARRANTY* as described in the following. However, no other warranties that may be granted or implied by anyone on behalf of Kontron are valid unless the consumer has the express written consent of Kontron AG.

Kontron AG warrants their own products, excluding software, to be free from manufacturing and material defects for a period of 24 consecutive months from the date of purchase. This warranty is not transferable nor extendible to cover any other users or long-term storage of the product. It does not cover products which have been modified, altered or repaired by any other party than Kontron or their authorized agents. Furthermore, any product which has been, or is suspected of being damaged as a result of negligence, improper use, incorrect handling, servicing or maintenance, or which has been damaged as a result of excessive current/voltage or temperature, or which has had its serial number(s), any other markings or parts thereof altered, defaced or removed will also be excluded from this warranty.

If the customer's eligibility for warranty has not been voided, in the event of any claim, he may return the product at the earliest possible convenience to the original place of purchase, together with a copy of the original document of purchase, a full description of the application the product is used on and a description of the defect. Pack the product in such a way as to ensure safe transportation (see our safety instructions).

Kontron provides for repair or replacement of any part, assembly or sub-assembly at their own discretion, or to refund the original cost of purchase, if appropriate. In the event of repair, refunding or replacement of any part, the ownership of the removed or replaced parts reverts to Kontron, and the remaining part of the original guarantee, or any new guarantee to cover the repaired or replaced items, will be transferred to cover the new or repaired items. Any extensions to the original guarantee are considered gestures of goodwill, and will be defined in the "Repair Report" issued by Kontron with the repaired or replaced item.

Kontron will not accept liability for any further claims resulting directly or indirectly from any warranty claim, other than the above specified repair, replacement or refunding. In particular, all claims for damage to any system or process in which the product was employed, or any loss incurred as a result of the product not functioning at any given time, are excluded. The extent of Kontron liability to the customer shall not exceed the original purchase price of the item for which the claim exists.

Kontron issues no warranty or representation, either explicit or implicit, with respect to its products' reliability, fitness, quality, marketability or ability to fulfil any particular application or purpose. As a result, the products are sold "as is," and the responsibility to ensure their suitability for any given task remains that of the purchaser. In no event will Kontron be liable for direct, indirect or consequential damages resulting from the use of our hardware or software products, or documentation, even if Kontron were advised of the possibility of such claims prior to the purchase of the product or during any period since the date of its purchase.

Please remember that no Kontron employee, dealer or agent is authorized to make any modification or addition to the above specified terms, either verbally or in any other form, written or electronically transmitted, without the company's consent.

1 Using the Command-Line Interface

The command-line interface (CLI) is a text-based way to manage and monitor the switch management application. You can access the CLI by using a direct serial connection or by using a remote logical connection with telnet or SSH.

This chapter describes the CLI syntax, conventions, and modes. It contains the following sections:

- “Command Syntax” on page 46
- “Command Conventions” on page 47
- “Common Parameter Values” on page 47
- “slot/port Naming Convention” on page 48
- “Using the “No” Form of a Command” on page 49
- “FASTPATH Modules” on page 50
- “Command Modes” on page 51
- “Command Completion and Abbreviation” on page 54
- “CLI Error Messages” on page 54
- “CLI Line-Editing Conventions” on page 55
- “Using CLI Help” on page 56
- “Accessing the CLI” on page 56

1.1 Command Syntax

A command is one or more words that might be followed by one or more parameters. Parameters can be required or optional values.

Some commands, such as **show network** or **clear vlan**, do not require parameters. Other commands, such as **network parms**, require that you supply a value after the command. You must type the parameter values in a specific order, and optional parameters follow required parameters. The following example describes the **network parms** command syntax:

Format **network parms** *ipaddr netmask [gateway]*

- **network parms** is the command name.
- *ipaddr* and *netmask* are parameters and represent required values that you must enter after you type the command keywords.
- *[gateway]* is an optional parameter, so you are not required to enter a value in place of the parameter.

The *CLI Command Reference* lists each command by the command name and provides a brief description of the command. Each command reference also contains the following information:

- Format shows the command keywords and the required and optional parameters.
- Mode identifies the command mode you must be in to access the command.
- Default shows the default value, if any, of a configurable setting on the device.

The **show** commands also contain a description of the information that the command shows.

1.2 Command Conventions

In this document, the command name is in **bold** font. Parameters are in *italic font*. You must replace the parameter name with an appropriate value, which might be a name or number. Parameters are order dependent.

The parameters for a command might include mandatory values, optional values, or keyword choices. [Table 1-1](#) describes the conventions this document uses to distinguish between value types.

Table1-1: Parameter Conventions

Symbol	Example	Description
<> angle brackets	<value>	Indicates that you must enter a value in place of the brackets and text inside them.
[] square brackets	[value]	Indicates an optional parameter that you can enter in place of the brackets and text inside them.
{ } curly braces	{choice1 choice2}	Indicates that you must select a parameter from the list of choices.
Vertical bars	choice1 choice2	Separates the mutually exclusive choices.
[{ }] Braces within square brackets	[{choice1 choice2}]	Indicates a choice within an optional element.

1.3 Common Parameter Values

Parameter values might be names (strings) or numbers. To use spaces as part of a name parameter, enclose the name value in double quotes. For example, the expression "System Name with Spaces" forces the system to accept the spaces. Empty strings ("") are not valid user-defined strings.

The following table describes common parameter values and value formatting.

Table1-2: Parameter Descriptions

Parameter	Description
ipaddr	This parameter is a valid IP address. You can enter the IP address in the following formats: a (32 bits) a.b (8.24 bits) a.b.c (8.8.16 bits) a.b.c.d (8.8.8.8) In addition to these formats, the CLI accepts decimal, hexadecimal and octal formats through the following input formats (where <i>n</i> is any valid hexadecimal, octal or decimal number): 0xn (CLI assumes hexadecimal format) 0n (CLI assumes octal format with leading zeros) n (CLI assumes decimal format)
ipv6-address	FE80:0000:0000:0000:020F:24FF:FEBF:DBCB, or FE80:0:0:0:20F:24FF:FEBF:DBCB, or FE80::20F24FF:FEBF:DBCB, or FE80:0:0:0:20F:24FF:128:141:49:32 For additional information, refer to RFC 3513.
Interface or 0/	0/ 0/
Logical Interface	Represents a logical slot and port number. This is applicable in the case of a port-channel (LAG). You can use the logical 0/ to configure the port-channel.
Character strings	Use double quotation marks to identify character strings, for example, "System Name with Spaces". An empty string ("") is not valid.

1.4 slot/port Naming Convention

FASTPATH software references physical entities such as cards and ports by using a slot/port naming convention. The FASTPATH software also uses this convention to identify certain logical entities, such as Port-Channel interfaces.

The slot number has two uses. In the case of physical ports, it identifies the card containing the ports. In the case of logical and CPU ports it also identifies the type of interface or port.

Table1-3: Type of Slots

Slot Type	Description
Physical slot numbers	Physical slot numbers begin with zero, and are allocated up to the maximum number of physical slots.
Logical slot numbers	Logical slots immediately follow physical slots and identify port-channel (LAG) or router interfaces.
CPU slot numbers	The CPU slots immediately follow the logical slots.

The port identifies the specific physical port or logical interface being managed on a given slot.

Table1-4: Type of Ports

Port Type	Description
Physical Ports	The physical ports for each slot are numbered sequentially starting from zero.
Logical Interfaces	Port-channel or Link Aggregation Group (LAG) interfaces are logical interfaces that are only used for bridging functions. VLAN routing interfaces are only used for routing functions. Loopback interfaces are logical interfaces that are always up. Tunnel interfaces are logical point-to-point links that carry encapsulated packets.
CPU ports	CPU ports are handled by the driver as one or more physical entities located on physical slots.

**Note...**

In the CLI, loopback and tunnel interfaces do not use the 0/ format. To specify a loopback interface, you use the loopback ID. To specify a tunnel interface, use the tunnel ID.

1.5 Using the “No” Form of a Command

The **no** keyword is a specific form of an existing command and does not represent a new or distinct command. Almost every configuration command has a **no** form. In general, use the **no** form to reverse the action of a command or reset a value back to the default. For example, the **no shutdown** configuration command reverses the shutdown of an interface. Use the command without the keyword **no** to re-enable a disabled feature or to enable a feature that is disabled by default. Only the configuration commands are available in the **no** form.

1.6 Executing Show Commands

All show commands can be issued from any configuration mode (Global Configuration, Interface Configuration, VLAN Configuration, etc.). The show commands provide information about system and feature-specific configuration, status, and statistics. Previously, show commands could be issued only in User EXEC or Privileged EXEC modes.

1.7 CLI Output Filtering

Many CLI show commands include considerable content to display to the user. This can make output confusing and cumbersome to parse through to find the information of desired importance. The CLI Output Filtering feature allows the user, when executing CLI show display commands, to optionally specify arguments to filter the CLI output to display only desired information. The result is to simplify the display and make it easier for the user to find the information the user is interested in.

The main functions of the CLI Output Filtering feature are:

- **Pagination Control**
 - Supports enabling/disabling paginated output for all **show** CLI commands. When disabled, output is displayed in its entirety. When enabled, output is displayed page-by-page such that content does not scroll off the terminal screen until the user presses a key to continue. --More-- or (q)uit is displayed at the end of each page.
 - When pagination is enabled, press the return key to advance a single line, press q or Q to stop pagination, or press any other key to advance a whole page. These keys are not configurable.

**Note...**

Although some FASTPATH **show** commands already support pagination, the implementation is unique per command and not generic to all commands.

- Output Filtering
 - “Grep”-like control for modifying the displayed output to only show the user-desired content.
 - Filter displayed output to only include lines containing a specified string match.
 - Filter displayed output to exclude lines containing a specified string match.
 - Filter displayed output to only include lines including and following a specified string match.
 - Filter displayed output to only include a specified section of the content (e.g. “interface 0/1”) with a configurable end-of-section delimiter.
 - String matching should be case insensitive.
 - Pagination, when enabled, also applies to filtered output.

Example: The following shows an example of the extensions made to the CLI show commands for the Output Filtering feature.

```
(Routing) #show running-config ?
<cr>                Press enter to execute the command.
|                  Output filter options.
<scriptname>       Script file name for writing active configuration.
all                Show all the running configuration on the switch.
interface          Display the running configuration for specified interface on the switch.
```

```
(Routing) #show running-config | ?
begin              Begin with the line that matches
exclude            Exclude lines that matches
include            Include lines that matches
section            Display portion of lines
```

1.8 FASTPATH Modules

FASTPATH software consists of flexible modules that can be applied in various combinations to develop advanced Layer 2/3/4+ products. The commands and command modes available on your switch depend on the installed modules. Additionally, for some **show** commands, the output fields might change based on the modules included in the FASTPATH software.

The FASTPATH software suite includes the following modules:

- Switching (Layer 2)
- Routing (Layer 3)
- Multicast
- Quality of Service
- Management (CLI, Web UI and SNMP)

Not all modules are available for all platforms or software releases.

1.9 Command Modes

The CLI groups commands into modes according to the command function. Each of the command modes supports specific FASTPATH software commands. The commands in one mode are not available until you switch to that particular mode, with the exception of the User EXEC mode commands. You can execute the User EXEC mode commands in the Privileged EXEC mode.

The command prompt changes in each command mode to help you identify the current mode. [Table 1-5](#) describes the command modes and the prompts visible in that mode.



Note...

The command modes available on your switch depend on the software modules that are installed.

Table1-5: CLI Command Modes

Command Mode	Prompt	Mode Description
User EXEC	Switch>	Contains a limited set of commands to view basic system information.
Privileged EXEC	Switch#	Allows you to issue any EXEC command, enter the VLAN mode, or enter the Global Configuration mode.
Global Config	Switch (Config) #	Groups general setup commands and permits you to make modifications to the running configuration.
VLAN Config	Switch (Vlan) #	Groups all the VLAN commands.
Interface Config	Switch (Interface slot/port) # Switch (Interface Loopback id) # Switch (Interface Tunnel id) # Switch (Interface slot/port (startrange)-slot/port(endrange) # Switch (Interface lag lag-intf-num) # Switch (Interface vlan vlan-id) #	Manages the operation of an interface and provides access to the router interface configuration commands. Use this mode to set up a physical port for a specific logical connection operation. You can also use this mode to manage the operation of a range of interfaces. For example the prompt may display as follows: Switch (Interface 0/1 - 0/4) # Enters LAG Interface configuration mode for the specified LAG. Enters VLAN routing interface configuration mode for the specified VLAN ID.
Line Console	Switch (config-line) #	Contains commands to configure outbound telnet settings and console interface settings, as well as to configure console login/enable authentication.
Line SSH	Switch (config-ssh) #	Contains commands to configure SSH login/enable authentication.
Line Telnet	Switch (config-telnet) #	Contains commands to configure telnet login/enable authentication.
AAA IAS User Config	Switch (Config-IAS-User) #	Allows password configuration for a user in the IAS database.

Table1-5: CLI Command Modes (Continued)

Command Mode	Prompt	Mode Description
Policy Map Config	Switch (Config-policy-map) #	Contains the QoS Policy-Map configuration commands.
Policy Class Config	Switch (Config-policy-class-map) #	Consists of class creation, deletion, and matching commands. The class match commands specify Layer 2, Layer 3, and general match criteria.
Class Map Config	Switch (Config-class-map) #	Contains the QoS class map configuration commands for IPv4.
Ipv6_Class-Map Config	Switch (Config-class-map) #	Contains the QoS class map configuration commands for IPv6.
Router OSPF Config	Switch (Config-router) #	Contains the OSPF configuration commands.
Router OSPFv3 Config	Switch (Config rtr) #	Contains the OSPFv3 configuration commands.
Router RIP Config	Switch (Config-router) #	Contains the RIP configuration commands.
Route Map Config	Switch (config-route-map) #	Contains the route map configuration commands.
IPv6 Address Family Config	Switch (Config-router-af) #	Contains the IPv6 address family configuration commands.
MAC Access-list Config	Switch (Config-mac-access-list) #	Allows you to create a MAC Access-List and to enter the mode containing MAC Access-List configuration commands.
TACACS Config	Switch (Tacacs) #	Contains commands to configure properties for the TACACS servers.
DHCP Pool Config	Switch (Config dhcp-pool) #	Contains the DHCP server IP address pool configuration commands.
DHCPv6 Pool Config	Switch (Config dhcp6-pool) #	Contains the DHCPv6 server IPv6 address pool configuration commands.
ARP Access-List Config Mode	Switch (Config-arp-access-list) #	Contains commands to add ARP ACL rules in an ARP Access List.
Support Mode	Switch (Support) #	Allows access to the support commands, which should only be used by the manufacturer's technical support personnel as improper use could cause unexpected system behavior and/or invalidate product warranty.

Table 1-6 explains how to enter or exit each mode.

Table1-6: CLI Mode Access and Exit

Command Mode	Access Method	Exit or Access Previous Mode
User EXEC	This is the first level of access.	To exit, enter <code>logout</code> .
Privileged EXEC	From the User EXEC mode, enter <code>enable</code> .	To exit to the User EXEC mode, enter <code>exit</code> or press <code>Ctrl-Z</code> .
Global Config	From the Privileged EXEC mode, enter <code>configure</code> .	To exit to the Privileged EXEC mode, enter <code>exit</code> , or press <code>Ctrl-Z</code> .
VLAN Config	From the Privileged EXEC mode, enter <code>vlan database</code> .	To exit to the Privileged EXEC mode, enter <code>exit</code> , or press <code>Ctrl-Z</code> .
Interface Config	From the Global Config mode, enter <code>interface <0/></code> or <code>interface loopback <id></code> or <code>interface tunnel <id></code>	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Line Config	From the Global Config mode, enter <code>lineconfig</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Line SSH	From the Global Config mode, enter <code>line ssh</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Line Telnet	From the Global Config mode, enter <code>line telnet</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
AAA IAS User Config	From the Global Config mode, enter <code>aaa ias-user username name</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Policy-Map Config	From the Global Config mode, enter <code>policy-map</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Policy-Class-Map Config	From the Policy Map mode enter <code>class</code> .	To exit to the Policy Map mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Class-Map Config	From the Global Config mode, enter <code>class-map</code> , and specify the optional keyword <code>ipv4</code> to specify the Layer 3 protocol for this class. See "class-map" on page 747 for more information.	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
MAC Access-list Config	From the Global Config mode, enter <code>mac access-list extended name</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
VPC	From Global Config mode, enter <code>vpc</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Ipv6-Class-Map Config	From the Global Config mode, enter <code>class-map</code> and specify the optional keyword <code>ipv6</code> to specify the Layer 3 protocol for this class. See "class-map" on page 747 for more information.	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Router OSPF Config	From the Global Config mode, enter <code>router ospf</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .

Table1-6: CLI Mode Access and Exit (Continued)

Command Mode	Access Method	Exit or Access Previous Mode
Router OSPFv3 Config	From the Global Config mode, enter <code>ipv6 router ospf</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Router RIP Config	From the Global Config mode, enter <code>router rip</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Route Map Config	From the Global Config mode, enter <code>route-map map-tag</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
IPv6 Address Family Config	From the BGP Router Config mode, enter <code>address-family ipv6</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
MAC Access-list Config	From the Global Config mode, enter <code>mac access-list extended name</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
TACACS Config	From the Global Config mode, enter <code>tacacs-server host ip-addr</code> , where <code>ip-addr</code> is the IP address of the TACACS server on your network.	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
DHCP Pool Config	From the Global Config mode, enter <code>ip dhcp pool pool-name</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
DHCPv6 Pool Config	From the Global Config mode, enter <code>ip dhcpv6 pool pool-name</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
ARP Access-List Config Mode	From the Global Config mode, enter the <code>arp access-list</code> command.	To exit to the Global Config mode, enter the <code>exit</code> command. To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Support Mode	From the Privileged EXEC mode, enter <code>support</code> . Note: The <code>support</code> command is available only if the <code>techsupport enable</code> command has been issued.	To exit to the Privileged EXEC mode, enter <code>exit</code> , or press <code>Ctrl-Z</code> .

1.10 Command Completion and Abbreviation

Command completion finishes spelling the command when you type enough letters of a command to uniquely identify the command keyword. Once you have entered enough letters, press the SPACEBAR or TAB key to complete the word.

Command abbreviation allows you to execute a command when you have entered there are enough letters to uniquely identify the command. You must enter all of the required keywords and parameters before you enter the command.

1.11 CLI Error Messages

If you enter a command and the system is unable to execute it, an error message appears. [Table 1-7](#) describes the most common CLI error messages.

Table1-7: CLI Error Messages

Message Text	Description
% Invalid input detected at '^' marker.	Indicates that you entered an incorrect or unavailable command. The carat (^) shows where the invalid text is detected. This message also appears if any of the parameters or values are not recognized.
Command not found / Incomplete command. Use ? to list commands.	Indicates that you did not enter the required keywords or values.
Ambiguous command	Indicates that you did not enter enough letters to uniquely identify the command.

1.12 CLI Line-Editing Conventions

Table 1-8 describes the key combinations you can use to edit commands or increase the speed of command entry. You can access this list from the CLI by entering **help** from the User or Privileged EXEC modes.

Table1-8: CLI Editing Conventions

Key Sequence	Description
DEL or Backspace	Delete previous character
Ctrl-A	Go to beginning of line
Ctrl-E	Go to end of line
Ctrl-F	Go forward one character
Ctrl-B	Go backward one character
Ctrl-D	Delete current character
Ctrl-U, X	Delete to beginning of line
Ctrl-K	Delete to end of line
Ctrl-W	Delete previous word
Ctrl-T	Transpose previous character
Ctrl-P	Go to previous line in history buffer
Ctrl-R	Rewrites or pastes the line
Ctrl-N	Go to next line in history buffer
Ctrl-Y	Prints last deleted character
Ctrl-Q	Enables serial flow
Ctrl-S	Disables serial flow
Ctrl-Z	Return to root command prompt
Tab, <SPACE>	Command-line completion
Exit	Go to next lower command prompt
?	List available commands, keywords, or parameters

1.13 Using CLI Help

Enter a question mark (?) at the command prompt to display the commands available in the current mode.
(switch) >?

enable	Enter into user privilege mode.
help	Display help for various special keys.
logout	Exit this session. Any unsaved changes are lost.
ping	Send ICMP echo packets to a specified IP address.
quit	Exit this session. Any unsaved changes are lost.
show	Display Switch Options and Settings.
telnet	Telnet to a remote host.

Enter a question mark (?) after each word you enter to display available command keywords or parameters.
(switch) #network ?

javamode	Enable/Disable.
mgmt_vlan	Configure the Management VLAN ID of the switch.
parms	Configure Network Parameters of the router.
protocol	Select DHCP, BootP, or None as the network config protocol.

If the help output shows a parameter in angle brackets, you must replace the parameter with a value.
(switch) #network parms ?

ipaddr	Enter the IP address.

If there are no additional command keywords or parameters, or if additional parameters are optional, the following message appears in the output:

<cr>	Press Enter to execute the command

You can also enter a question mark (?) after typing one or more characters of a word to list the available command or parameters that begin with the letters, as shown in the following example:
(switch) #show m?

mac-addr-table	mac-address-table	monitor

1.14 Accessing the CLI

You can access the CLI by using a direct console connection or by using a telnet or SSH connection from a remote management host.

For the initial connection, you must use a direct connection to the console port. You cannot access the system remotely until the system has an IP address, subnet mask, and default gateway. You can set the network configuration information manually, or you can configure the system to accept these settings from a BOOTP or DHCP server on your network. For more information, see "Network Interface Commands" on page 57.

2 Management Commands

This chapter describes the management commands available in the FASTPATH CLI.

The Management Commands chapter contains the following sections:

- "Network Interface Commands" on page 57"
- "Console Port Access Commands" on page 63"
- "Telnet Commands" on page 64"
- "Secure Shell Commands" on page 68"
- "Management Security Commands" on page 71"
- "Hypertext Transfer Protocol Commands" on page 72"
- "Access Commands" on page 79"
- "User Account Commands" on page 80"
- "SNMP Commands" on page 105"
- "RADIUS Commands" on page 119"
- "TACACS+ Commands" on page 134"
- "Configuration Scripting Commands" on page 138"
- "Prelogin Banner, System Prompt, and Host Name Commands" on page 140"



Note...

The commands in this chapter are in one of three functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- Clear commands clear some or all of the settings to factory defaults.

2.1 Network Interface Commands

This section describes the commands you use to configure a logical interface for management access. To configure the management VLAN, see "network mgmt_vlan" on page 341".

2.1.1 enable (Privileged EXEC access)

This command gives you access to the Privileged EXEC mode. From the Privileged EXEC mode, you can configure the network interface.

Format enable
Mode User EXEC

2.1.2 do (Privileged EXEC commands)

This command executes Privileged EXEC mode commands from any of the configuration modes.

Format *do Priv Exec Mode Command*

- Mode**
- Global Config
 - Interface Config
 - VLAN Config
 - Routing Config

Example: The following is an example of the `do` command that executes the Privileged EXEC command `script list` in Global Config Mode.

```
(Routing) #configure
```

```
(Routing)(config)#do script list
```

Configuration Script Name	Size(Bytes)
-----	-----
backup-config	2105
running-config	4483
startup-config	445

```
3 configuration script(s) found.
2041 Kbytes free.
```

```
Routing(config)#
```

2.1.3 serviceport ip

This command sets the IP address, the netmask and the gateway of the network management port. You can specify the `none` option to clear the IPv4 address and mask and the default gateway (i.e., reset each of these values to 0.0.0.0).

Format *serviceport ip {ipaddr netmask [gateway] | none}*

Mode Privileged EXEC

2.1.4 serviceport protocol

This command specifies the network management port configuration protocol. If you modify this value, the change is effective immediately. If you use the `bootp` parameter, the switch periodically sends requests to a BootP server until a response is received. If you use the `dhcp` parameter, the switch periodically sends requests to a DHCP server until a response is received. If you use the `none` parameter, you must configure the network information for the switch manually.

Format *serviceport protocol {none | bootp | dhcp}*

Mode Privileged EXEC

2.1.5 serviceport protocol dhcp

This command enables the DHCPv4 client on a Service port. If the `client-id` optional parameter is given, the DHCP client messages are sent with the client identifier option.

Default	none
Format	serviceport protocol dhcp [client-id]
Mode	Privileged EXEC

There is no support for the **no** form of the command **serviceport protocol dhcp client-id**. To remove the `client-id` option from the DHCP client messages, issue the command **serviceport protocol dhcp** without the `client-id` option. The command **serviceport protocol none** can be used to disable the DHCP client and client-id option on the interface.

Example: The following shows an example of the command.

```
(Routing) # serviceport protocol dhcp client-id
```

2.1.6 network parms

This command sets the IP address, subnet mask and gateway of the device. The IP address and the gateway must be on the same subnet. When you specify the `none` option, the IP address and subnet mask are set to the factory defaults.

Format	network parms {ipaddr netmask [gateway] none}
Mode	Privileged EXEC

2.1.7 network protocol

This command specifies the network configuration protocol to be used. If you modify this value, change is effective immediately. If you use the `bootp` parameter, the switch periodically sends requests to a BootP server until a response is received. If you use the `dhcp` parameter, the switch periodically sends requests to a DHCP server until a response is received. If you use the `none` parameter, you must configure the network information for the switch manually.

Default	none
Format	network protocol {none bootp dhcp}
Mode	Privileged EXEC

2.1.8 network protocol dhcp

This command enables the DHCPv4 client on a Network port. If the `client-id` optional parameter is given, the DHCP client messages are sent with the client identifier option.

Default	none
Format	network protocol dhcp [client-id]
Mode	Global Config

There is no support for the **no** form of the command **network protocol dhcp client-id**. To remove the `client-id` option from the DHCP client messages, issue the command **network protocol dhcp** without the `client-id` option. The command **network protocol none** can be used to disable the DHCP client and client-id option on the interface.

Example: The following shows an example of the command.

```
(Routing) # network protocol dhcp client-id
```

2.1.9 network mac-address

This command sets locally administered MAC addresses. The following rules apply:

- Bit 6 of byte 0 (called the U/L bit) indicates whether the address is universally administered (b'0') or locally administered (b'1').
- Bit 7 of byte 0 (called the I/G bit) indicates whether the destination address is an individual address (b'0') or a group address (b'1').
- The second character, of the twelve character macaddr, must be 2, 6, A or E.

A locally administered address must have bit 6 On (b'1') and bit 7 Off (b'0').

Format network mac-address *macaddr*

Mode Privileged EXEC

2.1.10 network mac-type

This command specifies whether the switch uses the burned in MAC address or the locally-administered MAC address.

Default burnedin

Format network mac-type {local | burnedin}

Mode Privileged EXEC

2.1.10.1 no network mac-type

This command resets the value of MAC address to its default.

Format no network mac-type

Mode Privileged EXEC

2.1.11 network javamode

This command specifies whether or not the switch should allow access to the Java applet in the header frame of the Web interface. When access is enabled, the Java applet can be viewed from the Web interface. When access is disabled, the user cannot view the Java applet.

Default enabled

Format network javamode

Mode Privileged EXEC

2.1.11.1 no network javamode

This command disallows access to the Java applet in the header frame of the Web interface. When access is disabled, the user cannot view the Java applet.

Format no network javamode

Mode Privileged EXEC

2.1.12 show network

This command displays configuration settings associated with the switch's network interface. The network interface is the logical interface used for in-band connectivity with the switch via any of the switch's front panel ports. The configuration parameters associated with the switch's network interface do not affect the configuration of the front panel ports through which traffic is switched or routed. The network interface is always considered to be up, whether or not any member ports are up; therefore, the `show network` command will always show **Interface Status** as Up.

Format show network

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface Status	The network interface status; it is always considered to be "up".
IP Address	The IP address of the interface. The factory default value is 0.0.0.0.
Subnet Mask	The IP subnet mask for this interface. The factory default value is 0.0.0.0.
Default Gateway	The default gateway for this IP interface. The factory default value is 0.0.0.0.
IPv6 Administrative Mode	Whether enabled or disabled.
IPv6 Address/Length	The IPv6 address and length.
IPv6 Default Router	The IPv6 default router address.
Burned In MAC Address	The burned in MAC address used for in-band connectivity.
Locally Administered MAC Address	If desired, a locally administered MAC address can be configured for in-band connectivity. To take effect, 'MAC Address Type' must be set to 'Locally Administered'. Enter the address as twelve hexadecimal digits (6 bytes) with a colon between each byte. Bit 1 of byte 0 must be set to a 1 and bit 0 to a 0, i.e. byte 0 should have the following mask 'xxxxxx10'. The MAC address used by this bridge when it must be referred to in a unique fashion. It is recommended that this be the numerically smallest MAC address of all ports that belong to this bridge. However it is only required to be unique. When concatenated with dot1dStpPriority a unique Bridge Identifier is formed which is used in the Spanning Tree Protocol.
MAC Address Type	The MAC address which should be used for in-band connectivity. The choices are the burned in or the Locally Administered address. The factory default is to use the burned in MAC address.
Configured IPv4 Protocol	The IPv4 network protocol being used. The options are bootp dhcp none.
Configured IPv6 Protocol	The IPv6 network protocol being used. The options are dhcp none.
DHCPv6 Client DUID	The DHCPv6 client's unique client identifier. This row is displayed only when the configured IPv6 protocol is dhcp.
IPv6 Autoconfig Mode	Whether IPv6 Stateless address autoconfiguration is enabled or disabled.
DHCP Client Identifier	The client identifier is displayed in the output of the command only if DHCP is enabled with the client-id option on the network port. See "network protocol dhcp" on page 59".

Example: The following shows example CLI display output for the network port.

```
(admin) #show network
```

```
Interface Status..... Up
IP Address..... 10.250.3.1
Subnet Mask..... 255.255.255.0
Default Gateway..... 10.250.3.3
IPv6 Administrative Mode..... Enabled
IPv6 Prefix is ..... fe80::210:18ff:fe82:64c/64
IPv6 Prefix is ..... 2003::1/128
IPv6 Default Router is ..... fe80::204:76ff:fe73:423a
```

```

Burned In MAC Address..... 00:10:18:82:06:4C
Locally Administered MAC address..... 00:00:00:00:00:00
MAC Address Type..... Burned In
Configured IPv4 Protocol ..... None
Configured IPv6 Protocol ..... DHCP
DHCPv6 Client DUID ..... 00:03:00:06:00:10:18:82:06:4C
IPv6 Autoconfig Mode..... Disabled
Management VLAN ID..... 1
DHCP Client Identifier..... 0fastpath-0010.1882.160B-v11

```

2.1.13 show serviceport

This command displays service port configuration information.

Format show serviceport

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Interface Status	The network interface status. It is always considered to be up.
IP Address	The IP address of the interface. The factory default value is 0.0.0.0.
Subnet Mask	The IP subnet mask for this interface. The factory default value is 0.0.0.0.
Default Gateway	The default gateway for this IP interface. The factory default value is 0.0.0.0.
IPv6 Administrative Mode	Whether enabled or disabled. Default value is enabled.
IPv6 Address/Length	The IPv6 address and length. Default is Link Local format.
IPv6 Default Router	The IPv6 default router address on the service port. The factory default value is an unspecified address.
Configured IPv4 Protocol	The IPv4 network protocol being used. The options are bootp dhcp none.
Configured IPv6 Protocol	The IPv6 network protocol being used. The options are dhcp none.
DHCPv6 Client DUID	The DHCPv6 client's unique client identifier. This row is displayed only when the configured IPv6 protocol is dhcp.
IPv6 Autoconfig Mode	Whether IPv6 Stateless address autoconfiguration is enabled or disabled.
Burned in MAC Address	The burned in MAC address used for in-band connectivity.
DHCP Client Identifier	The client identifier is displayed in the output of the command only if DHCP is enabled with the client-id option on the service port.

Example: The following shows example CLI display output for the service port.
(admin) #show serviceport

```

Interface Status..... Up
IP Address..... 10.230.3.51
Subnet Mask..... 255.255.255.0
Default Gateway..... 10.230.3.1
IPv6 Administrative Mode..... Enabled
IPv6 Prefix is ..... fe80::210:18ff:fe82:640/64
IPv6 Prefix is ..... 2005::21/128
IPv6 Default Router is ..... fe80::204:76ff:fe73:423a
Configured IPv4 Protocol ..... DHCP
Configured IPv6 Protocol ..... DHCP
DHCPv6 Client DUID ..... 00:03:00:06:00:10:18:82:06:4C
IPv6 Autoconfig Mode..... Disabled
Burned In MAC Address..... 00:10:18:82:06:4D
DHCP Client Identifier..... 0fastpath-0010.1882.160C

```

2.2 Console Port Access Commands

This section describes the commands you use to configure the console port. You can use a serial cable to connect a management host directly to the console port of the switch.

2.2.1 configure

This command gives you access to the Global Config mode. From the Global Config mode, you can configure a variety of system settings, including user accounts. From the Global Config mode, you can enter other command modes, including Line Config mode.

Format configure
Mode Privileged EXEC

2.2.2 line

This command gives you access to the Line Console mode, which allows you to configure various Telnet settings and the console port, as well as to configure console login/enable authentication.

Format line {console | telnet | ssh}
Mode Global Config

Term	Definition
console	Console terminal line.
telnet	Virtual terminal for remote console access (Telnet).
ssh	Virtual terminal for secured remote console access (SSH).

Example: The following shows an example of the CLI command.

```
(FASTPATH Routing)(config)#line telnet
(FASTPATH Routing)(config-telnet)#
```

2.2.3 serial baudrate

This command specifies the communication rate of the terminal interface. The supported rates are 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200.

Default 9600
Format serial baudrate {1200 | 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200}
Mode Line Config

2.2.3.1 no serial baudrate

This command sets the communication rate of the terminal interface.

Format no serial baudrate
Mode Line Config

2.2.4 serial timeout

This command specifies the maximum connect time (in minutes) without console activity. A value of 0 indicates that a console can be connected indefinitely. The time range is 0 to 160.

Default 5
Format serial timeout 0-160
Mode Line Config

2.2.4.1 no serial timeout

This command sets the maximum connect time (in minutes) without console activity.

Format no serial timeout
Mode Line Config

2.2.5 show serial

This command displays serial communication settings for the switch.

Format show serial
Modes

- Privileged EXEC
- User EXEC

Term	Definition
Serial Port Login Timeout (minutes)	The time, in minutes, of inactivity on a serial port connection, after which the switch will close the connection. A value of 0 disables the timeout.
Baud Rate (bps)	The default baud rate at which the serial port will try to connect.
Character Size (bits)	The number of bits in a character. The number of bits is always 8.
Flow Control	Whether Hardware Flow-Control is enabled or disabled. Hardware Flow Control is always disabled.
Stop Bits	The number of Stop bits per character. The number of Stop bits is always 1.
Parity	The parity method used on the Serial Port. The Parity Method is always None.

2.3 Telnet Commands

This section describes the commands you use to configure and view Telnet settings. You can use Telnet to manage the device from a remote management host.

2.3.1 ip telnet server enable

Use this command to enable Telnet connections to the system and to enable the Telnet Server Admin Mode. This command opens the Telnet listening port.

Default enabled
Format ip telnet server enable
Mode Privileged EXEC

2.3.1.1 no ip telnet server enable

Use this command to disable Telnet access to the system and to disable the Telnet Server Admin Mode. This command closes the Telnet listening port and disconnects all open Telnet sessions.

Format no ip telnet server enable

Mode Privileged EXEC

2.3.2 ip telnet port

This command configures the TCP port number on which the Telnet server listens for requests.

Default 23

Format ip telnet port 1-65535

Mode Privileged EXEC

2.3.2.1 no ip telnet port

This command restores the Telnet server listen port to its factory default value.

Format no ip telnet port

Mode Privileged EXEC

2.3.3 telnet

This command establishes a new outbound Telnet connection to a remote host. The *host* value must be a valid IP address or host name. Valid values for *port* should be a valid decimal integer in the range of 0 to 65535, where the default value is 23. If *[debug]* is used, the current Telnet options enabled is displayed. The optional *line* parameter sets the outbound Telnet operational mode as linemode where, by default, the operational mode is character mode. The *localecho* option enables local echo.

Format telnet ip-address/hostname port [debug] [line] [localecho]

Modes

- Privileged EXEC
- User EXEC

2.3.4 transport input telnet

This command regulates new Telnet sessions. If enabled, new Telnet sessions can be established until there are no more sessions available. An established session remains active until the session is ended or an abnormal network error ends the session.

**Note...**

If the Telnet Server Admin Mode is disabled, Telnet sessions cannot be established. Use the `ip telnet server enable` command to enable Telnet Server Admin Mode.

Default enabled

Format transport input telnet

Mode Line Config

2.3.4.1 no transport input telnet

Use this command to prevent new Telnet sessions from being established.

Format no transport input telnet

Mode Line Config

2.3.5 transport output telnet

This command regulates new outbound Telnet connections. If enabled, new outbound Telnet sessions can be established until the system reaches the maximum number of simultaneous outbound Telnet sessions allowed. An established session remains active until the session is ended or an abnormal network error ends it.

Default enabled

Format transport output telnet

Mode Line Config

2.3.5.1 no transport output telnet

Use this command to prevent new outbound Telnet connection from being established.

Format no transport output telnet

Mode Line Config

2.3.6 session-limit

This command specifies the maximum number of simultaneous outbound Telnet sessions. A value of 0 indicates that no outbound Telnet session can be established.

Default 5

Format session-limit 0-5

Mode Line Config

2.3.6.1 no session-limit

This command sets the maximum number of simultaneous outbound Telnet sessions to the default value.

Format no session-limit

Mode Line Config

2.3.7 session-timeout

This command sets the Telnet session timeout value. The timeout value unit of time is minutes.

Default 5

Format session-timeout 1-160

Mode Line Config

2.3.7.1 no session-timeout

This command sets the Telnet session timeout value to the default. The timeout value unit of time is minutes.

Format no session-timeout

Mode Line Config

2.3.8 telnetcon maxsessions

This command specifies the maximum number of Telnet connection sessions that can be established. A value of 0 indicates that no Telnet connection can be established. The range is 0-5.

Default 5

Format telnetcon maxsessions 0-5

Mode Privileged EXEC

2.3.8.1 no telnetcon maxsessions

This command sets the maximum number of Telnet connection sessions that can be established to the default value.

Format no telnetcon maxsessions

Mode Privileged EXEC

2.3.9 telnetcon timeout

This command sets the Telnet connection session timeout value, in minutes. A session is active as long as the session has not been idle for the value set. The time is a decimal value from 1 to 160.

**Note...**

When you change the timeout value, the new value is applied to all active and inactive sessions immediately. Any sessions that have been idle longer than the new timeout value are disconnected immediately.

Default 5

Format telnetcon timeout 1-160

Mode Privileged EXEC

2.3.9.1 no telnetcon timeout

This command sets the Telnet connection session timeout value to the default.

**Note...**

Changing the timeout value for active sessions does not become effective until the session is accessed again. Also, any keystroke activates the new timeout duration.

Format no telnetcon timeout

Mode Privileged EXEC

2.3.10 show telnet

This command displays the current outbound Telnet settings. In other words, these settings apply to Telnet connections initiated from the switch to a remote system.

Format show telnet

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Outbound Telnet Login Timeout	The number of minutes an outbound Telnet session is allowed to remain inactive before being logged off.
Maximum Number of Outbound Telnet Sessions	The number of simultaneous outbound Telnet connections allowed.
Allow New Outbound Telnet Sessions	Indicates whether outbound Telnet sessions will be allowed.

2.3.11 show telnetcon

This command displays the current inbound Telnet settings. In other words, these settings apply to Telnet connections initiated from a remote system to the switch.

Format show telnetcon

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Remote Connection Login Timeout (minutes)	This object indicates the number of minutes a remote connection session is allowed to remain inactive before being logged off. May be specified as a number from 1 to 160. The factory default is 5.
Maximum Number of Remote Connection Sessions	This object indicates the number of simultaneous remote connection sessions allowed. The factory default is 5.
Allow New Telnet Sessions	New Telnet sessions will not be allowed when this field is set to no. The factory default value is yes.
Telnet Server Admin Mode	If Telnet Admin mode is enabled or disabled.
Telnet Server Port	The configured TCP port number on which the Telnet server listens for requests. (The default is 23.)

2.4 Secure Shell Commands

This section describes the commands you use to configure Secure Shell (SSH) access to the switch. Use SSH to access the switch from a remote management host.

**Note...**

The system allows a maximum of 5 SSH sessions.

2.4.1 ip ssh

Use this command to enable SSH access to the system. (This command is the short form of the `ip ssh server enable` command)

Default	disabled
Format	ip ssh
Mode	Privileged EXEC

2.4.2 ip ssh port

Use this command to configure the TCP port number on which the SSH server listens for requests. Valid port numbers are from 1–65535.

Default	22
Format	ip ssh port 1-65535
Mode	Privileged EXEC

2.4.2.1 no ip ssh port

Use this command to restore the SSH server listen port to its factory default value.

Format	no ip ssh port
Mode	Privileged EXEC

2.4.3 ip ssh protocol

This command is used to set or remove protocol levels (or versions) for SSH. Either SSH1 (1), SSH2 (2), or both SSH 1 and SSH 2 (1 and 2) can be set.

Default	2
Format	ip ssh protocol [1] [2]
Mode	Privileged EXEC

2.4.4 ip ssh server enable

This command enables the IP secure shell server. No new SSH connections are allowed, but the existing SSH connections continue to work until timed-out or logged-out.

Default	enabled
Format	ip ssh server enable
Mode	Privileged EXEC

2.4.4.1 no ip ssh server enable

This command disables the IP secure shell server.

Format	no ip ssh server enable
Mode	Privileged EXEC

2.4.5 sshcon maxsessions

This command specifies the maximum number of SSH connection sessions that can be established. A value of 0 indicates that no ssh connection can be established. The range is 0 to 5.

Default 5
Format sshcon maxsessions 0-5
Mode Privileged EXEC

2.4.5.1 no sshcon maxsessions

This command sets the maximum number of allowed SSH connection sessions to the default value.

Format no sshcon maxsessions
Mode Privileged EXEC

2.4.6 sshcon timeout

This command sets the SSH connection session timeout value, in minutes. A session is active as long as the session has been idle for the value set. The time is a decimal value from 1 to 160.

Changing the timeout value for active sessions does not become effective until the session is re accessed. Also, any keystroke activates the new timeout duration.

Default 5
Format sshcon timeout 1-160
Mode Privileged EXEC

2.4.6.1 no sshcon timeout

This command sets the SSH connection session timeout value, in minutes, to the default.

Changing the timeout value for active sessions does not become effective until the session is re accessed. Also, any keystroke activates the new timeout duration.

Format no sshcon timeout
Mode Privileged EXEC

2.4.7 show ip ssh

This command displays the ssh settings.

Format show ip ssh
Mode Privileged EXEC

Term	Definition
Administrative Mode	This field indicates whether the administrative mode of SSH is enabled or disabled.
Protocol Level	The protocol level may have the values of version 1, version 2 or both versions 1 and version 2.
SSH Sessions Currently Active	The number of SSH sessions currently active.

Term	Definition
Max SSH Sessions Allowed	The maximum number of SSH sessions allowed.
SSH Timeout	The SSH timeout value in minutes.
Keys Present	Indicates whether the SSH RSA and DSA key files are present on the device.
Key Generation in Progress	Indicates whether RSA or DSA key files generation is currently in progress.

2.5 Management Security Commands

This section describes commands you use to generate keys and certificates, which you can do in addition to loading them as before.

2.5.1 crypto certificate generate

Use this command to generate a self-signed certificate for HTTPS. The generated RSA key for SSL has a length of 1024 bits. The resulting certificate is generated with a common name equal to the lowest IP address of the device and a duration of 365 days.

Format crypto certificate generate

Mode Global Config

2.5.1.1 no crypto certificate generate

Use this command to delete the HTTPS certificate files from the device, regardless of whether they are self-signed or downloaded from an outside source.

Format no crypto certificate generate

Mode Global Config

2.5.2 crypto key generate rsa

Use this command to generate an RSA key pair for SSH. The new key files will overwrite any existing generated or downloaded RSA key files.

Format crypto key generate rsa

Mode Global Config

2.5.2.1 no crypto key generate rsa

Use this command to delete the RSA key files from the device.

Format no crypto key generate rsa

Mode Global Config

2.5.3 crypto key generate dsa

Use this command to generate a DSA key pair for SSH. The new key files will overwrite any existing generated or downloaded DSA key files.

Format crypto key generate dsa
Mode Global Config

2.5.3.1 no crypto key generate dsa

Use this command to delete the DSA key files from the device.

Format no crypto key generate dsa
Mode Global Config

2.6 Hypertext Transfer Protocol Commands

This section describes the commands you use to configure Hypertext Transfer Protocol (HTTP) and secure HTTP access to the switch. Access to the switch by using a Web browser is enabled by default. Everything you can view and configure by using the CLI is also available by using the Web.

2.6.1 ip http accounting exec, ip https accounting exec

This command applies user exec (start-stop/stop-only) accounting list to the line methods HTTP and HTTPS.



Note...

The user exec accounting list should be created using the command "aaa accounting" on page 101".

Format ip {http|https} accounting exec {default|listname}
Mode Global Config

Parameter	Description
http/https	The line method for which the list needs to be applied.
default	The default list of methods for authorization services.
listname	An alphanumeric character string used to name the list of accounting methods.

2.6.1.1 no ip http/https accounting exec

This command deletes the authorization method list.

Format no ip {http|https} accounting exec {default|listname}
Mode Global Config

2.6.2 ip http authentication

Use this command to specify authentication methods for http server users. The default configuration is the local user database is checked. This action has the same effect as the command `ip http authentication local`. The additional methods of authentication are used only if the previous method returns an error, not if it fails. To ensure that the authentication succeeds even if all methods return an error, specify `none` as the final method in the command line. For example, if `none` is specified as an authentication method after `radius`, no authentication is used if the RADIUS server is down.

Default local
Format ip http authentication method1 [method2...]
Mode Global Config

Parameter	Description
local	Uses the local username database for authentication.
none	Uses no authentication.
radius	Uses the list of all RADIUS servers for authentication.
tacacs	Uses the list of all TACACS+ servers for authentication.

Example: The following example configures the http authentication.
 (switch)(config)# ip http authentication radius local

2.6.2.1 no ip http authentication

Use this command to return to the default.

Format no ip http authentication
Mode Global Config

2.6.3 ip https authentication

Use this command to specify authentication methods for https server users. The default configuration is the local user database is checked. This action has the same effect as the command `ip https authentication local`. The additional methods of authentication are used only if the previous method returns an error, not if it fails. To ensure that the authentication succeeds even if all methods return an error, specify `none` as the final method in the command line. For example, if `none` is specified as an authentication method after `radius`, no authentication is used if the RADIUS server is down.

Default local
Format ip https authentication method1 [method2...]
Mode Global Config

Parameter	Description
local	Uses the local username database for authentication.
none	Uses no authentication.
radius	Uses the list of all RADIUS servers for authentication.
tacacs	Uses the list of all TACACS+ servers for authentication.

Example: The following example configures https authentication.
 (switch)(config)# ip https authentication radius local

2.6.3.1 no ip https authentication

Use this command to return to the default.

Format no ip https authentication
Mode Global Config

2.6.4 ip http server

This command enables access to the switch through the Web interface. When access is enabled, the user can login to the switch from the Web interface. When access is disabled, the user cannot login to the switch's Web server. Disabling the Web interface takes effect immediately. All interfaces are affected.

Default enabled
Format ip http server
Mode Privileged EXEC

2.6.4.1 no ip http server

This command disables access to the switch through the Web interface. When access is disabled, the user cannot login to the switch's Web server.

Format no ip http server
Mode Privileged EXEC

2.6.5 ip http secure-server

This command is used to enable the secure socket layer for secure HTTP.

Default disabled
Format ip http secure-server
Mode Privileged EXEC

2.6.5.1 no ip http secure-server

This command is used to disable the secure socket layer for secure HTTP.

Format no ip http secure-server
Mode Privileged EXEC

2.6.6 ip http java

This command enables the Web Java mode. The Java mode applies to both secure and un-secure Web connections.

Default Enabled
Format ip http java
Mode Privileged EXEC

2.6.6.1 no ip http java

This command disables the Web Java mode. The Java mode applies to both secure and un-secure Web connections.

Format no ip http java

Mode Privileged EXEC

2.6.7 ip http port

This command configures the TCP port number on which the HTTP server listens for requests.

Default 80

Format ip http port 1-65535

Mode Privileged EXEC

2.6.7.1 no ip http port

This command restores the HTTP server listen port to its factory default value.

Format no ip http port

Mode Privileged EXEC

2.6.8 ip http rest-api port

This command configures the HTTP TCP port number on which the OpEN restful API server listens for restful requests.

Default 8080

Format ip http rest-api port 1025-65535

Mode Privileged EXEC

2.6.8.1 no ip http rest-api port

This command restores the OpEN restful API HTTP server listen port to its factory default value.

Format no ip http rest-api port

Mode Privileged EXEC

2.6.9 ip http rest-api secure-port

This command configures the HTTPS TCP port number on which the OpEN restful API server listens for secure restful requests

Default 8443

Format ip http rest-api secure-port 1025-65535

Mode Privileged EXEC

no ip http rest-api secure-port

This command restores the OpEN restful API HTTP server listen port to its factory default value.

Format no ip http rest-api secure-port

Mode Privileged EXEC

2.6.10 ip http session hard-timeout

This command configures the hard timeout for un-secure HTTP sessions in hours. Configuring this value to zero will give an infinite hard-timeout. When this timeout expires, the user will be forced to reauthenticate. This timer begins on initiation of the web session and is unaffected by the activity level of the connection.

Default 24

Format ip http session hard-timeout 1-168

Mode Privileged EXEC

2.6.10.1 no ip http session hard-timeout

This command restores the hard timeout for un-secure HTTP sessions to the default value.

Format no ip http session hard-timeout

Mode Privileged EXEC

2.6.11 ip http session maxsessions

This command limits the number of allowable un-secure HTTP sessions. Zero is the configurable minimum.

Default 16

Format ip http session maxsessions 0-16

Mode Privileged EXEC

2.6.11.1 no ip http session maxsessions

This command restores the number of allowable un-secure HTTP sessions to the default value.

Format no ip http session maxsessions

Mode Privileged EXEC

2.6.12 ip http session soft-timeout

This command configures the soft timeout for un-secure HTTP sessions in minutes. Configuring this value to zero will give an infinite soft-timeout. When this timeout expires the user will be forced to reauthenticate. This timer begins on initiation of the Web session and is restarted with each access to the switch.

Default 5

Format ip http session soft-timeout 1-60

Mode Privileged EXEC

2.6.12.1 no ip http session soft-timeout

This command resets the soft timeout for un-secure HTTP sessions to the default value.

Format no ip http session soft-timeout

Mode Privileged EXEC

2.6.13 ip http secure-session hard-timeout

This command configures the hard timeout for secure HTTP sessions in hours. When this timeout expires, the user is forced to reauthenticate. This timer begins on initiation of the Web session and is unaffected by the activity level of the connection. The secure-session hard-timeout can not be set to zero (infinite).

Default 24

Format ip http secure-session hard-timeout 1-168

Mode Privileged EXEC

2.6.13.1 no ip http secure-session hard-timeout

This command resets the hard timeout for secure HTTP sessions to the default value.

Format no ip http secure-session hard-timeout

Mode Privileged EXEC

2.6.14 ip http secure-session maxsessions

This command limits the number of secure HTTP sessions. Zero is the configurable minimum.

Default 16

Format ip http secure-session maxsessions 0-16

Mode Privileged EXEC

2.6.14.1 no ip http secure-session maxsessions

This command restores the number of allowable secure HTTP sessions to the default value.

Format no ip http secure-session maxsessions

Mode Privileged EXEC

2.6.15 ip http secure-session soft-timeout

This command configures the soft timeout for secure HTTP sessions in minutes. Configuring this value to zero will give an infinite soft-timeout. When this timeout expires, you are forced to reauthenticate. This timer begins on initiation of the Web session and is restarted with each access to the switch. The secure-session soft-timeout can not be set to zero (infinite).

Default 5

Format ip http secure-session soft-timeout 1-60

Mode Privileged EXEC

2.6.15.1 no ip http secure-session soft-timeout

This command restores the soft timeout for secure HTTP sessions to the default value.

Format no ip http secure-session soft-timeout

Mode Privileged EXEC

2.6.16 ip http secure-port

This command is used to set the SSL port where port can be 1025-65535 and the default is port 443.

Default 443

Format ip http secure-port *portid*

Mode Privileged EXEC

2.6.16.1 no ip http secure-port

This command is used to reset the SSL port to the default value.

Format no ip http secure-port

Mode Privileged EXEC

2.6.17 ip http secure-protocol

This command is used to set protocol levels (versions). The protocol level can be set to TLS1, SSL3 or to both TLS1 and SSL3.

Default SSL3 and TLS1

Format ip http secure-protocol [*SSL3*] [*TLS1*]

Mode Privileged EXEC

2.6.18 show ip http

This command displays the http settings for the switch.

Format show ip http

Mode Privileged EXEC

Term	Definition
HTTP Mode (Unsecure)	The unsecure HTTP server administrative mode.
Java Mode	The java applet administrative mode which applies to both secure and un-secure web connections.
HTTP Port	The configured TCP port on which the HTTP server listens for requests. (The default is 80.)
RESTful API HTTP Port	The HTTPS TCP port number on which the OpEN RESTful API server listens for RESTful requests.
RESTful API HTTPS Port	The HTTPS TCP port number on which the OpEN RESTful API server listens for secure RESTful requests.
Maximum Allowable HTTP Sessions	The number of allowable un-secure http sessions.

Term	Definition
HTTP Session Hard Timeout	The hard timeout for un-secure http sessions in hours.
HTTP Session Soft Timeout	The soft timeout for un-secure http sessions in minutes.
HTTP Mode (Secure)	The secure HTTP server administrative mode.
Secure Port	The secure HTTP server port number.
Secure Protocol Level(s)	The protocol level may have the values of SSL3, TLS1, or both SSL3 and TLS1.
Maximum Allowable HTTPS Sessions	The number of allowable secure http sessions.
HTTPS Session Hard Timeout	The hard timeout for secure http sessions in hours.
HTTPS Session Soft Timeout	The soft timeout for secure http sessions in minutes.
Certificate Present	Indicates whether the secure-server certificate files are present on the device.
Certificate Generation in Progress	Indicates whether certificate generation is currently in progress.

2.7 Access Commands

Use the commands in this section to close remote connections or to view information about connections to the system.

2.7.1 disconnect

Use the `disconnect` command to close HTTP, HTTPS, Telnet or SSH sessions. Use `all` to close all active sessions, or use `session-id` to specify the session ID to close. To view the possible values for `session-id`, use the `show login session` command.

Format `disconnect {session_id | all}`
Mode Privileged EXEC

2.7.2 linuxsh

Use the `linuxsh` command to access the Linux shell. Use the `exit` command to exit the Linux shell and return to the CLI. The shell session will timeout after five minutes of inactivity. The inactivity timeout value can be changed using the command "session-timeout" on page 66" in Line Console mode.

Default `ip-port:2324`
Format `linuxsh [ip-port]`
Mode Privileged EXEC

Parameter	Description
ip-port	The IP port number on which the telnet daemon listens for connections. ip-port is an integer from 1 to 65535. The default value is 2324.

2.7.3 show login session

This command displays current Telnet, SSH and serial port connections to the switch. This command displays truncated user names. Use the `show login session long` command to display the complete usernames.

Format `show login session`
Mode Privileged EXEC

Term	Definition
ID	Login Session ID.
User Name	The name the user entered to log on to the system.
Connection From	IP address of the remote client machine or EIA-232 for the serial port connection.
Idle Time	Time this session has been idle.
Session Time	Total time this session has been connected.
Session Type	Shows the type of session, which can be HTTP, HTTPS, telnet, serial, or SSH.

2.7.4 show login session long

This command displays the complete user names of the users currently logged in to the switch.

Format show login session long

Mode Privileged EXEC

Example: The following shows an example of the command.

```
(switch) #show login session long
```

```
User Name
```

```
-----
```

```
admin
```

```
test1111test1111test1111test1111test1111test1111test1111test1111
```

2.8 User Account Commands

This section describes the commands you use to add, manage, and delete system users. FASTPATH software has two default users: admin and guest. The admin user can view and configure system settings, and the guest user can view settings.



Note...

You cannot delete the admin user. There is only one user allowed with level-15 privileges. You can configure up to five level-1 users on the system.

2.8.1 aaa authentication login

Use this command to set authentication at login. The default and optional list names created with the command are used with the `aaa authentication login` command. Create a list by entering the `aaa authentication login list-name method` command, where `list-name` is any character string used to name this list. The `method` argument identifies the list of methods that the authentication algorithm tries, in the given sequence.

The additional methods of authentication are used only if the previous method returns an error, not if there is an authentication failure. To ensure that the authentication succeeds even if all methods return an error, specify `none` as the final method in the command line. For example, if `none` is specified as an authentication method after `radius`, no authentication is used if the RADIUS server is down.

Default

- `defaultList`. Used by the console and only contains the method `none`.

- `networkList`. Used by telnet and SSH and only contains the method `local`.

Format aaa authentication login {default | list-name} method1 [method2...]

Mode Global Config

Parameter	Definition
default	Uses the listed authentication methods that follow this argument as the default list of methods when a user logs in.
list-name	Character string of up to 15 characters used to name the list of authentication methods activated when a user logs in.
method1... [method2...]	At least one from the following: • enable. Uses the enable password for authentication. • line. Uses the line password for authentication. • local. Uses the local username database for authentication. • none. Uses no authentication. • radius. Uses the list of all RADIUS servers for authentication. • tacacs. Uses the list of all TACACS servers for authentication.

Example: The following shows an example of the command.

```
(switch)(config)# aaa authentication login default radius local enable none
```

2.8.1.1 no aaa authentication login

This command returns to the default.

Format aaa authentication login {default | list-name}

Mode Global Config

2.8.2 aaa authentication enable

Use this command to set authentication for accessing higher privilege levels. The default enable list is `enableList`. It is used by console, and contains the method as `enable` followed by `none`.

A separate default enable list, `enableNetList`, is used for Telnet and SSH users instead of `enableList`. This list is applied by default for Telnet and SSH, and contains `enable` followed by `deny` methods. In FASTPATH, by default, the enable password is not configured. That means that, by default, Telnet and SSH users will not get access to Privileged EXEC mode. On the other hand, with default conditions, a console user always enter the Privileged EXEC mode without entering the `enable` password.

The default and optional list names created with the `aaa authentication enable` command are used with the `enable authentication` command. Create a list by entering the `aaa authentication enable list-name method` command where `list-name` is any character string used to name this list. The `method` argument identifies the list of methods that the authentication algorithm tries in the given sequence.

The user manager returns ERROR (not PASS or FAIL) for enable and line methods if no password is configured, and moves to the next configured method in the authentication list. The method `none` reflects that there is no authentication needed.

The user will only be prompted for an enable password if one is required. The following authentication methods do not require passwords:

1. none
2. deny
3. enable (if no enable password is configured)
4. line (if no line password is configured)

Example: See the examples below.

- a. `aaa authentication enable default enable none`
- b. `aaa authentication enable default line none`
- c. `aaa authentication enable default enable radius none`
- d. `aaa authentication enable default line tacacs none`

Examples **a** and **b** do not prompt for a password, however because examples **c** and **d** contain the radius and tacacs methods, the password prompt is displayed.

If the login methods include only enable, and there is no enable password configured, then FASTPATH does not prompt for a username. In such cases, FASTPATH only prompts for a password. FASTPATH supports configuring methods after the local method in authentication and authorization lists. If the user is not present in the local database, then the next configured method is tried.

The additional methods of authentication are used only if the previous method returns an error, not if it fails. To ensure that the authentication succeeds even if all methods return an error, specify `none` as the final method in the command line.

Use the command "show authorization methods" on page 85" to display information about the authentication methods.



Note...

Requests sent by the switch to a RADIUS server include the username `$enablex$`, where `x` is the requested privilege level. For enable to be authenticated on Radius servers, add `$enablex$` users to them. The login user ID is now sent to TACACS+ servers for enable authentication.

Default	default
Format	<code>aaa authentication enable {default list-name} method1 [method2...]</code>
Mode	Global Config

Parameter	Description
default	Uses the listed authentication methods that follow this argument as the default list of methods, when using higher privilege levels.
list-name	Character string used to name the list of authentication methods activated, when using access higher privilege levels. Range: 1-15 characters.
method1 [method2...]	Specify at least one from the following: <code>deny</code>. Used to deny access. <code>enable</code>. Uses the enable password for authentication. <code>line</code>. Uses the line password for authentication. <code>none</code>. Uses no authentication. <code>radius</code>. Uses the list of all RADIUS servers for authentication. <code>tacacs</code>. Uses the list of all TACACS+ servers for authentication.

Example: The following example sets authentication when accessing higher privilege levels.
`(switch)(config)# aaa authentication enable default enable.`

2.8.2.1 no aaa authentication enable

Use this command to return to the default configuration.

Format no aaa authentication enable {default | *list-name*}

Mode Global Config

2.8.3 aaa authorization

Use this command to configure command and exec authorization method lists. This list is identified by `default` or a user-specified `list-name`. If `tacacs` is specified as the authorization method, authorization commands are notified to a TACACS-server. If `none` is specified as the authorization method, command authorization is not applicable. A maximum of five authorization method lists can be created for the `commands` type.



Note...

Local method is not supported for command authorization. Command authorization with RADIUS will work if, and only if, the applied authentication method is also radius.

2.8.3.1 Per-Command Authorization

When authorization is configured for a line mode, the user manager sends information about an entered command to the AAA server. The AAA server validates the received command, and responds with either a PASS or FAIL response. If approved, the command is executed. Otherwise, the command is denied and an error message is shown to the user. The various utility commands like `tftp`, and `ping`, and outbound `telnet` should also pass command authorization. Applying the script is treated as a single command `apply script`, which also goes through authorization. Startup-config commands applied on device boot-up are not an object of the authorization process.

The per-command authorization usage scenario is this:

1. Configure Authorization Method List
aaa authorization commands *listname* tacacs radius none
2. Apply AML to an Access Line Mode (console, telnet, SSH)
authorization commands *listname*
3. Commands entered by the user will go through command authorization via TACACS+ or RADIUS server and will be accepted or denied.

2.8.3.2 Exec Authorization

When exec authorization is configured for a line mode, the user may not be required to use the `enable` command to enter Privileged EXEC mode. If the authorization response indicates that the user has sufficient privilege levels for Privileged EXEC mode, then the user bypasses User EXEC mode entirely.

The exec authorization usage scenario is this:

1. Configure Authorization Method List
aaa authorization exec *listname* *method1* [*method2*....]
2. Apply AML to an Access Line Mode (console, telnet, SSH)
authorization exec *listname*
3. When the user logs in, in addition to authentication, authorization will be performed to determine if the user is allowed direct access to Privileged EXEC mode.

Format *aaa authorization {commands/exec} {default/list-name} method1[method2]*
Mode Global Config

Parameter	Description
commands	Provides authorization for all user-executed commands.
exec	Provides exec authorization.
default	The default list of methods for authorization services.
list-name	Alphanumeric character string used to name the list of authorization methods.
method	TACACS+/RADIUS/Local and none are supported.

Example: The following shows an example of the command.

```
(FASTPATH Routing) #
(FASTPATH Routing) #configure
(FASTPATH Routing) (Config)#aaa authorization exec default tacacs+ none
(FASTPATH Routing) (Config)#aaa authorization commands default tacacs+ none
```

2.8.3.3 no aaa authorization

This command deletes the authorization method list.

Format *no aaa authorization {commands/exec} {default/list-name}*
Mode Global Config

2.8.4 authorization commands

This command applies a command authorization method list to an access method (console, telnet, ssh). For usage scenarios on per command authorization, see the command "aaa authorization" on page 83".

Format *authorization commands [default/list-name]*
Mode Line console, Line telnet, Line SSH

Parameter	Description
commands	This causes command authorization for each command execution attempt.

2.8.4.1 no authorization commands

This command removes command authorization from a line config mode.

Format *no authorization {commands/exec}*
Mode Line console, Line telnet, Line SSH

Example: The following shows an example of the command.

```
(Switching) (Config)#line console
(Switching) (Config-line)#authorization commands list2

(Switching) (Config-line)#
(Switching) (Config-line)#exit

(FASTPATH Switching) (Config)#
```

2.8.5 authorization exec

This command applies a command authorization method list to an access method so that the user may not be required to use the enable command to enter Privileged EXEC mode. For usage scenarios on exec authorization, see the command "aaa authorization" on page 83".

Format *authorization exec list-name*

Mode Line console, Line telnet, Line SSH

Parameter	Description
list-name	The command authorization method list.

2.8.5.1 no authorization exec

This command removes command authorization from a line config mode.

Format *no authorization exec*

Mode Line console, Line telnet, Line SSH

2.8.6 authorization exec default

This command applies a default command authorization method list to an access method so that the user may not be required to use the enable command to enter Privileged EXEC mode. For usage scenarios on exec authorization, see the command "aaa authorization" on page 83".

Format *authorization exec default*

Mode Line console, Line telnet, Line SSH

2.8.6.1 no authorization exec default

This command removes command authorization from a line config mode.

Format *no authorization exec default*

Mode Line console, Line telnet, Line SSH

2.8.7 show authorization methods

This command displays the configured authorization method lists.

Format *show authorization methods*

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

(Switching) #show authorization methods

Command Authorization List	Method	
-----	-----	
dfltCmdAuthList	tacacs	none
list2	none	undefined
list4	tacacs	undefined

Line	Command	Method	List
Console	dfltCmdAuthList		
Telnet	dfltCmdAuthList		
SSH	dfltCmdAuthList		

Exec Authorization List	Method	
dfltExecAuthList	tacacs	none
list2	none	undefined
list4	tacacs	undefined

Line	Exec	Method	List
Console	dfltExecAuthList		
Telnet	dfltExecAuthList		
SSH	dfltExecAuthList		

2.8.8 enable authentication

Use this command to specify the authentication method list when accessing a higher privilege level from a remote telnet or console.

Format *enable authentication* {default | *list-name*}

Mode Line Config

Parameter	Description
default	Uses the default list created with the <code>aaa authentication enable</code> command.
list-name	Uses the indicated list created with the <code>aaa authentication enable</code> command.

Example: The following example specifies the default authentication method when accessing a higher privilege level console.

```
(switch)(config)# line console
(switch)(config-line)# enable authentication default
```

2.8.8.1 no enable authentication

Use this command to return to the default specified by the `enable authentication` command.

Format *no enable authentication*

Mode Line Config

2.8.9 username (Global Config)

Use the `username` command in Global Config mode to add a new user to the local user database. The default privilege level is 1. Using the `encrypted` keyword allows the administrator to transfer local user passwords between devices without having to know the passwords. When the `password` parameter is used along with `encrypted` parameter, the password must be exactly 128 hexadecimal characters in length. If the password strength feature is enabled, this command checks for password strength and returns an appropriate error if it fails to meet the password strength criteria. Giving the optional parameter `override-complexity-check` disables the validation of the password strength.

Format username *name* {password *password* [encrypted [override-complexity-check] | level *level* [encrypted [override-complexity-check]] | override-complexity-check} | {level *level* [override-complexity-check] password}

Mode Global Config

Parameter	Description
name	The name of the user. Range: 1-64 characters.
password	The authentication password for the user. Range 8-64 characters. This value can be zero if the <code>no passwords min-length</code> command has been executed. The special characters allowed in the password include ! # \$ % & ' () * + , - . / : ; < = > @ [\] ^ _ ` { } ~.
level	The user level. Level 0 can be assigned by a level 15 user to another user to suspend that user's access. Range 0-15. Enter access level 1 for non-privileged (switch> prompt) or 15 for highest privilege (switch# prompt) Access. If not specified where it is optional, the privilege level is 1.
encrypted	Encrypted password entered, copied from another switch configuration.
override-complexity-check	Disables the validation of the password strength.

Example: The following example configures user `bob` with password `xxxxyyymmmm` and user level 15.

```
(switch)(config)# username bob password xxxxyyymmmm level 15
```

Example: The following example configures user `test` with password `testPassword` and assigns a user level of 1. The password strength will not be validated.

```
(switch)(config)# username test password testPassword level 1 override-complexity-check
```

Example: A third example.

```
(Switching) (Config)#username test password testtest
```

Example: A fourth example.

```
(Switching) (Config)# username test password
e8d63677741431114f9e39a853a15e8fd35ad059e2e1b49816c243d7e08152b052eafbf23b528d348cdba1b1b7ab91be8
42278e5e970dbfc62d16dcd13c0b864 level 1 encrypted override-complexity-check
```

```
(Switching) (Config)# username test level 15 password
```

```
Enter new password:*****
```

```
Confirm new password:*****
```

Example: A fifth example.

```
(Switching) (Config)# username test level 15 override-complexity-check password
```

```
Enter new password:*****
```

```
Confirm new password:*****
```

2.8.9.1 no username

Use this command to remove a user name.

Format no username *name*

Mode Global Config

2.8.10 username nopassword

Use this command to remove an existing user's password (NULL password).

Format username *name* nopassword [*Level Level*]

Mode Global Config

Parameter	Description
name	The name of the user. Range: 1-32 characters.
password	The authentication password for the user. Range 8-64 characters.
level	The user level. Level 0 can be assigned by a level 15 user to another user to suspend that user's access. Range 0-15.

2.8.11 username unlock

Use this command to allows a locked user account to be unlocked. Only a user with Level 1 access can reactivate a locked user account.

Format username *name* unlock

Mode Global Config

2.8.12 username snmpv3 accessmode

This command specifies the snmpv3 access privileges for the specified login user. The valid accessmode values are **readonly** or **readwrite**. The *username* is the login user name for which the specified access mode applies. The default is **readwrite** for the "admin" user and **readonly** for all other users. You must enter the *username* in the same case you used when you added the user. To see the case of the *username*, enter the `show users` command.

Defaults

- admin - readwrite
- other - readonly

Format username snmpv3 accessmode *username* {*readonly* | *readwrite*}

Mode Global Config

2.8.12.1 no username snmpv3 accessmode

This command sets the snmpv3 access privileges for the specified user as **readwrite** for the "admin" user and **readonly** for all other users. The *username* value is the user name for which the specified access mode will apply.

Format no username snmpv3 accessmode *username*

Mode Global Config

2.8.13 username snmpv3 authentication

This command specifies the authentication protocol to be used for the specified user. The valid authentication protocols are **none**, **md5** or **sha**. If you specify **md5** or **sha**, the login password is also used as the snmpv3 authentication password and therefore must be at least eight characters in length. The *username* is the user name associated with the authentication protocol. You must enter the *username* in the same case you used when you added the user. To see the case of the *username*, enter the `show users` command.

Default no authentication
Format username snmpv3 authentication *username* {none | md5 | sha}
Mode Global Config

2.8.13.1 no username snmpv3 authentication

This command sets the authentication protocol to be used for the specified user to *none*. The *username* is the user name for which the specified authentication protocol is used.

Format no username snmpv3 authentication *username*
Mode Global Config

2.8.14 username snmpv3 encryption

This command specifies the encryption protocol used for the specified user. The valid encryption protocols are des or none.

If you select *des*, you can specify the required key on the command line. The encryption key must be 8 to 64 characters long. If you select the *des* protocol but do not provide a key, the user is prompted for the key. When you use the *des* protocol, the login password is also used as the snmpv3 encryption password, so it must be a minimum of eight characters. If you select *none*, you do not need to provide a key.

The *username* value is the login user name associated with the specified encryption. You must enter the *username* in the same case you used when you added the user. To see the case of the *username*, enter the `show users` command.

Default no encryption
Format username snmpv3 encryption *username* {none | des[*key*]}
Mode Global Config

2.8.14.1 no username snmpv3 encryption

This command sets the encryption protocol to **none**. The *username* is the login user name for which the specified encryption protocol will be used.

Format no username snmpv3 encryption *username*
Mode Global Config

2.8.15 username snmpv3 encryption encrypted

This command specifies the *des* encryption protocol and the required encryption key for the specified user. The encryption key must be 8 to 64 characters long.

Default no encryption
Format username snmpv3 encryption encrypted *username* des *key*
Mode Global Config

2.8.16 show users

This command displays the configured user names and their settings. The `show users` command displays truncated user names. Use the `show users long` command to display the complete usernames. The `show users` command is only available for users with Level 15 privileges. The SNMPv3 fields will only be displayed if SNMP is available on the system.

Format `show users`
Mode Privileged EXEC

Term	Definition
User Name	The name the user enters to login using the serial port, Telnet or Web.
Access Mode	Shows whether the user is able to change parameters on the switch (Level 15) or is only able to view them (Level 1). As a factory default, the "admin" user has Level 15 access and the "guest" has Level 1 access.
SNMPv3 Access Mode	The SNMPv3 Access Mode. If the value is set to ReadWrite, the SNMPv3 user is able to set and retrieve parameters on the system. If the value is set to ReadOnly, the SNMPv3 user is only able to retrieve parameter information. The SNMPv3 access mode may be different than the CLI and Web access mode.
SNMPv3 Authentication	The authentication protocol to be used for the specified login user.
SNMPv3 Encryption	The encryption protocol to be used for the specified login user.

2.8.17 show users long

This command displays the complete usernames of the configured users on the switch.

Format `show users long`
Mode Privileged EXEC

Example: The following shows an example of the command.

```
(switch) #show users long
User Name
-----
admin
guest
test1111test1111test1111test1111
```

2.8.18 show users accounts

This command displays the local user status with respect to user account lockout and password aging. This command displays truncated user names. Use the `show users long` command to display the complete usernames.

Format `show users accounts [detail]`
Mode Privileged EXEC

Term	Definition
User Name	The local user account's user name.
Access Level	The user's access level (1 for non-privilege (switch>prompt) or 15 for highest privilege (switch# prompt)).
Password Aging	Number of days, since the password was configured, until the password expires.

Term	Definition
Password Expiry Date	The current password expiration date in date format.
Lockout	Indicates whether the user account is locked out (true or false).

If the detail keyword is included, the following additional fields display.

Term	Definition
Password Override Complexity Check	Displays the user's Password override complexity check status. By default it is disabled.
Password Strength	Displays the user password's strength (Strong or Weak). This field is displayed only if the Password Strength feature is enabled.

Example: The following example displays information about the local user database.
(switch)#show users accounts

UserName	Privilege	Password Aging	Password Expiry date	Lockout
admin	15	---	---	False
guest	1	---	---	False

console#show users accounts detail

```

UserName..... admin
Privilege..... 15
Password Aging..... ---
Password Expiry..... ---
Lockout..... False
Override Complexity Check..... Disable
Password Strength..... ---

UserName..... guest
Privilege..... 1
Password Aging..... ---
Password Expiry..... ---
Lockout..... False
Override Complexity Check..... Disable
Password Strength..... ---

```

2.8.19 show users login-history [long]

Use this command to display information about the login history of users.

Format show users login-history [long]

Mode Privileged EXEC

2.8.20 show users login-history [username]

Use this command to display information about the login history of users.

Format show users login-history [username *name*]

Mode Privileged EXEC

Parameter	Description
name	Name of the user. Range: 1-20 characters.

Example: The following example shows user login history outputs.

Console>show users login-history

Login Time	Username	Protocol	Location
Jan 19 2005 08:23:48	Bob	Serial	
Jan 19 2005 08:29:29	Robert	HTTP	172.16.0.8
Jan 19 2005 08:42:31	John	SSH	172.16.0.1
Jan 19 2005 08:49:52	Betty	Telnet	172.16.1.7

2.8.21 login authentication

Use this command to specify the login authentication method list for a line (console, telnet, or SSH). The default configuration uses the default set with the command `aaa authentication login`.

Format login authentication {default | *list-name*}

Mode Line Configuration

Parameter	Description
default	Uses the default list created with the <code>aaa authentication login</code> command.
list-name	Uses the indicated list created with the <code>aaa authentication login</code> command.

Example: The following example specifies the default authentication method for a console.

(switch) (config)# line console

(switch) (config-line)# login authentication default

2.8.21.1 no login authentication

Use this command to return to the default specified by the `authentication login` command.

2.8.22 password

This command allows the currently logged in user to change his or her password without having Level 15 privileges.

Format password *cr*

Mode User EXEC

Example: The following is an example of the command.

```
console>password
```

```
Enter old password:*****
```

```
Enter new password:*****
```

```
Confirm new password:*****
```

2.8.23 password (Line Configuration)

Use the `password` command in Line Configuration mode to specify a password on a line. The default configuration is no password is specified.

Format `password [password [encrypted]]`

Mode Line Config

Parameter	Definition
password	Password for this level. Range: 8-64 characters
encrypted	Encrypted password to be entered, copied from another switch configuration. The encrypted password should be 128 characters long because the assumption is that this password is already encrypted with AES.

Example: The following example specifies a password `mcmxxyyy` on a line.

```
(switch)(config-line)# password mcmxxyyy
```

Example: The following is another example of the command.

```
(Switching)(Config-line)# password testtest
```

```
(Switching) (Config-line)# password
e8d63677741431114f9e39a853a15e8fd35ad059e2e1b49816c243d7e08152b052eafbf23b528d348cdba1b1b7ab91be8
42278e5e970dbfc62d16dcd13c0b864 encrypted
```

```
(Switching) (Config-line)# password
```

```
Enter new password:*****
```

```
Confirm new password:*****
```

2.8.23.1 no password (Line Configuration)

Use this command to remove the password on a line.

Format `no password`

Mode Line Config

2.8.24 password (User EXEC)

Use this command to allow a user to change the password for only that user. This command should be used after the password has aged. The user is prompted to enter the old password and the new password.

Format `password`

Mode User EXEC

Example: The following example shows the prompt sequence for executing the password command.

```
(switch)>password
Enter old password:*****
Enter new password:*****
Confirm new password:*****
```

2.8.25 password (aaa IAS User Config)

This command is used to configure a password for a user. An optional parameter [encrypted] is provided to indicate that the password given to the command is already preencrypted.

Format password *password* [encrypted]

Mode aaa IAS User Config

2.8.25.1 no password (aaa IAS User Config)

This command is used to clear the password of a user.

Format no password

Mode aaa IAS User Config

Example: The following shows an example of the command.

```
(FASTPATH Routing) #
(FASTPATH Routing) #configure
(FASTPATH Routing) (Config)#aaa ias-user username client-1
(FASTPATH Routing) (Config-aaa-ias-User)#password client123
(FASTPATH Routing) (Config-aaa-ias-User)#no password
```

Example: The following is an example of adding a MAB Client to the Internal user database.

```
(FASTPATH Routing) #
(FASTPATH Routing) #configure
(FASTPATH Routing) (Config)#aaa ias-user username 1f3ccb1157
(FASTPATH Routing) (Config-aaa-ias-User)#password 1f3ccb1157
(FASTPATH Routing) (Config-aaa-ias-User)#exit
(FASTPATH Routing) (Config)#
```

2.8.26 enable password (Privileged EXEC)

Use the `enable password` configuration command to set a local password to control access to the privileged EXEC mode.

Format enable password [*password* [encrypted]]

Mode Privileged EXEC

Parameter	Description
password	Password string. Range: 8-64 characters.
encrypted	Encrypted password you entered, copied from another switch configuration. The encrypted password should be 128 characters long because the assumption is that this password is already encrypted with AES.

Example: The following shows an example of the command.

```
(Switching) #enable password testtest
```

```
(Switching) #enable password
e8d63677741431114f9e39a853a15e8fd35ad059e2e1b49816c243d7e08152b052eafbf23b528d348cdba1b1b7ab91be8
42278e5e970dbfc62d16dcd13c0b864 encrypted
```

```
(Switching) #enable password
```

```
Enter old password:*****
```

```
Enter new password:*****
```

```
Confirm new password:*****
```

2.8.26.1 no enable password (Privileged EXEC)

Use the `no enable password` command to remove the password requirement.

Format no enable password

Mode Privileged EXEC

2.8.27 passwords min-length

Use this command to enforce a minimum password length for local users. The value also applies to the enable password. The valid range is 8-64.

Default 8

Format passwords min-length 8-64

Mode Global Config

2.8.27.1 no passwords min-length

Use this command to set the minimum password length to the default value.

Format no passwords min-length

Mode Global Config

2.8.28 passwords history

Use this command to set the number of previous passwords that shall be stored for each user account. When a local user changes his or her password, the user will not be able to reuse any password stored in password history. This ensures that users don't reuse their passwords often. The valid range is 0-10.

Default 0

Format passwords history 0-10

Mode Global Config

2.8.28.1 no passwords history

Use this command to set the password history to the default value.

Format no passwords history

Mode Global Config

2.8.29 passwords aging

Use this command to implement aging on passwords for local users. When a user's password expires, the user will be prompted to change it before logging in again. The valid range is 1-365. The default is 0, or no aging.

Default 0
Format passwords aging 1-365
Mode Global Config

2.8.29.1 no passwords aging

Use this command to set the password aging to the default value.

Format no passwords aging
Mode Global Config

2.8.30 passwords lock-out

Use this command to strengthen the security of the switch by locking user accounts that have failed login due to wrong passwords. When a lockout count is configured, a user that is logged in must enter the correct password within that count. Otherwise the user will be locked out from further switch access. Only a user with Level 15 access can reactivate a locked user account. Password lockout does not apply to logins from the serial console. The valid range is 1-5. The default is 0, or no lockout count enforced.

Default 0
Format passwords lock-out 1-5
Mode Global Config

2.8.30.1 no passwords lock-out

Use this command to set the password lock-out count to the default value.

Format no passwords lock-out
Mode Global Config

2.8.31 passwords strength-check

Use this command to enable the password strength feature. It is used to verify the strength of a password during configuration.

Default Disable
Format passwords strength-check
Mode Global Config

2.8.31.1 no passwords strength-check

Use this command to set the password strength checking to the default value.

Format no passwords strength-check
Mode Global Config

2.8.32 passwords strength maximum consecutive-characters

Use this command to set the maximum number of consecutive characters to be used in password strength. The valid range is 0-15. The default is 0. Minimum of 0 means no restriction on that set of characters.

Default 0
Format passwords strength maximum consecutive-characters 0-15
Mode Global Config

2.8.33 passwords strength maximum repeated-characters

Use this command to set the maximum number of repeated characters to be used in password strength. The valid range is 0-15. The default is 0. Minimum of 0 means no restriction on that set of characters.

Default 0
Format passwords strength maximum consecutive-characters 0-15
Mode Global Config

2.8.34 passwords strength minimum uppercase-letters

Use this command to enforce a minimum number of uppercase letters that a password should contain. The valid range is 0-16. The default is 2. Minimum of 0 means no restriction on that set of characters.

Default 2
Format passwords strength minimum uppercase-letters
Mode Global Config

2.8.34.1 no passwords strength minimum uppercase-letters

Use this command to reset the minimum uppercase letters required in a password to the default value.

Format no passwords minimum uppercase-letter
Mode Global Config

2.8.35 passwords strength minimum lowercase-letters

Use this command to enforce a minimum number of lowercase letters that a password should contain. The valid range is 0-16. The default is 2. Minimum of 0 means no restriction on that set of characters.

Default 2
Format passwords strength minimum lowercase-letters
Mode Global Config

2.8.35.1 no passwords strength minimum lowercase-letters

Use this command to reset the minimum lower letters required in a password to the default value.

Format no passwords minimum lowercase-letter
Mode Global Config

2.8.36 passwords strength minimum numeric-characters

Use this command to enforce a minimum number of numeric characters that a password should contain. The valid range is 0-16. The default is 2. Minimum of 0 means no restriction on that set of characters.

Default 2
Format passwords strength minimum numeric-characters
Mode Global Config

2.8.36.1 no passwords strength minimum numeric-characters

Use this command to reset the minimum numeric characters required in a password to the default value.

Format no passwords minimum numeric-characters
Mode Global Config

2.8.37 passwords strength minimum special-characters

Use this command to enforce a minimum number of special characters that a password should contain. The valid range is 0-16. The default is 2. Minimum of 0 means no restriction on that set of characters.

Default 2
Format passwords strength minimum special-characters
Mode Global Config

2.8.37.1 no passwords strength minimum special-characters

Use this command to reset the minimum special characters required in a password to the default value.

Format no passwords minimum special-characters
Mode Global Config

2.8.38 passwords strength minimum character-classes

Use this command to enforce a minimum number of characters classes that a password should contain. Character classes are uppercase letters, lowercase letters, numeric characters and special characters. The valid range is 0-4. The default is 4.

Default 4
Format passwords strength minimum character-classes
Mode Global Config

2.8.38.1 no passwords strength minimum character-classes

Use this command to reset the minimum number of character classes required in a password to the default value.

Format no passwords minimum character-classes
Mode Global Config

2.8.39 passwords strength exclude-keyword

Use this command to exclude the specified keyword while configuring the password. The password does not accept the keyword in any form (in between the string, case in-sensitive and reverse) as a substring. User can configure up to a maximum of 3 keywords.

Format passwords strength exclude-keyword *keyword*
Mode Global Config

2.8.39.1 no passwords strength exclude-keyword

Use this command to reset the restriction for the specified keyword or all the keywords configured.

Format no passwords exclude-keyword [*keyword*]

Mode Global Config

2.8.40 show passwords configuration

Use this command to display the configured password management settings.

Format show passwords configuration

Mode Privileged EXEC

Term	Definition
Minimum Password Length	Minimum number of characters required when changing passwords.
Password History	Number of passwords to store for reuse prevention.
Password Aging	Length in days that a password is valid.
Lockout Attempts	Number of failed password login attempts before lockout.
Minimum Password Uppercase Letters	Minimum number of uppercase characters required when configuring passwords.
Minimum Password Lowercase Letters	Minimum number of lowercase characters required when configuring passwords.
Minimum Password Numeric Characters	Minimum number of numeric characters required when configuring passwords.
Maximum Password Consecutive Characters	Maximum number of consecutive characters required that the password should contain when configuring passwords.
Maximum Password Repeated Characters	Maximum number of repetition of characters that the password should contain when configuring passwords.
Minimum Password Character Classes	Minimum number of character classes (uppercase, lowercase, numeric and special) required when configuring passwords.
Password Exclude-Keywords	The set of keywords to be excluded from the configured password when strength checking is enabled.

2.8.41 show passwords result

Use this command to display the last password set result information.

Format show passwords result

Mode Privileged EXEC

Term	Definition
Last User Whose Password Is Set	Shows the name of the user with the most recently set password.
Password Strength Check	Shows whether password strength checking is enabled.
Last Password Set Result	Shows whether the attempt to set a password was successful. If the attempt failed, the reason for the failure is included.

2.8.42 `aaa ias-user username`

The Internal Authentication Server (IAS) database is a dedicated internal database used for local authentication of users for network access through the IEEE 802.1X feature.

Use the `aaa ias-user username` command in Global Config mode to add the specified user to the internal user database. This command also changes the mode to AAA User Config mode.

Format `aaa ias-user username user`

Mode Global Config

2.8.42.1 `no aaa ias-user username`

Use this command to remove the specified user from the internal user database.

Format `no aaa ias-user username user`

Mode Global Config

Example: The following shows an example of the command.

```
(FASTPATH Routing) #
(FASTPATH Routing) #configure
(FASTPATH Routing) (Config)#aaa ias-user username client-1
(FASTPATH Routing) (Config-aaa-ias-User)#exit
(FASTPATH Routing) (Config)#no aaa ias-user username client-1
(FASTPATH Routing) (Config)#
```

2.8.43 `aaa session-id`

Use this command in Global Config mode to specify if the same session-id is used for Authentication, Authorization and Accounting service type within a session.

Default `common`

Format `aaa session-id [common | unique]`

Mode Global Config

Parameter	Description
common	Use the same session-id for all AAA Service types.
unique	Use a unique session-id for all AAA Service types.

2.8.43.1 `no aaa session-id`

Use this command in Global Config mode to reset the `aaa session-id` behavior to the default.

Format `no aaa session-id [unique]`

Mode Global Config

2.8.44 aaa accounting

Use this command in Global Config mode to create an accounting method list for user EXEC sessions, user-executed commands, or DOT1X. This list is identified by **default** or a user-specified **list_name**. Accounting records, when enabled for a line-mode, can be sent at both the beginning and at the end (**start-stop**) or only at the end (**stop-only**). If **none** is specified, then accounting is disabled for the specified list. If **tacacs** is specified as the accounting method, accounting records are notified to a TACACS+ server. If **radius** is the specified accounting method, accounting records are notified to a RADIUS server.

**Note...**

Please note the following:

- A maximum of five Accounting Method lists can be created for each exec and commands type.
- Only the default Accounting Method list can be created for DOT1X. There is no provision to create more.
- The same list-name can be used for both exec and commands accounting type
- AAA Accounting for commands with RADIUS as the accounting method is not supported.
- Start-stop or None are the only supported record types for DOT1X accounting. Start-stop enables accounting and None disables accounting.
- RADIUS is the only accounting method type supported for DOT1X accounting.

Format `aaa accounting {exec | commands | dot1x} {default | list_name} {start-stop | stop-only | none} method1 [method2...]`

Mode Global Config

Parameter	Description
exec	Provides accounting for a user EXEC terminal sessions.
commands	Provides accounting for all user executed commands.
dot1x	Provides accounting for DOT1X user commands.
default	The default list of methods for accounting services.
list-name	Character string used to name the list of accounting methods.
start-stop	Sends a start accounting notice at the beginning of a process and a stop accounting notice at the beginning of a process and a stop accounting notice at the end of a process.
stop-only	Sends a stop accounting notice at the end of the requested user process.
none	Disables accounting services on this line.
method	Use either TACACS or radius server for accounting purposes.

Example: The following shows an example of the command.

```
(Routing) #
(Routing) #configure
(Routing) #aaa accounting commands default stop-only tacacs
(Routing) #aaa accounting exec default start-stop radius
(Routing) #aaa accounting dot1x default start-stop radius
(Routing) #aaa accounting dot1x default none
(Routing) #exit
```

For the same set of accounting type and list name, the administrator can change the record type, or the methods list, without having to first delete the previous configuration.

```
(Routing) #
(Routing) #configure
(Routing) #aaa accounting exec ExecList stop-only tacacs
(Routing) #aaa accounting exec ExecList start-stop tacacs
(Routing) #aaa accounting exec ExecList start-stop tacacs radius
```

The first **aaa** command creates a method list for exec sessions with the name *ExecList*, with **record-type** as *stop-only* and the **method** as *TACACS+*. The second command changes the **record type** to *start-stop* from *stop-only* for the same method list. The third command, for the same list changes the **methods list** to {*tacacs,radius*} from {*tacacs*}.

2.8.44.1 no aaa accounting

This command deletes the accounting method list.

Format no aaa accounting {exec | commands | dot1x} {default | list_name default}
Mode Global Config

Example: The following shows an example of the command.

```
(Routing) #
(Routing) #configure
(Routing) #aaa accounting commands userCmdAudit stop-only tacacs radius
(Routing) #no aaa accounting commands userCmdAudit
(Routing) #exit
```

2.8.45 password (AAA IAS User Configuration)

Use this command to specify a password for a user in the IAS database. An optional parameter **encrypted** is provided to indicate that the password given to the command is already preencrypted.

Format password *password* [encrypted]
Mode AAA IAS User Config

Parameter	Definition
password	Password for this level. Range: 8-64 characters
encrypted	Encrypted password to be entered, copied from another switch configuration.

2.8.45.1 no password (AAA IAS User Configuration)

Use this command to clear the password of a user.

Format no password
Mode AAA IAS User Config

Example: The following shows an example of the command.

```
(Routing) #
(Routing) #configure
(Routing) (Config)#aaa ias-user username client-1
(Routing) (Config-aaa-ias-User)#password client123
(Routing) (Config-aaa-ias-User)#no password
```

Example: The following is an example of adding a MAB Client to the Internal user database.

```
(Routing) #
(Routing) #configure
(Routing) (Config)#aaa ias-user username 1f3ccb1157
(Routing) (Config-aaa-ias-User)#password 1f3ccb1157
(Routing) (Config-aaa-ias-User)#exit
(Routing) (Config)#
```

2.8.46 clear aaa ias-users

Use this command to remove all users from the IAS database.

Format clear aaa ias-users

Mode Privileged EXEC

Parameter	Definition
password	Password for this level. Range: 8-64 characters
encrypted	Encrypted password to be entered, copied from another switch configuration.

Example: The following is an example of the command.

```
(Routing) #
(Routing) #clear aaa ias-users
(Routing) #
```

2.8.47 show aaa ias-users

Use this command to display configured IAS users and their attributes. Passwords configured are not shown in the show command output.

Format show aaa ias-users [username]

Mode Privileged EXEC

Example: The following is an example of the command.

```
(Routing) #
(Routing) #show aaa ias-users
```

```
UserName
-----
Client-1
Client-2
```

Example: Following are the IAS configuration commands shown in the output of show running-config command.

Passwords shown in the command output are always encrypted.

```
aaa ias-user username client-1
password a45c74fdf50a558a2b5cf05573cd633bac2c6c598d54497ad4c46104918f2c encrypted
exit
```

2.8.48 accounting

Use this command in Line Configuration mode to apply the accounting method list to a line config (console/telnet/ssh).

Format accounting {exec | commands } {default | listname}

Mode Line Configuration

Parameter	Description
exec	Causes accounting for an EXEC session.
commands	This causes accounting for each command execution attempt. If a user is enabling accounting for exec mode for the current line-configuration type, the user will be logged out.
default	The default Accounting List
listname	Enter a string of not more than 15 characters.

Example: The following is a example of the command.

```
(Routing) #
(Routing) #configure
(Routing) (Config)#line telnet
(Routing)(Config-line)# accounting exec default
(Routing) #exit
```

2.8.48.1 no accounting

Use this command to remove accounting from a Line Configuration mode.

Format no accounting {exec|commands]

Mode Line Configuration

2.8.49 show accounting

Use this command to display ordered methods for accounting lists.

Format show accounting

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Routing) #show accounting
Number of Accounting Notifications sent at beginning of an EXEC session:      0
Errors when sending Accounting Notifications beginning of an EXEC session:    0
Number of Accounting Notifications at end of an EXEC session:                  0
Errors when sending Accounting Notifications at end of an EXEC session:        0
Number of Accounting Notifications sent at beginning of a command execution:   0
Errors when sending Accounting Notifications at beginning of a command execution: 0
Number of Accounting Notifications sent at end of a command execution:         0
Errors when sending Accounting Notifications at end of a command execution:    0
```

2.8.50 show accounting methods

Use this command to display configured accounting method lists.

Format show accounting methods

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Routing) #
(Routing) #show accounting methods
```

Acct Type	Method Name	Record Type	Method Type
-----	-----	-----	-----
Exec	dfltExecList	start-stop	TACACS
Commands	dfltCmdsList	stop-only	TACACS

Commands	UserCmdAudit	start-stop	TACACS
DOT1X	dfltDot1xList	start-stop	radius

Line	EXEC Method List	Command Method List
-----	-----	-----
Console	dfltExecList	dfltCmdsList
Telnet	dfltExecList	dfltCmdsList
SSH	dfltExecList	UserCmdAudit

2.8.51 clear accounting statistics

This command clears the accounting statistics.

Format clear accounting statistics

Mode Privileged EXEC

2.8.52 show domain-name

This command displays the configured domain-name.

Format show domain-name

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Routing) #
(Routing) #show domain-name
```

```
Domain           : Enable
Domain-name      :abc
```

2.9 SNMP Commands

This section describes the commands you use to configure Simple Network Management Protocol (SNMP) on the switch. You can configure the switch to act as an SNMP agent so that it can communicate with SNMP managers on your network.

2.9.1 snmp-server

This command sets the name and the physical location of the switch, and the organization responsible for the network. The parameters `name`, `loc` and `con` can be up to 255 characters in length.

Default none

Format snmp-server {sysname *name* | location *loc* | contact *con*}

Mode Global Config



Note...

To clear the snmp-server, enter an empty string in quotes. For example, snmp-server {sysname ""} clears the system name.

2.9.2 snmp-server community

This command adds (and names) a new SNMP community, and optionally sets the access mode, allowed IP address, and create a view for the community.

**Note...**

Community names in the SNMP Community Table must be unique. When making multiple entries using the same community name, the first entry is kept and processed and all duplicate entries are ignored.

Default	Two communities are created by default: • public, with read-only permissions, a view name of Default, and allows access from all IP addresses • private, with read/write permissions, a view name of Default, and allows access from all IP addresses.
Format	<code>snmp-server community community-string [{ro rw su}] [ipaddress ip-address] [view view-name]</code>
Mode	Global Config

Parameter	Description
community-name	A name associated with the switch and with a set of SNMP managers that manage it with a specified privileged level. The length of <code>community-name</code> can be up to 16 case-sensitive characters.
ro rw su	The access mode of the SNMP community, which can be public (Read-Only/RO), private (Read-Write/RW), or Super User (SU).
ip-address	The associated community SNMP packet sending address and is used along with the client IP mask value to denote a range of IP addresses from which SNMP clients may use that community to access the device. A value of 0.0.0.0 allows access from any IP address. Otherwise, this value is ANDed with the mask to determine the range of allowed client IP addresses.
view-name	The name of the view to create or update.

2.9.2.1 no snmp-server community

This command removes this community name from the table. The `name` is the community name to be deleted.

Format	<code>no snmp-server community community-name</code>
Mode	Global Config

2.9.3 snmp-server community-group

This command configures a community access string to permit access via the SNMPv1 and SNMPv2c protocols.

Format	<code>snmp-server community-group community-string group-name [ipaddress ipaddress]</code>
Mode	Global Config

Parameter	Description
community-string	The community which is created and then associated with the group. The range is 1 to 20 characters.
group-name	The name of the group that the community is associated with. The range is 1 to 30 characters.
ipaddress	Optionally, the IPv4 address that the community may be accessed from.

2.9.4 snmp-server enable traps violation

The Port MAC locking component interprets this command and configures violation action to send an SNMP trap with default trap frequency of 30 seconds. The Global command configures the trap violation mode across all interfaces valid for port-security. There is no global trap mode as such.



Note...

For other port security commands, see "Port Security Commands" on page 488".

Default	disabled
Format	<code>snmp-server enable traps violation</code>
Mode	• Global Config • Interface Config

2.9.4.1 no snmp-server enable traps violation

This command disables the sending of new violation traps.

Format	<code>no snmp-server enable traps violation</code>
Mode	Interface Config

2.9.5 snmp-server enable traps

This command enables the Authentication Flag.

Default	enabled
Format	<code>snmp-server enable traps</code>
Mode	Global Config

2.9.5.1 no snmp-server enable traps

This command disables the Authentication Flag.

Format	<code>no snmp-server enable traps</code>
Mode	Global Config

2.9.6 snmp-server enable traps all

This command enables all traps.

Default	enabled
Format	<code>snmp-server enable traps all</code>
Mode	Global Config

2.9.6.1 no snmp-server enable traps

This command disables all traps.

Format `no snmp-server enable traps all`
Mode Global Config

2.9.7 `snmp-server port`

This command configures the UDP port number on which the SNMP server listens for requests.

Default 161
Format `snmp-server port 1025-65535`
Mode Privileged EXEC

2.9.7.1 `no snmp-server port`

This command restores the SNMP server listen port to its factory default value.

Format `no snmp-server port`
Mode Privileged EXEC

2.9.8 `snmp trap link-status`

This command enables link status traps on an interface or range of interfaces.



Note...

This command is valid only when the Link Up/Down Flag is enabled.

Format `snmp trap link-status`
Mode Interface Config

2.9.8.1 `no snmp trap link-status`

This command disables link status traps by interface.



Note...

This command is valid only when the Link Up/Down Flag is enabled.

Format `no snmp trap link-status`
Mode Interface Config

2.9.9 `snmp trap link-status all`

This command enables link status traps for all interfaces.



Note...

This command is valid only when the Link Up/Down Flag is enabled.

Format snmp trap link-status all

Mode Global Config

2.9.9.1 no snmp trap link-status all

This command disables link status traps for all interfaces.



Note...

This command is valid only when the Link Up/Down Flag is enabled.

Format no snmp trap link-status all

Mode Global Config

2.9.10 snmp-server enable traps linkmode



Note...

This command may not be available on all platforms.

This command enables Link Up/Down traps for the entire switch. When enabled, link traps are sent only if the Link Trap flag setting associated with the port is enabled. See “show snmp” on page 115.

Default enabled

Format snmp-server enable traps linkmode

Mode Global Config

2.9.10.1 no snmp-server enable traps linkmode

This command disables Link Up/Down traps for the entire switch.

Format no snmp-server enable traps linkmode

Mode Global Config

2.9.11 snmp-server enable traps multiusers

This command enables Multiple User traps. When the traps are enabled, a Multiple User Trap is sent when a user logs in to the terminal interface (EIA 232 or Telnet) and there is an existing terminal interface session.

Default enabled

Format snmp-server enable traps multiusers

Mode Global Config

2.9.11.1 no snmp-server enable traps multiusers

This command disables Multiple User traps.

Format no snmp-server enable traps multiusers

Mode Global Config

2.9.12 snmp-server enable traps stpmode

This command enables the sending of new root traps and topology change notification traps.

Default enabled
Format snmp-server enable traps stpmode
Mode Global Config

2.9.12.1 no snmp-server enable traps stpmode

This command disables the sending of new root traps and topology change notification traps.

Format no snmp-server enable traps stpmode
Mode Global Config

2.9.13 snmp-server engineID local

This command configures the SNMP engine ID on the local device.

Default The engineID is configured automatically, based on the device MAC address.
Format snmp-server engineID local {engineid-string|default}
 snmp-server engineID local {ip <ip-addr> | text <text-string>}
Mode Global Config

Parameter	Description
engineid-string	A hexadecimal string identifying the engine-id, used for localizing configuration. Engine-id must be an even length in the range of 6 to 32 hexadecimal characters.
default	Sets the engine-id to the default string, based on the device MAC address.
ip	The command is extended by KONTRON to select a RFC 3411 defined algorithm using a specified IP address (ip) . The IP address must be specified as string. A RFC 3411 related prefix (5 octets) is added. Note that the show command shows the engine-id always hexadecimal.
text	The command is extended by KONTRON to select a RFC 3411 defined algorithm using a specified text (text). The text must be specified as string, it may be quoted to allow spaces, maximum length is 27 characters. A RFC 3411 related prefix (5 octets) is added. Note that the show command shows the engine-id always hexadecimal.

**CAUTION**

Changing the engine-id will invalidate all SNMP configuration that exists on the box.

2.9.13.1 no snmp-server engineID local

This command removes the specified engine ID.

Default The engineID is configured automatically, based on the device MAC address.
Format no snmp-server engineID local
Mode Global Config

2.9.14 snmp-server filter

This command creates a filter entry for use in limiting which traps will be sent to a host.

Default	No filters are created by default.
Format	<code>snmp-server filter <i>filtername</i> <i>oid-tree</i> {included excluded}</code>
Mode	Global Config

Parameter	Description
filtername	The label for the filter being created. The range is 1 to 30 characters.
oid-tree	The OID subtree to include or exclude from the filter. Subtrees may be specified by numerical (1.3.6.2.4) or keywords (system), and asterisks may be used to specify a subtree family (1.3.*.4).
included	The tree is included in the filter.
excluded	The tree is excluded from the filter.

2.9.14.1 no snmp-server filter

This command removes the specified filter.

Default	No filters are created by default.
Format	<code>snmp-server filter <i>filtername</i> [<i>oid-tree</i>]</code>
Mode	Global Config

2.9.15 snmp-server group

This command creates an SNMP access group.

Default	Generic groups are created for all versions and privileges using the default views.
Format	<code>snmp-server group <i>group-name</i> {v1 v2c v3 {noauth auth priv}} [context <i>context-name</i>] [read <i>read-view</i>] [write <i>write-view</i>] [notify <i>notify-view</i>]</code>
Mode	Global Config

Parameter	Description
group-name	The group name to be used when configuring communities or users. The range is 1 to 30 characters.
v1	This group can only access via SNMPv1.
v2	This group can only access via SNMPv2c.
v3	This group can only access via SNMPv3.
noauth	This group can be accessed only when not using Authentication or Encryption. Applicable only if SNMPv3 is selected.
auth	This group can be accessed only when using Authentication but not Encryption. Applicable only if SNMPv3 is selected.
priv	This group can be accessed only when using both Authentication and Encryption. Applicable only if SNMPv3 is selected.
context-name	The SNMPv3 context used during access. Applicable only if SNMPv3 is selected.
read-view	The view this group will use during GET requests. The range is 1 to 30 characters.
write-view	The view this group will use during SET requests. The range is 1 to 30 characters.
notify-view	The view this group will use when sending out traps. The range is 1 to 30 characters.

2.9.15.1 no snmp-server group

This command removes the specified group.

Format no snmp-server group *group-name* {v1|v2c| 3 {noauth|auth|priv}} [context *context-name*]
Mode Global Config

2.9.16 snmp-server host

This command configures traps to be sent to the specified host.

Default No default hosts are configured.
Format snmp-server host *host-addr* {informs [timeout *seconds*] [retries *retries*]|traps version {1 | 2c }} community-string [udp-port *port*] [filter *filter-name*]
Mode Global Config

Parameter	Description
host-addr	The IPv4 or IPv6 address of the host to send the trap or inform to.
traps	Send SNMP traps to the host. This option is selected by default.
version 1	Sends SNMPv1 traps. This option is not available if informs is selected.
version 2	Sends SNMPv2c traps. This option is not available if informs is selected. This option is selected by default.
informs	Send SNMPv2 informs to the host.
seconds	The number of seconds to wait for an acknowledgement before resending the Inform. The default is 15 seconds. The range is 1 to 300 seconds.
retries	The number of times to resend an Inform. The default is 3 attempts. The range is 0 to 255 retries.
community-string	Community string sent as part of the notification. The range is 1 to 20 characters.
port	The SNMP Trap receiver port. The default is port 162.
filter-name	The filter name to associate with this host. Filters can be used to specify which traps are sent to this host. The range is 1 to 30 characters.

2.9.16.1 no snmp-server host

This command removes the specified host entry.

Format no snmp-server host *host-addr* [traps|informs]
Mode Global Config

2.9.17 snmp-server user

This command creates an SNMPv3 user for access to the system.

Default No default users are created.
Format snmp-server user *username* *groupname* [remote *engineid-string*] [{auth-md5 *password* | auth-sha *password* | auth-md5-key *md5-key* | auth-sha-key *sha-key*} [priv-des *password* | priv-des-key *des-key*]
Mode Global Config

Parameter	Description
username	The username the SNMPv3 user will connect to the switch as. The range is 1 to 30 characters.
group-name	The name of the group the user belongs to. The range is 1 to 30 characters.
engineid-string	The engine-id of the remote management station that this user will be connecting from. The range is 5 to 32 characters.
password	The password the user will use for the authentication or encryption mechanism. The range is 1 to 32 characters.
md5-key	A pregenerated MD5 authentication key. The length is 32 characters.
sha-key	A pregenerated SHA authentication key. The length is 48 characters.
des-key	A pregenerated DES encryption key. The length is 32 characters if MD5 is selected, 48 characters if SHA is selected.

2.9.17.1 no snmp-server user

This command removes the specified SNMPv3 user.

Format no snmp-server user *username*

Mode Global Config

2.9.18 snmp-server view

This command creates or modifies an existing view entry that is used by groups to determine which objects can be accessed by a community or user.

Default Views are created by default to provide access to the default groups.

Format snmp-server *viewname oid-tree* {included|excluded}

Mode Global Config

Parameter	Description
viewname	The label for the view being created. The range is 1 to 30 characters.
oid-tree	The OID subtree to include or exclude from the view. Subtrees may be specified by numerical (1.3.6.2.4) or keywords (system), and asterisks may be used to specify a subtree family (1.3.*.4).
included	The tree is included in the view.
excluded	The tree is excluded from the view.

2.9.18.1 no snmp-server view

This command removes the specified view.

Format no snmp-server view *viewname [oid-tree]*

Mode Global Config

2.9.19 snmp-server v3-host

This command configures traps to be sent to the specified host.

Default	No default hosts are configured.
Format	<code>snmp-server v3-host <i>host-addr</i> <i>username</i> [traps informs [<i>timeout seconds</i>] [<i>retries retries</i>]] [auth noauth priv] [udpport <i>port</i>] [filter <i>filtername</i>]</code>
Mode	Global Config

Parameter	Description
host-addr	The IPv4 or IPv6 address of the host to send the trap or inform to.
user-name	User used to send a Trap or Inform message. This user must be associated with a group that supports the version and access method. The range is 1 to 30 characters.
traps	Send SNMP traps to the host. This is the default option.
informs	Send SNMP informs to the host.
seconds	Number of seconds to wait for an acknowledgement before resending the Inform. The default is 15 seconds. The range is 1 to 300 seconds.
retries	Number of times to resend an Inform. The default is 3 attempts. The range is 0 to 255 retries.
auth	Enables authentication but not encryption.
noauth	No authentication or encryption. This is the default.
priv	Enables authentication and encryption.
port	The SNMP Trap receiver port. This value defaults to port 162.
filter-name	The filter name to associate with this host. Filters can be used to specify which traps are sent to this host. The range is 1 to 30 characters.

2.9.20 snmptrap source-interface

Use this command in Global Configuration mode to configure the global source-interface (Source IP address) for all SNMP communication between the SNMP client and the server.

Format	<code>snmptrap source-interface {<i>slot/port</i> loopback <i>loopback-id</i> tunnel <i>tunnel-id</i> vlan <i>vlan-id</i>}</code>
Mode	Global Configuration

Parameter	Description
slot/port	The unit identifier assigned to the switch.
loopback-id	Configures the loopback interface. The range of the loopback ID is 0 to 7.
tunnel-id	Configures the IPv6 tunnel interface. The range of the tunnel ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

2.9.20.1 no snmptrap source-interface

Use this command in Global Configuration mode to remove the global source-interface (Source IP selection) for all SNMP communication between the SNMP client and the server.

Format	<code>no snmptrap source-interface</code>
Mode	Global Configuration

2.9.21 snmptrap ipaddr snmpversion

This command modifies the SNMP version of a trap. The maximum length of *name* is 16 case-sensitive alphanumeric characters. The *snmpversion* parameter options are snmpv1 or snmpv2.

**Note...**

This command does not support a “no” form.

Format snmptrap ipaddr snmpversion *name snmpversion*

Mode Global Configuration

2.9.22 snmptrap ip6addr snmpversion

This command modifies the SNMP version of a trap. The maximum length of *name* is 16 case-sensitive alphanumeric characters. The *snmpversion* parameter options are snmpv1 or snmpv2.

**Note...**

This command does not support a “no” form.

Format snmptrap ip6addr snmpversion *name snmpversion*

Mode Global Configuration

2.9.23 show snmp

This command displays the current SNMP configuration.

Format show snmp

Mode Privileged EXEC

Term		Definition
Community Table:	Community-String	The community string for the entry. This is used by SNMPv1 and SNMPv2 protocols to access the switch.
	Community-Access	The type of access the community has: • Read only • Read write • su
	View Name	The view this community has access to.
	IP Address	Access to this community is limited to this IP address.
	View Name	The view this community has access to.
Community Group Table:	Community-String	The community this mapping configures
	Group Name	The group this community is assigned to.
	IP Address	The IP address this community is limited to.

Term		Definition
Host Table:	Target Address	The address of the host that traps will be sent to.
	Type	The type of message that will be sent, either traps or informs.
	Community	The community traps will be sent to.
	Version	The version of SNMP the trap will be sent as.
	UDP Port	The UDP port the trap or inform will be sent to.
	Filter name	The filter the traps will be limited by for this host.
	TO Sec	The number of seconds before informs will time out when sending to this host.
	Retries	The number of times informs will be sent after timing out.

2.9.24 show snmp engineID

This command displays the currently configured SNMP engineID.

Format `show snmp engineID`

Mode Privileged EXEC

Parameter	Description
Local SNMP EngineID	The current configuration of the displayed SNMP engineID.

2.9.25 show snmp filters

This command displays the configured filters used when sending traps.

Format `show snmp filters [filtername]`

Mode Privileged EXEC

Parameter	Description
Name	The filter name for this entry.
OID Tree	The OID tree this entry will include or exclude.
Type	Indicates if this entry includes or excludes the OID Tree.

2.9.26 show snmp group

This command displays the configured groups.

Format `show snmp group [groupname]`

Mode Privileged EXEC

Parameter	Description
Name	The name of the group.
Security Model	Indicates which protocol can access the system via this group.
Security Level	Indicates the security level allowed for this group.
Read View	The view this group provides read access to.
Write View	The view this group provides write access to.

Parameter	Description
Notify View	The view this group provides trap access to.

2.9.27 `show snmp-server`

This command displays the current SNMP server user configuration.

Format `show snmp-server`

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.
(Routing)#`show snmp-server`

```
SNMP Server Port..... 161
```

2.9.28 `show snmp source-interface`

Use this command in Privileged EXEC mode to display the configured global source-interface (Source IP address) details used for an SNMP client.

Format `show snmp source-interface`

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Routing)# show snmp source-interface
SNMP trap Client Source Interface..... (not configured)
```

2.9.29 `show snmp user`

This command displays the currently configured SNMPv3 users.

Format `show snmp user [username]`

Mode Privileged EXEC

Term	Definition
Name	The name of the user.
Group Name	The group that defines the SNMPv3 access parameters.
Auth Method	The authentication algorithm configured for this user.
Privilege Method	The encryption algorithm configured for this user.
Remote Engine ID	The engineID for the user defined on the client machine.

2.9.30 `show snmp views`

This command displays the currently configured views.

Format `show snmp views [viewname]`

Mode Privileged EXEC

Parameter	Description
Name	The view name for this entry.
OID Tree	The OID tree that this entry will include or exclude.
Type	Indicates if this entry includes or excludes the OID tree.

2.9.31 show trapflags

This command displays trap conditions. The command's display shows all the enabled OSPFv2 and OSPFv3 trapflags. Configure which traps the switch should generate by enabling or disabling the trap condition. If a trap condition is enabled and the condition is detected, the SNMP agent on the switch sends the trap to all enabled trap receivers. You do not have to reset the switch to implement the changes. Cold and warm start traps are always generated and cannot be disabled.

Format show trapflags

Mode Privileged EXEC

Term	Definition
Authentication Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether authentication failure traps will be sent.
Link Up/Down Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether link status traps will be sent.
Multiple Users Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether a trap will be sent when the same user ID is logged into the switch more than once at the same time (either through Telnet or the serial port).
Spanning Tree Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether spanning tree traps are sent.
ACL Traps	May be enabled or disabled. The factory default is disabled. Indicates whether ACL traps are sent.
DVMRP Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether DVMRP traps are sent.
OSPFv2 Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether OSPF traps are sent. If any of the OSPF trap flags are not enabled, then the command displays <i>disabled</i> . Otherwise, the command shows all the enabled OSPF traps' information.
OSPFv3 Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether OSPF traps are sent. If any of the OSPFv3 trap flags are not enabled, then the command displays <i>disabled</i> . Otherwise, the command shows all the enabled OSPFv3 traps' information.
PIM Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether PIM traps are sent.

2.9.32 snmp-server enable traps all

This command enables all traps.

Default enabled

Format snmp-server enable traps all

Mode Global Config

2.9.32.1 no snmp-server enable traps

This command disables all traps.

Format no snmp-server enable traps all

Mode Global Config

2.9.33 show snmp-server

This is a standard FASTPATH command to display snmp-server parameters. The command is extended by Kontron (parameter 'sysinfo') to display additionally snmp-server system information. This consists of the name, the physical location of the switch or the organisation responsible for network. All parameters are listed for 'all'. This information is provided for the SNMP in the standard MIB-2 in OIDs "sysName", "sysLocation" and "sysContact".

Format `show snmp-server [sysinfo {sysname | location | contact | all}]`

Mode Privileged EXEC

2.10 RADIUS Commands

This section describes the commands you use to configure the switch to use a Remote Authentication Dial-In User Service (RADIUS) server on your network for authentication and accounting.

2.10.1 aaa server radius dynamic-author

This command enables CoA functionality and enters dynamic authorization local server configuration mode.

Default None

Format `aaa server radius dynamic-author`

Mode Global Config

Example:

```
(FASTPATH Routing) #configure
(FASTPATH Routing) (Config)#aaa server radius dynamic-author
(FASTPATH Routing) (Config- radius-da)#
```

2.10.1.1 no aaa server radius dynamic-author

This command disables CoA functionality.

Default None

Format `no aaa server radius dynamic-author`

Mode Global Config

Example:

```
(FASTPATH Routing) #configure
(FASTPATH Routing) (Config)#no aaa server radius dynamic-author
```

2.10.2 auth-type

Use this command to specify the type of authorization that the device uses for RADIUS clients. The client must match the configured attributes for authorization.

Default All

Format `auth-type { any | all | session-key }`

Mode Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#auth-type all
```

2.10.2.1 no auth-type

Use this command to reset the type of authorization that the device must use for RADIUS clients.

Default	None
Format	no auth-type
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#no auth-type
```

2.10.3 authorization network radius

Use this command to enable the switch to accept VLAN assignment by the radius server.

Default	disable
Format	authorization network radius
Mode	Global Config

2.10.3.1 no authorization network radius

Use this command to disable the switch to accept VLAN assignment by the radius server.

Format	no authorization network radius
Mode	Global Config

2.10.4 clear radius dynamic-author statistics

This command clears radius dynamic authorization counters.

Default	None
Format	clear radius dynamic-author statistics
Mode	Privileged EXEC

Example:

```
(FASTPATH Routing) #clear radius dynamic-author statistics
```

```
Are you sure you want to clear statistics? (y/n) y
```

```
Statistics cleared.
```

2.10.5 client

Use this command to configure the IP address or hostname of the AAA server client. Use the optional server-key keyword and string argument to configure the server key at the client level.

Default	None
Format	client { ip-address hostname } [server-key [0 7] key-string]
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#client 10.0.0.1 server-key 7 device1
```


2.10.5.1 no client

Use this command to remove the configured Dynamic Authorization client and the key associated with that client in the device.

Default	None
Format	no client { <i>ip-address</i> <i>hostname</i> }
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#no client 10.0.0.1
```

2.10.6 debug aaa coa

Use this command to display Dynamic Authorization Server processing debug information.

Default	None
Format	debug aaa coa
Mode	Dynamic Authorization

2.10.7 debug aaa pod

Use this command to display Disconnect Message packets.

Default	None
Format	debug aaa pod
Mode	Dynamic Authorization

2.10.8 ignore server-key

Use this optional command to configure the device to ignore the server key.

Default	Disable
Format	ignore server-key
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#ignore server-key
```

2.10.8.1 no ignore server-key

Use this optional command to configure the device not to ignore the server key (that is, it resets the ignore server key property on the device).

Default	Disable
Format	no ignore server-key
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#no ignore server-key
```

2.10.9 ignore session-key

Use this optional command to configure the device to ignore the session key.

Default	Disable
Format	ignore session-key
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#ignore session-key
```

2.10.9.1 no ignore session-key

Use this optional command to configure the device to not ignore the session key (that is, it resets the ignore session key property on the device).

Default	Disable
Format	no ignore session-key
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#no ignore session-key
```

2.10.10 port

Use this command to specify the UDP port on which a device listens for RADIUS requests from configured Dynamic Authorization clients. The supported range for the port-number is 1025 to 65535.

Default	3799
Format	port <i>port-number</i>
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#port 1700
```

2.10.10.1 no port

Use this command to reset the configured UDP port on which a device listens for RADIUS requests from configured Dynamic Authorization clients.

Default	3799
Format	no port
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config- radius-da)#no port
```

2.10.11 radius accounting mode

This command is used to enable the RADIUS accounting function.

Default disabled
Format radius accounting mode
Mode Global Config

2.10.11.1 no radius accounting mode

This command is used to set the RADIUS accounting function to the default value - i.e. the RADIUS accounting function is disabled.

Format no radius accounting mode
Mode Global Config

2.10.12 radius server attribute 4

This command specifies the RADIUS client to use the NAS-IP Address attribute in the RADIUS requests. If the specific IP address is configured while enabling this attribute, the RADIUS client uses that IP address while sending NAS-IP-Address attribute in RADIUS communication.

Format radius server attribute 4 [*ipaddr*]
Mode Global Config

Term	Definition
4	NAS-IP-Address attribute to be used in RADIUS requests.
ipaddr	The IP address of the server.

2.10.12.1 no radius server attribute 4

The no version of this command disables the NAS-IP-Address attribute global parameter for RADIUS client. When this parameter is disabled, the RADIUS client does not send the NAS-IP-Address attribute in RADIUS requests.

Format no radius server attribute 4 [*ipaddr*]
Mode Global Config

Example: The following shows an example of the command.

```
(Switch) (Config) #radius server attribute 4 192.168.37.60
(Switch) (Config) #radius server attribute 4
```

2.10.13 radius server host

This command configures the IP address or DNS name to use for communicating with the RADIUS server of a selected server type. While configuring the IP address or DNS name for the authenticating or accounting servers, you can also configure the port number and server name. If the authenticating and accounting servers are configured without a name, the command uses the Default_RADIUS_Auth_Server and Default_RADIUS_Acct_Server as the default names, respectively. The same name can be configured for more than one authenticating servers and the name should be unique for accounting servers. The RADIUS client allows the configuration of a maximum 32 authenticating and accounting servers.

If you use the *auth* parameter, the command configures the IP address or hostname to use to connect to a RADIUS authentication server. You can configure up to 3 servers per RADIUS client. If the maximum number of configured servers is reached, the command fails until you remove one of the servers by issuing the “no” form of the command. If you use the optional *port* parameter, the command configures the UDP port number to use when connecting to the configured RADIUS server. The *port* number range is 1 - 65535, with 1812 being the default value.



Note...

To reconfigure a RADIUS authentication server to use the default UDP *port*, set the *port* parameter to 1812.

If you use the *acct* token, the command configures the IP address or hostname to use for the RADIUS accounting server. You can only configure one accounting server. If an accounting server is currently configured, use the “no” form of the command to remove it from the configuration. The IP address or hostname you specify must match that of a previously configured accounting server. If you use the optional *port* parameter, the command configures the UDP port to use when connecting to the RADIUS accounting server. If a *port* is already configured for the accounting server, the new *port* replaces the previously configured *port*. The *port* must be a value in the range 0 - 65535, with 1813 being the default.



Note...

To reconfigure a RADIUS accounting server to use the default UDP *port*, set the *port* parameter to 1813.

Format radius server host {auth | acct} {ipaddr/dnsname} [name servername] [port 0-65535]
Mode Global Config

Field	Description
ipaddr	The IP address of the server.
dnsname	The DNS name of the server.
0-65535	The port number to use to connect to the specified RADIUS server.
servername	The alias name to identify the server.

2.10.13.1 no radius server host

The no version of this command deletes the configured server entry from the list of configured RADIUS servers. If the RADIUS authenticating server being removed is the active server in the servers that are identified by the same server name, then the RADIUS client selects another server for making RADIUS transactions. If the 'auth' token is used, the previously configured RADIUS authentication server is removed from the configuration. Similarly, if the 'acct' token is used, the previously configured RADIUS accounting server is removed from the configuration. The *ipaddr/dnsname* parameter must match the IP address or DNS name of the previously configured RADIUS authentication / accounting server.

Format no radius server host {auth | acct} {ipaddr/dnsname}
Mode Global Config

Example: The following shows an example of the command.

```
(Switch) (Config) #radius server host acct 192.168.37.60
(Switch) (Config) #radius server host acct 192.168.37.60 port 1813
(Switch) (Config) #radius server host auth 192.168.37.60 name Network1_RS port 1813
(Switch) (Config) #radius server host acct 192.168.37.60 name Network2_RS
(Switch) (Config) #no radius server host acct 192.168.37.60
```

2.10.14 radius server key

This command configures the key to be used in RADIUS client communication with the specified server. Depending on whether the 'auth' or 'acct' token is used, the shared secret is configured for the RADIUS authentication or RADIUS accounting server. The IP address or hostname provided must match a previously configured server. When this command is executed, the secret is prompted.

Text-based configuration supports Radius server's secrets in encrypted and non-encrypted format. When you save the configuration, these secret keys are stored in encrypted format only. If you want to enter the key in encrypted format, enter the key along with the encrypted keyword. In the `show running-config` command's display, these secret keys are displayed in encrypted format. You cannot show these keys in plain text format.



Note...

The secret must be an alphanumeric value not exceeding 16 characters.

Format radius server key {auth | acct} {ipaddr/dnsname} *encrypted password*
Mode Global Config

Field	Description
ipaddr	The IP address of the server.
dnsname	The DNS name of the server.
password	The password in encrypted format.

Example: The following shows an example of the CLI command.

```
radius server key acct 10.240.4.10 encrypted encrypt-string
```

2.10.15 radius server msgauth

This command enables the message authenticator attribute to be used for the specified RADIUS Authenticating server.

Format radius server msgauth ipaddr/dnsname
Mode Global Config

Field	Description
ip addr	The IP address of the server.
dnsname	The DNS name of the server.

2.10.15.1 no radius server msgauth

The no version of this command disables the message authenticator attribute to be used for the specified RADIUS Authenticating server.

Format no radius server msgauth *ipaddr/dnsname*

Mode Global Config

2.10.16 radius server primary

This command specifies a configured server that should be the primary server in the group of servers which have the same server name. Multiple primary servers can be configured for each number of servers that have the same name. When the RADIUS client has to perform transactions with an authenticating RADIUS server of specified name, the client uses the primary server that has the specified server name by default. If the RADIUS client fails to communicate with the primary server for any reason, the client uses the backup servers configured with the same server name. These backup servers are identified as the Secondary type.

Format radius server primary {*ipaddr/dnsname*}

Mode Global Config

Field	Description
ip addr	The IP address of the RADIUS Authenticating server.
dnsname	The DNS name of the server.

2.10.17 radius server retransmit

This command configures the global parameter for the RADIUS client that specifies the number of transmissions of the messages to be made before attempting the fall back server upon unsuccessful communication with the current RADIUS authenticating server. When the maximum number of retries are exhausted for the RADIUS accounting server and no response is received, the client does not communicate with any other server.

Default 4

Format radius server retransmit *retries*

Mode Global Config

Field	Description
retries	The maximum number of transmission attempts in the range of 1 to 15.

2.10.17.1 no radius server retransmit

The no version of this command sets the value of this global parameter to the default value.

Format no radius server retransmit

Mode Global Config

2.10.18 radius source-interface

Use this command to specify the physical or logical interface to use as the RADIUS client source interface (Source IP address). If configured, the address of source Interface is used for all RADIUS communications between the RADIUS server and the RADIUS client. The selected source-interface IP address is used for filling the IP header of RADIUS management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch.

If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address. If the configured interface is down, the RADIUS client falls back to its default behavior.

Format radius source-interface {slot/port | loopback *loopback-id* / vlan *vlan-id*}

Mode Global Config

Parameter	Description
slot/port	The unit identifier assigned to the switch.
loopback-id	Configures the loopback interface. The range of the loopback ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

2.10.18.1 no radius source-interface

Use this command to reset the RADIUS source interface to the default settings.

Format no radius source-interface

Mode Global Config

2.10.19 radius server timeout

This command configures the global parameter for the RADIUS client that specifies the timeout value (in seconds) after which a request must be retransmitted to the RADIUS server if no response is received. The timeout value is an integer in the range of 1 to 30.

Default 5

Format radius server timeout *seconds*

Mode Global Config

Field	Description
retries	Maximum number of transmission attempts in the range 1–30.

2.10.19.1 no radius server timeout

The no version of this command sets the timeout global parameter to the default value.

Format no radius server timeout

Mode Global Config

2.10.20 server-key

Use this command to configure a global shared secret that is used for all dynamic authorization clients that do not have an individual shared secret key configured.

Default	None
Format	server-key [7] <i>key-string</i>
Mode	Dynamic Authorization

Term	Definition
0	An unencrypted key is to be entered
7	An encrypted key is to be entered
string	The shared secret string. Maximum length is 128 characters for unencrypted key and 256 characters for encrypted key. Overrides the global setting for this client only. Enclose in quotes to use special characters or embedded blanks.

Example:

```
(FASTPATH Routing) (Config-radius-da)# server-key encrypted mydevice
```

2.10.20.1 no server-key

Use this command to remove the global shared secret key configuration.

Default	None
Format	no server-key
Mode	Dynamic Authorization

Example:

```
(FASTPATH Routing) (Config-radius-da)#no server-key
```

2.10.21 show radius servers

Use this command to display the authentication parameters.

Default	Not applicable
Format	show radius servers { <i>serverIP</i> name <i>serverName</i> }
Mode	User EXEC

Example:

```
(FASTPATH Routing)# show radius servers name Default-RADIUS-Server
```

```
RADIUS Server Name..... CoA-Server-1
Current Server IP Address..... 1.1.1.1
Number of Retransmits..... 3
Timeout Duration..... 15
Deadtime..... 0
Port..... 3799
Source IP..... 10.27.9.99 <- switch
RADIUS Accounting Mode..... Disabled
Secret Configured..... Yes
Message Authenticator..... Enable
Number of CoA Requests Received..... 203
```



```

Number of CoA ACK Responses Sent..... 111
Number of CoA NAK Responses Sent..... 37
Number of CoA Requests Ignored..... 55
Number of CoA Missing/Unsupported Attribute Requests..... 18
Number of CoA Session Context Not Found Requests..... 5
Number of CoA Invalid Attribute Value Requests... 11
Number of Administratively Prohibited Requests.....3

```

2.10.22 show radius

This command displays the values configured for the global parameters of the RADIUS client.

Format show radius
Mode Privileged EXEC

Term	Definition
Number of Configured Authentication Servers	The number of RADIUS Authentication servers that have been configured.
Number of Configured Accounting Servers	The number of RADIUS Accounting servers that have been configured.
Number of Named Authentication Server Groups	The number of configured named RADIUS server groups.
Number of Named Accounting Server Groups	The number of configured named RADIUS server groups.
Number of Retransmits	The configured value of the maximum number of times a request packet is retransmitted.
Time Duration	The configured timeout value, in seconds, for request retransmissions.
RADIUS Accounting Mode	A global parameter to indicate whether the accounting mode for all the servers is enabled or not.
RADIUS Attribute 4 Mode	A global parameter to indicate whether the NAS-IP-Address attribute has been enabled to use in RADIUS requests.
RADIUS Attribute 4 Value	A global parameter that specifies the IP address to be used in the NAS-IP-Address attribute to be used in RADIUS requests.

Example: The following shows example CLI display output for the command.
(Switch) #show radius

```

Number of Configured Authentication Servers..... 32
Number of Configured Accounting Servers..... 32
Number of Named Authentication Server Groups..... 15
Number of Named Accounting Server Groups..... 3
Number of Retransmits..... 4
Time Duration..... 10
RADIUS Accounting Mode..... Disable
RADIUS Attribute 4 Mode..... Enable
RADIUS Attribute 4 Value ..... 192.168.37.60

```

2.10.23 show radius servers

This command displays the summary and details of RADIUS authenticating servers configured for the RADIUS client.

Format show radius servers [{ipaddr/dnsname | name [servername]]}
Mode Privileged EXEC

Field	Description
ipaddr	The IP address of the authenticating server.
dnsname	The DNS name of the authenticating server.
servername	The alias name to identify the server.
Current	The * symbol preceding the server host address specifies that the server is currently active.
Host Address	The IP address of the host.
Server Name	The name of the authenticating server.
Port	The port used for communication with the authenticating server.
Type	Specifies whether this server is a primary or secondary type.
Current Host Address	The IP address of the currently active authenticating server.
Secret Configured	Yes or No Boolean value that indicates whether this server is configured with a secret.
Number of Retransmits	The configured value of the maximum number of times a request packet is retransmitted.
Message Authenticator	A global parameter to indicate whether the Message Authenticator attribute is enabled or disabled.
Time Duration	The configured timeout value, in seconds, for request retransmissions.
RADIUS Accounting Mode	A global parameter to indicate whether the accounting mode for all the servers is enabled or not.
RADIUS Attribute 4 Mode	A global parameter to indicate whether the NAS-IP-Address attribute has been enabled to use in RADIUS requests.
RADIUS Attribute 4 Value	A global parameter that specifies the IP address to be used in NAS-IP-Address attribute used in RADIUS requests.

Example: The following shows example CLI display output for the command.

(Switch) #show radius servers

```

Cur  Host Address          Server Name                Port  Type
rent
-----
*   192.168.37.200        Network1_RADIUS_Server    1813  Primary
    192.168.37.201        Network2_RADIUS_Server    1813  Secondary
    192.168.37.202        Network3_RADIUS_Server    1813  Primary
    192.168.37.203        Network4_RADIUS_Server    1813  Secondary

```

(Switch) #show radius servers name

```

Current Host Address      Server Name                Type
-----
Network1_RADIUS_Server    Secondary                  192.168.37.200
192.168.37.201           Network2_RADIUS_Server    Primary
192.168.37.202           Network3_RADIUS_Server    Secondary
192.168.37.203           Network4_RADIUS_Server    Primary

```

(Switch) #show radius servers name Default_RADIUS_Server

```

Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.58
Secret Configured..... No
Message Authenticator ..... Enable
Number of Retransmits..... 4
Time Duration..... 10
RADIUS Accounting Mode..... Disable
RADIUS Attribute 4 Mode..... Enable
RADIUS Attribute 4 Value ..... 192.168.37.60

```

```
(Switch) #show radius servers 192.168.37.58
```

```
Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.58
Secret Configured..... No
Message Authenticator ..... Enable
Number of Retransmits..... 4
Time Duration..... 10
RADIUS Accounting Mode..... Disable
RADIUS Attribute 4 Mode..... Enable
RADIUS Attribute 4 Value ..... 192.168.37.60
```

2.10.24 show radius accounting

This command displays a summary of configured RADIUS accounting servers.

Format show radius accounting name [servername]

Mode Privileged EXEC

Field	Description
servername	An alias name to identify the server.
RADIUS Accounting Mode	A global parameter to indicate whether the accounting mode for all the servers is enabled or not.

If you do not specify any parameters, then only the accounting mode and the RADIUS accounting server details are displayed.

Term	Definition
Host Address	The IP address of the host.
Server Name	The name of the accounting server.
Port	The port used for communication with the accounting server.
Secret Configured	Yes or No Boolean value indicating whether this server is configured with a secret.

Example: The following shows example CLI display output for the command.

```
(Switch) #show radius accounting name
```

Host Address	Server Name	Port	Secret Configured
192.168.37.200	Network1_RADIUS_Server	1813	Yes
192.168.37.201	Network2_RADIUS_Server	1813	No
192.168.37.202	Network3_RADIUS_Server	1813	Yes
192.168.37.203	Network4_RADIUS_Server	1813	No

```
(Switch) #show radius accounting name Default_RADIUS_Server
```

```
Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.200
RADIUS Accounting Mode..... Disable
Port ..... 1813
Secret Configured ..... Yes
```

2.10.25 show radius accounting statistics

This command displays a summary of statistics for the configured RADIUS accounting servers.

Format show radius accounting statistics {ipaddr/dnsname | name servername}

Mode Privileged EXEC

Term	Definition
ipaddr	The IP address of the server.
dnsname	The DNS name of the server.
servername	The alias name to identify the server.
RADIUS Accounting Server Name	The name of the accounting server.
Server Host Address	The IP address of the host.
Round Trip Time	The time interval, in hundredths of a second, between the most recent Accounting-Response and the Accounting-Request that matched it from this RADIUS accounting server.
Requests	The number of RADIUS Accounting-Request packets sent to this server. This number does not include retransmissions.
Retransmission	The number of RADIUS Accounting-Request packets retransmitted to this RADIUS accounting server.
Responses	The number of RADIUS packets received on the accounting port from this server.
Malformed Responses	The number of malformed RADIUS Accounting-Response packets received from this server. Malformed packets include packets with an invalid length. Bad authenticators or signature attributes or unknown types are not included as malformed accounting responses.
Bad Authenticators	The number of RADIUS Accounting-Response packets containing invalid authenticators received from this accounting server.
Pending Requests	The number of RADIUS Accounting-Request packets sent to this server that have not yet timed out or received a response.
Timeouts	The number of accounting timeouts to this server.
Unknown Types	The number of RADIUS packets of unknown types, which were received from this server on the accounting port.
Packets Dropped	The number of RADIUS packets received from this server on the accounting port and dropped for some other reason.

Example: The following shows example CLI display output for the command.

```
(Switch) #show radius accounting statistics 192.168.37.200
```

```

RADIUS Accounting Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.200
Round Trip Time..... 0.00
Requests..... 0
Retransmissions..... 0
Responses..... 0
Malformed Responses..... 0
Bad Authenticators..... 0
Pending Requests..... 0
Timeouts..... 0
Unknown Types..... 0
Packets Dropped..... 0

```

```
(Switch) #show radius accounting statistics name Default_RADIUS_Server
```

```

RADIUS Accounting Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.200
Round Trip Time..... 0.00
Requests..... 0
Retransmissions..... 0
Responses..... 0
Malformed Responses..... 0
Bad Authenticators..... 0
Pending Requests..... 0
Timeouts..... 0
Unknown Types..... 0
Packets Dropped..... 0

```

2.10.26 show radius source-interface

Use this command in Privileged EXEC mode to display the configured RADIUS client source-interface (Source IP address) information.

Format show radius source-interface

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```

(Routing)# show radius source-interface
RADIUS Client Source Interface..... (not configured)

```

2.10.27 show radius statistics

This command displays the summary statistics of configured RADIUS Authenticating servers.

Format show radius statistics {ipaddr/dnsname | name servername}

Mode Privileged EXEC

Term	Definition
ipaddr	The IP address of the server.
dnsname	The DNS name of the server.
servername	The alias name to identify the server.
RADIUS Server Name	The name of the authenticating server.
Server Host Address	The IP address of the host.
Access Requests	The number of RADIUS Access-Request packets sent to this server. This number does not include retransmissions.
Access Retransmissions	The number of RADIUS Access-Request packets retransmitted to this RADIUS authentication server.
Access Accepts	The number of RADIUS Access-Accept packets, including both valid and invalid packets, that were received from this server.
Access Rejects	The number of RADIUS Access-Reject packets, including both valid and invalid packets, that were received from this server.
Access Challenges	The number of RADIUS Access-Challenge packets, including both valid and invalid packets, that were received from this server.
Malformed Access Responses	The number of malformed RADIUS Access-Response packets received from this server. Malformed packets include packets with an invalid length. Bad authenticators or signature attributes or unknown types are not included as malformed access responses.

Term	Definition
Bad Authenticators	The number of RADIUS Access-Response packets containing invalid authenticators or signature attributes received from this server.
Pending Requests	The number of RADIUS Access-Request packets destined for this server that have not yet timed out or received a response.
Timeouts	The number of authentication timeouts to this server.
Unknown Types	The number of packets of unknown type that were received from this server on the authentication port.
Packets Dropped	The number of RADIUS packets received from this server on the authentication port and dropped for some other reason.

Example: The following shows example CLI display output for the command.

```
(Switch) #show radius statistics 192.168.37.200
```

```
RADIUS Server Name..... Default_RADIUS_Server
Server Host Address..... 192.168.37.200
Access Requests..... 0.00
Access Retransmissions..... 0
Access Accepts..... 0
Access Rejects..... 0
Access Challenges..... 0
Malformed Access Responses..... 0
Bad Authenticators..... 0
Pending Requests..... 0
Timeouts..... 0
Unknown Types..... 0
Packets Dropped..... 0
```

```
(Switch) #show radius statistics name Default_RADIUS_Server
```

```
RADIUS Server Name..... Default_RADIUS_Server
Server Host Address..... 192.168.37.200
Access Requests..... 0.00
Access Retransmissions..... 0
Access Accepts..... 0
Access Rejects..... 0
Access Challenges..... 0
Malformed Access Responses..... 0
Bad Authenticators..... 0
Pending Requests..... 0
Timeouts..... 0
Unknown Types..... 0
Packets Dropped..... 0
```

2.11 TACACS+ Commands

TACACS+ provides access control for networked devices via one or more centralized servers. Similar to RADIUS, this protocol simplifies authentication by making use of a single database that can be shared by many clients on a large network. TACACS+ is based on the TACACS protocol (described in RFC1492) but additionally provides for separate authentication, authorization, and accounting services. The original protocol was UDP based with messages passed in clear text over the network; TACACS+ uses TCP to ensure reliable delivery and a shared key configured on the client and daemon server to encrypt all messages.

2.11.1 tacacs-server host

Use the `tacacs-server host` command in Global Configuration mode to configure a TACACS+ server. This command enters into the TACACS+ configuration mode. The `ip-address/hostname` parameter is the IP address or hostname of the TACACS+ server. To specify multiple hosts, multiple `tacacs-server host` commands can be used.

Format `tacacs-server host ip-address/hostname`
Mode Global Config

2.11.1.1 `no tacacs-server host`

Use the `no tacacs-server host` command to delete the specified hostname or IP address. The *ip-address/hostname* parameter is the IP address of the TACACS+ server.

Format `no tacacs-server host ip-address/hostname`
Mode Global Config

2.11.2 `tacacs-server key`

Use the `tacacs-server key` command to set the authentication and encryption key for all TACACS+ communications between the switch and the TACACS+ daemon. The *key-string* parameter has a range of 0 - 128 characters and specifies the authentication and encryption key for all TACACS communications between the switch and the TACACS+ server. This key must match the key used on the TACACS+ daemon.

Text-based configuration supports TACACS server's secrets in encrypted and non-encrypted format. When you save the configuration, these secret keys are stored in encrypted format only. If you want to enter the key in encrypted format, enter the key along with the encrypted keyword. In the `show running-config` command's display, these secret keys are displayed in encrypted format. You cannot show these keys in plain text format.

Format `tacacs-server key [key-string | encrypted key-string]`
Mode Global Config

2.11.2.1 `no tacacs-server key`

Use the `no tacacs-server key` command to disable the authentication and encryption key for all TACACS+ communications between the switch and the TACACS+ daemon. The *key-string* parameter has a range of 0 - 128 characters. This key must match the key used on the TACACS+ daemon.

Format `no tacacs-server key key-string`
Mode Global Config

2.11.3 `tacacs-server keystring`

Use the `tacacs-server keystring` command to set the global authentication encryption key used for all TACACS+ communications between the TACACS+ server and the client.

Format `tacacs-server keystring`
Mode Global Config

Example: The following shows an example of the CLI command.

```
(Switching)(Config)#tacacs-server keystring
Enter tacacs key:*****
Re-enter tacacs key:*****
```

2.11.4 tacacs-server source-interface

Use this command in Global Configuration mode to configure the source interface (Source IP address) for TACACS+ server configuration. The selected source-interface IP address is used for filling the IP header of management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch.

If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address.

Format tacacs-server source-interface {*slot/port*|loopback *loopback-id*|vlan *vlan-id*}

Mode Global Config

Parameter	Description
slot/port	The unit identifier assigned to the switch, in <i>slot/port</i> format.
loopback-id	The loopback interface. The range of the loopback ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

Example: The following shows an example of the command.

```
(Config)#tacacs-server source-interface loopback 0
(Config)#tacacs-server source-interface 0/1
(Config)#no tacacs-server source-interface
```

2.11.4.1 no tacacs-server source-interface

Use this command in Global Configuration mode to remove the global source interface (Source IP selection) for all TACACS+ communications between the TACACS+ client and the server.

Format no tacacs-server source-interface

Mode Global Config

2.11.5 tacacs-server timeout

Use the `tacacs-server timeout` command to set the timeout value for communication with the TACACS+ servers. The *timeout* parameter has a range of 1-30 and is the timeout value in seconds. If you do not specify a timeout value, the command sets the global timeout to the default value. TACACS+ servers that do not use the global timeout will retain their configured timeout values.

Default 5

Format tacacs-server timeout *timeout*

Mode Global Config

2.11.5.1 no tacacs-server timeout

Use the `no tacacs-server timeout` command to restore the default timeout value for all TACACS servers.

Format no tacacs-server timeout

Mode Global Config

2.11.6 key

Use the `key` command in TACACS Configuration mode to specify the authentication and encryption key for all TACACS communications between the device and the TACACS server. This key must match the key used on the TACACS daemon. The *key-string* parameter specifies the key name. For an empty string use `" "`. (Range: 0 - 128 characters).

Text-based configuration supports TACACS server's secrets in encrypted and non-encrypted format. When you save the configuration, these secret keys are stored in encrypted format only. If you want to enter the key in encrypted format, enter the key along with the encrypted keyword. In the `show running-config` command's display, these secret keys are displayed in encrypted format. You cannot show these keys in plain text format.

Format `key [key-string | encrypted key-string]`
Mode TACACS Config

2.11.7 keystring

Use the `keystring` command in TACACS Server Configuration mode to set the TACACS+ server-specific authentication encryption key used for all TACACS+ communications between the TACACS+ server and the client.

Format `keystring`
Mode TACACS Server Config

Example: The following shows an example of the command.

```
(Switching)(Config)#tacacs-server host 1.1.1.1
(Switching)(Tacacs)#keystring
```

```
Enter tacacs key:*****
Re-enter tacacs key:*****
```

2.11.8 port

Use the `port` command in TACACS Configuration mode to specify a server port number. The server *port-number* range is 0 - 65535.

Default 49
Format `port port-number`
Mode TACACS Config

2.11.9 priority (TACACS Config)

Use the `priority` command in TACACS Configuration mode to specify the order in which servers are used, where 0 (zero) is the highest priority. The *priority* parameter specifies the priority for servers. The highest priority is 0 (zero), and the range is 0 - 65535.

Default 0
Format `priority priority`
Mode TACACS Config

2.11.10 timeout

Use the `timeout` command in TACACS Configuration mode to specify the timeout value in seconds. If no timeout value is specified, the global value is used. The *timeout* parameter has a range of 1-30 and is the timeout value in seconds.

Format `timeout timeout`

Mode TACACS Config

2.11.11 show tacacs

Use the `show tacacs` command to display the configuration, statistics, and source interface details of the TACACS+ client.

Format `show tacacs [ip-address/hostname/client/server]`

Mode Privileged EXEC

Term	Definition
Host address	The IP address or hostname of the configured TACACS+ server.
Port	The configured TACACS+ server port number.
TimeOut	The timeout in seconds for establishing a TCP connection.
Priority	The preference order in which TACACS+ servers are contacted. If a server connection fails, the next highest priority server is contacted.

2.11.12 show tacacs source-interface

Use the `show tacacs source-interface` command in Global Config mode to display the configured global source interface details used for a TACACS+ client. The IP address of the selected interface is used as source IP for all communications with the server.

Format `show tacacs source-interface`

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Config)# show tacacs source-interface
```

```
TACACS Client Source Interface      : loopback 0
TACACS Client Source IPv4 Address  : 1.1.1.1 [UP]
```

2.12 Configuration Scripting Commands

Configuration Scripting allows you to generate text-formatted script files representing the current configuration of a system. You can upload these configuration script files to a PC or UNIX system and edit them. Then, you can download the edited files to the system and apply the new configuration. You can apply configuration scripts to one or more switches with no or minor modifications.

Use the `show running-config` command (see “show running-config” on page 167”) to capture the running configuration into a script. Use the `copy` command (see “copy” on page 193”) to transfer the configuration script to or from the switch.

Use the `show` command to view the configuration stored in the startup-config, backup-config, or factory-defaults file (see “show” on page 169”).

You should use scripts on systems with default configuration; however, you are not prevented from applying scripts on systems with non-default configurations.

Scripts must conform to the following rules:

- The file extension must be “.scr”.
- A maximum of ten scripts are allowed on the switch.
- The combined size of all script files on the switch shall not exceed 2048 KB.
- The maximum number of configuration file command lines is 2000.

You can type single-line annotations at the command prompt to use when you write test or configuration scripts to improve script readability. The exclamation point (!) character flags the beginning of a comment. The comment flag character can begin a word anywhere on the command line, and all input following this character is ignored. Any command line that begins with the “!” character is recognized as a comment line and ignored by the parser.

The following lines show an example of a script:

```
! Script file for displaying management access

show telnet !Displays the information about remote connections

! Display information about direct connections

show serial

! End of the script file!
```



Note...

To specify a blank password for a user in the configuration script, you must specify it as a space within quotes. For example, to change the password for user jane from a blank password to hello, the script entry is as follows:

```
users passwd jane
" "
hello
hello
```

2.12.1 script apply

This command applies the commands in the script to the switch. The *scriptname* parameter is the name of the script to apply.

Format `script apply scriptname`

Mode Privileged EXEC

2.12.2 script delete

This command deletes a specified script where the *scriptname* parameter is the name of the script to delete. The *all* option deletes all the scripts present on the switch.

Format `script delete {scriptname | all}`

Mode Privileged EXEC

2.12.3 script list

This command lists all scripts present on the switch as well as the remaining available space.

Format script list
Mode Privileged EXEC

Term	Definition
Configuration Script	Name of the script.
Size	Privileged EXEC

2.12.4 script show

This command displays the contents of a script file, which is named *scriptname*.

Format script show *scriptname*
Mode Privileged EXEC

Term	Definition
Output Format	line number: line contents

2.12.5 script validate

This command validates a script file by parsing each line in the script file where *scriptname* is the name of the script to validate. The validate option is intended to be used as a tool for script development. Validation identifies potential problems. It might not identify all problems with a given script on any given device.

Format script validate *scriptname*
Mode Privileged EXEC

2.13 Prelogin Banner, System Prompt, and Host Name Commands

This section describes the commands you use to configure the prelogin banner and the system prompt. The prelogin banner is the text that displays before you login at the User: prompt.

2.13.1 copy (pre-login banner)

The copy command includes the option to upload or download the CLI Banner to or from the switch. You can specify local URLs by using FTP, TFTP, SFTP, SCP, or Xmodem.

**Note...**

The parameter *ip6address* is also a valid parameter for routing packages that support IPv6.

Default	none
Format	copy <tftp://<ipaddr>/<filepath>/<filename>> nvram:clibanner
	copy nvram:clibanner <tftp://<ipaddr>/<filepath>/<filename>>
Mode	Privileged EXEC

2.13.2 set prompt

This command changes the name of the prompt. The length of name may be up to 64 alphanumeric characters.

Format	set prompt <i>prompt_string</i>
Mode	Privileged EXEC

2.13.3 hostname

This command sets the system hostname. It also changes the prompt. The length of name may be up to 64 alphanumeric, case-sensitive characters.

Format	hostname <i>hostname</i>
Mode	Privileged EXEC

2.13.4 show clibanner

Use this command to display the configured prelogin CLI banner. The prelogin banner is the text that displays before displaying the CLI prompt.

Default	No contents to display before displaying the login prompt.
Format	show clibanner
Mode	Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Routing) #show clibanner
```

```
Banner Message configured :
=====
```

```
-----
TEST
-----
```

2.13.5 set clibanner

Use this command to configure the prelogin CLI banner before displaying the login prompt.

Format	set clibanner <i>line</i>
Mode	Global Config

Parameter	Description
line	Banner text where "" (double quote) is a delimiting character. The banner message can be up to 2000 characters.

2.13.5.1 no set clibanner

Use this command to unconfigure the prelogin CLI banner.

Format no set clibanner

Mode Global Config

3 Utility Commands

This chapter describes the utility commands available in the FASTPATH CLI.

The Utility Commands chapter includes the following sections:

- "AutoInstall Commands" on page 144 "
- "CLI Output Filtering Commands" on page 148 "
- "Dual Image Commands" on page 150 "
- "System Information and Statistics Commands" on page 150 "
- "Logging Commands" on page 174 "
- "Email Alerting and Mail Server Commands" on page 181 "
- "System Utility and Clear Commands" on page 186 "
- "SFP handling Commands" on page 199 "
- "Commands to configure startup services" on page 202 "
- "Simple Network Time Protocol Commands" on page 203 "
- "Time Zone Commands" on page 208 "
- "DHCP Server Commands" on page 211 "
- "DNS Client Commands" on page 223 "
- "IP Address Conflict Commands" on page 227 "
- "Serviceability Packet Tracing Commands" on page 228 "
- "BCM Shell Command" on page 271 "
- "Cable Test Command" on page 271 "
- "sFlow Commands" on page 272 "
- "Switch Database Management Template Commands" on page 281 "
- "Remote Monitoring Commands" on page 284 "
- "Statistics Application Commands" on page 296 "



Note...

The commands in this chapter are in one of four functional groups:

- Show commands display switch settings, statistics, and other information.
 - Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
 - Copy commands transfer or save configuration and informational files to and from the switch.
 - Clear commands clear some or all of the settings to factory defaults.
-

3.1 AutoInstall Commands

The AutoInstall feature enables the automatic update of the image and configuration of the switch. This feature enables touchless or low-touch provisioning to simplify switch configuration and imaging.

AutoInstall includes the following support:

- Downloading an image from TFTP server using DHCP option 125. The image update can result in a downgrade or upgrade of the firmware on the switch.
- Automatically downloading a configuration file from a TFTP server when the switch is booted with no saved configuration file.
- Automatically downloading an image from a TFTP server in the following situations:
 - When the switch is booted with no saved configuration found.
 - When the switch is booted with a saved configuration that has AutoInstall enabled.

When the switch boots and no configuration file is found, it attempts to obtain an IP address from a network DHCP server. The response from the DHCP server includes the IP address of the TFTP server where the image and configuration files are located.

After acquiring an IP address and the additional relevant information from the DHCP server, the switch downloads the image file or configuration file from the TFTP server. A downloaded image is automatically installed. A downloaded configuration file is saved to non-volatile memory.



Note...

AutoInstall from a TFTP server can run on any IP interface, including the network port, service port, and in-band routing interfaces (if supported). To support AutoInstall, the DHCP client is enabled operationally on the service port, if it exists, or the network port, if there is no service port.

3.1.1 boot autoinstall

Use this command to operationally start or stop the AutoInstall process on the switch. The command is non-persistent and is not saved in the startup or running configuration file.

Default	stopped
Format	boot autoinstall {start stop}
Mode	Privileged EXEC

3.1.2 boot host retrycount

Use this command to set the number of attempts to download a configuration file from the TFTP server.

Default	3
Format	boot host retrycount 1-3
Mode	Privileged EXEC

3.1.2.1 no boot host retrycount

Use this command to set the number of attempts to download a configuration file to the default value.

Format no boot host retrycount
Mode Privileged EXEC

3.1.3 boot host dhcp

Use this command to enable AutoInstall on the switch for the next reboot cycle. The command does not change the current behavior of AutoInstall and saves the command to NVRAM.

Default enabled
Format boot host dhcp
Mode Privileged EXEC

3.1.3.1 no boot host dhcp

Use this command to disable AutoInstall for the next reboot cycle.

Format no boot host dhcp
Mode Privileged EXEC

3.1.4 boot host autosave

Use this command to automatically save the downloaded configuration file to the startup-config file on the switch. When autosave is disabled, you must explicitly save the downloaded configuration to non-volatile memory by using the `write memory` or `copy system:running-config nvram:startup-config` command. If the switch reboots and the downloaded configuration has not been saved, the AutoInstall process begins, if the feature is enabled.

Default disabled
Format boot host autosave
Mode Privileged EXEC

3.1.4.1 no boot host autosave

Use this command to disable automatically saving the downloaded configuration on the switch.

Format no boot host autosave
Mode Privileged EXEC

3.1.5 boot host autoreboot

Use this command to allow the switch to automatically reboot after successfully downloading an image. When auto reboot is enabled, no administrative action is required to activate the image and reload the switch.

Default enabled
Format boot host autoreboot
Mode Privileged EXEC

3.1.5.1 no boot host autoreboot

Use this command to prevent the switch from automatically rebooting after the image is downloaded by using the AutoInstall feature.

Format no boot host autoreboot

Mode Privileged EXEC

3.1.6 erase startup-config

Use this command to erase the text-based configuration file stored in non-volatile memory. If the switch boots and no startup-config file is found, the AutoInstall process automatically begins.

Format erase startup-config

Mode Privileged EXEC

3.1.7 erase factory-defaults

Use this command to erase the text-based factory-defaults file stored in non-volatile memory.

Default Disable

Format erase factory-defaults

Mode Privileged EXEC

3.1.8 show autoinstall

This command displays the current status of the AutoInstall process.

Format show autoinstall

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.
(switch) #show autoinstall

```
AutoInstall Mode..... Stopped
AutoInstall Persistent Mode..... Disabled
AutoSave Mode..... Disabled
AutoReboot Mode..... Enabled
AutoInstall Retry Count..... 3
```

3.1.9 boot autoinstall file

This command allows selection of an arbitrary configuration file at system startup time based on system specific addresses.

When executed during early system startup, the startup code will look for a boot autoinstall file command with a system-address and slot-address specification matching the current values.

Entries without slot-address qualifier will match any slot-address, entries without system-address will match any system address. The entry without qualifier is the configuration used as a default configuration.

Entries with more qualifiers take precedence. So it is possible to define default and/or fall back configurations.

Once a matching configuration file is identified, its content is compared to the current startup-config that is being applied. If they are identical, startup will proceed normally. If they differ, the configured file will be copied and replace the currently executing startup-config file and FASTPATH will be restarted, equivalent to a reload fast command being executed.



Note...

If using this feature, the configured file will be copied over the current startup file. Modifications saved (e.g. with 'write memory') will be written to the current startup file which will be overwritten by the next reboot! To save modifications in the configured file use e.g. *show running-config nvram:file <configfile>*.

For CompactPCI, the system-address is equivalent to the SGA, and slot-address is equivalent to the GA.

Format boot autoinstall file <filename> <ga-addr> <number>
 boot autoinstall file <filename> <sga-addr> <number>
 boot autoinstall file <filename> <sga-addr> <number> <ga-addr> <number>

Mode Privileged EXEC

3.1.9.1 no boot autoinstall file

This command disables the selection of an arbitrary configuration file at system startup time based on system specific addresses.

Format no boot autoinstall file <filename> <ga-addr> <number>
 no boot autoinstall file <filename> <sga-addr> <number>
 no boot autoinstall file <filename> <sga-addr> <number> <ga-addr> <number>

Mode Privileged EXEC

3.1.10 show autoinstall file

This commands lists all specified configuration file relationships and last/next selected configuration file name.

The specified configuration files are listed with the name and the related system and slot address (-1 means any).

Additionally the last selected configuration file name (used by the last reboot) and the next selected configuration file name are indicated. If the next selected configuration file name is not existing or not readable, a related warning is displayed. If no configuration file has been configured or none of the configuration files are matching (system-address/slot-address don't fit), "none/default" is indicated.

Format show autoinstall file

Mode Privileged EXEC, User EXEC

3.1.11 boot autoinstall file disable

Using this command, automatic configuration file selection configured with boot autoinstall file commands can be globally disabled. This is useful to temporarily disable selection of configuration files while retaining the boot autoinstall file commands in the running configuration.

Format boot autoinstall file disable

Mode Privileged EXEC

3.1.11.1 no boot autoinstall file disable

This command re-enables automatic configuration file selection configured with boot autoinstall files.

Format no boot autoinstall file disable

Mode Privileged EXEC

3.1.12 boot autoinstall dhcp startup-config

When network/DHCP based auto installation is activated using the boot autoinstall start command, the auto installer will fetch a script file based on server and boot file name option received in a DHCP response on either serviceport or network address. It will by default only execute the script received.

When this command is enabled, the logic will change.

A received configuration file will be compared to the permanent configuration stored in /mnt/fastpath/startup-config. If it is different, it will be copied to /mnt/fastpath/startup-config and the switch will be rebooted.

This command thus enables standard auto configuration via startup-config files received from a DHCP/TFTP server, similar to the boot autoinstall file features.

Format boot autoinstall dhcp startup-config

Mode Privileged EXEC

3.1.12.1 no boot autoinstall dhcp startup-config

This command disables auto configuration via startup-config files received from a DHCP/TFTP server.

Format no boot autoinstall dhcp startup-config

Mode Privileged EXEC

3.2 CLI Output Filtering Commands

3.2.1 show xxx|include "string"

The command **xxx** is executed and the output is filtered to only show lines containing the "**string**" match. All other non-matching lines in the output are suppressed.

Example: The following shows an example of the CLI command.

(Routing) #show running-config | include "spanning-tree"

```
spanning-tree configuration name "00-02-BC-42-F9-33"
spanning-tree bpduguard
spanning-tree bpdufilter default
spanning-tree forceversion 802.1w
```

3.2.2 show xxx|include "string" exclude "string2"

The command **xxx** is executed and the output is filtered to only show lines containing the "**string**" match and not containing the "**string2**" match. All other non-matching lines in the output are suppressed. If a line of output contains both the include and exclude strings then the line is not displayed.

Example: The following shows example of the CLI command.

(Routing) #show running-config | include "spanning-tree" exclude "configuration"

```
spanning-tree bpduguard
spanning-tree bpdufilter default
spanning-tree forceversion 802.1w
```

3.2.3 show xxx|exclude "string"

The command **xxx** is executed and the output is filtered to show all lines not containing the "**string**" match. Output lines containing the "**string**" match are suppressed.

Example: The following shows an example of the CLI command.

```
(Routing) #show interface 0/1
```

```
Packets Received Without Error..... 0
Packets Received With Error..... 0
Broadcast Packets Received..... 0
Receive Packets Discarded..... 0
Packets Transmitted Without Errors..... 0
Transmit Packets Discarded..... 0
Transmit Packet Errors..... 0
Collision Frames..... 0
Time Since Counters Last Cleared..... 281 day 4 hr 9 min 0 sec
```

```
(Routing) #show interface 0/1 | exclude "Packets"
```

```
Transmit Packet Errors..... 0
Collision Frames..... 0
Time Since Counters Last Cleared..... 20 day 21 hr 30 min 9 sec
```

3.2.4 show xxx|begin "string"

The command **xxx** is executed and the output is filtered to show all lines beginning with and following the first line containing the "**string**" match. All prior lines are suppressed.

Example: The following shows an example of the CLI command.

```
(Routing) #show port all | begin "1/1"
```

1/1	Enable	Down	Disable	N/A	N/A
1/2	Enable	Down	Disable	N/A	N/A
1/3	Enable	Down	Disable	N/A	N/A
1/4	Enable	Down	Disable	N/A	N/A
1/5	Enable	Down	Disable	N/A	N/A
1/6	Enable	Down	Disable	N/A	N/A

```
(Routing) #
```

3.2.5 show xxx|section "string"

The command **xxx** is executed and the output is filtered to show only lines included within the section(s) identified by lines containing the "**string**" match and ending with the first line containing the default end-of-section identifier (i.e. "exit").

Example: The following shows an example of the CLI command.

```
(Routing) #show running-config | section "interface 0/1"
```

```
interface 0/1
no spanning-tree port mode
exit
```

3.2.6 show *xxx*|section "*string*" "*string2*"

The command ***xxx*** is executed and the output is filtered to only show lines included within the section(s) identified by lines containing the "***string***" match and ending with the first line containing the "***string2***" match. If multiple sessions matching the specified string match criteria are part of the base output, then all instances are displayed.

3.2.7 show *xxx*|section "*string*" include "*string2*"

The command ***xxx*** is executed and the output is filtered to only show lines included within the section(s) identified by lines containing the "***string***" match and ending with the first line containing the default end-of-section identifier (i.e. "exit") and that include the "***string2***" match. This type of filter command could also include "exclude" or user-defined end-of-section identifier parameters as well.

3.3 Dual Image Commands

FASTPATH software supports a dual image feature that allows the switch to have two software images in the permanent storage. You can specify which image is the active image to be loaded in subsequent reboots. This feature allows reduced down-time when you upgrade or downgrade the software.

3.3.1 delete

This command deletes the backup image file from the permanent storage or the core dump file from the local file system.

Format delete backup
 delete core-dump-file *file-name* | all

Mode Privileged EXEC

3.3.2 boot system

This command activates the specified image. It will be the active-image for subsequent reboots and will be loaded by the boot loader. The current active-image is marked as the backup-image for subsequent reboots. If the specified image doesn't exist on the system, this command returns an error message.

Format boot system {active | backup}

Mode Privileged EXEC

3.3.3 show bootvar

This command displays the version information and the activation status for the current active and backup images. The command also displays any text description associated with an image. This command displays the switch activation status.

Format show bootvar

Mode Privileged EXEC

3.4 System Information and Statistics Commands

This section describes the commands you use to view information about system features, components, and configurations.

3.4.1 show arp switch

This command displays the contents of the IP stack's Address Resolution Protocol (ARP) table. The IP stack only learns ARP entries associated with the management interfaces - network or service ports. ARP entries associated with routing interfaces are not listed.

Format show arp switch

Mode Privileged EXEC

Term	Definition
IP Address	IP address of the management interface or another device on the management network.
MAC Address	Hardware MAC address of that device.
Interface	For a service port the output is <i>Management</i> . For a network port, the output is the <i>slot/port</i> of the physical interface.

3.4.2 show eventlog

This command displays the event log, which contains error messages from the system. The event log is not cleared on a system reset.

Format show eventlog

Mode Privileged EXEC

Term	Definition
File	The file in which the event originated.
Line	The line number of the event.
Task Id	The task ID of the event.
Code	The event code.
Time	The time this event occurred.

**Note...**

Event log information is retained across a switch reset.

3.4.3 show hardware

This command displays inventory information for the switch.

**Note...**

The `show version` command and the `show hardware` command display the same information. In future releases of the software, the `show hardware` command will not be available. For a description of the command output, see the command "show version" on page 152".

Format show hardware

Mode Privileged EXEC

3.4.4 show version

This command displays inventory information for the switch.

**Note...**

The `show version` command will replace the `show hardware` command in future releases of the software.

Format `show version`

Mode Privileged EXEC

Term	Definition
System Description	Text used to identify the product name of this switch.
Machine Type	The machine model as defined by the Vital Product Data.
Machine Model	The machine model as defined by the Vital Product Data
Serial Number	The unique box serial number for this switch.
FRU Number	The field replaceable unit number.
Part Number	Manufacturing part number.
Maintenance Level	Hardware changes that are significant to software.
Manufacturer	Manufacturer descriptor field.
Burned in MAC Address	Universally assigned network address.
Software Version	The release.version.revision number of the code currently running on the switch.
Operating System	The operating system currently running on the switch.
Network Processing Device	The type of the processor microcode.
Additional Packages	The additional packages incorporated into this system.

3.4.5 show platform vpd

This command displays vital product data for the switch.

Format `show platform vpd`

Mode User Privileged

The following information is displayed.

Term	Definition
Operational Code Image File Name	Build Signature loaded into the switch
Software Version	Release Version Maintenance Level and Build (RVMB) information of the switch.
Timestamp	Timestamp at which the image is built

Example: The following shows example CLI display output for the command.

(Routing) #show platform vpd

```
Operational Code Image File Name..... FastPath-Ent-esw-xgs4-gto-BL20R-CS-6AIQHSr3v7m14b35
Software Version..... 3.7.14.35
Timestamp..... Thu Mar 7 14:36:14 IST 2013
```

3.4.6 show interface

This command displays a summary of statistics for a specific interface or a count of all CPU traffic based upon the argument.

Format show interface {slot/port | switchport}

Mode Privileged EXEC

The display parameters, when the argument is *slot/port*, are as follows:

Parameters	Definition
Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received by the processor.
Packets Received With Error	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Receive Packets Discarded	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffered space.
Packets Transmitted Without Error	The total number of packets transmitted out of the interface.
Transmit Packets Discarded	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.
Transmit Packets Errors	The number of outbound packets that could not be transmitted because of errors.
Collisions Frames	The best estimate of the total number of collisions on this Ethernet segment.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this port were last cleared.

The display parameters, when the argument is "switchport" are as follows:

Term	Definition
Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received by the processor.
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Packets Received With Error	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Packets Transmitted Without Error	The total number of packets transmitted out of the interface.
Broadcast Packets Transmitted	The total number of packets that higher-level protocols requested to be transmitted to the Broadcast address, including those that were discarded or not sent.

Term	Definition
Transmit Packet Errors	The number of outbound packets that could not be transmitted because of errors.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this switch were last cleared.

3.4.7 show interfaces status

Use this command to display interface information, including the description, port state, speed and auto-neg capabilities. The command is similar to `show port all` but displays additional fields like interface description and port-capability.

The description of the interface is configurable through the existing command `description <name>` which has a maximum length of 64 characters that is truncated to 28 characters in the output. The long form of the description can be displayed using `show port description`. The interfaces displayed by this command are physical interfaces, LAG interfaces and VLAN routing interfaces.

Format `show interfaces status [<slot/port>]`

Mode Privileged EXEC

Field	Description
Port	The interface associated with the rest of the data in the row.
Name	The descriptive user-configured name for the interface.
Link State	Indicates whether the link is up or down.
Physical Mode	The speed and duplex settings on the interface.
Physical Status	Indicates the port speed and duplex mode for physical interfaces. The physical status for LAGs is not reported. When a port is down, the physical status is unknown.
Media Type	The media type of the interface.
Flow Control Status	The 802.3x flow control status.
Flow Control	The configured 802.3x flow control mode.

3.4.8 show interfaces traffic

Use this command to display interface traffic information.

Format `show interfaces traffic [slot/port]`

Mode Privileged EXEC

Field	Description
Interface Name	The interface associated with the rest of the data in the row.
Congestion Drops	The number of packets that have been dropped on the interface due to congestion.
TX Queue	The number of cells in the transmit queue.
RX Queue	The number of cells in the receive queue.
Color Drops: Yellow	The number of yellow (conformed) packets that were dropped.
Color Drops: Red	The number of red (exceeded) packets that were dropped.
WRED TX Queue	The number of packets in the WRED transmit queue.

3.4.9 show interface counters

This command reports key summary statistics for all the ports (physical/CPU/port-channel).

Format `show interface counters`

Mode Privileged EXEC

Term	Definition
Port	The interface associated with the rest of the data in the row.
InOctets	The total number of octets received on the interface.
InUcastPkts	The total number of unicast packets received on the interface.
InMcastPkts	The total number of multicast packets received on the interface.
InBcastPkts	The total number of broadcast packets received on the interface.
OutOctets	The total number of octets transmitted by the interface.
OutUcastPkts	The total number of unicast packets transmitted by the interface.
OutMcastPkts	The total number of multicast packets transmitted by the interface.
OutBcastPkts	The total number of broadcast packets transmitted by the interface.

Example: The following shows example CLI display output for the command.
(Routing) #show interface counters

Port	InOctets	InUcastPkts	InMcastPkts	InBcastPkts
-----	-----	-----	-----	-----
0/1	0	0	0	0
Port	InOctets	InUcastPkts	InMcastPkts	InBcastPkts
-----	-----	-----	-----	-----
0/1	0	0	0	0
0/2	0	0	0	0
0/3	15098	0	31	39
0/4	0	0	0	0
0/5	0	0	0	0
...				
...				
ch1	0	0	0	0
ch2	0	0	0	0
...				
ch64	0	0	0	0
CPU	359533	0	3044	217
Port	OutOctets	OutUcastPkts	OutMcastPkts	OutBcastPkts
-----	-----	-----	-----	-----
0/1	0	0	0	0
0/2	0	0	0	0
0/3	131369	0	11	89
0/4	0	0	0	0
0/5	0	0	0	0
...				
...				
ch1	0	0	0	0
ch2	0	0	0	0
...				
ch64	0	0	0	0
CPU	4025293	0	32910	120

3.4.10 show interface ethernet

This command displays detailed statistics for a specific interface or for all CPU traffic based upon the argument.

Format show interface ethernet {slot/port | switchport | all}

Mode Privileged EXEC

When you specify a value for slot/port, the command displays the following information.

Term	Definition
Packets Received	• Total Packets Received (Octets) - The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including Frame Check Sequence (FCS) octets). This object can be used as a reasonable estimate of Ethernet utilization. If greater precision is desired, the etherStatsPkts and etherStatsOctets objects should be sampled before and after a common interval. The result of this equation is the value Utilization which is the percent utilization of the Ethernet segment on a scale of 0 to 100 percent. • Packets Received 64 Octets - The total number of packets (including bad packets) received that were 64 octets in length (excluding framing bits but including FCS octets). • Packets Received 65–127 Octets - The total number of packets (including bad packets) received that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received 128–255 Octets - The total number of packets (including bad packets) received that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received 256–511 Octets - The total number of packets (including bad packets) received that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received 512–1023 Octets - The total number of packets (including bad packets) received that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received 1024–1518 Octets - The total number of packets (including bad packets) received that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received > 1518 Octets - The total number of packets received that were longer than 1522 octets (excluding framing bits, but including FCS octets) and were otherwise well formed. • Packets RX and TX 64 Octets - The total number of packets (including bad packets) received and transmitted that were 64 octets in length (excluding framing bits but including FCS octets). • Packets RX and TX 65–127 Octets - The total number of packets (including bad packets) received and transmitted that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 128–255 Octets - The total number of packets (including bad packets) received and transmitted that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 256–511 Octets - The total number of packets (including bad packets) received and transmitted that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).

Term	Definition
Packets Received (con't)	• Packets RX and TX 512–1023 Octets - The total number of packets (including bad packets) received and transmitted that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 1024–1518 Octets - The total number of packets (including bad packets) received and transmitted that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 1519–2047 Octets - The total number of packets received and transmitted that were between 1519 and 2047 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed. • Packets RX and TX 1523–2047 Octets - The total number of packets received and transmitted that were between 1523 and 2047 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed. • Packets RX and TX 2048–4095 Octets - The total number of packets received that were between 2048 and 4095 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed. • Packets RX and TX 4096–9216 Octets - The total number of packets received that were between 4096 and 9216 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed.
Packets Received Successfully	• Total Packets Received Without Error - The total number of packets received that were without errors. • Unicast Packets Received - The number of subnetwork-unicast packets delivered to a higher-layer protocol. • Multicast Packets Received - The total number of good packets received that were directed to a multicast address. Note that this number does not include packets directed to the broadcast address. • Broadcast Packets Received - The total number of good packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Receive Packets Discarded	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.
Packets Received with MAC Errors	• Total Packets Received with MAC Errors - The total number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. • Jabbers Received - The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Note that this definition of jabber is different than the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition where any packet exceeds 20 ms. The allowed range to detect jabber is between 20 ms and 150 ms. • Fragments/Undersize Received - The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets). • Alignment Errors - The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with a non-integral number of octets. • FCS Errors - The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with an integral number of octets. • Overruns - The total number of frames discarded as this port was overloaded with incoming packets, and could not keep up with the inflow.

Term	Definition
Received Packets Not Forwarded	• Total Received Packets Not Forwarded - A count of valid frames received which were discarded (in other words, filtered) by the forwarding process • 802.3x Pause Frames Received - A count of MAC Control frames received on this interface with an opcode indicating the PAUSE operation. This counter does not increment when the interface is operating in half-duplex mode. • Unacceptable Frame Type - The number of frames discarded from this port due to being an unacceptable frame type.
Packets Transmitted Octets	• Total Packets Transmitted (Octets) - The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets). This object can be used as a reasonable estimate of Ethernet utilization. If greater precision is desired, the etherStatsPkts and etherStatsOctets objects should be sampled before and after a common interval. ----- • Packets Transmitted 64 Octets - The total number of packets (including bad packets) received that were 64 octets in length (excluding framing bits but including FCS octets). • Packets Transmitted 65-127 Octets - The total number of packets (including bad packets) received that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Transmitted 128-255 Octets - The total number of packets (including bad packets) received that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Transmitted 256-511 Octets - The total number of packets (including bad packets) received that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Transmitted 512-1023 Octets - The total number of packets (including bad packets) received that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Transmitted 1024-1518 Octets - The total number of packets (including bad packets) received that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Transmitted > 1518 Octets - The total number of packets transmitted that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed. • Max Frame Size - The maximum size of the Info (non-MAC) field that this port will receive or transmit.
Packets Transmitted Successfully	• Total Packets Transmitted Successfully - The number of frames that have been transmitted by this port to its segment. • Unicast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent. • Multicast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to a Multicast address, including those that were discarded or not sent. • Broadcast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to the Broadcast address, including those that were discarded or not sent.
Transmit Packets Discarded	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.

Term	Definition
Transmit Errors	• Total Transmit Errors - The sum of Single, Multiple, and Excessive Collisions. • FCS Errors - The total number of packets transmitted that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with an integral number of octets. • Underrun Errors - The total number of frames discarded because the transmit FIFO buffer became empty during frame transmission.
Transmit Discards	• Total Transmit Packets Discards - The sum of single collision frames discarded, multiple collision frames discarded, and excessive frames discarded. • Single Collision Frames - A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision. • Multiple Collision Frames - A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision. • Excessive Collisions - A count of frames for which transmission on a particular interface fails due to excessive collisions. • Port Membership Discards - The number of frames discarded on egress for this port due to egress filtering being enabled.
Protocol Statistics	• 802.3x Pause Frames Transmitted - A count of MAC Control frames transmitted on this interface with an opcode indicating the PAUSE operation. This counter does not increment when the interface is operating in half-duplex mode. • GVRP PDUs Received - The count of GVRP PDUs received in the GARP layer. • GVRP PDUs Transmitted - The count of GVRP PDUs transmitted from the GARP layer. • GVRP Failed Registrations - The number of times attempted GVRP registrations could not be completed. • GMRP PDUs Received - The count of GMRP PDUs received in the GARP layer. • GMRP PDUs Transmitted - The count of GMRP PDUs transmitted from the GARP layer. • GMRP Failed Registrations - The number of times attempted GMRP registrations could not be completed. • STP BPDUs Transmitted - Spanning Tree Protocol Bridge Protocol Data Units sent. • STP BPDUs Received - Spanning Tree Protocol Bridge Protocol Data Units received. • RST BPDUs Transmitted - Rapid Spanning Tree Protocol Bridge Protocol Data Units sent. • RSTP BPDUs Received - Rapid Spanning Tree Protocol Bridge Protocol Data Units received. • MSTP BPDUs Transmitted - Multiple Spanning Tree Protocol Bridge Protocol Data Units sent. • MSTP BPDUs Received - Multiple Spanning Tree Protocol Bridge Protocol Data Units received.
Dot1x Statistics	• EAPOL Frames Transmitted - The number of EAPOL frames of any type that have been transmitted by this authenticator. • EAPOL Start Frames Received - The number of valid EAPOL start frames that have been received by this authenticator.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this port were last cleared.

If you use the `switchport` keyword, the following information appears.

Term	Definition
Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received by the processor.

Term	Definition
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Packets Received With Error	The total number of packets with errors (including broadcast packets and multicast packets) received by the processor.
Packets Transmitted without Errors	The total number of packets transmitted out of the interface.
Broadcast Packets Transmitted	The total number of packets that higher-level protocols requested be transmitted to the Broadcast address, including those that were discarded or not sent.
Transmit Packet Errors	The number of outbound packets that could not be transmitted because of errors.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds, since the statistics for this switch were last cleared.

If you use the `all` keyword, the following information appears for all interfaces on the switch.

Term	Definition
Port	The Interface ID.
Bytes Tx	The total number of bytes transmitted by the interface.
Bytes Rx	The total number of bytes transmitted by the interface.
Packets Tx	The total number of packets transmitted by the interface.
Packets Rx	The total number of packets transmitted by the interface.

3.4.11 `show interface ethernet switchport`

This command displays the private VLAN mapping information for the switch interfaces.

Format `show interface ethernet interface-id switchport`

Mode Privileged EXEC

Parameter	Description
interface-id	The <i>slot/port</i> of the switch.

The command displays the following information.

Term	Definition
Private-vlan host-association	The VLAN association for the private-VLAN host ports.
Private-vlan mapping	The VLAN mapping for the private-VLAN promiscuous ports.

3.4.12 `show interface lag`

Use this command to display configuration information about the specified LAG interface.

Format `show interface lag Lag-intf-num`

Mode Privileged EXEC

Parameters	Definition
Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received on the LAG interface
Packets Received With Error	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Receive Packets Discarded	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.
Packets Transmitted Without Error	The total number of packets transmitted out of the LAG.
Transmit Packets Discarded	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.
Transmit Packets Errors	The number of outbound packets that could not be transmitted because of errors.
Collisions Frames	The best estimate of the total number of collisions on this Ethernet segment.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this LAG were last cleared.

3.4.13 show fiber-ports optical-transceiver

This command displays the diagnostics information of the SFP like Temp, Voltage, Current, Input Power, Output Power, Tx Fault, and LOS. The values are derived from the SFP's A2 (Diagnostics) table using the I²C interface.

Format show fiber-ports optical-transceiver {all | slot/port}

Mode Privileged EXEC

Field	Description
Temp	Internally measured transceiver temperature.
Voltage	Internally measured supply voltage.
Current	Measured TX bias current.
Output Power	Measured optical output power relative to 1mW.
Input Power	Measured optical power received relative to 1mW.
TX Fault	Transmitter fault.
LOS	Loss of signal.

Example: The following information shows an example of the command output:
(Switch) #show fiber-ports optical-transceiver all

Port	Temp [C]	Voltage [Volt]	Current [mA]	Output Power [dBm]	Input Power [dBm]	TX Fault	LOS
-----	----	-----	-----	-----	-----	-----	---
0/49	39.3	3.256	5.0	-2.234	-2.465	No	No
0/50	33.9	3.260	5.3	-2.374	-40.000	No	Yes
0/51	32.2	3.256	5.6	-2.300	-2.897	No	No

3.4.14 show fiber-ports optical-transceiver-info

This command displays the SFP vendor related information like Vendor Name, Serial Number of the SFP, Part Number of the SFP. The values are derived from the SFP's A0 table using the I²C interface.

Format show fiber-ports optical-transceiver-info {all | slot/port}

Mode Privileged EXEC

Field	Description
Vendor Name	The vendor name is a 16 character field that contains ASCII characters, left-aligned and padded on the right with ASCII spaces (20h). The vendor name shall be the full name of the corporation, a commonly accepted abbreviation of the name of the corporation, the SCSI company code for the corporation, or the stock exchange code for the corporation.
Length (50um, OM2)	This value specifies link length that is supported by the transceiver while operating in compliance with applicable standards using 50 micron multimode OM2 [500MHz*km at 850nm] fiber. A value of zero means that the transceiver does not support 50 micron multimode fiber or that the length information must be determined from the transceiver technology.
Length (62.5um, OM1)	This value specifies link length that is supported by the transceiver while operating in compliance with applicable standards using 62.5 micron multimode OM1 [200 MHz*km at 850nm, 500 MHz*km at 1310nm] fiber. A value of zero means that the transceiver does not support 62.5 micron multimode fiber or that the length information must be determined from the transceiver technology
Vendor SN	The vendor serial number (vendor SN) is a 16 character field that contains ASCII characters, left-aligned and padded on the right with ASCII spaces (20h), defining the vendor's serial number for the transceiver. A value of all zero in the 16-byte field indicates that the vendor SN is unspecified.
Vendor PN	The vendor part number (vendor PN) is a 16-byte field that contains ASCII characters, left aligned and added on the right with ASCII spaces (20h), defining the vendor part number or product name. A value of all zero in the 16-byte field indicates that the vendor PN is unspecified.
BR, nominal	The nominal bit (signaling) rate (BR, nominal) is specified in units of 100 MBd, rounded off to the nearest 100 MBd. The bit rate includes those bits necessary to encode and delimit the signal as well as those bits carrying data information. A value of 0 indicates that the bit rate is not specified and must be determined from the transceiver technology. The actual information transfer rate will depend on the encoding of the data, as defined by the encoding value.
Vendor Rev	The vendor revision number (vendor rev) contains ASCII characters, left aligned and padded on the right with ASCII spaces (20h), defining the vendor's product revision number. A value of all zero in this field indicates that the vendor revision is unspecified.

Example: The following information shows an example of the command output:

(Switch) #show fiber-ports optical-transceiver-info all

Port	Vendor Name	Link Length		Serial Number	Part Number	Nominal Bit Rate	
		50um [m]	62.5um [m]			[Mbps]	Rev
0/49	BROADCOM	8	3	A7N2018414	AXM761	10300	10
0/51	BROADCOM	8	3	A7N2018472	AXM761	10300	10
0/52	BROADCOM	8	3	A7N2018501	AXM761	10300	10

3.4.15 show mac-addr-table

This command displays the forwarding database entries. These entries are used by the transparent bridging function to determine how to forward a received frame.

Enter `all` or `no` parameter to display the entire table. Enter a MAC Address and VLAN ID to display the table entry for the requested MAC address on the specified VLAN. Enter the `count` parameter to view summary information about the forwarding database table. Use the `interface slot/port` parameter to view MAC addresses on a specific interface.

Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number. Use the `vlan vlan_id` parameter to display information about MAC addresses on a specified VLAN.

Format `show mac-addr-table [{macaddr vlan_id | all | count | interface slot/port | vlan vlan_id}]`

Mode Privileged EXEC

The following information displays if you do not enter a parameter, the keyword `all`, or the MAC address and VLAN ID.

Term	Definition
VLAN ID	The VLAN in which the MAC address is learned.
MAC Address	A unicast MAC address for which the switch has forwarding and or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example <code>01:23:45:67:89:AB</code> .
Interface	The port through which this address was learned.
Interface Index	This object indicates the ifIndex of the interface table entry associated with this port.
Status	The status of this entry. The meanings of the values are: • <i>Static</i>—The value of the corresponding instance was added by the system or a user when a static MAC filter was defined. It cannot be relearned. • <i>Learned</i>—The value of the corresponding instance was learned by observing the source MAC addresses of incoming traffic, and is currently in use. • <i>Management</i>—The value of the corresponding instance (system MAC address) is also the value of an existing instance of <code>dot1dStaticAddress</code>. It is identified with interface <code>0/1</code>. and is currently used when enabling VLANs for routing. • <i>Self</i>—The value of the corresponding instance is the address of one of the switch's physical interfaces (the system's own MAC address). • <i>GMRP Learned</i>—The value of the corresponding was learned via GMRP and applies to Multicast. • <i>Other</i>—The value of the corresponding instance does not fall into one of the other categories.

If you enter `vlan vlan_id`, only the MAC Address, Interface, and Status fields appear. If you enter the `interface slot/port` parameter, in addition to the MAC Address and Status fields, the VLAN ID field also appears.

The following information displays if you enter the `count` parameter:

Term	Definition
Dynamic Address count	Number of MAC addresses in the forwarding database that were automatically learned.
Static Address (User-defined) count	Number of MAC addresses in the forwarding database that were manually entered by a user.

Term	Definition
Total MAC Addresses in use	Number of MAC addresses currently in the forwarding database.
Total MAC Addresses available	Number of MAC addresses the forwarding database can handle.

3.4.16 process cpu threshold

Use this command to configure the CPU utilization thresholds. The Rising and Falling thresholds are specified as a percentage of CPU resources. The utilization monitoring time period can be configured from 5 seconds to 86400 seconds in multiples of 5 seconds. The CPU utilization threshold configuration is saved across a switch reboot. Configuring the falling utilization threshold is optional. If the falling CPU utilization parameters are not configured, then they take the same value as the rising CPU utilization parameters.

Format process cpu threshold type total rising 1-100 interval

Mode Global Config

Parameter	Description
rising threshold	The percentage of CPU resources that, when exceeded for the configured rising interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
rising interval	The duration of the CPU rising threshold violation, in seconds, that must be met to trigger a notification. The range is 5 to 86400. The default is 0 (disabled).
falling threshold	The percentage of CPU resources that, when usage falls below this level for the configured interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled). A notification is triggered when the total CPU utilization falls below this level for a configured period of time. The falling utilization threshold notification is made only if a rising threshold notification was previously done. The falling utilization threshold must always be equal or less than the rising threshold value. The CLI does not allow setting the falling threshold to be greater than the rising threshold.
falling interval	The duration of the CPU falling threshold, in seconds, that must be met to trigger a notification. The range is 5 to 86400. The default is 0 (disabled).

3.4.17 show process app-list

This command displays the user and system applications.



Note...

This command is available in Linux 2.6 only.

Format show process app-list

Mode Privileged EXEC

Parameter	Description
ID	The application identifier.
Name	The name that identifies the process.
PID	The number the software uses to identify the process.
Admin Status	The administrative status of the process.
Auto Restart	Indicates whether the process will automatically restart if it stops.

Parameter	Description
Running Status	Indicates whether the process is currently running or stopped.

Example: The following shows example CLI display output for the command.

ID	Name	PID	Admin Status	Auto Restart	Running Status
1	dataplane	15309	Enabled	Disabled	Running
2	switchdrvr	15310	Enabled	Disabled	Running
3	syncdb	15314	Enabled	Disabled	Running
4	lighttpd	18718	Enabled	Enabled	Running
5	syncdb-test	0	Disabled	Disabled	Stopped
6	proctest	0	Disabled	Enabled	Stopped
7	user.start	0	Enabled	Disabled	Stopped

3.4.18 show process app-resource-list

This command displays the configured and in-use resources of each application.



Note...

This command is available in Linux 2.6 only.

Format show process app-resource-list

Mode Privileged EXEC

Parameter	Description
ID	The application identifier.
Name	The name that identifies the process.
PID	The number the software uses to identify the process.
Memory Limit	The maximum amount of memory the process can consume.
CPU Share	The maximum percentage of CPU utilization the process can consume.
Memory Usage	The amount of memory the process is currently using.
Max Mem Usage	The maximum amount of memory the process has used at any given time since it started.

(Routing) #show process app-resource-list

ID	Name	PID	Memory Limit	CPU Share	Memory Usage	Max Mem Usage
1	switchdrvr	251	Unlimited	Unlimited	380 MB	381 MB
2	syncdb	252	Unlimited	Unlimited	0 MB	0 MB
3	syncdb-test	0	Unlimited	Unlimited	0 MB	0 MB
4	proctest	0	10 MB	20%	0 MB	0 MB
5	utelnstd	0	Unlimited	Unlimited	0 MB	0 MB
6	lxshTelnetd	0	Unlimited	Unlimited	0 MB	0 MB
7	user.start	0	Unlimited	Unlimited	0 MB	0 MB

3.4.19 show process cpu

This command provides the percentage utilization of the CPU by different tasks.

**Note...**

It is not necessarily the traffic to the CPU, but different tasks that keep the CPU busy.

**Note...**

This command is available in Linux 2.6 only.

Format show process cpu [1-n | all]

Mode Privileged EXEC

Keyword	Description
Free	System wide free memory
Alloc	System wide allocated memory (excluding cache, file system used space)
Pid	Process or Thread Id
Name	Process or Thread Name
5Secs	CPU utilization sampling in 5Secs interval
60Secs	CPU utilization sampling in 60Secs interval
300Secs	CPU utilization sampling in 300Secs interval
Total CPU Utilization	Total CPU utilization % within the specified window of 5Secs, 60Secs and 300Secs.

Example: The following shows example CLI display output for the command using Linux.

```
(Routing) #show process cpu
```

```
Memory Utilization Report
```

```
status      bytes
```

```
-----
```

```
free    106450944
```

```
alloc   423227392
```

```
CPU Utilization:
```

PID	Name	5 Secs	60 Secs	300 Secs
765	_interrupt_thread	0.00%	0.01%	0.02%
767	bcmL2X.0	0.58%	0.35%	0.28%
768	bcmCNTR.0	0.77%	0.73%	0.72%
773	bcmRX	0.00%	0.04%	0.05%
786	cpuUtilMonitorTask	0.19%	0.23%	0.23%
834	dot1s_task	0.00%	0.01%	0.01%
810	hapiRxTask	0.00%	0.01%	0.01%
805	dtlTask	0.00%	0.02%	0.02%
863	spmTask	0.00%	0.01%	0.00%
894	ip6MapLocalDataTask	0.00%	0.01%	0.01%
908	RMONTask	0.00%	0.11%	0.12%
Total CPU Utilization		1.55%	1.58%	1.50%

3.4.20 show process proc-list

This application displays the processes started by applications created by the Process Manager.

**Note...**

This command is available in Linux 2.6 only.

Format show process proc-list

Mode Privileged EXEC

Parameter	Description
PID	The number the software uses to identify the process.
Process Name	The name that identifies the process.
Application ID-Name	The application identifier and its associated name.
Child	Indicates whether the process has spawned a child process.
VM Size	Virtual memory size.
VM Peak	The maximum amount of virtual memory the process has used at a given time.
FD Count	The file descriptors count for the process.

Example: The following shows example CLI display output for the command.
(Routing) #show process proc-list

PID	Process Name	Application ID-Name	Chld	VM Size (KB)	VM Peak (KB)	FD Count
15260	procmgr	0-procmgr	No	1984	1984	8
15309	dataplane	1-dataplane	No	293556	293560	11
15310	switchdrvr	2-switchdrvr	No	177220	177408	57
15314	syncdb	3-syncdb	No	2060	2080	8
18718	lighttpd	4-lighttpd	No	5508	5644	11
18720	lua_magnet	4-lighttpd	Yes	12112	12112	7
18721	lua_magnet	4-lighttpd	Yes	25704	25708	7

3.4.21 show running-config

Use this command to display or capture the current setting of different protocol packages supported on the switch. This command displays or captures commands with settings and configurations that differ from the default value. To display or capture the commands with settings and configurations that are equal to the default value, include the **all** option.

**Note...**

Show running-config does not display the User Password, even if you set one different from the default.

The output is displayed in script format, which can be used to configure another switch with the same configuration. If the optional *scriptname* is provided with a file name extension of ".scr", the output is redirected to a script file.

**Note...**

If you issue the `show running-config` command from a serial connection, access to the switch through remote connections (such as Telnet) is suspended while the output is being generated and displayed

**Note...**

If you use a text-based configuration file, the `show running-config` command only displays configured physical interfaces (i.e. if any interface only contains the default configuration, that interface will be skipped from the `show running-config` command output). This is true for any configuration mode that contains nothing but default configuration. That is, the command to enter a particular config mode, followed immediately by its exit command, are both omitted from the `show running-config` command output (and hence from the startup-config file when the system configuration is saved).

Use the following keys to navigate the command output.

Key	Action
Enter	Advance one line.
Space Bar	Advance one page.
q	Stop the output and return to the prompt.

Note that `--More--` or `(q)uit` is displayed at the bottom of the output screen until you reach the end of the output.

This command captures the current settings of OSPFv2 and OSPFv3 trapflag status:

- If all the flags are enabled, then the command displays `trapflags all`.
- If all the flags in a particular group are enabled, then the command displays `trapflags group name all`.
- If some, but not all, of the flags in that group are enabled, the command displays `trapflags groupname flag-name`.

Format `show running-config [all | scriptname]`

Mode Privileged EXEC

3.4.22 `show running-config interface`

Use this command to display the running configuration for a specific interface. Valid interfaces include physical, LAG, loopback, tunnel and VLAN interfaces.

Format `show running-config interface {interface | lag {lag-intf-num} | loopback {loopback-id} | tunnel {tunnel-id} | vlan {vlan-id}}`

Mode Privileged EXEC

Parameter	Description
interface	Running configuration for the specified interface.
lag-intf-num	Running configuration for the LAG interface.

Parameter	Description
loopback-id	Running configuration for the loopback interface.
tunnel-id	Running configuration for the tunnel interface.
vlan-id	Running configuration for the VLAN routing interface.

The following information is displayed for the command.

Parameter	Description
slot port	Enter an interface in slot/port format.
lag	Display the running config for a specified lag interface.
loopback	Display the running config for a specified loopback interface.
tunnel	Display the running config for a specified tunnel interface.
vlan	Display the running config for a specified vlan routing interface.

Example: The following shows example CLI display output for the command.

```
(Routing) #show running-config interface 0/1
!Current Configuration:
!
interface 0/1
addport 3/1
exit
(Routing) #
```

3.4.23 show

This command displays the content of text-based configuration files from the CLI. The text-based configuration files (startup-config, backup-config and factory-defaults) are saved compressed in flash. With this command, the files are decompressed while displaying their content.

Format show { startup-config | backup-config | factory-defaults }

Mode Privileged EXEC

Parameter	Description
startup-config	Display the content of the startup-config file.
backup-config	Display the content of the backup-config file.
factory-defaults	Display the content of the factory-defaults file.

Example: The following shows example CLI display output for the command using the startup-config parameter.

```
(Routing) #show startup-config
!Current Configuration:
!
!System Description "Quanta LB6M, 8.1.14.41, Linux 2.6.27.47, U-Boot 2009.06 (Apr 19 2011 -
15:57:06)"
!System Software Version "8.1.14.41"
!System Up Time "0 days 0 hrs 48 mins 19 secs"
!Cut-through mode is configured as disabled
!Additional Packages BGP-4,QOS,IPv6,IPv6 Management,Routing,Data Center
!Current SNTP Synchronized Time: Not Synchronized
!
vlan database
vlan 10
exit
```

```

configure
ipv6 router ospf
exit
line console
exit
line telnet
exit
line ssh
exit
!
--More-- or (q)uit
interface 0/1
description 'intf1'
exit
router ospf
exit
exit

```

Example: The following shows example CLI display output for the command using the backup-config parameter.

```

(Routing) #show backup-config
!Current Configuration:
!
!System Description "Quanta LB6M, 8.1.14.41, Linux 2.6.27.47, U-Boot 2009.06 (Apr 19 2011 -
15:57:06)"
!System Software Version "8.1.14.41"
!System Up Time          "0 days 0 hrs 48 mins 19 secs"
!Cut-through mode is configured as disabled
!Additional Packages      BGP-4,QOS,IPv6,IPv6 Management,Routing,Data Center
!Current SNTP Synchronized Time: Not Synchronized
!
vlan database
vlan 10
exit
configure
ipv6 router ospf
exit
line console
exit
line telnet
exit
line ssh
exit
!
--More-- or (q)uit
interface 0/1
description 'intf1'
exit
router ospf
exit
exit

```

Example: The following shows example CLI display output for the command using the factory-defaults parameter.

```

(Routing) #show factory-defaults
!Current Configuration:
!
!System Description "Quanta LB6M, 8.1.14.41, Linux 2.6.27.47, U-Boot 2009.06 (Apr 19 2011 -
15:57:06)"
!System Software Version "8.1.14.41"
!System Up Time          "0 days 0 hrs 48 mins 19 secs"
!Cut-through mode is configured as disabled
!Additional Packages      BGP-4,QOS,IPv6,IPv6 Management,Routing,Data Center
!Current SNTP Synchronized Time: Not Synchronized
!

```

```

vlan database
vlan 10
exit
configure
ipv6 router ospf
exit
line console
exit
line telnet
exit
line ssh
exit
!
--More-- or (q)uit
interface 0/1
description 'intf1'
exit
router ospf
exit
exit

```

3.4.24 dir

Use this command to list the files in the directory /mnt/fastpath in flash from the CLI.

Format dir
Mode Privileged EXEC

(Routing) #dir

```

0 drwx          2048 May 09 2002 16:47:30 .
0 drwx          2048 May 09 2002 16:45:28 ..
0 -rwx          592 May 09 2002 14:50:24 slog2.txt
0 -rwx          72 May 09 2002 16:45:28 boot.dim
0 -rwx           0 May 09 2002 14:46:36 olog2.txt
0 -rwx      13376020 May 09 2002 14:49:10 image1
0 -rwx           0 Apr 06 2001 19:58:28 fsysize
0 -rwx      1776 May 09 2002 16:44:38 slog1.txt
0 -rwx         356 Jun 17 2001 10:43:18 crashdump.ct1
0 -rwx      1024 May 09 2002 16:45:44 sslt.rnd
0 -rwx     14328276 May 09 2002 16:01:06 image2
0 -rwx         148 May 09 2002 16:46:06 hpc_broad.cfg
0 -rwx           0 May 09 2002 14:51:28 olog1.txt
0 -rwx         517 Jul 23 2001 17:24:00 ssh_host_key
0 -rwx     69040 Jun 17 2001 10:43:04 log_error_crashdump
0 -rwx         891 Apr 08 2000 11:14:28 sslt_key1.pem
0 -rwx         887 Jul 23 2001 17:24:00 ssh_host_rsa_key
0 -rwx         668 Jul 23 2001 17:24:34 ssh_host_dsa_key
0 -rwx         156 Apr 26 2001 13:57:46 dh512.pem
0 -rwx         245 Apr 26 2001 13:57:46 dh1024.pem
0 -rwx           0 May 09 2002 16:45:30 slog0.txt

```

3.4.25 show sysinfo

This command displays switch information.

Format show sysinfo
Mode Privileged EXEC

Term	Definition
Switch Description	Text used to identify this switch.
System Name	Name used to identify the switch. The factory default is blank. To configure the system name, see "snmp-server" on page 105".
System Location	Text used to identify the location of the switch. The factory default is blank. To configure the system location, see "snmp-server" on page 105".
System Contact	Text used to identify a contact person for this switch. The factory default is blank. To configure the system location, see "snmp-server" on page 105".
System ObjectID	The base object ID for the switch's enterprise MIB.
System Up Time	The time in days, hours and minutes since the last switch reboot.
Current SNTP Synchronized Time	The system time acquired from a network SNTP server.
MIBs Supported	A list of MIBs supported by this agent.

3.4.26 show tech-support

Use the `show tech-support` command to display system and configuration information when you contact technical support. The output of the `show tech-support` command combines the output of the following commands and includes log history files from previous runs:

- `show version`
- `show sysinfo`
- `show port all`
- `show isdp neighbors`
- `show logging`
- `show event log`
- `show logging buffered`
- `show msg-queue`
- `show trap log`
- `show running-config`

Including the optional `ospf` parameter also displays OSPF information.

Format `show tech-support [ospf|ospfv3|bfd]`

Mode Privileged EXEC

3.4.27 length *value*

Use this command to set the pagination length to value number of lines for the sessions specified by configuring on different Line Config modes (telnet/ssh/console) and is persistent.

Example: `Length` command on Line Console mode applies for Serial Console session.

Default 24

Format `length value`

Mode Line Config

3.4.27.1 no length value

Use this command to set the pagination length to the default value number of lines.

Format no length *value*

Mode Line Config

3.4.28 terminal length

Use this command to set the pagination length to *value* number of lines for the current session. This command configuration takes an immediate effect on the current session and is nonpersistent.

Default 24 lines per page

Format terminal length *value*

Mode Privileged EXEC

3.4.28.1 no terminal length

Use this command to set the *value* to the length value configured on Line Config mode depending on the type of session.

Format no terminal length *value*

Mode Privileged EXEC

3.4.29 show terminal length

Use this command to display all the configured terminal length values.

Format show terminal length

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

(Routing) #show terminal length

Terminal Length:

For Current Session..... 24

For Serial Console..... 24

For Telnet Sessions..... 24

For SSH Sessions..... 24

3.4.30 memory free low-watermark processor

Use this command to get notifications when the CPU free memory falls below the configured threshold. A notification is generated when the free memory falls below the threshold. Another notification is generated once the available free memory rises to 10 percent above the specified threshold. To prevent generation of excessive notifications when the CPU free memory fluctuates around the configured threshold, only one Rising or Falling memory notification is generated over a period of 60 seconds. The threshold is specified in kilobytes. The CPU free memory threshold configuration is saved across a switch reboot.

Format memory free low-watermark processor *1-1034956*

Mode Global Config

Parameter	Description
low-watermark	When CPU free memory falls below this threshold, a notification message is triggered. The range is 1 to the maximum available memory on the switch. The default is 0 (disabled).

3.4.31 clear mac-addr-table

Use this command to dynamically clear learned entries from the forwarding database. Using the following options, the user can specify the set of dynamically-learned forwarding database entries to clear.

Default	No default value.
Format	<code>clear mac-addr-table {all vlan <i>vlanId</i> interface <i>unit/slot/port</i> <i>macAddr</i> [<i>macMask</i>]}</code>
Mode	Privileged EXEC

Parameter	Description
all	Clears dynamically learned forwarding database entries in the forwarding database table.
vlan <i>vlanId</i>	Clears dynamically learned forwarding database entries for this <i>vlanId</i> .
interface <i>unit/slot/port</i>	Clears forwarding database entries learnt on for the specified interface.
<i>macAddr</i> <i>macMask</i>	Clears dynamically learned forwarding database entries that match the range specified by MAC address and MAC mask. When MAC mask is not entered, only specified MAC is removed from the forwarding database table.

3.5 Logging Commands

This section describes the commands you use to configure system logging, and to view logs and the logging settings.

3.5.1 logging buffered

This command enables logging to an in-memory log.

Default	disabled; critical when enabled
Format	<code>logging buffered</code>
Mode	Global Config

3.5.1.1 no logging buffered

This command disables logging to in-memory log.

Format	<code>no logging buffered</code>
Mode	Global Config

3.5.2 logging buffered wrap

This command enables wrapping of in-memory logging when the log file reaches full capacity. Otherwise when the log file reaches full capacity, logging stops.

Default enabled
Format logging buffered wrap
Mode Privileged EXEC

3.5.2.1 no logging buffered wrap

This command disables wrapping of in-memory logging and configures logging to stop when the log file capacity is full.

Format no logging buffered wrap
Mode Privileged EXEC

3.5.3 logging cli-command

This command enables the CLI command logging feature, which enables the FASTPATH software to log all CLI commands issued on the system. The commands are stored in a persistent log. Use the `show logging persistent` command to display the stored history of CLI commands.

Default enabled
Format logging cli-command
Mode Global Config

3.5.3.1 no logging cli-command

This command disables the CLI command Logging feature.

Format no logging cli-command
Mode Global Config

3.5.4 logging console

This command enables logging to the console. You can specify the *severityLevel* value as either an integer from 0 to 7 or symbolically through one of the following keywords: emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), info (6), or debug (7).

Default disabled; critical when enabled
Format logging console [*severityLevel*]
Mode Global Config

3.5.4.1 no logging console

This command disables logging to the console.

Format no logging console
Mode Global Config

3.5.5 logging host

This command configures the logging host parameters. You can configure up to eight hosts.

Default	- port: 514 (for UDP) and 6514 (for TLS) - authentication mode: anonymous - certificate index: 0 - level: critical (2)
Format	<i>logging host {hostaddress/hostname} addresstype tls [anon/x509name] certificate-index {port severitylevel}</i>
Mode	Global Config

Parameter	Description
hostaddress host name	The IP address of the logging host.
address-type	Indicates the type of address being passed: DNS or IPv4.
tls	Enables TLS security for the host.
anon x509name	The type of authentication mode: anonymous or x509name.
certificate-index	The certificate number to be used for authentication. The valid range is 0–8. Index 0 is used to the default file.
port	A port number from 1 to 65535.
severitylevel	Specify this value as either an integer from 0 to 7, or symbolically through one of the following keywords: emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), info (6), or debug (7).

Example: The following shows examples of the command.

The following shows examples of the command.

```
(Routing) (Config)# logging host google.com dns 214
(Routing) (Config)# logging host 10.130.64.88 ipv4 214 6
(Routing) (Config)# logging host 5.5.5.5 ipv4 tls anon 6514 debug
(Routing) (Config)# logging host 5.5.5.5 ipv4 tls x509name 3 651
```

3.5.6 logging host reconfigure

This command enables logging host reconfiguration.

Format	<i>logging host reconfigure hostindex</i>
Mode	Global Config

Parameter	Description
hostindex	Enter the Logging Host Index for which to change the IP address.

3.5.7 logging host remove

This command disables logging to host. See “show logging hosts” on page 179" for a list of host indexes.

Format	<i>logging host remove hostindex</i>
Mode	Global Config

3.5.8 logging protocol

Use this command to configure the logging protocol version number as 0 or 1. RFC 3164 uses version 0 and RFC 5424 uses version 1.

Default The default is version 0 (RFC 3164).
Format logging protocol {0|1}
Mode Global Config

3.5.9 logging syslog

This command enables syslog logging.

Format logging syslog
Mode Global Config

3.5.9.1 no logging syslog

This command disables syslog logging.

Format no logging syslog
Mode Global Config

3.5.10 logging syslog port

This command enables syslog logging. The `portid` parameter is an integer with a range of 1-65535.

Default disabled
Format logging syslog port *portid*
Mode Global Config

3.5.10.1 no logging syslog port

This command disables syslog logging.

Format no logging syslog port
Mode Global Config

3.5.11 logging syslog source-interface

This command configures the syslog source-interface (source IP address) for syslog server configuration. The selected source-interface IP address is used for filling the IP header of management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch. If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address.

Format logging syslog source-interface {*slot/port*|{loopback *loopback-id*}|{vlan *vlan-id*}}
Mode Global Config

Parameter	Description
slot/port	VLAN or port-based routing interface.
loopback-id	Configures the loopback interface to use as the source IP address. The range of the loopback ID is 0 to 7.
tunnel-id	Configures the tunnel interface to use as the source IP address. The range of the tunnel ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

Example: The following shows examples of the command.

```
(config)#logging syslog source-interface loopback 0
(config)#logging syslog source-interface tunnel 0
(config)#logging syslog source-interface 0/4/1
(config)#logging syslog source-interface 0/1
```

3.5.11.1 no logging syslog source-interface

This command disables syslog logging.

Format no logging syslog

Mode Global Config

3.5.12 show logging

This command displays logging configuration information.

Format show logging

Mode Privileged EXEC

Term	Definition
Logging Client Local Port	Port on the collector/relay to which syslog messages are sent.
Logging Client Source Interface	Shows the configured syslog source-interface (source IP address).
CLI Command Logging	Shows whether CLI Command logging is enabled.
Logging Protocol	The logging protocol version number. 0: RFC 3164 1: RFC 5424
Console Logging	Shows whether console logging is enabled.
Console Logging Severity Filter	The minimum severity to log to the console log. Messages with an equal or lower numerical severity are logged.
Buffered Logging	Shows whether buffered logging is enabled.
Persistent Logging	Shows whether persistent logging is enabled.
Persistent Logging Severity Filter	The minimum severity at which the logging entries are retained after a system reboot.
Syslog Logging	Shows whether syslog logging is enabled.
Log Messages Received	Number of messages received by the log process. This includes messages that are dropped or ignored.
Log Messages Dropped	Number of messages that could not be processed due to error or lack of resources.

Term	Definition
Log Messages Relayed	Number of messages sent to the collector/relay.

Example: The following shows example CLI display output for the command.

(Routing) #show logging

```

Logging Client Local Port      : 514
Logging Client Source Interface : (not configured)
CLI Command Logging           : disabled
Logging Protocol               : 1
Console Logging                : enabled
Console Logging Severity Filter : error
Buffered Logging               : enabled
Persistent Logging             : disabled
Persistent Logging Severity Filter : alert

Syslog Logging                 : disabled

Log Messages Received          : 1010
Log Messages Dropped           : 0
Log Messages Relayed           : 0

```

3.5.13 show logging buffered

This command displays buffered logging (system startup and system operation logs).

Format show logging buffered

Mode Privileged EXEC

Term	Definition
Buffered (In-Memory) Logging	Shows whether the In-Memory log is enabled or disabled.
Buffered Logging Wrapping Behavior	The behavior of the In Memory log when faced with a log full situation.
Buffered Log Count	The count of valid entries in the buffered log.

3.5.14 show logging hosts

This command displays all configured logging hosts. Use the “|” character to display the output filter options.

Format show logging hosts

Mode Privileged EXEC

Term	Definition
Host Index	(Used for deleting hosts.)
IP Address / Hostname	IP address or hostname of the logging host.
Severity Level	The minimum severity to log to the specified address. The possible values are emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), info (6), or debug (7).

Term	Definition
Port	The server port number, which is the port on the local host from which syslog messages are sent.
Status	Status field provides the current status of snmp row status. (Active, Not in Service, Not Ready).
Mode	The type of security: UDP or TLS.
Auth	The type of authentication mode: anonymous or x509name.
Cert #	The certificate number to be used for authentication. The valid range is 0–8. Index 0 is used to the default file.

Example: The following shows example CLI display output for the command.

(Routing) #show logging hosts

Index	IP Address/Hostname	Severity	Port	Status	Mode
1	1.1.1.17	critical	514	Active	udp
2	10.130.191.90	debug	10514	Active	tls
3	5.5.5.5	debug	333	Active	tls

Auth Cert#

x509name 6

x509name 4

3.5.15 show logging persistent

Use the **show logging persistent** command to display persistent log entries. If `log-files` is specified, the system persistent log files are displayed.

Format show logging persistent [`log-files`]

Mode Privileged EXEC

Parameter	Description
Persistent Logging	If persistent logging is enabled or disabled.
Persistent Log Count	The number of persistent log entries.
Persistent Log Files	The list of persistent log files in the system. Only displayed if <code>log-files</code> is specified.

Example: The following shows example CLI display output for the command.

(FASTPATH Switching) #show logging persistent

Persistent Logging : disabled

Persistent Log Count : 0

(FASTPATH Switching) #show logging persistent log-files

Persistent Log Files:

slog0.txt

slog1.txt

slog2.txt

olog0.txt

olog1.txt

olog2.txt

3.5.16 show logging traplogs

This command displays SNMP trap events and statistics.

Format show logging traplogs

Mode Privileged EXEC

Term	Definition
Number of Traps Since Last Reset	The number of traps since the last boot.
Trap Log Capacity	The number of traps the system can retain.
Number of Traps Since Log Last Viewed	The number of new traps since the command was last executed.
Log	The log number.
System Time Up	How long the system had been running at the time the trap was sent.
Trap	The text of the trap message.

3.5.17 clear logging buffered

This command clears buffered logging (system startup and system operation logs).

Format clear logging buffered

Mode Privileged EXEC

3.6 Email Alerting and Mail Server Commands

3.6.1 logging email

This command enables email alerting and sets the lowest severity level for which log messages are emailed. If you specify a severity level, log messages at or above this severity level, but below the urgent severity level, are emailed in a non-urgent manner by collecting them together until the log time expires. You can specify the *severityLevel* value as either an integer from 0 to 7 or symbolically through one of the following keywords: emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), info (6), or debug (7).

Default disabled; when enabled, log messages at or above severity Warning (4) are emailed

Format logging email [*severityLevel*]

Mode Global Config

3.6.1.1 no logging email

This command disables email alerting.

Format no logging email

Mode Global Config

3.6.2 logging email urgent

This command sets the lowest severity level at which log messages are emailed immediately in a single email message. Specify the *severityLevel* value as either an integer from 0 to 7 or symbolically through one of the following keywords: *emergency* (0), *alert* (1), *critical* (2), *error* (3), *warning* (4), *notice* (5), *info* (6), or *debug* (7). Specify *none* to indicate that log messages are collected and sent in a batch email at a specified interval.

Default Alert (1) and emergency (0) messages are sent immediately.
Format logging email urgent {*severityLevel* | none}
Mode Global Config

3.6.2.1 no logging email urgent

This command resets the urgent severity level to the default value.

Format no logging email urgent
Mode Global Config

3.6.3 logging email message-type to-addr

This command configures the email address to which messages are sent. The message types supported are *urgent*, *non-urgent*, and *both*. For each supported severity level, multiple email addresses can be configured. The *to-email-addr* variable is a standard email address, for example *admin@yourcompany.com*.

Format logging email message-type {*urgent* | *non-urgent* | *both*} to-addr *to-email-addr*
Mode Global Config

3.6.3.1 no logging email message-type to-addr

This command removes the configured to-addr field of email.

Format no logging email message-type {*urgent* | *non-urgent* | *both*} to-addr *to-email-addr*
Mode Global Config

3.6.4 logging email from-addr

This command configures the email address of the sender (the switch).

Default switch@broadcom.com
Format logging email from-addr *from-email-addr*
Mode Global Config

3.6.4.1 no logging email from-addr

This command removes the configured email source address.

Format no logging email from-addr *from-email-addr*
Mode Global Config

3.6.5 logging email message-type subject

This command configures the subject line of the email for the specified type.

Default For urgent messages: Urgent Log Messages
For non-urgent messages: Non Urgent Log Messages

Format logging email message-type {urgent |non-urgent |both} subject *subject*

Mode Global Config

3.6.5.1 no logging email message-type subject

This command removes the configured email subject for the specified message type and restores it to the default email subject.

Format no logging email message-type {urgent |non-urgent |both} subject

Mode Global Config

3.6.6 logging email logtime

This command configures how frequently non-urgent email messages are sent. Non-urgent messages are collected and sent in a batch email at the specified interval. The valid range is every 30–1440 minutes.

Default 30 minutes

Format logging email logtime *minutes*

Mode Global Config

3.6.6.1 no logging email logtime

This command resets the non-urgent log time to the default value.

Format no logging email logtime

Mode Global Config

3.6.7 logging traps

This command sets the severity at which SNMP traps are logged and sent in an email. Specify the *severityLevel* value as either an integer from 0 to 7 or symbolically through one of the following keywords: emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), info (6), or debug (7).

Default Info (6) messages and higher are logged.

Format logging traps *severityLevel*

Mode Global Config

3.6.7.1 no logging traps

This command resets the SNMP trap logging severity level to the default value.

Format no logging traps

Mode Global Config

3.6.8 logging email test message-type

This command sends an email to the SMTP server to test the email alerting function.

Format logging email test message-type {urgent |non-urgent |both} message-body *message-body*
Mode Global Config

3.6.9 show logging email config

This command displays information about the email alert configuration.

Format show logging email config
Mode Privileged EXEC

Term	Definition
Email Alert Logging	The administrative status of the feature: enabled or disabled
Email Alert From Address	The email address of the sender (the switch).
Email Alert Urgent Severity Level	The lowest severity level that is considered urgent. Messages of this type are sent immediately.
Email Alert Non Urgent Severity Level	The lowest severity level that is considered non-urgent. Messages of this type, up to the urgent level, are collected and sent in a batch email. Log messages that are less severe are not sent in an email message at all.
Email Alert Trap Severity Level	The lowest severity level at which traps are logged.
Email Alert Notification Period	The amount of time to wait between non-urgent messages.
Email Alert To Address Table	The configured email recipients.
Email Alert Subject Table	The subject lines included in urgent (Type 1) and non-urgent (Type 2) messages.
For Msg Type urgent, subject is	The configured email subject for sending urgent messages.
For Msg Type non-urgent, subject is	The configured email subject for sending non-urgent messages.

3.6.10 show logging email statistics

This command displays email alerting statistics.

Format show logging email statistics
Mode Privileged EXEC

Term	Definition
Email Alert Operation Status	The operational status of the email alerting feature.
No of Email Failures	The number of email messages that have attempted to be sent but were unsuccessful.
No of Email Sent	The number of email messages that were sent from the switch since the counter was cleared.
Time Since Last Email Sent	The amount of time that has passed since the last email was sent from the switch.

3.6.11 clear logging email statistics

This command resets the email alerting statistics.

Format clear logging email statistics

Mode Privileged EXEC

3.6.12 mail-server

This command configures the SMTP server to which the switch sends email alert messages and changes the mode to Mail Server Configuration mode. The server address can be in the IPv4, IPv6, or DNS name format.

Format mail-server {*ip-address* | *ipv6-address* | *hostname*}

Mode Global Config

3.6.12.1 no mail-server

This command removes the specified SMTP server from the configuration.

Format no mail-server {*ip-address* | *ipv6-address* | *hostname*}

Mode Global Config

3.6.13 security

This command sets the email alerting security protocol by enabling the switch to use TLS authentication with the SMTP Server. If the TLS mode is enabled on the switch but the SMTP sever does not support TLS mode, no email is sent to the SMTP server.

Default none

Format security {*tlsv1* | *none*}

Mode Mail Server Config

3.6.14 port

This command configures the TCP port to use for communication with the SMTP server. The recommended port for TLSv1 is 465, and for no security (i.e. none) it is 25. However, any nonstandard port in the range 1 to 65535 is also allowed.

Default 25

Format port {*465* | *25* | *1-65535*}

Mode Mail Server Config

3.6.15 username (Mail Server Config)

This command configures the login ID the switch uses to authenticate with the SMTP server.

Default admin

Format username *name*

Mode Mail Server Config

3.6.16 password

This command configures the password the switch uses to authenticate with the SMTP server.

Default admin
Format password *password*
Mode Mail Server Config

3.6.17 show mail-server config

This command displays information about the email alert configuration.

Format show mail-server {*ip-address* | *hostname* | all} config
Mode Privileged EXEC

Term	Definition
No of mail servers configured	The number of SMTP servers configured on the switch.
Email Alert Mail Server Address	The IPv4/IPv6 address or DNS hostname of the configured SMTP server.
Email Alert Mail Server Port	The TCP port the switch uses to send email to the SMTP server
Email Alert Security Protocol	The security protocol (TLS or none) the switch uses to authenticate with the SMTP server.
Email Alert Username	The username the switch uses to authenticate with the SMTP server.
Email Alert Password	The password the switch uses to authenticate with the SMTP server.

3.7 System Utility and Clear Commands

This section describes the commands you use to help troubleshoot connectivity issues and to restore various configurations to their factory defaults.

3.7.1 traceroute

Use the `traceroute` command to discover the routes that IPv4 or IPv6 packets actually take when traveling to their destination through the network on a hop-by-hop basis. Traceroute continues to provide a synchronous response when initiated from the CLI.

The user may specify the source IP address or the virtual router of the traceroute probes. Recall that traceroute works by sending packets that are expected not to reach their final destination, but instead trigger ICMP error messages back to the source address from each hop along the forward path to the destination. By specifying the source address, the user can determine where along the forward path there is no route back to the source address. Note that this is only useful if the route from source to destination and destination to source is symmetric.) It would be common, for example, to send a traceroute from an edge router to a target higher in the network using a source address from a host subnet on the edge router. This would test reachability from within the network back to hosts attached to the edge router. Alternatively, one might send a traceroute with an address on a loopback interface as a source to test reachability back to the loopback interface address.

In the CLI, the user may specify the source as an IPv4 address, IPv6 address, a virtual router, or as a routing interface. When the source is specified as a routing interface, the traceroute is sent using the primary IPv4 address on the source interface. With SNMP, the source must be specified as an address. The source cannot be specified in the web UI.

FASTPATH will not accept an incoming packet, such as a traceroute response, that arrives on a routing interface if the packet's destination address is on one of the out-of-band management interfaces (service port or network port). Similarly, FASTPATH will not accept a packet that arrives on a management interface if the packet's destination is an address on a routing interface. Thus, it would be futile to send a traceroute on a management interface using a routing interface address as source, or to send a traceroute on a routing interface using a management interface as source. When sending a traceroute on a routing interface, the source must be that routing interface or another routing interface. When sending a traceroute on a management interface, the source must be on that management interface. For this reason, the user cannot specify the source as a management interface or management interface address. When sending a traceroute on a management interface, the user should not specify a source address, but instead let the system select the source address from the outgoing interface.

Default	• count: 3 probes • interval: 3 seconds • size: 0 bytes • port: 33434 • maxTtl: 30 hops • maxFail: 5 probes • initTtl: 1 hop
Format	<pre>traceroute {ip-address [ipv6] {ipv6-address hostname}} [initTtl initTtl] [maxTtl maxTtl] [maxFail maxFail] [interval interval] [count count] [port port] [size size] [source {ip-address ipv6-address slot/port}]</pre>
Mode	Privileged EXEC

Using the options described below, you can specify the initial and maximum time-to-live (TTL) in probe packets, the maximum number of failures before termination, the number of probes sent for each TTL, and the size of each probe.

Parameter	Description
ipaddress	The <i>ipaddress</i> value should be a valid IP address.
ipv6-address	The <i>ipv6-address</i> value should be a valid IPv6 address.
hostname	The <i>hostname</i> value should be a valid hostname.
ipv6	The optional <i>ipv6</i> keyword can be used before <i>ipv6-address</i> or <i>hostname</i> . Giving the <i>ipv6</i> keyword before the <i>hostname</i> tries it to resolve to an IPv6 address.
initTtl	Use <i>initTtl</i> to specify the initial time-to-live (TTL), the maximum number of router hops between the local and remote system. Range is 0 to 255.
maxTtl	Use <i>maxTtl</i> to specify the maximum TTL. Range is 1 to 255.
maxFail	Use <i>maxFail</i> to terminate the traceroute after failing to receive a response for this number of consecutive probes. Range is 0 to 255.
interval	Use the optional <i>interval</i> parameter to specify the time between probes, in seconds. If a response is not received within this interval, then traceroute considers that probe a failure (printing *) and sends the next probe. If traceroute does receive a response to a probe within this interval, then it sends the next probe immediately. Range is 1 to 60 seconds.
count	Use the optional <i>count</i> parameter to specify the number of probes to send for each TTL value. Range is 1 to 10 probes.
port	Use the optional <i>port</i> parameter to specify destination UDP port of the probe. This should be an unused port on the remote destination system. Range is 1 to 65535.
size	Use the optional <i>size</i> parameter to specify the size, in bytes, of the payload of the Echo Requests sent. Range is 0 to 65507 bytes.
source	Use the optional <i>source</i> parameter to specify the source IP address or interface for the traceroute.

The following are examples of the CLI command.

Example: traceroute Success:

```
(Routing) # traceroute 10.240.10.115 initTtl 1 maxTtl 4 maxFail 0 interval 1 count 3 port 33434 size 43
```

Traceroute to 10.240.10.115 ,4 hops max 43 byte packets:

```
1 10.240.4.1    708 msec    41 msec    11 msec
2 10.240.10.115  0 msec     0 msec     0 msec
```

Hop Count = 1 Last TTL = 2 Test attempt = 6 Test Success = 6

Example: traceroute ipv6 Success

```
(Routing) # traceroute 2001::2 initTtl 1 maxTtl 4 maxFail 0 interval 1 count 3 port 33434 size 43
```

Traceroute to 2001::2 hops max 43 byte packets:

```
1      2001::2    708 msec    41 msec    11 msec
```

The above command can also be execute with the optional ipv6 parameter as follows:

```
(Routing) # traceroute ipv6 2001::2 initTtl 1 maxTtl 4 maxFail 0 interval 1 count 3 port 33434 size 43
```

Example: traceroute Failure:

```
(Routing) # traceroute 10.40.1.1 initTtl 1 maxFail 0 interval 1 count 3 port 33434 size 43
```

Traceroute to 10.40.1.1 ,30 hops max 43 byte packets:

```
1 10.240.4.1    19 msec    18 msec    9 msec
2 10.240.1.252  0 msec     0 msec     1 msec
3 172.31.0.9    277 msec    276 msec    277 msec
4 10.254.1.1    289 msec    327 msec    282 msec
5 10.254.21.2   287 msec    293 msec    296 msec
6 192.168.76.2  290 msec    291 msec    289 msec
7 0.0.0.0       0 msec *
```

Hop Count = 6 Last TTL = 7 Test attempt = 19 Test Success = 18

Example: traceroute ipv6 Failure

```
(Routing)# traceroute 2001::2 initTtl 1 maxFail 0 interval 1 count 3 port 33434 size 43
```

Traceroute to 2001::2 hops max 43 byte packets:

```
1 3001::1    708 msec    41 msec    11 msec
2 4001::2    250 msec    200 msec    193 msec
3 5001::3    289 msec    313 msec    278 msec
4 6001::4    651 msec    41 msec     270 msec
5           0 msec *
```

Hop Count = 4 Last TTL = 5 Test attempt = 1 Test Success = 0

3.7.2 clear config

This command resets the configuration to the factory defaults without powering off the switch. When you issue this command, a prompt appears to confirm that the reset should proceed. When you enter y, you automatically reset the current configuration on the switch to the default values. It does not reset the switch.

Format clear config

Mode Privileged EXEC

3.7.3 clear counters

This command clears the statistics for a specified *slot/port*, for all the ports, or for an interface on a VLAN based on the argument, including the loop protection counters.

Format clear counters {*slot/port* | all | *vlan id*}

Mode Privileged EXEC

3.7.4 clear igmpsnooping

This command clears the tables managed by the IGMP Snooping function and attempts to delete these entries from the Multicast Forwarding Database.

Format clear igmpsnooping

Mode Privileged EXEC

3.7.5 clear ip access-list counters

This command clears the counters of the specified IP ACL and IP ACL rule.

Format clear ip access-list counters *acl-ID* | *acl-name rule-id*

Mode Privileged EXEC

3.7.6 clear ipv6 access-list counters

This command clears the counters of the specified IP ACL and IP ACL rule.

Format clear ipv6 access-list counters *acl-name rule-id*

Mode Privileged EXEC

3.7.7 clear mac access-list counters

This command clears the counters of the specified MAC ACL and MAC ACL rule.

Format clear mac access-list counters *acl-name rule-id*

Mode Privileged EXEC

3.7.8 clear pass

This command resets all user passwords to the factory defaults without powering off the switch. You are prompted to confirm that the password reset should proceed.

Format clear pass

Mode Privileged EXEC

3.7.9 clear traplog

This command clears the trap log.

Format clear traplog

Mode Privileged EXEC

3.7.10 clear vlan

This command resets VLAN configuration parameters to the factory defaults. When the VLAN configuration is reset to the factory defaults, there are some scenarios regarding GVRP that happen due to this:

1. Static VLANs are deleted.
2. GVRP is restored to the factory default as a result of handling the VLAN RESTORE NOTIFY event. Since GVRP is disabled by default, this means that GVRP should be disabled and all of its dynamic VLANs should be deleted.
3. MVRP is restored to the factory default as a result of handling the VLAN RESTORE NOTIFY event. Since MVRP is enabled by default, this means that any VLANs already created by MVRP are unaffected. However, for customer platforms where MVRP is disabled by default, then the MVRP behavior should match GVRP. That is, MVRP is disabled and the MVRP VLANs are deleted.

Format clear vlan

Mode Privileged EXEC

3.7.11 logout

This command closes the current telnet connection or resets the current serial connection.

**Note...**

Save configuration changes before logging out.

Format logout

Modes

- Privileged EXEC
- User EXEC

3.7.12 ping

Use this command to determine whether another computer is on the network. Ping provides a synchronous response when initiated from the CLI and Web interfaces.

**Note...**

For information about the ping command for IPv6 hosts, see "ping ipv6" on page 652".

Default	- The default count is 1. - The default interval is 3 seconds. - The default size is 0 bytes.
Format	ping {address hostname {ipv6 {interface {slot/port vlan 1-4093 loopback loopback-id network serviceport tunnel tunnel-id } link-local-address} ipv6-address hostname} [count count] [interval 1-60] [size size] [source ip-address ipv6-address {slot/port vlan 1-4093 serviceport network}]
Modes	- Privileged EXEC - User EXEC

Using the options described below, you can specify the number and size of Echo Requests and the interval between Echo Requests.

Parameter	Description
address	IPv4 or IPv6 addresses to ping.
count	Use the count parameter to specify the number of ping packets (ICMP Echo requests) that are sent to the destination address specified by the <i>ip-address</i> field. The range for <i>count</i> is 1 to 15 requests.
interval	Use the interval parameter to specify the time between Echo Requests, in seconds. Range is 1 to 60 second
size	Use the <i>size</i> parameter to specify the size, in bytes, of the payload of the Echo Requests sent. Range is 0 to 65507 bytes.
source	Use the <i>source</i> parameter to specify the source IP/IPv6 address or interface to use when sending the Echo requests packets.
hostname	Use the <i>hostname</i> parameter to resolve to an IPv4 or IPv6 address. The <i>ipv6</i> keyword is specified to resolve the hostname to IPv6 address. The IPv4 address is resolved if no keyword is specified.
ipv6	The optional keyword <i>ipv6</i> can be used before the <i>ipv6-address</i> or <i>hostname</i> argument. Using the <i>ipv6</i> optional keyword before <i>hostname</i> tries to resolve it directly to the IPv6 address. Also used for pinging a link-local IPv6 address.
interface	Use the <i>interface</i> keyword to ping a link-local IPv6 address over an interface.
link-local-address	The link-local IPv6 address to ping over an interface.

The following are examples of the CLI command.

Example: IPv4 ping success:

```
(FASTPATH Routing) #ping 10.254.2.160 count 3 interval 1 size 255
Pinging 10.254.2.160 with 255 bytes of data:
```

```
Received response for icmp_seq = 0. time = 275268 usec
Received response for icmp_seq = 1. time = 274009 usec
Received response for icmp_seq = 2. time = 279459 usec
```

```
---10.254.2.160 PING statistics---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (msec) min/avg/max = 274/279/276
```

Example: IPv6 ping success

```
(FASTPATH Routing) #ping 2001::1
Pinging 2001::1 with 64 bytes of data:
```

```
Send count=3, Receive count=3 from 2001::1
Average round trip time = 3.00 ms
```

Example: IPv4 ping failure:

In Case of Unreachable Destination:

```
(FASTPATH Routing) # ping 192.168.254.222 count 3 interval 1 size 255
Pinging 192.168.254.222 with 255 bytes of data:
Received Response: Unreachable Destination
Received Response :Unreachable Destination
Received Response :Unreachable Destination
----192.168.254.222 PING statistics----
3 packets transmitted,3 packets received, 0% packet loss
round-trip (msec) min/avg/max = 0/0
```

In Case Of Request TimedOut:

```
(FASTPATH Routing) # ping 1.1.1.1 count 1 interval 3
Pinging 1.1.1.1 with 0 bytes of data:

----1.1.1.1 PING statistics----
1 packets transmitted,0 packets received, 100% packet loss
round-trip (msec) min/avg/max = 0/0
```

Example: IPv6 ping failure

```
(FASTPATH Routing) #ping ipv6 2001::4
Pinging 2001::4 with 64 bytes of data:
```

```
Send count=3, Receive count=0 from 2001::4
Average round trip time = 0.00 ms
```

3.7.13 quit

This command closes the current telnet connection or resets the current serial connection. The system asks you whether to save configuration changes before quitting.

Format quit

Modes

- Privileged EXEC
- User EXEC

3.7.14 reload

This command resets the switch without powering it off. Reset means that all network connections are terminated and the boot code executes. The switch uses the stored configuration to initialize the switch. You are prompted to confirm that the reset should proceed. The LEDs on the switch indicate a successful reset.

Format reload [configuration [scriptname]]

Mode Privileged EXEC

Parameter	Description
configuration	Gracefully reloads the configuration. If no configuration file is specified, the startup-config file is loaded.
scriptname	The configuration file to load. The scriptname must include the extension.

3.7.15 `copy`

The `copy` command uploads and downloads files to and from the switch. You can also use the `copy` command to manage the dual images (active and backup) on the file system. Upload and download files from a server using FTP, TFTP, Xmodem, Ymodem, or Zmodem.

SFTP and SCP are available as additional transfer methods if the software package supports secure management.

If FTP is used, a password is required.

Format `copy source destination {verify | noverify}`
Mode Privileged EXEC

Replace the *source* and *destination* parameters with the options in Table 2 on page 194. For the *url* source or destination, use one of the following values:

```
{xmodem | tftp://ipaddr|hostname | ip6address|hostname/filepath/filename [noval] | sftp|scp://
username@ipaddr | ipv6address/filepath/filename | ftp://user@ipaddress | hostname/filepath/
filename}
```

verify | *noverify* is only available if the image/configuration verify options feature is enabled (see “file verify” on page 196). *verify* specifies that digital signature verification will be performed for the specified downloaded image or configuration file. *noverify* specifies that no verification will be performed.

The keyword **ias-users** supports the downloading of the IAS user database file. When the IAS users file is downloaded, the switch IAS user’s database is replaced with the users and its attributes available in the downloaded file. In the command **copy url ias-users**, for *url* one of the following is used for IAS users file:

```
{ { tftp://<ipaddr | hostname> | <ipv6address | hostname> /<filepath>/<filename> } | { sftp | scp://
<username>@<ipaddress>/<filepath>/<filename> } }
```

**Note...**

The maximum length for the file path is 160 characters, and the maximum length for the file name is 31 characters.

For FTP, TFTP, SFTP and SCP, the *ipaddr/hostname* parameter is the IP address or host name of the server, *filepath* is the path to the file, and *filename* is the name of the file you want to upload or download. For SFTP and SCP, the *username* parameter is the username for logging into the remote server via SSH.

**Note...**

ip6address is also a valid parameter for routing packages that support IPv6.

To copy OpenFlow SSL certificates to the switch using TFTP or XMODEM, using only the following options pertinent to the OpenFlow SSL certificates.

Format `copy [<mode/file>] nvram:{openflow-ssl-ca-cert | openflow-ssl-cert | openflow-ssl-priv-key}`
Mode Privileged EXEC

**CAUTION**

Remember to upload the existing fastpath.cfg file off the switch prior to loading a new release image in order to make a backup.

Table 2: Copy Parameters

Source	Destination	Description
<code>nvr:application:sourcefilename</code>	<code>url</code>	Filename of source application file.
<code>nvr:backup-config</code>	<code>nvr:startup-config</code>	Copies the backup configuration to the startup configuration.
<code>nvr:clibanner</code>	<code>url</code>	Copies the CLI banner to a server.
<code>nvr:core-dump</code>	<code>tftp://<ipaddress hostname>/<filepath>/<filename> ftp://<user>@<ipaddr hostname>/<path>/<filename> scp://<user>@<ipaddr hostname>/<path>/<filename> sftp://<user>@<ipaddr hostname>/<path>/<filename>}</code>	Uploads the core dump file on the local system to an external TFTP/FTP/SCP/SFTP server.
<code>nvr:cpupktcapture.pcap</code>	<code>url</code>	Uploads CPU packets capture file.
<code>nvr:crash-log</code>	<code>url</code>	Copies the crash log to a server.
<code>nvr:errorlog</code>	<code>url</code>	Copies the error log file to a server.
<code>nvr:factory-defaults</code>	<code>url</code>	Uploads factory defaults file.
<code>nvr:fastpath.cfg</code>	<code>url</code>	Uploads the binary config file to a server.
<code>nvr:log</code>	<code>url</code>	Copies the log file to a server.
<code>nvr:file</code>	<code>url</code>	Uploads a specified file
<code>nvr:all-config</code>	<code>url</code>	Uploads all relevant config files to a server. Contains a collection of different configuration files. This file is a "tar.gz" file and is generated with all files in the directories "/mnt/fastpath" and "/mnt/os" and important bootloader settings.
<code>nvr:factory-all</code>	<code>url</code>	Copy all factory settings
<code>nvr:oslog</code>	<code>url</code>	Copies the OS system log file to a server
<code>nvr:operational-log</code>	<code>url</code>	Copies the operational log file to a server.
<code>nvr:script scriptname</code>	<code>url</code>	Copies a specified configuration script file to a server.
<code>nvr:startup-config</code>	<code>nvr:backup-config</code>	Copies the startup configuration to the backup configuration.
<code>nvr:startup-config</code>	<code>url</code>	Copies the startup configuration to a server.
<code>nvr:startup-log</code>	<code>url</code>	Uploads the startup log file.
<code>nvr:traplog</code>	<code>url</code>	Copies the trap log file to a server.
<code>system:running-config</code>	<code>nvr:startup-config</code>	Saves the running configuration to NVRAM.

Table 2: Copy Parameters (Continued)

Source	Destination	Description
system:running-config	nvrn:factory-defaults	Saves the running configuration to NVRAM to the <i>factory-defaults</i> file.
system:image	url	Saves the system image to a server.
url	nvrn:application <i>destfilename</i>	Destination file name for the application file.
url	nvrn:clibanner	Downloads the CLI banner to the system.
url	nvrn:fastpath.cfg	Downloads the binary config file to the system.
url	nvrn:publickey-config	Downloads the Public Key for Configuration Script validation.
url	nvrn:publickey-image	Downloads Public Key for Image validation.
url	nvrn:script <i>destfilename</i>	Downloads a configuration script file to the system. During the download of a configuration script, the copy command validates the script. In case of any error, the command lists all the lines at the end of the validation process and prompts you to confirm before copying the script file.
url	nvrn:script <i>destfilename</i> noval	When you use this option, the copy command will not validate the downloaded script file. An example of the CLI command follows:
(FASTPATH Routing) #copy	tftp://1.1.1.1/file.scr	nvrn:script file.scr noval
url	nvrn:sshkey-dsa	Downloads an SSH key file. For more information, see "Secure Shell Commands" on page 68".
url	nvrn:sshkey-rsa1	Downloads an SSH key file.
url	nvrn:sshkey-rsa2	Downloads an SSH key file.
url	nvrn:sslpem-dhweak	Downloads an HTTP secure-server certificate.
url	nvrn:sslpem-dhstrong	Downloads an HTTP secure-server certificate.
url	nvrn:sslpem-root	Downloads an HTTP secure-server certificate. For more information, see "Hypertext Transfer Protocol Commands" on page 72".
url	nvrn:sslpem-server	Downloads an HTTP secure-server certificate.
url	nvrn:startup-config	Downloads the startup configuration file to the system.
url	ias-users	Downloads an IAS users database file to the system. When the IAS users file is downloaded, the switch IAS user's database is replaced with the users and their attributes available in the downloaded file.
url	nvrn:file	Downloads a specified file
url	nvrn:all-config	Downloads all relevant config files.
url	nvrn:oem-data	Downloads and updates OEM data.
url	ipmi	Downloads and updates IPMI (HPM) firmware.
url	{active backup}	Download an image from the remote server to either image.
active	backup	Copy the active image to the backup image.
backup	active	Copy the backup image to the active image.

Example: The following shows an example of downloading and applying ias users file.
(FASTPATH Routing) #copy tftp://10.131.17.104/aaa_users.txt ias-users

```
Mode..... TFTP
Set Server IP..... 10.131.17.104
Path..... ./
Filename..... aaa_users.txt
Data Type..... IAS Users
```

Management access will be blocked for the duration of the transfer
Are you sure you want to start? (y/n) y

File transfer operation completed successfully.

Validating and updating the users to the IAS users database.

Updated IAS users database successfully.

(FASTPATH Routing) #

3.7.16 file verify

This command enables digital signature verification while an image and/or configuration file is downloaded to the switch.

Format file verify {all | image | none | script}

Mode Global Config

Parameter	Description
All	Verifies the digital signature of both image and configuration files.
Image	Verifies the digital signature of image files only.
None	Disables digital signature verification for both images and configuration files.
Script	Verifies the digital signature of configuration files.

3.7.17 no file verify

Resets the configured digital signature verification value to the factory default value.

Format no file verify

Mode Global Config

3.7.18 write memory

Use this command to save running configuration changes to NVRAM so that the changes you make will persist across a reboot. This command is the same as `copy system:running-config nvram:startup-config`. Use the `confirm` keyword to directly save the configuration to NVRAM without prompting for a confirmation.

Format write memory [confirm]

Mode Privileged EXEC

3.7.19 set bootstopkey

This command sets the bootstop key. With this key the booting process can be stopped. The key name is "stop". This is the default setting.

Format `set bootstopkey`

Mode Privileged EXEC

3.7.19.1 no set bootstopkey

This command resets the bootstop key. The boot process can not be interrupted.

Format `no set bootstopkey`

Mode Privileged EXEC

3.7.20 set board root-password

This command changes the current LINUX root password. The user will be asked by a prompt to specify the password and to reconfirm it a second time. An empty password can be specified by simply type <CR>. Then any password may be specified for the login. The factory password can be reconfigured (parameter 'factory').

Format `set board root-password [factory]`

Mode Privileged EXEC

3.7.21 show board port-map descr

The command displays the description for all physical ports related to the currently selected port-map.

Format `show board port-map descr`

Mode Privileged EXEC

3.7.22 show board address

This command displays the global address info of the board.

Format `show board address`

Mode Privileged EXEC

3.7.23 show board cpu-load

This command displays the CPU load. It shows the total time, the user time, the system time and the idle time in current interval, 30 seconds interval and 5 minutes interval. All times are reported in percent.

Format `show board cpu-load`

Mode Privileged EXEC

3.7.24 show board memory-usage

This command displays the Memory Usage. It shows malloc and kernel statistics.

Format `show board memory-usage`
Mode Privileged EXEC

3.7.25 `show board post-status`

This command displays the power on self test status of the board. It checks the status of the system selftest and the IPMC selftest.

Format `show board post-status [system | ipmi]`
Mode Privileged EXEC

3.7.26 `show board version`

This command displays hardware and software revision information. This includes serial-numbers, software and hardware revisions as applicable.

Format `show board version [basic | hardware | release | fru | all]`
Mode Privileged EXEC

- Basic version information (“show board version” and “show board version basic”)
- System description
- Board name
- Board serial number, part number and manufacturer
- Product serial number, part number and manufacturer
- FASTPATH version
- Hardware version information (“show board version hardware”)
- Broadcom silicon
- Processor CPU type
- Processor clock
- Jumper settings (optional)
- PCB revision (*optional*)
- PLD revision (*optional*)
- PHY 10G type and firmware version
- Updatable firmware releases (“show board version release”)
- System (FASTPATH) release

For “show board version all” all information is displayed.

3.7.27 `clear board event-log`

This command deletes all event-log records.

Format `clear board event-log`
Mode Privileged EXEC

3.7.28 show logging errcounter

This command displays the trace of the error counters.

Format **show logging errcounter**

Mode Privileged EXEC

3.7.29 clear errcounter

This command clears the error counters trace.

Format **clear errcounter**

Mode Privileged EXEC

3.7.30 show logging backtrace

This command displays the backtrace file last created. A backtrace file is created when the application stops unexpectedly.

Format **show logging backtrace**

Mode Privileged EXEC

3.8 SFP handling Commands

A new SFP handling is implemented. The SFP present state is periodically polled and if changed the SFP is enabled or disabled. If the SFP present state has changed a SNMP trap (and logging message) is generated.

The feature SFP auto-isolate disables a SFP port as long as no SFP is present.

The feature SFP auto-config reads the ethernet compliance in the EEPROM. If existing and applicable the SFP is configured related to the Ethernet protocol and then enabled, otherwise the SFP keeps disabled. Both features can be overridden and the SFP is then enabled even it is not present (auto-isolate) or the mode is not applicable (auto-config).

3.8.1 sfp auto-isolate

This command enables the feature auto-isolate.

Default enabled

Format **sfp auto-isolate**

Mode Interface Config

3.8.1.1 no sfp auto-isolate

This command disables the feature auto-isolate. If the feature is disabled a port is enabled although no SFP is present.

Format **no sfp auto-isolate**

Mode Interface Config

3.8.2 sfp auto-configure

This command enables the feature auto-configure.

Default enabled
Format `sfp auto-configure`
Mode Interface Config

3.8.2.1 no sfp auto-configure

This command disables the feature auto-configure. If the feature is disabled a port is enabled although the ethernet compliance mode is not applicable.

Format `no sfp auto-configure`
Mode Interface Config

3.8.3 sfp protocol

This command overrides the ethernet protocol read from the EEPROM. If the specified mode is applicable, the SFP is configured with this mode and enabled.

Format `sfp protocol 1000BASE-CX`
 `sfp protocol 1000BASE-LX`
 `sfp protocol 1000BASE-SX`
 `sfp protocol 1000BASE-T`
 `sfp protocol 10GBASE-CR`
 `sfp protocol 10GBASE-ER`
 `sfp protocol 10GBASE-LR`
 `sfp protocol 10GBASE-LRM`
 `sfp protocol 10GBASE-SR`
 `sfp protocol 40GBASE-CR4`
 `sfp protocol 40GBASE-LR4`
 `sfp protocol 40GBASE-SR4`
Mode Interface Config

3.8.3.1 no sfp protocol

This command disables the SFP.

Format `no sfp protocol`
Mode Interface Config

3.8.4 snmp-server enable traps sfp

This command enables the sending of a trap if the SFP present status has changed.

The command 'snmp-server enable traps' is a standard FASTPATH command, the parameter 'sfp' has been added by Kontron. The 'show trapflags' command is the standard FASTPATH command to show the trap settings, the SFP trap indication has been added by Kontron.

Default enabled
Format `snmp-server enable traps sfp`
Mode Global Config

3.8.4.1 no snmp-server enable traps sfp

This command disables the sending of a trap if the SFP present status has changed.

The command 'snmp-server enable traps' is a standard FASTPATH command, the parameter 'sfp' has been added by Kontron. The 'show trapflags' command is the standard FASTPATH command to show the trap settings, the SFP trap indication has been added by Kontron.

Format `no snmp-server enable traps sfp`
Mode Global Config

3.8.5 show sfp

This command displays information for a specified or all existing SFP's. For 'detail' the EEPROM data are indicated, for all other commands the SFP present status, port-status (if port is enabled or disabled) and link-status are indicated. For specified SFP additionally 'loss-of-signal' and 'transmitter-fault' are indicated.

If feature auto-isolate is set, the status of the feature (enabled/disabled) is indicated.

If feature auto-configure is set, the status of the feature (enabled/disabled), transceiver ID and ethernet protocol are displayed.

Format `show sfp slot/port [detail]`
 `show sfp all`
Mode Priviledged EXEC

3.8.6 hardware profile portmode copper-sfp

This command configures the specified interfaces for a copper-SFP (SGMII mode). It is applicable only to interfaces connected to a 1G SFP that support both 1000BASE-X and 1000BASE-T operations. If enabled, it will operate the MAC in SGMII mode and will switch the externally plugged SFP into SGMII mode using the SFP integrated I2C interface.

As operating a SFP in SGMII mode is not standardized, this will work only with a selected number of SFP modules that support the needed, proprietary command set.

**Note...**

This command will only take effect after a restart of the switch.

When a non-compatible SFP is inserted, the interface will not work correctly. Other Copper SFP modules may work, but this depends on the internal architecture and actual PHY used within the module.

The mode is indicated in the standard FASTPATH command 'show port'.

Format `hardware profile portmode copper-sfp`
Mode Interface Config

3.8.6.1 no hardware profile portmode copper-sfp

This command disables the specified interfaces as a copper-SFP (SGMII mode9).

Format `no hardware profile portmode copper-sfp`
Mode Interface Config

3.8.7 show interfaces hardware profile

This command displays different portmode settings for one specified or all physical interfaces. Also the copper-SFP settings (configured and currently active) are indicated.

Format `show interfaces hardware profile [<slot/port>]`

Mode Priviledged EXEC

3.9 Commands to configure startup services

This feature activates support for listing and configuring startup services. Services are board specific and defined by the BSP.

The commands invoke the /opt/kontron/bin/chkconfig utility directly.

3.9.1 set chkconfig

This command configures a BSP startup service.

Format `set chkconfig <service>`

Mode Priviledged EXEC

3.9.1.1 no set chkconfig

This command disables a BSP startup service.

Format `no set chkconfig <service>`

Mode Priviledged EXEC

Note that disabling basic services may make the system unusable, e.g. disabling syslogd or FASTPATH may make the system inaccessible.

3.9.2 show chkconfig

This command displays all currently installed services. Services are board specific and defined by the BSP.

Format `show chkconfig`

Mode Priviledged EXEC

3.9.3 hardware profile eth-mux

This command is to configure a port to front or backplane. Only 4 backplane ports are switchable.

Format `hardware profile eth-mux <front | rear>`

Mode Interface Config

3.9.4 show interfaces hardware profile eth-mux

The command displays the status (front/rear) of the 4 switchable interfaces.

Format `show interfaces hardware profile eth-mux`

Mode Privileged EXEC

3.10 Simple Network Time Protocol Commands

This section describes the commands you use to automatically configure the system time and date by using Simple Network Time Protocol (SNTP).

3.10.1 sntp broadcast client poll-interval

This command sets the poll interval for SNTP broadcast clients in seconds as a power of two where *poll-interval* can be a value from 6 to 10.

Default 6

Format `sntp broadcast client poll-interval poll-interval`

Mode Global Config

3.10.1.1 no sntp broadcast client poll-interval

This command resets the poll interval for SNTP broadcast client back to the default value.

Format `no sntp broadcast client poll-interval`

Mode Global Config

3.10.2 sntp client mode

This command enables Simple Network Time Protocol (SNTP) client mode and may set the mode to either broadcast or unicast.

Multicast: For multicast mode the SNTP multicast address must be defined as a route to a device. This is set automatically to the network device (if networkport is specified) or serviceport device (if serviceport is specified). If deleting multicast mode the route is automatically deleted too.

Default disabled

Format `sntp client mode [broadcast | unicast | multicast]`

Mode Global Config

3.10.2.1 no sntp client mode

This command disables Simple Network Time Protocol (SNTP) client mode.

Format no sntp client mode

Mode Global Config

3.10.3 sntp client port

This command sets the SNTP client port ID to 0, 123 or a value between 1025 and 65535. The default value is 0, which means that the SNTP port is not configured by the user. In the default case, the actual client port value used in SNTP packets is assigned by the underlying OS.

Default 0

Format sntp client port *portid*

Mode Global Config

3.10.3.1 no sntp client port

This command resets the SNTP client port back to its default value.

Format no sntp client port

Mode Global Config

3.10.4 sntp unicast client poll-interval

This command sets the poll interval for SNTP unicast clients in seconds as a power of two where *poll-interval* can be a value from 6 to 10.

Default 6

Format sntp unicast client poll-interval *poll-interval*

Mode Global Config

3.10.4.1 no sntp unicast client poll-interval

This command resets the poll interval for SNTP unicast clients to its default value.

Format no sntp unicast client poll-interval

Mode Global Config

3.10.5 sntp unicast client poll-timeout

This command sets the poll timeout for SNTP unicast clients in seconds to a value from 1-30.

Default 5

Format sntp unicast client poll-timeout *poll-timeout*

Mode Global Config

3.10.5.1 no sntp unicast client poll-timeout

This command will reset the poll timeout for SNTP unicast clients to its default value.

Format no sntp unicast client poll-timeout
Mode Global Config

3.10.6 sntp multicast client poll-interval

This command will set the poll interval for SNTP multicast clients in seconds as a power of two where *<poll-interval>* can be a value from 6 to 10.

Default 6
Format sntp multicast client poll-interval *<poll-interval>*
Mode Global Config

3.10.6.1 no sntp multicast client poll-interval

This command resets the poll interval for SNTP multicast clients to its default value.

Format no sntp multicast client poll-interval
Mode Global Config

3.10.7 sntp unicast client poll-retry

This command will set the poll retry for SNTP unicast clients to a value from 0 to 10.

Default 1
Format sntp unicast client poll-retry *poll-retry*
Mode Global Config

3.10.7.1 no sntp unicast client poll-retry

This command will reset the poll retry for SNTP unicast clients to its default value.

Format no sntp unicast client poll-retry
Mode Global Config

3.10.8 sntp server

This command configures an SNTP server (a maximum of three). The server address can be either an IPv4 address or an IPv6 address. The optional priority can be a value of 1-3, the version a value of 1-4, and the port id a value of 1-65535.

Format sntp server {*ipaddress* | *ipv6address* | *hostname*} [*priority* [*version* [*portid*]]]
Mode Global Config

3.10.8.1 no sntp server

This command deletes an server from the configured SNTP servers.

Format no sntp server remove {*ipaddress* | *ipv6address* | *hostname*}

Mode Global Config

3.10.9 sntp source-interface

Use this command to specify the physical or logical interface to use as the source interface (source IP address) for SNTP unicast server configuration. If configured, the address of source Interface is used for all SNTP communications between the SNTP server and the SNTP client. The selected source-interface IP address is used for filling the IP header of management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch. If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address. If the configured interface is down, the SNTP client falls back to its default behavior.

Format sntp source-interface {*slot/port* | loopback *Loopback-id* | *vlan* *vlan-id*}

Mode Global Config

Parameter	Description
slot/port	The unit identifier assigned to the switch.
loopback-id	Configures the loopback interface. The range of the loopback ID is 0 to 7.
tunnel-id	Configures the IPv6 tunnel interface. The range of the tunnel ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

3.10.9.1 no sntp source-interface

Use this command to reset the SNTP source interface to the default settings.

Format no sntp source-interface

Mode Global Config

3.10.10 show sntp

This command is used to display SNTP settings and status.

Format show sntp

Mode Privileged EXEC

Term	Definition
Last Update Time	Time of last clock update.
Last Attempt Time	Time of last transmit query (in unicast mode).
Last Attempt Status	Status of the last SNTP request (in unicast mode) or unsolicited message (in broadcast mode).
Broadcast Count	Current number of unsolicited broadcast messages that have been received and processed by the SNTP client since last reboot.

3.10.11 show sntp client

This command is used to display SNTP client settings.

Format show sntp client

Mode Privileged EXEC

Term	Definition
Client Supported Modes	Supported SNTP Modes (Broadcast or Unicast).
SNTP Version	The highest SNTP version the client supports.
Port	SNTP Client Port. The field displays the value 0 if it is default value. When the client port value is 0, if the client is in broadcast mode, it binds to port 123; if the client is in unicast mode, it binds to the port assigned by the underlying OS.
Client Mode	Configured SNTP Client Mode.

3.10.12 show sntp server

This command is used to display SNTP server settings and configured servers.

Format show sntp server

Mode Privileged EXEC

Term	Definition
Server Host Address	IP address or hostname of configured SNTP Server.
Server Type	Address type of server (IPv4, IPv6, or DNS).
Server Stratum	Claimed stratum of the server for the last received valid packet.
Server Reference ID	Reference clock identifier of the server for the last received valid packet.
Server Mode	SNTP Server mode.
Server Maximum Entries	Total number of SNTP Servers allowed.
Server Current Entries	Total number of SNTP configured.

For each configured server:

Term	Definition
IP Address / Hostname	IP address or hostname of configured SNTP Server.
Address Type	Address Type of configured SNTP server (IPv4, IPv6, or DNS).
Priority	IP priority type of the configured server.
Version	SNTP Version number of the server. The protocol version used to query the server in unicast mode.
Port	Server Port Number.
Last Attempt Time	Last server attempt time for the specified server.
Last Update Status	Last server attempt status for the server.
Total Unicast Requests	Number of requests to the server.
Failed Unicast Requests	Number of failed requests from server.

3.10.13 show sntp source-interface

Use this command to display the SNTP client source interface configured on the switch.

Format show sntp source-interface

Mode Privileged EXEC

Field	Description
SNTP Client Source Interface	The interface ID of the physical or logical interface configured as the SNTP client source interface.
SNTP Client Source IPv4 Address	The IP address of the interface configured as the SNTP client source interface.

Example: The following shows example CLI display output for the command.

```
(Routing) #show sntp source-interface
```

```
SNTP Client Source Interface..... (not configured)
```

```
(Routing) #
```

3.11 Time Zone Commands

Use the Time Zone commands to configure system time and date, Time Zone and Summer Time (that is, Daylight Saving Time). Summer time can be recurring or non-recurring.

3.11.1 clock set

This command sets the system time and date.

Format clock set *hh:mm:ss*
clock set *mm/dd/yyyy*

Mode Global Config

Parameter	Description
hh:mm:ss	Enter the current system time in 24-hour format in hours, minutes, and seconds. The range is hours: 0 to 23, minutes: 0 to 59, seconds: 0 to 59.
mm/dd/yyyy	Enter the current system date the format month, day, year. The range for month is 1 to 12. The range for the day of the month is 1 to 31. The range for year is 2010 to 2079.

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Config)# clock set 03:17:00
```

```
(FASTPATH Routing) (Config)# clock set 11/01/2011
```

3.11.2 clock summer-time date

Use the clock summer-time date command to set the summer-time offset to Coordinated Universal Time (UTC). If the optional parameters are not specified, they are read as either 0 or \0, as appropriate.

Format clock summer-time date {*date month year hh:mm date month year hh:mm*} [offset *offset*] [zone *acronym*]
Mode Global Config

Parameter	Description
date	Day of the month. Range is 1 to 31.
month	Month. Range is the first three letters by name; jan, for example.
year	Year. The range is 2000 to 2097.
hh:mm	Time in 24-hour format in hours and minutes. The range is hours: 0 to 23, minutes: 0 to 59.
offset	The number of minutes to add during the summertime. The range is 1 to 1440.
acronym	The acronym for the summer-time to be displayed when summertime is in effect. The range is up to four characters are allowed.

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Config)# clock summer-time date 1 nov 2011 3:18 2 nov 2011 3:18
(FASTPATH Routing) (Config)# clock summer-time date 1 nov 2011 3:18 2 nov 2011 3:18 offset 120 zone
INDA
```

3.11.3 clock summer-time recurring

This command sets the summer-time recurring parameters.

Format clock summer-time recurring {*week day month hh:mm week day month hh:mm*} [offset *offset*] [zone *acronym*]
Mode Global Config

Parameter	Description
EU	The system clock uses the standard recurring summer time settings used in countries in the European Union.
USA	The system clock uses the standard recurring daylight saving time settings used in the United States.
week	Week of the month. The range is 1 to 5, first, last.)
day	Day of the week. The range is the first three letters by name; sun, for example.
month	Month. The range is the first three letters by name; jan, for example.
hh:mm	Time in 24-hour format in hours and minutes. The range is hours: 0 to 23, minutes: 0 to 59.
offset	The number of minutes to add during the summertime. The range is 1 to 1440.
acronym	The acronym for the summertime to be displayed when summertime is in effect. Up to four characters are allowed.

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Config)# clock summer-time recurring 2 sun nov 3:18 2 mon nov 3:18
(FASTPATH Routing) (Config)# clock summer-time recurring 2 sun nov 3:18 2 mon nov 3:18 offset 120
zone INDA
```

3.11.3.1 no clock summer-time

This command disables the summer-time settings.

Format no clock summer-time

Mode Global Config

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Config)# no clock summer-time
```

3.11.4 clock timezone

Use this command to set the offset to Coordinated Universal Time (UTC). If the optional parameters are not specified, they will be read as either **0** or **\0** as appropriate.

Format clock timezone {*hours*} [*minutes minutes*] [*zone acronym*]

Mode Global Config

Parameter	Description
hours	Hours difference from UTC. The range is -12 to +13.
minutes	Minutes difference from UTC. The range is 0 to 59.
acronym	The acronym for the time zone. The range is up to four characters.

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Config)# clock timezone 5 minutes 30 zone INDA
```

3.11.4.1 no clock timezone

Use this command to reset the time zone settings.

Format no clock timezone

Mode Global Config

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Config)# no clock timezone
```

3.11.5 show clock

Use this command to display the time and date from the system clock.

Format show clock

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) # show clock
```

```
15:02:09 (UTC+0:00) Nov 1 2011
```

```
No time source
```

Example: The following shows example CLI display output for the command.

With the above configuration the output appears as below:

```
(FASTPATH Routing) # show clock
```

```
10:55:40 INDA(UTC+7:30) Nov 1 2011
No time source
```

3.11.6 show clock detail

Use this command to display the detailed system time along with the time zone and the summertime configuration.

Format show clock detail

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) # show clock detail
```

```
15:05:24 (UTC+0:00) Nov 1 2011
No time source
```

```
Time zone:
Acronym not configured
Offset is UTC+0:00
```

```
Summertime:
Summer-time is disabled
```

Example: The following shows example CLI display output for the command.

With the above configuration the output appears as below:

```
(FASTPATH Routing) # show clock detail
```

```
10:57:57 INDA(UTC+7:30) Nov 1 2011
No time source
```

```
Time zone:
Acronym is INDA
Offset is UTC+5:30
```

```
Summertime:
Acronym is INDA
Recurring every year
Begins on second Sunday of Nov at 03:18
Ends on second Monday of Nov at 03:18
Offset is 120 minutes
Summer-time is in effect.
```

3.12 DHCP Server Commands

This section describes the commands you to configure the DHCP server settings for the switch. DHCP uses UDP as its transport protocol and supports a number of features that facilitate in administration address allocations.

3.12.1 ip dhcp pool

This command configures a DHCP address pool name on a DHCP server and enters DHCP pool configuration mode.

Default none

Format ip dhcp pool *name*

Mode Global Config

3.12.1.1 no ip dhcp pool

This command removes the DHCP address pool. The name should be previously configured pool name.

Format no ip dhcp pool *name*

Mode Global Config

3.12.2 client-identifier

This command specifies the unique identifier for a DHCP client. Unique-identifier is a valid notation in hexadecimal format. In some systems, such as Microsoft DHCP clients, the client identifier is required instead of hardware addresses. The unique-identifier is a concatenation of the media type and the MAC address. For example, the Microsoft client identifier for Ethernet address c819.2488.f177 is 01c8.1924.88f1.77 where 01 represents the Ethernet media type. For more information, refer to the “Address Resolution Protocol Parameters” section of RFC 1700, Assigned Numbers for a list of media type codes.

Default none

Format client-identifier *uniqueidentifier*

Mode DHCP Pool Config

3.12.2.1 no client-identifier

This command deletes the client identifier.

Format no client-identifier

Mode DHCP Pool Config

3.12.3 client-name

This command specifies the name for a DHCP client. Name is a string consisting of standard ASCII characters.

Default none

Format client-name *name*

Mode DHCP Pool Config

3.12.3.1 no client-name

This command removes the client name.

Format no client-name

Mode DHCP Pool Config

3.12.4 default-router

This command specifies the default router list for a DHCP client. {*address1*, *address2*... *address8*} are valid IP addresses, each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Default none

Format default-router *address1* [*address2*...*address8*]

Mode DHCP Pool Config

3.12.4.1 no default-router

This command removes the default router list.

Format no default-router
Mode DHCP Pool Config

3.12.5 dns-server

This command specifies the IP servers available to a DHCP client. Address parameters are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Default none
Format dns-server *address1* [*address2*...*address8*]
Mode DHCP Pool Config

3.12.5.1 no dns-server

This command removes the DNS Server list.

Format no dns-server
Mode DHCP Pool Config

3.12.6 hardware-address

This command specifies the hardware address of a DHCP client. Hardware-address is the MAC address of the hardware platform of the client consisting of 6 bytes in dotted hexadecimal format. Type indicates the protocol of the hardware platform. It is 1 for 10 MB Ethernet and 6 for IEEE 802.

Default ethernet
Format hardware-address *hardwareaddress* *type*
Mode DHCP Pool Config

3.12.6.1 no hardware-address

This command removes the hardware address of the DHCP client.

Format no hardware-address
Mode DHCP Pool Config

3.12.7 host

This command specifies the IP address and network mask for a manual binding to a DHCP client. Address and Mask are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid. The prefix-length is an integer from 0 to 32.

Default none
Format host *address* [{*mask* | *prefix-length*}]
Mode DHCP Pool Config

3.12.7.1 no host

This command removes the IP address of the DHCP client.

Format no host
Mode DHCP Pool Config

3.12.8 lease

This command configures the duration of the lease for an IP address that is assigned from a DHCP server to a DHCP client. The overall lease time should be between 1-86400 minutes. If you specify *infinite*, the lease is set for 60 days. You can also specify a lease duration. *Days* is an integer from 0 to 59. *Hours* is an integer from 0 to 23. *Minutes* is an integer from 0 to 59.

Default 1 (day)
Format lease [{*days* [*hours*] [*minutes*] | *infinite*}]
Mode DHCP Pool Config

3.12.8.1 no lease

This command restores the default value of the lease time for DHCP Server.

Format no lease
Mode DHCP Pool Config

3.12.9 network (DHCP Pool Config)

Use this command to configure the subnet number and mask for a DHCP address pool on the server. Network-number is a valid IP address, made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid. Mask is the IP subnet mask for the specified address pool. The prefix-length is an integer from 0 to 32.

Default none
Format network *networknumber* [{*mask* | *prefixLength*}]
Mode DHCP Pool Config

3.12.9.1 no network

This command removes the subnet number and mask.

Format no network
Mode DHCP Pool Config

3.12.10 bootfile

The command specifies the name of the default boot image for a DHCP client. The *filename* specifies the boot image file.

Format bootfile *filename*
Mode DHCP Pool Config

3.12.10.1 no bootfile

This command deletes the boot image name.

Format no bootfile
Mode DHCP Pool Config

3.12.11 domain-name

This command specifies the domain name for a DHCP client. The *domain* specifies the domain name string of the client.

Default none
Format domain-name *domain*
Mode DHCP Pool Config

3.12.11.1 no domain-name

This command removes the domain name.

Format no domain-name
Mode DHCP Pool Config

3.12.12 domain-name enable

This command enables the domain name functionality in FASTPATH.

Format domain-name enable [*name name*]
Mode Global Config

Example: The following shows an example of the command.

```
(Switching) (Config)#domain-name enable
(Switching) (Config)#exit
```

3.12.12.1 no domain-name enable

This command disables the domain name functionality in FASTPATH.

Format no domain-name enable
Mode Global Config

3.12.13 netbios-name-server

This command configures NetBIOS Windows Internet Naming Service (WINS) name servers that are available to DHCP clients.

One IP address is required, although one can specify up to eight addresses in one command line. Servers are listed in order of preference (address1 is the most preferred server, address2 is the next most preferred server, and so on).

Default none
Format netbios-name-server *address* [*address2...address8*]
Mode DHCP Pool Config

3.12.13.1 no netbios-name-server

This command removes the NetBIOS name server list.

Format no netbios-name-server
Mode DHCP Pool Config

3.12.14 netbios-node-type

The command configures the NetBIOS node type for Microsoft Dynamic Host Configuration Protocol (DHCP) clients. Specifies the NetBIOS node type. Valid types are:

- b-node—Broadcast
- p-node—Peer-to-peer
- m-node—Mixed
- h-node—Hybrid (recommended)

Default none
Format netbios-node-type *type*
Mode DHCP Pool Config

3.12.14.1 no netbios-node-type

This command removes the NetBIOS node Type.

Format no netbios-node-type
Mode DHCP Pool Config

3.12.15 next-server

This command configures the next server in the boot process of a DHCP client. The *address* parameter is the IP address of the next server in the boot process, which is typically a TFTP server.

Default inbound interface helper addresses
Format next-server *address*
Mode DHCP Pool Config

3.12.15.1 no next-server

This command removes the boot server list.

Format no next-server
Mode DHCP Pool Config

3.12.16 option

The `option` command configures DHCP Server options. The `code` parameter specifies the DHCP option code and ranges from 1-254. The `ascii string` parameter specifies an NVT ASCII character string. ASCII character strings that contain white space must be delimited by quotation marks. The `hex string` parameter specifies hexadecimal data. In hexadecimal, character strings are two hexadecimal digits. You can separate each byte by a period (for example, `a3.4f.22.0c`), colon (for example, `a3:4f:22:0c`), or white space (for example, `a3 4f 22 0c`).

Default	none
Format	<code>option code {ascii string hex string1 [string2...string8] ip address1 [address2...address8]}</code>
Mode	DHCP Pool Config

3.12.16.1 no option

This command removes the DHCP Server options. The `code` parameter specifies the DHCP option code.

Format	no option <code>code</code>
Mode	DHCP Pool Config

3.12.17 ip dhcp excluded-address

This command specifies the IP addresses that a DHCP server should not assign to DHCP clients. Low-address and high-address are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Default	none
Format	<code>ip dhcp excluded-address Lowaddress [highaddress]</code>
Mode	Global Config

3.12.17.1 no ip dhcp excluded-address

This command removes the excluded IP addresses for a DHCP client. Low-address and high-address are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Format	no ip dhcp excluded-address <code>Lowaddress [highaddress]</code>
Mode	Global Config

3.12.18 ip dhcp ping packets

Use this command to specify the number, in a range from 2-10, of packets a DHCP server sends to a pool address as part of a ping operation. By default the number of packets sent to a pool address is 2, which is the smallest allowed number when sending packets. Setting the number of packets to 0 disables this command.

Default	2
Format	<code>ip dhcp ping packets 0,2-10</code>
Mode	Global Config

3.12.18.1 no ip dhcp ping packets

This command restores the number of ping packets to the default value.

Format no ip dhcp ping packets

Mode Global Config

3.12.19 service dhcp

This command enables the DHCP server.

Default disabled

Format service dhcp

Mode Global Config

3.12.19.1 no service dhcp

This command disables the DHCP server.

Format no service dhcp

Mode Global Config

3.12.20 ip dhcp bootp automatic

This command enables the allocation of the addresses to the bootp client. The addresses are from the automatic address pool.

Default disabled

Format ip dhcp bootp automatic

Mode Global Config

3.12.20.1 no ip dhcp bootp automatic

This command disables the allocation of the addresses to the bootp client. The address are from the automatic address pool.

Format no ip dhcp bootp automatic

Mode Global Config

3.12.21 ip dhcp conflict logging

This command enables conflict logging on DHCP server.

Default enabled

Format ip dhcp conflict logging

Mode Global Config

3.12.21.1 no ip dhcp conflict logging

This command disables conflict logging on DHCP server.

Format no ip dhcp conflict logging

Mode Global Config

3.12.22 clear ip dhcp binding

This command deletes an automatic address binding from the DHCP server database. If "*" is specified, the bindings corresponding to all the addresses are deleted. *address* is a valid IP address made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Format clear ip dhcp binding {*address* | *}

Mode Privileged EXEC

3.12.23 clear ip dhcp server statistics

This command clears DHCP server statistics counters.

Format clear ip dhcp server statistics

Mode Privileged EXEC

3.12.24 clear ip dhcp conflict

The command is used to clear an address conflict from the DHCP Server database. The server detects conflicts using a ping. DHCP server clears all conflicts If the asterisk (*) character is used as the address parameter.

Default none

Format clear ip dhcp conflict {*address* | *}

Mode Privileged EXEC

3.12.25 show ip dhcp binding

This command displays address bindings for the specific IP address on the DHCP server. If no IP address is specified, the bindings corresponding to all the addresses are displayed.

Format show ip dhcp binding [*address*]

Modes

- Privileged EXEC
- User EXEC

Term	Definition
IP address	The IP address of the client.
Hardware Address	The MAC Address or the client identifier.
Lease expiration	The lease expiration time of the IP address assigned to the client.
Type	The manner in which IP address was assigned to the client.

3.12.26 show ip dhcp global configuration

This command displays address bindings for the specific IP address on the DHCP server. If no IP address is specified, the bindings corresponding to all the addresses are displayed.

Format show ip dhcp global configuration

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Service DHCP	The field to display the status of dhcp protocol.
Number of Ping Packets	The maximum number of Ping Packets that will be sent to verify that an ip address id not already assigned.
Conflict Logging	Shows whether conflict logging is enabled or disabled.
BootP Automatic	Shows whether BootP for dynamic pools is enabled or disabled.

3.12.27 show ip dhcp pool configuration

This command displays pool configuration. If all is specified, configuration for all the pools is displayed.

Format show ip dhcp pool configuration {name | all}

Modes

- Privileged EXEC
- User EXEC

Field	Definition
Pool Name	The name of the configured pool.
Pool Type	The pool type.
Lease Time	The lease expiration time of the IP address assigned to the client.
DNS Servers	The list of DNS servers available to the DHCP client.
Default Routers	The list of the default routers available to the DHCP client

The following additional field is displayed for Dynamic pool type:

Field	Definition
Network	The network number and the mask for the DHCP address pool.

The following additional fields are displayed for Manual pool type:

Field	Definition
Client Name	The name of a DHCP client.
Client Identifier	The unique identifier of a DHCP client.
Hardware Address	The hardware address of a DHCP client.
Hardware Address Type	The protocol of the hardware platform.
Host	The IP address and the mask for a manual binding to a DHCP client.

3.12.28 show ip dhcp server statistics

This command displays DHCP server statistics.

Format show ip dhcp server statistics

Modes

- Privileged EXEC
- User EXEC

Field	Definition
Automatic Bindings	The number of IP addresses that have been automatically mapped to the MAC addresses of hosts that are found in the DHCP database.
Expired Bindings	The number of expired leases.
Malformed Bindings	The number of truncated or corrupted messages that were received by the DHCP server.

Message Received:

Message	Definition
DHCP DISCOVER	The number of DHCPDISCOVER messages the server has received.
DHCP REQUEST	The number of DHCPREQUEST messages the server has received.
DHCP DECLINE	The number of DHCPDECLINE messages the server has received.
DHCP RELEASE	The number of DHCPRELEASE messages the server has received.
DHCP INFORM	The number of DHCPINFORM messages the server has received.

Message Sent:

Message	Definition
DHCP OFFER	The number of DHCPOFFER messages the server sent.
DHCP ACK	The number of DHCPACK messages the server sent.
DHCP NACK	The number of DHCPNACK messages the server sent.

3.12.29 show ip dhcp conflict

This command displays address conflicts logged by the DHCP Server. If no IP address is specified, all the conflicting addresses are displayed.

Format show ip dhcp conflict [*ip-address*]

Modes

- Privileged EXEC
- User EXEC

Term	Definition
IP address	The IP address of the host as recorded on the DHCP server.
Detection Method	The manner in which the IP address of the hosts were found on the DHCP Server.
Detection time	The time when the conflict was found.

3.12.30 ip dhcp option-61

This command specifies the mode for setting a DHCP client identifier (DHCP option 61). The client identifier is sent if one of the options below is specified, otherwise (default, "no"-command) the option is disabled. The user can either select an automatic constructed unique ID ("auto"/"variant-1" or "oem") or define a fixed string which should be unique too ("fixed").

If a fixed string is defined, the identifier is preceeded by a byte 0x00 which defines the hardware-type (other).

The automatic identifier is constructed as

- "auto":
a byte 0x00 (hardware type) followed by a ascii string containing the MAC Address and the network management VLAN ID separated by "-vl" (e.g. 0x00 "00a0.a573.449c-vl1")
- "variant-1"/"oem":
byte 1: 0x00 (hardware type)
bytes 2-5: shelf address information (
cabinet row/column and chassis vertical/horizontal dev)
bytes 6-8: address information (logical slot number, module type and number)
bytes 9-10: shelf address information (cabinet and subrack HMS number)
byte 11-12: device ID
byte 13: request identifier (=0xff)
bytes 14-16: release information (version/edition/repair)

Format `ip dhcp option-61 <string>`
 `ip dhcp option-61 auto`
 `ip dhcp option-61 oem`

Modes Global Config

3.12.30.1 no ip dhcp option-61

This command disables DHCP client identifier (DHCP option 61).

Format `no ip dhcp option-61`

Modes Global Config

3.12.31 show ip dhcp option-61

This command shows the configured type of the client identifier or (if none) disabled. If the feature is enabled the specified ("fixed") or the automatic client-identifier is shown additionally.

Format `show ip dhcp option-61`

Modes Privileged Exec

3.13 DNS Client Commands

These commands are used in the Domain Name System (DNS), an Internet directory service. DNS is how domain names are translated into IP addresses. When enabled, the DNS client provides a hostname lookup service to other components of FASTPATH.

3.13.1 ip domain lookup

Use this command to enable the DNS client.

Default enabled
Format ip domain lookup
Mode Global Config

3.13.1.1 no ip domain lookup

Use this command to disable the DNS client.

Format no ip domain lookup
Mode Global Config

3.13.2 ip domain name

Use this command to define a default domain name that FASTPATH software uses to complete unqualified host names (names with a domain name). By default, no default domain name is configured in the system. *name* may not be longer than 255 characters and should not include an initial period. This *name* should be used only when the default domain name list, configured using the `ip domain list` command, is empty.

Default none
Format ip domain name *name*
Mode Global Config

Example: The CLI command `ip domain name yahoo.com` will configure yahoo.com as a default domain name. For an unqualified hostname xxx, a DNS query is made to find the IP address corresponding to xxx.yahoo.com.

3.13.2.1 no ip domain name

Use this command to remove the default domain name configured using the `ip domain name` command.

Format no ip domain name
Mode Global Config

3.13.3 ip domain list

Use this command to define a list of default domain names to complete unqualified names. By default, the list is empty. Each name must be no more than 256 characters, and should not include an initial period. The default domain name, configured using the `ip domain name` command, is used only when the default domain name list is empty. A maximum of 32 names can be entered in to this list.

Default none
Format ip domain list *name*
Mode Global Config

3.13.3.1 no ip domain list

Use this command to delete a name from a list.

Format no ip domain list *name*
Mode Global Config

3.13.4 ip name server

Use this command to configure the available name servers. Up to eight servers can be defined in one command or by using multiple commands. The parameter *server-address* is a valid IPv4 or IPv6 address of the server. The preference of the servers is determined by the order they were entered.

Format ip name-server *server-address1* [*server-address2*...*server-address8*]
Mode Global Config

3.13.4.1 no ip name server

Use this command to remove a name server.

Format no ip name-server [*server-address1*...*server-address8*]
Mode Global Config

3.13.5 ip name source-interface

Use this command to specify the physical or logical interface to use as the DNS client (IP name) source interface (source IP address) for the DNS client management application. If configured, the address of source Interface is used for all DNS communications between the DNS server and the DNS client. The selected source-interface IP address is used for filling the IP header of management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch. If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address. If the configured interface is down, the DNS client falls back to its default behavior.

Format ip name source-interface {*slot/port* | *loopback loopback-id* | *tunnel tunnel-id* | *vlan vlan-id*}
Mode Global Config

3.13.5.1 no ip name source-interface

Use this command to reset the DNS source interface to the default settings.

Format no ip name source-interface
Mode Global Config

3.13.6 ip host

Use this command to define static host name-to-address mapping in the host cache. The parameter *name* is host name and *ip address* is the IP address of the host. The hostname can include 1–255 alphanumeric characters, periods, hyphens, underscores, and non-consecutive spaces. Hostnames that include one or more space must be enclosed in quotation marks, for example "lab-pc 45".

Default none
Format ip host *name ipaddress*
Mode Global Config

3.13.6.1 no ip host

Use this command to remove the name-to-address mapping.

Format no ip host *name*
Mode Global Config

3.13.7 ipv6 host

Use this command to define static host name-to-IPv6 address mapping in the host cache. The parameter *name* is host name and *v6 address* is the IPv6 address of the host. The hostname can include 1–255 alphanumeric characters, periods, hyphens, and spaces. Hostnames that include one or more space must be enclosed in quotation marks, for example "lab-pc 45".

Default none
Format ipv6 host *name v6 address*
Mode Global Config

3.13.7.1 no ipv6 host

Use this command to remove the static host name-to-IPv6 address mapping in the host cache.

Format no ipv6 host *name*
Mode Global Config

3.13.8 ip domain retry

Use this command to specify the number of times to retry sending Domain Name System (DNS) queries. The parameter *number* indicates the number of times to retry sending a DNS query to the DNS server. This number ranges from 0 to 100.

Default 2
Format ip domain retry *number*
Mode Global Config

3.13.8.1 no ip domain retry

Use this command to return to the default.

Format no ip domain retry *number*

Mode Global Config

3.13.9 ip domain timeout

Use this command to specify the amount of time to wait for a response to a DNS query. The parameter *seconds* specifies the time, in seconds, to wait for a response to a DNS query. The parameter *seconds* ranges from 0 to 3600.

Default 3

Format ip domain timeout *seconds*

Mode Global Config

3.13.9.1 no ip domain timeout

Use this command to return to the default setting.

Format no ip domain timeout *seconds*

Mode Global Config

3.13.10 clear host

Use this command to delete entries from the host name-to-address cache. This command clears the entries from the DNS cache maintained by the software. This command clears both IPv4 and IPv6 entries.

Format clear host {*name* | all}

Mode Privileged EXEC

Field	Description
name	A particular host entry to remove. The parameter <i>name</i> ranges from 1-255 characters.
all	Removes all entries.

3.13.11 show hosts

Use this command to display the default domain name, a list of name server hosts, the static and the cached list of host names and addresses. The parameter *name* ranges from 1-255 characters. This command displays both IPv4 and IPv6 entries.

Format show hosts [*name*]

Mode Privileged EXEC

User EXEC

Field	Description
Host Name	Domain host name.
Default Domain	Default domain name.
Default Domain List	Default domain list.
Domain Name Lookup	DNS client enabled/disabled.

Field	Description
Number of Retries	Number of time to retry sending Domain Name System (DNS) queries.
Retry Timeout Period	Amount of time to wait for a response to a DNS query.
Name Servers	Configured name servers.
DNS Client Source Interface	Shows the configured source interface (source IP address) used for a DNS client. The IP address of the selected interface is used as source IP for all communications with the server.

Example: The following shows example CLI display output for the command.

```
<FASTPATH SWITCHING> show hosts
```

```
Host name..... Device
Default domain..... gm.com
Default domain list..... yahoo.com, Stanford.edu, rediff.com
Domain Name lookup..... Enabled
Number of retries..... 5
Retry timeout period..... 1500
Name servers (Preference order)... 176.16.1.18 176.16.1.19
DNS Client Source Interface..... (not configured)
```

Configured host name-to-address mapping:

```
Host                      Addresses
-----
accounting.gm.com         176.16.8.8

Host      Total    Elapsed    Type    Addresses
-----
www.stanford.edu    72        3        IP      171.64.14.203
```

3.13.12 show ip name source-interface

Use this command to display the configured source interface details used for a DNS client. The IP address of the selected interface is used as source IP for all communications with the server.

Format show ip name source-interface

Mode Privileged EXEC

3.14 IP Address Conflict Commands

The commands in this section help troubleshoot IP address conflicts.

3.14.1 ip address-conflict-detect run

This command triggers the switch to run active address conflict detection by sending gratuitous ARP packets for IPv4 addresses on the switch.

Format ip address-conflict-detect run

Mode

- Global Config
- Virtual Router Config

3.14.2 show ip address-conflict

This command displays the status information corresponding to the last detected address conflict.

Format show ip address-conflict

Modes Privileged EXEC

Term	Definition
Address Conflict Detection Status	Identifies whether the switch has detected an address conflict on any IP address.
Last Conflicting IP Address	The IP Address that was last detected as conflicting on any interface.
Last Conflicting MAC Address	The MAC Address of the conflicting host that was last detected on any interface.
Time Since Conflict Detected	The time in days, hours, minutes and seconds since the last address conflict was detected.

3.14.3 clear ip address-conflict-detect

This command clears the detected address conflict status information.

Format clear ip address-conflict-detect

Modes Privileged EXEC

3.15 Serviceability Packet Tracing Commands

These commands improve the capability of network engineers to diagnose conditions affecting their FASTPATH product.

**CAUTION**

The output of "debug" commands can be long and may adversely affect system performance.

3.15.1 capture start

Use the command **capture start** to manually start capturing CPU packets for packet trace.

The packet capture operates in three modes:

- capture file
- remote capture
- capture line

The command is not persistent across a reboot cycle.

Format capture start [{all|receive|transmit}]

Mode Privileged EXEC

Parameter	Description
all	Capture all traffic.
receive	Capture only received traffic.
transmit	Capture only transmitted traffic.

3.15.2 capture stop

Use the command **capture stop** to manually stop capturing CPU packets for packet trace.

Format capture stop

Mode Privileged EXEC

3.15.3 capture file|remote|line

Use this command to configure file capture options. The command is persistent across a reboot cycle.

Format capture {file|remote|line}

Mode Global Config

Parameter	Description
file	In the capture file mode, the captured packets are stored in a file on NVRAM. The maximum file size defaults to 524288 bytes. The switch can transfer the file to a TFTP server via TFTP, SFTP, SCP via CLI, and SNMP. The file is formatted in pcap format, is named cpuPktCapture.pcap, and can be examined using network analyzer tools such as Wireshark or Ethereal. Starting a file capture automatically terminates any remote capture sessions and line capturing. After the packet capture is activated, the capture proceeds until the capture file reaches its maximum size, or until the capture is stopped manually using the CLI command capture stop.
remote	In the remote capture mode, the captured packets are redirected in real time to an external PC running the Wireshark tool for Microsoft Windows. A packet capture server runs on the switch side and sends the captured packets via a TCP connection to the Wireshark tool. The remote capture can be enabled or disabled using the CLI. There should be a Windows PC with the Wireshark tool to display the captured file. When using the remote capture mode, the switch does not store any captured data locally on its file system. You can configure the IP port number for connecting Wireshark to the switch. The default port number is 2002. If a firewall is installed between the Wireshark PC and the switch, then these ports must be allowed to pass through the firewall. You must configure the firewall to allow the Wireshark PC to initiate TCP connections to the switch. If the client successfully connects to the switch, the CPU packets are sent to the client PC, then Wireshark receives the packets and displays them. This continues until the session is terminated by either end. Starting a remote capture session automatically terminates the file capture and line capturing.
line	In the capture line mode, the captured packets are saved into the RAM and can be displayed on the CLI. Starting a line capture automatically terminates any remote capture session and capturing into a file. There is a maximum 128 packets of maximum 128 bytes that can be captured and displayed in line mode.

3.15.4 capture remote port

Use this command to configure file capture options. The command is persistent across a reboot cycle. The *id* parameter is a TCP port number from 1024– 49151.

Format capture remote port *id*

Mode Global Config

3.15.5 capture file size

Use this command to configure file capture options. The command is persistent across a reboot cycle. The *max-file-size* parameter is the maximum size the pcap file can reach, which is 2–512 KB.

Format capture file size *max file size*

Mode Global Config

3.15.6 capture line wrap

This command enables wrapping of captured packets in line mode when the captured packets reaches full capacity.

Format capture line wrap

Mode Global Config

3.15.6.1 no capture line wrap

This command disables wrapping of captured packets and configures capture packet to stop when the captured packet capacity is full.

Format no capture line wrap

Mode Global Config

3.15.7 show capture packets

Use this command to display packets captured and saved to RAM. It is possible to capture and save into RAM, packets that are received or transmitted through the CPU. A maximum 128 packets can be saved into RAM per capturing session. A maximum 128 bytes per packet can be saved into the RAM. If a packet holds more than 128 bytes, only the first 128 bytes are saved; data more than 128 bytes is skipped and cannot be displayed in the CLI.

Capturing packets is stopped automatically when 128 packets are captured and have not yet been displayed during a capture session. Captured packets are not retained after a reload cycle.

Format show capture packets

Mode Privileged EXEC

3.15.8 cpu-traffic direction interface

Use this command to associate CPU filters to an interface or list of interfaces. The interfaces can be a physical or logical LAG. The statistics counters are updated only for the configured interfaces. The traces can also be obtained for the configured interfaces.

**Note...**

The offset should consider the VLAN tag headers as the packet to the CPU is always a tagged packet.

Default	None
Format	<code>cpu-traffic direction {tx rx both} interface <i>interface-range</i></code>
Mode	Global Config

3.15.8.1 `no cpu-traffic direction interface`

Use this command to remove all interfaces from the CPU filters.

Format	<code>no cpu-traffic direction {tx rx both} interface <i>interface-range</i></code>
Mode	Global Config

3.15.9 `cpu-traffic direction match cust-filter`

Use this command to configure a custom filter. The statistics and/or traces for configured filters are obtained for the packet matching configured data at the specific offset. If the mask is not specified then the default mask is 0xFF. There can be three different offsets specified as match conditions. Each time a custom filter is configured, the switch overrides the previous configuration.

**Note...**

The offset should consider the VLAN tag headers as the packet to the CPU is always a tagged packet.

Default	None
Format	<code>cpu-traffic direction {tx rx both} match cust-filter <i>offset1 data1 [mask1 mask1]</i> <i>offset2 data2 [mask2 mask2]</i> <i>offset3 data3 [mask3 mask3]</i></code>
Mode	Global Config

3.15.9.1 `no cpu-traffic direction match cust-filter`

Use this command to remove the configured custom filter.

Format	<code>no cpu-traffic direction {tx rx both} match cust-filter <i>offset1 data1 [mask1 mask1]</i> <i>offset2 data2 [mask2 mask2]</i> <i>offset3 data3 [mask3 mask3]</i></code>
Mode	Global Config

3.15.10 `cpu-traffic direction match srcip`

Use this command to configure the source IP address-specific filter. The statistics and/or the traces for configured filters are obtained for the packet matching configured source IP/Mask.

Default	None
Format	<code>cpu-traffic direction {tx rx both} match srcip <i>ipaddress [mask mask]</i></code>
Mode	Global Config

3.15.10.1 no cpu-traffic direction match srcip

Use this command to disable the configured source IP address filter.

Format no cpu-traffic direction {tx|rx|both} match srcip *ipaddress* [mask *mask*]
Mode Global Config

3.15.11 cpu-traffic direction match dstip

Use this command to configure the destination IP address-specific filter. The statistics and/or the traces for configured filters are obtained for the packet matching configured destination IP/Mask.

Default None
Format cpu-traffic direction {tx|rx|both} match dstip *ipaddress* [mask *mask*]
Mode Global Config

3.15.11.1 no cpu-traffic direction match dstip

Use this command to disable the configured destination IP address filter.

Format no cpu-traffic direction {tx|rx|both} match dstip *ipaddress* [mask *mask*]
Mode Global Config

3.15.12 cpu-traffic direction match tcp

Use this command to configure the source or destination TCP port-specific filter. The statistics and/or traces for configured filters are obtained for the packet matching configured source/destination TCP port.

Default None
Format cpu-traffic direction {tx|rx|both} match {srctcp|dsttcp} *port* [mask *mask*]
Mode Global Config

3.15.12.1 no cpu-traffic direction match tcp

Use this command to remove the configured source/destination TCP port filter.

Format no cpu-traffic direction {tx|rx|both} match {srctcp|dsttcp} *port* [mask *mask*]
Mode Global Config

3.15.13 cpu-traffic direction match udp

Use this command to configure the source or destination UDP port-specific filter. The statistics and/or traces for configured filters are obtained for the packet matching configured source/destination UDP port.

Default None
Format cpu-traffic direction {tx|rx|both} match {srcudp|dstudp} *port* [mask *mask*]
Mode Global Config

3.15.13.1 no cpu-traffic direction match udp

Use this command to remove the configured source/destination UDP port filter.

Format no cpu-traffic direction {tx|rx|both} match {srcudp|dstudp} port [mask mask]
Mode Global Config

3.15.14 cpu-traffic mode

Use this command to configure CPU-traffic mode. The packets in the RX/TX direction are matched when the mode is enabled.

Default Disabled
Format cpu-traffic mode
Mode Global Config

3.15.14.1 no cpu-traffic mode

Use this command to disable CPU-traffic mode.

Format no cpu-traffic mode
Mode Global Config

3.15.15 cpu-traffic trace

Use this command to configure CPU packet tracing. The packet can be received by multiple components. If the feature is enabled and tracing configured, the packets are traced per the defined filter. If dump-pkt is enabled, the first 64 bytes of the packet are displayed along with the trace statistics.

Default Disabled
Format cpu-traffic trace {dump-pkt}
Mode Global Config

3.15.15.1 no cpu-traffic trace

Use this command to disable CPU packet tracing and dump-pkt (if configured).

Format no cpu-traffic trace {dump-pkt}
Mode Global Config

3.15.15.2 show cpu-traffic

Use this command to display the current configuration parameters.

Default None
Format show cpu-traffic
Mode Privileged EXEC

Example:

(Routing) #show cpu-traffic

```

Admin Mode..... Disable
Packet Trace..... Disable
Packet Dump..... Disable

Direction TX:
Filter Options..... N/A
Interface..... N/A
Src TCP parameters..... 0 0
Dst TCP parameters..... 0 0
Src UDP parameters..... 0 0
Dst UDP parameters..... 0 0
Src IP parameters..... 0.0.0.0 0.0.0.0
Dst IP parameters..... 0.0.0.0 0.0.0.0
Src MAC parameters..... 00:00:00:00:00:00 00:00:00:00:00:00
Dst MAC parameters..... 00:00:00:00:00:00 00:00:00:00:00:00
Custom filter parameters1..... Offset=0x0 Value=0x0 Mask=0x0
Custom filter parameters2..... Offset=0x0 Value=0x0 Mask=0x0
Custom filter parameters3..... Offset=0x0 Value=0x0 Mask=0x0

Direction RX:
Filter Options..... N/A
Interface..... N/A
Src TCP parameters..... 0 0
Dst TCP parameters..... 0 0
Src UDP parameters..... 0 0
Dst UDP parameters..... 0 0
Src IP parameters..... 0.0.0.0 0.0.0.0
Dst IP parameters..... 0.0.0.0 0.0.0.0
Src MAC parameters..... 00:00:00:00:00:00 00:00:00:00:00:00
Dst MAC parameters..... 00:00:00:00:00:00 00:00:00:00:00:00
Custom filter parameters1..... Offset=0x0 Value=0x0 Mask=0x0
Custom filter parameters2..... Offset=0x0 Value=0x0 Mask=0x0
Custom filter parameters3..... Offset=0x0 Value=0x0 Mask=0x0

```

3.15.16 show cpu-traffic interface

Use this command to display per interface statistics for configured filters. The statistics can be displayed for a specific filter (e.g., stp, udld, arp etc). If no filter is specified, statistics are displayed for all configured filters. Similarly, source/destination IP, TCP, UDP or MAC along with custom filter can be used as command option to get statistics.

Default	None
Format	show cpu-traffic interface {all unit/slot/port cpu } filter
Mode	Privileged EXEC

3.15.17 show cpu-traffic summary

Use this command to display summary statistics for configured filters for all interfaces.

Default	None
Format	show cpu-traffic summary
Mode	Privileged EXEC

Example:

```
(Routing) #show cpu-traffic summary
```

Filter	Received	Transmitted
-----	-----	-----
STP	0	0
LACPDU	0	0
ARP	0	0
UDLD	0	0
LLDP	0	0
IP	0	0
OSPF	0	0
BGP	0	0
DHCP	0	0
BCAST	0	0
MCAST	0	0
UCAST	0	0
SRCIP	0	0
DSTIP	0	0
SRCMAC	0	0
DSTMAC	0	0
CUSTOM	0	0
SRCTCP	0	0
DSTTCP	0	0
SRCUDP	0	0

3.15.18 show cpu-traffic trace

Use this command to display traced information. The trace information can be displayed either for all available packets or for specific filter (e.g., stp, udld, arp etc). Similarly, source/destination IP or MAC along with custom filter can be used as command option to get specific traces from history. If enabled, packet dump information is displayed along with packet trace statistics. By default, packet dump buffer size is set to store first 64 bytes of packet.

Default	None
Format	show cpu-traffic trace <i>filter</i>
Mode	Privileged EXEC

Example:

```
(Routing) #show cpu-traffic summary
Packet #1: IP; DHCP; UCAST; SRCMAC=00:10:10:10:10:10;
<08:06:10> Sysnet received in sysNetNotifyPduReceive()
<08:06:10> Packet delivered to IP via ipMapRecvIP()
<08:06:10> Freed
0000 00 10 18 82 18 b3 00 10 10 10 10 10 81 00 00 01 .....
0010 08 00 45 10 01 21 00 00 00 00 40 11 79 bd 00 00 ..E...!....@.y...
0020 00 00 ff ff ff ff 00 44 00 43 01 0d 48 10 03 01 .....D.C..H...
0030 06 00 18 85 4a 83 00 00 80 00 00 00 00 00 00 00 ....J.....
```

3.15.19 clear cpu-traffic

Use this command to clear cpu-traffic statistics or trace information on all interfaces.

Default	None
Format	clear cpu-traffic {counters traces}
Mode	Global Config

3.15.20 debug aaa accounting

This command is useful to debug accounting configuration and functionality in User Manager.

Format debug aaa accounting

Mode Privileged EXEC

3.15.20.1 no debug aaa accounting

Use this command to turn off debugging of User Manager accounting functionality.

Format no debug aaa accounting

Mode Privileged EXEC

3.15.21 debug aaa authorization

Use this command to enable the tracing for AAA in User Manager. This is useful to debug authorization configuration and functionality in the User Manager. Each of the parameters are used to configure authorization debug flags.

Format debug aaa authorization commands|exec

Mode Privileged EXEC

3.15.21.1 no debug aaa authorization

Use this command to turn off debugging of the User Manager authorization functionality.

Format no debug aaa authorization

Mode Privileged EXEC

Example: The following is an example of the command.

```
(Switching) #debug aaa authorization
Tacacs authorization receive packet tracing enabled.
```

```
(Switching) #debug tacacs authorization packet transmit
authorization tracing enabled.
```

```
(Switching) #no debug aaa authorization
```

```
AAA authorization tracing enabled
```

```
(Switching) #
```

3.15.22 debug arp

Use this command to enable ARP debug protocol messages.

Default disabled

Format debug arp

Mode Privileged EXEC

3.15.22.1 no debug arp

Use this command to disable ARP debug protocol messages.

Format no debug arp

Mode Privileged EXEC

3.15.23 debug authentication

This command displays either the debug trace for either a single event or all events for an interface

Default none

Format debug authentication packet {all | event} *interface*

Mode Privileged EXEC

3.15.24 debug auto-voip

Use this command to enable Auto VOIP debug messages. Use the optional parameters to trace H323, SCCP, or SIP packets respectively.

Default disabled

Format debug auto-voip [H323|SCCP|SIP|oui]

Mode Privileged EXEC

3.15.24.1 no debug auto-voip

Use this command to disable Auto VOIP debug messages.

Format no debug auto-voip

Mode Privileged EXEC

3.15.25 debug clear

This command disables all previously enabled “debug” traces.

Default disabled

Format debug clear

Mode Privileged EXEC

3.15.26 debug console

This command enables the display of “debug” trace output on the login session in which it is executed. Debug console display must be enabled in order to view any trace output. The output of debug trace commands will appear on all login sessions for which debug console has been enabled. The configuration of this command remains in effect for the life of the login session. The effect of this command is not persistent across resets.

Default disabled

Format debug console

Mode Privileged EXEC

3.15.26.1 no debug console

This command disables the display of “debug” trace output on the login session in which it is executed.

Format no debug console

Mode Privileged EXEC

3.15.27 debug crashlog

Use this command to view information contained in the crash log file that the system maintains when it experiences an unexpected reset. The crash log file contains the following information:

- Call stack information in both primitive and verbose forms
- Log Status
- Buffered logging
- Event logging
- Persistent logging
- System Information (output of sysapiMbufDump)
- Message Queue Debug Information
- Memory Debug Information
- Memory Debug Status
- OS Information (output of osapiShowTasks)
- /proc information (meminfo, cpuinfo, interrupts, version and net/sockstat)

Default disabled

Format debug crashlog {[kernel] crashlog-number [upload url] | proc | verbose | deleteall}

Mode Privileged EXEC

Parameter	Description
kernel	View the crash log file for the kernel
crashlog-number	Specifies the file number to view. The system maintains up to four copies, and the valid range is 1–4.”deb
upload url	To upload the crash log (or crash dump) to a TFTP server, use the <code>upload</code> keyword and specify the required TFTP server information.
proc	View the application process crashlog.
verbose	Enable the verbose crashlog.
deleteall	Delete all crash log files on the system.
data	Crash log data recorder.
crashdump-number	Specifies the crash dump number to view. The valid range is 0–2.
download url	To download a crash dump to the switch, use the <code>download</code> keyword and specify the required TFTP server information.
component-id	The ID of the component that caused the crash.
item-number	The item number.
additional-parameter	Additional parameters to include.

3.15.28 debug dcbx packet

Use this command to enable debug tracing for DCBX packets that are transmitted or received.

Default disabled
Format debug dcbx packet {receive | transmit}
Mode Privileged EXEC

3.15.29 debug debug-config

Use this command to download or upload the debug-config.ini file. The debug-config.ini file executes CLI commands (including devshell and drivshell commands) on specific predefined events. The debug config file is created manually and downloaded to the switch.

Default disabled
Format debug debug-config {download <url> | upload <url>}
Mode Privileged EXEC

3.15.30 debug dhcp packet

This command displays “debug” information about DHCPv4 client activities and traces DHCPv4 packets to and from the local DHCPv4 client.

Default disabled
Format debug dhcp packet [transmit | receive]
Mode Privileged EXEC

3.15.30.1 no debug dhcp

This command disables the display of “debug” trace output for DHCPv4 client activity.

Format no debug dhcp packet [transmit | receive]
Mode Privileged EXEC

3.15.31 debug dot1ag

Use this command to enable debugging of the messages sent between MPs and MEPs.

Default disabled
Format debug dot1ag {all | ccm | events | lbm | lbr | ltm | ltr | pdu}
Mode Privileged EXEC

Parameter	Description
all	Debug all dot1ag message types.
CCM	Configure debug flags for Continuity Check Message information. A multicast CFM PDU transmitted periodically by a MEP in order to ensure continuity over the MA to which the transmitting MEP belongs. No reply is sent by any MP in response to receiving a CCM.
LTM	Configure debug flags for Linktrace Message information. A CFM PDU initiated by a MEP to trace a path to a target MAC address, forwarded from MIP to MIP, up to the point at which the LTM reaches its target, a MEP, or can no longer be forwarded. Each MP along the path to the target generates an LTR.

Parameter	Description
LTR	Configure debug flags for Linktrace Reply information. A unicast CFM PDU sent by an MP to a MEP, in response to receiving an LTM from that MEP.
LBM	Configure debug flags for Loopback Message information. A unicast CFM PDU transmitted by a MEP, addressed to a specific MP, in the expectation of receiving an LBR.
LBR	Configure debug flags for Loopback Reply information. A unicast CFM PDU transmitted by an MP to a MEP, in response to an LBM received from that MEP.
PDU	Configure debug flags for CFM PDU information.

3.15.32 debug dot1x packet

Use this command to enable dot1x packet debug trace.

Default	disabled
Format	debug dot1x
Mode	Privileged EXEC

3.15.32.1 no debug dot1x packet

Use this command to disable dot1x packet debug trace.

Format	no debug dot1x
Mode	Privileged EXEC

3.15.33 debug fip-snooping packet

Use the `debug fip-snooping packet` command in Privileged EXEC mode to enable FIP packet debug trace on transmit or receive path with different filter options configured.

Default	disabled
Format	debug fip-snooping packet [{transmit receive filter {dst-mac <i>mac-addr</i> fip-protocol-code <i>1-15</i> src-intf <i>slot/port</i> src-mac <i>mac-addr</i> vlan <i>1-4093</i> }]
Mode	• User EXEC • Privileged EXEC

Parameter	Description
dst-mac	If the dst-mac filter option is given, trace output is filtered on matching the given Destination MAC Address.
fip-protocol-code	If the fip-protocol-code filter option is given, trace output is filtered on matching the supported types.
src-intf	If the src-intf filter option is given, trace output is filtered on matching the incoming source interface.
src-mac	If the src-mac filter option is given, trace output is filtered on matching the given Source MAC Address.
vlan	If the vlan filter option is given, trace output is filtered on matching the given VLAN ID.

3.15.33.1 no debug fip-snooping packet

Use the `no debug fip-snooping packet` command in Privileged EXEC mode to disable FIP packet debug trace on transmit or receive path with different filter options configured.

Format no debug fip-snooping packet [{transmit | receive | filter {dst-mac *mac-addr* | fip-proto-code 1-15 | src-intf *slot/port* | src-mac *mac-addr* | vlan 1-4093}]

Mode

- User EXEC
- Privileged EXEC

3.15.34 debug igmpsnooping packet

This command enables tracing of IGMP Snooping packets received and transmitted by the switch.

Default disabled

Format debug igmpsnooping packet

Mode Privileged EXEC

3.15.34.1 no debug igmpsnooping packet

This command disables tracing of IGMP Snooping packets.

Format no debug igmpsnooping packet

Mode Privileged EXEC

3.15.35 debug igmpsnooping packet transmit

This command enables tracing of IGMP Snooping packets transmitted by the switch. Snooping should be enabled on the device and the interface in order to monitor packets for a particular interface.

Default disabled

Format debug igmpsnooping packet transmit

Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 02:45:06 192.168.17.29-1 IGMP Snooping[185429992]: igmp_snooping_debug.c(116) 908 % Pkt TX
- Intf: 0/20(20), Vlan_Id:1 Src_Mac: 00:03:0e:00:00:00 Dest_Mac: 01:00:5e:00:00:01 Src_IP: 9.1.1.1
Dest_IP: 225.0.0.1 Type: V2_Membership_Report Group: 225.0.0.1
```

The following parameters are displayed in the trace message:

Parameter	Definition
TX	A packet transmitted by the device.
Intf	The interface that the packet went out on. Format used is slot/port (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
Src_Mac	Source MAC address of the packet.
Dest_Mac	Destination multicast MAC address of the packet.
Src_IP	The source IP address in the IP header in the packet.
Dest_IP	The destination multicast IP address in the packet.

Parameter	Definition
Type	The type of IGMP packet. Type can be one of the following: • Membership Query – IGMP Membership Query • V1_Membership_Report – IGMP Version 1 Membership Report • V2_Membership_Report – IGMP Version 2 Membership Report • V3_Membership_Report – IGMP Version 3 Membership Report • V2_Leave_Group – IGMP Version 2 Leave Group
Group	Multicast group address in the IGMP header.

3.15.35.1 no debug igmpsnooping transmit

This command disables tracing of transmitted IGMP snooping packets.

Format no debug igmpsnooping transmit

Mode Privileged EXEC

3.15.36 debug igmpsnooping packet receive

This command enables tracing of IGMP Snooping packets received by the switch. Snooping should be enabled on the device and the interface in order to monitor packets for a particular interface.

Default disabled

Format debug igmpsnooping packet receive

Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 02:45:06 192.168.17.29-1 IGMP Snoop[185429992]: igmp_snooping_debug.c(116) 908 % Pkt RX
- Intf: 0/20(20), Vlan_Id:1 Src_Mac: 00:03:0e:00:00:10 Dest_Mac: 01:00:5e:00:00:05 Src_IP: 11.1.1.1
Dest_IP: 225.0.0.5 Type: Membership_Query Group: 225.0.0.5
```

The following parameters are displayed in the trace message:

Parameter	Definition
RX	A packet received by the device.
Intf	The interface that the packet went out on. Format used is slot/port (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
Src_Mac	Source MAC address of the packet.
Dest_Mac	Destination multicast MAC address of the packet.
Src_IP	The source IP address in the ip header in the packet.
Dest_IP	The destination multicast ip address in the packet.
Type	The type of IGMP packet. Type can be one of the following: • Membership_Query – IGMP Membership Query • V1_Membership_Report – IGMP Version 1 Membership Report • V2_Membership_Report – IGMP Version 2 Membership Report • V3_Membership_Report – IGMP Version 3 Membership Report • V2_Leave_Group – IGMP Version 2 Leave Group
Group	Multicast group address in the IGMP header.

3.15.36.1 no debug igmpsnooping receive

This command disables tracing of received IGMP Snooping packets.

Format no debug igmpsnooping receive

Mode Privileged EXEC

3.15.37 debug ip acl

Use this command to enable debug of IP Protocol packets matching the ACL criteria.

Default disabled

Format debug ip acl *acl Number*

Mode Privileged EXEC

3.15.37.1 no debug ip acl

Use this command to disable debug of IP Protocol packets matching the ACL criteria.

Format no debug ip acl *acl Number*

Mode Privileged EXEC

3.15.38 debug ip dvmrp packet

Use this command to trace DVMRP packet reception and transmission. **receive** traces only received DVMRP packets and **transmit** traces only transmitted DVMRP packets. When neither keyword is used in the command, then all DVMRP packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console

Default disabled

Format debug ip dvmrp packet [receive | transmit]

Mode Privileged EXEC

3.15.38.1 no debug ip dvmrp packet

Use this command to disable debug tracing of DVMRP packet reception and transmission.

Format no debug ip dvmrp packet [receive | transmit]

Mode Privileged EXEC

3.15.39 debug ip igmp packet

Use this command to trace IGMP packet reception and transmission. **receive** traces only received IGMP packets and **transmit** traces only transmitted IGMP packets. When neither keyword is used in the command, then all IGMP packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

Default disabled

Format debug ip igmp packet [receive | transmit]

Mode Privileged EXEC

3.15.39.1 no debug ip igmp packet

Use this command to disable debug tracing of IGMP packet reception and transmission.

Format no debug ip igmp packet [receive | transmit]

Mode Privileged EXEC

3.15.40 debug ip mcache packet

Use this command for tracing MDATA packet reception and transmission. **receive** traces only received data packets and **transmit** traces only transmitted data packets. When neither keyword is used in the command, then all data packet traces are dumped. Vital information such as source address, destination address, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

Default disabled

Format debug ip mcache packet [receive | transmit]

Mode Privileged EXEC

3.15.40.1 no debug ip mcache packet

Use this command to disable debug tracing of MDATA packet reception and transmission.

Format no debug ip mcache packet [receive | transmit]

Mode Privileged EXEC

3.15.41 debug ip pimdm packet

Use this command to trace PIMDM packet reception and transmission. **receive** traces only received PIMDM packets and **transmit** traces only transmitted PIMDM packets. When neither keyword is used in the command, then all PIMDM packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

Default disabled

Format debug ip pimdm packet [receive | transmit]

Mode Privileged EXEC

3.15.41.1 no debug ip pimdm packet

Use this command to disable debug tracing of PIMDM packet reception and transmission.

Format no debug ip pimdm packet [receive | transmit]

Mode Privileged EXEC

3.15.42 debug ip pimsm packet

Use this command to trace PIMSM packet reception and transmission. **receive** traces only received PIMSM packets and **transmit** traces only transmitted PIMSM packets. When neither keyword is used in the command, then all PIMSM packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

Default disabled
Format debug ip pimsm packet [receive | transmit]
Mode Privileged EXEC

3.15.42.1 no debug ip pimsm packet

Use this command to disable debug tracing of PIMSM packet reception and transmission.

Format no debug ip pimsm packet [receive | transmit]
Mode Privileged EXEC

3.15.43 debug ip vrrp

Use this command to enable VRRP debug protocol messages.

Default disabled
Format debug ip vrrp
Mode Privileged EXEC

3.15.43.1 no debug ip vrrp

Use this command to disable VRRP debug protocol messages.

Format no debug ip vrrp
Mode Privileged EXEC

3.15.44 debug ipv6 dhcp

This command displays “debug” information about DHCPv6 client activities and traces DHCPv6 packets to and from the local DHCPv6 client.

Default disabled
Format debug ipv6 dhcp
Mode Privileged EXEC

3.15.44.1 no debug ipv6 dhcp

This command disables the display of “debug” trace output for DHCPv6 client activity.

Format no debug ipv6 dhcp
Mode Privileged EXEC

3.15.45 debug ipv6 mcache packet

Use this command for tracing MDATAv6 packet reception and transmission. **receive** traces only received data packets and **transmit** traces only transmitted data packets. When neither keyword is used in the command, then all data packet traces are dumped. Vital information such as source address, destination address, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

Default disabled
Format debug ipv6 mcache packet [receive | transmit]
Mode Privileged EXEC

3.15.45.1 no debug ipv6 mcache packet

Use this command to disable debug tracing of MDATAv6 packet reception and transmission.

Format no debug ipv6 mcache packet [receive | transmit]
Mode Privileged EXEC

3.15.46 debug ipv6 mld packet

Use this command to trace MLDv6 packet reception and transmission. **receive** traces only received MLDv6 packets and **transmit** traces only transmitted MLDv6 packets. When neither keyword is used in the command, then all MLDv6 packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

Default disabled
Format debug ipv6 mld packet [receive | transmit]
Mode Privileged EXEC

3.15.46.1 no debug ipv6 mld packet

Use this command to disable debug tracing of MLDv6 packet reception and transmission.

Format no debug ipv6 mld packet [receive | transmit]
Mode Privileged EXEC

3.15.47 debug ipv6 ospfv3 packet

Use this command to enable IPv6 OSPFv3 packet debug trace.

Default disabled
Format debug ipv6 ospfv3 packet
Mode Privileged EXEC

3.15.47.1 no debug ipv6 ospfv3 packet

Use this command to disable tracing of IPv6 OSPFv3 packets.

Format no debug ipv6 ospfv3 packet
Mode Privileged EXEC

3.15.48 debug ipv6 pimdm packet

Use this command to trace PIMDMv6 packet reception and transmission. **receive** traces only received PIMDMv6 packets and **transmit** traces only transmitted PIMDMv6 packets. When neither keyword is used in the command, then all PIMDMv6 packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

Default	disabled
Format	debug ipv6 pimdm packet [receive transmit]
Mode	Privileged EXEC

3.15.48.1 no debug ipv6 pimdm packet

Use this command to disable debug tracing of PIMDMv6 packet reception and transmission.

3.15.49 debug ipv6 pimsm packet

Use this command to trace PIMSMv6 packet reception and transmission. **receive** traces only received PIMSMv6 packets and **transmit** traces only transmitted PIMSMv6 packets. When neither keyword is used in the command, then all PIMSMv6 packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

Default	disabled
Format	debug ipv6 pimsm packet [receive transmit]
Mode	Privileged EXEC

3.15.49.1 no debug ipv6 pimsm packet

Use this command to disable debug tracing of PIMSMv6 packet reception and transmission.

Format	no debug ipv6 pimsm packet [receive transmit]
Mode	Privileged EXEC

3.15.50 debug lacp packet

This command enables tracing of LACP packets received and transmitted by the switch.

Default	disabled
Format	debug lacp packet
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 14:04:51 10.254.24.31-1 DOT3AD[183697744]: dot3ad_debug.c(385) 58 %  
Pkt TX - Intf: 0/1(1), Type: LACP, Sys: 00:11:88:14:62:e1, State: 0x47, Key:  
0x36
```

3.15.50.1 no debug lacp packet

This command disables tracing of LACP packets.

Format no debug lacp packet

Mode Privileged EXEC

3.15.51 debug mldsnooping packet

Use this command to trace MLD snooping packet reception and transmission. **receive** traces only received MLD snooping packets and **transmit** traces only transmitted MLD snooping packets. When neither keyword is used in the command, then all MLD snooping packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

Default disabled

Format debug mldsnooping packet [receive | transmit]

Mode Privileged EXEC

3.15.51.1 no debug mldsnooping packet

Use this command to disable debug tracing of MLD snooping packet reception and transmission.

3.15.52 debug ospf packet

This command enables tracing of OSPF packets received and transmitted by the switch or, optionally, a virtual router can be specified.

Default disabled

Format debug ospf packet

Mode Privileged EXEC

Sample outputs of the trace messages are shown below.

```
<15> JAN 02 11:03:31 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(297) 25430 % Pkt RX - Intf:0/48 Src
Ip:192.168.50.2 DestIp:224.0.0.5 AreaId:0.0.0.0 Type:HELLO NetMask:255.255.255.0 D
esigRouter:0.0.0.0 Backup:0.0.0.0
```

```
<15> JAN 02 11:03:35 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(293) 25431 % Pkt TX - Intf:0/48 Src
Ip:10.50.50.1 DestIp:192.168.50.2 AreaId:0.0.0.0 Type:DB_DSCR Mtu:1500 Options:E
Flags: I/M/MS Seq:126166
```

```
<15> JAN 02 11:03:36 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(297) 25434 % Pkt RX - Intf:0/48 Src
Ip:192.168.50.2 DestIp:192.168.50.1 AreaId:0.0.0.0 Type:LS_REQ Length: 1500
```

```
<15> JAN 02 11:03:36 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(293) 25435 % Pkt TX - Intf:0/48 Src
Ip:10.50.50.1 DestIp:192.168.50.2 AreaId:0.0.0.0 Type:LS_UPD Length: 1500
```

```
<15> JAN 02 11:03:37 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(293) 25441 % Pkt TX - Intf:0/48 Src
Ip:10.50.50.1 DestIp:224.0.0.6 AreaId:0.0.0.0 Type:LS_ACK Length: 1500
```

The following parameters are displayed in the trace message:

Parameter	Definition
TX/RX	TX refers to a packet transmitted by the device. RX refers to packets received by the device.
Intf	The interface that the packet came in or went out on. Format used is slot/port (internal interface number).
SrcIp	The source IP address in the IP header of the packet.
DestIp	The destination IP address in the IP header of the packet.
AreaId	The area ID in the OSPF header of the packet.
Type	Could be one of the following: HELLO – Hello packet DB_DSCR – Database descriptor LS_REQ – LS Request LS_UPD – LS Update LS_ACK – LS Acknowledge

The remaining fields in the trace are specific to the type of OSPF Packet.

HELLO packet field definitions:

Parameter	Definition
Netmask	The netmask in the hello packet.
DesignRouter	Designated Router IP address.
Backup	Backup router IP address.

DB_DSCR packet field definitions:

Field	Definition
MTU	MTU
Options	Options in the OSPF packet.
Flags	Could be one or more of the following: • I – Init • M – More • MS – Master/Slave
Seq	Sequence Number of the DD packet.

LS_REQ packet field definitions.

Field	Definition
Length	Length of packet

LS_UPD packet field definitions.

Field	Definition
Length	Length of packet

LS_ACK packet field definitions.

Field	Definition
Length	Length of packet

3.15.52.1 no debug ospf packet

This command disables tracing of OSPF packets.

Format no debug ospf packet

Mode Privileged EXEC

3.15.53 debug ospfv3 packet

Use this command to enable OSPFv3 packet debug trace.

Default disabled

Format debug ospfv3 packet

Mode Privileged EXEC

3.15.53.1 no debug ospfv3 packet

Use this command to disable tracing of OSPFv3 packets.

Format no debug ospfv3 packet

Mode Privileged EXEC

3.15.54 debug ping packet

This command enables tracing of ICMP echo requests and responses. The command traces pings on the network port/ service port for switching packages. For routing packages, pings are traced on the routing ports as well.

Default disabled

Format debug ping packet

Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 00:21:22 192.168.17.29-1 SIM[181040176]: sim_debug.c(128) 20 % Pkt TX - Intf: 0/1(1), SRC_IP:10.50.50.2, DEST_IP:10.50.50.1, Type:ECHO_REQUEST
```

```
<15> JAN 01 00:21:22 192.168.17.29-1 SIM[182813968]: sim_debug.c(82) 21 % Pkt RX - Intf: 0/1(1), SRC_IP:10.50.50.1, DEST_IP:10.50.50.2, Type:ECHO_REPLY
```

The following parameters are displayed in the trace message:

Parameter	Definition
TX/RX	TX refers to a packet transmitted by the device. RX refers to packets received by the device.
Intf	The interface that the packet came in or went out on. Format used is slot/port (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
SRC_IP	The source IP address in the IP header in the packet.

Parameter	Definition
DEST_IP	The destination IP address in the IP header in the packet.
Type	Type determines whether or not the ICMP message is a REQUEST or a RESPONSE.

3.15.54.1 no debug ping packet

This command disables tracing of ICMP echo requests and responses.

Format no debug ping packet
Mode Privileged EXEC

3.15.55 debug rip packet

This command turns on tracing of RIP requests and responses. This command takes no options. The output is directed to the log file.

Default disabled
Format debug rip packet
Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 00:35:15 192.168.17.29-1 RIP[181783160]: rip_map_debug.c(96) 775 %
Pkt RX on Intf: 0/1(1), Src_IP:43.1.1.1 Dest_IP:43.1.1.2
Rip_Version: RIPv2 Packet_Type:RIP_RESPONSE
ROUTE 1): Network: 10.1.1.0 Mask: 255.255.255.0 Metric: 1
ROUTE 2): Network: 40.1.0.0 Mask: 255.255.0.0 Metric: 1
ROUTE 3): Network: 10.50.50.0 Mask: 255.255.255.0 Metric: 1
ROUTE 4): Network: 41.1.0.0 Mask: 255.255.0.0 Metric: 1
ROUTE 5): Network:42.0.0.0 Mask:255.0.0.0 Metric:1
Another 6 routes present in packet not displayed.
```

The following parameters are displayed in the trace message:

Parameter	Definition
TX/RX	TX refers to a packet transmitted by the device. RX refers to packets received by the device.
Intf	The interface that the packet came in or went out on. Format used is slot/port (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
Src_IP	The source IP address in the IP header of the packet.
Dest_IP	The destination IP address in the IP header of the packet.
Rip_Version	RIP version used: RIPv1 or RIPv2.
Packet_Type	Type of RIP packet: RIP_REQUEST or RIP_RESPONSE.
Routes	Up to 5 routes in the packet are displayed in the following format: Network: <i>a.b.c.d</i> Mask <i>a.b.c.d</i> Next_Hop <i>a.b.c.d</i> Metric <i>a</i> The next hop is only displayed if it is different from 0.0.0.0. For RIPv1 packets, Mask is always 0.0.0.0.
Number of routes not printed	Only the first five routes present in the packet are included in the trace. There is another notification of the number of additional routes present in the packet that were not included in the trace.

3.15.55.1 no debug rip packet

This command disables tracing of RIP requests and responses.

Format no debug rip packet

Mode Privileged EXEC

3.15.56 debug sflow packet

Use this command to enable sFlow debug packet trace.

Default disabled

Format debug sflow packet

Mode Privileged EXEC

3.15.56.1 no debug sflow packet

Use this command to disable sFlow debug packet trace.

Format no debug sflow packet

Mode Privileged EXEC

3.15.57 debug spanning-tree bpdu

This command enables tracing of spanning tree BPDUs received and transmitted by the switch.

Default disabled

Format debug spanning-tree bpdu

Mode Privileged EXEC

3.15.57.1 no debug spanning-tree bpdu

This command disables tracing of spanning tree BPDUs.

Format no debug spanning-tree bpdu

Mode Privileged EXEC

3.15.58 debug spanning-tree bpdu receive

This command enables tracing of spanning tree BPDUs received by the switch. Spanning tree should be enabled on the device and on the interface in order to monitor packets for a particular interface.

Default disabled

Format debug spanning-tree bpdu receive

Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 01:02:04 192.168.17.29-1 DOT1S[191096896]: dot1s_debug.c(1249) 101 % Pkt RX - Intf: 0/
9(9), Source_Mac: 00:11:88:4e:c2:10 Version: 3, Root Mac: 00:11:88:4e:c2:00, Root Priority: 0x8000
Path Cost: 0
```

The following parameters are displayed in the trace message:

Parameter	Definition
RX	A packet received by the device.
Intf	The interface that the packet came in on. Format used is unit/port/slot (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
Source_Mac	Source MAC address of the packet.
Version	Spanning tree protocol version (0-3). 0 refers to STP, 2 RSTP and 3 MSTP.
Root_Mac	MAC address of the CIST root bridge.
Root_Priority	Priority of the CIST root bridge. The value is between 0 and 61440. It is displayed in hex in multiples of 4096.
Path_Cost	External root path cost component of the BPDU.

3.15.58.1 no debug spanning-tree bpd receive

This command disables tracing of received spanning tree BPDUs.

Format no debug spanning-tree bpd receive

Mode Privileged EXEC

3.15.59 debug spanning-tree bpd transmit

This command enables tracing of spanning tree BPDUs transmitted by the switch. Spanning tree should be enabled on the device and on the interface in order to monitor packets on a particular interface.

Default disabled

Format debug spanning-tree bpd transmit

Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 01:02:04 192.168.17.29-1 DOT1S[191096896]: dot1s_debug.c(1249) 101 % Pkt TX - Intf: 0/7(7), Source_Mac: 00:11:88:4e:c2:00 Version: 3, Root_Mac: 00:11:88:4e:c2:00, Root_Priority: 0x8000 Path_Cost: 0
```

The following parameters are displayed in the trace message:

Parameter	Definition
TX	A packet transmitted by the device.
Intf	The interface that the packet went out on. Format used is unit/port/slot (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
Source_Mac	Source MAC address of the packet.
Version	Spanning tree protocol version (0-3). 0 refers to STP, 2 RSTP and 3 MSTP.
Root_Mac	MAC address of the CIST root bridge.
Root_Priority	Priority of the CIST root bridge. The value is between 0 and 61440. It is displayed in hex in multiples of 4096.
Path_Cost	External root path cost component of the BPDU.

3.15.59.1 no debug spanning-tree bpd transmit

This command disables tracing of transmitted spanning tree BPDUs.

Format no debug spanning-tree bpdv transmit

Mode Privileged EXEC

3.15.60 debug tacacs

Use the `debug tacacs packet` command to turn on TACACS+ debugging.

Format debug tacacs {packet [receive | transmit] | accounting | authentication}

Mode Global Config

Parameter	Description
packet receive	Turn on TACACS+ receive packet debugs.
packet transmit	Turn on TACACS+ transmit packet debugs.
accounting	Turn on TACACS+ authentication debugging.
authentication	Turn on TACACS+ authorization debugging.

3.15.61 debug telnetd start

Use this command to start the debug telnet daemon. The debug telnet daemon gives access to a Linux shell prompt. The telnet user ID is "root". If the telnet daemon is already running when this command is issued, the command stops and restarts the telnet daemon.

Format debug telnetd start [password][port]

Mode Privileged EXEC

Parameter	Description
password	The optional telnet password. If no password is specified, the default password lvl7dbg is used.
port	The optional telnet port number. If no telnet port is specified, the default port 2323 is used.

3.15.62 debug telnetd stop

Use this command to stop the telnet daemon previously started by the `debug telnetd start` command. If the daemon is not running when this command is issued, the command has no effect.

Format debug telnetd stop

Mode Privileged EXEC

3.15.63 debug transfer

This command enables debugging for file transfers.

Format debug transfer

Mode Privileged EXEC

3.15.63.1 no debug transfer

This command disables debugging for file transfers.

Format no debug transfer

Mode Privileged EXEC

3.15.64 debug udld events

This command enables debugging for the UDLD events.

Default Disabled

Format debug udld events

Mode Privileged EXEC

3.15.65 debug udld packet receive

This command enables debugging on the received UDLD PDU's.

Default Disabled

Format debug udld packet receive

Mode Privileged EXEC

3.15.66 debug udld packet transmit

This command enables debugging on the transmitted UDLD PDU's.

Default Disabled

Format debug udld packet transmit

Mode Privileged EXEC

3.15.67 show debugging

Use the `show debugging` command to display enabled packet tracing configurations.

Format show debugging

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
console# debug arp
Arp packet tracing enabled.
```

```
console# show debugging
Arp packet tracing enabled.
```

3.15.67.1 no show debugging

Use the `no show debugging` command to disable packet tracing configurations.

Format no show debugging

Mode Privileged EXEC

3.15.68 exception protocol

Use this command to specify the protocol used to store the core dump file.

**Note...**

This command is only available on selected Linux-based platforms.

Default	None
Format	exception protocol {nfs tftp ftp local usb none}
Mode	Global Config

3.15.68.1 no exception protocol

Use this command to reset the exception protocol configuration to its factory default value.

**Note...**

This command is only available on Linux-based platforms.

Default	None
Format	no exception protocol
Mode	Global Config

3.15.69 exception dump tftp-server

Use this command to configure the IP address of a remote TFTP server in order to dump core files to an external server.

**Note...**

This command is only available on selected Linux-based platforms.

Default	None
Format	exception dump tftp-server {ip-address}
Mode	Global Config

3.15.69.1 no exception dump tftp-server

Use this command to reset the exception dump remote server configuration to its factory default value.

**Note...**

This command is only available on selected Linux-based platforms.

Default	None
Format	no exception dump tftp-server
Mode	Global Config

3.15.70 exception dump nfs

Use this command to configure an NFS mount point in order to dump core file to the NFS file system.

**Note...**

This command is only available on selected Linux-based platforms.

Default	None
Format	exception dump nfs <i>ip-address/dir</i>
Mode	Global Config

3.15.70.1 no exception dump nfs

Use this command to reset the exception dump NFS mount point configuration to its factory default value.

**Note...**

This command is only available on selected Linux-based platforms.

Default	None
Format	no exception dump nfs
Mode	Global Config

3.15.71 exception dump filepath

Use this command to configure a file-path to dump core file to a TFTP server, NFS mount or USB device subdirectory.

**Note...**

This command is only available on selected Linux-based platforms.

Default	None
Format	exception dump filepath <i>dir</i>
Mode	Global Config

3.15.71.1 no exception dump filepath

Use this command to reset the exception dump filepath configuration to its factory default value.

**Note...**

This command is only available on selected Linux-based platforms.

Default	None
Format	exception dump filepath
Mode	Global Config

3.15.72 exception core-file

Use this command to configure a prefix for a core-file name. The core file name is generated with the prefix as follows:

If `hostname` is selected:

file-name-prefix_hostname_Time_Stamp.bin

If `hostname` is not selected:

file-name-prefix_MAC_Address_Time_Stamp.bin

If `hostname` is configured the core file name takes the `hostname`, otherwise the core-file names uses the MAC address when generating a core dump file. The prefix length is 15 characters.

**Note...**

This command is only available on selected Linux-based platforms.

Default	Core
Format	exception core-file { <i>file-name-prefix</i> [<code>hostname</code>] [<code>time-stamp</code>]}
Mode	Global Config

3.15.72.1 no exception core-file

Use this command to reset the exception core file prefix configuration to its factory default value. The `hostname` and `time-stamp` are disabled.

**Note...**

This command is only available on selected Linux-based platforms.

Default	Core
Format	no exception core-file
Mode	Global Config

3.15.73 exception switch-chip-register

This command enables or disables the switch-chip-register dump in case of an exception. The switch-chip-register dump is taken only for a master unit and not for member units

**Note...**

This command is only available on selected Linux-based platforms.

Default	Disable
Format	exception switch-chip-register { <code>enable</code> <code>disable</code> }
Mode	Global Config

3.15.74 exception dump ftp-server

This command configures the IP address of remote FTP server to dump core files to an external server. If the username and password are not configured, the switch uses anonymous FTP. (The FTP server should be configured to accept anonymous FTP.)

Default None
Format exception dump ftp-server *ip-address* [{username *user-name* password *password*}]
Mode Global Config

3.15.74.1 no exception dump ftp-server

This command resets exception dump remote FTP server configuration to its factory default value. This command also resets the FTP username and password to empty string.

Default None
Format no exception dump ftp-server
Mode Global Config

3.15.75 exception dump compression

This command enables compression mode.

Default Enabled
Format exception dump compression
Mode Global Config

3.15.75.1 no exception dump compression

This command disables compression mode.

Default None
Format no exception compression
Mode Global Config

3.15.76 exception dump stack-ip-address protocol

This command configures protocol (dhcp or static) to be used to configure service port when a unit has crashed. If configured as dhcp then the unit gets the IP address from dhcp server available in the network.

Default dhcp
Format exception dump stack-ip-address protocol {dhcp | static}
Mode Global Config

3.15.76.1 no exception dump stack-ip-address protocol

This command resets stack IP protocol configuration (dhcp or static) to its default value.

Default	None
Format	<code>no exception dump stack-ip-address protocol</code>
Mode	Global Config

3.15.77 `exception dump stack-ip-address add`

This command adds static IP address to be assigned to individual unit's service port in the stack when the switch has crashed. This IP address is used to perform the core dump.

Default	None
Format	<code>exception dump stack-ip-address add ip-address netmask [gateway]</code>
Mode	Global Config

3.15.78 `exception dump stack-ip-address remove`

This command removes stack IP address configuration. If this IP address is assigned to any unit in the stack then this IP is removed from the unit.

Default	None
Format	<code>exception dump stack-ip-address remove ip-address netmask</code>
Mode	Global Config

3.15.79 `exception nmi`

This command enables or disables taking core dump in case of NMI occurs.

Default	Disable
Format	<code>exception nmi {enable disable}</code>
Mode	Global Config

3.15.80 `write core`

Use the `write core` command to generate a core dump file on demand. The `write core test` command is helpful when testing the core dump setup. For example, if the TFTP protocol is configured, `write core test` communicates with the TFTP server and informs the user if the TFTP server can be contacted. Similarly, if protocol is configured as `nfs`, this command mounts and unmounts the file system and informs the user of the status.



Note...

`write core` reloads the switch which is useful when the device malfunctions, but has not crashed.

For `write core test`, the destination file name is used for the TFTP test. Optionally, you can specify the destination file name when the protocol is configured as TFTP.



Note...

This command is only available on selected Linux-based platforms.

Default	None
Format	write core [test [<i>dest_file_name</i>]]
Mode	Privileged EXEC

3.15.81 debug exception

The command displays core dump features support.

Default	None
Format	debug exception
Mode	Privileged EXEC

3.15.82 show exception

Use this command to display the configuration parameters for generating a core dump file.



Note...

This command is only available on selected Linux-based platforms.

Default	None
Format	show exception
Mode	Privileged EXEC

Example: The following shows an example of this command.

```
show exception
```

```

Coredump file name           core
Coredump filename uses hostname  False
Coredump filename uses time-stamp TRUE
TFTP Server Address          TFTP server configuration
FTP Server IP                FTP server configuration
FTP user name                FTP user name
FTP password                 FTP password
NFS Mount point              NFS mount point configuration
File path                    Remote file path
Core File name prefix        Core file prefix configuration.
Hostname                     Core file name contains hostname if enabled.
Timestamp                    Core file name contains timestamp if enabled.
Switch Chip Register Dump    Switch chip register dump configuration
Compression mode              TRUE/FALSE
Stack IP Address Protocol     DHCP/Static
Stack IP Address              List of IP addresses configured

```

3.15.83 show exception core-dump-file

This command displays core dump files existing on the local file system.

Default	None
Format	show exception core-dump-file
Mode	Privileged EXEC, Config Mode

3.15.84 show exception log

This command displays core dump traces on the local file system.

Default None
Format show exception log [previous]
Mode Privileged EXEC, Config Mode

3.15.85 logging persistent

Use this command to configure the Persistent logging for the switch. The severity level of logging messages is specified at severity level. Possible values for severity level are (emergency|0, alert|1, critical|2, error|3, warning|4, notice|5, info|6, debug|7).

Default Disable
Format logging persistent *severity level*
Mode Global Config

3.15.85.1 no logging persistent

Use this command to disable the persistent logging in the switch.

Format no logging persistent
Mode Global Config

3.15.86 mbuf

Use this command to configure memory buffer (MBUF) threshold limits and generate notifications when MBUF limits have been reached.

Format mbuf {falling-threshold | rising threshold | severity}
Mode Global Config

Field	Description
Rising Threshold	The percentage of the memory buffer resources that, when exceeded for the configured rising interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
Falling Threshold	The percentage of memory buffer resources that, when usage falls below this level for the configured interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
Severity	The severity level at which Mbuf logs messages. The range is 1 to 7. The default is 5 (L7_LOG_SEVERITY_NOTICE).

3.15.87 show mbuf

Use this command to display the memory buffer (MBUF) Utilization Monitoring parameters.

Format show mbuf
Mode Privileged EXEC

Field	Description
Rising Threshold	The percentage of the memory buffer resources that, when exceeded for the configured rising interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
Falling Threshold	The percentage of memory buffer resources that, when usage falls below this level for the configured interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
Severity	The severity level.

3.15.88 `show mbuf total`

Use this command to display memory buffer (MBUF) information.

Format `show mbuf total`

Mode Privileged EXEC

Field	Description
Mbufs Total	Total number of message buffers in the system.
Mbufs Free	Number of message buffers currently available.
Mbufs Rx Used	Number of message buffers currently in use.
Total Rx Norm Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX Norm.
Total Rx Mid2 Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX Mid2.
Total Rx Mid1 Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX Mid1.
Total Rx Mid0 Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX Mid0.
Total Rx High Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX High.
Total Tx Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class TX.
Total Rx Norm Alloc Failures	Number of message buffer allocation failures for RX Norm class of message buffer.
Total Rx Mid2 Alloc Failures	Number of message buffer allocation failures for RX Mid2 class of message buffer.
Total Rx Mid1 Alloc Failures	Number of message buffer allocation failures for RX Mid1 class of message buffer.
Total Rx Mid0 Alloc Failures	Number of message buffer allocation failures for RX Mid0 class of message buffer.
Total Rx High Alloc Failures	Number of message buffer allocation failures for RX High class of message buffer.
Total Tx Alloc Failures	Number of message buffer allocation failures for TX class of message buffer.

3.15.89 `show msg-queue`

Use this command to display the message queues.

Default	None
Format	<code>show msg-queue</code>
Mode	Privileged EXEC mode

3.15.90 `debug packet-trace`

Use this command to enable traces for the packet trace feature.

Default	None
Format	<code>debug packet-trace</code>
Mode	Privileged Exec

3.15.91 `packet-trace eth`

Use this command to specify the ethernet packet fields for a packets for which a trace profile is required. If the optional `vlan` parameter is not specified, the PVID/internal VLAN associated with the ingress port (specified in the `show packet-trace` command) is used in the VLAN tag.

Default	None
Format	<code>packet-trace eth src-mac <i>src-mac</i> dst-mac <i>dst-mac</i> vlan <i>vlan</i></code>
Mode	Privileged Exec

3.15.92 `packet-trace ipv4`

Use this command to specify the IPv4 packet header fields.

Default	None
Format	<code>packet-trace ipv4 src-ip <i>src-ip</i> dst-ip <i>dst-ip</i> tos <i>tos</i></code>
Mode	Privileged Exec

3.15.93 `packet-trace ipv6`

Use this command to specify the IPv6 packet header fields.

Default	None
Format	<code>packet-trace ipv6 src-ip <i>src-ip</i> dst-ip <i>dst-ip</i> tos <i>tos</i></code>
Mode	Privileged Exec

3.15.94 `packet-trace l4`

Use this command to specify TCP packet fields.

Default	None
Format	<code>packet-trace l4 src-port <i>src-port</i> dst-port <i>dst-port</i></code>
Mode	Privileged Exec

3.15.95 show packet-trace ecmp

Use this command for getting a summary (link utilization percentage) for all complete packets present in the PCAP file (uploaded onto the system using the copy command).

Default	None
Format	show packet-trace ecmp <i>prefix/prefix-length</i> port <i>unit/slot/port</i> pcap summary
Mode	Privileged Exec

3.15.96 show packet-trace lag

Use this command for getting a summary (link utilization percentage) for all complete packets present in the PCAP file (uploaded onto the system using the copy command).

Default	None
Format	show packet-trace lag <i>lag-id</i> port <i>unit/slot/port</i> pcap summary
Mode	Privileged Exec

Example:

```
(Routing)#show packet-trace lag 1 port 0/1 pcap summary
```

```
LAG ..... 3/1
Link State..... Up
Admin Mode..... Enabled
Type..... Static
Port-channel Min-links..... 1
Load Balance Option..... 3
(Src/Dest MAC, VLAN, EType, incoming port)
```

Mbr Ports	Device/ Timeout	Port Speed	Port Active
0/3	actor/long	10G Full	True
	partner/long		
0/2	actor/long	10G Full	True
	partner/long		

```
LAG 1 member port link utilization %:
```

```
-----
Total number of valid packets in pcap file: 20
Member port 0/3 utilization: 20%
Member port 0/4 utilization: 80%
```

3.15.97 show packet-trace packet-data

Use this command to dump all the configured packet header fields.

Default	By default, all packet fields are set to 0.
Format	show packet-trace trace-data
Mode	Privileged Exec

Example:

```
DUT#show packet-trace packet-data
```

```
L2 Header fields:
```

```
-----
Src MAC: 00 00 00 0a 0b 0c
Dst MAC: 00 00 00 0d 0e 0f
VLAN: 10
```

```
L3 Header fields:
```

```
-----
IPv4:
Src IP: 10.0.10.1
Dst IP: 10.0.10.10
TOS: 0
```

```
IPv6:
```

```
Src IP: 4001::1/8
Dst IP: 5001::1/8
Traffic Class: 0
```

```
L4 header fields:
```

```
-----
Src Port: 80
Dst Port: 80
```

```
3.15.98      show packet-trace port
```

Use this command for getting detailed information for the maximum packets in the PCAP file.

Default	None
Format	show packet-trace port <i>unit/slot/port</i> pcap detailed <i>maxpkts</i>
Mode	Privileged Exec

Example:

```
DUT#show packet-trace port 0/1 pcap detailed 5
```

```

          Packet fields:
src-Mac   -----   00:00:00:00:00:0a
dst-mac   -----   00:00:00:00:00:0b
vlan      -----   10
src-ip    -----   10.0.1.10
dst-ip    -----   10.0.1.20
```

```

LAG          Destination member port
-----
Lag 1              0/4
```

```

          Packet fields:
src-Mac   -----   00:00:00:00:00:0c
dst-mac   -----   00:00:00:00:00:0d
vlan      -----   10
src-ip    -----   10.0.1.10
dst-ip    -----   10.0.1.20
```

```

LAG          Destination member port
-----
Lag 1              0/3
```

Packet fields:

```

src-Mac      -----  00:00:00:00:00:0e
dst-mac      -----  00:00:00:00:00:0f
vlan         -----  10
src-ip       -----  10.0.1.10
dst-ip       -----  10.0.1.20

```

```

LAG          Destination member port
-----
Lag 1        0/2

```

Packet fields:

```

src-Mac      -----  00:00:00:00:00:1a
dst-mac      -----  00:00:00:00:00:1b
vlan         -----  10
src-ip       -----  10.0.1.10
dst-ip       -----  10.0.1.20

```

```

LAG          Destination member port
-----
Lag 1        0/4

```

Packet fields:

```

src-Mac      -----  00:00:00:00:00:1c
dst-mac      -----  00:00:00:00:00:1d
vlan         -----  10
src-ip       -----  10.0.1.10
dst-ip       -----  10.0.1.20

```

```

LAG          Destination member port
-----
Lag 1        0/3

```

3.15.99 show packet-trace port eth

Use this command to retrieve the trace profile for an ethernet packet created from the configured packet fields. The trace profile indicates if the packet went out on LAG/ECMP route and also the corresponding member/link information.

Default None

Format show packet-trace port *unit/slot/port* eth

Mode Privileged Exec

Example:

```
(Routing)# show packet-trace port 0/1 eth
```

```

LAG          Destination member port
-----
Lag 1        0/3

LAG ..... 3/1
Link State..... Up
Admin Mode..... Enabled
Type..... Static
Port-channel Min-links..... 1
Load Balance Option..... 3
(Src/Dest MAC, VLAN, EType, incoming port)

```

```
Mbr    Device/        Port        Port
```

Ports	Timeout	Speed	Active
0/3	actor/long	10G Full	True
	partner/long		
0/2	actor/long	10G Full	True
	partner/long		

3.15.100 show packet-trace port ipv4

Use this command to retrieve the trace profile for an IPv4 packet created from the configured packet fields. The trace profile indicates if the packet went out on LAG/ECMP route and also the corresponding member/link information. Note that in order to get the trace profile for an IP packet, both the Ethernet and IP packet fields need to be configured.

Default	None
Format	show packet-trace port <i>unit/slot/port</i> ipv4
Mode	Privileged Exec

Example:

```
(Routing)# show packet-trace port 0/1 ipv4
ECMP          Egress port          Next Hop IP
-----
10.0.0.2/16    0/4                               3.3.3.3
```

ECMP routes to 10.0.0.2/16:

```
-----
via 3.3.3.3 on interface 0/4
via 2.2.2.2 on interface 0/5
```

3.15.101 show packet-trace port ipv6

Use this command to retrieve the trace profile for an IPv6 packet created from the configured packet fields. The trace profile indicates if the packet went out on LAG/ECMP route and also the corresponding member/link information. Note that in order to get the trace profile for an IP packet, both the ethernet and IP packet fields need to be configured.

Default	None
Format	show packet-trace port <i>unit/slot/port</i> ipv6
Mode	Privileged Exec

Example:

```
(Routing)# show packet-trace port 0/1 udpv6
```

```
ECMP          Egress port          Next Hop IP
-----
6001::200/64    0/4                               8001::200
```

ECMP routes to 6001::200/64:

```
-----
via 8001::200 on interface 0/32
via 7001::200 on interface 0/5
```

3.15.102 show packet-trace port tcpv4

Use this command to get the egress LAG member port for a L3 IPv4 packet specified by the configured packet fields and to get the egressing ECMP route link information (physical port) for a TCP-IPv4 packet specified by the configured packet fields. Note that, in order to get the trace profile for a TCP packet, the L2, L3, and L4 packet fields need to be configured.

Default None
Format show packet-trace port *unit/slot/port* tcpv4
Mode Privileged Exec

3.15.103 show packet-trace port tcpv6

Use this command to retrieve the trace profile for a TCP-IPv6 packet created from the configured packet fields. The trace profile indicates if the packet went out on LAG/ECMP route and also the corresponding member/link information. Note that in order to get the trace profile for a TCP packet, the ethernet, IP and L4 packet fields need to be configured.

Default None
Format show packet-trace port *unit/slot/port* tcpv6
Mode Privileged Exec

3.15.104 show packet-trace port udpv4

Use this command to retrieve the trace profile for a UDP-IPv4 packet created from the configured packet fields. The trace profile indicates if the packet went out on LAG/ECMP route and also the corresponding member/link information. Note that in order to get the trace profile for a UDP packet, the ethernet, IP and L4 packet fields need to be configured.

Default None
Format show packet-trace port *unit/slot/port* udpv4
Mode Privileged Exec

3.15.105 show packet-trace port udpv6

Use this command to retrieve the trace profile for a UDP-IPv6 packet created from the configured packet fields. The trace profile indicates if the packet went out on LAG/ECMP route and also the corresponding member/link information. Note that in order to get the trace profile for a UDP packet, the ethernet, IP and L4 packet fields need to be configured.

Default None
Format show packet-trace port *unit/slot/port* udpv6
Mode Privileged Exec

3.15.106 clear packet-trace packet-data

Use this command to clear the configured packet header fields.

Format clear packet-trace packet-data
Mode Privileged Exec

3.15.107 session start

Use this command to initiate a console session from the stack master to another unit in the stack, or from a member unit to a manager or another member unit. During the session, troubleshooting and debugging commands can be issued on the member unit, and the output displays the relevant information from the member unit specified in the session. Commands are displayed on the member unit using the user help option ?.

Default Disable
Format session start {unit *unit-number* | manager}
Mode Global Config

Parameter	Description
unit	Use to connect to the specified unit from the stack master.
manager	Use to connect directly to the manager unit from any member unit without entering the manager's unit number.

3.15.108 session stop

Use this command to terminate a session started from a manager to a member, a member to a member, or a member to manager that was started with the `session start` command.

Default Disable
Format session stop {unit *unit-number* | manager}
Mode Global Config

Parameter	Description
unit	Use to disconnect from the specified unit from the stack master.
manager	Use to disconnect from the manager unit from any member unit without entering the manager's unit number.

3.15.109 watchdog clear

This command clears the watchdog settings and history and resets the timeout interval to the default value.

Format watchdog clear
Mode Privileged EXEC

3.15.110 watchdog disable

This command disables watchdog services. Watchdog is automatically changed (that is, no reboot is required).

Default Disabled
Format watchdog disable
Mode Privileged EXEC

3.15.111 watchdog enable

This command enables watchdog services. Watchdog services give FASTPATH the ability to recover when it is no longer executing properly. When a recovery is attempted, debug information is saved and the switch is reset.

Default	Disabled
Format	watchdog enable
Mode	Privileged EXEC

3.16 BCM Shell Command

The BCM (SDK) shell is mainly used for debugging the Broadcom SDK. BCM shell commands can be executed directly from the CLI without entering the BCM shell itself by using the keyword `drivshell` before the BCM command. However, you can also enter the BCM shell to directly execute any of the BCM commands on the shell using the `bcmsh` command.

3.16.1 bcmsh

The `bcmsh` command is used to enter into the BCM shells from Privileged EXEC mode. Only users with Level 15 permissions can execute this command. Management is blocked during this mode; the user is notified and asked whether to continue. This command is only supported on the serial console and not via telnet/ssh.

Format	<code>bcmsh</code>
Mode	Privileged EXEC



Note...

To exit the shell and return to the CLI, enter `exit`.

3.17 Cable Test Command

The cable test feature enables you to determine the cable connection status on a selected port.



Note...

The cable test feature is supported only for copper cable. It is not supported for optical fiber cable.

If the port has an active link while the cable test is run, the link can go down for the duration of the test.

3.17.1 cablestatus

This command returns the status of the specified port.

Format	<code>cablestatus slot/port</code>
Mode	Privileged EXEC

Field	Description
Cable Status	One of the following statuses is returned: • Normal: The cable is working correctly. • Open: The cable is disconnected or there is a faulty connector. • Short: There is an electrical short in the cable. • Cable Test Failed: The cable status could not be determined. The cable may in fact be working. • Crosstalk: There is crosstalk present on the cable. • No Cable: There is no cable present.
Cable Length	If this feature is supported by the PHY for the current link speed, the cable length is displayed as a range between the shortest estimated length and the longest estimated length. Note that if the link is down and a cable is attached to a 10/100 Ethernet adapter, then the cable status may display as Open or Short because some Ethernet adapters leave unused wire pairs unterminated or grounded. Unknown is displayed if the cable length could not be determined.

3.18 sFlow Commands

sFlow is the standard for monitoring high-speed switched and routed networks. sFlow technology is built into network equipment and gives complete visibility into network activity, enabling effective management and control of network resources.

3.18.1 sflow poller

A data source configured to collect counter samples is called a poller. Use this command to enable a new sFlow poller instance on an interface or range of interfaces for this data source if *rcvr_idx* is valid.

Format `sflow poller {rcvr-idx | interval poll-interval}`

Mode Interface Config

Field	Description
Receiver Index	Enter the sFlow Receiver associated with the sampler/poller. A value of zero (0) means that no receiver is configured. The range is 1-8. The default is 0.
Poll Interval	Enter the sFlow instance polling interval. A poll interval of zero (0) disables counter sampling. When set to zero (0), all the poller parameters are set to their corresponding default value. The range is 0-86400. The default is 0. A value of N means once in N seconds a counter sample is generated.

**Note...**

The sFlow task is heavily loaded when the sFlow polling interval is configured at the minimum value (i.e., one second for all the sFlow supported interfaces). In this case, the sFlow task is always busy collecting the counters on all the configured interfaces. This can cause the device to hang for some time when the user tries to configure or issue show sFlow commands. To overcome this situation, sFlow polling interval configuration on an interface or range of interfaces is controlled as mentioned below:

- The maximum number of allowed interfaces for the polling intervals max (1, (interval – 10)) to min ((interval + 10), 86400) is:

interval * 5

- For every one second increment in the polling interval that is configured, the number of allowed interfaces that can be configured increases by 5.

3.18.1.1 no sflow poller

Use this command to reset the sFlow poller instance to the default settings.

Format no sflow poller [interval]

Mode Interface Config

3.18.2 sflow receiver

Use this command to configure the sFlow collector parameters (owner string, receiver timeout, max datagram size, IP address, and port).

Format sflow receiver *rcvr_idx* {owner *owner-string* timeout *rcvr_timeout* | max datagram size | ip *ip* | port *port*}

Mode Global Config

Parameter	Description
Receiver Owner	The identity string for the receiver, the entity making use of this sFlowRcvrTable entry. The range is 127 characters. The default is a null string. The empty string indicates that the entry is currently unclaimed and the receiver configuration is reset to the default values. An entity wishing to claim an sFlowRcvrTable entry must ensure that the entry is unclaimed before trying to claim it. The entry is claimed by setting the owner string to a non-null value. The entry must be claimed before assigning a receiver to a sampler or poller.
Receiver Timeout	The time, in seconds, remaining before the sampler or poller is released and stops sending samples to receiver. A management entity wanting to maintain control of the sampler is responsible for setting a new value before the old one expires. The allowed range is 0-2147483647 seconds. The default is zero (0).
No Timeout	The configured entry will be in the config until you explicitly removes the entry.
Receiver Max Datagram Size	The maximum number of data bytes that can be sent in a single sample datagram. The management entity should set this value to avoid fragmentation of the sFlow datagrams. The allowed range is 200 to 9116). The default is 1400.
Receiver IP	The sFlow receiver IP address. If set to 0.0.0.0, no sFlow datagrams will be sent. The default is 0.0.0.0.
Receiver Port	The destination Layer4 UDP port for sFlow datagrams. The range is 1-65535. The default is 6343.

3.18.2.1 no sflow receiver

Use this command to set the sFlow collector parameters back to the defaults.

Format `no sflow receiver indx {ip ip-address | maxdatagram size | owner string timeout interval | port 14-port}`

Mode Global Config

3.18.3 sflow receiver owner timeout

Use this command to configure a receiver as a timeout entry. As the sFlow receiver is configured as a timeout entry, information related to sampler and pollers are also shown in the running-config and are retained after reboot.

If a receiver is configured with a specific value, these configurations will not be shown in running-config. Samplers and pollers information related to this receiver will also not be shown in running-config.

Format `sflow receiver index owner owner-string timeout`

Mode Global Config

Field	Description
index	Receiver index identifier. The range is 1 to 8.
Receiver Owner	The owner name corresponds to the receiver name. The identity string for the receiver, the entity making use of this sFlowRcvrTable entry. The range is 127 characters. The default is a null string. The empty string indicates that the entry is currently unclaimed and the receiver configuration is reset to the default values. An entity wishing to claim an sFlowRcvrTable entry must ensure that the entry is unclaimed before trying to claim it. The entry is claimed by setting the owner string to a non-null value. The entry must be claimed before assigning a receiver to a sampler or poller.

3.18.4 sflow receiver owner notimeout

Use this command to configure a receiver as a non-timeout entry. Unlike entries configured with a specific timeout value, this command will be shown in show running-config and retained after reboot. As the sFlow receiver is configured as a non-timeout entry, information related to sampler and pollers will also be shown in the running-config and will be retained after reboot.

If a receiver is configured with a specific value, these configurations will not be shown in running-config. Samplers and pollers information related to this receiver will also not be shown in running-config.

Format `sflow receiver index owner owner-string notimeout`

Mode Global Config

Field	Description
index	Receiver index identifier. The range is 1 to 8.
Receiver Owner	The owner name corresponds to the receiver name. The identity string for the receiver, the entity making use of this sFlowRcvrTable entry. The range is 127 characters. The default is a null string. The empty string indicates that the entry is currently unclaimed and the receiver configuration is reset to the default values. An entity wishing to claim an sFlowRcvrTable entry must ensure that the entry is unclaimed before trying to claim it. The entry is claimed by setting the owner string to a non-null value. The entry must be claimed before assigning a receiver to a sampler or poller.

3.18.5 sflow remote-agent ip

Use this command to assign an IPv4 address to a remote agent. When sFlow hardware sampling is enabled, the switch/hardware sends sampled packets encapsulated in sFlow custom packet to this IP address.

Default 0.0.0.0
Format sflow remote-agent *index* ip *ipv4-address*
Mode Global Config

3.18.5.1 no sflow remote-agent ip

Use this command to remove the remote agent IPv4 address.

Format no sflow remote-agent *index* ip
Mode Global Config

3.18.6 sflow remote-agent monitor-session

Use this command to assign the monitor ID (MTP) for the remote agent session. The destination port is an outgoing interface for sFlow sampled packets. The sflow sampled packets are sent to all the configured destination ports, irrespective of monitor session index.

Default 0 for both monitor session and destination port
Format sflow remote-agent *index* monitor-session *session id range 1-4* destination interface unit/slot/port
Mode Global Config

3.18.6.1 no sflow remote-agent monitor-session

This command removes the remote-agent configuration.

Format no sflow remote-agent *index* monitor-session
Mode Global Config

3.18.7 sflow remote-agent port

This command configures the destination UDP port for the remote-agent.

Default 16343
Format sflow remote-agent *index* port *value*
Mode Global Config

3.18.7.1 no sflow remote-agent port

This command removes remote agent port configuration.

Format no sflow remote-agent port
Mode Global Config

3.18.8 sflow sampler

A data source configured to collect flow samples is called a poller. Use this command to configure a new sFlow sampler instance on an interface or range of interfaces for this data source if *rcvr_idx* is valid.

Format sflow sampler {*rcvr-idx* | rate *sampling-rate* | maxheadersize *size*}

Mode Interface Config

Field	Description
Receiver Index	The sFlow Receiver for this sFlow sampler to which flow samples are to be sent. A value of zero (0) means that no receiver is configured, no packets will be sampled. Only active receivers can be set. If a receiver expires, then all samplers associated with the receiver will also expire. Possible values are 1-8. The default is 0.
Maxheadersize	The maximum number of bytes that should be copied from the sampler packet. The range is 20-256. The default is 128. When set to zero (0), all the sampler parameters are set to their corresponding default value.
Sampling Rate	The statistical sampling rate for packet sampling from this source. A sampling rate of 1 counts all packets. A value of zero (0) disables sampling. A value of N means that out of N incoming packets, 1 packet will be sampled. The range is 1024-65536 and 0. The default is 0.

3.18.8.1 no sflow sampler

Use this command to reset the sFlow sampler instance to the default settings.

Format no sflow sampler {*rcvr-idx* | rate *sampling-rate* | maxheadersize *size*}

Mode Interface Config

3.18.9 sflow sampler rate

Use this command to set the sampling rate for ingress/egress/flow-based sampling on this interface.

Default 0 for the ingress sampling rate.

Format sflow sampler rate *value* {ingress | egress | flow-based}

Mode Interface Config

3.18.9.1 no sflow sample rate

Use this command to remove the sampling rate for ingress/egress/flow-based sampling on this interface.

Format no sflow sampler rate *value* {ingress | egress | flow-based}

Mode Interface Config

3.18.10 sflow sampler remote-agent

Use this command to enable a new sFlow sampler remote agent instance for this data source.

Default None

Format sflow sampler remote-agent *index*

Mode Interface Config

3.18.10.1 no sflow sampler remote-agent

Use this command to disable an sFlow sampler remote agent instance for this data source.

Format no sflow sampler remote-agent

Mode Interface Config

3.18.11 sflow sampler filter ip access-group

Use this command to enable flow-based ingress packet sampling on an interface for an IP ACL identified by ACL name or ACL ID. The packet matching the defined flow/ACL may get sampled by this configuration.

Default None

Format sflow sampler filter ip access-group {aclid | aclName}

Mode Interface Config

3.18.11.1 no sflow sampler filter ip access-group

Use this command to disable the sFlow for an IP ACL identified by name or ID on the interface.

Format no sflow sampler filter ip access-group {aclid | aclName}

Mode Interface Config

3.18.12 sflow sampler filter mac access-group

Use this command to enable flow-based ingress packet sampling on an interface for MAC ACL identified by ACL name. The packet matching the defined flow/ACL may get sampled by this configuration.

Default None

Format sflow sampler filter mac access-group *aclName*

Mode Interface Config

3.18.12.1 no sflow sampler filter mac access-group

Use this command to disable the sFlow for MAC ACL identified by name on the interface.

Format no sflow sampler filter mac access-group

Mode Interface Config

3.18.13 sflow source-interface

Use this command to specify the physical or logical interface to use as the sFlow client source interface. If configured, the address of source Interface is used for all sFlow communications between the sFlow receiver and the sFlow client. Otherwise there is no change in behavior. If the configured interface is down, the sFlow client falls back to normal behavior.

Format sflow source-interface {slot/port | loopback *Loopback-id* | tunnel *tunnel-id* | vLan *vLan-id*}

Mode Global Config

Parameter	Description
slot/port	VLAN or port-based routing interface.
loopback-id	Configures the loopback interface to use as the source IP address. The range of the loopback ID is 0 to 7.
tunnel-id	Configures the tunnel interface to use as the source IP address. The range of the tunnel ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

3.18.13.1 no sflow source-interface

Use this command to reset the sFlow source interface to the default settings.

Format no sflow source-interface

Mode Global Config

3.18.14 show sflow agent

The sFlow agent collects time-based sampling of network interface statistics and flow-based samples. These are sent to the configured sFlow receivers. Use this command to display the sFlow agent information.

Format show sflow agent

Mode Privileged EXEC

Field	Description
sFlow Version	Uniquely identifies the version and implementation of this MIB. The version string must have the following structure: MIB Version; Organization; Software Revision where: • MIB Version: 1.3, the version of this MIB. • Organization: Broadcom Corp. • Revision: 1.0
IP Address	The IP address associated with this agent.

Example: The following shows example CLI display output for the command.
(switch) #show sflow agent

```
sFlow Version..... 1.3;Broadcom Corp;1.0
IP Address..... 10.131.12.66
```

3.18.15 show sflow pollers

Use this command to display the sFlow polling instances created on the switch. Use “-” for range.

Format show sflow pollers

Mode Privileged EXEC

Field	Description
Poller Data Source	The sFlowDataSource (slot/port) for this sFlow sampler. This agent will support Physical ports only.
Receiver Index	The sFlowReceiver associated with this sFlow counter poller.
Poller Interval	The number of seconds between successive samples of the counters associated with this data source.

3.18.16 show sflow receivers

Use this command to display configuration information related to the sFlow receivers.

Format show sflow receivers [*index*]

Mode Privileged EXEC

Parameter	Description
Receiver Index	The sFlow Receiver associated with the sampler/poller.
Owner String	The identity string for receiver, the entity making use of this sFlowRcvrTable entry.
Time Out	The time (in seconds) remaining before the receiver is released and stops sending samples to sFlow receiver. The no timeout value of this parameter means that the sFlow receiver is configured as a non-timeout entry.
Max Datagram Size	The maximum number of bytes that can be sent in a single sFlow datagram.
Port	The destination Layer4 UDP port for sFlow datagrams.
IP Address	The sFlow receiver IP address.
Address Type	The sFlow receiver IP address type. For an IPv4 address, the value is 1 and for an IPv6 address, the value is 2.
Datagram Version	The sFlow protocol version to be used while sending samples to sFlow receiver.

Example: The following shows example CLI display output for the **show sflow receivers** command.

```
(switch) #show sflow receivers 1
Receiver Index..... 1
Owner String..... tulasi
Time out..... 0
IP Address:..... 0.0.0.0
Address Type..... 1
Port..... 6343
Datagram Version..... 5
Maximum Datagram Size..... 1400
```

Example: The following examples show CLI display output for the command when a receiver is configured as a non-timeout entry.

(FASTPATH Routing) #show sflow receivers

Rcvr Indx	Owner String	Timeout	Max Dgram Size	Port	IP Address
1	tulasi	No Timeout	1400	6343	0.0.0.0 <= No Timeout string
2		0	1400	6343	0.0.0.0
3		0	1400	6343	0.0.0.0
4		0	1400	6343	0.0.0.0
5		0	1400	6343	0.0.0.0
6		0	1400	6343	0.0.0.0
7		0	1400	6343	0.0.0.0
8		0	1400	6343	0.0.0.0

(FASTPATH Routing) #show sflow receivers 1

```
Receiver Index..... 1
Owner String..... tulasi
Time out..... No Timeout          <= No Timeout string is added
IP Address:..... 0.0.0.0
Address Type..... 1
Port..... 6343
```

```
Datagram Version..... 5
Maximum Datagram Size..... 1400
```

3.18.17 show sflow remote-agents

Use this command to display the details for configured sFlow remote agents.

Format show sflow remote-agents

Mode Privileged EXEC

Example:

```
(Routing) (Config)#show sflow remote-agents
```

Rem Agent Index	Port	IP Address	Monitor Session	Dest. Port
1	16343	1.1.1.1	1	0/4
2	26343	2.2.1.1	2	0/8
3	16343	0.0.0.0		
4	16343	0.0.0.0		

3.18.18 show sflow samplers

Use this command to display the sFlow sampling instances created on the switch.

Format show sflow samplers

Mode Privileged EXEC

Field	Description
Sampler Data Source	The sFlowDataSource (slot/port) for this sFlow sampler. This agent will support Physical ports only.
Receiver Index	The sFlowReceiver configured for this sFlow sampler.
Remote Agent	The remote agent instance index number.
Ingress Sampling Rate	The sampling rate for the ingress.
Flow Sampling Rate	The statistical sampling rate for packet sampling from this source.
Egress Sampling Rate	The sampling rate for the egress.
Max Header Size	The maximum number of bytes that should be copied from a sampled packet to form a flow sample.
IP ACL	The associated IP ACL.
MAC ACL	The associated MAC ACL.

Example:

```
(Routing) (Config)#show sflow samplers
```

Sampler Data Source	Receiver Index	Remote Agent	Ingress Sampling Rate	Flow Sampling Rate	Egress Sampling Rate	Max Header Size	IP ACL	MAC ACL
0/1	1	2	1024	2048	4096	128	1001	

3.18.19 show sflow source-interface

Use this command to display the sFlow source interface configured on the switch.

Format show sflow source-interface
Mode Privileged EXEC

Field	Description
sFlow Client Source Interface	The interface ID of the physical or logical interface configured as the sFlow client source interface.
sFlow Client Source IPv4 Address	The IP address of the interface configured as the sFlow client source interface.

Example: The following shows example CLI display output for the command.

(Routing) #show sflow source-interface

sFlow Client Source Interface..... (not configured)

3.19 Switch Database Management Template Commands

A Switch Database Management (SDM) template is a description of the maximum resources a switch or router can use for various features. Different SDM templates allow different combinations of scaling factors, enabling different allocations of resources depending on how the device is used. In other words, SDM templates enable you to reallocate system resources to support a different mix of features based on your network requirements.



Note...

If you attach a unit to a stack and its template does not match the stack's template, then the new unit will automatically reboot using the template used by other stack members. To avoid the automatic reboot, you may first set the template to the template used by existing members of the stack. Then power off the new unit, attach it to the stack, and power it on.

3.19.1 sdm prefer

Use this command to change the template that will be active after the next reboot. The keywords are as follows:

- **dual-ipv4-and-ipv6**—Filters subsequent template choices to those that support both IPv4 and IPv6. The `default` template maximizes the number of IPv4 and IPv6 unicast routes, while limiting the number of ECMP next hops in each route to 4. The `data-center` template support increases the number of ECMP next hops to 32. The `alpm` and `alpm-mpls-data-center` templates accommodate larger routes. The values for the `alpm` and `alpm-mpls-data-center` templates are shown below:
dual-ipv4-and-ipv6 alpm:

```
ARP Entries..... 2560
IPv4 Unicast Routes..... 32768
IPv6 NDP Entries..... 2560
IPv6 Unicast Routes..... 24576
ECMP Next Hops..... 48
IPv4 Multicast Routes..... 0
IPv6 Multicast Routes..... 0
```

dual-ipv4-and-ipv6 alpm-mpls-data-center:

```
ARP Entries..... 2560
IPv4 Unicast Routes..... 32768
```

```
IPv6 NDP Entries..... 2560
IPv6 Unicast Routes..... 24576
ECMP Next Hops..... 16
IPv4 Multicast Routes..... 0
IPv6 Multicast Routes..... 0
```

- **ipv4-routing**—Filters subsequent template choices to those that support IPv4, and not IPv6. The IPv4-routing default template maximizes the number of IPv4 unicast routes, while limiting the number of ECMP next hops in each route to 4. The data-center default template supports increases the number of ECMP next hops to 32 and reduces the number of routes. The data-center plus template increases the number of ECMP next hops to 32 while keeping the maximum IPv4 routes.



Note...

After setting the template, you must reboot in order for the configuration change to take effect.

Default dual IPv4 and IPv6 template

Format *sdm prefer {dual-ipv4-and-ipv6 {default|data-center} | ipv4-routing {default|data-center {default|plus}}}*

Mode Global Config

3.19.1.1 no sdm prefer

Use this command to revert to the default template after the next reboot.

Format no sdm prefer

Mode Global Config

3.19.2 show sdm prefer

Use this command to view the currently active SDM template and its scaling parameters, or to view the scaling parameters for an inactive template. When invoked with no optional keywords, this command lists the currently active template and the template that will become active on the next reboot, if it is different from the currently active template. If the system boots with a non-default template, and you clear the template configuration, either using `no sdm prefer` or by deleting the startup configuration, `show sdm prefer` lists the default template as the next active template. To list the scaling parameters of a specific template, use that template's keyword as an argument to the command.

Use the optional keywords to list the scaling parameters of a specific template.

Format *show sdm prefer [dual-ipv4-and-ipv6 {default|data-center}| ipv4-routing {default | data-center {default|plus}}]*

Mode Privileged EXEC

Syntax	Description
dual-ipv4-and-ipv6 default	(Optional) List the scaling parameters for the template supporting IPv4 and IPv6.
dual-ipv4-and-ipv6 data-center	(Optional) List the scaling parameters for the Dual IPv4 and IPv6 template supporting more ECMP next hops.
ipv4-routing default	(Optional) List the scaling parameters for the IPv4-only template maximizing the number of unicast routes.

Syntax	Description
ipv4-routing data-center default	(Optional) List the scaling parameters for the IPv4-only template supporting more ECMP next hops.
ipv4-routing data-center plus	(Optional) List the scaling parameters for the IPv4-only template maximizing the number of unicast routes and also supporting more ECMP next hops.

Field	Description
ARP Entries	The maximum number of entries in the IPv4 Address Resolution Protocol (ARP) cache for routing interfaces.
IPv4 Unicast Routes	The maximum number of IPv4 unicast forwarding table entries.
IPv6 NDP Entries	The maximum number of IPv6 Neighbor Discovery Protocol (NDP) cache entries.
IPv6 Unicast Routes	The maximum number of IPv6 unicast forwarding table entries.
ECMP Next Hops	The maximum number of next hops that can be installed in the IPv4 and IPv6 unicast forwarding tables.

Example: This example shows the current SDM template. The user has not changed the next active SDM template.

```
(router)#show sdm prefer
```

The current template is the Dual IPv4 and IPv6 template.

```
ARP Entries..... 6144
IPv4 Unicast Routes..... 8160
IPv6 NDP Entries..... 2560
IPv6 Unicast Routes..... 4096
ECMP Next Hops..... 4
IPv4 Multicast Routes..... 1536
IPv6 Multicast Routes..... 512
```

Now the user sets the next active SDM template.

```
(router) # configure
```

```
(router) (Config)#sdm prefer ipv4-routing data-center default
```

Changes to the running SDM preferences have been stored, but cannot take effect until the next reload.

Use 'show sdm prefer' to see what SDM preference is currently active.

```
(router) (Config)#ex
```

```
(router) #show sdm prefer
```

The current template is the Dual IPv4 and IPv6 template.

```
ARP Entries..... 6144
IPv4 Unicast Routes..... 8160
IPv6 NDP Entries..... 2560
IPv6 Unicast Routes..... 4096
ECMP Next Hops..... 4
IPv4 Multicast Routes..... 1536
IPv6 Multicast Routes..... 512
```

On the next reload, the template will be the IPv4 Data Center template.

```
(router) #
```

To list the scaling parameters for the data center template, invoke the command with the **ipv4-routing data-center default** keywords.

```
(router) #show sdm prefer ipv4-routing data-center default
```

```
ARP Entries..... 6144
IPv4 Unicast Routes..... 8160
IPv6 NDP Entries..... 0
IPv6 Unicast Routes..... 0
ECMP Next Hops..... 16
IPv4 Multicast Routes..... 2048
IPv6 Multicast Routes..... 0
```

3.20 Remote Monitoring Commands

Remote Monitoring (RMON) is a method of collecting a variety of data about network traffic. RMON supports 64-bit counters (RFC 3273) and High Capacity Alarm Table (RFC 3434).



Note...

There is no configuration command for ether stats and high capacity ether stats. The data source for ether stats and high capacity ether stats are configured during initialization.

3.20.1 rmon ala^rm

This command sets the RMON alarm entry in the RMON alarm MIB group.

Format `rmon alarm alarm number variable sample interval {absolute|delta} rising-threshold value [rising-event-index] falling-threshold value [falling-event-index] [startup {rising|falling|rising-falling}] [owner string]`

Mode Global Config

Parameter	Description
Alarm Index	An index that uniquely identifies an entry in the alarm table. Each entry defines a diagnostic sample at a particular interval for an object on the device. The range is 1 to 65535.
Alarm Variable	The object identifier of the particular variable to be sampled. Only variables that resolve to an ASN.1 primitive type of integer.
Alarm Interval	The interval in seconds over which the data is sampled and compared with the rising and falling thresholds. The range is 1 to 2147483647. The default is 1.
Alarm Absolute Value	The value of the statistic during the last sampling period. This object is a read-only, 32-bit signed value.
Alarm Rising Threshold	The rising threshold for the sample statistics. The range is 2147483648 to 2147483647. The default is 1.
Alarm Rising Event Index	The index of the eventEntry that is used when a rising threshold is crossed. The range is 1 to 65535. The default is 1.
Alarm Falling Threshold	The falling threshold for the sample statistics. The range is 2147483648 to 2147483647. The default is 1.
Alarm Falling Event Index	The index of the eventEntry that is used when a falling threshold is crossed. The range is 1 to 65535. The default is 2.

Parameter	Description
Alarm Startup Alarm	The alarm that may be sent. Possible values are rising , falling or both rising-falling . The default is rising-falling .
Alarm Owner	The owner string associated with the alarm entry. The default is monitorAlarm .

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Config)# rmon alarm 1 ifInErrors.2 30 absolute rising-threshold 100 1 falling-threshold 10 2 startup rising owner myOwner
```

3.20.1.1 no rmon alarm

This command deletes the RMON alarm entry.

Format no rmon alarm *alarm number*

Mode Global Config

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Config)# no rmon alarm 1
```

3.20.2 rmon hcalarm

This command sets the RMON hcalarm entry in the High Capacity RMON alarm MIB group.

Format rmon hcalarm *alarm number variable sample interval {absolute|delta} rising-threshold high value low value status {positive|negative} [rising-event-index] falling-threshold high value low value status {positive|negative} [falling-event-index] [startup {rising|falling|rising-falling}] [owner string]*

Mode Global Config

Parameter	Description
High Capacity Alarm Index	An arbitrary integer index value used to uniquely identify the high capacity alarm entry. The range is 1 to 65535.
High Capacity Alarm Variable	The object identifier of the particular variable to be sampled. Only variables that resolve to an ASN.1 primitive type of integer.
High Capacity Alarm Interval	The interval in seconds over which the data is sampled and compared with the rising and falling thresholds. The range is 1 to 2147483647. The default is 1.
High Capacity Alarm Sample Type	The method of sampling the selected variable and calculating the value to be compared against the thresholds. Possible types are Absolute Value or Delta Value . The default is Absolute Value .
High Capacity Alarm Absolute Value	The absolute value (that is, the unsigned value) of the hcAlarmVariable statistic during the last sampling period. The value during the current sampling period is not made available until the period is complete. This object is a 64-bit unsigned value that is Read-Only.
High Capacity Alarm Absolute Alarm Status	This object indicates the validity and sign of the data for the high capacity alarm absolute value object (hcAlarmAbsValueobject). Possible status types are valueNotAvailable , valuePositive , or valueNegative . The default is valueNotAvailable .
High Capacity Alarm Startup Alarm	High capacity alarm startup alarm that may be sent. Possible values are rising , falling , or rising-falling . The default is rising-falling .
High Capacity Alarm Rising-Threshold Absolute Value Low	The lower 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 1.

Parameter	Description
High Capacity Alarm Rising-Threshold Absolute Value High	The upper 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 0.
High Capacity Alarm Rising-Threshold Value Status	This object indicates the sign of the data for the rising threshold, as defined by the objects hcAlarmRisingThresAbsValueLow and hcAlarmRisingThresAbsValueHigh. Possible values are valueNotAvailable , valuePositive , or valueNegative . The default is valuePositive .
High Capacity Alarm Falling-Threshold Absolute Value Low	The lower 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 1.
High Capacity Alarm Falling-Threshold Absolute Value High	The upper 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 0.
High Capacity Alarm Falling-Threshold Value Status	This object indicates the sign of the data for the falling threshold, as defined by the objects hcAlarmFallingThresAbsValueLow and hcAlarmFallingThresAbsValueHigh. Possible values are valueNotAvailable , valuePositive , or valueNegative . The default is valuePositive .
High Capacity Alarm Rising Event Index	The index of the eventEntry that is used when a rising threshold is crossed. The range is 1 to 65535. The default is 1.
High Capacity Alarm Falling Event Index	The index of the eventEntry that is used when a falling threshold is crossed. The range is 1 to 65535. The default is 2.
High Capacity Alarm Failed Attempts	The number of times the associated hcAlarmVariable instance was polled on behalf of the hcAlarmEntry (while in the active state) and the value was not available. This object is a 32-bit counter value that is read-only.
High Capacity Alarm Owner	The owner string associated with the alarm entry. The default is monitorHCArm .
High Capacity Alarm Storage Type	The type of non-volatile storage configured for this entry. This object is read-only. The default is volatile .

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Config)# rmon hcalarm 1 ifInOctets.1 30 absolute rising-threshold high 1 low 100 status positive 1 falling-threshold high 1 low 10 status positive startup rising owner myOwner
```

3.20.2.1 no rmon hcalarm

This command deletes the rmon hcalarm entry.

Format no rmon hcalarm *alarm number*

Mode Global Config

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Config)# no rmon hcalarm 1
```

3.20.3 rmon event

This command sets the RMON event entry in the RMON event MIB group.

Format `rmon event event number [description string | log | owner string | trap community]`
Mode Global Config

Parameter	Description
Event Index	An index that uniquely identifies an entry in the event table. Each such entry defines one event that is to be generated when the appropriate conditions occur. The range is 1 to 65535.
Event Description	A comment describing the event entry. The default is alarmEvent .
Event Type	The type of notification that the probe makes about the event. Possible values are None , Log , SNMP Trap , Log and SNMP Trap . The default is None .
Event Owner	Owner string associated with the entry. The default is monitorEvent .
Event Community	The SNMP community specific by this octet string which is used to send an SNMP trap. The default is public .

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Config)# rmon event 1 log description test
```

3.20.3.1 no rmon event

This command deletes the rmon event entry.

Format `no rmon event event number`
Mode Global Config

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Config)# no rmon event 1
```

3.20.4 rmon collection history

This command sets the history control parameters of the RMON historyControl MIB group.



Note...

This command is not supported on interface range. Each RMON history control collection entry can be configured on only one interface. If you try to configure on multiple interfaces, DUT displays an error.

Format `rmon collection history index number [buckets number | interval interval in sec | owner string]`
Mode Interface Config

Parameter	Description
History Control Index	An index that uniquely identifies an entry in the historyControl table. Each such entry defines a set of samples at a particular interval for an interface on the device. The range is 1 to 65535.
History Control Data Source	The source interface for which historical data is collected.
History Control Buckets Requested	The requested number of discrete time intervals over which data is to be saved. The range is 1 to 65535. The default is 50.

Parameter	Description
History Control Buckets Granted	The number of discrete sampling intervals over which data shall be saved. This object is read-only. The default is 10.
History Control Interval	The interval in seconds over which the data is sampled. The range is 1 to 3600. The default is 1800.
History Control Owner	The owner string associated with the history control entry. The default is monitorHistoryControl.

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Interface 0/1)# rmon collection history 1 buckets 10 interval 30 owner myOwner
```

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Interface 0/1-0/10)#rmon collection history 1 buckets 10 interval 30 owner myOwner
```

Error: 'rmon collection history' is not supported on range of interfaces.

3.20.4.1 no rmon collection history

This command will delete the history control group entry with the specified index number.

Format no rmon collection history *index number*

Mode Interface Config

Example: The following shows an example of the command.

```
(FASTPATH Routing) (Interface 0/1-0/10)# no rmon collection history 1
```

3.20.5 show rmon

This command displays the entries in the RMON alarm table.

Format show rmon {alarms | alarm *alarm-index*}

Mode Privileged EXEC

Parameter	Description
Alarm Index	An index that uniquely identifies an entry in the alarm table. Each entry defines a diagnostic sample at a particular interval for an object on the device. The range is 1 to 65535.
Alarm Variable	The object identifier of the particular variable to be sampled. Only variables that resolve to an ASN.1 primitive type of integer.
Alarm Interval	The interval in seconds over which the data is sampled and compared with the rising and falling thresholds. The range is 1 to 2147483647. The default is 1.
Alarm Absolute Value	The value of the statistic during the last sampling period. This object is a read-only, 32-bit signed value.
Alarm Rising Threshold	The rising threshold for the sample statistics. The range is 2147483648 to 2147483647. The default is 1.
Alarm Rising Event Index	The index of the eventEntry that is used when a rising threshold is crossed. The range is 1 to 65535. The default is 1.
Alarm Falling Threshold	The falling threshold for the sample statistics. The range is 2147483648 to 2147483647. The default is 1.
Alarm Falling Event Index	The index of the eventEntry that is used when a falling threshold is crossed. The range is 1 to 65535. The default is 2.

Parameter	Description
Alarm Startup Alarm	The alarm that may be sent. Possible values are rising , falling or both rising-falling . The default is rising-falling .
Alarm Owner	The owner string associated with the alarm entry. The default is monitorAlarm .

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show rmon alarms
```

Index	OID	Owner
1	alarmInterval.1	MibBrowser
2	alarmInterval.1	MibBrowser

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show rmon alarm 1
```

```
Alarm 1
-----
OID: alarmInterval.1
Last Sample Value: 1
Interval: 1
Sample Type: absolute
Startup Alarm: rising-falling
Rising Threshold: 1
Falling Threshold: 1
Rising Event: 1
Falling Event: 2
Owner: MibBrowser
```

3.20.6 show rmon collection history

This command displays the entries in the RMON history control table.

Format show rmon collection history [interfaces *slot/port*]

Mode Privileged EXEC

Parameter	Description
History Control Index	An index that uniquely identifies an entry in the historyControl table. Each such entry defines a set of samples at a particular interval for an interface on the device. The range is 1 to 65535.
History Control Data Source	The source interface for which historical data is collected.
History Control Buckets Requested	The requested number of discrete time intervals over which data is to be saved. The range is 1 to 65535. The default is 50.
History Control Buckets Granted	The number of discrete sampling intervals over which data shall be saved. This object is read-only. The default is 10.
History Control Interval	The interval in seconds over which the data is sampled. The range is 1 to 3600. The default is 1800.
History Control Owner	The owner string associated with the history control entry. The default is monitorHistoryControl.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show rmon collection history

Index	Interface	Interval	Requested Samples	Granted Samples	Owner

1	0/1	30	10	10	myowner
2	0/1	1800	50	10	monitorHistoryControl
3	0/2	30	50	10	monitorHistoryControl
4	0/2	1800	50	10	monitorHistoryControl
5	0/3	30	50	10	monitorHistoryControl
6	0/3	1800	50	10	monitorHistoryControl
7	0/4	30	50	10	monitorHistoryControl
8	0/4	1800	50	10	monitorHistoryControl
9	0/5	30	50	10	monitorHistoryControl
10	0/5	1800	50	10	monitorHistoryControl
11	0/6	30	50	10	monitorHistoryControl
12	0/6	1800	50	10	monitorHistoryControl
13	0/7	30	50	10	monitorHistoryControl
14	0/7	1800	50	10	monitorHistoryControl
15	0/8	30	50	10	monitorHistoryControl
16	0/8	1800	50	10	monitorHistoryControl
17	0/9	30	50	10	monitorHistoryControl
18	0/9	1800	50	10	monitorHistoryControl
19	0/10	30	50	10	monitorHistoryControl
--More-- or (q)uit					

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show rmon collection history interfaces 0/1

Index	Interface	Interval	Requested Samples	Granted Samples	Owner

1	0/1	30	10	10	myowner
2	0/1	1800	50	10	monitorHistoryControl

3.20.7 show rmon events

This command displays the entries in the RMON event table.

Format show rmon events

Mode Privileged EXEC

Parameter	Description
Event Index	An index that uniquely identifies an entry in the event table. Each such entry defines one event that is to be generated when the appropriate conditions occur. The range is 1 to 65535.
Event Description	A comment describing the event entry. The default is alarmEvent .
Event Type	The type of notification that the probe makes about the event. Possible values are None , Log , SNMP Trap , Log and SNMP Trap . The default is None .
Event Owner	Owner string associated with the entry. The default is monitorEvent .
Event Community	The SNMP community specific by this octet string which is used to send an SNMP trap. The default is public .
Owner	Event owner. The owner string associated with the entry.
Last time sent	The last time over which a log or a SNMP trap message is generated.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) # show rmon events

Index	Description	Type	Community	Owner	Last time sent
1	test	log	public	MIB	0 days 0 h:0 m:0 s

3.20.8 show rmon history

This command displays the specified entry in the RMON history table.

Format show rmon history *index* {errors [*period seconds*]|other [*period seconds*]|throughput [*period seconds*]}

Mode Privileged EXEC

Parameter	Description
History Control Index	An index that uniquely identifies an entry in the historyControl table. Each such entry defines a set of samples at a particular interval for an interface on the device. The range is 1 to 65535.
History Control Data Source	The source interface for which historical data is collected.
History Control Buckets Requested	The requested number of discrete time intervals over which data is to be saved. The range is 1 to 65535. The default is 50.
History Control Buckets Granted	The number of discrete sampling intervals over which data shall be saved. This object is read-only. The default is 10.
History Control Interval	The interval in seconds over which the data is sampled. The range is 1 to 3600. The default is 1800.
History Control Owner	The owner string associated with the history control entry. The default is monitorHistoryControl.
Maximum Table Size	Maximum number of entries that the history table can hold.
Time	Time at which the sample is collected, displayed as period seconds.
CRC Align	Number of CRC align errors.
Undersize Packets	Total number of undersize packets. Packets are less than 64 octets long (excluding framing bits, including FCS octets).
Oversize Packets	Total number of oversize packets. Packets are longer than 1518 octets (excluding framing bits, including FCS octets).
Fragments	Total number of fragment packets. Packets are not an integral number of octets in length or had a bad Frame Check Sequence (FCS), and are less than 64 octets in length (excluding framing bits, including FCS octets).
Jabbers	Total number of jabber packets. Packets are longer than 1518 octets (excluding framing bits, including FCS octets), and are not an integral number of octets in length or had a bad Frame Check Sequence (FCS).
Octets	Total number of octets received on the interface.
Packets	Total number of packets received (including error packets) on the interface.
Broadcast	Total number of good Broadcast packets received on the interface.
Multicast	Total number of good Multicast packets received on the interface.
Util	Port utilization of the interface associated with the history index specified.
Dropped Collisions	Total number of dropped collisions.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show rmon history 1 errors

Sample set: 1 Owner: myowner
Interface: 0/1 Interval: 30
Requested Samples: 10 Granted Samples: 10
Maximum table size: 1758

Time	CRC	Align	Undersize	Oversize	Fragments	Jabbers
Jan 01 1970 21:41:43	0		0	0	0	0
Jan 01 1970 21:42:14	0		0	0	0	0
Jan 01 1970 21:42:44	0		0	0	0	0
Jan 01 1970 21:43:14	0		0	0	0	0
Jan 01 1970 21:43:44	0		0	0	0	0
Jan 01 1970 21:44:14	0		0	0	0	0
Jan 01 1970 21:44:45	0		0	0	0	0
Jan 01 1970 21:45:15	0		0	0	0	0
Jan 01 1970 21:45:45	0		0	0	0	0
Jan 01 1970 21:46:15	0		0	0	0	0

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show rmon history 1 throughput

Sample set: 1 Owner: myowner
Interface: 0/1 Interval: 30
Requested Samples: 10 Granted Samples: 10
Maximum table size: 1758

Time	Octets	Packets	Broadcast	Multicast	Util
Jan 01 1970 21:41:43	0	0	0	0	1
Jan 01 1970 21:42:14	0	0	0	0	1
Jan 01 1970 21:42:44	0	0	0	0	1
Jan 01 1970 21:43:14	0	0	0	0	1
Jan 01 1970 21:43:44	0	0	0	0	1
Jan 01 1970 21:44:14	0	0	0	0	1
Jan 01 1970 21:44:45	0	0	0	0	1
Jan 01 1970 21:45:15	0	0	0	0	1
Jan 01 1970 21:45:45	0	0	0	0	1
Jan 01 1970 21:46:15	0	0	0	0	1

(FASTPATH Routing) #show rmon history 1 other

Sample set: 1 Owner: myowner
Interface: 0/1 Interval: 30
Requested Samples: 10 Granted Samples: 10
Maximum table size: 1758

Time	Dropped	Collisions
Jan 01 1970 21:41:43	0	0
Jan 01 1970 21:42:14	0	0
Jan 01 1970 21:42:44	0	0
Jan 01 1970 21:43:14	0	0
Jan 01 1970 21:43:44	0	0
Jan 01 1970 21:44:14	0	0
Jan 01 1970 21:44:45	0	0
Jan 01 1970 21:45:15	0	0
Jan 01 1970 21:45:45	0	0
Jan 01 1970 21:46:15	0	0

3.20.9 show rmon log

This command displays the entries in the RMON log table.

Format show rmon log [*event-index*]

Mode Privileged EXEC

Parameter	Description
Maximum table size	Maximum number of entries that the log table can hold.
Event	Event index for which the log is generated.
Description	A comment describing the event entry for which the log is generated.
Time	Time at which the event is generated.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show rmon log

```
Event   Description                               Time
-----
```

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show rmon log 1

Maximum table size: 10

```
Event   Description                               Time
-----
```

3.20.10 show rmon statistics interfaces

This command displays the RMON statistics for the given interfaces.

Format show rmon statistics interfaces *slot/port*

Mode Privileged EXEC

Parameter	Description
Port	slot/port
Dropped	Total number of dropped events on the interface.
Octets	Total number of octets received on the interface.
Packets	Total number of packets received (including error packets) on the interface.
Broadcast	Total number of good broadcast packets received on the interface.
Multicast	Total number of good multicast packets received on the interface.
CRC Align Errors	Total number of packets received have a length (excluding framing bits, including FCS octets) of between 64 and 1518 octets inclusive.
Collisions	Total number of collisions on the interface.
Undersize Pkts	Total number of undersize packets. Packets are less than 64 octets long (excluding framing bits, including FCS octets).
Oversize Pkts	Total number of oversize packets. Packets are longer than 1518 octets (excluding framing bits, including FCS octets).

Parameter	Description
Fragments	Total number of fragment packets. Packets are not an integral number of octets in length or had a bad Frame Check Sequence (FCS), and are less than 64 octets in length (excluding framing bits, including FCS octets).
Jabbers	Total number of jabber packets. Packets are longer than 1518 octets (excluding framing bits, including FCS octets), and are not an integral number of octets in length or had a bad Frame Check Sequence (FCS).
64 Octets	Total number of packets which are 64 octets in length (excluding framing bits, including FCS octets).
65-127 Octets	Total number of packets which are between 65 and 127 octets in length (excluding framing bits, including FCS octets).
128-255 Octets	Total number of packets which are between 128 and 255 octets in length (excluding framing bits, including FCS octets).
256-511 Octets	Total number of packets which are between 256 and 511 octets in length (excluding framing bits, including FCS octets).
512-1023 Octets	Total number of packets which are between 512 and 1023 octets in length (excluding framing bits, including FCS octets).
1024-1518 Octets	Total number of packets which are between 1024 and 1518 octets in length (excluding framing bits, including FCS octets).
HC Overflow Pkts	Total number of HC overflow packets.
HC Overflow Octets	Total number of HC overflow octets.
HC Overflow Pkts 64 Octets	Total number of HC overflow packets which are 64 octets in length
HC Overflow Pkts 65 - 127 Octets	Total number of HC overflow packets which are between 65 and 127 octets in length.
HC Overflow Pkts 128 - 255 Octets	Total number of HC overflow packets which are between 128 and 255 octets in length.
HC Overflow Pkts 256 - 511 Octets	Total number of HC overflow packets which are between 256 and 511 octets in length.
HC Overflow Pkts 512 - 1023 Octets	Total number of HC overflow packets which are between 512 and 1023 octets in length.
HC Overflow Pkts 1024 - 1518 Octets	Total number of HC overflow packets which are between 1024 and 1518 octets in length.

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) # show rmon statistics interfaces 0/1
Port: 0/1
Dropped: 0
Octets: 0  Packets: 0
Broadcast: 0  Multicast: 0
CRC Align Errors: 0  Collisions: 0
Undersize Pkts: 0  Oversize Pkts: 0
Fragments: 0  Jabbers: 0
64 Octets: 0  65 - 127 Octets: 0
128 - 255 Octets: 0  256 - 511 Octets: 0
512 - 1023 Octets: 0  1024 - 1518 Octets: 0
HC Overflow Pkts: 0  HC Pkts: 0
HC Overflow Octets: 0  HC Octets: 0
HC Overflow Pkts 64 Octets: 0  HC Pkts 64 Octets: 0
HC Overflow Pkts 65 - 127 Octets: 0  HC Pkts 65 - 127 Octets: 0
HC Overflow Pkts 128 - 255 Octets: 0  HC Pkts 128 - 255 Octets: 0
HC Overflow Pkts 256 - 511 Octets: 0  HC Pkts 256 - 511 Octets: 0
HC Overflow Pkts 512 - 1023 Octets: 0  HC Pkts 512 - 1023 Octets: 0
HC Overflow Pkts 1024 - 1518 Octets: 0  HC Pkts 1024 - 1518 Octets: 0
```

3.20.11 show rmon hcalarms

This command displays the entries in the RMON high-capacity alarm table.

Format show rmon {hcalarms|hcalarm *alarm index*}

Mode Privileged EXEC

Parameter	Description
High Capacity Alarm Index	An arbitrary integer index value used to uniquely identify the high capacity alarm entry. The range is 1 to 65535.
High Capacity Alarm Variable	The object identifier of the particular variable to be sampled. Only variables that resolve to an ASN.1 primitive type of integer.
High Capacity Alarm Interval	The interval in seconds over which the data is sampled and compared with the rising and falling thresholds. The range is 1 to 2147483647. The default is 1.
High Capacity Alarm Sample Type	The method of sampling the selected variable and calculating the value to be compared against the thresholds. Possible types are Absolute Value or Delta Value . The default is Absolute Value .
High Capacity Alarm Absolute Value	The absolute value (that is, the unsigned value) of the hcAlarmVariable statistic during the last sampling period. The value during the current sampling period is not made available until the period is complete. This object is a 64-bit unsigned value that is Read-Only.
High Capacity Alarm Absolute Alarm Status	This object indicates the validity and sign of the data for the high capacity alarm absolute value object (hcAlarmAbsValueobject). Possible status types are valueNotAvailable , valuePositive , or valueNegative . The default is valueNotAvailable .
High Capacity Alarm Startup Alarm	High capacity alarm startup alarm that may be sent. Possible values are rising , falling , or rising-falling . The default is rising-falling .
High Capacity Alarm Rising-Threshold Absolute Value Low	The lower 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 1.
High Capacity Alarm Rising-Threshold Absolute Value High	The upper 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 0.
High Capacity Alarm Rising-Threshold Value Status	This object indicates the sign of the data for the rising threshold, as defined by the objects hcAlarmRisingThresAbsValueLow and hcAlarmRisingThresAbsValueHigh. Possible values are valueNotAvailable , valuePositive , or valueNegative . The default is valuePositive .
High Capacity Alarm Falling-Threshold Absolute Value Low	The lower 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 1.
High Capacity Alarm Falling-Threshold Absolute Value High	The upper 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 0.
High Capacity Alarm Falling-Threshold Value Status	This object indicates the sign of the data for the falling threshold, as defined by the objects hcAlarmFallingThresAbsValueLow and hcAlarmFallingThresAbsValueHigh. Possible values are valueNotAvailable , valuePositive , or valueNegative . The default is valuePositive .
High Capacity Alarm Rising Event Index	The index of the eventEntry that is used when a rising threshold is crossed. The range is 1 to 65535. The default is 1.

Parameter	Description
High Capacity Alarm Falling Event Index	The index of the eventEntry that is used when a falling threshold is crossed. The range is 1 to 65535. The default is 2.
High Capacity Alarm Failed Attempts	The number of times the associated hcAlarmVariable instance was polled on behalf of thie hcAlarmEntry (while in the active state) and the value was not available. This object is a 32-bit counter value that is read-only.
High Capacity Alarm Owner	The owner string associated with the alarm entry. The default is monitorHCArm .
High Capacity Alarm Storage Type	The type of non-volatile storage configured for this entry. This object is read-only. The default is volatile .

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show rmon hcalarms
```

```

Index      OID                      Owner
-----
1          alarmInterval.1         MibBrowser
2          alarmInterval.1         MibBrowser
```

```
(FASTPATH Routing) #show rmon hcalarm 1
```

```

Alarm 1
-----
OID: alarmInterval.1
Last Sample Value: 1
Interval: 1
Sample Type: absolute
Startup Alarm: rising-falling
Rising Threshold High: 0
Rising Threshold Low: 1
Rising Threshold Status: Positive
Falling Threshold High: 0
Falling Threshold Low: 1
Falling Threshold Status: Positive
Rising Event: 1
Falling Event: 2
Startup Alarm: Rising-Falling
Owner: MibBrowser
```

3.21 Statistics Application Commands

The statistics application gives you the ability to query for statistics on port utilization, flow-based and packet reception on programmable time slots. The statistics application collects the statistics at a configurable time range. You can specify the port number(s) or a range of ports for statistics to be displayed. The configured time range applies to all ports. Detailed statistics are collected between a specified time range in date and time format. You can define the time range as having an absolute time entry and/or a periodic time. For example, you can specify the statistics to be collected and displayed between 9:00 12 NOV 2011 (START) and 21:00 12 NOV 2012 (END) or schedule it on every Mon, Wed, and Fri 9:00 (START) to 21:00 (END).

You can receive the statistics in the following ways:

- User requests through the CLI for a set of counters.
- Configuring the device to display statistics using syslog or email alert. The syslog or email alert messages are sent by the statistics application at END time.

You can configure the device to display statistics on the console. The collected statistics are presented on the console at END time.

3.21.1 stats group

This command creates a new group with the specified id or name and configures the time range and the reporting mechanism for that group.

Format *stats group group id|name timerange time range name reporting List of reporting methods*

Mode Global Config

Parameter	Description
group ID, name	Name of the group of statistics or its identifier to apply on the interface. The range is: 1 received 2 received-errors 3 transmitted 4 transmitted-errors 5 received-transmitted 6 port-utilization 7 congestion The default is None.
time range name	Name of the time range for the group or the flow-based rule. The range is 1 to 31 alphanumeric characters. The default is None.
list of reporting methods	Report the statistics to the configured method. The range is: 0. none 1 console 2 syslog 3 e-mail The default is None.

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Config)# stats group received timerange test reporting console email syslog
```

```
(FASTPATH Routing) (Config)# stats group received-errors timerange test reporting email syslog
```

```
(FASTPATH Routing) (Config)# stats group received- transmitted timerange test reporting none
```

3.21.1.1 no stats group

This command deletes the configured group.

Format *no stats group group id|name*

Mode Global Config

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Config)# no stats group received
```

```
(FASTPATH Routing) (Config)# no stats group received-errors
```

```
(FASTPATH Routing) (Config)# no stats group received-transmitted
```

3.21.2 stats flow-based

This command configures flow based statistics rules for the given parameters over the specified time range. Only an IPv4 address is allowed as source and destination IP address.

Format stats flow-based *rule-id* timerange *time range name* [{srcip *ip-address*} {dstip *ip-address*} {srcmac *mac-address*} {dstmac *mac-address*} {srctcpport *portid*} {dsttcpport *portid*} {srcudpport *portid*} {dstudpport *portid*}]

Mode Global Config

Parameter	Description
rule ID	The flow-based rule ID. The range is 1 to 16. The default is None.
time range name	Name of the time range for the group or the flow-based rule. The range is 1 to 31 alphanumeric characters. The default is None.
srcip ip-address	The source IP address.
dstip ip-address	The destination IP address.
srcmac mac-address	The source MAC address.
dstmac mac-address	The destination MAC address.
srctcpport portid	The source TCP port number.
dsttcpport portid	The destination TCP port number.
srcudpport portid	The source UDP port number.
dstudpport portid	The destination UDP port number.

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Config)#stats flow-based 1 timerange test srcip 1.1.1.1 dstip 2.2.2.2 srcmac 1234 dstmac 1234 srctcpport 123 dsttcpport 123 srcudpport 123 dstudpport 123
```

```
(FASTPATH Routing) (Config)#stats flow-based 2 timerange test srcip 1.1.1.1 dstip 2.2.2.2 srctcpport 123 dsttcpport 123 srcudpport 123 dstudpport 123
```

3.21.2.1 no stats flow-based

This command deletes flow-based statistics.

Format stats flow-based *rule-id*

Mode Global Config

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Config)# no stats flow-based 1
(FASTPATH Routing) (Config)# no stats flow-based 2
```

3.21.3 stats flow-based reporting

This command configures the reporting mechanism for all the flow-based rules configured on the system. There is no per flow-based rule reporting mechanism. Setting the reporting method as **none** resets all the reporting methods.

Format stats flow-based reporting *list of reporting methods*

Mode Global Config

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Config)# stats flow-based reporting console email syslog
(FASTPATH Routing) (Config)# stats flow-based reporting email syslog
(FASTPATH Routing) (Config)# stats flow-based reporting none
```

3.21.4 stats group

This command applies the group specified on an interface or interface-range.

Format stats group <group id | name>

Mode Interface Config

Parameter	Description
group id	The unique identifier for the group.
name	The name of the group.

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Interface 0/1-0/10)# stats group 1
(FASTPATH Routing) (Interface 0/1-0/10)# stats group 2
```

3.21.4.1 no stats group

This command deletes the interface or interface-range from the group specified.

Format no stats group <group id | name>

Mode Interface Config

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Interface 0/1-0/10)# no stats group 1
(FASTPATH Routing) (Interface 0/1-0/10)# no stats group 2
```

3.21.5 stats flow-based

This command applies the flow-based rule specified by the ID on an interface or interface-range.

Format stats flow-based <rule-id>

Mode Interface Config

Parameter	Description
rule-id	The unique identifier for the flow-based rule.

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Interface 0/1-0/10)# stats flow-based 1
(FASTPATH Routing) (Interface 0/1-0/10)# stats flow-based 2
```

3.21.5.1 no stats flow-based

This command deletes the interface or interface-range from the flow-based rule specified.

Format no stats flow-based <rule-id>

Mode Interface Config

Example: The following shows examples of the command.

```
(FASTPATH Routing) (Interface 0/1-0/10)# no stats flow-based 1
```

```
(FASTPATH Routing) (Interface 0/1-0/10)# no stats flow-based 2
```

3.21.6 show stats group

This command displays the configured time range and the interface list for the group specified and shows collected statistics for the specified time-range name on the interface list after the time-range expiry.

Format show stats group <group id | name>

Mode Privileged EXEC

Parameter	Description
group id	The unique identifier for the group.
name	The name of the group.

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show stats group received
```

```
Group: received
```

```
Time Range: test
```

```
Interface List
```

```
-----
```

```
0/2, 0/4, lag 1
```

Counter ID	Interface	Counter Value
-----	-----	-----
Rx Total	0/2	951600
Rx Total	0/4	304512
Rx Total	lag 1	0
Rx 64	0/2	0
Rx 64	0/4	4758
Rx 64	lag 1	0
Rx 65to128	0/2	0
Rx 65to128	0/4	0
Rx 65to128	lag 1	0
Rx 128to255	0/2	4758
Rx 128to255	0/4	0
Rx 128to255	lag 1	0
Rx 256to511	0/2	0

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show stats group port-utilization
```

```
Group: port-utilization
```

```
Time Range: test
```

```
Interface List
```

```
-----
```

```
0/2, 0/4, lag 1
```

```
Interface    Utilization (%)
```

```
-----
```

```
0/2      0
0/4      0
lag 1    0
```

3.21.7 show stats flow-based

This command displays the configured time range, flow-based rule parameters, and the interface list for the flow specified.

Format show stats flow-based *rule-id*|all

Mode Privileged EXEC

Parameter	Description
rule-id	The unique identifier for the flow-based rule.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show stats flow-based all

```
Flow based rule Id..... 1
Time Range..... test
Source IP..... 1.1.1.1
Source MAC..... 1234
Source TCP Port..... 123
Source UDP Port..... 123
Destination IP..... 2.2.2.2
Destination MAC..... 1234
Destination TCP Port..... 123
Destination UDP Port..... 123
Interface List
-----
0/1 - 0/2
```

```
Interface Hit Count
-----
0/1      100
0/2      0
```

```
Flow based rule Id..... 2
Time Range..... test
Source IP..... 1.1.1.1
Source TCP Port..... 123
Source UDP Port..... 123
Destination IP..... 2.2.2.2
Destination TCP Port..... 123
Destination UDP Port..... 123
```

```
Interface List
-----
0/1 - 0/2
```

```
Interface Hit Count
-----
0/1      100
0/2      0
```

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show stats flow-based 2

```
Flow based rule Id..... 2
```

```
Time Range..... test
Source IP..... 1.1.1.1
Source TCP Port..... 123
Source UDP Port..... 123
Destination IP..... 2.2.2.2
Destination TCP Port..... 123
Destination UDP Port..... 123
```

Interface List

0/1 - 0/2

Interface	Hit Count

0/1	100

0/2	0

4 Switching Commands

This chapter describes the switching commands available in the FASTPATH CLI.

The Switching Commands chapter includes the following sections:

- "Port Configuration Commands" on page 304"
- "Spanning Tree Protocol Commands" on page 312"
- "Loop Protection Commands" on page 338"
- "VLAN Commands" on page 341"
- "Double VLAN Commands" on page 352"
- "Private VLAN Commands" on page 355"
- "Switch Ports" on page 357"
- "Voice VLAN Commands" on page 360"
- "Provisioning (IEEE 802.1p) Commands" on page 362"
- "Asymmetric Flow Control" on page 362"
- "Protected Ports Commands" on page 364"
- "GARP Commands" on page 366"
- "GVRP Commands" on page 368"
- "GMRP Commands" on page 369"
- "Port-Based Network Access Control Commands" on page 371"
- "802.1X Supplicant Commands" on page 388"
- "Storm-Control Commands" on page 391"
- "Link Dependency Commands" on page 398"
- "Link Local Protocol Filtering Commands" on page 401"
- "MVR Commands" on page 402"
- "Port-Channel/LAG (802.3ad) Commands" on page 407"
- "VPC Commands" on page 425"
- "Port Mirroring Commands" on page 436"
- "Static MAC Filtering Commands" on page 442"
- "DHCP L2 Relay Agent Commands" on page 446"
- "DHCP Client Commands" on page 452"
- "DHCP Snooping Configuration Commands" on page 454"
- "Dynamic ARP Inspection Commands" on page 462"
- "IGMP Snooping Configuration Commands" on page 468"
- "IGMP Snooping Querier Commands" on page 476"
- "MLD Snooping Commands" on page 479"
- "MLD Snooping Querier Commands" on page 486"
- "Port Security Commands" on page 488"
- "LLDP (802.1AB) Commands" on page 492"
- "LLDP-MED Commands" on page 499"
- "Denial of Service Commands" on page 505"
- "MAC Database Commands" on page 515"
- "ISDP Commands" on page 516"
- "Interface Error Disable and Auto Recovery" on page 522"
- Multicast Handling Commands
- "Port Bridging Commands" on page 527"



Note...

The commands in this chapter are in one of three functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- Clear commands clear some or all of the settings to factory defaults.

4.1 Port Configuration Commands

This section describes the commands you use to view and configure port settings.

4.1.1 interface

This command gives you access to the Interface Config mode, which allows you to enable or modify the operation of an interface (port). You can also specify a range of ports to configure at the same time by specifying the starting *sSlot/port* and ending *sSlot/port*, separated by a hyphen.

Format interface {*sSlot/port* | *sSlot/port(startrange)-sSlot/port(endrange)*}

Mode Global Config

Example: The following example enters Interface Config mode for port 0/1:

```
(switch) #configure
(switch) (config)#interface 0/1
(switch) (interface 0/1)#
```

Example: The following example enters Interface Config mode for ports 0/1 through 0/4:

```
(switch) #configure
(switch) (config)#interface 0/1-0/4
(switch) (interface 0/1-0/4)#
```

4.1.2 auto-negotiate

This command enables automatic negotiation on a port or range of ports.

Default enabled

Format auto-negotiate

Mode Interface Config

4.1.2.1 no auto-negotiate

This command disables automatic negotiation on a port.



Note...

Automatic sensing is disabled when automatic negotiation is disabled.

Format no auto-negotiate

Mode Interface Config

4.1.3 auto-negotiate all

This command enables automatic negotiation on all ports.

Default enabled

Format auto-negotiate all

Mode Global Config

4.1.3.1 no auto-negotiate all

This command disables automatic negotiation on all ports.

Format no auto-negotiate all

Mode Global Config

4.1.4 description

Use this command to create an alpha-numeric description of an interface or range of interfaces.

Format description *description*

Mode Interface Config

4.1.5 media-type

Use this command to change between fiber and copper mode on the Combo port.

- Combo Port: A port or an interface that can operate in either copper or in fiber mode.
- Copper and Fiber port: A port that uses copper a medium for communication (for example, RJ45 ports). A fiber port uses the fiber optics as a medium for communication (for example, example SFP ports).

Default Auto-select, SFP preferred

Format media-type {auto-select | rj45 | sfp }

Mode Interface Config

The following modes are supported by the `media-type` command.

- Auto-select, SFP preferred: The medium is selected automatically based on the physical medium presence. However, when both the fiber and copper links are connected, the fiber link takes precedence and the fiber link is up.
- Auto-select, RJ45 preferred: The medium is selected automatically based on the physical medium presence. However, when both the fiber and copper links are connected, the copper link takes precedence and the copper link is up.
- SFP: Only the fiber medium works. The copper medium is always down.
- RJ45: Only the copper medium works. The fiber medium is always down.

4.1.5.1 no media-type

Use this command to revert the `media-type` configuration and configure the default value on the interface.

Format no media-type

Mode Interface Config

4.1.6 mtu

Use the `mtu` command to set the maximum transmission unit (MTU) size, in bytes, for frames that ingress or egress the interface. You can use the `mtu` command to configure jumbo frame support for physical and port-channel (LAG) interfaces. For the standard FASTPATH implementation, the MTU size is a valid integer between 1522–9216 for tagged packets and a valid integer between 1518 – 9216 for untagged packets.

**Note...**

To receive and process packets, the Ethernet MTU must include any extra bytes that Layer-2 headers might require. To configure the IP MTU size, which is the maximum size of the IP packet (IP Header + IP payload), see “ip mtu” on page 540”.

Default 1518 (untagged)
Format mtu 1518-12288
Mode Interface Config

4.1.6.1 no mtu

This command sets the default MTU size (in bytes) for the interface.

Format no mtu
Mode Interface Config

4.1.7 shutdown

This command disables a port or range of ports.

**Note...**

You can use the shutdown command on physical and port-channel (LAG) interfaces, but not on VLAN routing interfaces.

Default enabled
Format shutdown
Mode Interface Config

4.1.7.1 no shutdown

This command enables a port.

Format no shutdown
Mode Interface Config

4.1.8 shutdown all

This command disables all ports.

**Note...**

You can use the shutdown all command on physical and port-channel (LAG) interfaces, but not on VLAN routing interfaces.

Default enabled
Format shutdown all
Mode Global Config

4.1.8.1 no shutdown all

This command enables all ports.

Format no shutdown all
Mode Global Config

4.1.9 speed

Use this command to enable or disable auto-negotiation and set the speed that will be advertised by that port. The duplex parameter allows you to set the advertised speed for both half as well as full duplex mode.

Use the `auto` keyword to enable auto-negotiation on the port. Use the command without the `auto` keyword to ensure auto-negotiation is disabled and to set the port speed and mode according to the command values. If auto-negotiation is disabled, the speed and duplex mode must be set.

Default Auto-negotiation is enabled.
Format speed auto {10|100|1000|2.5G|10G|20G|25G|40G|50G|100G}
 [10|100|1000|2.5G|10G|20G|25G|40G|50G|100G] [half-duplex|full-duplex]
 speed {10|100|1000|2.5G|10G|20G|25G|40G|50G|100G} {half-duplex|full-duplex}.
Mode Interface Config

4.1.10 speed all

This command sets the speed and duplex setting for all interfaces if auto-negotiation is disabled. If auto-negotiation is enabled, an error message is returned. Use the `no auto-negotiate` command to disable.

Default Auto-negotiation is enabled. Adv. is 10h, 10f, 100h, 100f, 1000f.
Format speed all {100 | 10} {half-duplex | full-duplex}
Mode Global Config

4.1.11 show interface media-type

Use this command to display the media-type configuration of the interface.

Format show interface media-type
Mode Privileged EXEC

The following information is displayed for the command.

Term	Definition
Port	Interface in slot/port format.

Term	Definition
Configured Media Type	The media type for the interface. auto-select—The media type is automatically selected. The preferred media type is displayed. RJ45—RJ45 SFP—SFP
Active	Displays the current operational state of the combo port.

Example: The following command shows the command output:
(Routing) #show interface media-type

Port	Configured Media Type	Active
-----	-----	-----
0/21	SFP	RJ45
0/22	auto-select, SFP preferred	Down
0/23	auto-select, SFP preferred	RJ45
0/24	auto-select, SFP preferred	Down

4.1.12 show port

This command displays port information.

Format show port {*intf-range* | all}

Mode Privileged EXEC

Parameter	Definition
Interface	slot/port
Type	If not blank, this field indicates that this port is a special type of port. The possible values are: • Mirror — this port is a monitoring port. For more information, see "Port Mirroring Commands" on page 436". • PC Mbr— this port is a member of a port-channel (LAG). • Probe — this port is a probe port.
Admin Mode	The Port control administration state. The port must be enabled in order for it to be allowed into the network. May be enabled or disabled. The factory default is enabled.
Physical Mode	The desired port speed and duplex mode. If auto-negotiation support is selected, then the duplex mode and speed is set from the auto-negotiation process. Note that the maximum capability of the port (full duplex -100M) is advertised. Otherwise, this object determines the port's duplex mode and transmission rate. The factory default is Auto.
Physical Status	The port speed and duplex mode.
Link Status	The Link is up or down.
Link Trap	This object determines whether or not to send a trap when link status changes. The factory default is enabled.
LACP Mode	LACP is enabled or disabled on this port.

Example: The following command shows an example of the command output for all ports.
(Routing) #show port all

Intf	Type	Admin Mode	Physical Mode	Physical Status	Link Status	Link Trap	LACP Mode	Actor Timeout
-----	-----	-----	-----	-----	-----	-----	-----	-----
0/1		Enable	Auto	100 Full	Up	Enable	Enable	long
0/2		Enable	Auto	100 Full	Up	Enable	Enable	long

0/3	Enable	Auto		Down	Enable	Enable	long
0/4	Enable	Auto	100 Full	Up	Enable	Enable	long
0/5	Enable	Auto	100 Full	Up	Enable	Enable	long
0/6	Enable	Auto	100 Full	Up	Enable	Enable	long
0/7	Enable	Auto	100 Full	Up	Enable	Enable	long
0/8	Enable	Auto	100 Full	Up	Enable	Enable	long
1/1	Enable			Down	Disable	N/A	N/A
1/2	Enable			Down	Disable	N/A	N/A
1/3	Enable			Down	Disable	N/A	N/A
1/4	Enable			Down	Disable	N/A	N/A
1/5	Enable			Down	Disable	N/A	N/A
1/6	Enable			Down	Disable	N/A	N/A

Example: The following command shows an example of the command output for a range of ports.
(Routing) #show port 0/1-1/6

Intf	Type	Admin Mode	Physical Mode	Physical Status	Link Status	Link Trap	LACP Mode	Actor Timeout
0/1		Enable	Auto	100 Full	Up	Enable	Enable	long
0/2		Enable	Auto	100 Full	Up	Enable	Enable	long
0/3		Enable	Auto		Down	Enable	Enable	long
0/4		Enable	Auto	100 Full	Up	Enable	Enable	long
0/5		Enable	Auto	100 Full	Up	Enable	Enable	long
0/6		Enable	Auto	100 Full	Up	Enable	Enable	long
0/7		Enable	Auto	100 Full	Up	Enable	Enable	long
0/8		Enable	Auto	100 Full	Up	Enable	Enable	long
1/1		Enable			Down	Disable	N/A	N/A
1/2		Enable			Down	Disable	N/A	N/A
1/3		Enable			Down	Disable	N/A	N/A
1/4		Enable			Down	Disable	N/A	N/A
1/5		Enable			Down	Disable	N/A	N/A
1/6		Enable			Down	Disable	N/A	N/A

4.1.13 show port advertise

Use this command to display the local administrative link advertisement configuration, local operational link advertisement, and the link partner advertisement for an interface. It also displays priority Resolution for speed and duplex as per 802.3 Annex 28B.3. It displays the Auto negotiation state, Phy Master/Slave Clock configuration, and Link state of the port.

If the link is down, the Clock is displayed as *No Link*, and a dash is displayed against the Oper Peer advertisement, and Priority Resolution. If Auto negotiation is disabled, then the admin Local Link advertisement, operational local link advertisement, operational peer advertisement, and Priority resolution fields are not displayed.

If this command is executed without the optional *sSlot/port* parameter, then it displays the Auto-negotiation state and operational Local link advertisement for all the ports. Operational link advertisement will display speed only if it is supported by both local as well as link partner. If auto-negotiation is disabled, then operational local link advertisement is not displayed.

Format show port advertise [*sSlot/port*]

Mode Privileged EXEC

Example: The following commands show the command output with and without the optional parameter:
(FASTPATH Switching)#show port advertise 0/1

Port: 0/1
Type: Gigabit - Level

Link State: Down
 Auto Negotiation: Enabled
 Clock: Auto

	1000f	1000h	100f	100h	10f	10h
Admin Local Link Advertisement	no	no	yes	no	yes	no
Oper Local Link Advertisement	no	no	yes	no	yes	no
Oper Peer Advertisement	no	no	yes	yes	yes	yes
Priority Resolution	-	-	yes	-	-	-

(FASTPATH Switching)#show port advertise

Port	Type	Neg	Operational Link Advertisement
0/1	Gigabit - Level	Enabled	1000f, 100f, 100h, 10f, 10h
0/2	Gigabit - Level	Enabled	1000f, 100f, 100h, 10f, 10h
0/3	Gigabit - Level	Enabled	1000f, 100f, 100h, 10f, 10h

4.1.14 show port description

This command displays the interface description. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.

Format `show port description slot/port`

Mode Privileged EXEC

Term	Definition
Interface	slot/port
ifIndex	The interface index number associated with the port.
Description	The alpha-numeric description of the interface created by the command "description" on page 305".
MAC address	The MAC address of the port. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Bit Offset Val	The bit offset value.

Example: The following shows example CLI display output for the command.

(FASTPATH Switching) #show port description 0/1

```
Interface.....0/1
ifIndex.....1
Description.....
MAC address.....00:10:18:82:0C:10
Bit Offset Val.....1
```

4.1.15 advertise speed

This command sets auto-negotiation advertised speed parameters to an interface or a range of interfaces. If full/half-duplex is not specified the speed is valid for both modes.

Format `advertise speed {10 | 100} [half-duplex | full-duplex]`
 `advertise speed {1000 | 10g} [full-duplex]`

Mode Interface Config

4.1.15.1 no advertise speed

This command resets auto-negotiation advertised speed parameters.

Format **no advertise speed** {10 | 100} [*half-duplex* | *full-duplex*]
 no advertise speed {1000 | 10g} [*full-duplex*]
Mode Interface Config

4.1.16 show advertise speed

This command lists the auto-negotiation advertised speed parameters. The values are listed for a specified interface.

Format **show advertise speed** *unit/slot/port*
Mode Privileged Exec

4.1.17 block

This command sets an interface or a range of interfaces in blocking mode. A blocking ports will not receive or forward data frames. The command is only allowed if no spanning tree is enabled because the spanning tree is setting the port states itself. If the ports are currently disabled, the state is not changed until they will become enabled. The state of the ports can be listed (spanning tree) by **show spanning-tree mst port summary 0 all**.

Format **block**
Mode Interface Config

4.1.17.1 no block

This command resets an interface or a range of interfaces in non-blocking mode.

Format **no block**
Mode Interface Config

4.1.18 show block

This command displays the blocking mode for all or a specified port. Additionally other administrative port information (e.g. general admin mode) is displayed.

Format **show block**
Mode Privileged Exec

4.1.19 mac-learn

This command sets the HW learning for an interface. For default the HW learning mode is enabled.

Format **mac-learn**
Mode Interface Config

4.1.19.1 no mac-learn

If the "no"-command is set the interface will not learn any MAC address.

Format `no mac-learn`
Mode Interface Config

4.1.20 show mac-learn

This command displays the HW learning mode for all or a specified port. Additionally other administrative port information (e.g. general admin mode) is displayed.

Format `show mac-learn`
Mode Privileged Exec

4.2 Spanning Tree Protocol Commands

This section describes the commands you use to configure Spanning Tree Protocol (STP). STP helps prevent network loops, duplicate messages, and network instability.



Note...

STP is enabled on the switch and on all ports and LAGs by default.



Note...

If STP is disabled, the system does not forward BPDU messages.

4.2.1 spanning-tree

This command sets the spanning-tree operational mode to enabled.

Default enabled
Format `spanning-tree`
Mode Global Config

4.2.1.1 no spanning-tree

This command sets the spanning-tree operational mode to disabled. While disabled, the spanning-tree configuration is retained and can be changed, but is not activated.

Format `no spanning-tree`
Mode Global Config

4.2.2 spanning-tree auto-edge

Use this command to allow the interface to become an edge port if it does not receive any BPDUs within a given amount of time.

Default	Enabled
Format	spanning-tree auto-edge
Mode	Interface Config

4.2.2.1 no spanning-tree auto-edge

This command resets the auto-edge status of the port to the default value.

Format	no spanning-tree auto-edge
Mode	Interface Config

4.2.3 spanning-tree backbonefast

Use this command to enable the detection of indirect link failures and accelerate spanning tree convergence on PVSTP configured switches.

Backbonefast accelerates finding an alternate path when an indirect link to the root port goes down.

Backbonefast can be configured even if the switch is configured for MST(RSTP) or PVST mode. It only has an effect when the switch is configured for the PVST mode.

If a backbonefast-enabled switch receives an inferior BPDU from its designated switch on a root or blocked port, it sets the maximum aging time on the interfaces on which it received the inferior BPDU if there are alternate paths to the designated switch. This allows a blocked port to immediately move to the listening state where the port can be transitioned to the forwarding state in the normal manner.

On receipt of an inferior BPDU from a designated bridge, backbonefast enabled switches send a Root Link Query (RLQ) request to all non-designated ports except the port from which it received the inferior BPDU. This check validates that the switch can receive packets from the root on ports where it expects to receive BPDUs. The port from which the original inferior BPDU was received is excluded because it has already encountered a failure. Designated ports are excluded as they do not lead to the root.

On receipt of an RLQ response, if the answer is negative, the receiving port has lost connection to the root and its BPDU is immediately aged out. If all nondesignated ports have already received a negative answer, the whole bridge has lost the root and can start the STP calculation from scratch.

If the answer confirms the switch can access the root bridge on a port, it can immediately age out the port on which it initially received the inferior BPDU.

A bridge that sends an RLQ puts its bridge ID in the PDU. This ensures that it does not flood the response on designated ports.

A bridge that receives an RLQ and has connectivity to the root forwards the query toward the root through its root port.

A bridge that receives a RLQ request and does not have connectivity to the root (switch bridge ID is different from the root bridge ID in the query) or is the root bridge immediately answers the query with its root bridge ID.

RLQ responses are flooded on designated ports.

Default	NA
Format	spanning-tree backbonefast
Mode	Global Config

4.2.3.1 no spanning-tree backbonefast

This command disables backbonefast.

**Note...**

PVRSTP embeds support for FastBackbone and FastUplink. Even if FastUplink and FastBackbone are configured, they are effective only in PVSTP mode.

Format no spanning-tree backbonefast

Mode Global Config

4.2.4 spanning-tree bpdupfilter

Use this command to enable BPDU Filter on an interface or range of interfaces.

Default disabled

Format spanning-tree bpdupfilter

Mode Interface Config

4.2.4.1 no spanning-tree bpdupfilter

Use this command to disable BPDU Filter on the interface or range of interfaces.

Default disabled

Format no spanning-tree bpdupfilter

Mode Interface Config

4.2.5 spanning-tree bpdupfilter default

Use this command to enable BPDU Filter on all the edge port interfaces.

Default disabled

Format spanning-tree bpdupfilter default

Mode Global Config

4.2.5.1 no spanning-tree bpdupfilter default

Use this command to disable BPDU Filter on all the edge port interfaces.

Default disabled

Format no spanning-tree bpdupfilter default

Mode Global Config

4.2.6 spanning-tree bpduflood

Use this command to enable BPDU Flood on an interface or range of interfaces.

Default disabled
Format spanning-tree bpduflood
Mode Interface Config

4.2.6.1 no spanning-tree bpduflood

Use this command to disable BPDU Flood on the interface or range of interfaces.

Default disabled
Format no spanning-tree bpduflood
Mode Interface Config

4.2.7 spanning-tree bpduguard

Use this command to enable BPDU Guard on the switch.

Default disabled
Format spanning-tree bpduguard
Mode Global Config

4.2.7.1 no spanning-tree bpduguard

Use this command to disable BPDU Guard on the switch.

Default disabled
Format no spanning-tree bpduguard
Mode Global Config

4.2.8 spanning-tree bpdumigrationcheck

Use this command to force a transmission of rapid spanning tree (RSTP) and multiple spanning tree (MSTP) BPDUs. Use the *slot/port* parameter to transmit a BPDU from a specified interface, or use the *all* keyword to transmit RST or MST BPDUs from all interfaces. This command forces the BPDU transmission when you execute it, so the command does not change the system configuration or have a **no** version.

Format spanning-tree bpdumigrationcheck {*slot/port* | *all*}
Mode Global Config

4.2.9 spanning-tree configuration name

This command sets the Configuration Identifier Name for use in identifying the configuration that this switch is currently using. The *name* is a string of up to 32 characters.

Default base MAC address in hexadecimal notation
Format spanning-tree configuration name *name*
Mode Global Config

4.2.9.1 no spanning-tree configuration name

This command resets the Configuration Identifier Name to its default.

Format no spanning-tree configuration name
Mode Global Config

4.2.10 spanning-tree configuration revision

This command sets the Configuration Identifier Revision Level for use in identifying the configuration that this switch is currently using. The Configuration Identifier Revision Level is a number in the range of 0 to 65535.

Default 0
Format spanning-tree configuration revision 0-65535
Mode Global Config

4.2.10.1 no spanning-tree configuration revision

This command sets the Configuration Identifier Revision Level for use in identifying the configuration that this switch is currently using to the default value.

Format no spanning-tree configuration revision
Mode Global Config

4.2.11 spanning-tree cost

Use this command to configure the external path cost for port used by a MST instance. When the `auto` keyword is used, the path cost from the port to the root bridge is automatically determined by the speed of the interface. To configure the cost manually, specify a `cost` value from 1–200000000.

Default auto
Format spanning-tree cost {cost | auto}
Mode Interface Config

4.2.11.1 no spanning-tree cost

This command resets the auto-edge status of the port to the default value.

Format no spanning-tree cost
Mode Interface Config

4.2.12 spanning-tree edgeport

This command specifies that an interface (or range of interfaces) is an Edge Port within the common and internal spanning tree. This allows this port to transition to Forwarding State without delay.

Format spanning-tree edgeport
Mode Interface Config

4.2.12.1 no spanning-tree edgeport

This command specifies that this port is not an Edge Port within the common and internal spanning tree.

Format no spanning-tree edgeport

Mode Interface Config

4.2.13 spanning-tree forceversion

This command sets the Force Protocol Version parameter to a new value.

Default 802.1s

Format spanning-tree forceversion {802.1d | 802.1s | 802.1w}

Mode Global Config

- Use 802.1d to specify that the switch transmits ST BPDUs rather than MST BPDUs (IEEE 802.1d functionality supported).
- Use 802.1s to specify that the switch transmits MST BPDUs (IEEE 802.1s functionality supported).
- Use 802.1w to specify that the switch transmits RST BPDUs rather than MST BPDUs (IEEE 802.1w functionality supported).

4.2.13.1 no spanning-tree forceversion

This command sets the Force Protocol Version parameter to the default value.

Format no spanning-tree forceversion

Mode Global Config

4.2.14 spanning-tree forward-time

This command sets the Bridge Forward Delay parameter to a new value for the common and internal spanning tree. The forward-time value is in seconds within a range of 4 to 30, with the value being greater than or equal to $(\text{Bridge Max Age} / 2) + 1$.

Default 15

Format spanning-tree forward-time 4-30

Mode Global Config

4.2.14.1 no spanning-tree forward-time

This command sets the Bridge Forward Delay parameter for the common and internal spanning tree to the default value.

Format no spanning-tree forward-time

Mode Global Config

4.2.15 spanning-tree guard

This command selects whether loop guard or root guard is enabled on an interface or range of interfaces. If neither is enabled, then the port operates in accordance with the multiple spanning tree protocol.

Default none
Format spanning-tree guard {none | root | loop}
Mode Interface Config

4.2.15.1 no spanning-tree guard

This command disables loop guard or root guard on the interface.

Format no spanning-tree guard
Mode Interface Config

4.2.16 spanning-tree max-age

This command sets the Bridge Max Age parameter to a new value for the common and internal spanning tree. The max-age value is in seconds within a range of 6 to 40, with the value being less than or equal to $2 \times (\text{Bridge Forward Delay} - 1)$.

Default 20
Format spanning-tree max-age 6-40
Mode Global Config

4.2.16.1 no spanning-tree max-age

This command sets the Bridge Max Age parameter for the common and internal spanning tree to the default value.

Format no spanning-tree max-age
Mode Global Config

4.2.17 spanning-tree max-hops

This command sets the Bridge Max Hops parameter to a new value for the common and internal spanning tree. The max-hops value is a range from 6 to 40.

Default 20
Format spanning-tree max-hops 6-40
Mode Global Config

4.2.17.1 no spanning-tree max-hops

This command sets the Bridge Max Hops parameter for the common and internal spanning tree to the default value.

Format no spanning-tree max-hops
Mode Global Config

4.2.18 spanning-tree mode

This command configures global spanning tree mode per VLAN spanning tree. On a switch, only one mode can be enabled at a time.

When PVSTP or rapid PVSTP (PVRSTP) is enabled, MSTP/RSTP/STP is operationally disabled. To reenable MSTP/RSTP/STP, disable PVSTP/PVRSTP. By default, FASTPATH has MSTP enabled. In PVSTP or PVRSTP mode, BPDUs contain per-VLAN information instead of the common spanning-tree information (MST/RSTP).

PVSTP maintains independent spanning tree information about each configured VLAN. PVSTP uses IEEE 802.1Q trunking and allows a trunked VLAN to maintain blocked or forwarding state per port on a per-VLAN basis. This allows a trunk port to be forwarded on some VLANs and blocked on other VLANs.

PVRSTP is based on the IEEE 8012.1w standard. It supports fast convergence IEEE 802.1D. PVRSTP is compatible with IEEE 802.1D spanning tree. PVRSTP sends BPDUs on all ports, instead of only the root bridge sending BPDUs, and supports the discarding, learning, and forwarding states.

When the mode is changed to PVRSTP, version 0 STP BPDUs are no longer transmitted and version 2 PVRSTP BPDUs that carry per-VLAN information are transmitted on the VLANs enabled for spanning-tree. If a version 0 BPDU is seen, PVRSTP reverts to sending version 0 BPDUs.

Per VLAN Rapid Spanning Tree Protocol (PVRSTP) embeds support for PVSTP FastBackbone and FastUplink. There is no provision to enable or disable these features in PVRSTP.

Default	Disabled
Format	spanning-tree mode {pvst rapid-pvst}
Mode	Global Config

4.2.18.1 no spanning-tree mode

This command globally configures the switch to the default FASTPATH spanning-tree mode, MSTP.

Format	no spanning-tree mode { pvst rapid-pvst }
Mode	Global Configuration

4.2.19 spanning-tree mst

This command sets the Path Cost or Port Priority for this port within the multiple spanning tree instance or in the common and internal spanning tree. If you specify an *mstid* parameter that corresponds to an existing multiple spanning tree instance, the configurations are done for that multiple spanning tree instance. If you specify 0 (defined as the default CIST ID) as the *mstid*, the configurations are done for the common and internal spanning tree instance.

If you specify the **cost** option, the command sets the path cost for this port within a multiple spanning tree instance or the common and internal spanning tree instance, depending on the *mstid* parameter. You can set the path cost as a number in the range of 1 to 200000000 or **auto**. If you select **auto** the path cost value is set based on Link Speed.

If you specify the **port-priority** option, this command sets the priority for this port within a specific multiple spanning tree instance or the common and internal spanning tree instance, depending on the *mstid* parameter. The port-priority value is a number in the range of 0 to 240 in increments of 16.

Default	• cost—auto • port-priority—128
Format	spanning-tree mst <i>mstid</i> {{cost 1-200000000 auto} port-priority 0-240}
Mode	Interface Config

4.2.19.1 no spanning-tree mst

This command sets the Path Cost or Port Priority for this port within the multiple spanning tree instance, or in the common and internal spanning tree to the respective default values. If you specify an *mstid* parameter that corresponds to an existing multiple spanning tree instance, you are configuring that multiple spanning tree instance. If you specify 0 (defined as the default CIST ID) as the *mstid*, you are configuring the common and internal spanning tree instance.

If the you specify **cost**, this command sets the path cost for this port within a multiple spanning tree instance or the common and internal spanning tree instance, depending on the *mstid* parameter, to the default value, i.e., a path cost value based on the Link Speed.

If you specify **port-priority**, this command sets the priority for this port within a specific multiple spanning tree instance or the common and internal spanning tree instance, depending on the *mstid* parameter, to the default value.

Format	no spanning-tree mst <i>mstid</i> {cost port-priority}
Mode	Interface Config

4.2.20 spanning-tree mst instance

This command adds a multiple spanning tree instance to the switch. The parameter *mstid* is a number within a range of 1 to 4094, that corresponds to the new instance ID to be added. The maximum number of multiple instances supported by the switch is 4.

Default	none
Format	spanning-tree mst instance <i>mstid</i>
Mode	Global Config

4.2.20.1 no spanning-tree mst instance

This command removes a multiple spanning tree instance from the switch and reallocates all VLANs allocated to the deleted instance to the common and internal spanning tree. The parameter *mstid* is a number that corresponds to the desired existing multiple spanning tree instance to be removed.

Format	no spanning-tree mst instance <i>mstid</i>
Mode	Global Config

4.2.21 spanning-tree mst priority

This command sets the bridge priority for a specific multiple spanning tree instance. The parameter *mstid* is a number that corresponds to the desired existing multiple spanning tree instance. The priority value is a number within a range of 0 to 4094.

If you specify 0 (defined as the default CIST ID) as the *mstid*, this command sets the Bridge Priority parameter to a new value for the common and internal spanning tree. The bridge priority value is a number within a range of 0 to 4094. The twelve least significant bits are masked according to the 802.1s specification. This causes the priority to be rounded down to the next lower valid priority.

Default 32768
Format spanning-tree mst priority *mstid* 0-4094
Mode Global Config

4.2.21.1 no spanning-tree mst priority

This command sets the bridge priority for a specific multiple spanning tree instance to the default value. The parameter *mstid* is a number that corresponds to the desired existing multiple spanning tree instance.

If 0 (defined as the default CIST ID) is passed as the *mstid*, this command sets the Bridge Priority parameter for the common and internal spanning tree to the default value.

Format no spanning-tree mst priority *mstid*
Mode Global Config

4.2.22 spanning-tree mst vlan

This command adds an association between a multiple spanning tree instance and one or more VLANs so that the VLAN(s) are no longer associated with the common and internal spanning tree. The parameter *mstid* is a multiple spanning tree instance identifier, in the range of 0 to 4094, that corresponds to the desired existing multiple spanning tree instance. The *vlanid* can be specified as a single VLAN, a list, or a range of values. To specify a list of VLANs, enter a list of VLAN IDs in the range 1 to 4093, each separated by a comma with no spaces in between. To specify a range of VLANs, separate the beginning and ending VLAN ID with a dash (-). Spaces and zeros are not permitted. The VLAN IDs may or may not exist in the system.

Format spanning-tree mst vlan *mstid* *vlanid*
Mode Global Config

4.2.22.1 no spanning-tree mst vlan

This command removes an association between a multiple spanning tree instance and one or more VLANs so that the VLAN(s) are again associated with the common and internal spanning tree.

Format no spanning-tree mst vlan *mstid* *vlanid*
Mode Global Config

4.2.23 spanning-tree port mode

This command sets the Administrative Switch Port State for this port to enabled for use by spanning tree.

Default enabled
Format spanning-tree port mode
Mode Interface Config

4.2.23.1 no spanning-tree port mode

This command sets the Administrative Switch Port State for this port to disabled, disabling the port for use by spanning tree.

Format no spanning-tree port mode
Mode Interface Config

4.2.24 spanning-tree port mode all

This command sets the Administrative Switch Port State for all ports to enabled.

Default enabled
Format spanning-tree port mode all
Mode Global Config

4.2.24.1 no spanning-tree port mode all

This command sets the Administrative Switch Port State for all ports to disabled.

Format no spanning-tree port mode all
Mode Global Config

4.2.25 spanning-tree port-priority

Use this command to change the priority value of the port to allow the operator to select the relative importance of the port in the forwarding process. Set this value to a lower number to prefer a port for forwarding of frames.

All LAN ports have 128 as priority value by default. PVSTP/PVRSTP puts the LAN port with the lowest LAN port number in the forwarding state and blocks other LAN ports.

The application uses the port priority value when the LAN port is configured as an edge port.

Default enabled
Format spanning-tree port-priority 0-240
Mode Interface Config

4.2.26 spanning-tree tcnguard

Use this command to enable TCN guard on the interface. When enabled, TCN Guard restricts the interface from propagating any topology change information received through that interface.

Default Enabled
Format spanning-tree tcnguard
Mode Interface Config

4.2.26.1 no spanning-tree tcnguard

This command resets the TCN guard status of the port to the default value.

Format no spanning-tree tcnguard

Mode Interface Config

4.2.27 spanning-tree transmit

This command sets the Bridge Transmit Hold Count parameter.

Default 6

Format spanning-tree transmit *hold-count*

Mode Global Config

Parameter	Description
hold-count	The Bridge Tx hold-count parameter. The value is an integer between 1 and 10.

4.2.28 spanning-tree uplinkfast

Use this command to configure the rate at which gratuitous frames are sent (in packets per second) after switchover to an alternate port on PVSTP configured switches and enables uplinkfast on PVSTP switches. The range is 0-32000; the default is 150. This command has the effect of accelerating spanning-tree convergence after switchover to an alternate port.

Uplinkfast can be configured even if the switch is configured for MST(RSTP) mode, but it only has an effect when the switch is configured for PVST mode. Enabling FastUplink increases the priority by 3000. Path costs less than 3000 have an additional 3000 added when uplinkfast is enabled. This reduces the probability that the switch will become the root switch.

Uplinkfast immediately changes to an alternate root port on detecting a root port failure and changes the new root port directly to the forwarding state. A TCN is sent for this event.

After a switchover to an alternate port (new root port), uplinkfast multicasts a gratuitous frame on the new root port on behalf of each attached machine so that the rest of the network knows to use the secondary link to reach that machine.

PVRSTP embeds support for backbonefast and uplinkfast. There is no provision to enable or disable these features in PVRSTP configured switches.

Default 150

Format spanning-tree uplinkfast [max-update-rate *packets*]

Mode Global Config

4.2.28.1 no spanning-tree uplinkfast

This command disables uplinkfast on PVSTP configured switches. All switch priorities and path costs that have not been modified from their default values are set to their default values.

Format no spanning-tree uplinkfast [max-update-rate]

Mode Global Config

4.2.29 spanning-tree vlan

Use this command to enable/disable spanning tree on a VLAN.

Default	None
Format	spanning-tree vlan <i>vlan-list</i>
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.

4.2.30 spanning-tree vlan cost

Use this command to set the path cost for a port in a VLAN. The valid values are in the range of 1 to 200000000 or auto. If auto is selected, the path cost value is set based on the link speed.

Default	None
Format	spanning-tree vlan <i>vlan-id</i> cost {auto 1-200000000}
Mode	Interface Config

4.2.31 spanning-tree vlan forward-time

Use this command to configure the spanning tree forward delay time for a VLAN or a set of VLANs. The default is 15 seconds.

Set this value to a lower number to accelerate the transition to forwarding. The network operator should take into account the end-to-end BPDU propagation delay, the maximum frame lifetime, the maximum transmission halt delay, and the message age overestimate values specific to their network when configuring this parameter.

Default	15 seconds
Format	spanning-tree vlan <i>vlan-list</i> forward-time 4-30
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
forward-time	The spanning tree forward delay time. The range is 4-30 seconds.

4.2.32 spanning-tree vlan hello-time

Use this command to configure the spanning tree hello time for a specified VLAN or a range of VLANs. The default is 2 seconds. Set this value to a lower number to accelerate the discovery of topology changes.

Default	2 seconds
Format	spanning-tree vlan <i>vlan-list</i> hello-time 1-10
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
hello-time	The spanning tree forward hello time. The range is 1-10 seconds.

4.2.33 spanning-tree vlan max-age

Use this command to configure the spanning tree maximum age time for a set of VLANs. The default is 20 seconds.

Set this value to a lower number to accelerate the discovery of topology changes. The network operator must take into account the end-to-end BPDU propagation delay and message age overestimate for their specific topology when configuring this value.

The default setting of 20 seconds is suitable for a network of diameter 7, lost message value of 3, transit delay of 1, hello interval of 2 seconds, overestimate per bridge of 1 second, and a BPDU delay of 1 second. For a network of diameter 4, a setting of 16 seconds is appropriate if all other timers remain at their default values.

Default	20 seconds
Format	spanning-tree vlan <i>vlan-list</i> max-age 6-40
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
hello-time	The spanning tree forward hello time. The range is 1-10 seconds.

4.2.34 spanning-tree vlan root

Use this command to configure the switch to become the root bridge or standby root bridge by modifying the bridge priority from the default value of 32768 to a lower value calculated to ensure the bridge is the root (or standby) bridge.

The logic takes care of setting the bridge priority to a value lower (primary) or next lower (secondary) than the lowest bridge priority for the specified VLAN or a range of VLANs.

Default	32768
Format	spanning-tree vlan <i>vlan-list</i> root {primary secondary}
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.

4.2.35 spanning-tree vlan port-priority

Use this command to change the VLAN port priority value of the VLAN port to allow the operator to select the relative importance of the VLAN port in the forwarding selection process when the port is configured as a point-to-point link type. Set this value to a lower number to prefer a port for forwarding of frames.

Default	None
Format	spanning-tree vlan <i>vlan-id</i> port-priority <i>priority</i>
Mode	Interface Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
priority	The VLAN port priority. The range is 0-255.

4.2.36 spanning-tree vlan priority

Use this command to configure the bridge priority of a VLAN. The default value is 32768.

If the value configured is not among the specified values, it will be rounded off to the nearest valid value.

Default	32768
Format	spanning-tree vlan <i>vlan-list</i> priority <i>priority</i>
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
priority	The VLAN bridge priority. Valid values are 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, and 61440.

4.2.37 show spanning-tree

This command displays spanning tree settings for the common and internal spanning tree. The following details are displayed.

Format	show spanning-tree
Mode	- Privileged EXEC - User EXEC

Term	Definition
Bridge Priority	Specifies the bridge priority for the Common and Internal Spanning tree (CST). The value lies between 0 and 61440. It is displayed in multiples of 4096.
Bridge Identifier	The bridge identifier for the CST. It is made up using the bridge priority and the base MAC address of the bridge.
Time Since Topology Change	Time in seconds.
Topology Change Count	Number of times changed.
Topology Change in Progress	Boolean value of the Topology Change parameter for the switch indicating if a topology change is in progress on any port assigned to the common and internal spanning tree.
Designated Root	The bridge identifier of the root bridge. It is made up from the bridge priority and the base MAC address of the bridge.
Root Path Cost	Value of the Root Path Cost parameter for the common and internal spanning tree.

Term	Definition
Root Port Identifier	Identifier of the port to access the Designated Root for the CST
Bridge Max Age	Derived value.
Bridge Max Hops	Bridge max-hops count for the device.
Root Port Bridge Forward Delay	Derived value.
Hello Time	Configured value of the parameter for the CST.
Bridge Hold Time	Minimum time between transmission of Configuration Bridge Protocol Data Units (BPDUs).
CST Regional Root	Bridge Identifier of the CST Regional Root. It is made up using the bridge priority and the base MAC address of the bridge.
Regional Root Path Cost	Path Cost to the CST Regional Root.
Associated FIDs	List of forwarding database identifiers currently associated with this instance.
Associated VLANs	List of VLAN IDs currently associated with this instance.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show spanning-tree

```

Bridge Priority..... 32768
Bridge Identifier..... 80:00:00:10:18:48:FC:07
Time Since Topology Change..... 8 day 3 hr 22 min 37 sec
Topology Change Count..... 0
Topology Change in progress..... FALSE
Designated Root..... 80:00:00:10:18:48:FC:07
Root Path Cost..... 0
Root Port Identifier..... 00:00
Bridge Max Age..... 20
Bridge Max Hops..... 20
Bridge Tx Hold Count..... 6
Bridge Forwarding Delay..... 15
Hello Time..... 2
Bridge Hold Time..... 6
CST Regional Root..... 80:00:00:10:18:48:FC:07
Regional Root Path Cost..... 0

```

Associated FIDs

Associated VLANs

(FASTPATH Routing) #

4.2.38 show spanning-tree backbonefast

This command displays spanning tree information for backbonefast.

Format show spanning-tree backbonefast

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Transitions via Backbonefast	The number of backbonefast transitions.
Inferior BPDUs received (all VLANs)	The number of inferior BPDUs received on all VLANs.
RLQ request PDUs received (all VLANs)	The number of root link query (RLQ) requests PDUs received on all VLANs.

Term	Definition
RLQ response PDUs received (all VLANs)	The number of RLQ response PDUs received on all VLANs.
RLQ request PDUs sent (all VLANs)	The number of RLQ request PDUs sent on all VLANs.
RLQ response PDUs sent (all VLANs)	The number of RLQ response PDUs sent on all VLANs.

Example: The following shows example output from the command.
(Routing)#show spanning-tree backbonefast

```
Backbonefast Statistics
-----
Transitions via Backbonefast (all VLANs)      : 0
Inferior BPDUs received (all VLANs)           : 0
RLQ request PDUs received (all VLANs)         : 0
RLQ response PDUs received (all VLANs)        : 0
RLQ request PDUs sent (all VLANs)             : 0
RLQ response PDUs sent (all VLANs)            : 0
```

4.2.39 show spanning-tree brief

This command displays spanning tree settings for the bridge. The following information appears.

Format show spanning-tree brief

Mode • Privileged EXEC

 • User EXEC

Term	Definition
Bridge Priority	Configured value.
Bridge Identifier	The bridge identifier for the selected MST instance. It is made up using the bridge priority and the base MAC address of the bridge.
Bridge Max Age	Configured value.
Bridge Max Hops	Bridge max-hops count for the device.
Bridge Hello Time	Configured value.
Bridge Forward Delay	Configured value.
Bridge Hold Time	Minimum time between transmission of Configuration Bridge Protocol Data Units (BPDUs).

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show spanning-tree brief

```
Bridge Priority..... 32768
Bridge Identifier..... 80:00:00:10:18:48:FC:07
Bridge Max Age..... 20
Bridge Max Hops..... 20
Bridge Hello Time..... 2
Bridge Forward Delay..... 15
Bridge Hold Time..... 6

(FASTPATH Routing) #
```


4.2.40 show spanning-tree interface

This command displays the settings and parameters for a specific switch port within the common and internal spanning tree. The *slot/port* is the desired switch port. Instead of *slot/port*, *lag lag-intf-num* can be used as an alternate way to specify the LAG interface. *lag lag-intf-num* can also be used to specify the LAG interface where *lag-intf-num* is the LAG port number. The following details are displayed on execution of the command.

Format show spanning-tree interface *slot/port*/lag *lag-intf-num*

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Hello Time	Admin hello time for this port.
Port Mode	Enabled or disabled.
BPDU Guard Effect	Enabled or disabled.
Root Guard	Enabled or disabled.
Loop Guard	Enabled or disabled.
TCN Guard	Enable or disable the propagation of received topology change notifications and topology changes to other ports.
BPDU Filter Mode	Enabled or disabled.
BPDU Flood Mode	Enabled or disabled.
Auto Edge	To enable or disable the feature that causes a port that has not seen a BPDU for edge delay time, to become an edge port and transition to forwarding faster.
Port Up Time Since Counters Last Cleared	Time since port was reset, displayed in days, hours, minutes, and seconds.
STP BPDUs Transmitted	Spanning Tree Protocol Bridge Protocol Data Units sent.
STP BPDUs Received	Spanning Tree Protocol Bridge Protocol Data Units received.
RSTP BPDUs Transmitted	Rapid Spanning Tree Protocol Bridge Protocol Data Units sent.
RSTP BPDUs Received	Rapid Spanning Tree Protocol Bridge Protocol Data Units received.
MSTP BPDUs Transmitted	Multiple Spanning Tree Protocol Bridge Protocol Data Units sent.
MSTP BPDUs Received	Multiple Spanning Tree Protocol Bridge Protocol Data Units received.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) >show spanning-tree interface 0/1

```

Hello Time..... Not Configured
Port Mode..... Enabled
BPDU Guard Effect..... Disabled
Root Guard..... FALSE
Loop Guard..... FALSE
TCN Guard..... FALSE
BPDU Filter Mode..... Disabled
BPDU Flood Mode..... Disabled
Auto Edge..... TRUE
Port Up Time Since Counters Last Cleared..... 8 day 3 hr 39 min 58 sec
STP BPDUs Transmitted..... 0

```

```

STP BPDUs Received..... 0
RSTP BPDUs Transmitted..... 0
RSTP BPDUs Received..... 0
MSTP BPDUs Transmitted..... 0
MSTP BPDUs Received..... 0

```

(FASTPATH Routing) >

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) >show spanning-tree interface lag 1

```

Hello Time..... Not Configured
Port Mode..... Enabled
BPDU Guard Effect..... Disabled
Root Guard..... FALSE
Loop Guard..... FALSE
TCN Guard..... FALSE
BPDU Filter Mode..... Disabled
BPDU Flood Mode..... Disabled
Auto Edge..... TRUE
Port Up Time Since Counters Last Cleared..... 8 day 3 hr 42 min 5 sec
STP BPDUs Transmitted..... 0
STP BPDUs Received..... 0
RSTP BPDUs Transmitted..... 0
RSTP BPDUs Received..... 0
MSTP BPDUs Transmitted..... 0
MSTP BPDUs Received..... 0

```

(FASTPATH Routing) >

4.2.41 show spanning-tree mst detailed

This command displays the detailed settings for an MST instance.

Format show spanning-tree mst detailed *mstid*

- Mode**
- Privileged EXEC
 - User EXEC

Parameter	Description
mstid	A multiple spanning tree instance identifier. The value is 0–4094.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) >show spanning-tree mst detailed 0

```

MST Instance ID..... 0
MST Bridge Priority..... 32768
MST Bridge Identifier..... 80:00:00:10:18:48:FC:07
Time Since Topology Change..... 8 day 3 hr 47 min 7 sec
Topology Change Count..... 0
Topology Change in progress..... FALSE
Designated Root..... 80:00:00:10:18:48:FC:07
Root Path Cost..... 0
Root Port Identifier..... 00:00

```

Associated FIDs

Associated VLANs

(FASTPATH Routing) >

4.2.42 show spanning-tree mst port detailed

This command displays the detailed settings and parameters for a specific switch port within a particular multiple spanning tree instance. The parameter *mstid* is a number that corresponds to the desired existing multiple spanning tree instance. The *slot/port* is the desired switch port. Instead of *slot/port*, *lag lag-intf-num* can be used as an alternate way to specify the LAG interface. *lag lag-intf-num* can also be used to specify the LAG interface where *lag-intf-num* is the LAG port number.

Format `show spanning-tree mst port detailed mstid slot/port/lag lag-intf-num`

Mode • Privileged EXEC

 • User EXEC

Term	Definition
MST Instance ID	The ID of the existing multiple spanning tree (MST) instance identifier. The value is 0–4094.
Port Identifier	The port identifier for the specified port within the selected MST instance. It is made up from the port priority and the interface number of the port.
Port Priority	The priority for a particular port within the selected MST instance. The port priority is displayed in multiples of 16.
Port Forwarding State	Current spanning tree state of this port.
Port Role	Each enabled MST Bridge Port receives a Port Role for each spanning tree. The port role is one of the following values: Root Port, Designated Port, Alternate Port, Backup Port, Master Port or Disabled Port
Auto-Calculate Port Path Cost	Indicates whether auto calculation for port path cost is enabled.
Port Path Cost	Configured value of the Internal Port Path Cost parameter.
Designated Root	The Identifier of the designated root for this port.
Root Path Cost	The path cost to get to the root bridge for this instance. The root path cost is zero if the bridge is the root bridge for that instance.
Designated Bridge	Bridge Identifier of the bridge with the Designated Port.
Designated Port Identifier	Port on the Designated Bridge that offers the lowest cost to the LAN.
Loop Inconsistent State	The current loop inconsistent state of this port in this MST instance. When in loop inconsistent state, the port has failed to receive BPDUs while configured with loop guard enabled. Loop inconsistent state maintains the port in a blocking state until a subsequent BPDU is received.
Transitions Into Loop Inconsistent State	The number of times this interface has transitioned into loop inconsistent state.
Transitions Out of Loop Inconsistent State	The number of times this interface has transitioned out of loop inconsistent state.

If you specify 0 (defined as the default CIST ID) as the *mstid*, this command displays the settings and parameters for a specific switch port within the common and internal spanning tree. The *slot/port* is the desired switch port. In this case, the following are displayed.

Term	Definition
Port Identifier	The port identifier for this port within the CST.
Port Priority	The priority of the port within the CST.

Term	Definition
Port Forwarding State	The forwarding state of the port within the CST.
Port Role	The role of the specified interface within the CST.
Auto-Calculate Port Path Cost	Indicates whether auto calculation for port path cost is enabled or not (disabled).
Port Path Cost	The configured path cost for the specified interface.
Auto-Calculate External Port Path Cost	Indicates whether auto calculation for external port path cost is enabled.
External Port Path Cost	The cost to get to the root bridge of the CIST across the boundary of the region. This means that if the port is a boundary port for an MSTP region, then the external path cost is used.
Designated Root	Identifier of the designated root for this port within the CST.
Root Path Cost	The root path cost to the LAN by the port.
Designated Bridge	The bridge containing the designated port.
Designated Port Identifier	Port on the Designated Bridge that offers the lowest cost to the LAN.
Topology Change Acknowledgement	Value of flag in next Configuration Bridge Protocol Data Unit (BPDU) transmission indicating if a topology change is in progress for this port.
Hello Time	The hello time in use for this port.
Edge Port	The configured value indicating if this port is an edge port.
Edge Port Status	The derived value of the edge port status. True if operating as an edge port; false otherwise.
Point To Point MAC Status	Derived value indicating if this port is part of a point to point link.
CST Regional Root	The regional root identifier in use for this port.
CST Internal Root Path Cost	The internal root path cost to the LAN by the designated external port.
Loop Inconsistent State	The current loop inconsistent state of this port in this MST instance. When in loop inconsistent state, the port has failed to receive BPDUs while configured with loop guard enabled. Loop inconsistent state maintains the port in a blocking state until a subsequent BPDU is received.
Transitions Into Loop Inconsistent State	The number of times this interface has transitioned into loop inconsistent state.
Transitions Out of Loop Inconsistent State	The number of times this interface has transitioned out of loop inconsistent state.

Example: The following shows example CLI display output for the command in slot/port format.

(FASTPATH Routing) >show spanning-tree mst port detailed 0 0/1

```

Port Identifier..... 80:01
Port Priority..... 128
Port Forwarding State..... Disabled
Port Role..... Disabled
Auto-calculate Port Path Cost..... Enabled
Port Path Cost..... 0
Auto-Calculate External Port Path Cost..... Enabled
External Port Path Cost..... 0
Designated Root..... 80:00:00:10:18:48:FC:07
Root Path Cost..... 0
Designated Bridge..... 80:00:00:10:18:48:FC:07
Designated Port Identifier..... 00:00
Topology Change Acknowledge..... FALSE
Hello Time..... 2
Edge Port..... FALSE

```

```

Edge Port Status..... FALSE
Point to Point MAC Status..... TRUE
CST Regional Root..... 80:00:00:10:18:48:FC:07
CST Internal Root Path Cost..... 0
Loop Inconsistent State..... FALSE
Transitions Into Loop Inconsistent State..... 0
Transitions Out Of Loop Inconsistent State..... 0

```

Example: The following shows example CLI display output for the command using a LAG interface number.

```
(FASTPATH Routing) >show spanning-tree mst port detailed 0 lag 1
```

```

Port Identifier..... 60:42
Port Priority..... 96
Port Forwarding State..... Disabled
Port Role..... Disabled
Auto-calculate Port Path Cost..... Enabled
Port Path Cost..... 0
Auto-Calculate External Port Path Cost..... Enabled
External Port Path Cost..... 0
Designated Root..... 80:00:00:10:18:48:FC:07
Root Path Cost..... 0
Designated Bridge..... 80:00:00:10:18:48:FC:07
Designated Port Identifier..... 00:00
Topology Change Acknowledge..... FALSE
Hello Time..... 2
Edge Port..... FALSE
Edge Port Status..... FALSE
Point to Point MAC Status..... TRUE
CST Regional Root..... 80:00:00:10:18:48:FC:07
CST Internal Root Path Cost..... 0
Loop Inconsistent State..... FALSE
Transitions Into Loop Inconsistent State..... 0
Transitions Out Of Loop Inconsistent State..... 0
--More-- or (q)uit

```

```
(FASTPATH Routing) >
```

4.2.43 show spanning-tree mst port summary

This command displays the settings of one or all ports within the specified multiple spanning tree instance. The parameter *mstid* indicates a particular MST instance. The parameter *{slot/port|all}* indicates the desired switch port or all ports. Instead of *slot/port*, *lag lag-intf-num* can be used as an alternate way to specify the LAG interface. *lag lag-intf-num* can also be used to specify the LAG interface where *lag-intf-num* is the LAG port number.

If you specify 0 (defined as the default CIST ID) as the *mstid*, the status summary displays for one or all ports within the common and internal spanning tree.

Format `show spanning-tree mst port summary mstid {slot/port |lag lag-intf-num| all}`

Mode

- Privileged EXEC
- User EXEC

Term	Definition
MST Instance ID	The MST instance associated with this port.
Interface	<i>slot/port</i>
STP Mode	Indicates whether spanning tree is enabled or disabled on the port.

Term	Definition
Type	Currently not used.
STP State	The forwarding state of the port in the specified spanning tree instance.
Port Role	The role of the specified port within the spanning tree.
Desc	Indicates whether the port is in loop inconsistent state or not. This field is blank if the loop guard feature is not available.

Example: The following shows example CLI display output for the command in `slot/port` format.

(FASTPATH Routing) >show spanning-tree mst port summary 0 0/1

MST Instance ID..... CST

Interface	STP Mode	Type	STP State	Port Role	Desc
0/1	Enabled		Disabled	Disabled	

Example: The following shows example CLI display output for the command using a LAG interface number.

(FASTPATH Routing) >show spanning-tree mst port summary 0 lag 1

MST Instance ID..... CST

Interface	STP Mode	Type	STP State	Port Role	Desc
3/1	Enabled		Disabled	Disabled	

4.2.44 show spanning-tree mst port summary active

This command displays settings for the ports within the specified multiple spanning tree instance that are active links.

Format show spanning-tree mst port summary *mstid* active

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
MST Instance ID	The ID of the existing MST instance.
Interface	<i>slot/port</i>
STP Mode	Indicates whether spanning tree is enabled or disabled on the port.
Type	Currently not used.
STP State	The forwarding state of the port in the specified spanning tree instance.
Port Role	The role of the specified port within the spanning tree.
Desc	Indicates whether the port is in loop inconsistent state or not. This field is blank if the loop guard feature is not available.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) >show spanning-tree mst port summary 0 active

Interface	STP Mode	Type	STP State	Port Role	Desc

4.2.45 show spanning-tree mst summary

This command displays summary information about all multiple spanning tree instances in the switch. On execution, the following details are displayed.

Format show spanning-tree mst summary

Mode

- Privileged EXEC
- User EXEC

Term	Definition
MST Instance ID List	List of multiple spanning trees IDs currently configured.
For each MSTID:	• List of forwarding database identifiers associated with this instance.
• Associated FIDs • Associated VLANs	• List of VLAN IDs associated with this instance.

4.2.46 show spanning-tree summary

This command displays spanning tree settings and parameters for the switch. The following details are displayed on execution of the command.

Format show spanning-tree summary

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Spanning Tree Adminmode	Enabled or disabled.
Spanning Tree Version	Version of 802.1 currently supported (IEEE 802.1s, IEEE 802.1w, or IEEE 802.1d) based upon the Force Protocol Version parameter.
BPDU Guard Mode	Enabled or disabled.
BPDU Filter Mode	Enabled or disabled.
Configuration Name	Identifier used to identify the configuration currently being used.
Configuration Revision Level	Identifier used to identify the configuration currently being used.
Configuration Digest Key	A generated Key used in the exchange of the BPDUs.
Configuration Format Selector	Specifies the version of the configuration format being used in the exchange of BPDUs. The default value is zero.
MST Instances	List of all multiple spanning tree instances configured on the switch.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) >show spanning-tree summary

```
Spanning Tree Adminmode..... Enabled
Spanning Tree Version..... IEEE 802.1s
BPDU Guard Mode..... Disabled
BPDU Filter Mode..... Disabled
Configuration Name..... ****
Configuration Revision Level..... ****
Configuration Digest Key..... ****
Configuration Format Selector..... 0
No MST instances to display.
```

4.2.47 show spanning-tree uplinkfast

This command displays spanning tree information for uplinkfast.

Format show spanning-tree uplinkfast

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Uplinkfast transitions (all VLANs)	The number of uplinkfast transitions on all VLANs.
Proxy multicast addresses transmitted (all VLANs)	The number of proxy multicast addresses transmitted on all VLANs.

Example: The following shows example output from the command.

(Routing) #show spanning-tree uplinkfast

```
Uplinkfast is enabled.
BPDU update rate : 150 packets/sec
```

Uplinkfast Statistics

```
Uplinkfast transitions (all VLANs)..... 0
Proxy multicast addresses transmitted (all VLANs).. 0
```

4.2.48 show spanning-tree vlan

This command displays spanning tree information per VLAN and also lists out the port roles and states along with port cost. The *vlan-list* parameter is a list of VLANs or VLAN-ranges separated by commas and with no embedded blank spaces. VLAN ranges are of the form "X-Y" where X and Y are valid VLAN identifiers and X<Y. The *vlanid* corresponds to an existing VLAN ID.

Format show spanning-tree vlan {*vlanid* | *vlan-list*}

Mode

- Privileged EXEC
- User EXEC

Example: The following shows example CLI display output for the command.
(Routing) show spanning-tree vlan 1

```
VLAN      1
Spanning-tree enabled protocol rpvst
RootID    Priority      32769
Address    00:0C:29:D3:80:EA
Cost       0
Port       This switch is the root
Hello Time 2 Sec Max Age 15 sec Forward Delay 15 sec
BridgeID   Priority      32769 (priority 32768 sys-id-ext 1)
Address    00:0C:29:D3:80:EA
Hello Time 2 Sec Max Age 15 sec Forward Delay 15 sec
Aging Time 300

Interface  Role      Sts      Cost      Prio.Nbr
-----
0/1        Designated Forwarding 3000      128.1
0/2        Designated Forwarding 3000      128.2
0/3        Disabled   Disabled  3000      128.3
0/4        Designated Forwarding 3000      128.4
0/5        Designated Forwarding 3000      128.5
0/6        Designated Forwarding 3000      128.6
0/7        Designated Forwarding 3000      128.7
0/8        Designated Forwarding 3000      128.8
1/1        Disabled   Disabled  3000      128.1026
1/2        Disabled   Disabled  3000      128.1027
1/3        Disabled   Disabled  3000      128.1028
1/4        Disabled   Disabled  3000      128.1029
1/5        Disabled   Disabled  3000      128.1030
1/6        Disabled   Disabled  3000      128.1031
```

4.2.49 set bpdu forwarding

This command configures BPDU forwarding. The default behavior is that received BPDU is sent to the CPU and handled. The BPDU frame is not forwarded/switched. If this feature is enabled the BPDU frame is not longer sent to CPU but forwarded/switched on all ports.

Note, that you have to save the configuration and reboot the system to activate a new setting.

Format set bpdu forwarding

Mode Privileged EXEC

4.2.49.1 no set bpdu forwarding

This command disabled BPDU forwarding.

You have to save the configuration and reboot the system to activate a new setting.

Format no set bpdu forwarding

Mode Privileged EXEC

4.2.50 show bpdu forwarding

This command displays the BPDU forwarding setting. The values for the current active setting and the value for the configured setting are indicated.

Format `show bpdu forwarding`
Mode Privileged EXEC

4.3 Loop Protection Commands

This section describes the commands used to configure loop protection. Loop protection detects physical and logical loops between Ethernet ports on a device. Loop protection must be enabled globally before it can be enabled at the interface level.

4.3.1 `keepalive` (Global Config)

This command enables loop protection for the system.

Default Disabled
Format `keepalive`
Mode Global Config

4.3.1.1 `no keepalive`

This command disables loop protection for the system. This command also sets the transmit interval and retry count to the default value.

Format `no keepalive`
Mode Global Config

4.3.2 `keepalive` (Interface Config)

This command enables keepalive on a particular interface.

Default None
Format `keepalive`
Mode Interface Config

4.3.2.1 `no keepalive`

This command disables keepalive on a particular interface.

Format `keepalive`
Mode Interface Config

4.3.3 `keepalive action`

This command configures the action to be taken on a port when a loop is detected.

Default Disabled.
Format `keepalive receive-action {log|disable|both}`
Mode Interface Configuration

Parameter	Description
log	Only logs the message. The log mode only logs the message to buffer logs without bringing the port down.
disable	Shuts down the port. This is the default.
both	Logs and disables the port.

4.3.3.1 no keepalive action

This command returns the command to the default action of disabling a port when a loop is detected.

Format no keepalive receive-action {log|disable|both}

Mode Interface Configuration

4.3.4 keepalive disable-timer

This command configures the time, in seconds, for which a port is down if a loop is detected. The default time is 0 so that port needs to be re-enabled manually to bring it up.

Default 0

Format keep-alive disable-timer *value*

Mode Global Configuration

Parameter	Description
<i>value</i>	The time, in seconds, for which the port is down if a loop is detected.

4.3.4.1 no keepalive disable-timer

This command removes the disable-timer.

Format no keep-alive disable-timer

Mode Global Configuration

4.3.5 keepalive retry

This command configures the time in seconds between transmission of keep-alive packets. Retry is an optional parameter that configures the count of keepalive packets received by the switch after which the interface will be error disabled.

Default 5

Format keepalive *val* [retry]

Mode Global Configuration

Parameter	Description
val	The time in seconds between transmission of keep-alive packets.
retry	Configures the count of keepalive packets received by the switch after which the switch will be error disabled.

4.3.6 show keepalive

This command displays the global keepalive configuration.

Default None
Format show keepalive
Mode Privileged EXEC

Example:

```
(Routing) #show keepalive
```

```
Keepalive      : Enabled
Transmit interval : 5 seconds
Retry count    : 1
```

4.3.7 show keepalive statistics

This command displays the keepalive statistics for each port or a specific port.

Default None
Format show keepalive statistics {port-num | all }
Mode Privileged EXEC

Term	Definition
port-num	The port number for which to show statistics.
all	Show statistics for all ports.

Example:

```
(Routing) #show keepalive statistics all
```

Port	Keep Alive	Loop Detected	Loop Count	Time Since Last Loop	Rx Action	Port Status
0/1	Yes	Yes	1	85	shut-down	D-Disable
0/3	Yes	No			log-shutdown	Enable

4.3.8 clear counters keepalive

This command clears keepalive statistics associated with ports (for example, number of transmitted packets, received packets, and loop packets).

Default None
Format clear counters keepalive
Mode Privileged EXEC

4.4 VLAN Commands

This section describes the commands you use to configure VLAN settings.

4.4.1 vlan database

This command gives you access to the VLAN Config mode, which allows you to configure VLAN characteristics

Format vlan database

Mode Privileged EXEC

4.4.2 network mgmt_vlan

This command configures the Management VLAN ID.

Default 1

Format network mgmt_vlan 1-4093

Mode Privileged EXEC

4.4.2.1 no network mgmt_vlan

This command sets the Management VLAN ID to the default.

Format no network mgmt_vlan

Mode Privileged EXEC

4.4.3 vlan

This command creates a new VLAN and assigns it an ID. The ID is a valid VLAN identification number (ID 1 is reserved for the default VLAN). VLAN range is 2-4093.

Format vlan 2-4093

Mode VLAN Config

4.4.3.1 no vlan

This command deletes an existing VLAN. The ID is a valid VLAN identification number (ID 1 is reserved for the default VLAN). The VLAN range is 2-4093.

Format no vlan 2-4093

Mode VLAN Config

4.4.4 vlan acceptframe

This command sets the frame acceptance mode on an interface or range of interfaces. For VLAN Only mode, untagged frames or priority frames received on this interface are discarded. For Admit All mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. For admituntaggedonly mode, only untagged frames are accepted on this interface; tagged frames are discarded. With any option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Default all
Format vlan acceptframe {admituntaggedonly | vlanonly | all}
Mode Interface Config

4.4.4.1 no vlan acceptframe

This command resets the frame acceptance mode for the interface or range of interfaces to the default value.

Format no vlan acceptframe
Mode Interface Config

4.4.5 vlan ingressfilter

This command enables ingress filtering on an interface or range of interfaces. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Default disabled
Format vlan ingressfilter
Mode Interface Config

4.4.5.1 no vlan ingressfilter

This command disables ingress filtering. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Format no vlan ingressfilter
Mode Interface Config

4.4.6 vlan internal allocation

Use this command to configure which VLAN IDs to use for port-based routing interfaces. When a port-based routing interface is created, an unused VLAN ID is assigned internally.

Format vlan internal allocation {base vlan-id | policy ascending | policy descending}
Mode Global Config

Parameter	Description
base <i>vlan-id</i>	The first VLAN ID to be assigned to a port-based routing interface.
policy ascending	VLAN IDs assigned to port-based routing interfaces start at the base and increase in value
policy descending	VLAN IDs assigned to port-based routing interfaces start at the base and decrease in value

4.4.7 `vlan makestatic`

This command changes a dynamically created VLAN (created by GVRP registration) to a static VLAN (one that is permanently configured and defined). The ID is a valid VLAN identification number. VLAN range is 2-4093.

Format `vlan makestatic 2-4093`

Mode VLAN Config

4.4.8 `vlan name`

This command changes the name of a VLAN. The name is an alphanumeric string of up to 32 characters, and the ID is a valid VLAN identification number. ID range is 1-4093.

Default

- VLAN ID 1 - default
- other VLANs - blank string

Format `vlan name 1-4093 name`

Mode VLAN Config

4.4.8.1 `no vlan name`

This command sets the name of a VLAN to a blank string.

Format `no vlan name 1-4093`

Mode VLAN Config

4.4.9 `vlan participation`

This command configures the degree of participation for a specific interface or range of interfaces in a VLAN. The ID is a valid VLAN identification number, and the interface is a valid interface number.

Format `vlan participation {exclude | include | auto} 1-4093`

Mode Interface Config

Participation options are:

Options	Definition
include	The interface is always a member of this VLAN. This is equivalent to registration fixed.
exclude	The interface is never a member of this VLAN. This is equivalent to registration forbidden.
auto	The interface is dynamically registered in this VLAN by GVRP and will not participate in this VLAN unless a join request is received on this interface. This is equivalent to registration normal.

4.4.10 `vlan participation all`

This command configures the degree of participation for all interfaces in a VLAN. The ID is a valid VLAN identification number.

Format `vlan participation all {exclude | include | auto} 1-4093`

Mode Global Config

You can use the following participation options:

Participation Options	Definition
include	The interface is always a member of this VLAN. This is equivalent to registration fixed.
exclude	The interface is never a member of this VLAN. This is equivalent to registration forbidden.
auto	The interface is dynamically registered in this VLAN by GVRP. The interface will not participate in this VLAN unless a join request is received on this interface. This is equivalent to registration normal.

4.4.11 `vlan port acceptframe all`

This command sets the frame acceptance mode for all interfaces.

Default all
Format vlan port acceptframe all {vlanonly | admituntaggedonly |all}
Mode Global Config

The modes are defined as follows:

Mode	Definition
VLAN Only mode	Untagged frames or priority frames received on this interface are discarded.
Admit Untagged Only mode	VLAN-tagged and priority tagged frames received on this interface are discarded.
Admit All mode	Untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port.

With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

4.4.11.1 `no vlan port acceptframe all`

This command sets the frame acceptance mode for all interfaces to Admit All. For Admit All mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Format no vlan port acceptframe all
Mode Global Config

4.4.12 `vlan port ingressfilter all`

This command enables ingress filtering for all ports. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Default disabled
Format vlan port ingressfilter all
Mode Global Config

4.4.12.1 no vlan port ingressfilter all

This command disables ingress filtering for all ports. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Format no vlan port ingressfilter all

Mode Global Config

4.4.13 vlan port pvid all

This command changes the VLAN ID for all interface.

Default 1

Format vlan port pvid all 1-4093

Mode Global Config

4.4.13.1 no vlan port pvid all

This command sets the VLAN ID for all interfaces to 1.

Format no vlan port pvid all

Mode Global Config

4.4.14 vlan port tagging all

This command configures the tagging behavior for all interfaces in a VLAN to enabled. If tagging is enabled, traffic is transmitted as tagged frames. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format vlan port tagging all 1-4093

Mode Global Config

4.4.14.1 no vlan port tagging all

This command configures the tagging behavior for all interfaces in a VLAN to disabled. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format no vlan port tagging all

Mode Global Config

4.4.15 vlan protocol group

This command adds protocol-based VLAN groups to the system. The *groupid* is a unique number from 1–128 that is used to identify the group in subsequent commands.

Format vlan protocol group *groupid*

Mode Global Config

4.4.16 vlan protocol group name

This command assigns a name to a protocol-based VLAN groups. The *groupname* variable can be a character string of 0 to 16 characters.

Format vlan protocol group name *groupid groupname*

Mode Global Config

4.4.16.1 no vlan protocol group name

This command removes the name from the group identified by *groupid*.

Format no vlan protocol group name *groupid*

Mode Global Config

4.4.17 vlan protocol group add protocol

This command adds the *protocol* to the protocol-based VLAN identified by *groupid*. A group may have more than one protocol associated with it. Each interface and protocol combination can only be associated with one group. If adding a protocol to a group causes any conflicts with interfaces currently associated with the group, this command fails and the protocol is not added to the group. The possible values for *protocol* are The possible values for *protocol-list* includes the keywords *ip*, *arp*, and *ipx* and hexadecimal or decimal values ranging from 0x0600 (1536) to 0xFFFF (65535). The protocol list can accept up to 16 protocols separated by a comma.

Default none

Format vlan protocol group add protocol *groupid ethertype protocol-list*

Mode Global Config

4.4.17.1 no vlan protocol group add protocol

This command removes the protocols specified in the *protocol-list* from this protocol-based VLAN group that is identified by this *groupid*.

Format no vlan protocol group add protocol *groupid ethertype protocol-list*

Mode Global Config

4.4.18 protocol group

This command attaches a *vlanid* to the protocol-based VLAN identified by *groupid*. A group may only be associated with one VLAN at a time, however the VLAN association can be changed.

Default none

Format protocol group *groupid vlanid*

Mode VLAN Config

4.4.18.1 no protocol group

This command removes the *vlanid* from this protocol-based VLAN group that is identified by this *groupid*.

Format no protocol group *groupid* *vlanid*
Mode VLAN Config

4.4.19 protocol vlan group

This command adds a physical interface or a range of interfaces to the protocol-based VLAN identified by *groupid*. You can associate multiple interfaces with a group, but you can only associate each interface and protocol combination with one group. If adding an interface to a group causes any conflicts with protocols currently associated with the group, this command fails and the interface(s) are not added to the group.

Default none
Format protocol vlan group *groupid*
Mode Interface Config

4.4.19.1 no protocol vlan group

This command removes the interface from this protocol-based VLAN group that is identified by this *groupid*.

Format no protocol vlan group *groupid*
Mode Interface Config

4.4.20 protocol vlan group all

This command adds all physical interfaces to the protocol-based VLAN identified by *groupid*. You can associate multiple interfaces with a group, but you can only associate each interface and protocol combination with one group. If adding an interface to a group causes any conflicts with protocols currently associated with the group, this command will fail and the interface(s) will not be added to the group.

Default none
Format protocol vlan group all *groupid*
Mode Global Config

4.4.20.1 no protocol vlan group all

This command removes all interfaces from this protocol-based VLAN group that is identified by this *groupid*.

Format no protocol vlan group all *groupid*
Mode Global Config

4.4.21 show port protocol

This command displays the Protocol-Based VLAN information for either the entire system, or for the indicated group.

Format show port protocol {*groupid* | all}
Mode Privileged EXEC

Term	Definition
Group Name	The group name of an entry in the Protocol-based VLAN table.
Group ID	The group identifier of the protocol group.
VLAN	The VLAN associated with this Protocol Group.
Protocol(s)	The type of protocol(s) for this group.
Interface(s)	Lists the <i>sLot/port</i> interface(s) that are associated with this Protocol Group.

4.4.22 `vlan pvid`

This command changes the VLAN ID on an interface or range of interfaces.

Default 1
Format `vlan pvid 1-4093`
Mode Interface Config
 Interface Range Config

4.4.22.1 `no vlan pvid`

This command sets the VLAN ID on an interface or range of interfaces to 1.

Format `no vlan pvid`
Mode Interface Config

4.4.23 `vlan tagging`

This command configures the tagging behavior for a specific interface or range of interfaces in a VLAN to enabled. If tagging is enabled, traffic is transmitted as tagged frames. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format `vlan tagging 1-4093`
Mode • Interface Config

4.4.23.1 `no vlan tagging`

This command configures the tagging behavior for a specific interface or range of interfaces in a VLAN to disabled. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format `no vlan tagging 1-4093`
Mode • Interface Config

4.4.24 `vlan association subnet`

This command associates a VLAN to a specific IP-subnet.

Format `vlan association subnet ipaddr netmask vlanid`
Mode VLAN Config

4.4.24.1 `no vlan association subnet`

This command removes association of a specific IP-subnet to a VLAN.

Format no vlan association subnet *ipaddr netmask*
Mode VLAN Config

4.4.25 vlan association mac

This command associates a MAC address to a VLAN.

Format vlan association mac *macaddr vlanid*
Mode VLAN database

4.4.25.1 no vlan association mac

This command removes the association of a MAC address to a VLAN.

Format no vlan association mac *macaddr*
Mode VLAN database

4.4.26 remote-span

This command identifies the VLAN as the RSPAN VLAN.

Default None
Format remote-span
Mode VLAN configuration

4.4.27 show vlan

This command displays information about the configured private VLANs, including primary and secondary VLAN IDs, type (community, isolated, or primary) and the ports which belong to a private VLAN.

Format show vlan {*vlanid*|private-vlan [*type*]}

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Primary	Primary VLAN identifier. The range of the VLAN ID is 1 to 4093.
Secondary	Secondary VLAN identifier.
Type	Secondary VLAN type (community, isolated, or primary).
Ports	Ports which are associated with a private VLAN.
VLAN ID	The VLAN identifier (VID) associated with each VLAN. The range of the VLAN ID is 1 to 4093.
VLAN Name	A string associated with this VLAN as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. VLAN ID 1 always has a name of Default . This field is optional.
VLAN Type	Type of VLAN, which can be Default (VLAN ID = 1) or static (one that is configured and permanently defined), or Dynamic. A dynamic VLAN can be created by GVRP registration or during the 802.1X authentication process (DOT1X) if a RADIUS-assigned VLAN does not exist on the switch.
Interface	slot/port. It is possible to set the parameters for all ports by using the selectors on the top line.

Term	Definition
Current	The degree of participation of this port in this VLAN. The permissible values are: • Include - This port is always a member of this VLAN. This is equivalent to registration fixed in the IEEE 802.1Q standard. • Exclude - This port is never a member of this VLAN. This is equivalent to registration forbidden in the IEEE 802.1Q standard. • Autodetect - To allow the port to be dynamically registered in this VLAN via GVRP. The port will not participate in this VLAN unless a join request is received on this port. This is equivalent to registration normal in the IEEE 802.1Q standard.
Configured	The configured degree of participation of this port in this VLAN. The permissible values are: • Include - This port is always a member of this VLAN. This is equivalent to registration fixed in the IEEE 802.1Q standard. • Exclude - This port is never a member of this VLAN. This is equivalent to registration forbidden in the IEEE 802.1Q standard. • Autodetect - To allow the port to be dynamically registered in this VLAN via GVRP. The port will not participate in this VLAN unless a join request is received on this port. This is equivalent to registration normal in the IEEE 802.1Q standard.
Tagging	The tagging behavior for this port in this VLAN. • Tagged - Transmit traffic for this VLAN as tagged frames. • Untagged - Transmit traffic for this VLAN as untagged frames.

4.4.28 show vlan internal usage

This command displays information about the VLAN ID allocation on the switch.

Format show vlan internal usage

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Base VLAN ID	Identifies the base VLAN ID for Internal allocation of VLANs to the routing interface.
Allocation policy	Identifies whether the system allocates VLAN IDs in ascending or descending order.

4.4.29 show vlan brief

This command displays a list of all configured VLANs.

Format show vlan brief

Mode

- Privileged EXEC
- User EXEC

Term	Definition
VLAN ID	There is a VLAN Identifier (vlanid) associated with each VLAN. The range of the VLAN ID is 1 to 4093.
VLAN Name	A string associated with this VLAN as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. VLAN ID 1 always has a name of "Default." This field is optional.
VLAN Type	Type of VLAN, which can be Default (VLAN ID = 1) or static (one that is configured and permanently defined), or a Dynamic (one that is created by GVRP registration).

4.4.30 show vlan port

This command displays VLAN port information.

Format show vlan port {slot/port | all}

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	<i>slot/port</i> It is possible to set the parameters for all ports by using the selectors on the top line.
Port VLAN ID Configured	The VLAN ID that this port will assign to untagged frames or priority tagged frames received on this port. The value must be for an existing VLAN. The factory default is 1.
Port VLAN ID Current	The current VLAN ID that this port assigns to untagged frames or priority tagged frames received on this port. The factory default is 1.
Acceptable Frame Types	The types of frames that may be received on this port. The options are 'VLAN only' and 'Admit All'. When set to 'VLAN only', untagged frames or priority tagged frames received on this port are discarded. When set to 'Admit All', untagged frames or priority tagged frames received on this port are accepted and assigned the value of the Port VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance to the 802.1Q VLAN specification.
Ingress Filtering Configured	May be enabled or disabled. When enabled, the frame is discarded if this port is not a member of the VLAN with which this frame is associated. In a tagged frame, the VLAN is identified by the VLAN ID in the tag. In an untagged frame, the VLAN is the Port VLAN ID specified for the port that received this frame. When disabled, all frames are forwarded in accordance with the 802.1Q VLAN bridge specification. The factory default is disabled.
Ingress Filtering Current	Shows the current ingress filtering configuration.
GVRP	May be enabled or disabled.
Default Priority	The 802.1p priority assigned to tagged packets arriving on the port.
Protected Port	Specifies if this is a protected port. If False, it is not a protected port; If true, it is.
Switchport mode	The current switchport mode for the port.
Operating parameters	The operating parameters for the port, including the VLAN, name, egress rule, and type.
Static configuration	The static configuration for the port, including the VLAN, name, and egress rule.
Forbidden VLANs	The forbidden VLAN configuration for the port, including the VLAN and name.

4.4.31 show vlan association subnet

This command displays the VLAN associated with a specific configured IP-Address and net mask. If no IP address and net mask are specified, the VLAN associations of all the configured IP-subnets are displayed.

Format show vlan association subnet [ipaddr netmask]

Mode Privileged EXEC

Term	Definition
IP Address	The IP address assigned to each interface.
Net Mask	The subnet mask.
VLAN ID	There is a VLAN Identifier (VID) associated with each VLAN.

4.4.32 show vlan association mac

This command displays the VLAN associated with a specific configured MAC address. If no MAC address is specified, the VLAN associations of all the configured MAC addresses are displayed.

Format show vlan association mac [*macaddr*]

Mode Privileged EXEC

Term	Definition
Mac Address	A MAC address for which the switch has forwarding and or filtering information. The format is 6 or 8 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB. In an IVL system the MAC address will be displayed as 8 bytes.
VLAN ID	There is a VLAN Identifier (VID) associated with each VLAN.

4.5 Double VLAN Commands

This section describes the commands you use to configure double VLAN (DVLAN). Double VLAN tagging is a way to pass VLAN traffic from one customer domain to another through a Metro Core in a simple and cost effective manner. The additional tag on the traffic helps differentiate between customers in the MAN while preserving the VLAN identification of the individual customers when they enter their own IEEE 802.1Q domain.

4.5.1 dvlan-tunnel ethertype (Interface Config)

**Note...**

This command is not available on all platforms.

This command configures the ethertype for the specified interface. The two-byte hex ethertype is used as the first 16 bits of the DVLAN tag. The ethertype may have the values of *802.1Q*, *vman*, or *custom*. If the ethertype has an optional value of *custom*, then it is a custom tunnel value, and ethertype must be set to a value in the range of 1 to 65535.

Default vman

Format dvlan-tunnel ethertype {802.1Q | vman | custom 1-65535}

Mode Global Config

Parameter	Description
802.1Q	Configure the ethertype as 0x8100.
custom	Configure the value of the custom tag in the range from 1 to 65535.
vman	Represents the commonly used value of 0x88A8.

4.5.1.1 no dvlan-tunnel ethertype (Interface Config)

**Note...**

This command is not available on all platforms.

This command removes the ethertype value for the interface.

Format no dvlan-tunnel ethertype

Mode Global Config

4.5.2 dvlan-tunnel ethertype primary-tpid

Use this command to create a new TPID and associate it with the next available TPID register. If no TPID registers are empty, the system returns an error to the user. Specifying the optional keyword [primary-tpid] forces the TPID value to be configured as the default TPID at index 0.

Format dvlan-tunnel ethertype {802.1Q | vman | custom 1-65535} [primary-tpid]

Mode Global Config

Parameter	Description
802.1Q	Configure the ethertype as 0x8100.
custom	Configure the value of the custom tag in the range from 1 to 65535.
vman	Represents the commonly used value of 0x88A8.

4.5.2.1 no dvlan-tunnel ethertype primary-tpid

Use the **no** form of the command to reset the TPID register to 0. (At initialization, all TPID registers will be set to their default values.)

Format no dvlan-tunnel ethertype {802.1Q | vman | custom 1-65535} [primary-tpid]

Mode Global Config

4.5.3 mode dot1q-tunnel

This command is used to enable Double VLAN Tunneling on the specified interface.

Default disabled

Format mode dot1q-tunnel

Mode Interface Config

4.5.3.1 no mode dot1q-tunnel

This command is used to disable Double VLAN Tunneling on the specified interface. By default, Double VLAN Tunneling is disabled.

Format no mode dot1q-tunnel

Mode Interface Config

4.5.4 mode dvlan-tunnel

Use this command to enable Double VLAN Tunneling on the specified interface.

**Note...**

When you use the `mode dvlan-tunnel` command on an interface, it becomes a service provider port. Ports that do not have double VLAN tunneling enabled are customer ports.

Default disabled
Format `mode dvlan-tunnel`
Mode Interface Config

4.5.4.1 `no mode dvlan-tunnel`

This command is used to disable Double VLAN Tunneling on the specified interface. By default, Double VLAN Tunneling is disabled.

Format `no mode dvlan-tunnel`
Mode Interface Config

4.5.5 `show dot1q-tunnel`

Use this command without the optional parameters to display all interfaces enabled for Double VLAN Tunneling. Use the optional parameters to display detailed information about Double VLAN Tunneling for the specified interface or all interfaces.

Format `show dot1q-tunnel [interface {slot/port | all}]`
Mode

- Privileged EXEC
- User EXEC

Term	Definition
Interface	<i>slot/port</i>
Mode	The administrative mode through which Double VLAN Tunneling can be enabled or disabled. The default value for this field is disabled.
EtherType	A 2-byte hex EtherType to be used as the first 16 bits of the DVLAN tunnel. There are three different EtherType tags. The first is 802.1Q, which represents the commonly used value of 0x8100. The second is vMAN, which represents the commonly used value of 0x88A8. If EtherType is not one of these two values, then it is a custom tunnel value, representing any value in the range of 1 to 65535.

4.5.6 `show dvlan-tunnel`

Use this command without the optional parameters to display all interfaces enabled for Double VLAN Tunneling. Use the optional parameters to display detailed information about Double VLAN Tunneling for the specified interface or all interfaces.

Format `show dvlan-tunnel [interface {slot/port|all|lag lag-intf-num}]`
Mode

- Privileged EXEC
- User EXEC

Term	Definition
Interface	<i>slot/port</i>
LAG	Instead of <i>slot/port</i> , <i>lag</i> lag-intf-num can be used as an alternate way to specify the LAG interface. <i>lag</i> lag-intf-num can also be used to specify the LAG interface where lag-intf-num is the LAG port number.
Mode	The administrative mode through which Double VLAN Tunneling can be enabled or disabled. The default value for this field is disabled.
EtherType	A 2-byte hex EtherType to be used as the first 16 bits of the DVLAN tunnel. There are three different EtherType tags. The first is 802.1Q, which represents the commonly used value of 0x8100. The second is vMAN, which represents the commonly used value of 0x88A8. If EtherType is not one of these two values, then it is a custom tunnel value, representing any value in the range of 1 to 65535.

Example: The following shows examples of the CLI display output for the commands.

(Routing) #show dvlan-tunnel

```
TPIDs Configured..... 0x88a8
Default TPID..... 0x88a8
Interfaces Enabled for DVLAN Tunneling..... None
```

(FASTPATH Routing) #

(switch)#show dvlan-tunnel interface 0/1

```
Interface Mode    EtherType
-----
0/1          Disable 0x88a8
```

4.6 Private VLAN Commands

This section describes the commands you use for private VLANs. Private VLANs provides Layer 2 isolation between ports that share the same broadcast domain. In other words, it allows a VLAN broadcast domain to be partitioned into smaller point-to-multipoint subdomains. The ports participating in a private VLAN can be located anywhere in the Layer 2 network.

4.6.1 switchport private-vlan

This command defines a private-VLAN association for an isolated or community port or a mapping for a promiscuous port.

Format `switchport private-vlan {host-association primary-vlan-id secondary-vlan-id | mapping primary-vlan-id {add | remove} secondary-vlan-list}`

Mode Interface Config

Parameter	Description
host-association	Defines the VLAN association for community or host ports.
mapping	Defines the private VLAN mapping for promiscuous ports.
primary-vlan-id	Primary VLAN ID of a private VLAN.
secondary-vlan-id	Secondary (isolated or community) VLAN ID of a private VLAN.
add	Associates the secondary VLAN with the primary one.
remove	Deletes the secondary VLANs from the primary VLAN association.
secondary-vlan-list	A list of secondary VLANs to be mapped to a primary VLAN.

4.6.1.1 no switchport private-vlan

This command removes the private-VLAN association or mapping from the port.

Format no switchport private-vlan {host-association|mapping}

Mode Interface Config

4.6.2 switchport mode private-vlan

This command configures a port as a promiscuous or host private VLAN port. Note that the properties of each mode can be configured even when the switch is not in that mode. However, they will only be applicable once the switch is in that particular mode.

Default general

Format switchport mode private-vlan {host|promiscuous}

Mode Interface Config

Parameter	Description
host	Configures an interface as a private VLAN host port. It can be either isolated or community port depending on the secondary VLAN it is associated with.
promiscuous	Configures an interface as a private VLAN promiscuous port. The promiscuous ports are members of the primary VLAN.

4.6.2.1 no switchport mode private-vlan

This command removes the private-VLAN association or mapping from the port.

Format no switchport mode private-vlan

Mode Interface Config

4.6.3 private-vlan

This command configures the private VLANs and configures the association between the primary private VLAN and secondary VLANs.

Format private-vlan {association [add|remove] secondary-vlan-list|community|isolated|primary}

Mode VLAN Config

Parameter	Description
association	Associates the primary and secondary VLAN.
secondary-vlan-list	A list of secondary VLANs to be mapped to a primary VLAN.
community	Designates a VLAN as a community VLAN.
isolated	Designates a VLAN as the isolated VLAN.
primary	Designates a VLAN as the primary VLAN.

4.6.3.1 no private-vlan

This command restores normal VLAN configuration.

Format no private-vlan {association}

Mode VLAN Config

4.7 Switch Ports

This section describes the commands used for switch port mode.

4.7.1 switchport mode

Use this command to configure the mode of a switch port as access, trunk or general.

In Trunk mode, the port becomes a member of all VLANs on switch unless specified in the allowed list in the `switchport trunk allowed vlan` command. The PVID of the port is set to the Native VLAN as specified in the `switchport trunk native vlan` command. It means that trunk ports accept both tagged and untagged packets, where untagged packets are processed on the native VLAN and tagged packets are processed on the VLAN ID contained in the packet. MAC learning is performed on both tagged and untagged packets. Tagged packets received with a VLAN ID of which the port is not a member are discarded and MAC learning is not performed. The Trunk ports always transmit packets untagged on native VLAN.

In Access mode, the port becomes a member of only one VLAN. The port sends and receives untagged traffic. It can also receive tagged traffic. The ingress filtering is enabled on port. It means that when the VLAN ID of received packet is not identical to Access VLAN ID, the packet is discarded.

In General mode, the user can perform custom configuration of VLAN membership, PVID, tagging, ingress filtering etc. This is legacy FASTPATH behavior of switch port configuration. Legacy FASTPATH CLI commands are used to configure port in general mode.

Default General mode

Format switchport mode {access | trunk | general}

Mode Interface Config

4.7.1.1 no switchport mode

This command resets the switch port mode to its default value.

Format no switchport mode

Mode Interface Config

4.7.2 switchport trunk allowed vlan

Use this command to configure the list of allowed VLANs that can receive and send traffic on this interface in tagged format when in trunking mode. The default is all.

The VLANs list can be modified using the add or remove options or replaced with another list using the `vlan-list`, `all`, or `except` options. If `all` is chosen, all VLANs are added to the list of allowed vlan. The `except` option provides an exclusion list.

Trunk ports accept tagged packets, where tagged packets are processed on the VLAN ID contained in the packet, if this VLAN is in the allowed VLAN list. Tagged packets received with a VLAN ID to which the port is not a member are discarded and MAC learning is not performed. If a VLAN is added to the system after a port is set to the Trunk mode and it is in the allowed VLAN list, this VLAN is assigned to this port automatically.

Default All

Format `switchport trunk allowed vlan {vlan-List | all | {add vlan-List} | {remove vlan-List} | {except vlan-List } }`

Mode Interface Config

Parameter	Description
all	Specifies all VLANs from 1 to 4093. This keyword is not allowed on commands that do not permit all VLANs in the list to be set at the same time.
add	Adds the defined list of VLANs to those currently set instead of replacing the list.
remove	Removes the defined list of VLANs from those currently set instead of replacing the list. Valid IDs are from 1 to 4093; extended-range VLAN IDs of the form X-Y or X,Y,Z are valid in this command.
except	Lists the VLANs that should be calculated by inverting the defined list of VLANs. (VLANs are added except the ones specified.)
vlan-list	Either a single VLAN number from 1 to 4093 or a continuous range of VLANs described by two VLAN numbers, the lesser one first, separated by a hyphen.

4.7.2.1 no switchport trunk allowed vlan

This command resets the list of allowed VLANs on the trunk port to its default value.

Format `no switchport trunk allowed vlan`

Mode Interface Config

4.7.3 switchport trunk native vlan

Use this command to configure the Trunk port Native VLAN (PVID) parameter. Any ingress untagged packets on the port are tagged with the value of Native VLAN. Native VLAN must be in the allowed VLAN list for tagging of received untagged packets. Otherwise, untagged packets are discarded. Packets marked with Native VLAN are transmitted untagged from Trunk port. The default is 1.

Default 1 (Default VLAN)

Format `switchport trunk native vlan vlan-id`

Mode Interface Config

4.7.3.1 no switchport trunk native vlan

Use this command to reset the switch port trunk mode native VLAN to its default value.

Format `no switchport trunk native vlan`

Mode Interface Config

4.7.4 switchport access vlan

Use this command to configure the VLAN on the Access port. Only one VLAN can be assigned to the Access port. Access ports are members of VLAN 1 by default. Access ports may be assigned to a VLAN other than VLAN 1. Removing the Access VLAN on the switch makes the Access port a member of VLAN 1. Configuring an Access port to be a member of a VLAN that does not exist results in an error and does not change the configuration.

Default 1 (Default VLAN)
Format switchport access vlan *vlan-id*
Mode Interface Config

4.7.4.1 no switchport access vlan

This command resets the switch port access mode VALN to its default value.

Format no switchport access vlan
Mode Interface Config

4.7.5 show interfaces switchport

Use this command to display the switchport status for all interfaces or a specified interface.

Format show interfaces switchport *slot/port*
Mode Privileged EXEC

Example:

(Routing) #show interfaces switchport 0/1

```
Port: 0/1
VLAN Membership Mode: General
Access Mode VLAN: 1 (default)
General Mode PVID: 1 (default)
General Mode Ingress Filtering: Disabled
General Mode Acceptable Frame Type: Admit all
General Mode Dynamically Added VLANs:
General Mode Untagged VLANs: 1
General Mode Tagged VLANs:
General Mode Forbidden VLANs:
Trunking Mode Native VLAN: 1 (default)
Trunking Mode Native VLAN tagging: Disable
Trunking Mode VLANs Enabled: All
Protected Port: False
```

(Routing) #show interfaces switchport

```
Port: 0/1
VLAN Membership Mode: General
Access Mode VLAN: 1 (default)
General Mode PVID: 1 (default)
General Mode Ingress Filtering: Disabled
General Mode Acceptable Frame Type: Admit all
General Mode Dynamically Added VLANs:
General Mode Untagged VLANs: 1
General Mode Tagged VLANs:
General Mode Forbidden VLANs:
```

```

Trunking Mode Native VLAN: 1 (default)
Trunking Mode Native VLAN tagging: Disable
Trunking Mode VLANs Enabled: All
Protected Port: False

```

4.7.6 show interfaces switchport

Use this command to display the Switchport configuration for a selected mode per interface. If the interface is not specified, the configuration for all interfaces is displayed.

Format show interfaces switchport {access | trunk | general} [slot/port]

Mode Privileged EXEC

Example:

```
(Switching) # show interfaces switchport access 0/1
```

```

Intf      PVID
-----
0/1       1

```

```
(Switching) # show interfaces switchport trunk 0/6
```

```

Intf      PVID  Allowed Vlans List
-----
0/6       1     All

```

```
(Switching) # show interfaces switchport general 0/5
```

```

Intf      PVID  Ingress    Acceptable  Untagged  Tagged  Forbidden  Dynamic
          PVID  Filtering  Frame Type  Vlans     Vlans   Vlans      Vlans
-----
0/5       1     Enabled   Admit All   7         10-50,55 9,100-200 88,96

```

```
(Switching) # show interfaces switchport general
```

```

Intf      PVID  Ingress    Acceptable  Untagged  Tagged  Forbidden  Dynamic
          PVID  Filtering  Frame Type  Vlans     Vlans   Vlans      Vlans
-----
0/1       1     Enabled   Admit All   1,4-7     30-40,55 3,100-200 88,96
0/2       1     Disabled  Admit All   1         30-40,55 none       none
..

```

4.8 Voice VLAN Commands

This section describes the commands you use for Voice VLAN. Voice VLAN enables switch ports to carry voice traffic with defined priority so as to enable separation of voice and data traffic coming onto the port. The benefits of using Voice VLAN is to ensure that the sound quality of an IP phone could be safeguarded from deteriorating when the data traffic on the port is high.

Also the inherent isolation provided by VLANs ensures that inter-VLAN traffic is under management control and that network- attached clients cannot initiate a direct attack on voice components. QoS-based on IEEE 802.1P class of service (CoS) uses classification and scheduling to sent network traffic from the switch in a predictable manner. The system uses the source MAC of the traffic traveling through the port to identify the IP phone data flow.

4.8.1 voice vlan (Global Config)

Use this command to enable the Voice VLAN capability on the switch.

Default disabled
Format voice vlan
Mode Global Config

4.8.1.1 no voice vlan (Global Config)

Use this command to disable the Voice VLAN capability on the switch.

Format no voice vlan
Mode Global Config

4.8.2 voice vlan (Interface Config)

Use this command to enable the Voice VLAN capability on the interface or range of interfaces.

Default disabled
Format voice vlan {vlanid *id* | dot1p *priority* | none | untagged}
Mode Interface Config

You can configure Voice VLAN in one of four different ways:

Parameter	Description
vlan-id	Configure the IP phone to forward all voice traffic through the specified VLAN. Valid VLAN ID's are from 1 to 4093 (the max supported by the platform).
dot1p	Configure the IP phone to use 802.1p priority tagging for voice traffic and to use the default native VLAN (VLAN 0) to carry all traffic. Valid <i>priority</i> range is 0 to 7.
none	Allow the IP phone to use its own configuration to send untagged voice traffic.
untagged	Configure the phone to send untagged voice traffic.

4.8.2.1 no voice vlan (Interface Config)

Use this command to disable the Voice VLAN capability on the interface.

Format no voice vlan
Mode Interface Config

4.8.3 voice vlan data priority

Use this command to either trust or untrust the data traffic arriving on the Voice VLAN interface or range of interfaces being configured.

Default trust
Format voice vlan data priority {untrust | trust}
Mode Interface Config

4.8.4 show voice vlan

Format show voice vlan [interface {slot/port | all}]

Mode Privileged EXEC

When the interface parameter is not specified, only the global mode of the Voice VLAN is displayed.

Term	Definition
Administrative Mode	The Global Voice VLAN mode.

When the interface is specified:

Term	Definition
Voice VLAN Mode	The admin mode of the Voice VLAN on the interface.
Voice VLAN ID	The Voice VLAN ID
Voice VLAN Priority	The do1p priority for the Voice VLAN on the port.
Voice VLAN Untagged	The tagging option for the Voice VLAN traffic.
Voice VLAN CoS Override	The Override option for the voice traffic arriving on the port.
Voice VLAN Status	The operational status of Voice VLAN on the port.

4.9 Provisioning (IEEE 802.1p) Commands

This section describes the commands you use to configure provisioning (IEEE 802.1p,) which allows you to prioritize ports.

4.9.1 vlan port priority all

This command configures the port priority assigned for untagged packets for all ports presently plugged into the device. The range for the priority is 0-7. Any subsequent per port configuration will override this configuration setting.

Format vlan port priority all *priority*

Mode Global Config

4.9.2 vlan priority

This command configures the default 802.1p port priority assigned for untagged packets for a specific interface. The range for the priority is 0-7.

Default 0

Format vlan priority *priority*

Mode Interface Config

4.10 Asymmetric Flow Control

**Note...**

Asymmetric Flow Control can only be configured globally for all ports on XGS4 silicon-based switches.

**Note...**

Asymmetric Flow Control is not supported on Fast Ethernet platforms.

**Note...**

If Asymmetric Flow Control is not supported on the platform, then only symmetric, or no flow control, modes are configurable.

When in asymmetric flow control mode, the switch responds to PAUSE frames received from a peer by stopping packet transmission, but the switch does not initiate MAC control PAUSE frames.

When you configure the switch in asymmetric flow control (or no flow control mode), the device is placed in egress drop mode. Egress drop mode maximizes the throughput of the system at the expense of packet loss in a heavily congested system, and this mode avoids head-of-line blocking.

4.10.1 `flowcontrol {symmetric|asymmetric}`

**Note...**

The **flowcontrol {symmetric|asymmetric}** command is available if the platform supports the asymmetric flow control feature.

Use this command to enable or disable the symmetric or asymmetric flow control on the switch. Asymmetric here means that **Tx Pause** can never be enabled. Only **Rx Pause** can be enabled.

Default Flow control is disabled.
Format `flowcontrol {symmetric|asymmetric}`
Mode Global Config

4.10.1.1 `no flowcontrol {symmetric|asymmetric}`

Use the **no** form of this command to disable symmetric or asymmetric flow control.

Format `no flowcontrol {symmetric|asymmetric}`
Mode Global Config

4.10.2 `flowcontrol`

**Note...**

This **flowcontrol** command is available if the platform supports only the symmetric flow control feature.

Use this command to enable or disable the symmetric flow control on the switch.

Default Flow control is disabled.
Format `flowcontrol`
Mode Global Config

4.10.2.1 no flowcontrol

Use the **no** form of this command to disable the symmetric flow control.

Format no flowcontrol

Mode Global Config

4.10.3 show flowcontrol

Use this command to display the IEEE 802.3 Annex 31B flow control settings and status for a specific interface or all interfaces. The command also displays 802.3 Tx and Rx pause counts. Priority Flow Control frames counts are not displayed. If the port is enabled for priority flow control, operational flow control status is displayed as **Inactive**. Operational flow control status for stacking ports is always displayed as **N/A**.

Format show flowcontrol [*slot/port*]

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Switching)#show flowcontrol
```

Admin Flow Control: Symmetric

Port	Flow Control Oper	RxPause	TxPause
0/1	Active	310	611
0/2	Inactive	0	0

Example: The following shows example CLI display output for the command.

```
(Switching)#show flowcontrol interface 0/1
```

Admin Flow Control: Symmetric

Port	Flow Control Oper	RxPause	TxPause
0/1	Active	310	611

4.11 Protected Ports Commands

This section describes commands you use to configure and view protected ports on a switch. Protected ports do not forward traffic to each other, even if they are on the same VLAN. However, protected ports can forward traffic to all unprotected ports in their group. Unprotected ports can forward traffic to both protected and unprotected ports. Ports are unprotected by default.

If an interface is configured as a protected port, and you add that interface to a Port Channel or Link Aggregation Group (LAG), the protected port status becomes operationally disabled on the interface, and the interface follows the configuration of the LAG port. However, the protected port configuration for the interface remains unchanged. Once the interface is no longer a member of a LAG, the current configuration for that interface automatically becomes effective.

4.11.1 switchport protected (Global Config)

Use this command to create a protected port group. The *groupid* parameter identifies the set of protected ports. Use the name *name* pair to assign a name to the protected port group. The name can be up to 32 alphanumeric characters long, including blanks. The default is blank.



Note...

Port protection occurs within a single switch. Protected port configuration does not affect traffic between ports on two different switches. No traffic forwarding is possible between two protected ports.

Default	unprotected
Format	switchport protected <i>groupid</i> name <i>name</i>
Mode	Global Config

4.11.1.1 no switchport protected (Global Config)

Use this command to remove a protected port group. The *groupid* parameter identifies the set of protected ports. The name keyword specifies the name to remove from the group.

Format	no switchport protected <i>groupid</i> name
Mode	Global Config

4.11.2 switchport protected (Interface Config)

Use this command to add an interface to a protected port group. The *groupid* parameter identifies the set of protected ports to which this interface is assigned. You can only configure an interface as protected in one group.



Note...

Port protection occurs within a single switch. Protected port configuration does not affect traffic between ports on two different switches. No traffic forwarding is possible between two protected ports.

Default	unprotected
Format	switchport protected <i>groupid</i>
Mode	Interface Config

4.11.2.1 no switchport protected (Interface Config)

Use this command to configure a port as unprotected. The *groupid* parameter identifies the set of protected ports to which this interface is assigned.

Format	no switchport protected <i>groupid</i>
Mode	Interface Config

4.11.3 show switchport protected

This command displays the status of all the interfaces, including protected and unprotected interfaces.

Format `show switchport protected groupid`

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Group ID	The number that identifies the protected port group.
Name	An optional name of the protected port group. The name can be up to 32 alphanumeric characters long, including blanks. The default is blank.
List of Physical Ports	List of ports, which are configured as protected for the group identified with <i>groupid</i> . If no port is configured as protected for this group, this field is blank.

4.11.4 `show interfaces switchport`

This command displays the status of the interface (protected/unprotected) under the *groupid*.

Format `show interfaces switchport slot/port groupid`

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Name	A string associated with this group as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. This field is optional.
Protected	Indicates whether the interface is protected or not. It shows TRUE or FALSE. If the group is a multiple groups then it shows TRUE in Group <i>groupid</i> .

4.12 GARP Commands

This section describes the commands you use to configure Generic Attribute Registration Protocol (GARP) and view GARP status. The commands in this section affect both GARP VLAN Registration Protocol (GVRP) and GARP Multicast Registration Protocol (GMRP). GARP is a protocol that allows client stations to register with the switch for membership in VLANs (by using GVMP) or multicast groups (by using GVMP).

4.12.1 `set garp timer join`

This command sets the GVRP join time per GARP for one interface, a range of interfaces, or all interfaces. Join time is the interval between the transmission of GARP Protocol Data Units (PDUs) registering (or reregistering) membership for a VLAN or multicast group. This command has an effect only when GVRP is enabled. The time is from 10 to 100 (centiseconds). The value 20 centiseconds is 0.2 seconds.

Default 20

Format `set garp timer join 10-100`

Mode

- Interface Config
- Global Config

4.12.1.1 `no set garp timer join`

This command sets the GVRP join time to the default and only has an effect when GVRP is enabled.

Format no set garp timer join

Mode • Interface Config
 • Global Config

4.12.2 set garp timer leave

This command sets the GVRP leave time for one interface, a range of interfaces, or all interfaces or all ports and only has an effect when GVRP is enabled. Leave time is the time to wait after receiving an unregister request for a VLAN or a multicast group before deleting the VLAN entry. This can be considered a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. The leave time is 20 to 600 (centiseconds). The value 60 centiseconds is 0.6 seconds. The leave time must be greater than or equal to three times the join time.

Default 60

Format set garp timer leave 20-600

Mode • Interface Config
 • Global Config

4.12.2.1 no set garp timer leave

This command sets the GVRP leave time on all ports or a single port to the default and only has an effect when GVRP is enabled.

Format no set garp timer leave

Mode • Interface Config
 • Global Config

4.12.3 set garp timer leaveall

This command sets how frequently Leave All PDUs are generated. A Leave All PDU indicates that all registrations will be unregistered. Participants would need to rejoin in order to maintain registration. The value applies per port and per GARP participation. The time may range from 200 to 6000 (centiseconds). The value 1000 centiseconds is 10 seconds. You can use this command on all ports (Global Config mode), or on a single port or a range of ports (Interface Config mode) and it only has an effect only when GVRP is enabled. The leave all time must be greater than the leave time.

Default 1000

Format set garp timer leaveall 200-6000

Mode • Interface Config
 • Global Config

4.12.3.1 no set garp timer leaveall

This command sets how frequently Leave All PDUs are generated the default and only has an effect when GVRP is enabled.

Format no set garp timer leaveall

Mode • Interface Config
 • Global Config

4.12.4 show garp

This command displays GARP information.

Format show garp

Mode • Privileged EXEC

 • User EXEC

Term	Definition
GMRP Admin Mode	The administrative mode of GARP Multicast Registration Protocol (GMRP) for the system.
GVRP Admin Mode	The administrative mode of GARP VLAN Registration Protocol (GVRP) for the system.

4.13 GVRP Commands

This section describes the commands you use to configure and view GARP VLAN Registration Protocol (GVRP) information. GVRP-enabled switches exchange VLAN configuration information, which allows GVRP to provide dynamic VLAN creation on trunk ports and automatic VLAN pruning.

**Note...**

If GVRP is disabled, the system does not forward GVRP messages.

4.13.1 set gvrp adminmode

This command enables GVRP on the system.

Default disabled

Format set gvrp adminmode

Mode Privileged EXEC

4.13.1.1 no set gvrp adminmode

This command disables GVRP.

Format no set gvrp adminmode

Mode Privileged EXEC

4.13.2 set gvrp interfacemode

This command enables GVRP on a single port (Interface Config mode), a range of ports (Interface Range mode), or all ports (Global Config mode).

Default disabled

Format set gvrp interfacemode

Mode • Interface Config

 • Interface Range

 • Global Config

4.13.2.1 no set gvrp interfacemode

This command disables GVRP on a single port (Interface Config mode) or all ports (Global Config mode). If GVRP is disabled, Join Time, Leave Time and Leave All Time have no effect.

Format no set gvrp interfacemode

- Mode**
- Interface Config
 - Global Config

4.13.3 show gvrp configuration

This command displays Generic Attributes Registration Protocol (GARP) information for one or all interfaces.

Format show gvrp configuration {*slot/port* | all}

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	<i>slot/port</i>
Join Timer	The interval between the transmission of GARP PDUs registering (or reregistering) membership for an attribute. Current attributes are a VLAN or multicast group. There is an instance of this timer on a per-Port, per-GARP participant basis. Permissible values are 10 to 100 centiseconds (0.1 to 1.0 seconds). The factory default is 20 centiseconds (0.2 seconds). The finest granularity of specification is one centisecond (0.01 seconds).
Leave Timer	The period of time to wait after receiving an unregister request for an attribute before deleting the attribute. Current attributes are a VLAN or multicast group. This may be considered a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. There is an instance of this timer on a per-Port, per-GARP participant basis. Permissible values are 20 to 600 centiseconds (0.2 to 6.0 seconds). The factory default is 60 centiseconds (0.6 seconds).
LeaveAll Timer	This Leave All Time controls how frequently LeaveAll PDUs are generated. A LeaveAll PDU indicates that all registrations will shortly be deregistered. Participants will need to rejoin in order to maintain registration. There is an instance of this timer on a per-Port, per-GARP participant basis. The Leave All Period Timer is set to a random value in the range of LeaveAllTime to 1.5*LeaveAllTime. Permissible values are 200 to 6000 centiseconds (2 to 60 seconds). The factory default is 1000 centiseconds (10 seconds).
Port GMRP Mode	The GMRP administrative mode for the port, which is enabled or disabled (default). If this parameter is disabled, Join Time, Leave Time and Leave All Time have no effect.

4.14 GMRP Commands

This section describes the commands you use to configure and view GARP Multicast Registration Protocol (GMRP) information. Like IGMP snooping, GMRP helps control the flooding of multicast packets. GMRP-enabled switches dynamically register and de-register group membership information with the MAC networking devices attached to the same segment. GMRP also allows group membership information to propagate across all networking devices in the bridged LAN that support Extended Filtering Services.

**Note...**

If GMRP is disabled, the system does not forward GMRP messages.

4.14.1 set gmrp adminmode

This command enables GARP Multicast Registration Protocol (GMRP) on the system.

Default disabled
Format set gmrp adminmode
Mode Privileged EXEC

4.14.1.1 no set gmrp adminmode

This command disables GARP Multicast Registration Protocol (GMRP) on the system.

Format no set gmrp adminmode
Mode Privileged EXEC

4.14.2 set gmrp interfacemode

This command enables GARP Multicast Registration Protocol on a single interface (Interface Config mode), a range of interfaces, or all interfaces (Global Config mode). If an interface which has GARP enabled is enabled for routing or is enlisted as a member of a port-channel (LAG), GARP functionality is disabled on that interface. GARP functionality is subsequently re-enabled if routing is disabled and port-channel (LAG) membership is removed from an interface that has GARP enabled.

Default disabled
Format set gmrp interfacemode
Mode

- Interface Config
- Global Config

4.14.2.1 no set gmrp interfacemode

This command disables GARP Multicast Registration Protocol on a single interface or all interfaces. If an interface which has GARP enabled is enabled for routing or is enlisted as a member of a port-channel (LAG), GARP functionality is disabled. GARP functionality is subsequently re-enabled if routing is disabled and port-channel (LAG) membership is removed from an interface that has GARP enabled.

Format no set gmrp interfacemode
Mode

- Interface Config
- Global Config

4.14.3 show gmrp configuration

This command displays Generic Attributes Registration Protocol (GARP) information for one or all interfaces.

Format show gmrp configuration {slot/port | all}
Mode

- Privileged EXEC
- User EXEC

Term	Definition
Interface	The <i>slot/port</i> of the interface that this row in the table describes.

Term	Definition
Join Timer	The interval between the transmission of GARP PDUs registering (or reregistering) membership for an attribute. Current attributes are a VLAN or multicast group. There is an instance of this timer on a per-port, per-GARP participant basis. Permissible values are 10 to 100 centiseconds (0.1 to 1.0 seconds). The factory default is 20 centiseconds (0.2 seconds). The finest granularity of specification is 1 centisecond (0.01 seconds).
Leave Timer	The period of time to wait after receiving an unregister request for an attribute before deleting the attribute. Current attributes are a VLAN or multicast group. This may be considered a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. There is an instance of this timer on a per-Port, per-GARP participant basis. Permissible values are 20 to 600 centiseconds (0.2 to 6.0 seconds). The factory default is 60 centiseconds (0.6 seconds).
LeaveAll Timer	This Leave All Time controls how frequently LeaveAll PDUs are generated. A LeaveAll PDU indicates that all registrations will shortly be deregistered. Participants will need to rejoin in order to maintain registration. There is an instance of this timer on a per-Port, per-GARP participant basis. The Leave All Period Timer is set to a random value in the range of LeaveAllTime to 1.5*LeaveAllTime. Permissible values are 200 to 6000 centiseconds (2 to 60 seconds). The factory default is 1000 centiseconds (10 seconds).
Port GMRP Mode	The GMRP administrative mode for the port. It may be enabled or disabled. If this parameter is disabled, Join Time, Leave Time and Leave All Time have no effect.

4.14.4 show mac-address-table gmrp

This command displays the GMRP entries in the Multicast Forwarding Database (MFDB) table.

Format show mac-address-table gmrp

Mode Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC Address is learned.
MAC Address	A unicast MAC address for which the switch has forwarding and or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Type	The type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

4.15 Port-Based Network Access Control Commands

This section describes the commands you use to configure port-based network access control (IEEE 802.1X). Port-based network access control allows you to permit access to network services only to and devices that are authorized and authenticated.

4.15.1 aaa authentication dot1x default

Use this command to configure the authentication method for port-based access to the switch. The additional methods of authentication are used only if the previous method returns an error, not if there is an authentication failure. The possible methods are as follows:

- **ias**. Uses the internal authentication server users database for authentication. This method can be used in conjunction with any one of the existing methods like **local**, **radius**, etc.
- **local**. Uses the local username database for authentication.
- **none**. Uses no authentication.
- **radius**. Uses the list of all RADIUS servers for authentication.

Format aaa authentication dot1x default {[ias]|[method1 [method2 [method3]]]}

Mode Global Config

Example: The following is an example of the command.

```
(FASTPATH Routing) #
(FASTPATH Routing) #configure
(FASTPATH Routing) (Config)#aaa authentication dot1x default ias none
(FASTPATH Routing) (Config)#aaa authentication dot1x default ias local radius none
```

4.15.2 clear dot1x statistics

This command resets the 802.1X statistics for the specified port or for all ports.

Format clear dot1x statistics {slot/port | all}

Mode Privileged EXEC

4.15.3 clear dot1x authentication-history

This command clears the authentication history table captured during successful and unsuccessful authentication on all interface or the specified interface.

Format clear dot1x authentication-history [slot/port]

Mode Privileged EXEC

4.15.4 clear radius statistics

This command is used to clear all RADIUS statistics.

Format clear radius statistics

Mode Privileged EXEC

4.15.5 dot1x eapolflood

Use this command to enable EAPOL flood support on the switch.

Default disabled

Format dot1x eapolflood

Mode Global Config

4.15.5.1 no dot1x eapolflood

This command disables EAPOL flooding on the switch.

Format no dot1x eapolflood

Mode Global Config

4.15.6 dot1x dynamic-vlan enable

Use this command to enable the switch to create VLANs dynamically when a RADIUS-assigned VLAN does not exist in the switch.

Default Disabled
Format dot1x dynamic-vlan enable
Mode Global Config

4.15.6.1 no dot1x dynamic-vlan enable

Use this command to prevent the switch from creating VLANs when a RADIUS-assigned VLAN does not exist in the switch.

Format no dot1x dynamic-vlan enable
Mode Global Config

4.15.7 dot1x guest-vlan

This command configures VLAN as guest vlan on an interface or a range of interfaces. The command specifies an active VLAN as an IEEE 802.1X guest VLAN. The range is 1 to the maximum VLAN ID supported by the platform.

Default disabled
Format dot1x guest-vlan *vlan-id*
Mode Interface Config

4.15.7.1 no dot1x guest-vlan

This command disables Guest VLAN on the interface.

Default disabled
Format no dot1x guest-vlan
Mode Interface Config

4.15.8 dot1x initialize

This command begins the initialization sequence on the specified port. This command is only valid if the control mode for the specified port is auto or mac-based. If the control mode is not auto or mac-based, an error will be returned.

Format dot1x initialize *slot/port*
Mode Privileged EXEC

4.15.9 dot1x max-req

This command sets the maximum number of times the authenticator state machine on an interface or range of interfaces will transmit an EAPOL EAP Request/Identity frame before timing out the supplicant. The *count* value must be in the range 1 - 10.

Default 2
Format dot1x max-req *count*
Mode Interface Config

4.15.9.1 no dot1x max-req

This command sets the maximum number of times the authenticator state machine on this port will transmit an EAPOL EAP Request/Identity frame before timing out the supplicant.

Format no dot1x max-req

Mode Interface Config

4.15.10 dot1x max-users

Use this command to set the maximum number of clients supported on an interface or range of interfaces when MAC-based dot1x authentication is enabled on the port. The maximum users supported per port is dependent on the product. The *count* value is in the range 1 - 48.

Default 48

Format dot1x max-users *count*

Mode Interface Config

4.15.10.1 no dot1x max-users

This command resets the maximum number of clients allowed per port to its default value.

Format no dot1x max-users

Mode Interface Config

4.15.11 dot1x port-control

This command sets the authentication mode to use on the specified interface or range of interfaces. Use the force-unauthorized parameter to specify that the authenticator PAE unconditionally sets the controlled port to unauthorized. Use the force-authorized parameter to specify that the authenticator PAE unconditionally sets the controlled port to authorized. Use the auto parameter to specify that the authenticator PAE sets the controlled port mode to reflect the outcome of the authentication exchanges between the supplicant, authenticator and the authentication server. If the mac-based option is specified, then MAC-based dot1x authentication is enabled on the port.

**Note...**

MAC-based dot1x authentication is supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

Default auto

Format dot1x port-control {force-unauthorized | force-authorized | auto | mac-based}

Mode Interface Config

4.15.11.1 no dot1x port-control

This command sets the 802.1X port control mode on the specified port to the default value.

Format no dot1x port-control

Mode Interface Config

4.15.12 dot1x port-control all

This command sets the authentication mode to use on all ports. Select **force-unauthorized** to specify that the authenticator PAE unconditionally sets the controlled port to unauthorized. Select **force-authorized** to specify that the authenticator PAE unconditionally sets the controlled port to authorized. Select **auto** to specify that the authenticator PAE sets the controlled port mode to reflect the outcome of the authentication exchanges between the supplicant, authenticator and the authentication server. If the **mac-based** option is specified, then MAC-based dot1x authentication is enabled on the port.

**Note...**

MAC-based dot1x authentication is supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

Default	auto
Format	dot1x port-control all {force-unauthorized force-authorized auto mac-based}
Mode	Global Config

4.15.12.1 no dot1x port-control all

This command sets the authentication mode on all ports to the default value.

Format	no dot1x port-control all
Mode	Global Config

4.15.13 dot1x mac-auth-bypass

If the 802.1X mode on the interface is mac-based, you can optionally use this command to enable MAC Authentication Bypass (MAB) on an interface. MAB is a supplemental authentication mechanism that allows 802.1X unaware clients – such as printers, fax machines, and some IP phones – to authenticate to the network using the client MAC address as an identifier.

Default	disabled
Format	dot1x mac-auth-bypass
Mode	Interface Config

4.15.13.1 no dot1x mac-auth-bypass

This command sets the MAB mode on the ports to the default value.

Format	no dot1x mac-auth-bypass
Mode	Interface Config

4.15.14 dot1x re-authenticate

This command begins the reauthentication sequence on the specified port. This command is only valid if the control mode for the specified port is **auto** or **mac-based**. If the control mode is not **auto** or **mac-based**, an error will be returned.

**Note...**

MAC-based dot1x authentication is supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

Format `dot1x re-authenticate slot/port`
Mode Privileged EXEC

4.15.15 `dot1x re-authentication`

This command enables reauthentication of the supplicant for the specified interface or range of interfaces.

Default disabled
Format `dot1x re-authentication`
Mode Interface Config

4.15.15.1 `no dot1x re-authentication`

This command disables reauthentication of the supplicant for the specified port.

Format `no dot1x re-authentication`
Mode Interface Config

4.15.16 `dot1x system-auth-control`

Use this command to enable the dot1x authentication support on the switch. While disabled, the dot1x configuration is retained and can be changed, but is not activated.

Default disabled
Format `dot1x system-auth-control`
Mode Global Config

4.15.16.1 `no dot1x system-auth-control`

This command is used to disable the dot1x authentication support on the switch.

Format `no dot1x system-auth-control`
Mode Global Config

4.15.17 `dot1x system-auth-control monitor`

Use this command to enable the 802.1X monitor mode on the switch. The purpose of Monitor mode is to help troubleshoot port-based authentication configuration issues without disrupting network access for hosts connected to the switch. In Monitor mode, a host is granted network access to an 802.1X-enabled port even if it fails the authentication process. The results of the process are logged for diagnostic purposes.

Default disabled
Format dot1x system-auth-control monitor
Mode Global Config

4.15.17.1 no dot1x system-auth-control monitor

This command disables the 802.1X Monitor mode on the switch.

Format no dot1x system-auth-control monitor
Mode Global Config

4.15.18 dot1x timeout

This command sets the value, in seconds, of the timer used by the authenticator state machine on an interface or range of interfaces. Depending on the token used and the value (in seconds) passed, various timeout configurable parameters are set. The following tokens are supported:

Tokens	Definition
guest-vlan-period	The time, in seconds, for which the authenticator waits to see if any EAPOL packets are received on a port before authorizing the port and placing the port in the guest vlan (if configured). The guest vlan timer is only relevant when guest vlan has been configured on that specific port.
reauth-period	The value, in seconds, of the timer used by the authenticator state machine on this port to determine when reauthentication of the supplicant takes place. The reauth-period must be a value in the range 1 - 65535.
quiet-period	The value, in seconds, of the timer used by the authenticator state machine on this port to define periods of time in which it will not attempt to acquire a supplicant. The quiet-period must be a value in the range 0 - 65535.
tx-period	The value, in seconds, of the timer used by the authenticator state machine on this port to determine when to send an EAPOL EAP Request/Identity frame to the supplicant. The quiet-period must be a value in the range 1 - 65535.
supp-timeout	The value, in seconds, of the timer used by the authenticator state machine on this port to timeout the supplicant. The supp-timeout must be a value in the range 1 - 65535.
server-timeout	The value, in seconds, of the timer used by the authenticator state machine on this port to timeout the authentication server. The supp-timeout must be a value in the range 1 - 65535.

Default

- guest-vlan-period: 90 seconds
- reauth-period: 3600 seconds
- quiet-period: 60 seconds
- tx-period: 30 seconds
- supp-timeout: 30 seconds
- server-timeout: 30 seconds

Format dot1x timeout {{guest-vlan-period *seconds*} | {reauth-period *seconds*} | {quiet-period *seconds*} | {tx-period *seconds*} | {supp-timeout *seconds*} | {server-timeout *seconds*}}

Mode Interface Config

4.15.18.1 no dot1x timeout

This command sets the value, in seconds, of the timer used by the authenticator state machine on this port to the default values. Depending on the token used, the corresponding default values are set.

Format no dot1x timeout {guest-vlan-period | reauth-period | quiet-period | tx-period | supp-timeout | server-timeout}

Mode Interface Config

4.15.19 dot1x unauthenticated-vlan

Use this command to configure the unauthenticated VLAN associated with the specified interface or range of interfaces. The unauthenticated VLAN ID can be a valid VLAN ID from 0-Maximum supported VLAN ID (4093 for FASTPATH). The unauthenticated VLAN must be statically configured in the VLAN database to be operational. By default, the unauthenticated VLAN is 0, i.e. invalid and not operational.

Default 0

Format dot1x unauthenticated-vlan *vlan id*

Mode Interface Config

4.15.19.1 no dot1x unauthenticated-vlan

This command resets the unauthenticated-vlan associated with the port to its default value.

Format no dot1x unauthenticated-vlan

Mode Interface Config

4.15.20 dot1x user

This command adds the specified user to the list of users with access to the specified port or all ports. The *user* parameter must be a configured user.

Format dot1x user *user* {*slot/port* | all}

Mode Global Config

4.15.20.1 no dot1x user

This command removes the user from the list of users with access to the specified port or all ports.

Format no dot1x user *user* {*slot/port* | all}

Mode Global Config

4.15.21 authentication enable

This command globally enables the Authentication Manager. Interface configuration takes effect only if the Authentication Manager is enabled with this command.

Default disabled

Format *authentication enable*

Mode Global Config

4.15.21.1 no authentication enable

This command disables the Authentication Manager.

Format *no authentication enable*

Mode Global Config

4.15.22 authentication order

This command sets the order of authentication methods used on a port. The available authentication methods are Dot1x, MAB, and captive portal. Ordering sets the order of methods that the switch attempts when trying to authenticate a new device connected to a port. If one method is unsuccessful or timed out, the next method is attempted.

Each method can only be entered once. Ordering is only possible between 802.1x and MAB. Captive portal can be configured either as a stand-alone method or as the last method in the order.

Format authentication order {dot1x [mab [captive-portal] | captive-portal] | mab [dot1x [captive-portal] | captive-portal] | captive-portal}

Mode Interface Config

4.15.22.1 no authentication order

This command returns the port to the default authentication order.

Format *no authentication order*

Mode Interface Config

4.15.23 authentication priority

This command sets the priority for the authentication methods used on a port. The available authentication methods are Dot1x, MAB, and captive portal. The authentication priority decides if a previously authenticated client is reauthenticated with a higher-priority method when the same is received. Captive portal is always the last method in the list.

Default authentication order dot1x mab captive portal

Format authentication priority {dot1x [mab [captive portal] | captive portal] | mab [dot1x [captive portal] | captive portal] | captive portal}

Mode Interface Config

4.15.23.1 no authentication priority

This command returns the port to the default order of priority for the authentication methods.

Format *no authentication priority*

Mode Interface Config

4.15.24 authentication timer restart

This command sets the time, in seconds, after which reauthentication starts. (The default time is 300 seconds.) The timer restarts the authentication only after all the authentication methods fail. At the expiration of this timer, authentication is reinitiated for the port.

Format *authentication timer restart <300-65535>*

Mode Interface Config

4.15.24.1 no authentication timer restart

This command sets the reauthentication value to the default value of 3600 seconds.

Format *no authentication timer restart*

Mode Interface Config

4.15.25 show authentication authentication-history

Use this command to display information about the authentication history for a specified interface.

Format *show authentication authentication-history slot/port*

Mode Privileged EXEC

Term	Definition
Time Stamp	The time of the authentication.
Interface	The interface.
MAC-Address	The MAC address for the interface.
Auth Status Method	The authentication method and status for the interface.

Example: The following information is shown for the interface.

```

Time Stamp           Interface MAC-Address      Auth Status  Method
-----
Jul 21 1919 15:06:15  0/1          00:00:00:00:00:01 Authorized   802.1X

```

4.15.26 show authentication interface

Use this command to display authentication method information either for all interfaces or a specified port.

Format *show authentication interface {all | slot/port }*

Mode Privileged EXEC

The following information is displayed for each interface.

Term	Definition
Interface	The interface for which authentication configuration information is being displayed.
Authentication Restart timer	The time, in seconds, after which reauthentication starts.
Configured method order	The order of authentication methods used on a port.
Enabled method order	The order of authentication methods used on a port.
Configured method priority	The priority for the authentication methods used on a port.
Enabled method priority	The priority for the authentication methods used on a port.
Number of authenticated clients	The number of authenticated clients.
Logical Interface	The logical interface

Term	Definition
Client MAC addr	The MAC address for the client.
Authenticated Method	The current authentication method.
Auth State	If the authentication was successful.
Auth Status	The current authentication status.

Example: The following example displays the authentication interface information for all interfaces.
(switch) #show authentication interface all

```

Interface..... 0/1
Authentication Restart timer..... 300
Configured method order..... dot1x mab captive-portal
Enabled method order..... dot1x mab undefined
Configured method priority..... undefined undefined undefined
Enabled method priority..... undefined undefined undefined
Number of authenticated clients..... 0
Interface..... 0/2
Authentication Restart timer..... 300
Configured method order..... dot1x mab captive-portal
Enabled method order..... dot1x mab undefined
Configured method priority..... undefined undefined undefined
Enabled method priority..... undefined undefined undefined
Number of authenticated clients..... 0
Interface..... 0/3
Authentication Restart timer..... 300
Configured method order..... dot1x mab captive-portal
Enabled method order..... dot1x mab undefined
Configured method priority..... undefined undefined undefined
Enabled method priority..... undefined undefined undefined
Number of authenticated clients..... 0
Interface..... 0/4
Authentication Restart timer..... 300
Configured method order..... dot1x mab captive-portal
Enabled method order..... dot1x mab undefined
Configured method priority..... undefined undefined undefined
Enabled method priority..... undefined undefined undefined
Number of authenticated clients..... 0

```

4.15.27 show authentication methods

Use this command to display information about the authentication methods.

Format show authentication methods

Mode Privileged EXEC

Term	Definition
Authentication Login List	The authentication login listname.
Method 1	The first method in the specified authentication login list, if any.
Method 2	The second method in the specified authentication login list, if any.
Method 3	The third method in the specified authentication login list, if any.

Example: The following example displays the authentication configuration.

```
(switch)#show authentication methods
```

Login Authentication Method Lists

```
-----
defaultList      : local
networkList      : local
```

Enable Authentication Method Lists

```
-----
enableList       : enable  none
enableNetList    : enable  deny
```

Line	Login Method List	Enable Method List
Console	defaultList	enableList
Telnet	networkList	enableNetList
SSH	networkList	enableNetList

```
HTTPS      :local
HTTP       :local
DOT1X      :
```

4.15.28 show authentication statistics

Use this command to display the authentication statistics for an interface.

Format *show authentication statistics slot/port*

Mode Privileged EXEC

The following information is displayed for each interface.

Term	Definition
Port	The port for which information is being displayed.
802.1X attempts	The number of Dot1x authentication attempts for the port.
802.1X failed attempts	The number of failed Dot1x authentication attempts for the port.
Mab attempts	The number of MAB (MAC authentication bypass) authentication attempts for the port.
Mab failed attempts	The number of failed MAB authentication attempts for the port.
Captive-portal attempts	The number of captive portal (Web authorization) authentication attempts for the port.
Captive-portal failed attempts	The number of failed captive portal authentication attempts for the port.

Example:

```
(FASTPATH Routing) #show authentication statistics 0/1
```

```
Port..... 0/1
802.1X attempts..... 0
802.1X failed attempts..... 0
Mab attempts..... 0
Mab failed attempts..... 0
Captive-portal attempts..... 0
Captive-Portal failed attempts..... 0
```

4.15.29 clear authentication statistics

Use this command to clear the authentication statistics on an interface.

Format `clear authentication authentication-history {slot/port} | all`

Mode Privileged EXEC

4.15.30 clear authentication authentication-history

Use this command to clear the authentication history log for an interface.

Format `clear authentication authentication-history {slot/port | all}`

Mode Privileged EXEC

4.15.31 show dot1x

This command is used to show a summary of the global dot1x configuration, summary information of the dot1x configuration for a specified port or all ports, the detailed dot1x configuration for a specified port and the dot1x statistics for a specified port - depending on the tokens used.

Format `show dot1x [{summary {slot/port | all} | detail slot/port | statistics slot/port}]`

Mode Privileged EXEC

If you do not use the optional parameters *slot/port* or *vlanid*, the command displays the global dot1x mode, the VLAN Assignment mode, and the Dynamic VLAN Creation mode.

Term	Definition
Administrative Mode	Indicates whether authentication control on the switch is enabled or disabled.
VLAN Assignment Mode	Indicates whether assignment of an authorized port to a RADIUS-assigned VLAN is allowed (enabled) or not (disabled).
Dynamic VLAN Creation Mode	Indicates whether the switch can dynamically create a RADIUS-assigned VLAN if it does not currently exist on the switch.
Monitor Mode	Indicates whether the Dot1x Monitor mode on the switch is enabled or disabled.

If you use the optional parameter *summary {slot/port | all}*, the dot1x configuration for the specified port or all ports are displayed.

**Note...**

MAC-based dot1x authentication is supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

Term	Definition
Interface	The interface whose configuration is displayed.
Control Mode	The configured control mode for this port. Possible values are force-unauthorized force-authorized auto mac-based authorized unauthorized.
Operating Control Mode	The control mode under which this port is operating. Possible values are authorized unauthorized.
Reauthentication Enabled	Indicates whether reauthentication is enabled on this port.
Port Status	Indicates whether the port is authorized or unauthorized. Possible values are authorized unauthorized.

Example: The following shows example CLI display output for the command `show dot1x summary 0/1`.

Interface	Control Mode	Operating Control Mode	Port Status
-----	-----	-----	-----
0/1	auto	auto	Authorized

If you use the optional parameter '`detail slot/port`', the detailed dot1x configuration for the specified port is displayed.



Note...

MAC-based dot1x authentication is supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

Term	Definition
Port	The interface whose configuration is displayed.
Protocol Version	The protocol version associated with this port. The only possible value is 1, corresponding to the first version of the dot1x specification.
PAE Capabilities	The port access entity (PAE) functionality of this port. Possible values are Authenticator or Supplicant.
Control Mode	The configured control mode for this port. Possible values are force-unauthorized force-authorized auto mac-based.
Authenticator PAE State	Current state of the authenticator PAE state machine. Possible values are Initialize, Disconnected, Connecting, Authenticating, Authenticated, Aborting, Held, ForceAuthorized, and ForceUnauthorized. When MAC-based authentication is enabled on the port, this parameter is deprecated.
Backend Authentication State	Current state of the backend authentication state machine. Possible values are Request, Response, Success, Fail, Timeout, Idle, and Initialize. When MAC-based authentication is enabled on the port, this parameter is deprecated.
Quiet Period	The timer used by the authenticator state machine on this port to define periods of time in which it will not attempt to acquire a supplicant. The value is expressed in seconds and will be in the range 0 and 65535.
Transmit Period	The timer used by the authenticator state machine on the specified port to determine when to send an EAPOL EAP Request/Identity frame to the supplicant. The value is expressed in seconds and will be in the range of 1 and 65535.
Guest-VLAN ID	The guest VLAN identifier configured on the interface.
Guest VLAN Period	The time in seconds for which the authenticator waits before authorizing and placing the port in the Guest VLAN, if no EAPOL packets are detected on that port.

Term	Definition
Supplicant Timeout	The timer used by the authenticator state machine on this port to timeout the supplicant. The value is expressed in seconds and will be in the range of 1 and 65535.
Server Timeout	The timer used by the authenticator on this port to timeout the authentication server. The value is expressed in seconds and will be in the range of 1 and 65535.
Maximum Requests	The maximum number of times the authenticator state machine on this port will retransmit an EAPOL EAP Request/Identity before timing out the supplicant. The value will be in the range of 1 and 10.
Configured MAB Mode	The administrative mode of the MAC authentication bypass feature on the switch.
Operational MAB Mode	The operational mode of the MAC authentication bypass feature on the switch. MAB might be administratively enabled but not operational if the control mode is not MAC based.
Vlan-ID	The VLAN assigned to the port by the radius server. This is only valid when the port control mode is not Mac-based.
VLAN Assigned Reason	The reason the VLAN identified in the VLAN-assigned field has been assigned to the port. Possible values are RADIUS, Unauthenticated VLAN, Guest VLAN, default, and Not Assigned. When the VLAN Assigned Reason is Not Assigned, it means that the port has not been assigned to any VLAN by dot1x. This only valid when the port control mode is not MAC-based.
Reauthentication Period	The timer used by the authenticator state machine on this port to determine when reauthentication of the supplicant takes place. The value is expressed in seconds and will be in the range of 1 and 65535.
Reauthentication Enabled	Indicates if reauthentication is enabled on this port. Possible values are "True" or "False".
Key Transmission Enabled	Indicates if the key is transmitted to the supplicant for the specified port. Possible values are True or False.
EAPOL Flood Mode Enabled	Indicates whether the EAPOL flood support is enabled on the switch. Possible values are True or False.
Control Direction	The control direction for the specified port or ports. Possible values are both or in.
Maximum Users	The maximum number of clients that can get authenticated on the port in the MAC-based dot1x authentication mode. This value is used only when the port control mode is not MAC-based.
Unauthenticated VLAN ID	Indicates the unauthenticated VLAN configured for this port. This value is valid for the port only when the port control mode is not MAC-based.
Session Timeout	Indicates the time for which the given session is valid. The time period in seconds is returned by the RADIUS server on authentication of the port. This value is valid for the port only when the port control mode is not MAC-based.
Session Termination Action	This value indicates the action to be taken once the session timeout expires. Possible values are Default, Radius-Request. If the value is Default, the session is terminated the port goes into unauthorized state. If the value is Radius-Request, then a reauthentication of the client authenticated on the port is performed. This value is valid for the port only when the port control mode is not MAC-based.

Example: The following shows example CLI display output for the command.

```
(switch) #show dot1x detail 0/3
```

```
Port..... 0/1
Protocol Version..... 1
PAE Capabilities..... Authenticator
Control Mode..... auto
Authenticator PAE State..... Initialize
Backend Authentication State..... Initialize
Quiet Period (secs)..... 60
Transmit Period (secs)..... 30
Guest VLAN ID..... 0
Guest VLAN Period (secs)..... 90
Supplicant Timeout (secs)..... 30
Server Timeout (secs)..... 30
Maximum Requests..... 2
Configured MAB Mode..... Enabled
```

```

Operational MAB Mode..... Disabled
VLAN Id..... 0
VLAN Assigned Reason..... Not Assigned
Reauthentication Period (secs)..... 3600
Reauthentication Enabled..... FALSE
Key Transmission Enabled..... FALSE
EAPOL flood Mode Enabled..... FALSE
Control Direction..... both
Maximum Users..... 16
Unauthenticated VLAN ID..... 0
Session Timeout..... 0
Session Termination Action..... Default

```

**Note...**

MAC-based dot1x authentication is supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

For each client authenticated on the port, the `show dot1x detail slot/port` command will display the following MAC-based dot1x parameters if the port-control mode for that specific port is MAC-based.

Term	Definition
Supplicant MAC-Address	The MAC-address of the supplicant.
Authenticator PAE State	Current state of the authenticator PAE state machine. Possible values are Initialize, Disconnected, Connecting, Authenticating, Authenticated, Aborting, Held, ForceAuthorized, and ForceUnauthorized.
Backend Authentication State	Current state of the backend authentication state machine. Possible values are Request, Response, Success, Fail, Timeout, Idle, and Initialize.
VLAN-Assigned	The VLAN assigned to the client by the radius server.
Logical Port	The logical port number associated with the client.

If you use the optional parameter `statistics slot/port`, the following dot1x statistics for the specified port appear.

Term	Definition
Port	The interface whose statistics are displayed.
EAPOL Frames Received	The number of valid EAPOL frames of any type that have been received by this authenticator.
EAPOL Frames Transmitted	The number of EAPOL frames of any type that have been transmitted by this authenticator.
EAPOL Start Frames Received	The number of EAPOL start frames that have been received by this authenticator.
EAPOL Logoff Frames Received	The number of EAPOL logoff frames that have been received by this authenticator.
Last EAPOL Frame Version	The protocol version number carried in the most recently received EAPOL frame.
Last EAPOL Frame Source	The source MAC address carried in the most recently received EAPOL frame.
EAP Response/Id Frames Received	The number of EAP response/identity frames that have been received by this authenticator.

Term	Definition
EAP Response Frames Received	The number of valid EAP response frames (other than resp/id frames) that have been received by this authenticator.
EAP Request/Id Frames Transmitted	The number of EAP request/identity frames that have been transmitted by this authenticator.
EAP Request Frames Transmitted	The number of EAP request frames (other than request/identity frames) that have been transmitted by this authenticator.
Invalid EAPOL Frames Received	The number of EAPOL frames that have been received by this authenticator in which the frame type is not recognized.
EAP Length Error Frames Received	The number of EAPOL frames that have been received by this authenticator in which the frame type is not recognized.

4.15.32 show dot1x authentication-history

This command displays 802.1X authentication events and information during successful and unsuccessful Dot1x authentication process for all interfaces or the specified interface. Use the optional keywords to display only failure authentication events in summary or in detail.

Format show dot1x authentication-history {*slot/port* | all} [failed-auth-only] [detail]
Mode Privileged EXEC

Term	Definition
Time Stamp	The exact time at which the event occurs.
Interface	Physical Port on which the event occurs.
Mac-Address	The supplicant/client MAC address.
VLAN assigned	The VLAN assigned to the client/port on authentication.
VLAN assigned Reason	The type of VLAN ID assigned, which can be Guest VLAN, Unauth, Default, RADIUS Assigned, or Monitor Mode VLAN ID.
Auth Status	The authentication status.
Reason	The actual reason behind the successful or failed authentication.

4.15.33 show dot1x clients

This command displays 802.1X client information. This command also displays information about the number of clients that are authenticated using Monitor mode and using 802.1X.

Format show dot1x clients {*slot/port* | all}
Mode Privileged EXEC

Term	Definition
Clients Authenticated using Monitor Mode	Indicates the number of the Dot1x clients authenticated using Monitor mode.
Clients Authenticated using Dot1x	Indicates the number of Dot1x clients authenticated using 802.1x authentication process.
Logical Interface	The logical port number associated with a client.

Term	Definition
Interface	The physical port to which the supplicant is associated.
User Name	The user name used by the client to authenticate to the server.
Supplicant MAC Address	The supplicant device MAC address.
Session Time	The time since the supplicant is logged on.
Filter ID	Identifies the Filter ID returned by the RADIUS server when the client was authenticated. This is a configured DiffServ policy name on the switch.
VLAN ID	The VLAN assigned to the port.
VLAN Assigned	The reason the VLAN identified in the VLAN ID field has been assigned to the port. Possible values are RADIUS, Unauthenticated VLAN, Monitor Mode, or Default. When the VLAN Assigned reason is Default, it means that the VLAN was assigned to the port because the P-VID of the port was that VLAN ID.
Session Timeout	This value indicates the time for which the given session is valid. The time period in seconds is returned by the RADIUS server on authentication of the port. This value is valid for the port only when the port-control mode is not MAC-based.
Session Termination Action	This value indicates the action to be taken once the session timeout expires. Possible values are Default and Radius-Request. If the value is Default, the session is terminated and client details are cleared. If the value is Radius-Request, then a reauthentication of the client is performed.

4.15.34 show dot1x users

This command displays 802.1X port security user information for locally configured users.

Format `show dot1x users slot/port`
Mode Privileged EXEC

Term	Definition
Users	Users configured locally to have access to the specified port.

4.16 802.1X Supplicant Commands

FASTPATH supports 802.1X ("dot1x") supplicant functionality on point-to-point ports. The administrator can configure the user name and password used in authentication and capabilities of the supplicant port.

4.16.1 dot1x pae

This command sets the port's dot1x role. The port can serve as either a supplicant or an authenticator.

Format `dot1x pae {supplicant | authenticator}`
Mode Interface Config

4.16.2 dot1x supplicant port-control

This command sets the ports authorization state (Authorized or Unauthorized) either manually or by setting the port to auto-authorize upon startup. By default all the ports are authenticators. If the port's attribute needs to be moved from <authenticator to supplicant> or <supplicant to authenticator>, use this command.

Format `dot1x supplicant port-control {auto | force-authorized | force_unauthorized}`
Mode Interface Config

Parameter	Description
auto	The port is in the Unauthorized state until it presents its user name and password credentials to an authenticator. If the authenticator authorizes the port, then it is placed in the Authorized state.
force-authorized	Sets the authorization state of the port to Authorized, bypassing the authentication process.
force-unauthorized	Sets the authorization state of the port to Unauthorized, bypassing the authentication process.

4.16.2.1 no dot1x supplicant port-control

This command sets the port-control mode to the default, auto.

Default	auto
Format	no dot1x supplicant port-control
Mode	Interface Config

4.16.3 dot1x supplicant max-start

This command configures the number of attempts that the supplicant makes to find the authenticator before the supplicant assumes that there is no authenticator.

Default	3
Format	dot1x supplicant max-start <1-10>
Mode	Interface Config

4.16.3.1 no dot1x supplicant max-start

This command sets the max-start value to the default.

Format	no dot1x supplicant max-start
Mode	Interface Config

4.16.4 dot1x supplicant timeout start-period

This command configures the start period timer interval to wait for the EAP identity request from the authenticator.

Default	30 seconds
Format	dot1x supplicant timeout start-period <1-65535 seconds>
Mode	Interface Config

4.16.4.1 no dot1x supplicant timeout start-period

This command sets the start-period value to the default.

Format	no dot1x supplicant timeout start-period
Mode	Interface Config

4.16.5 dot1x supplicant timeout held-period

This command configures the held period timer interval to wait for the next authentication on previous authentication fail.

Default 60 seconds
Format dot1x supplicant timeout held-period <1-65535 seconds>
Mode Interface Config

4.16.5.1 no dot1x supplicant timeout held-period

This command sets the held-period value to the default value.

Format no dot1x supplicant timeout held-period
Mode Interface Config

4.16.6 dot1x supplicant timeout auth-period

This command configures the authentication period timer interval to wait for the next EAP request challenge from the authenticator.

Default 30 seconds
Format dot1x supplicant timeout auth-period <1-65535 seconds>
Mode Interface Config

4.16.6.1 no dot1x supplicant timeout auth-period

This command sets the auth-period value to the default value.

Format no dot1x supplicant timeout auth-period
Mode Interface Config

4.16.7 dot1x supplicant user

Use this command to map the given user to the port.

Format dot1x supplicant user
Mode Interface Config

4.16.8 show dot1x statistics

This command displays the dot1x port statistics in detail.

Format show dot1x statistics slot/port
Mode

- Privileged EXEC
- User EXEC

Term	Definition
EAPOL Frames Received	Displays the number of valid EAPOL frames received on the port.
EAPOL Frames Transmitted	Displays the number of EAPOL frames transmitted via the port.
EAPOL Start Frames Transmitted	Displays the number of EAPOL Start frames transmitted via the port.
EAPOL Logoff Frames Received	Displays the number of EAPOL Log off frames that have been received on the port.
EAP Resp/ID Frames Received	Displays the number of EAP Respond ID frames that have been received on the port.
EAP Response Frames Received	Displays the number of valid EAP Respond frames received on the port.
EAP Req/ID Frames Transmitted	Displays the number of EAP Requested ID frames transmitted via the port.
EAP Req Frames Transmitted	Displays the number of EAP Request frames transmitted via the port.
Invalid EAPOL Frames Received	Displays the number of unrecognized EAPOL frames received on this port.
EAP Length Error Frames Received	Displays the number of EAPOL frames with an invalid Packet Body Length received on this port.
Last EAPOL Frames Version	Displays the protocol version number attached to the most recently received EAPOL frame.
Last EAPOL Frames Source	Displays the source MAC Address attached to the most recently received EAPOL frame.

Example: The following shows example CLI display output for the command.

```
(switch) #show dot1x statistics 0/1
Port..... 0/1
EAPOL Frames Received..... 0
EAPOL Frames Transmitted..... 0
EAPOL Start Frames Transmitted..... 3
EAPOL Logoff Frames Received..... 0
EAP Resp/Id frames transmitted..... 0
EAP Response frames transmitted..... 0
EAP Req/Id frames transmitted..... 0
EAP Req frames transmitted..... 0
Invalid EAPOL frames received..... 0
EAP length error frames received..... 0
Last EAPOL Frame Version..... 0
Last EAPOL Frame Source..... 00:00:00:00:02:01
```

4.17 Storm-Control Commands

This section describes commands you use to configure storm-control and view storm-control configuration information. A traffic storm is a condition that occurs when incoming packets flood the LAN, which creates performance degradation in the network. The Storm-Control feature protects against this condition.

FASTPATH provides broadcast, multicast, and unicast storm recovery for individual interfaces. Unicast Storm-Control protects against traffic whose MAC addresses are not known by the system. For broadcast, multicast, and unicast storm-control, if the rate of traffic ingressing on an interface increases beyond the configured threshold for that type, the traffic is dropped.

To configure storm-control, you will enable the feature for all interfaces or for individual interfaces, and you will set the threshold (storm-control level) beyond which the broadcast, multicast, or unicast traffic will be dropped. The Storm-Control feature allows you to limit the rate of specific types of packets through the switch on a per-port, per-type, basis.

Configuring a storm-control level also enables that form of storm-control. Disabling a storm-control level (using the “no” version of the command) sets the storm-control level back to the default value and disables that form of storm-control. Using the “no” version of the “storm-control” command (not stating a “level”) disables that form of storm-control but maintains the configured “level” (to be active the next time that form of storm-control is enabled.)

**Note...**

The actual rate of ingress traffic required to activate storm-control is based on the size of incoming packets and the hard-coded average packet size of 512 bytes - used to calculate a packet-per-second (pps) rate - as the forwarding-plane requires pps versus an absolute rate kbps. For example, if the configured limit is 10%, this is converted to ~25000 pps, and this pps limit is set in forwarding plane (hardware). You get the approximate desired output when 512bytes packets are used.

4.17.1 storm-control broadcast

Use this command to enable broadcast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode). If the mode is enabled, broadcast storm recovery is active and, if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of broadcast traffic will be limited to the configured threshold.

Default	disabled
Format	storm-control broadcast
Mode	• Global Config • Interface Config

4.17.1.1 no storm-control broadcast

Use this command to disable broadcast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode).

Format	no storm-control broadcast
Mode	• Global Config • Interface Config

4.17.2 storm-control broadcast action

This command configures the broadcast storm recovery action to either `shutdown` or `trap` for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode). If configured to `shutdown`, the interface that receives the broadcast packets at a rate above the threshold is diagnostically disabled. If set to `trap`, the interface sends trap messages approximately every 30 seconds until broadcast storm control recovers.

Default	None
Format	storm-control broadcast action {shutdown trap}
Mode	• Global Config • Interface Config

4.17.2.1 no storm-control broadcast action

This command configures the broadcast storm recovery action option to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode).

Format no storm-control broadcast action

Mode

- Global Config
- Interface Config

4.17.3 storm-control broadcast level

Use this command to configure the broadcast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) as a percentage of link speed and enable broadcast storm recovery. If the mode is enabled, broadcast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic is dropped. Therefore, the rate of broadcast traffic is limited to the configured threshold.

Default 5

Format storm-control broadcast level 0-100

Mode

- Global Config
- Interface Config

4.17.3.1 no storm-control broadcast level

This command sets the broadcast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables broadcast storm recovery.

Format no storm-control broadcast level

Mode

- Global Config
- Interface Config

4.17.4 storm-control broadcast rate

Use this command to configure the broadcast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) in packets per second. If the mode is enabled, broadcast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic is dropped. Therefore, the rate of broadcast traffic is limited to the configured threshold.

Default 0

Format storm-control broadcast rate 0-33554431

Mode

- Global Config
- Interface Config

4.17.4.1 no storm-control broadcast rate

This command sets the broadcast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables broadcast storm recovery.

Format no storm-control broadcast rate

Mode

- Global Config
- Interface Config

4.17.5 storm-control multicast

This command enables multicast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode). If the mode is enabled, multicast storm recovery is active, and if the rate of L2 multicast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of multicast traffic will be limited to the configured threshold.

Default	disabled
Format	storm-control multicast
Mode	• Global Config • Interface Config

4.17.5.1 no storm-control multicast

This command disables multicast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode).

Format	no storm-control multicast
Mode	• Global Config • Interface Config

4.17.6 storm-control multicast action

This command configures the multicast storm recovery action to either `shutdown` or `trap` for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode). If configured to `shutdown`, the interface that receives multicast packets at a rate above the threshold is diagnostically disabled. The option `trap` sends trap messages approximately every 30 seconds until multicast storm control recovers.

Default	None
Format	storm-control multicast action {shutdown trap}
Mode	• Global Config • Interface Config

4.17.6.1 no storm-control multicast action

This command returns the multicast storm recovery action option to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode).

Format	no storm-control multicast action
Mode	• Global Config • Interface Config

4.17.7 storm-control multicast level

This command configures the multicast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) as a percentage of link speed and enables multicast storm recovery mode. If the mode is enabled, multicast storm recovery is active, and if the rate of L2 multicast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of multicast traffic will be limited to the configured threshold.

Default	5
Format	storm-control multicast level 0-100
Mode	• Global Config • Interface Config

4.17.7.1 no storm-control multicast level

This command sets the multicast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables multicast storm recovery.

Format	no storm-control multicast level 0-100
Mode	• Global Config • Interface Config

4.17.8 storm-control multicast rate

Use this command to configure the multicast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) in packets per second. If the mode is enabled, multicast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic is dropped. Therefore, the rate of multicast traffic is limited to the configured threshold.

Default	0
Format	storm-control multicast rate 0-33554431
Mode	• Global Config • Interface Config

4.17.8.1 no storm-control multicast rate

This command sets the multicast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables multicast storm recovery.

Format	no storm-control multicast rate
Mode	• Global Config • Interface Config

4.17.9 storm-control unicast

This command enables unicast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode). If the mode is enabled, unicast storm recovery is active, and if the rate of unknown L2 unicast (destination lookup failure) traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of unknown unicast traffic will be limited to the configured threshold.

Default	disabled
Format	storm-control unicast
Mode	• Global Config • Interface Config

4.17.9.1 no storm-control unicast

This command disables unicast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode).

Format no storm-control unicast

Mode

- Global Config
- Interface Config

4.17.10 storm-control unicast action

This command configures the unicast storm recovery action to either `shutdown` or `trap` for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode). If configured to `shutdown`, the interface that receives unicast packets at a rate above the threshold is diagnostically disabled. The option `trap` sends trap messages approximately every 30 seconds until unicast storm control recovers.

Default None

Format storm-control unicast action {shutdown | trap}

Mode

- Global Config
- Interface Config

4.17.10.1 no storm-control unicast action

This command returns the unicast storm recovery action option to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode).

Format no storm-control unicast action

Mode

- Global Config
- Interface Config

4.17.11 storm-control unicast level

This command configures the unicast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) as a percentage of link speed, and enables unicast storm recovery. If the mode is enabled, unicast storm recovery is active, and if the rate of unknown L2 unicast (destination lookup failure) traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of unknown unicast traffic will be limited to the configured threshold. This command also enables unicast storm recovery mode for an interface.

Default 5

Format storm-control unicast level 0-100

Mode

- Global Config
- Interface Config

4.17.11.1 no storm-control unicast level

This command sets the unicast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables unicast storm recovery.

Format `no storm-control unicast level`

Mode • Global Config
 • Interface Config

4.17.12 `storm-control unicast rate`

Use this command to configure the unicast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) in packets per second. If the mode is enabled, unicast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic is dropped. Therefore, the rate of unicast traffic is limited to the configured threshold.

Default 0

Format `storm-control unicast rate 0-33554431`

Mode • Global Config
 • Interface Config

4.17.12.1 `no storm-control unicast rate`

This command sets the unicast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables unicast storm recovery.

Format `no storm-control unicast rate`

Mode • Global Config
 • Interface Config

4.17.13 `show storm-control`

This command displays switch configuration information. If you do not use any of the optional parameters, this command displays global storm control configuration parameters:

- **Broadcast Storm Recovery Mode** may be enabled or disabled. The factory default is disabled.
- **802.3x Flow Control Mode** may be enabled or disabled. The factory default is disabled.

Use the `all` keyword to display the per-port configuration parameters for all interfaces, or specify the `slot/port` to display information about a specific interface.

Format `show storm-control [all | slot/port]`

Mode Privileged EXEC

Parameter	Definition
Bcast Mode	Shows whether the broadcast storm control mode is enabled or disabled. The factory default is disabled.
Bcast Level	The broadcast storm control level.
Mcast Mode	Shows whether the multicast storm control mode is enabled or disabled.
Mcast Level	The multicast storm control level.
Ucast Mode	Shows whether the Unknown Unicast or DLF (Destination Lookup Failure) storm control mode is enabled or disabled.
Ucast Level	The Unknown Unicast or DLF (Destination Lookup Failure) storm control level.

Example: The following shows example CLI display output for the command.

(Routing) #show storm-control

```
Broadcast Storm Control Mode..... Disable
Broadcast Storm Control Level..... 5 percent
Broadcast Storm Control Action..... None
Multicast Storm Control Mode..... Disable
Multicast Storm Control Level..... 5 percent
Multicast Storm Control Action..... None
Unicast Storm Control Mode..... Disable
Unicast Storm Control Level..... 5 percent
Unicast Storm Control Action..... None
```

Example: The following shows example CLI display output for the command.

(Routing) #show storm-control 1/0/1

Intf	Bcast Mode	Bcast Level	Bcast Action	Mcast Mode	Mcast Level	Mcast Action	Ucast Mode	Ucast Level	Ucast Action
1/0/1	Disable	5%	None	Disable	5%	None	Disable	5%	None

Example: The following shows an example of part of the CLI display output for the command.

(Routing) #show storm-control all

Intf	Bcast Mode	Bcast Level	Bcast Action	Mcast Mode	Mcast Level	Mcast Action	Ucast Mode	Ucast Level	Ucast Action
1/0/1	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/2	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/3	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/4	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/5	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/6	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/7	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/8	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/9	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/10	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/11	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/12	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/13	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/14	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/15	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/16	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/17	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/18	Enable	50	Trap	Disable	5%	None	Disable	5%	None
1/0/19	Enable	50	Trap	Disable	5%	None	Disable	5%	None

4.18 Link Dependency Commands

The following commands configure link dependency. Link dependency allows the link status of specified ports to be dependent on the link status of other ports. Consequently, if a port that is depended on by other ports loses link, the dependent ports are administratively disabled or administratively enabled so that the dependent ports links are brought down or up respectively.

4.18.0.1 no link state track

This command clears link-dependency options for the selected group identifier.

Format no link state track *group-id*

Mode Global Config

4.18.1 link state group

Use this command to indicate if the downstream interfaces of the group should mirror or invert the status of the upstream interfaces. The default configuration for a group is down (that is, the downstream interfaces will mirror the upstream link status by going down when all upstream interfaces are down). The action up option causes the downstream interfaces to be up when no upstream interfaces are down.

Default Down
Format link state group *group-id* action {up | down}
Mode Global Config

4.18.1.1 no link state group

Use this command to restore the link state to down for the group.

Format no link state group *group-id* action
Mode Global Config

4.18.2 link state group downstream

Use this command to add interfaces to the downstream interface list. Adding an interface to a downstream list brings the interface down until an upstream interface is added to the group. The link status then follows the interface specified in the upstream command. To avoid bringing down interfaces, enter the upstream command prior to entering the downstream command.

Format link state group *group-id* downstream
Mode Interface Config

4.18.2.1 no link state group downstream

Use this command to remove the selected interface from the downstream list.

Format no link state group *group-id* downstream
Mode Interface Config

4.18.3 link state group upstream

Use this command to add interfaces to the upstream interface list. Note that an interface that is defined as an upstream interface cannot also be defined as a downstream interface in the same link state group or as a downstream interface in a different link state group, if either configuration creates a circular dependency between groups.

Format link state group *group-id* upstream
Mode Interface Config

4.18.3.1 no link state group upstream

Use this command to remove the selected interfaces from upstream list.

Format no link state group *group-id* upstream
Mode Interface Config

4.18.4 show link state group

Use this command to display information for all configured link-dependency groups or a specified link-dependency group.

Format show link state group *group-id*
Mode Privileged EXEC

Example: This example displays information for all configured link-dependency groups.
(Switching)#show link-state group

GroupId	Downstream Interfaces	Upstream Interfaces	Link Action	Group State
1	0/3-0/7,0/12-0/17	0/12-0/32,3/5	Link Up	Up
4	0/18,0/27	0/22-0/33,3/1	Link Up	Down

Example: This example displays information for a specified link-dependency groups
(Switching)#show link state group 1

GroupId	Downstream Interfaces	Upstream Interfaces	Link Action	Group State
1	0/3-0/7,0/12-0/17	0/12-0/32,3/5	Link Up	Up

4.18.5 show link state group detail

Use this command to display detailed information about the state of upstream and downstream interfaces for a selected link-dependency group. Group Transitions is a count of the number of times the downstream interface has gone into its "action" state as a result of the upstream interfaces link state.

Format show link state group *group-id* detail
Mode Privileged EXEC

```
(Switching) # show link state group 1 detail
GroupId:      1
Link Action:  Up
Group State:  Up
```

```
Downstream Interface State:
Link Up:      0/3
Link Down:    0/4-0/7,0/12-0/17
```

```
Upstream Interface State:
Link Up:      -
Link Down:    0/12-0/32,3/5
```

```
Group Transitions: 0
Last Transition Time: 00:52:35 (UTC+0:00) Jan 1 1970
```


4.19 Link Local Protocol Filtering Commands

Link Local Protocol Filtering (LLPF) allows the switch to filter out multiple proprietary protocol PDUs, such as Port Aggregation Protocol (PAgP), if the problems occur with proprietary protocols running on standards-based switches. If certain protocol PDUs cause unexpected results, LLPF can be enabled to prevent those protocol PDUs from being processed by the switch.



Note...

LLPF is supported on the BCM56624, BCM56634, BCM56636, BCM56820, and BCM56334 platforms.

4.19.1 llpf

Use this command to block LLPF protocol(s) on a port.

Default Enabled for the blockudld parameter; disabled for all others.
Format llpf {blockisdp | blockvtp | blockdtp | blockudld | blockpagp | blocksstp | blockall}
Mode Interface Config

4.19.1.1 no llpf

Use this command to unblock LLPF protocol(s) on a port.

Format no llpf {blockisdp | blockvtp | blockdtp | blockudld | blockpagp | blocksstp | blockall }
Mode Interface Config

4.19.2 show llpf interface

Use this command to display the status of LLPF rules configured on a particular port or on all ports.

Format show llpf interface [all | slot/port]
Mode Privileged EXEC

Term	Definition
Block ISDP	Shows whether the port blocks ISDP PDUs.
Block VTP	Shows whether the port blocks VTP PDUs.
Block DTP	Shows whether the port blocks DTP PDUs.
Block UDLD	Shows whether the port blocks UDLD PDUs.
Block PAgP	Shows whether the port blocks PAgP PDUs.
Block SSTP	Shows whether the port blocks SSTP PDUs.
Block All	Shows whether the port blocks all proprietary PDUs available for the LLDP feature.

4.20 MVR Commands

This section lists the Multicast VLAN Registration (MVR) commands.

4.20.1 mvr

Use this command to enable MVR. This is disabled by default.

Default	Disabled
Format	mvr
Mode	Interface Config; Global Config

4.20.1.1 no mvr

Use this command to disable MVR.

Format	no mvr
Mode	Interface Config; Global Config

4.20.2 mvr group

Use this command to add an MVR membership group.

Format	mvr group
Mode	Global Config

4.20.2.1 no mvr group

Use this command to disable an MVR membership group.

Format	no mvr group
Mode	Global Config

4.20.3 mvr immediate

Use this command to enable MVR Immediate Leave mode. If the interface is configured as source port, MVR Immediate Leave mode cannot be enabled. MVR Immediate Leave mode disabled by default.

Default	Disabled
Format	mvr immediate
Mode	Interface Config

4.20.3.1 no mvr immediate

Use this command to disable MVR Immediate Leave mode.

Format `mvr immediate`

Mode Interface Config

4.20.4 mvr mode

Use this command to change the MVR mode type. Compatible is the default mode type.

Format `mvr mode [compatible | dynamic]`

Mode IGlobal Config

4.20.4.1 no mvr mode

Use this command to set the MVR mode type to the default value of compatible.

Format `no mvr mode`

Mode Global Config

4.20.5 mvr querytime

Use this command to set the MVR query response time in units of tenths of a second. The query time is the maximum time to wait for an IGMP membership report on a receiver port before removing the port from the multicast group. The query time only applies to receiver ports and is specified in tenths of a second. The default is 5.

Format `mvr querytime 1-100`

Mode Global Config

4.20.5.1 no mvr querytime

Use this command to set the MVR query response time to the default value.

Format `no mvr querytime`

Mode Global Config

4.20.6 mvr type

Use this command to set the MVR port type. The default is none.

Format `mvr type [receiver | source]`

Mode Interface Config

4.20.6.1 no mvr type

Use this command to reset the MVR port type to None.

Format `no mvr type`

Mode Interface Config

4.20.7 mvr vlan

Use this command to set the MVR multicast VLAN.

Default 1
Format mvr vlan *1-4093*
Mode Global Config

4.20.7.1 no mvr vlan

Use this command to set the MVR multicast VLAN to the default value.

Format no mvr vlan
Mode Global Config

4.20.8 mvr vlan group

Use this command to make a port participate in a specific MVR group. The default value is None.

Format mvr vlan *mvLan* group *A.B.C.D.*
Mode Interface Config

4.20.8.1 no mvr vlan group

Use this command to remove port participation in the specific MVR group.

Format no mvr vlan *mvLan* group *A.B.C.D.*
Mode Interface Config

4.20.9 show mvr

Use this command to display global MVR settings.

Format show mvr
Mode Privileged EXEC

Example:

```
(Switching) # show mvr
MVR Disabled.
```

```
(Switching) # show mvr
MVR Running..... TRUE
MVR multicast VLAN..... 1
MVR Max Multicast Groups..... 256
MVR Current multicast groups..... 0
MVR Global query response time.... 5 (tenths of sec)
MVR Mode..... compatible
```

4.20.10 show mvr members

Use this command to display the allocated MVR membership groups.

Format show mvr members [*A.B.C.D.*]

Mode Privileged EXEC

Example:

```
(Switching) # show mvr members
MVR Disabled
```

```
(Switching) # show mvr members
```

MVR Group IP	Status	Members
224.1.1.1	INACTIVE	0/1, 0/2, 0/3

```
(Switching) # show mvr members 224.1.1.1
```

MVR Group IP	Status	Members
224.1.1.1	INACTIVE	0/1, 0/2, 0/3

4.20.11 show mvr interface

Use this command to display the configuration of MVR-enabled interfaces.

Format show mvr interface [*interface-id* [members [vlan *vlan-id*]]]

Mode Privileged EXEC

Example:

```
(Switching) # show mvr interface
```

Port	Type	Status	Immediate Leave
0/9	RECEIVER	ACTIVE/inVLAN	DISABLED

```
(Switching) # show mvr interface 0/4
```

```
Type: NONE Status: INACTIVE/InVLAN Immediate Leave: DISABLED
```

```
show mvr interface 0/23 members
235.0.0.1 STATIC ACTIVE
```

```
(Switching) # show mvr interface 0/23 members vlan 12
235.0.0.1 STATIC ACTIVE
235.1.1.1 STATIC ACTIVE
```

4.20.12 show mvr traffic

Use this command to display global MVR statistics.

Format show mvr traffic

Mode Privileged EXEC

Example:

```
(Switching) # show mvr traffic
```

```
IGMP Query Received..... 0
IGMP Report V1 Received..... 0
IGMP Report V2 Received..... 0
IGMP Leave Received..... 0
IGMP Query Transmitted..... 0
IGMP Report V1 Transmitted..... 0
IGMP Report V2 Transmitted..... 0
IGMP Leave Transmitted..... 0
IGMP Packet Receive Failures..... 0
IGMP Packet Transmit Failures..... 0
```

4.20.13 debug mvr trace

Use this command to enable MVR debug tracing. The default value is disabled.

Format debug mvr trace

Mode Privileged EXEC

4.20.13.1 no debug mvr trace

Use this command to disable MVR debug tracing.

Format no debug mvr trace

Mode Privileged EXEC

4.20.14 debug mvr packet

Use this command to enable MVR receive/transmit packets debug tracing. If it is executed without specifying the arguments, both receive and transmit packets debugging is enabled. The default is enabled.

Format debug mvr packet [receive | transmit]

Mode Privileged EXEC

4.20.14.1 no debug mvr packet

Use this command to disable MVR receive/transmit packet debug tracing.

Format no debug mvr packet [receive | transmit]

Mode Privileged EXEC

4.21 Port-Channel/LAG (802.3ad) Commands

This section describes the commands you use to configure port-channels, which is defined in the 802.3ad specification, and that are also known as link aggregation groups (LAGs). Link aggregation allows you to combine multiple full-duplex Ethernet links into a single logical link. Network devices treat the aggregation as if it were a single link, which increases fault tolerance and provides load sharing. The LAG feature initially load shares traffic based upon the source and destination MAC address. Assign the port-channel (LAG) VLAN membership after you create a port-channel. If you do not assign VLAN membership, the port-channel might become a member of the management VLAN which can result in learning and switching issues.

A port-channel (LAG) interface can be either static or dynamic, but not both. All members of a port channel must participate in the same protocols.) A static port-channel interface does not require a partner system to be able to aggregate its member ports.



Note...

If you configure the maximum number of dynamic port-channels (LAGs) that your platform supports, additional port-channels that you configure are automatically static.

4.21.1 port-channel

This command configures a new port-channel (LAG) and generates a logical `slot/port` number for the port-channel. The `name` field is a character string which allows the dash "-" character as well as alphanumeric characters. Use the `show port channel` command to display the `slot/port` number for the logical interface. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.



Note...

Before you include a port in a port-channel, set the port physical mode. For more information, see "speed" on page 307".

Format `port-channel name`
Mode Global Config

4.21.2 addport

This command adds one port to the port-channel (LAG). The first interface is a logical `slot/port` number of a configured port-channel. You can add a range of ports by specifying the port range when you enter Interface Config mode (for example: `interface 0/1-0/4`). Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.



Note...

Before adding a port to a port-channel, set the physical mode of the port. For more information, see "speed" on page 307".

Format `addport logical slot/port`
Mode Interface Config

4.21.3 deleteport (Interface Config)

This command deletes a port or a range of ports from the port-channel (LAG). The interface is a logical *slot/port* number of a configured port-channel (or range of port-channels). Instead of *slot/port*, *lag lag-intf-num* can be used as an alternate way to specify the LAG interface. *lag lag-intf-num* can also be used to specify the LAG interface where *lag-intf-num* is the LAG port number.

Format deleteport *logical slot/port*

Mode Interface Config

4.21.4 deleteport (Global Config)

This command deletes all configured ports from the port-channel (LAG). The interface is a logical *slot/port* number of a configured port-channel. Instead of *slot/port*, *lag lag-intf-num* can be used as an alternate way to specify the LAG interface. *lag lag-intf-num* can also be used to specify the LAG interface where *lag-intf-num* is the LAG port number.

Format deleteport {*logical slot/port* | all}

Mode Global Config

4.21.5 lacp admin key

Use this command to configure the administrative value of the key for the port-channel. The value range of *key* is 0 to 65535.

This command can be used to configure a single interface or a range of interfaces.

Default 0x8000

Format lacp admin key *key*

Mode Interface Config

**Note...**

This command is applicable only to port-channel interfaces.

4.21.5.1 no lacp admin key

Use this command to configure the default administrative value of the key for the port-channel.

Format no lacp admin key

Mode Interface Config

4.21.6 lacp collector max-delay

Use this command to configure the port-channel collector max delay. This command can be used to configure a single interface or a range of interfaces. The valid range of *delay* is 0-65535.

Default 0x8000

Format lacp collector max delay *delay*

Mode Interface Config

**Note...**

This command is applicable only to port-channel interfaces.

4.21.6.1 no lacp collector max delay

Use this command to configure the default port-channel collector max delay.

Format no lacp collector max delay

Mode Interface Config

4.21.7 lacp actor admin key

Use this command to configure the administrative value of the LACP actor admin key on an interface or range of interfaces. The valid range for *key* is 0-65535.

Default Internal Interface Number of this Physical Port

Format lacp actor admin key *key*

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.7.1 no lacp actor admin key

Use this command to configure the default administrative value of the key.

Format no lacp actor admin key

Mode Interface Config

4.21.8 lacp actor admin state individual

Use this command to set LACP actor admin state to individual.

Format lacp actor admin state individual

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.8.1 no lacp actor admin state individual

Use this command to set the LACP actor admin state to aggregation.

Format no lacp actor admin state individual

Mode Interface Config

4.21.9 lacp actor admin state longtimeout

Use this command to set LACP actor admin state to longtimeout.

Format lacp actor admin state longtimeout

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.9.1 no lacp actor admin state longtimeout

Use this command to set the LACP actor admin state to short timeout.

Format no lacp actor admin state longtimeout

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.10 lacp actor admin state passive

Use this command to set the LACP actor admin state to passive.

Format lacp actor admin state passive

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.10.1 no lacp actor admin state passive

Use this command to set the LACP actor admin state to active.

Format no lacp actor admin state passive

Mode Interface Config

4.21.11 lacp actor admin state

Use this command to configure the administrative value of actor state as transmitted by the Actor in LACPDUs. This command can be used to configure a single interfaces or a range of interfaces.

Default 0x07

Format lacp actor admin state {individual|longtimeout|passive}

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.11.1 no lacp actor admin state

Use this command to configure the default administrative values of actor state as transmitted by the Actor in LACPDU's.

**Note...**

Both the `no portlacptimeout` and the `no lacp actor admin state` commands set the values back to default, regardless of the command used to configure the ports. Consequently, both commands will display in `show running-config`.

Format `no lacp actor admin state {individual|longtimeout|passive}`

Mode Interface Config

4.21.12 lacp actor port priority

Use this command to configure the priority value assigned to the Aggregation Port for an interface or range of interfaces. The valid range for *priority* is 0 to 65535.

Default 0x80

Format `lacp actor port priority 0-65535`

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.12.1 no lacp actor port priority

Use this command to configure the default priority value assigned to the Aggregation Port.

Format `no lacp actor port priority`

Mode Interface Config

4.21.13 lacp partner admin key

Use this command to configure the administrative value of the Key for the protocol partner. This command can be used to configure a single interface or a range of interfaces. The valid range for *key* is 0 to 65535.

Default 0x0

Format `lacp partner admin key key`

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.13.1 no lacp partner admin key

Use this command to set the administrative value of the Key for the protocol partner to the default.

Format no lacp partner admin key
Mode Interface Config

4.21.14 lacp partner admin state individual

Use this command to set LACP partner admin state to individual.

Format lacp partner admin state individual
Mode Interface Config



Note...

This command is applicable only to physical interfaces.

4.21.14.1 no lacp partner admin state individual

Use this command to set the LACP partner admin state to aggregation.

Format no lacp partner admin state individual
Mode Interface Config

4.21.15 lacp partner admin state longtimeout

Use this command to set LACP partner admin state to longtimeout.

Format lacp partner admin state longtimeout
Mode Interface Config



Note...

This command is applicable only to physical interfaces.

4.21.15.1 no lacp partner admin state longtimeout

Use this command to set the LACP partner admin state to short timeout.

Format no lacp partner admin state longtimeout
Mode Interface Config



Note...

This command is applicable only to physical interfaces.

4.21.16 lacp partner admin state passive

Use this command to set the LACP partner admin state to passive.

Format lacp partner admin state passive
Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.16.1 `no lacp partner admin state passive`

Use this command to set the LACP partner admin state to active.

Format `no lacp partner admin state passive`

Mode Interface Config

4.21.17 `lacp partner port id`

Use this command to configure the LACP partner port id. This command can be used to configure a single interface or a range of interfaces. The valid range for *port-id* is 0 to 65535.

Default 0x80

Format `lacp partner port-id port-id`

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.17.1 `no lacp partner port id`

Use this command to set the LACP partner port id to the default.

Format `no lacp partner port-id`

Mode Interface Config

4.21.18 `lacp partner port priority`

Use this command to configure the LACP partner port priority. This command can be used to configure a single interface or a range of interfaces. The valid range for *priority* is 0 to 65535.

Default 0x0

Format `lacp partner port priority priority`

Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.18.1 `no lacp partner port priority`

Use this command to configure the default LACP partner port priority.

Format `no lacp partner port priority`

Mode Interface Config

4.21.19 lacp partner system-id

Use this command to configure the 6-octet MAC Address value representing the administrative value of the Aggregation Port's protocol Partner's System ID. This command can be used to configure a single interface or a range of interfaces. The valid range of *system-id* is 00:00:00:00:00:00 - FF:FF:FF:FF:FF:FF.

Default 00:00:00:00:00:00
Format lacp partner system-id *system-id*
Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.19.1 no lacp partner system-id

Use this command to configure the default value representing the administrative value of the Aggregation Port's protocol Partner's System ID.

Format no lacp partner system-id
Mode Interface Config

4.21.20 lacp partner system priority

Use this command to configure the administrative value of the priority associated with the Partner's System ID. This command can be used to configure a single interface or a range of interfaces. The valid range for *priority* is 0 to 65535.

Default 0x0
Format lacp partner system priority 0-65535
Mode Interface Config

**Note...**

This command is applicable only to physical interfaces.

4.21.20.1 no lacp partner system priority

Use this command to configure the default administrative value of priority associated with the Partner's System ID.

Format no lacp partner system priority
Mode Interface Config

4.21.21 interface lag

Use this command to enter Interface configuration mode for the specified LAG.

Format interface lag lag-interface-number
Mode Global Config

4.21.22 port-channel static

This command enables the static mode on a port-channel (LAG) interface or range of interfaces. By default the static mode for a new port-channel is enabled, which means the port-channel is static. If the maximum number of allowable dynamic port-channels are already present in the system, the static mode for a new port-channel is enabled, which means the port-channel is static. You can only use this command on port-channel interfaces.

Default enabled
Format port-channel static
Mode Interface Config

4.21.22.1 no port-channel static

This command sets the static mode on a particular port-channel (LAG) interface to the default value. This command will be executed only for interfaces of type port-channel (LAG).

Format no port-channel static
Mode Interface Config

4.21.23 port lacpmode

This command enables Link Aggregation Control Protocol (LACP) on a port or range of ports.

Default enabled
Format port lacpmode
Mode Interface Config

4.21.23.1 no port lacpmode

This command disables Link Aggregation Control Protocol (LACP) on a port.

Format no port lacpmode
Mode Interface Config

4.21.24 port lacpmode enable all

This command enables Link Aggregation Control Protocol (LACP) on all ports.

Format port lacpmode enable all
Mode Global Config

4.21.24.1 no port lacpmode enable all

This command disables Link Aggregation Control Protocol (LACP) on all ports.

Format no port lacpmode enable all
Mode Global Config

4.21.25 port lacptimeout (Interface Config)

This command sets the timeout on a physical interface or range of interfaces of a particular device type (actor or partner) to either long or short timeout.

Default	long
Format	port lacptimeout {actor partner} {long short}
Mode	Interface Config

4.21.25.1 no port lacptimeout

This command sets the timeout back to its default value on a physical interface of a particular device type (actor or partner).

Format	no port lacptimeout {actor partner}
Mode	Interface Config

**Note...**

Both the `no portlacptimeout` and the `no lacp actor admin state` commands set the values back to default, regardless of the command used to configure the ports. Consequently, both commands will display in `show running-config`.

4.21.26 port lacptimeout (Global Config)

This command sets the timeout for all interfaces of a particular device type (actor or partner) to either long or short timeout.

Default	long
Format	port lacptimeout {actor partner} {long short}
Mode	Global Config

4.21.26.1 no port lacptimeout

This command sets the timeout for all physical interfaces of a particular device type (actor or partner) back to their default values.

Format	no port lacptimeout {actor partner}
Mode	Global Config

**Note...**

Both the `no portlacptimeout` and the `no lacp actor admin state` commands set the values back to default, regardless of the command used to configure the ports. Consequently, both commands will display in `show running-config`.

4.21.27 port-channel adminmode

This command enables all configured port-channels with the same administrative mode setting.

Format port-channel adminmode all
Mode Global Config

4.21.27.1 no port-channel adminmode

This command disables all configured port-channels with the same administrative mode setting.

Format no port-channel adminmode all
Mode Global Config

4.21.28 port-channel linktrap

This command enables link trap notifications for the port-channel (LAG). The interface is a logical *slot/port* for a configured port-channel. The option *all* sets every configured port-channel with the same administrative mode setting. Instead of *slot/port*, *lag lag-intf-num* can be used as an alternate way to specify the LAG interface. *lag lag-intf-num* can also be used to specify the LAG interface where *lag-intf-num* is the LAG port number.

Default enabled
Format port-channel linktrap {*logical slot/port* | *all*}
Mode Global Config

4.21.28.1 no port-channel linktrap

This command disables link trap notifications for the port-channel (LAG). The interface is a logical slot and port for a configured port-channel. The option *all* sets every configured port-channel with the same administrative mode setting.

Format no port-channel linktrap {*logical slot/port* | *all*}
Mode Global Config

4.21.29 port-channel load-balance

This command selects the load-balancing option used on a port-channel (LAG). Traffic is balanced on a port-channel (LAG) by selecting one of the links in the channel over which to transmit specific packets. The link is selected by creating a binary pattern from selected fields in a packet, and associating that pattern with a particular link.

Load-balancing is not supported on every device. The range of options for load-balancing may vary per device.

This command can be configured for a single interface, a range of interfaces, or all interfaces. Instead of *slot/port*, *lag lag-intf-num* can be used as an alternate way to specify the LAG interface. *lag lag-intf-num* can also be used to specify the LAG interface where *lag-intf-num* is the LAG port number.

Default 3
Format port-channel load-balance {1 | 2 | 3 | 4 | 5 | 6 | 7} {*slot/port* | *all*}
Mode Interface Config
 Global Config

Term	Definition
1	Source MAC, VLAN, EtherType, and incoming port associated with the packet
2	Destination MAC, VLAN, EtherType, and incoming port associated with the packet
3	Source/Destination MAC, VLAN, EtherType, and incoming port associated with the packet
4	Source IP and Source TCP/UDP fields of the packet
5	Destination IP and Destination TCP/UDP Port fields of the packet
6	Source/Destination IP and source/destination TCP/UDP Port fields of the packet
7	Enhanced hashing mode
slot/port all	Global Config Mode only: The interface is a logical slot/port number of a configured port-channel. all applies the command to all currently configured port-channels.

4.21.29.1 no port-channel load-balance

This command reverts to the default load balancing configuration.

Format no port-channel load-balance {*slot/port* | all}

Mode Interface Config
Global Config

Term	Definition
slot/port all	Global Config Mode only: The interface is a logical <i>slot/port</i> number of a configured port-channel. All applies the command to all currently configured port-channels.

4.21.30 port-channel local-preference

This command enables the local-preference mode on a port-channel (LAG) interface or range of interfaces. By default, the local-preference mode for a port-channel is disabled. This command can be used only on port-channel interfaces.

Default disable
Format port-channel local-preference
Mode Interface Config

4.21.30.1 no port-channel local-preference

This command disables the local-preference mode on a port-channel.

Format no port-channel local-preference
Mode Interface Config

4.21.31 port-channel min-links

This command configures the port-channel's minimum links for lag interfaces.

Default 1
Format port-channel min-links 1-8
Mode Interface Config

4.21.32 port-channel name

This command defines a name for the port-channel (LAG). The interface is a logical *slot/port* for a configured port-channel, and *name* is an alphanumeric string up to 15 characters. Instead of *slot/port*, *lag lag-intf-num* can be used as an alternate way to specify the LAG interface. *lag lag-intf-num* can also be used to specify the LAG interface where *lag-intf-num* is the LAG port number.

Format port-channel name {*logical slot/port*} *name*

Mode Global Config

4.21.33 port-channel system priority

Use this command to configure port-channel system priority. The valid range of *priority* is 0-65535.

Default 0x8000

Format port-channel system priority *priority*

Mode Global Config

4.21.33.1 no port-channel system priority

Use this command to configure the default port-channel system priority value.

Format no port-channel system priority

Mode Global Config

4.21.34 show hashdest

Use this command to predict how packets are forwarded over a LAG or to the next hop device when ECMP is the destination. Given the link aggregation method, ingress physical port and values of various packet fields, this command predicts an egress physical port within the LAG or ECMP for the packet.

Format show hashdest {*lag lag-id* | *ecmp prefix/prefix-length*} *in_port unit/slot/port* *src-mac macaddr* *dst-mac macaddr* [*vlan vlan-id*] *ethertype 0xXXXX* [*src-ip {ipv4-addr | ipv6-addr}* *dst-ip {ipv4-addr | ipv6-addr}* *protocol pid* *src-l4-port port-num* *dst-l4-port port-num*]

Mode Privileged EXEC

Parameter	Definition
lag	The LAG group for which to display the egress physical port.
ecmp	The IP address of the EMC_ group for which to display the egress physical port.
in_port	The incoming physical port for the system.
src-mac	The source MAC address.
dst-mac	The destination MAC address.
vlan	The VLAN ID for VLAN-tagged packets. Do not use this parameter or enter 0 for non-VLAN-tagged packets.
ethertype	The 16-bit EtherType value, in the form 0xXXXX. For layer 3 packets, hash prediction is only available for IPv4 (0x0800) and IPv6 (0x86DD).
src-ip	The source IP address, entered as x.x.x.x for IPv4 or x:x:x:x:x:x:x for IPv6 packets.
dst-ip	The destination IP address, entered as x.x.x.x for IPv4 or x:x:x:x:x:x:x for IPv6 packets.
protocol	The protocol ID.

Parameter	Definition
src-l4-port	The layer 4 source port.
dst-l4-port	The layer 4 destination port.

Example: Layer 2 VLAN tagged packet forwarded to a LAG

```
(Routing) #show hashdest lag 1 in_port 0/3 src-mac 00:00:20:21:AE:8A dst-mac 00:10:18:99:F7:4E vlan 10 ethertype 0x8870
```

```
LAG          Destination Port
-----
1            0/29
```

Example: Layer 2 non-VLAN tagged packet forwarded to a LAG

```
(Routing) # show hashdest lag 1 in_port 0/3 src-mac 00:00:20:21:AE:8A dst-mac 00:10:18:99:F7:4E ethertype 0x8870
```

```
LAG          Destination Port
-----
1            0/31
```

Example: Non-VLAN tagged IPv4 UDP packet forwarded to a LAG

```
(Routing) #show hashdest lag 1 in_port 0/3 src-mac 00:00:20:21:AE:8A dst-mac 00:10:18:99:F7:4E ethertype 0x0800 src-ip 7.0.0.2 dst-ip 3.0.0.2 protocol 17 src-l4-port 63 dst-l4-port 64
```

```
LAG          Destination Port
-----
1            0/32
```

Example: VLAN tagged IPv4 TCP packet forwarded to a LAG

```
(Routing) #show hashdest lag 1 in_port 0/3 src-mac 00:00:20:21:AE:8A dst-mac 00:10:18:99:F7:4E vlan 10 ethertype 0x0800 src-ip 7.0.0.2 dst-ip 3.0.0.2 protocol 6 src-l4-port 67 dst-l4-port 68
```

```
LAG          Destination Port
-----
1            0/31
```

Example: Non-VLAN tagged IPv4 UDP packet forwarded to an ECMP group

```
(Routing) #show hashdest ecmp 10.0.0.2/16 in_port 0/3 src-mac 00:00:20:21:AE:8A dst-mac 00:10:18:99:F7:4E vlan 0 ethertype 0x0800 src-ip 7.0.0.2 dst-ip 3.0.0.2 protocol 17 src-l4-port 63 dst-l4-port 64
```

```
Egress Port
-----
30.0.0.2 on interface 0/31
```

Example: VLAN tagged IPv4 TCP packet forwarded to an ECMP group

```
(Routing) #show hashdest ecmp 10.0.0.2/16 in_port 0/3 src-mac 00:00:20:21:AE:8A dst-mac 00:10:18:99:F7:4E vlan 10 ethertype 0x0800 src-ip 7.0.0.2 dst-ip 3.0.0.2 protocol 6 src-l4-port 67 dst-l4-port 68
```

```
Egress Port
-----
0/29
```

Example: Non-VLAN tagged IPv6 UDP packet forwarded to an ECMP group

```
(Routing) #show hashdest ecmp 4001::200/64 in_port 0/3 src-mac 00:00:20:21:AE:8A dst-mac 00:10:18:99:F7:4E ethertype 0x86dd src-ip 7001:0:0:0:0:0:2 dst-ip 3001:0:0:0:0:0:2 protocol 17 src-l4-port 63 dst-l4-port 64
```

```
Egress Port
-----
6001::200 on interface 0/31
```

Example: Non-VLAN tagged IPv6 TCP packet forwarded to an ECMP group

```
(Routing) #show hashdest ecmp 6001::200/64 in_port 0/3 src-mac 00:00:20:21:AE:8A dst-mac
00:10:18:99:F7:4E ethertype 0x86dd src-ip 7001:0:0:0:0:0:2 dst-ip 3001:0:0:0:0:0:2 protocol 6
src-l4-port 67 dst-l4-port 68
```

```
Egress Port
```

```
-----
8001::200 on interface 0/32
```

4.21.35 show lacp actor

Use this command to display LACP actor attributes. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.

Format show lacp actor {*slot/port*|all}

Mode Global Config

The following output parameters are displayed.

Parameter	Description
System Priority	The administrative value of the Key.
Actor Admin Key	The administrative value of the Key.
Port Priority	The priority value assigned to the Aggregation Port.
Admin State	The administrative values of the actor state as transmitted by the Actor in LACPDUs.

4.21.36 show lacp partner

Use this command to display LACP partner attributes. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.

Format show lacp actor {*slot/port*|all}

Mode Privileged EXEC

The following output parameters are displayed.

Parameter	Description
System Priority	The administrative value of priority associated with the Partner's System ID.
System-ID	Represents the administrative value of the Aggregation Port's protocol Partner's System ID.
Admin Key	The administrative value of the Key for the protocol Partner.
Port Priority	The administrative value of the Key for protocol Partner.
Port-ID	The administrative value of the port number for the protocol Partner.
Admin State	The administrative values of the actor state for the protocol Partner.

4.21.37 show port-channel brief

This command displays the static capability of all port-channel (LAG) interfaces on the device as well as a summary of individual port-channel interfaces. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.

Format `show port-channel brief`
Mode • User EXEC

For each port-channel the following information is displayed:

Term	Definition
Logical Interface	The <i>slot/port</i> of the logical interface.
Port-channel Name	The name of port-channel (LAG) interface.
Link-State	Shows whether the link is up or down.
Trap Flag	Shows whether trap flags are enabled or disabled.
Type	Shows whether the port-channel is statically or dynamically maintained.
Mbr Ports	The members of this port-channel.
Active Ports	The ports that are actively participating in the port-channel.

4.21.38 `show port-channel`

This command displays an overview of all port-channels (LAGs) on the switch. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.

Format `show port-channel`
Mode • Privileged EXEC

Term	Definition
Logical Interface	The valid slot/port number.
Port-Channel Name	The name of this port-channel (LAG). You may enter any string of up to 15 alphanumeric characters.
Link State	Indicates whether the Link is up or down.
Admin Mode	May be enabled or disabled. The factory default is enabled.
Type	The status designating whether a particular port-channel (LAG) is statically or dynamically maintained. • Static - The port-channel is statically maintained. • Dynamic - The port-channel is dynamically maintained.
Load Balance Option	The load balance option associated with this LAG. See "port-channel load-balance" on page 417".
Local Preference Mode	Indicates whether the local preference mode is enabled or disabled .
Mbr Ports	A listing of the ports that are members of this port-channel (LAG), in <i>slot/port</i> notation. There can be a maximum of eight ports assigned to a given port-channel (LAG).
Device Timeout	For each port, lists the timeout (long or short) for Device Type (actor or partner).
Port Speed	Speed of the port-channel port.
Active Ports	This field lists ports that are actively participating in the port-channel (LAG).

Example: The following shows example CLI display output for the command.
(Switch) #show port-channel 3/1

```
Local Interface..... 3/1
Channel Name..... ch1
Link State..... Up
Admin Mode..... Enabled
Type..... Static
Load Balance Option..... 3
(Src/Dest MAC, VLAN, EType, incoming port)
Local Preference Mode..... Enabled
```

Mbr Ports	Device/ Timeout	Port Speed	Port Active
0/1	actor/long partner/long	Auto	True
0/2	actor/long partner/long	Auto	True
0/3	actor/long partner/long	Auto	False
0/4	actor/long partner/long	Auto	False

4.21.39 show port-channel system priority

Use this command to display the port-channel system priority.

Format show port-channel system priority

Mode Privileged EXEC

4.21.40 show port-channel counters

Use this command to display port-channel counters for the specified port.

Format show port-channel *slot/port* counters

Mode Privileged EXEC

Term	Definition
Local Interface	The valid slot/port number.
Channel Name	The name of this port-channel (LAG).
Link State	Indicates whether the Link is up or down.
Admin Mode	May be enabled or disabled. The factory default is enabled.
Port Channel Flap Count	The number of times the port-channel was inactive.
Mbr Ports	The slot/port for the port member.
Mbr Flap Counters	The number of times a port member is inactive, either because the link is down, or the admin state is disabled.

Example: The following shows example CLI display output for the command.
(Switch) #show port-channel 3/1 counters

```
Local Interface..... 3/1
Channel Name..... ch1
Link State..... Down
Admin Mode..... Enabled
Port Channel Flap Count..... 0
```

```
Mbr      Mbr Flap
Ports    Counters
-----
0/1      0
0/2      0
0/3      1
0/4      0
0/5      0
0/6      0
0/7      0
0/8      0
```

4.21.41 clear port-channel counters

Use this command to clear and reset specified port-channel and member flap counters for the specified interface.

Format clear port-channel {lag-intf-num | slot/port} counters

Mode Privileged EXEC

4.21.42 clear port-channel all counters

Use this command to clear and reset all port-channel and member flap counters for the specified interface.

Format clear port-channel all counters

Mode Privileged EXEC

4.21.43 port-channel hash multicast

This command configures the multicast hash algorithm. The command allows the user to globally select the hash algorithm used for distribution of NUC (Non Unicast) traffic. This includes broadcast and multicast traffic, as well as unicast traffic to unknown destination MAC address (DLF, flooded). Traffic distribution may be based on Source address (sa), destination address (da), or port number, or any combination thereof.

Format port-channel hash multicast {sa/sa-port/da/da-port/port/sa-da/sa-da-port}

Mode Global Config

4.21.44 show port-channel hash multicast

This command displays current port-channel hash multicast settings.

Format show port-channel hash multicast

Mode Privileged EXEC

4.22 VPC Commands

VPC (also known as MLAG) enables a LAG to be created across two independent switches, so that some member ports of a VPC can reside on one switch and the other members of a VPC can reside on another switch. The partner device on the remote side can be a VPC-unaware unit. To the unaware unit, the VPC appears to be a single LAG connected to a single switch.

4.22.1 vpc domain

Use this command to enter into VPC configuration mode and creates a VPC domain with the specified domain-id. Only one VPC domain can be created on a given device. The domain-id of the VPC domain should be equal to the one configured on the other VPC peer with which this device wants to form a VPC pair. The configured VPC domain-ids are exchanged during role election and if they are configured differently on the peer devices, the VPC does not become operational.

The administrator needs to ensure that the no two VPC domains can share the same VPC domain-id. Domain-id is used to derive the auto-generated VPC MAC address that is used in the actor ID field in the LACP PDUs and STP BPDUs sent out on VPC interfaces. When two VPC domains have the same domain-id, it leads to the same actor IDs and results in LACP convergence issues and STP convergence issues.

The range of domain id is 1-255.

Format vpc domain *domain-id*

Mode Global Config

4.22.1.1 no vpc domain

Use this command to deletes the VPC domain, disable peer-keepalive, disable peer-detection, and reset the configured parameters (role priority, VPC MAC address and VPC system priority) for the VPC domain.

Format no vpc domain *domain-id*

Mode Global Config

4.22.2 feature vpc

This command enables VPC globally. VPC role election occurs if both VPC and the keepalive state machine are enabled (see "peer-keepalive timeout" on page 427"). Peer link also has to be configured for role election to occur.

Format feature vpc

Mode Global Config

4.22.2.1 no feature vpc

This command disables VPC.

Format no feature vpc

Mode Global Config

4.22.3 peer detection enable

This command starts the dual control plane detection protocol (DCPDP) on the VPC switch. The peer VPC switch's IP address must be configured for the DCPDP to start on an VPC switch.

Default None
Format peer detection enable
Mode VPC Config

4.22.3.1 no peer detection enable

This command disables the dual control plane (DCPDP) detection protocol on the VPC switch.

Format no peer detection enable
Mode VPC Config

4.22.4 peer detection interval

Use this command to configure the DCPDP transmission interval and reception timeout.

The configurable transmission interval range is 200 ms–4000 ms. The configurable reception timeout range is 700 ms–14000 ms. The default transmission interval is 1000 ms; the default reception timeout is 3500 ms.

Default • Transmission interval: 1000 ms
 • Reception timeout: 3500 ms
Format peer detection interval *msecs* timeout *seconds*
Mode VPC Config

4.22.4.1 no peer detection interval

Use this command to reset the DCPDP transmission interval and reception timeout to default values.

Format no peer detection interval *msecs* timeout *seconds*
Mode VPC Config

4.22.5 peer-keepalive destination

This command configures the IP address of the peer VPC switch, which is the destination IP address of the dual control plane detection protocol (DCPDP) on the peer VPC switch. This configuration is used by the dual control plane detection protocol (DCPDP) on the VPC switches. It also configures the source IP address of the DCPDP message, which is the self IP on the VPC switch. The UDP port on which the VPC switch listens to the DCPDP messages can also be configured with this command.

The configurable range for the UDP port 1 to 65535 (Default is 60000).

Format peer-keepalive destination *ipaddress* switch *ipaddress* [udp-port *port*]
Mode VPC Config

4.22.5.1 no peer-keepalive destination

This command unconfigures the self IP address, peer IP address, and the UDP port.

Format no peer-keepalive destination *ipaddress* switch *ipaddress* [udp-port *port*]
Mode VPC Config

4.22.6 peer-keepalive enable

This command starts the keepalive state machine on the VPC device, if VPC is globally enabled.

Default Disabled
Format peer-keepalive enable
Mode VPC Config

4.22.6.1 no peer-keepalive enable

This command stops the keepalive state machine of the VPC switch.

Format no peer-keepalive enable
Mode VPC Config

4.22.7 peer-keepalive timeout

This command configures the peer keepalive timeout value (in seconds). If an VPC switch does not receive a keepalive message from the peer for the duration of this timeout value, it transitions its role (if required).

**Note...**

The keepalive state machine is not restarted if keepalive priority is modified post election.

The configurable range is 2 to 15 seconds. The default is 5 seconds.

Format peer-keepalive timeout *value*
Mode VPC Config

4.22.7.1 no peer-keepalive timeout

This command resets the keepalive timeout to the default value of 5 seconds.

Format no keepalive timeout
Mode VPC Config

4.22.8 role priority

This command configures VPC switch priority. This value is used for VPC role election. The priority value is sent to the peer in the VPC keepalive messages. The VPC switch with lower priority becomes the Primary and the switch with higher priority becomes the Secondary. If both VPC peer switches have the same role priority, the device with the lower system MAC address becomes the Primary.

**Note...**

The keepalive state machine is not restarted if keepalive priority is modified post election.

The priority can be between 1 and 255 seconds. The default is 100.

Format `role priority value`

Mode VPC Config

4.22.8.1 no role priority

This command resets the keepalive priority and timeout to the default value of 100.

Format `no role priority`

Mode VPC Config

4.22.9 system-mac

Use this command to manually configure the MAC address for the VPC domain. The VPC MAC address should be configured same on both the peer devices. The specified MAC address should be a unicast MAC address in `<aa:bb:cc:dd:ee:ff>` format and cannot be equal to the MAC address of either the primary VPC or secondary VPC device. The configured VPC MAC address is exchanged during role election and, if they are configured differently on the peer devices, VPC does not become operational.

The *mac-address* is used in the LACP PDUs and STP BPDUs that are sent out on VPC member ports, if VPC primary device election takes place after the VPC MAC address is configured. When the VPC MAC address is configured after the VPC primary device is elected, the operational VPC MAC address is used in the LACP PDUs and STP BPDUs instead of the configured VPC MAC address.

Format `system-mac mac-address`

Mode VPC Domain

4.22.9.1 no system-mac

This command unconfigures the manually configured VPC MAC address for the VPC domain.

Format `no system-mac`

Mode VPC Domain

4.22.10 system-priority

Use this command to manually configures a system priority for the VPC domain. The *system-priority* should be configured identically on both VPC peers. If the configured VPC system priority is different on VPC peers, the VPC will not come up.

The system-priority is used in the LACP PDUs that are sent out on VPC member ports if VPC primary device election takes place after the VPC system priorities are configured. When the VPC system priority is configured after the VPC primary device is elected, the operational VPC system priority is used in the LACP PDUs instead of the configured VPC system priority.

The configurable range is 1 to 65535. The default is 32767.

Format `system-priority priority`

Mode VPC Domain

4.22.10.1 `no system-priority`

This command restores the VPC system priority to the default value.

Format `no system-priority priority`

Mode VPC Domain

4.22.11 `vpc`

This command configures a port-channel (LAG) as part of an VPC. Upon issuing this command, the port-channel is down until the port-channel member information is exchanged and agreed between the VPC peer switches.

The configurable range for the VPC id 1 to (Max number of LAG interfaces (64) -1)

Default none

Format `vpc id`

Mode LAG Interface

4.22.11.1 `no vpc`

This command unconfigures a port-channel as VPC.

Format `no vpc id`

Mode LAG Interface

4.22.12 `vpc peer-link`

This command configures a port channel as the VPC peer link.

Format `vpc peer-link`

Mode LAG Interface

4.22.12.1 `no vpc peer-link`

This command unconfigures a port channel as the VPC peer link.

Format `no vpc peer-link`

Mode LAG Interface

4.22.13 `show running-config vpc`

Use this command to display running configuration information for virtual port channels (VPC).

Format `show running-config vpc`

Mode Privileged EXEC

Example:

```
(Switching) # show running-config vpc

feature vpc
vpc domain 1
role priority 120
system-mac 00:10:18:82:1A:A0
system-priority 32767
peer-keepalive destination 1.1.1.1 source 1.1.1.2
                        peer detection interval 2000 timeout 6000

interface lag 1
vpc peer-link

interface lag 2
vpc 2
```

4.22.14 show vpc

This command displays information about an VPC. The configuration and operational modes of the VPC are displayed; the VPC is operationally enabled if all the preconditions are met. The port-channel that is configured as an VPC interface is also displayed with the member ports on the current switch and peer switch (with their link status)

Format show vpc id
Mode User EXEC

Example: The following shows an example of the command.

```
(Switching) # show vpc 10
VPC id#10
-----
Config mode.....Enabled
Operational mode.....Enabled
Port channel.....3/1
Self member ports Status
-----
                0/2 UP
                0/6 DOWN
Peer member ports Status
-----
                0/8 UP
```

4.22.15 show vpc brief

This command displays the VPC global status and current VPC operational mode (the VPC is in operational mode if the preconditions are met). The peerlink and keepalive statuses as well as the number of configured and operational VPCs and the system MAC and role are displayed.

Format show vpc brief
Mode Privileged EXEC

Example: The following shows an example of the command.

```
(Switching) # show vpc brief
VPC Domain ID.....1
VPC config Mode..... Enabled
Keepalive config mode..... Enabled
VPC operational Mode..... Enabled
Self Role..... Primary
```

```

Peer Role..... Secondary
Peer detection..... Disabled
Operational VPC MAC.....aa:bb:cc:dd:ee:ff
Operational VPC system priority.....32767

```

Peer-Link details

```

-----
Interface..... 3/2
Peer link status..... UP
Peer-link STP Mode..... Disabled
Configured Vlans..... 1
Egress tagging..... none

```

VPC Details

```

-----
Number of VPCs configured..... 1
Number of VPCs operational..... 1

```

VPC id# 1

```

-----
Interface..... 3/1
Configured Vlans..... 1
VPC Interface State..... Active

```

Local MemberPorts	Status
-----	-----
0/19	UP
0/20	UP
0/21	UP
0/22	UP

Peer MemberPorts	Status
-----	-----
0/27	UP
0/28	UP
0/29	UP
0/30	UP

4.22.16 show vpc consistency-parameters

Use this command to display global consistency parameters and LAG interface consistency parameters for virtual port channels (VPC) on the switch.

Format show vpc consistency-parameters {global | interface lag *lag-id*}

Mode Privileged EXEC

Example:

```
switch # show vpc consistency-parameters global
```

```
Parameter
```

Name	Value
-----	-----
STP Mode	Enabled
STP Version	EEE 802.1s
BPDU Filter Mode	Enabled
BPDU Guard Mode	Enabled
MST Instances	1,2,4
FDB Aging Time	300 seconds
VPC system MAC address	<AA:BB:CC:DD:EE:FF>
VPC system priority	32767
VPC Domian ID	1

MST VLAN Configuration

Instance	Associated VLANS

7,8,10,20	
2	4,5,40-50
4	30,32,34-38

```
switch# show vpc consistency-parameters interface lag 2
```

Parameter	
Name	Value

Port Channel Mode	Enabled
STP Mode	Enabled
BPDU Filter Mode	Enabled
BPDU Flood Mode	Enabled
Auto-edge	FALSE
TCN Guard	True
Port Cost	2
Edge Port	True
Root Guard	True
Loop Guard	True
Hash Mode	3
Minimum Links	1
Channel Type	Static
Configured VLANs	4,5,7,8
MTU	1518

Active Port	Speed	Duplex

0/1	100	Full
0/2	100	Full

MST VLAN Configuration

Instance	Associated VLANS

1	7,8
2	4,5
PV(R)STP Configuration:	
STP port-priority	<0-240>

VLAN	port-priority	cost

<ID>	<0-240>	auto <1- 200000000>

4.22.17 show vpc peer-keepalive

This command displays the peer VPC switch IP address used by the dual control plane detection protocol. The port used for the DCPDP is shown. This command also displays if peer detection is enabled. If enabled, the detection status is displayed. The DCPDP message transmission interval and reception timeout are also displayed.

Format show vpc peer-keepalive

Mode User EXEC

Example: The following shows an example of the command.

```
(Switching) # show vpc peer-keepalive
Peer IP address..... 10.130.14.55
Source IP address..... 10.130.14.54
UDP port..... 50000
Peer detection admin status..... Enabled
Peer detection operational status..... Down
Peer is detected..... True
Configured Tx interval..... 1000 milliseconds
Configured Rx timeout..... 3500 milliseconds
Operational Tx interval..... 500 milliseconds
Operational Rx timeout..... 2000 milliseconds
```

4.22.18 show vpc role

This command displays information about the keepalive status and parameters. The role of the VPC switch as well as the system MAC address and priority are displayed.

Format show vpc role

Mode User EXEC

Example: The following shows an example of the command.

```
(Switching) # show vpc role
Self
----
VPC domain ID.....1
Keepalive config mode..... Enabled
Keepalive operational mode..... Enabled
Role Priority..... 100
Configured VPC MAC .....<AA:BB:CC:DD:EE:FF>
Operational VPC MAC.....<AA:BB:CC:DD:EE:FF>
Configured VPC system priority.....32767
Operational VPC system priority.....32767
Local System MAC..... 00:10:18:82:18:63
Timeout..... 5
VPC State..... Primary
VPC Role..... Primary

Peer
----
VPC Domain ID..... 1
Role Priority..... 100
Configured VPC MAC.....<AA:BB:CC:DD:EE:FF>
Operational VPC MAC.....<AA:BB:CC:DD:EE:FF>
Configured VPC system priority.....32767
Operational VPC system priority.....32767
Role.....Secondary
Local System MAC.....00:10:18:82:1b:ab
```

4.22.19 show vpc statistics

This command displays counters for the keepalive messages transmitted and received by the VPC switch.

Format show vpc statistics {peer-keepalive | peer-link}

Mode User EXEC

Example: The following shows examples of the command.

Example 1

```
(Switching) # show vpc statistics peer-keepalive
Total trasmitted..... 123
Tx successful..... 118
Tx errors..... 5
Total received..... 115
Rx successful..... 108
Rx Errors..... 7
Timeout counter..... 6
```

Example2 :

```
(Switching) #show vpc statistics peer-link
Peer link control messages trasmitted..... 123
Peer link control messages Tx errors..... 5
Peer link control messages Tx timeout..... 4
Peer link control messages ACK transmitted..... 34
Peer link control messages ACK Tx erorrs..... 5
Peer link control messages received..... 115
Peer link data messages trasmitted..... 123
Peer link data messages Tx errors..... 5
Peer link data messages Tx timeout..... 4
Peer link data messages ACK transmitted..... 34
Peer link data messages ACK Tx erorrs..... 5
Peer link data messages received..... 115
Peer link BPDU's tranmsitted to peer..... 123
Peer link BPDU's Tx error..... 9
Peer link BPDU's received from peer..... 143
Peer link BPDU's Rx error..... 1
Peer link LACPDU's tranmsitted to peer..... 123
Peer link LACPDU's Tx error..... 9
Peer link LACPDU's received from peer..... 143
Peer link LACPDU's Rx error..... 1
```

4.22.20 clear vpc statistics

This command clears all the keepalive statistics.

Format clear vpc statistics {peer-keepalive | peer-link}

Mode User EXEC

Example: The following shows an example of the command.

```
(Switching) # clear vpc statistics peer-keepalive
(Switching) # clear vpc statistics peer-link
```

4.22.21 debug vpc peer-keepalive

This command enables debug traces of the keepalive state machine transitions.

Format debug vpc peer-keepalive

Mode User EXEC

4.22.22 `debug vpc peer-link data-message`

This command enables debug traces for the control messages exchanged between the VPC devices on the peer link.

Format `debug vpc peer-link data-message`

Mode User EXEC

4.22.23 `debug vpc peer-link control-message async`

This command enables debug traces for the asynchronous reliable control messages exchanged between the MLAG devices on the peer link. For `error`, only the errors in the communication are traced. For `msg`, the control message contents that are exchanged can be traced. Both transmitted and received control messages contents can be traced.

Format `debug vpc peer-link control-message async {error | msg [receive | transmit]}`

Mode User EXEC

4.22.24 `debug vpc peer-link control-message bulk`

This command enables debug traces for the periodic control messages exchanged between the MLAG devices on the peer link. For `error`, only the errors in the communication are traced. For `msg`, the control message contents that are exchanged can be traced. Both transmitted and received control messages contents can be traced.

Format `debug vpc peer-link control-message bulk {error | msg [receive | transmit]}`

Mode User EXEC

4.22.25 `debug vpc peer-link control-message ckpt`

This command enables debug traces for the checkpointing control messages exchanged between the MLAG devices on the peer link. For `error`, only the errors in the communication are traced. For `msg`, the control message contents that are exchanged can be traced. Both transmitted and received control messages contents can be traced.

Format `debug vpc peer-link control-message ckpt {error | msg [receive | transmit]}`

Mode User EXEC

4.22.26 `debug vpc peer detection`

This command enables debug traces for the dual control plane detection protocol. Traces are seen when the DCPDP transmits or receives detection packets to or from the peer VPC switch.

Format `debug vpc peer detection`

Mode User EXEC

4.23 Port Mirroring Commands

Port mirroring, which is also known as port monitoring, selects network traffic that you can analyze with a network analyzer, such as a SwitchProbe device or other Remote Monitoring (RMON) probe.

4.23.1 monitor session source

This command configures the source interface for a selected monitor session. Use the `source interface unit/slot/port` parameter to specify the interface to monitor. Use `rx` to monitor only ingress packets, or use `tx` to monitor only egress packets. If you do not specify an `{rx | tx}` option, the destination port monitors both ingress and egress packets.

A VLAN can be configured as the source to a session (all member ports of that VLAN are monitored). Remote port mirroring is configured by adding the RSPAN VLAN ID. At the source switch, the destination is configured as the RSPAN VLAN and at the destination switch, the source is configured as the RSPAN VLAN.



Note...

The source and destination cannot be configured as remote on the same device.

The commands described below add a mirrored port (source port) to a session identified with *session-id*. The *session-id* parameter is an integer value used to identify the session. The maximum number of sessions which can be configured is L7_MIRRORING_MAX_SESSIONS. Option *rx* is used to monitor only ingress packets. Option *tx* is used to monitor only egress packets. If no option is specified, both ingress and egress packets, RX and TX, are monitored.

A VLAN can also be configured as the source to a session (all the member ports of that VLAN are monitored).



Note...

If an interface participates in some VLAN and is a LAG member, this VLAN cannot be assigned as a source VLAN for a Monitor session. At the same time, if an interface participates in some VLAN and this VLAN is assigned as a source VLAN for a Monitor session, the interface can be assigned as a LAG member.

Remote port mirroring is configured by giving the RSPAN VLAN ID. At the source switch the destination is configured as RSPAN VLAN and at the destination switch the source is configured as RSPAN VLAN.



Note...

On the intermediate switch, RSPAN VLAN should be created, the ports connected towards Source and Destination switch should have the RSPAN VLAN participation. RSPAN VLAN egress tagging should be enabled on the interface on the intermediate switch connected towards the Destination switch.

Default	None
Format	<code>monitor session session-id source {interface {unit/slot/port cpu lag } vlan vlan-id remote vlan vlan-id } [{rx tx}]</code>
Mode	Global Config

4.23.1.1 no monitor session source

This command removes the specified mirrored port from the selected port mirroring session.

Default	None
Format	<code>no monitor session <i>session-id</i> source {interface {<i>unit/slot/port</i> <i>cpu</i> <i>lag</i> } <i>vlan</i> <i>remote vlan</i>}</code>
Mode	Global Config

4.23.2 monitor session destination

This command configures the probe interface for a selected monitor session. This command configures a probe port and a monitored port for monitor session (port monitoring). Use *rx* to monitor only ingress packets, or use *tx* to monitor only egress packets. If you do not specify an {*rx* | *tx*} option, the destination port monitors both ingress and egress packets.

A VLAN can be configured as the source to a session (all member ports of that VLAN are monitored). Remote port mirroring is configured by adding the RSPAN VLAN ID. At the source switch, the destination is configured as the RSPAN VLAN and at the destination switch, the source is configured as the RSPAN VLAN.

**Note...**

The source and destination cannot be configured as remote on the same device.

The `reflector-port` is configured at the source switch along with the destination RSPAN VLAN. The `reflector-port` forwards the mirrored traffic towards the destination switch.

**Note...**

This port must be configured with RSPAN VLAN membership.

Use the `destination interface unit/slot/port` to specify the interface to receive the monitored traffic.

The commands described below add a mirrored port (source port) to a session identified with *session-id*. The *session-id* parameter is an integer value used to identify the session. The maximum number of sessions which can be configured is `L7_MIRRORING_MAX_SESSIONS`. Option *rx* is used to monitor only ingress packets. Option *tx* is used to monitor only egress packets. If no option is specified, both ingress and egress packets, RX and TX, are monitored.

A VLAN can also be configured as the source to a session (all the member ports of that VLAN are monitored).

**Note...**

If an interface participates in some VLAN and is a LAG member, this VLAN cannot be assigned as a source VLAN for a Monitor session. At the same time, if an interface participates in some VLAN and this VLAN is assigned as a source VLAN for a Monitor session, the interface can be assigned as a LAG member.

Remote port mirroring is configured by giving the RSPAN VLAN ID. At the source switch the destination is configured as RSPAN VLAN and at the destination switch the source is configured as RSPAN VLAN.

**Note...**

On the intermediate switch, RSPAN VLAN should be created, the ports connected towards Source and Destination switch should have the RSPAN VLAN participation. RSPAN VLAN egress tagging should be enabled on the interface on the intermediate switch connected towards the Destination switch.

Default	None
Format	<code>monitor session <i>session-id</i> destination {interface <i>unit/slot/port</i> remote vlan <i>vlan-id</i> reflector-port <i>unit/slot/port</i>}</code>
Mode	Global Config

4.23.2.1 no monitor session destination

This command removes the specified probe port from the selected port mirroring session.

Format	<code>no monitor session <i>session-id</i> destination {interface <i>unit/slot/port</i> remote vlan <i>vlan-id</i> reflector-port <i>unit/slot/port</i>}</code>
Mode	Global Config

4.23.3 monitor session filter

This command attaches an IP/MAC ACL to a selected monitor session. This command configures a probe port and a monitored port for monitor session (port monitoring).

An IP/MAC ACL can be attached to a session by giving the access list number/name.

Use the `filter` parameter to filter a specified access group either by IP address or MAC address.

The commands described below add a mirrored port (source port) to a session identified with *session-id*. The *session-id* parameter is an integer value used to identify the session. The maximum number of sessions which can be configured is L7_MIRRORING_MAX_SESSIONS.

Remote port mirroring is configured by giving the RSPAN VLAN ID. At the source switch the destination is configured as RSPAN VLAN and at the destination switch the source is configured as RSPAN VLAN.

**Note...**

Source and destination cannot be configured as remote on the same device.

**Note...**

IP/MAC ACL can be attached to a session by giving the access list number/name. On the platforms that do not support both IP and MAC ACLs to be assigned on the same Monitor session, an error message is thrown when user tries to configure ACLs of both types.

Default	None
Format	<code>monitor session <i>session-id</i> filter {ip access-group <i>acl-id/aclname</i> mac access-group <i>acl-name</i>}</code>
Mode	Global Config

4.23.3.1 no monitor session filter

This command removes the specified IP/MAC ACL from the selected monitoring session.

Format no smonitor session *session-id* filter {ip access-group | mac access-group }
Mode Global Config

4.23.4 monitor session mode

This command enables the selected port mirroring session. This command configures a probe port and a monitored port for monitor session (port monitoring).

A VLAN can be configured as the source to a session (all member ports of that VLAN are monitored). Remote port mirroring is configured by adding the RSPAN VLAN ID. At the source switch, the destination is configured as the RSPAN VLAN and at the destination switch, the source is configured as the RSPAN VLAN.

**Note...**

Source and destination cannot be configured as remote on the same device.

The commands described below add a mirrored port (source port) to a session identified with *session-id*. The *session-id* parameter is an integer value used to identify the session. The maximum number of sessions which can be configured is L7_MIRRORING_MAX_SESSIONS. Option *rx* is used to monitor only ingress packets. Option *tx* is used to monitor only egress packets. If no option is specified, both ingress and egress packets, RX and TX, are monitored.

A VLAN can also be configured as the source to a session (all the member ports of that VLAN are monitored).

**Note...**

If an interface participates in some VLAN and is a LAG member, this VLAN cannot be assigned as a source VLAN for a Monitor session. At the same time, if an interface participates in some VLAN and this VLAN is assigned as a source VLAN for a Monitor session, the interface can be assigned as a LAG member.

Remote port mirroring is configured by giving the RSPAN VLAN ID. At the source switch the destination is configured as RSPAN VLAN and at the destination switch the source is configured as RSPAN VLAN.

**Note...**

Source and destination cannot be configured as remote on the same device.

**Note...**

On the intermediate switch: RSPAN VLAN should be created, the ports connected towards the Source and Destination switch should have the RSPAN VLAN participation. RSPAN VLAN egress tagging should be enabled on interface on intermediate switch connected towards Destination switch.

Default None
Format monitor session *session-id* mode
Mode Global Config

4.23.4.1 no monitor session mode

This command disables the selected port mirroring session.

Format no monitor session *session-id* mode

Mode Global Config

4.23.5 no monitor session

Use this command without optional parameters to remove the monitor session (port monitoring) designation from the source probe port, the destination monitored port and all VLANs. Once the port is removed from the VLAN, you must manually add the port to any desired VLANs. Use the source interface *unit/slot/port* parameter or destination interface to remove the specified interface from the port monitoring session. Use the mode parameter to disable the administrative mode of the session

Format no monitor session *session-id* {source {interface *unit/slot/port* | cpu | lag} |vlan| remote vlan} | destination { interface | remote vlan | mode |filter {ip access-group |mac access-group}}]

Mode Global Config

4.23.6 no monitor

This command removes all the source ports and a destination port and restores the default value for mirroring session mode for all the configured sessions.

**Note...**

This is a stand-alone “no” command. This command does not have a “normal” form.

Default enabled

Format no monitor

Mode Global Config

4.23.7 show monitor session

This command displays the Port monitoring information for a particular mirroring session.

**Note...**

The *session-id* parameter is an integer value used to identify the session. In the current version of the software, the *session-id* parameter is always one (1).

Format show monitor session *session-id*

Mode Privileged EXEC

Term	Definition
Session ID	An integer value used to identify the session. Its value can be anything between 1 and the maximum number of mirroring sessions allowed on the platform.
Admin Mode	Indicates whether the Port Mirroring feature is enabled or disabled for the session identified with <i>session-id</i> . The possible values are Enabled and Disabled.

Term	Definition
Probe Port	Probe port (destination port) for the session identified with <i>session-id</i> . If probe port is not set then this field is blank.
Src VLAN	All member ports of this VLAN are mirrored. If the source VLAN is not configured, this field is blank.
MiRrored Port	The port that is configured as a mirrored port (source port) for the session identified with <i>session-id</i> . If no source port is configured for the session, this field is blank.
Ref. Port	This port carries all the mirrored traffic at the source switch.
Src RVLAN	The source VLAN is configured at the destination switch. If the remote VLAN is not configured, this field is blank.
Dst RVLAN	The destination VLAN is configured at the source switch. If the remote VLAN is not configured, this field is blank.
Type	Direction in which source port configured for port mirroring. Types are tx for transmitted packets and rx for receiving packets.
IP ACL	The IP access-list id or name attached to the port mirroring session.
MAC ACL	The MAC access-list name attached to the port mirroring session.

Example: Example 1:

```
(Switch)#show monitor session 1
```

Session ID	Admin Mode	Probe Port	Src VLAN	Mirrored Port	Ref Port	Src RVLAN	Dst RVLAN	Type	IP ACL	MAC ACL
1	Enable	1/0/8		1/0/10				Rx, Tx		

Example: Example 2:

```
(Switch)#show monitor session all
```

Session ID	Admin Mode	Probe Port	Src VLAN	Mirrored Port	Ref Port	Src RVLAN	Dst RVLAN	Type	IP ACL	MAC ACL
1	Enable	1/0/8		1/0/10				Rx, Tx		
2	Disable		6		0/4		10		4	
3	Disable	1/0/11				10				101
4	Enable	1/0/11		1/0/7				Tx		

Example: Example 3:

```
(Switch)#show monitor session all
```

Session ID	Admin Mode	Probe Port	Src VLAN	Mirrored Port	Ref Port	Src RVLAN	Dst RVLAN	Type	IP ACL	MAC ACL
1	Enable	1/0/8		1/0/10				Rx		
2	Enable		6					Rx	4	
3	Disable		10					Tx		101
4	Disable	1/0/11		1/0/7				Tx		

Example: Example 4:

```
(Switch)#show monitor session all
```

Session ID	Admin Mode	Probe Port	Src VLAN	Mirrored Port	Ref Port	Src RVLAN	Dst RVLAN	Type	IP ACL	MAC ACL

1	Enable		1/0/15	1/0/4	11	Tx	4	
2	Enable	1/0/3	1/0/15			Tx		
3	Enable		1/0/15	1/0/20	10	Rx		
4	Enable	1/0/11	1/0/15			Rx		10

Example: Example 5:

```
(Switch)#show monitor session all
```

Session ID	Admin Mode	Probe Port	Src VLAN	Mirrored Port	Ref Port	Src RVLAN	Dst RVLAN	Type	IP ACL	MAC ACL
1	Disable									
2	Disable									
3	Enable	1/0/16	3							
4	Enable	1/0/11		1/0/16				Rx,Tx		10

Example: Example 6:

```
(Switch)#show monitor session all
```

Session ID	Admin Mode	Probe Port	Src VLAN	Mirrored Port	Ref Port	Src RVLAN	Dst RVLAN	Type	IP ACL	MAC ACL
1	Enable		1		1/0/4		15		4	
2	Enable	1/0/15	2							
3	Enable		3		1/0/20		10			
4	Enable	1/0/11		1/0/16				Rx,Tx		10

4.23.8 show vlan remote-span

This command displays the configured RSPAN VLAN.

Format show vlan remote-span

Mode Privileged EXEC Mode

Example: The following shows example output for the command.

```
(Switch)# show vlan remote-span
```

```
Remote SPAN VLAN
```

```
-----  
100,102,201,303
```

4.24 Static MAC Filtering Commands

The commands in this section describe how to configure static MAC filtering. Static MAC filtering allows you to configure destination ports for a static multicast MAC filter irrespective of the platform.

4.24.1 macfilter

This command adds a static MAC filter entry for the MAC address *macaddr* on the VLAN *vLanid*. The value of the *macaddr* parameter is a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The restricted MAC Addresses are: 00:00:00:00:00:00, 01:80:C2:00:00:00 to 01:80:C2:00:00:0F, 01:80:C2:00:00:20 to 01:80:C2:00:00:21, and FF:FF:FF:FF:FF:FF. The *vLanid* parameter must identify a valid VLAN.

The number of static mac filters supported on the system is different for MAC filters where source ports are configured and MAC filters where destination ports are configured.

- For unicast MAC address filters and multicast MAC address filters with source port lists, the maximum number of static MAC filters supported is 20.
- For multicast MAC address filters with destination ports configured, the maximum number of static filters supported is 256.

i.e. For current Broadcom platforms, you can configure the following combinations:

- Unicast MAC and source port (max = 20)
- Multicast MAC and source port (max = 20)
- Multicast MAC and destination port (only) (max = 256)
- Multicast MAC and source ports and destination ports (max = 20)

Format `macfilter macaddr vLanid`

Mode Global Config

4.24.1.1 no macfilter

This command removes all filtering restrictions and the static MAC filter entry for the MAC address *macaddr* on the VLAN *vLanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The *vLanid* parameter must identify a valid VLAN.

Format `no macfilter macaddr vLanid`

Mode Global Config

4.24.2 macfilter adddest

Use this command to add the interface or range of interfaces to the destination filter set for the MAC filter with the given *macaddr* and VLAN of *vLanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vLanid* parameter must identify a valid VLAN.



Note...

Configuring a destination port list is only valid for multicast MAC addresses.

Format `macfilter adddest macaddr`

Mode Interface Config

4.24.2.1 no macfilter adddest

This command removes a port from the destination filter set for the MAC filter with the given *macaddr* and VLAN of *vLanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vLanid* parameter must identify a valid VLAN.

Format `no macfilter adddest macaddr`

Mode Interface Config

4.24.3 macfilter adddest all

This command adds all interfaces to the destination filter set for the MAC filter with the given *macaddr* and VLAN of *vLanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vLanid* parameter must identify a valid VLAN.

**Note...**

Configuring a destination port list is only valid for multicast MAC addresses.

Format macfilter adddest all *macaddr*

Mode Global Config

4.24.3.1 no macfilter adddest all

This command removes all ports from the destination filter set for the MAC filter with the given *macaddr* and VLAN of *vLanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vLanid* parameter must identify a valid VLAN.

Format no macfilter adddest all *macaddr*

Mode Global Config

4.24.4 macfilter addsrc

This command adds the interface or range of interfaces to the source filter set for the MAC filter with the MAC address of *macaddr* and VLAN of *vLanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vLanid* parameter must identify a valid VLAN.

Format macfilter addsrc *macaddr vLanid*

Mode Interface Config

4.24.4.1 no macfilter addsrc

This command removes a port from the source filter set for the MAC filter with the MAC address of *macaddr* and VLAN of *vLanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vLanid* parameter must identify a valid VLAN.

Format no macfilter addsrc *macaddr vLanid*

Mode Interface Config

4.24.5 macfilter addsrc all

This command adds all interfaces to the source filter set for the MAC filter with the MAC address of *macaddr* and *vLanid*. You must specify the *macaddr* parameter as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vLanid* parameter must identify a valid VLAN.

Format macfilter addsrc all *macaddr vLanid*

Mode Global Config

4.24.5.1 no macfilter addsrc all

This command removes all interfaces to the source filter set for the MAC filter with the MAC address of *macaddr* and VLAN of *vlanid*. You must specify the *macaddr* parameter as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The *vlanid* parameter must identify a valid VLAN.

Format no macfilter addsrc all *macaddr* *vlanid*

Mode Global Config

4.24.6 show mac-address-table static

This command displays the Static MAC Filtering information for all Static MAC Filters. If you specify *all*, all the Static MAC Filters in the system are displayed. If you supply a value for *macaddr*, you must also enter a value for *vlanid*, and the system displays Static MAC Filter information only for that MAC address and VLAN.

Format show mac-address-table static {*macaddr* *vlanid* | *all*}

Mode Privileged EXEC

Term	Definition
MAC Address	The MAC Address of the static MAC filter entry.
VLAN ID	The VLAN ID of the static MAC filter entry.
Source Port(s)	The source port filter set's slot and port(s).

**Note...**

Only multicast address filters will have destination port lists.

4.24.7 show mac-address-table staticfiltering

This command displays the Static Filtering entries in the Multicast Forwarding Database (MFDB) table.

Format show mac-address-table staticfiltering

Mode Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC Address is learned.
MAC Address	A unicast MAC address for which the switch has forwarding and or filtering information. As the data is gleaned from the MFDB, the address will be a multicast address. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Type	The type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

4.25 DHCP L2 Relay Agent Commands

You can enable the switch to operate as a DHCP Layer 2 relay agent to relay DHCP requests from clients to a Layer 3 relay agent or server. The Circuit ID and Remote ID can be added to DHCP requests relayed from clients to a DHCP server. This information is included in DHCP Option 82, as specified in sections 3.1 and 3.2 of RFC3046.

4.25.1 dhcp l2relay

This command enables the DHCP Layer 2 Relay agent for an interface a range of interfaces in, or all interfaces. The subsequent commands mentioned in this section can only be used when the DHCP L2 relay is enabled.

Format dhcp l2relay

Mode

- Global Config
- Interface Config

4.25.1.1 no dhcp l2relay

This command disables DHCP Layer 2 relay agent for an interface or range of interfaces.

Format no dhcp l2relay

Mode

- Global Config
- Interface Config

4.25.2 dhcp l2relay circuit-id subscription

This command sets the Option-82 Circuit ID for a given service subscription identified by *subscription-string* on a given interface. The *subscription-string* is a character string which needs to be matched with a configured DOT1AD subscription string for correct operation. When circuit-id is enabled using this command, all Client DHCP requests that fall under this service subscription are added with Option-82 circuit-id as the incoming interface number.

Default disabled

Format dhcp l2relay circuit-id subscription *subscription-string*

Mode Interface Config

4.25.2.1 no dhcp l2relay circuit-id subscription

This command resets the Option-82 Circuit ID for a given service subscription identified by *subscription-string* on a given interface. The *subscription-string* is a character string which needs to be matched with a configured DOT1AD subscription string for correct operation. When circuit-id is disabled using this command, all Client DHCP requests that fall under this service subscription are no longer added with Option-82 circuit-id.

Format no dhcp l2relay circuit-id subscription *subscription-string*

Mode Interface Config

4.25.3 dhcp l2relay circuit-id vlan

This parameter sets the DHCP Option-82 Circuit ID for a VLAN. When enabled, the interface number is added as the Circuit ID in DHCP option 82.

Format `dhcp l2relay circuit-id vlan vlan-list`
Mode Global Config

Parameter	Description
vlan-list	The VLAN ID. The range is 1–4093. Separate nonconsecutive IDs with a comma (,) no spaces and no zeros in between the range. Use a dash (–) for the range.

4.25.3.1 `no dhcp l2relay circuit-id vlan`

This parameter clears the DHCP Option-82 Circuit ID for a VLAN.

Format `no dhcp l2relay circuit-id vlan vlan-list`
Mode Global Config

4.25.4 `dhcp l2relay remote-id subscription`

This command sets the Option-82 Remote-ID string for a given service subscription identified by *subscription-string* on a given interface or range of interfaces. The *subscription-string* is a character string which needs to be matched with a configured DOT1AD subscription string for correct operation. The *remoteid-string* is a character string. When remote-id string is set using this command, all Client DHCP requests that fall under this service subscription are added with Option-82 Remote-id as the configured remote-id string.

Default empty string
Format `dhcp l2relay remote-id remoteid-string subscription-name subscription-string`
Mode Interface Config

4.25.4.1 `no dhcp l2relay remote-id subscription`

This command resets the Option-82 Remote-ID string for a given service subscription identified by *subscription-string* on a given interface. The *subscription-string* is a character string which needs to be matched with a configured DOT1AD subscription string for correct operation. When remote-id string is reset using this command, the Client DHCP requests that fall under this service subscription are not added with Option-82 Remote-id.

Format `no dhcp l2relay remote-id remoteid-string subscription-name subscription-string`
Mode Interface Config

4.25.5 `dhcp l2relay remote-id vlan`

This parameter sets the DHCP Option-82 Remote ID for a VLAN and subscribed service (based on subscription-name).

Format `dhcp l2relay remote-id remote-id-string vlan vlan-list`
Mode Global Config

Parameter	Description
vlan-list	The VLAN ID. The range is 1–4093. Separate nonconsecutive IDs with a comma (,) no spaces and no zeros in between the range. Use a dash (–) for the range.

4.25.5.1 no dhcp l2relay remote-id vlan

This parameter clears the DHCP Option-82 Remote ID for a VLAN and subscribed service (based on subscription-name).

Format no dhcp l2relay remote-id vlan *vlan-list*

Mode Global Config

4.25.6 dhcp l2relay subscription

This command enables relaying DHCP packets on an interface or range of interfaces that fall under the specified service subscription. The *subscription-string* is a character string that needs to be matched with configured DOT1AD subscription string for correct operation.

Default disabled (i.e. no DHCP packets are relayed)

Format dhcp l2relay subscription-name *subscription-string*

Mode Interface Config

4.25.6.1 no dhcp l2relay subscription

This command disables relaying DHCP packets that fall under the specified service subscription. The *subscription-string* is a character string that needs to be matched with configured DOT1AD subscription string for correct operation.

Format no dhcp l2relay subscription-name *subscription-string*

Mode Interface Config

4.25.7 dhcp l2relay trust

Use this command to configure an interface or range of interfaces as trusted for Option-82 reception.

Default untrusted

Format dhcp l2relay trust

Mode Interface Config

4.25.7.1 no dhcp l2relay trust

Use this command to configure an interface to the default untrusted for Option-82 reception.

Format no dhcp l2relay trust

Mode Interface Config

4.25.8 dhcp l2relay vlan

Use this command to enable the DHCP L2 Relay agent for a set of VLANs. All DHCP packets which arrive on interfaces in the configured VLAN are subject to L2 Relay processing.

Default disable

Format dhcp l2relay vlan *vlan-list*

Mode Global Config

Parameter	Description
vlan-list	The VLAN ID. The range is 1–4093. Separate nonconsecutive IDs with a comma (,) no spaces and no zeros in between the range. Use a dash (–) for the range.

4.25.8.1 no dhcp l2relay vlan

Use this command to disable the DHCP L2 Relay agent for a set of VLANs.

Format no dhcp l2relay vlan *vlan-list*

Mode Global Config

4.25.9 show dhcp l2relay all

This command displays the summary of DHCP L2 Relay configuration.

Format show dhcp l2relay all

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.
(FASTPATH Switching) #show dhcp l2relay all

DHCP L2 Relay is Enabled.

Interface	L2RelayMode	TrustMode
-----	-----	-----
0/2	Enabled	untrusted
0/4	Disabled	trusted

VLAN Id	L2 Relay	CircuitId	RemoteId
-----	-----	-----	-----
3	Disabled	Enabled	--NULL--
5	Enabled	Enabled	--NULL--
6	Enabled	Enabled	broadcom
7	Enabled	Disabled	--NULL--
8	Enabled	Disabled	--NULL--
9	Enabled	Disabled	--NULL--
10	Enabled	Disabled	--NULL--

4.25.10 show dhcp l2relay circuit-id vlan

This command displays DHCP circuit-id vlan configuration.

Format show dhcp l2relay circuit-id vlan *vlan-list*

Mode Privileged EXEC

Parameter	Description
vlan-list	Enter VLAN IDs in the range 1–4093. Use a dash (–) to specify a range or a comma (,) to separate VLAN IDs in a list. Spaces and zeros are not permitted.

4.25.11 show dhcp l2relay interface

This command displays DHCP L2 relay configuration specific to interfaces.

Format show dhcp l2relay interface {all | *interface-num*}

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.
(FASTPATH Switching) #show dhcp l2relay interface all

DHCP L2 Relay is Enabled.

Interface	L2RelayMode	TrustMode
-----	-----	-----
0/2	Enabled	untrusted
0/4	Disabled	trusted

4.25.12 show dhcp l2relay remote-id vlan

This command displays DHCP Remote-id vlan configuration.

Format show dhcp l2relay remote-id vlan *vlan-list*

Mode Privileged EXEC

Parameter	Description
vlan-list	Enter VLAN IDs in the range 1–4093. Use a dash (–) to specify a range or a comma (,) to separate VLAN IDs in a list. Spaces and zeros are not permitted.

4.25.13 show dhcp l2relay stats interface

This command displays statistics specific to DHCP L2 Relay configured interface.

Format show dhcp l2relay stats interface {all | *interface-num*}

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.
(FASTPATH Switching) #show dhcp l2relay stats interface all

DHCP L2 Relay is Enabled.

Interface	UntrustedServer MsgsWithOpt82	UntrustedClient MsgsWithOpt82	TrustedServer MsgsWithoutOpt82	TrustedClient MsgsWithoutOpt82
0/1	0	0	0	0
0/2	0	0	3	7
0/3	0	0	0	0
0/4	0	12	0	0
0/5	0	0	0	0
0/6	3	0	0	0
0/7	0	0	0	0
0/8	0	0	0	0
0/9	0	0	0	0

4.25.14 show dhcp l2relay subscription interface

This command displays DHCP L2 Relay configuration specific to a service subscription on an interface.

Format show dhcp l2relay subscription interface {all|interface-num}

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

(FASTPATH Switching) #show dhcp l2relay subscription interface all

Interface	SubscriptionName	L2Relay mode	Circuit-Id mode	Remote-Id mode
0/1	sub1	Enabled	Disabled	--NULL--
0/2	sub3	Enabled	Disabled	EnterpriseSwitch
0/2	sub22	Disabled	Enabled	--NULL--
0/4	sub4	Enabled	Enabled	--NULL--

4.25.15 show dhcp l2relay agent-option vlan

This command displays the DHCP L2 Relay Option-82 configuration specific to VLAN.

Format show dhcp l2relay agent-option vlan *vlan-range*

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

(FASTPATH Switching) #show dhcp l2relay agent-option vlan 5-10

DHCP L2 Relay is Enabled.

VLAN Id	L2 Relay	CircuitId	RemoteId
5	Enabled	Enabled	--NULL--
6	Enabled	Enabled	broadcom
7	Enabled	Disabled	--NULL--
8	Enabled	Disabled	--NULL--
9	Enabled	Disabled	--NULL--
10	Enabled	Disabled	--NULL--

4.25.16 show dhcp l2relay vlan

This command displays DHCP vlan configuration.

Format show dhcp l2relay vlan *vlan-List*

Mode Privileged EXEC

Parameter	Description
vlan-list	Enter VLAN IDs in the range 1–4093. Use a dash (–) to specify a range or a comma (,) to separate VLAN IDs in a list. Spaces and zeros are not permitted.

4.25.17 clear dhcp l2relay statistics interface

Use this command to reset the DHCP L2 relay counters to zero. Specify the port with the counters to clear, or use the `all` keyword to clear the counters on all ports.

Format clear dhcp l2relay statistics interface {*slot/port* | *all*}

Mode Privileged EXEC

4.26 DHCP Client Commands

FASTPATH can include vendor and configuration information in DHCP client requests relayed to a DHCP server. This information is included in DHCP Option 60, Vendor Class Identifier. The information is a string of 128 octets.

4.26.1 dhcp client vendor-id-option

This command enables the inclusion of DHCP Option-60, Vendor Class Identifier included in the requests transmitted to the DHCP server by the DHCP client operating in the FASTPATH switch.

Format dhcp client vendor-id-option *string*

Mode Global Config

4.26.1.1 no dhcp client vendor-id-option

This command disables the inclusion of DHCP Option-60, Vendor Class Identifier included in the requests transmitted to the DHCP server by the DHCP client operating in the FASTPATH switch.

Format no dhcp client vendor-id-option

Mode Global Config

4.26.2 dhcp client vendor-id-option-string

This parameter sets the DHCP Vendor Option-60 string to be included in the requests transmitted to the DHCP server by the DHCP client operating in the FASTPATH switch.

Format dhcp client vendor-id-option-string *string*

Mode Global Config

4.26.2.1 no dhcp client vendor-id-option-string

This parameter clears the DHCP Vendor Option-60 string.

Format no dhcp client vendor-id-option-string

Mode Global Config

4.26.3 show dhcp client vendor-id-option

This command displays the configured administration mode of the vendor-id-option and the vendor-id string to be included in Option-43 in DHCP requests.

Format show dhcp client vendor-id-option

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.
(FASTPATH Switching) #show dhcp client vendor-id-option

```
DHCP Client Vendor Identifier Option is Enabled
DHCP Client Vendor Identifier Option string is FastpathClient.
```

4.26.4 ip dhcp force-client-id

This feature allows the manipulation of DHCP packets related to the receiving port and (optional and only if Layer3-functionality provided) VLAN.

This command enables the manipulation of a DHCP packet. If enabled a new client identifier is added either the specified one or (if not specified) a default identifier, containing the related unit/slot/port. The manipulation can be done independent of the VLAN or for a special VLAN (only if Layer-3 functionality is provided). First VLAN related specifications are used before the general rule is used. Maximal 32 rules can be specified for a port.

Format ip dhcp force-client-id
ip dhcp force-client-id <identifier>
ip dhcp force-client-id vlan <1-4093>
ip dhcp force-client-id vlan <1-4093> <identifier>

Mode Interface Config

4.26.4.1 no ip dhcp force-client-id

This command disables the manipulation of a DHCP packet.

Format no ip dhcp force-client-id
no ip dhcp force-client-id vlan <1-4093>

Mode Interface Config

4.26.5 show ip dhcp force-client-id

This command displays the mode (enabled/disabled) and the related VLAN and client-identifier for a specified interface (<unit/slot/port>) or for all physical interfaces.

Format `show ip dhcp force-client-id { all | <unit/slot/port> }`

Mode Privileged Exec

4.26.6 clear ip dhcp force-client-id

This command clears all configured manipulation rules for DHCP packets for all interfaces.

Format `clear ip dhcp force-client-id`

Mode Privileged Exec

4.27 DHCP Snooping Configuration Commands

This section describes commands you use to configure DHCP Snooping.

4.27.1 ip dhcp snooping

Use this command to enable DHCP Snooping globally.

Default disabled

Format `ip dhcp snooping`

Mode Global Config

4.27.1.1 no ip dhcp snooping

Use this command to disable DHCP Snooping globally.

Format `no ip dhcp snooping`

Mode Global Config

4.27.2 ip dhcp snooping vlan

Use this command to enable DHCP Snooping on a list of comma-separated VLAN ranges.

Default disabled

Format `ip dhcp snooping vlan vlan-list`

Mode Global Config

4.27.2.1 no ip dhcp snooping vlan

Use this command to disable DHCP Snooping on VLANs.

Format `no ip dhcp snooping vlan vlan-list`

Mode Global Config

4.27.3 ip dhcp snooping verify mac-address

Use this command to enable verification of the source MAC address with the client hardware address in the received DHCP message.

Default enabled
Format ip dhcp snooping verify mac-address
Mode Global Config

4.27.3.1 no ip dhcp snooping verify mac-address

Use this command to disable verification of the source MAC address with the client hardware address.

Format no ip dhcp snooping verify mac-address
Mode Global Config

4.27.4 ip dhcp snooping database

Use this command to configure the persistent location of the DHCP Snooping database. This can be local or a remote file on a given IP machine.

Default local
Format ip dhcp snooping database {local|tftp://hostIP/filename}
Mode Global Config

4.27.5 ip dhcp snooping database write-delay

Use this command to configure the interval in seconds at which the DHCP Snooping database will be persisted. The interval value ranges from 15 to 86400 seconds.

Default 300 seconds
Format ip dhcp snooping database write-delay in seconds
Mode Global Config

4.27.5.1 no ip dhcp snooping database write-delay

Use this command to set the write delay value to the default value.

Format no ip dhcp snooping database write-delay
Mode Global Config

4.27.6 ip dhcp snooping binding

Use this command to configure static DHCP Snooping binding.

Format ip dhcp snooping binding mac-address vlan vlan id ip address interface interface id
Mode Global Config

4.27.6.1 no ip dhcp snooping binding

Use this command to remove the DHCP static entry from the DHCP Snooping database.

Format no ip dhcp snooping binding *mac-address*

Mode Global Config

4.27.7 ip dhcp filtering trust

Use this command to enable trusted mode on the interface if the previously saved configuration or applied script contains this command.

Format ip dhcp filtering trust *interface id*

Mode Global Config

4.27.7.1 no ip dhcp filtering trust

Use this command to disable trusted mode on the interface.

Format no ip dhcp filtering trust *interface id*

Mode Global Config

4.27.8 ip verify binding

Use this command to configure static IP source guard (IPSG) entries.

Format ip verify binding *mac-address* *vlan vlan id ip address* interface *interface id*

Mode Global Config

4.27.8.1 no ip verify binding

Use this command to remove the IPSG static entry from the IPSG database.

Format no ip verify binding *mac-address* *vlan vlan id ip address* interface *interface id*

Mode Global Config

4.27.9 ip dhcp snooping limit

Use this command to control the rate at which the DHCP Snooping messages come on an interface or range of interfaces. By default, rate limiting is disabled. When enabled, the rate can range from 0 to 300 packets per second. The burst level range is 1 to 15 seconds.

Default disabled (no limit)

Format ip dhcp snooping limit {rate pps [*burst interval seconds*]}

Mode Interface Config

4.27.9.1 no ip dhcp snooping limit

Use this command to set the rate at which the DHCP Snooping messages come, and the burst level, to the defaults.

Format no ip dhcp snooping limit

Mode Interface Config

4.27.10 ip dhcp snooping log-invalid

Use this command to control the logging DHCP messages filtration by the DHCP Snooping application. This command can be used to configure a single interface or a range of interfaces.

Default disabled

Format ip dhcp snooping log-invalid

Mode Interface Config

4.27.10.1 no ip dhcp snooping log-invalid

Use this command to disable the logging DHCP messages filtration by the DHCP Snooping application.

Format no ip dhcp snooping log-invalid

Mode Interface Config

4.27.11 ip dhcp snooping trust

Use this command to configure an interface or range of interfaces as trusted.

Default disabled

Format ip dhcp snooping trust

Mode Interface Config

4.27.11.1 no ip dhcp snooping trust

Use this command to configure the port as untrusted.

Format no ip dhcp snooping trust

Mode Interface Config

4.27.12 ip verify source

Use this command to configure the IPSG source ID attribute to filter the data traffic in the hardware. Source ID is the combination of IP address and MAC address. Normal command allows data traffic filtration based on the IP address. With the "port-security" option, the data traffic will be filtered based on the IP and MAC addresses.

This command can be used to configure a single interface or a range of interfaces.

Default the source ID is the IP address

Format ip verify source {port-security}

Mode Interface Config

4.27.12.1 no ip verify source

Use this command to disable the IPSG configuration in the hardware. You cannot disable port-security alone if it is configured.

Format no ip verify source

Mode Interface Config

4.27.13 show ip dhcp snooping

Use this command to display the DHCP Snooping global configurations and per port configurations.

Format show ip dhcp snooping

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Interface	The interface for which data is displayed.
Trusted	If it is enabled, DHCP snooping considers the port as trusted. The factory default is disabled.
Log Invalid Pkts	If it is enabled, DHCP snooping application logs invalid packets on the specified interface.

Example: The following shows example CLI display output for the command.
(switch) #show ip dhcp snooping

```
DHCP snooping is Disabled
DHCP snooping source MAC verification is enabled
DHCP snooping is enabled on the following VLANs:
11 - 30, 40
```

Interface	Trusted	Log Invalid Pkts
0/1	Yes	No
0/2	No	Yes
0/3	No	Yes
0/4	No	No
0/6	No	No

4.27.14 show ip dhcp snooping binding

Use this command to display the DHCP Snooping binding entries. To restrict the output, use the following options:

- Dynamic: Restrict the output based on DHCP snooping.
- Interface: Restrict the output based on a specific interface.
- Static: Restrict the output based on static entries.
- VLAN: Restrict the output based on VLAN.

Format show ip dhcp snooping binding [{static/dynamic}] [interface slot/port] [vlan id]

Mode

- Privileged EXEC
- User EXEC

Term	Definition
MAC Address	Displays the MAC address for the binding that was added. The MAC address is the key to the binding database.
IP Address	Displays the valid IP address for the binding rule.
VLAN	The VLAN for the binding rule.
Interface	The interface to add a binding into the DHCP snooping interface.
Type	Binding type; statically configured from the CLI or dynamically learned.
Lease (sec)	The remaining lease time for the entry.

Example: The following shows example CLI display output for the command.
(switch) #show ip dhcp snooping binding

Total number of bindings: 2

MAC Address	IP Address	VLAN	Interface	Type	Lease time (Secs)
00:02:B3:06:60:80	210.1.1.3	10	0/1		86400
00:0F:FE:00:13:04	210.1.1.4	10	0/1		86400

4.27.15 show ip dhcp snooping database

Use this command to display the DHCP Snooping configuration related to the database persistency.

Format show ip dhcp snooping database

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Agent URL	Bindings database agent URL.
Write Delay	The maximum write time to write the database into local or remote.

Example: The following shows example CLI display output for the command.
(switch) #show ip dhcp snooping database

agent url: /10.131.13.79:/sai1.txt

write-delay: 5000

4.27.16 show ip dhcp snooping interfaces

Use this command to show the DHCP Snooping status of the interfaces.

Format show ip dhcp snooping interfaces

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.
(switch) #show ip dhcp snooping interfaces

Interface	Trust State	Rate Limit (pps)	Burst Interval (seconds)
1/g1	No	15	1

```

1/g2          No          15          1
1/g3          No          15          1

```

```
(switch) #show ip dhcp snooping interfaces ethernet 1/g15
```

```

Interface      Trust State      Rate Limit      Burst Interval
-----      -
1/g15          Yes             15              1

```

4.27.17 show ip dhcp snooping statistics

Use this command to list statistics for DHCP Snooping security violations on untrusted ports.

Format show ip dhcp snooping statistics

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Interface	The IP address of the interface in <i>sLot/port</i> format.
MAC Verify Failures	Represents the number of DHCP messages that were filtered on an untrusted interface because of source MAC address and client HW address mismatch.
Client Ifc Mismatch	Represents the number of DHCP release and Deny messages received on the different ports than learned previously.
DHCP Server Msgs Rec'd	Represents the number of DHCP server messages received on Untrusted ports.

Example: The following shows example CLI display output for the command.

```
(switch) #show ip dhcp snooping statistics
```

```

Interface      MAC Verify      Client Ifc      DHCP Server
Failures      Mismatch      Msgs Rec'd
-----
0/2            0             0              0
0/3            0             0              0
0/4            0             0              0
0/5            0             0              0
0/6            0             0              0
0/7            0             0              0
0/8            0             0              0
0/9            0             0              0
0/10           0             0              0
0/11           0             0              0
0/12           0             0              0
0/13           0             0              0
0/14           0             0              0
0/15           0             0              0
0/16           0             0              0
0/17           0             0              0
0/18           0             0              0
0/19           0             0              0
0/20           0             0              0

```

4.27.18 clear ip dhcp snooping binding

Use this command to clear all DHCP Snooping bindings on all interfaces or on a specific interface.

Format clear ip dhcp snooping binding [interface *slot/port*]

- Mode**
- Privileged EXEC
 - User EXEC

4.27.19 clear ip dhcp snooping statistics

Use this command to clear all DHCP Snooping statistics.

Format clear ip dhcp snooping statistics

- Mode**
- Privileged EXEC
 - User EXEC

4.27.20 show ip verify source

Use this command to display the IPSG configurations on all ports.

Format show ip verify source

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	Interface address in <i>slot/port</i> format.
Filter Type	Is one of two values: • ip-mac: User has configured MAC address filtering on this interface. • ip: Only IP address filtering on this interface.
IP Address	IP address of the interface
MAC Address	If MAC address filtering is not configured on the interface, the MAC Address field is empty. If port security is disabled on the interface, then the MAC Address field displays "permit-all."
VLAN	The VLAN for the binding rule.

Example: The following shows example CLI display output for the command.
(switch) #show ip verify source

Interface	Filter Type	IP Address	MAC Address	Vlan
0/1	ip-mac	210.1.1.3	00:02:B3:06:60:80	10
0/1	ip-mac	210.1.1.4	00:0F:FE:00:13:04	10

4.27.21 show ip verify interface

Use this command to display the IPSG filter type for a specific interface.

Format show ip verify interface *slot/port*

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	Interface address in <i>sSlot/port</i> format.
Filter Type	Is one of two values: • ip-mac: User has configured MAC address filtering on this interface. • ip: Only IP address filtering on this interface.

4.27.22 show ip source binding

Use this command to display the IPSG bindings.

Format show ip source binding [{dhcp-snooping|static}] [interface *slot/port*] [vlan id]

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
MAC Address	The MAC address for the entry that is added.
IP Address	The IP address of the entry that is added.
Type	Entry type; statically configured from CLI or dynamically learned from DHCP Snooping.
VLAN	VLAN for the entry.
Interface	IP address of the interface in <i>sSlot/port</i> format.

Example: The following shows example CLI display output for the command.

(switch) #show ip source binding

MAC Address	IP Address	Type	Vlan	Interface
00:00:00:00:00:08	1.2.3.4	dhcp-snooping	2	0/1
00:00:00:00:00:09	1.2.3.4	dhcp-snooping	3	0/1
00:00:00:00:00:0A	1.2.3.4	dhcp-snooping	4	0/1

4.28 Dynamic ARP Inspection Commands

Dynamic ARP Inspection (DAI) is a security feature that rejects invalid and malicious ARP packets. DAI prevents a class of man-in-the-middle attacks, where an unfriendly station intercepts traffic for other stations by poisoning the ARP caches of its unsuspecting neighbors. The miscreant sends ARP requests or responses mapping another station's IP address to its own MAC address.

DAI relies on DHCP snooping. DHCP snooping listens to DHCP message exchanges and builds a binding database of valid {MAC address, IP address, VLAN, and interface} tuples.

When DAI is enabled, the switch drops ARP packets whose sender MAC address and sender IP address do not match an entry in the DHCP snooping bindings database. You can optionally configure additional ARP packet validation.

4.28.1 ip arp inspection vlan

Use this command to enable Dynamic ARP Inspection on a list of comma-separated VLAN ranges.

Default disabled
Format ip arp inspection vlan vlan-list
Mode Global Config

4.28.1.1 no ip arp inspection vlan

Use this command to disable Dynamic ARP Inspection on a list of comma-separated VLAN ranges.

Format no ip arp inspection vlan vlan-list
Mode Global Config

4.28.2 ip arp inspection validate

Use this command to enable additional validation checks like source-mac validation, destination-mac validation, and ip address validation on the received ARP packets. Each command overrides the configuration of the previous command. For example, if a command enables src-mac and dst-mac validations, and a second command enables IP validation only, the src-mac and dst-mac validations are disabled as a result of the second command.

Default disabled
Format ip arp inspection validate {[src-mac] [dst-mac] [ip]}
Mode Global Config

4.28.2.1 no ip arp inspection validate

Use this command to disable the additional validation checks on the received ARP packets.

Format no ip arp inspection validate {[src-mac] [dst-mac] [ip]}
Mode Global Config

4.28.3 ip arp inspection vlan logging

Use this command to enable logging of invalid ARP packets on a list of comma-separated VLAN ranges.

Default enabled
Format ip arp inspection vlan vlan-list logging
Mode Global Config

4.28.3.1 no ip arp inspection vlan logging

Use this command to disable logging of invalid ARP packets on a list of comma-separated VLAN ranges.

Format no ip arp inspection vlan vlan-list logging
Mode Global Config

4.28.4 ip arp inspection trust

Use this command to configure an interface or range of interfaces as trusted for Dynamic ARP Inspection.

Default	enabled
Format	ip arp inspection trust
Mode	Interface Config

4.28.4.1 no ip arp inspection trust

Use this command to configure an interface as untrusted for Dynamic ARP Inspection.

Format	no ip arp inspection trust
Mode	Interface Config

4.28.5 ip arp inspection limit

Use this command to configure the rate limit and burst interval values for an interface or range of interfaces. Configuring `none` for the limit means the interface is not rate limited for Dynamic ARP Inspections. The maximum pps value shown in the range for the rate option might be more than the hardware allowable limit. Therefore you need to understand the switch performance and configure the maximum rate pps accordingly.

**Note...**

The user interface will accept a rate limit for a trusted interface, but the limit will not be enforced unless the interface is configured to be untrusted.

Default	15 pps for rate and 1 second for burst-interval
Format	ip arp inspection limit {rate pps [burst interval seconds] none}
Mode	Interface Config

4.28.5.1 no ip arp inspection limit

Use this command to set the rate limit and burst interval values for an interface to the default values of 15 pps and 1 second, respectively.

Format	no ip arp inspection limit
Mode	Interface Config

4.28.6 ip arp inspection filter

Use this command to configure the ARP ACL used to filter invalid ARP packets on a list of comma-separated VLAN ranges. If the static keyword is given, packets that do not match a permit statement are dropped without consulting the DHCP snooping bindings.

Default	No ARP ACL is configured on a VLAN
Format	ip arp inspection filter acl-name vlan vlan-list [static]
Mode	Global Config

4.28.6.1 no ip arp inspection filter

Use this command to unconfigure the ARP ACL used to filter invalid ARP packets on a list of comma-separated VLAN ranges.

Format no ip arp inspection filter acl-name vlan vlan-list [static]

Mode Global Config

4.28.7 arp access-list

Use this command to create an ARP ACL.

Format arp access-list acl-name

Mode Global Config

4.28.7.1 no arp access-list

Use this command to delete a configured ARP ACL.

Format no arp access-list acl-name

Mode Global Config

4.28.8 permit ip host mac host

Use this command to configure a rule for a valid IP address and MAC address combination used in ARP packet validation.

Format permit ip host sender-ip mac host sender-mac

Mode ARP Access-list Config

4.28.8.1 no permit ip host mac host

Use this command to delete a rule for a valid IP and MAC combination.

Format no permit ip host sender-ip mac host sender-mac

Mode ARP Access-list Config

4.28.9 show ip arp inspection

Use this command to display the Dynamic ARP Inspection global configuration and configuration on all the VLANs. With the *vlan-list* argument (i.e. comma separated VLAN ranges), the command displays the global configuration and configuration on all the VLANs in the given VLAN list. The global configuration includes the **source mac validation**, **destination mac validation** and **invalid IP validation** information.

Format show ip arp inspection [vlan vlan-list]

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Source MAC Validation	Displays whether Source MAC Validation of ARP frame is enabled or disabled.
Destination MAC Validation	Displays whether Destination MAC Validation is enabled or disabled.
IP Address Validation	Displays whether IP Address Validation is enabled or disabled.
VLAN	The VLAN ID for each displayed row.
Configuration	Displays whether DAI is enabled or disabled on the VLAN.
Log Invalid	Displays whether logging of invalid ARP packets is enabled on the VLAN.
ACL Name	The ARP ACL Name, if configured on the VLAN.
Static Flag	If the ARP ACL is configured static on the VLAN.

Example: The following shows example CLI display output for the command.
(switch) #show ip arp inspection vlan 10-12

```
Source Mac Validation      : Disabled
Destination Mac Validation : Disabled
IP Address Validation      : Disabled
```

Vlan	Configuration	Log Invalid	ACL Name	Static flag
----	-----	-----	-----	-----
10	Enabled	Enabled	H2	Enabled
11	Disabled	Enabled		
12	Enabled	Disabled		

4.28.10 show ip arp inspection statistics

Use this command to display the statistics of the ARP packets processed by Dynamic ARP Inspection. Give the vlan-list argument and the command displays the statistics on all DAI-enabled VLANs in that list. Give the single vlan argument and the command displays the statistics on that VLAN. If no argument is included, the command lists a summary of the forwarded and dropped ARP packets.

Format show ip arp inspection statistics [vlan vlan-list]

Mode

- Privileged EXEC
- User EXEC

Term	Definition
VLAN	The VLAN ID for each displayed row.
Forwarded	The total number of valid ARP packets forwarded in this VLAN.
Dropped	The total number of not valid ARP packets dropped in this VLAN.
DHCP Drops	The number of packets dropped due to DHCP snooping binding database match failure.
ACL Drops	The number of packets dropped due to ARP ACL rule match failure.
DHCP Permits	The number of packets permitted due to DHCP snooping binding database match.
ACL Permits	The number of packets permitted due to ARP ACL rule match.
Bad Src MAC	The number of packets dropped due to Source MAC validation failure.
Bad Dest MAC	The number of packets dropped due to Destination MAC validation failure.
Invalid IP	The number of packets dropped due to invalid IP checks.

Example: The following shows example CLI display output for the command **show ip arp inspection statistics** which lists the summary of forwarded and dropped ARP packets on all DAI-enabled VLANs.

VLAN	Forwarded	Dropped
10	90	14
20	10	3

Example: The following shows example CLI display output for the command **show ip arp inspection statistics vlan vlan-list**.

VLAN	DHCP Drops	ACL Drops	DHCP Permits	ACL Permits	Bad Src MAC	Bad Dest MAC	Invalid IP
10	11	1	65	25	1	1	0
20	1	0	8	2	0	1	1

4.28.11 clear ip arp inspection statistics

Use this command to reset the statistics for Dynamic ARP Inspection on all VLANs.

Default none
Format clear ip arp inspection statistics
Mode Privileged EXEC

4.28.12 show ip arp inspection interfaces

Use this command to display the Dynamic ARP Inspection configuration on all the DAI-enabled interfaces. An interface is said to be enabled for DAI if at least one VLAN, that the interface is a member of, is enabled for DAI. Given a *slot/port* interface argument, the command displays the values for that interface whether the interface is enabled for DAI or not.

Format show ip arp inspection interfaces [*slot/port*]
Mode

- Privileged EXEC
- User EXEC

Term	Definition
Interface	The interface ID for each displayed row.
Trust State	Whether the interface is trusted or untrusted for DAI.
Rate Limit	The configured rate limit value in packets per second.
Burst Interval	The configured burst interval value in seconds.

Example: The following shows example CLI display output for the command.
 (switch) #show ip arp inspection interfaces

Interface	Trust State	Rate Limit (pps)	Burst Interval (seconds)
0/1	Untrusted	15	1
0/2	Untrusted	10	10

4.28.13 show arp access-list

Use this command to display the configured ARP ACLs with the rules. Giving an ARP ACL name as the argument will display only the rules in that ARP ACL.

Format show arp access-list [acl-name]

- Mode**
- Privileged EXEC
 - User EXEC

Example: The following shows example CLI display output for the command.
(switch) #show arp access-list

```
ARP access list H2
  permit ip host 1.1.1.1 mac host 00:01:02:03:04:05
  permit ip host 1.1.1.2 mac host 00:03:04:05:06:07
ARP access list H3
ARP access list H4
  permit ip host 2.1.1.2 mac host 00:03:04:05:06:08
```

4.29 IGMP Snooping Configuration Commands

This section describes the commands you use to configure IGMP snooping. FASTPATH software supports IGMP Versions 1, 2, and 3. The IGMP snooping feature can help conserve bandwidth because it allows the switch to forward IP multicast traffic only to connected hosts that request multicast traffic. IGMPv3 adds source filtering capabilities to IGMP versions 1 and 2.

**Note...**

This note clarifies the prioritization of MGMT Snooping Configurations. Many of the IGMP/MLD Snooping commands are available both in the Interface and VLAN modes. Operationally the system chooses or prefers the VLAN configured values over the Interface configured values for most configurations when the interface participates in the VLAN.

4.29.1 set igmp

This command enables IGMP Snooping on the system (Global Config Mode), an interface, or a range of interfaces. This command also enables IGMP snooping on a particular VLAN (VLAN Config Mode) and can enable IGMP snooping on all interfaces participating in a VLAN.

If an interface has IGMP Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), IGMP Snooping functionality is disabled on that interface. IGMP Snooping functionality is re-enabled if you disable routing or remove port-channel (LAG) membership from an interface that has IGMP Snooping enabled.

The IGMP application supports the following activities:

- Validation of the IP header checksum (as well as the IGMP header checksum) and discarding of the frame upon checksum error.
- Maintenance of the forwarding table entries based on the MAC address versus the IP address.
- Flooding of unregistered multicast data packets to all ports in the VLAN.

Default	disabled
Format	set igmp [vlan_id]
Mode	• Global Config • Interface Config • VLAN Config

4.29.1.1 no set igmp

This command disables IGMP Snooping on the system, an interface, a range of interfaces, or a VLAN.

Format	no set igmp [vlan_id]
Mode	• Global Config • Interface Config • VLAN Config

4.29.2 set igmp header-validation

This command enables header validation for IGMP messages.

When header validation is enabled, IGMP Snooping checks:

- The time-to-live(TTL) field in the IGMP header and drops packets where TTL is not equal to 1. The TTL field should always be set to 1 in the headers of IGMP reports and queries.
- The presence of the router alert option (9404) in the IP packet header of the IGMPv2 message and drops packets that do not include this option.
- The presence of the router alert option (9404) and ToS Byte = 0xC0 (Internet Control) in the IP packet header of IGMPv3 message and drops packets that do not include these options.

Default	enabled
Format	set igmp header-validation
Mode	Global Config

4.29.2.1 no set igmp header-validation

This command disables header validation for IGMP messages.

Format	no set igmp header-validation
Mode	Global Config

4.29.3 set igmp interfacemode

This command enables IGMP Snooping on all interfaces. If an interface has IGMP Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), IGMP Snooping functionality is disabled on that interface. IGMP Snooping functionality is re-enabled if you disable routing or remove port-channel (LAG) membership from an interface that has IGMP Snooping enabled.

Default	disabled
Format	set igmp interfacemode
Mode	Global Config

4.29.3.1 no set igmp interfacemode

This command disables IGMP Snooping on all interfaces.

Format no set igmp interfacemode

Mode Global Config

4.29.4 set igmp fast-leave

This command enables or disables IGMP Snooping fast-leave admin mode on a selected interface, a range of interfaces, or a VLAN. Enabling fast-leave allows the switch to immediately remove the layer 2 LAN interface from its forwarding table entry upon receiving an IGMP leave message for that multicast group without first sending out MAC-based general queries to the interface.

You should enable fast-leave admin mode only on VLANs where only one host is connected to each layer 2 LAN port. This prevents the inadvertent dropping of the other hosts that were connected to the same layer 2 LAN port but were still interested in receiving multicast traffic directed to that group. Also, fast-leave processing is supported only with IGMP version 2 hosts.

Default disabled

Format set igmp fast-leave [*vlan_id*]

Mode Interface Config
Interface Range
VLAN Config

4.29.4.1 no set igmp fast-leave

This command disables IGMP Snooping fast-leave admin mode on a selected interface.

Format no set igmp fast-leave [*vlan_id*]

Mode Interface Config
Interface Range
VLAN Config

4.29.5 set igmp groupmembership-interval

This command sets the IGMP Group Membership Interval time on a VLAN, one interface, a range of interfaces, or all interfaces. The Group Membership Interval time is the amount of time in seconds that a switch waits for a report from a particular group on a particular interface before deleting the interface from the entry. This value must be greater than the IGMPv3 Maximum Response time value. The range is 2 to 3600 seconds.

Default 260 seconds

Format set igmp groupmembership-interval [*vlan_id*] 2-3600

Mode

- Interface Config
- Global Config
- VLAN Config

4.29.5.1 no set igmp groupmembership-interval

This command sets the IGMPv3 Group Membership Interval time to the default value.

Format no set igmp groupmembership-interval [vlan_id]

Mode

- Interface Config
- Global Config
- VLAN Config

4.29.6 set igmp maxresponse

This command sets the IGMP Maximum Response time for the system, on a particular interface or VLAN, or on a range of interfaces. The Maximum Response time is the amount of time in seconds that a switch will wait after sending a query on an interface because it did not receive a report for a particular group in that interface. This value must be less than the IGMP Query Interval time value. The range is 1 to 25 seconds.

Default 10 seconds

Format set igmp maxresponse [vlan_id] 1-25

Mode

- Global Config
- Interface Config
- VLAN Config

4.29.6.1 no set igmp maxresponse

This command sets the max response time (on the interface or VLAN) to the default value.

Format no set igmp maxresponse [vlan_id]

Mode

- Global Config
- Interface Config
- VLAN Config

4.29.7 set igmp mcrtrexpiretime

This command sets the Multicast Router Present Expiration time. The time is set for the system, on a particular interface or VLAN, or on a range of interfaces. This is the amount of time in seconds that a switch waits for a query to be received on an interface before the interface is removed from the list of interfaces with multicast routers attached. The range is 0 to 3600 seconds. A value of 0 indicates an infinite time-out, i.e. no expiration.

Default 0

Format set igmp mcrtrexpiretime [vlan_id] 0-3600

Mode

- Global Config
- Interface Config
- VLAN Config

4.29.7.1 no set igmp mcrtrexpiretime

This command sets the Multicast Router Present Expiration time to 0. The time is set for the system, on a particular interface or a VLAN.

Format no set igmp mcrtrexpiretime [vlan_id]

Mode

- Global Config
- Interface Config
- VLAN Config

Format no set igmp mcrtrexpiretime *vlan_id*
Mode VLAN Config

4.29.8 set igmp mrouter

This command configures the VLAN ID (*vlan_id*) that has the multicast router mode enabled.

Format set igmp mrouter *vlan_id*
Mode Interface Config

4.29.8.1 no set igmp mrouter

This command disables multicast router mode for a particular VLAN ID (*vlan_id*).

Format no set igmp mrouter *vlan_id*
Mode Interface Config

4.29.9 set igmp mrouter interface

This command configures the interface or range of interfaces as a multicast router interface. When configured as a multicast router interface, the interface is treated as a multicast router interface in all VLANs.

Default disabled
Format set igmp mrouter interface
Mode Interface Config

4.29.9.1 no set igmp mrouter interface

This command disables the status of the interface as a statically configured multicast router interface.

Format no set igmp mrouter interface
Mode Interface Config

4.29.10 set igmp report-suppression

Use this command to suppress the IGMP reports on a given VLAN ID. In order to optimize the number of reports traversing the network with no added benefits, a Report Suppression mechanism is implemented. When more than one client responds to an MGMT query for the same Multicast Group address within the max-response-time, only the first response is forwarded to the query and others are suppressed at the switch.

Default Disabled
Format set igmp report-suppression *vlan-id*
Mode VLAN Config

Parameter	Description
vlan-id	A valid VLAN ID. Range is 1 to 4093.

Example: The following shows an example of the command.

```
(FASTPATH Switching) #vlan database
(FASTPATH Switching) (Vlan)#set igmp report-suppression ?
```

```
<1-4093>          Enter VLAN ID.
```

```
(FASTPATH Switching) (Vlan)#set igmp report-suppression 1
```

```
4.29.10.1      no set igmp report-suppression
```

Use this command to return the system to the default.

Format no set igmp report-suppression

Mode VLAN Config

```
4.29.11      show igmpsnooping
```

This command displays IGMP Snooping information for a given *slot/port* or VLAN. Configured information is displayed whether or not IGMP Snooping is enabled.

Format show igmpsnooping [*slot/port* | *vlan_id*]

Mode Privileged EXEC

When the optional arguments *slot/port* or *vlan_id* are not used, the command displays the following information:

Term	Definition
Admin Mode	Indicates whether or not IGMP Snooping is active on the switch.
Multicast Control Frame Count	The number of multicast control frames that are processed by the CPU.
Interface Enabled for IGMP Snooping	The list of interfaces on which IGMP Snooping is enabled.
VLANS Enabled for IGMP Snooping	The list of VLANS on which IGMP Snooping is enabled.

When you specify the *slot/port* values, the following information appears:

Term	Definition
IGMP Snooping Admin Mode	Indicates whether IGMP Snooping is active on the interface.
Fast Leave Mode	Indicates whether IGMP Snooping Fast-leave is active on the interface.
Group Membership Interval	The amount of time in seconds that a switch will wait for a report from a particular group on a particular interface before deleting the interface from the entry. This value may be configured.
Maximum Response Time	The amount of time the switch waits after it sends a query on an interface because it did not receive a report for a particular group on that interface. This value may be configured.
Multicast Router Expiry Time	The amount of time to wait before removing an interface from the list of interfaces with multicast routers attached. The interface is removed if a query is not received. This value may be configured.

When you specify a value for *vlan_id*, the following information appears:

Term	Definition
VLAN ID	The VLAN ID.
IGMP Snooping Admin Mode	Indicates whether IGMP Snooping is active on the VLAN.
Fast Leave Mode	Indicates whether IGMP Snooping Fast-leave is active on the VLAN.
Group Membership Interval (secs)	The amount of time in seconds that a switch will wait for a report from a particular group on a particular interface, which is participating in the VLAN, before deleting the interface from the entry. This value may be configured.
Maximum Response Time (secs)	The amount of time the switch waits after it sends a query on an interface, participating in the VLAN, because it did not receive a report for a particular group on that interface. This value may be configured.
Multicast Router Expiry Time (secs)	The amount of time to wait before removing an interface that is participating in the VLAN from the list of interfaces with multicast routers attached. The interface is removed if a query is not received. This value may be configured.
Report Suppression Mode	Indicates whether IGMP reports (set by the command "set igmp report-suppression" on page 472") in enabled or not.

Example: The following shows example CLI display output for the command.

(FASTPATH Switching) #show igmpsnooping 1

```
VLAN ID..... 1
IGMP Snooping Admin Mode..... Disabled
Fast Leave Mode..... Disabled
Group Membership Interval (secs)..... 260
Max Response Time (secs)..... 10
Multicast Router Expiry Time (secs)..... 0
Report Suppression Mode..... Enabled
```

4.29.12 show igmpsnooping mrouter interface

This command displays information about statically configured ports.

Format show igmpsnooping mrouter interface *slot/port*
Mode Privileged EXEC

Term	Definition
Interface	The port on which multicast router information is being displayed.
Multicast Router Attached	Indicates whether multicast router is statically enabled on the interface.
VLAN ID	The list of VLANs of which the interface is a member.

4.29.13 show igmpsnooping mrouter vlan

This command displays information about statically configured ports.

Format show igmpsnooping mrouter vlan *slot/port*
Mode Privileged EXEC

Term	Definition
Interface	The port on which multicast router information is being displayed.
VLAN ID	The list of VLANs of which the interface is a member.

4.29.14 show igmpsnooping ssm

This command displays information about Source Specific Multicasting (SSM) by entry, group, or statistics. SSM delivers multicast packets to receivers that originated from a source address specified by the receiver. SSM is only available with IGMPv3 and MLDv2.

Format show igmpsnooping ssm {entries | groups | stats}

Mode Privileged EXEC

4.29.15 show mac-address-table igmpsnooping

This command displays the IGMP Snooping entries in the MFDB table.

Format show mac-address-table igmpsnooping

Mode Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC address is learned.
MAC Address	A multicast MAC address for which the switch has forwarding or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Type	The type of the entry, which is either static (added by the user) or dynamic (added to the table as a result of a learning process or protocol).
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

4.29.16 show igmpsnooping proxy-report

This command displays the IGMP proxy-report configuration. The setting can be displayed for a specific (unit/slot/port) or all physical and port-channel interfaces. The displayed fields are

- the setting of proxy-report feature (enable/disable)
- the VLAN awareness for forwarding IGMP messages (only if proxy-report feature is enabled)
- For information: If unregistered multicast messages are flooded at this port or not (see feature

Format show igmpsnooping proxy-report {all | <slot/port>}

Mode Privileged EXEC

4.30 IGMP Snooping Querier Commands

IGMP Snooping requires that one central switch or router periodically query all end-devices on the network to announce their multicast memberships. This central device is the “IGMP Querier”. The IGMP query responses, known as IGMP reports, keep the switch updated with the current multicast group membership on a port-by-port basis. If the switch does not receive updated membership information in a timely fashion, it will stop forwarding multicasts to the port where the end device is located.

This section describes commands used to configure and display information on IGMP Snooping Queriers on the network and, separately, on VLANs.



Note...

This note clarifies the prioritization of MGMT Snooping Configurations. Many of the IGMP/MLD Snooping commands are available both in the Interface and VLAN modes. Operationally the system chooses or prefers the VLAN configured values over the Interface configured values for most configurations when the interface participates in the VLAN.

4.30.1 set igmp querier

Use this command to enable IGMP Snooping Querier on the system, using Global Config mode, or on a VLAN. Using this command, you can specify the IP Address that the Snooping Querier switch should use as the source address while generating periodic queries.

If a VLAN has IGMP Snooping Querier enabled and IGMP Snooping is operationally disabled on it, IGMP Snooping Querier functionality is disabled on that VLAN. IGMP Snooping functionality is re-enabled if IGMP Snooping is operational on the VLAN.



Note...

The Querier IP Address assigned for a VLAN takes preference over global configuration.

The IGMP Snooping Querier application supports sending periodic general queries on the VLAN to solicit membership reports.

Default	disabled
Format	<code>set igmp querier [vlan-id] [address ipv4_address]</code>
Mode	• Global Config • VLAN Mode

4.30.1.1 no set igmp querier

Use this command to disable IGMP Snooping Querier on the system. Use the optional `address` parameter to reset the querier address to 0.0.0.0.

Format	<code>no set igmp querier [vlan-id] [address]</code>
Mode	• Global Config • VLAN Mode

4.30.2 set igmp querier query-interval

Use this command to set the IGMP Querier Query Interval time. It is the amount of time in seconds that the switch waits before sending another general query.

Default disabled
Format set igmp querier query-interval 1-1800
Mode Global Config

4.30.2.1 no set igmp querier query-interval

Use this command to set the IGMP Querier Query Interval time to its default value.

Format no set igmp querier query-interval
Mode Global Config

4.30.3 set igmp querier timer expiry

Use this command to set the IGMP Querier timer expiration period. It is the time period that the switch remains in Non-Querier mode once it has discovered that there is a Multicast Querier in the network.

Default 60 seconds
Format set igmp querier timer expiry 60-300
Mode Global Config

4.30.3.1 no set igmp querier timer expiry

Use this command to set the IGMP Querier timer expiration period to its default value.

Format no set igmp querier timer expiry
Mode Global Config

4.30.4 set igmp querier version

Use this command to set the IGMP version of the query that the snooping switch is going to send periodically.

Default 1
Format set igmp querier version 1-2
Mode Global Config

4.30.4.1 no set igmp querier version

Use this command to set the IGMP Querier version to its default value.

Format no set igmp querier version
Mode Global Config

4.30.5 set igmp querier election participate

Use this command to enable the Snooping Querier to participate in the Querier Election process when it discovers the presence of another Querier in the VLAN. When this mode is enabled, if the Snooping Querier finds that the other Querier's source address is better (less) than the Snooping Querier's address, it stops sending periodic queries. If the Snooping Querier wins the election, then it will continue sending periodic queries.

Default disabled
Format set igmp querier election participate
Mode VLAN Config

4.30.5.1 no set igmp querier election participate

Use this command to set the Snooping Querier not to participate in querier election but go into non-querier mode as soon as it discovers the presence of another querier in the same VLAN.

Format no set igmp querier election participate
Mode VLAN Config

4.30.6 show igmpsnooping querier

Use this command to display IGMP Snooping Querier information. Configured information is displayed whether or not IGMP Snooping Querier is enabled.

Format show igmpsnooping querier [{detail | vlan *vlanid*}]
Mode Privileged EXEC

When the optional argument *vlanid* is not used, the command displays the following information.

Field	Description
Admin Mode	Indicates whether or not IGMP Snooping Querier is active on the switch.
Admin Version	The version of IGMP that will be used while sending out the queries.
Querier Address	The IP Address which will be used in the IPv4 header while sending out IGMP queries. It can be configured using the appropriate command.
Query Interval	The amount of time in seconds that a Snooping Querier waits before sending out the periodic general query.
Querier Timeout	The amount of time to wait in the Non-Querier operational state before moving to a Querier state.

When you specify a value for *vlanid*, the following additional information appears.

Field	Description
VLAN Admin Mode	Indicates whether iGMP Snooping Querier is active on the VLAN.
VLAN Operational State	Indicates whether IGMP Snooping Querier is in "Querier" or "Non-Querier" state. When the switch is in <i>Querier</i> state, it will send out periodic general queries. When in <i>Non-Querier</i> state, it will wait for moving to Querier state and does not send out any queries.
VLAN Operational Max Response Time	Indicates the time to wait before removing a Leave from a host upon receiving a Leave request. This value is calculated dynamically from the Queries received from the network. If the Snooping Switch is in Querier state, then it is equal to the configured value.
Querier Election Participation	Indicates whether the IGMP Snooping Querier participates in querier election if it discovers the presence of a querier in the VLAN.
Querier VLAN Address	The IP address will be used in the IPv4 header while sending out IGMP queries on this VLAN. It can be configured using the appropriate command.
Operational Version	The version of IPv4 will be used while sending out IGMP queries on this VLAN.
Last Querier Address	Indicates the IP address of the most recent Querier from which a Query was received.

Field	Description
Last Querier Version	Indicates the IGMP version of the most recent Querier from which a Query was received on this VLAN.

When the optional argument `detail` is used, the command shows the global information and the information for all Querier-enabled VLANs.

4.31 MLD Snooping Commands

This section describes commands used for MLD Snooping. In IPv4, Layer 2 switches can use IGMP Snooping to limit the flooding of multicast traffic by dynamically configuring Layer 2 interfaces so that multicast traffic is forwarded only to those interfaces associated with IP multicast addresses. In IPv6, MLD Snooping performs a similar function. With MLD Snooping, IPv6 multicast data is selectively forwarded to a list of ports that want to receive the data, instead of being flooded to all ports in a VLAN. This list is constructed by snooping IPv6 multicast control packets.



Note...

This note clarifies the prioritization of MGLD Snooping Configurations. Many of the IGMP/MLD Snooping commands are available both in the Interface and VLAN modes. Operationally the system chooses or prefers the VLAN configured values over the Interface configured values for most configurations when the interface participates in the VLAN.

4.31.1 set mld

This command enables MLD Snooping on the system (Global Config Mode) or an Interface (Interface Config Mode). This command also enables MLD Snooping on a particular VLAN and enables MLD Snooping on all interfaces participating in a VLAN.

If an interface has MLD Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), MLD Snooping functionality is disabled on that interface. MLD Snooping functionality is re-enabled if you disable routing or remove port channel (LAG) membership from an interface that has MLD Snooping enabled.

MLD Snooping supports the following activities:

- Validation of address version, payload length consistencies and discarding of the frame upon error.
- Maintenance of the forwarding table entries based on the MAC address versus the IPv6 address.
- Flooding of unregistered multicast data packets to all ports in the VLAN.

Default	disabled
Format	<code>set mld <i>vlanid</i></code>
Mode	• Global Config • Interface Config • VLAN Mode

4.31.1.1 no set mld

Use this command to disable MLD Snooping on the system.

Format	<code>set mld <i>vlanid</i></code>
Mode	• Global Config • Interface Config • VLAN Mode

4.31.2 `set mld interfacemode`

Use this command to enable MLD Snooping on all interfaces. If an interface has MLD Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), MLD Snooping functionality is disabled on that interface. MLD Snooping functionality is re-enabled if you disable routing or remove port-channel (LAG) membership from an interface that has MLD Snooping enabled.

Default	disabled
Format	<code>set mld interfacemode</code>
Mode	Global Config

4.31.2.1 `no set mld interfacemode`

Use this command to disable MLD Snooping on all interfaces.

Format	<code>no set mld interfacemode</code>
Mode	Global Config

4.31.3 `set mld fast-leave`

Use this command to enable MLD Snooping fast-leave admin mode on a selected interface or VLAN. Enabling fast-leave allows the switch to immediately remove the Layer 2 LAN interface from its forwarding table entry upon receiving an MLD done message for that multicast group without first sending out MAC-based general queries to the interface.



Note...

You should enable fast-leave admin mode only on VLANs where only one host is connected to each Layer 2 LAN port. This prevents the inadvertent dropping of the other hosts that were connected to the same layer 2 LAN port but were still interested in receiving multicast traffic directed to that group.



Note...

Fast-leave processing is supported only with MLD version 1 hosts.

Default	disabled
Format	<code>set mld fast-leave <i>vlanid</i></code>
Mode	• Interface Config • VLAN Mode

4.31.3.1 no set mld fast-leave

Use this command to disable MLD Snooping fast-leave admin mode on a selected interface.

Format no set mld fast-leave *vlanid*

- Mode**
- Interface Config
 - VLAN Mode

4.31.4 set mld groupmembership-interval

Use this command to set the MLD Group Membership Interval time on a VLAN, one interface or all interfaces. The Group Membership Interval time is the amount of time in seconds that a switch waits for a report from a particular group on a particular interface before deleting the interface from the entry. This value must be greater than the MLDv2 Maximum Response time value. The range is 2 to 3600 seconds.

Default 260 seconds

Format set mld groupmembership-interval *vlanid 2-3600*

- Mode**
- Interface Config
 - Global Config
 - VLAN Mode

4.31.4.1 no set groupmembership-interval

Use this command to set the MLDv2 Group Membership Interval time to the default value.

Format no set mld groupmembership-interval

- Mode**
- Interface Config
 - Global Config
 - VLAN Mode

4.31.5 set mld maxresponse

Use this command to set the MLD Maximum Response time for the system, on a particular interface or VLAN. The Maximum Response time is the amount of time in seconds that a switch will wait after sending a query on an interface because it did not receive a report for a particular group in that interface. This value must be less than the MLD Query Interval time value. The range is 1 to 65 seconds.

Default 10 seconds

Format set mld maxresponse *1-65*

- Mode**
- Global Config
 - Interface Config
 - VLAN Mode

4.31.5.1 no set mld maxresponse

Use this command to set the max response time (on the interface or VLAN) to the default value.

Format no set mld maxresponse

Mode

- Global Config
- Interface Config
- VLAN Mode

4.31.6 set mld mcrtexpiretime

Use this command to set the Multicast Router Present Expiration time. The time is set for the system, on a particular interface or VLAN. This is the amount of time in seconds that a switch waits for a query to be received on an interface before the interface is removed from the list of interfaces with multicast routers attached. The range is 0 to 3600 seconds. A value of 0 indicates an infinite timeout, i.e. no expiration.

Default 0

Format set mld mcrtexpiretime *vlanid 0-3600*

Mode

- Global Config
- Interface Config

4.31.6.1 no set mld mcrtexpiretime

Use this command to set the Multicast Router Present Expiration time to 0. The time is set for the system, on a particular interface or a VLAN.

Format no set mld mcrtexpiretime *vlanid*

Mode

- Global Config
- Interface Config

4.31.7 set mld mrouter

Use this command to configure the VLAN ID for the VLAN that has the multicast router attached mode enabled.

Format set mld mrouter *vlanid*

Mode Interface Config

4.31.7.1 no set mld mrouter

Use this command to disable multicast router attached mode for a VLAN with a particular VLAN ID.

Format no set mld mrouter *vlanid*

Mode Interface Config

4.31.8 set mld mrouter interface

Use this command to configure the interface as a multicast router-attached interface. When configured as a multicast router interface, the interface is treated as a multicast router-attached interface in all VLANs.

Default disabled

Format set mld mrouter interface

Mode Interface Config

4.31.8.1 no set mld mrouter interface

Use this command to disable the status of the interface as a statically configured multicast router-attached interface.

Format no set mld mrouter interface

Mode Interface Config

4.31.9 show mld Snooping

Use this command to display MLD Snooping information. Configured information is displayed whether or not MLD Snooping is enabled.

Format show mld Snooping [*slot/port* / *vLanid*]

Mode Privileged EXEC

When the optional arguments *slot/port* or *vLanid* are not used, the command displays the following information.

Term	Definition
Admin Mode	Indicates whether or not MLD Snooping is active on the switch.
Interfaces Enabled for MLD Snooping	Interfaces on which MLD Snooping is enabled.
MLD Control Frame Count	Displays the number of MLD Control frames that are processed by the CPU.
VLANs Enabled for MLD Snooping	VLANs on which MLD Snooping is enabled.

When you specify the *slot/port* values, the following information displays.

Term	Definition
MLD Snooping Admin Mode	Indicates whether MLD Snooping is active on the interface.
Fast Leave Mode	Indicates whether MLD Snooping Fast Leave is active on the VLAN.
Group Membership Interval	Shows the amount of time in seconds that a switch will wait for a report from a particular group on a particular interface, which is participating in the VLAN, before deleting the interface from the entry. This value may be configured.
Max Response Time	Displays the amount of time the switch waits after it sends a query on an interface, participating in the VLAN, because it did not receive a report for a particular group on that interface. This value may be configured.
Multicast Router Present Expiration Time	Displays the amount of time to wait before removing an interface that is participating in the VLAN from the list of interfaces with multicast routers attached. The interface is removed if a query is not received. This value may be configured.

When you specify a value for *vLanid*, the following information appears.

Term	Definition
VLAN Admin Mode	Indicates whether MLD Snooping is active on the VLAN.

4.31.10 show mld Snooping mrouter interface

Use this command to display information about statically configured multicast router attached interfaces.

Format show mld Snooping mrouter interface *slot/port*

Mode Privileged EXEC

Term	Definition
Interface	Shows the interface on which multicast router information is being displayed.
Multicast Router Attached	Indicates whether multicast router is statically enabled on the interface.
VLAN ID	Displays the list of VLANs of which the interface is a member.

4.31.11 show mld Snooping mrouter vlan

Use this command to display information about statically configured multicast router-attached interfaces.

Format show mld Snooping mrouter vlan *slot/port*

Mode Privileged EXEC

Term	Definition
Interface	Shows the interface on which multicast router information is being displayed.
VLAN ID	Displays the list of VLANs of which the interface is a member.

4.31.12 show mld Snooping ssm entries

Use this command to display the source specific multicast forwarding database built by MLD snooping.

A given {Source, Group, VLAN} combination can have few interfaces in INCLUDE mode and few interfaces in EXCLUDE mode. In such instances, two rows for the same {Source, Group, VLAN} combinations are displayed.

Format show mld Snooping ssm entries

Mode Privileged EXEC

Term	Definition
VLAN	The VLAN on which the entry is learned.
Group	The IPv6 multicast group address.
Source	The IPv6 source address.
Source Filter Mode	The source filter mode (Include/Exclude) for the specified group.
Interfaces	1) If Source Filter Mode is "Include," specifies the list of interfaces on which a incoming packet is forwarded. If it's source IP address is equal to the current entry's Source, the destination IP address is equal to the current entry's Group and the VLAN ID on which it arrived is current entry's VLAN. 2) If Source Filter Mode is "Exclude," specifies the list of interfaces on which a incoming packet is forwarded. If it's source IP address is *not* equal to the current entry's Source, the destination IP address is equal to current entry's Group and VLAN ID on which it arrived is current entry's VLAN.

4.31.13 show mldsnoothing ssm stats

Use this command to display the statistics of MLD snooping's SSMFDB. This command takes no options.

Format show mldsnoothing ssm stats

Mode Privileged EXEC

Term	Definition
Total Entries	The total number of entries that can possibly be in the MLD snooping's SSMFDB.
Most SSMFDB Entries Ever Used	The largest number of entries that have been present in the MLD snooping's SSMFDB.
Current Entries	The current number of entries in the MLD snooping's SSMFDB.

4.31.14 show mldsnoothing ssm groups

Use this command to display the MLD SSM group membership information.

Format show mldsnoothing ssm groups

Mode Privileged EXEC

Term	Definition
VLAN	VLAN on which the MLD v2 report is received.
Group	The IPv6 multicast group address.
Interface	The interface on which the MLD v2 report is received.
Reporter	The IPv6 address of the host that sent the MLDv2 report.
Source Filter Mode	The source filter mode (Include/Exclude) for the specified group.
Source Address List	List of source IP addresses for which source filtering is requested.

4.31.15 show mac-address-table mldsnoothing

Use this command to display the MLD Snooping entries in the Multicast Forwarding Database (MFDB) table.

Format show mac-address-table mldsnoothing

Mode Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC address is learned.
MAC Address	A multicast MAC address for which the switch has forwarding or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Type	The type of entry, which is either static (added by the user) or dynamic (added to the table as a result of a learning process or protocol.)
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

4.31.16 clear mldsnooping

Use this command to delete all MLD snooping entries from the MFDB table.

Format clear mldsnooping

Mode Privileged EXEC

4.32 MLD Snooping Querier Commands

In an IPv6 environment, MLD Snooping requires that one central switch or router periodically query all end-devices on the network to announce their multicast memberships. This central device is the MLD Querier. The MLD query responses, known as MLD reports, keep the switch updated with the current multicast group membership on a port-by-port basis. If the switch does not receive updated membership information in a timely fashion, it will stop forwarding multicasts to the port where the end device is located.

This section describes the commands you use to configure and display information on MLD Snooping queries on the network and, separately, on VLANs.

**Note...**

This note clarifies the prioritization of MGLD Snooping Configurations. Many of the IGMP/MLD Snooping commands are available both in the Interface and VLAN modes. Operationally the system chooses or prefers the VLAN configured values over the Interface configured values for most configurations when the interface participates in the VLAN.

4.32.1 set mld querier

Use this command to enable MLD Snooping Querier on the system (Global Config Mode) or on a VLAN. Using this command, you can specify the IP address that the snooping querier switch should use as a source address while generating periodic queries.

If a VLAN has MLD Snooping Querier enabled and MLD Snooping is operationally disabled on it, MLD Snooping Querier functionality is disabled on that VLAN. MLD Snooping functionality is re-enabled if MLD Snooping is operational on the VLAN.

The MLD Snooping Querier sends periodic general queries on the VLAN to solicit membership reports.

Default disabled

Format set mld querier [*vlan-id*] [*address ipv6_address*]

Mode

- Global Config
- VLAN Mode

4.32.1.1 no set mld querier

Use this command to disable MLD Snooping Querier on the system. Use the optional parameter address to reset the querier address.

Format no set mld querier [*vlan-id*] [*address*]

Mode

- Global Config
- VLAN Mode

4.32.2 set mld querier query_interval

Use this command to set the MLD Querier Query Interval time. It is the amount of time in seconds that the switch waits before sending another general query.

Default 60 seconds
Format set mld querier query_interval 1-1800
Mode Global Config

4.32.2.1 no set mld querier query_interval

Use this command to set the MLD Querier Query Interval time to its default value.

Format no set mld querier query_interval
Mode Global Config

4.32.3 set mld querier timer expiry

Use this command to set the MLD Querier timer expiration period. It is the time period that the switch remains in Non-Querier mode once it has discovered that there is a Multicast Querier in the network.

Default 60 seconds
Format set mld querier timer expiry 60-300
Mode Global Config

4.32.3.1 no set mld querier timer expiry

Use this command to set the MLD Querier timer expiration period to its default value.

Format no set mld querier timer expiry
Mode Global Config

4.32.4 set mld querier election participate

Use this command to enable the Snooping Querier to participate in the Querier Election process when it discovers the presence of another Querier in the VLAN. When this mode is enabled, if the Snooping Querier finds that the other Querier's source address is better (less) than the Snooping Querier's address, it stops sending periodic queries. If the Snooping Querier wins the election, then it will continue sending periodic queries.

Default disabled
Format set mld querier election participate
Mode VLAN Config

4.32.4.1 no set mld querier election participate

Use this command to set the snooping querier not to participate in querier election but go into a non-querier mode as soon as it discovers the presence of another querier in the same VLAN.

Format no set mld querier election participate
Mode VLAN Config

4.32.5 show mld Snooping querier

Use this command to display MLD Snooping Querier information. Configured information is displayed whether or not MLD Snooping Querier is enabled.

Format show mld Snooping querier [{detail | vlan *vlanid*}]

Mode Privileged EXEC

When the optional arguments *vlanid* are not used, the command displays the following information.

Field	Description
Admin Mode	Indicates whether or not MLD Snooping Querier is active on the switch.
Admin Version	Indicates the version of MLD that will be used while sending out the queries. This is defaulted to <code>MLD v1</code> and it cannot be changed.
Querier Address	Shows the IP address which will be used in the IPv6 header while sending out MLD queries. It can be configured using the appropriate command.
Query Interval	Shows the amount of time in seconds that a Snooping Querier waits before sending out the periodic general query.
Querier Timeout	Displays the amount of time to wait in the Non-Querier operational state before moving to a Querier state.

When you specify a value for *vlanid*, the following information appears.

Field	Description
VLAN Admin Mode	Indicates whether MLD Snooping Querier is active on the VLAN.
VLAN Operational State	Indicates whether MLD Snooping Querier is in “Querier” or “Non-Querier” state. When the switch is in Querier state, it will send out periodic general queries. When in Non-Querier state, it will wait for moving to Querier state and does not send out any queries.
VLAN Operational Max Response Time	Indicates the time to wait before removing a Leave from a host upon receiving a Leave request. This value is calculated dynamically from the Queries received from the network. If the Snooping Switch is in Querier state, then it is equal to the configured value.
Querier Election Participate	Indicates whether the MLD Snooping Querier participates in querier election if it discovers the presence of a querier in the VLAN.
Querier VLAN Address	The IP address will be used in the IPv6 header while sending out MLD queries on this VLAN. It can be configured using the appropriate command.
Operational Version	This version of IPv6 will be used while sending out MLD queries on this VLAN.
Last Querier Address	Indicates the IP address of the most recent Querier from which a Query was received.
Last Querier Version	Indicates the MLD version of the most recent Querier from which a Query was received on this VLAN.

When the optional argument `detail` is used, the command shows the global information and the information for all Querier-enabled VLANs.

4.33 Port Security Commands

This section describes the command you use to configure Port Security on the switch. Port security, which is also known as port MAC locking, allows you to secure the network by locking allowable MAC addresses on a given port. Packets with a matching source MAC address are forwarded normally, and all other packets are discarded.

**Note...**

To enable the SNMP trap specific to port security, see “snmp-server enable traps violation” on page 107”

4.33.1 port-security

This command enables port locking on an interface, a range of interfaces, or at the system level.

Default	disabled
Format	port-security
Mode	• Global Config (to enable port locking globally) • Interface Config (to enable port locking on an interface or range of interfaces)

4.33.1.1 no port-security

This command disables port locking for one (Interface Config) or all (Global Config) ports.

Format	no port-security
Mode	• Global Config • Interface Config

4.33.2 port-security max-dynamic

This command sets the maximum number of dynamically locked MAC addresses allowed on a specific port. The valid range is 0–600.

Default	600
Format	port-security max-dynamic <i>maxvalue</i>
Mode	Interface Config

4.33.2.1 no port-security max-dynamic

This command resets the maximum number of dynamically locked MAC addresses allowed on a specific port to its default value.

Format	no port-security max-dynamic
Mode	Interface Config

4.33.3 port-security max-static

This command sets the maximum number of statically locked MAC addresses allowed on a port. The valid range is 0–20.

Default	1
Format	port-security max-static <i>maxvalue</i>
Mode	Interface Config

4.33.3.1 no port-security max-static

This command sets maximum number of statically locked MAC addresses to the default value.

Format no port-security max-static

Mode Interface Config

4.33.4 port-security mac-address

This command adds a MAC address to the list of statically locked MAC addresses for an interface or range of interfaces. The *vid* is the VLAN ID.

Format port-security mac-address *mac-address vid*

Mode Interface Config

4.33.4.1 no port-security mac-address

This command removes a MAC address from the list of statically locked MAC addresses.

Format no port-security mac-address *mac-address vid*

Mode Interface Config

4.33.5 port-security mac-address move

This command converts dynamically locked MAC addresses to statically locked addresses for an interface or range of interfaces.

Format port-security mac-address move

Mode Interface Config

4.33.6 port-security mac-address sticky

This command enables sticky mode Port MAC Locking on a port. If accompanied by a MAC address and a VLAN id (for interface config mode only), it adds a sticky MAC address to the list of statically locked MAC addresses. These sticky addresses are converted back to dynamically locked addresses if sticky mode is disabled on the port. The <vid> is the VLAN ID. The Global command applies the “sticky” mode to all valid interfaces (physical and LAG). There is no global sticky mode as such.

Sticky addresses that are dynamically learned will appear in `show running-config` as “port-security mac-address sticky <mac> <vid>” entries. This distinguishes them from static entries.

Format port-security mac-address sticky [<mac-address> <vid>]

Mode

- Global Config
- Interface Config

Example: The following shows an example of the command.

```
(Broadcom FASTPATH)(Config)# port-security mac-address sticky
(Broadcom FASTPATH)(Interface)# port-security mac-address sticky
(Broadcom FASTPATH)(Interface)# port-security mac-address sticky
00:00:00:00:00:01 2
```

4.33.6.1 no port-security mac-address sticky

The **no** form removes the sticky mode. The sticky MAC address can be deleted by using the command “no port-security mac-address <mac-address> <vid>”.

Format no port-security mac-address sticky [<mac-address> <vid>]

Mode

- Global Config
- Interface Config

4.33.7 show port-security

This command displays the port-security settings for the port(s). If you do not use a parameter, the command displays the Port Security Administrative mode. Use the optional parameters to display the settings on a specific interface or on all interfaces. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.

Format show port-security [{*slot/port* | *all*}]

Mode Privileged EXEC

Term	Definition
Admin Mode	Port Locking mode for the entire system. This field displays if you do not supply any parameters.

For each interface, or for the interface you specify, the following information appears:

Term	Definition
Admin Mode	Port Locking mode for the Interface.
Dynamic Limit	Maximum dynamically allocated MAC Addresses.
Static Limit	Maximum statically allocated MAC Addresses.
Violation Trap Mode	Whether violation traps are enabled.
Sticky Mode	The administrative mode of the port security Sticky Mode feature on the interface.

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show port-security 0/1

Intf	Admin Mode	Dynamic Limit	Static Limit	Violation Trap Mode	Sticky Mode
-----	-----	-----	-----	-----	-----
0/1	Disabled	1	1	Disabled	Enabled

4.33.8 show port-security dynamic

This command displays the dynamically locked MAC addresses for the port. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.

Format show port-security dynamic *slot/port*

Mode Privileged EXEC

Term	Definition
MAC Address	MAC Address of dynamically locked MAC.

4.33.9 show port-security static

This command displays the statically locked MAC addresses for port. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.

Format show port-security static {*slot/port* | *Lag Lag-intf-num*}

Mode Privileged EXEC

Term	Definition
Statically Configured MAC Address	The statically configured MAC address.
VLAN ID	The ID of the VLAN that includes the host with the specified MAC address.
Sticky	Indicates whether the static MAC address entry is added in sticky mode.

Example: The following shows example CLI display output for the command.

```
(Routing) #show port-security static 0/1
```

```
Number of static MAC addresses configured: 2
```

Statically configured MAC Address	VLAN ID	Sticky
-----	-----	-----
00:00:00:00:00:01	2	Yes
00:00:00:00:00:02	2	No

4.33.10 show port-security violation

This command displays the source MAC address of the last packet discarded on a locked port. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number.

Format show port-security violation {*slot/port* | *Lag Lag-id*}

Mode Privileged EXEC

Term	Definition
MAC Address	The source MAC address of the last frame that was discarded at a locked port.
VLAN ID	The VLAN ID, if applicable, associated with the MAC address of the last frame that was discarded at a locked port.

4.34 LLDP (802.1AB) Commands

This section describes the command you use to configure Link Layer Discovery Protocol (LLDP), which is defined in the IEEE 802.1AB specification. LLDP allows stations on an 802 LAN to advertise major capabilities and physical descriptions. The advertisements allow a network management system (NMS) to access and display this information.

4.34.1 lldp transmit

Use this command to enable the LLDP advertise capability on an interface or a range of interfaces.

Default disabled
Format lldp transmit
Mode Interface Config

4.34.1.1 no lldp transmit

Use this command to return the local data transmission capability to the default.

Format no lldp transmit
Mode Interface Config

4.34.2 lldp receive

Use this command to enable the LLDP receive capability on an interface or a range of interfaces.

Default disabled
Format lldp receive
Mode Interface Config

4.34.2.1 no lldp receive

Use this command to return the reception of LLDPDUs to the default value.

Format no lldp receive
Mode Interface Config

4.34.3 lldp timers

Use this command to set the timing parameters for local data transmission on ports enabled for LLDP. The *interval-seconds* determines the number of seconds to wait between transmitting local data LLDPDUs. The range is 1-32768 seconds. The *hold-value* is the multiplier on the transmit interval that sets the TTL in local data LLDPDUs. The multiplier range is 2-10. The *reinit-seconds* is the delay before reinitialization, and the range is 1-0 seconds.

Default

- interval—30 seconds
- hold—4
- reinit—2 seconds

Format lldp timers [interval *interval-seconds*] [hold *hold-value*] [reinit *reinit-seconds*]
Mode Global Config

4.34.3.1 no lldp timers

Use this command to return any or all timing parameters for local data transmission on ports enabled for LLDP to the default values.

Format no lldp timers [interval] [hold] [reinit]
Mode Global Config

4.34.4 lldp transmit-tlv

Use this command to specify which optional type length values (TLVs) in the 802.1AB basic management set are transmitted in the LLDPDUs from an interface or range of interfaces. Use *sys-name* to transmit the system name TLV. To configure the system name, see "snmp-server" on page 105". Use *sys-desc* to transmit the system description TLV. Use *sys-cap* to transmit the system capabilities TLV. Use *port-desc* to transmit the port description TLV. To configure the port description. See "description" on page 305.

Default no optional TLVs are included
Format lldp transmit-tlv [sys-desc] [sys-name] [sys-cap] [port-desc]
Mode Interface Config

4.34.4.1 no lldp transmit-tlv

Use this command to remove an optional TLV from the LLDPDUs. Use the command without parameters to remove all optional TLVs from the LLDPDU.

Format no lldp transmit-tlv [sys-desc] [sys-name] [sys-cap] [port-desc]
Mode Interface Config

4.34.5 lldp transmit-mgmt

Use this command to include transmission of the local system management address information in the LLDPDUs. This command can be used to configure a single interface or a range of interfaces.

Format lldp transmit-mgmt
Mode Interface Config

4.34.5.1 no lldp transmit-mgmt

Use this command to include transmission of the local system management address information in the LLDPDUs. Use this command to cancel inclusion of the management information in LLDPDUs.

Format no lldp transmit-mgmt
Mode Interface Config

4.34.6 lldp notification

Use this command to enable remote data change notifications on an interface or a range of interfaces.

Default disabled
Format lldp notification
Mode Interface Config

4.34.6.1 no lldp notification

Use this command to disable notifications.

Default disabled
Format no lldp notification
Mode Interface Config

4.34.7 lldp notification-interval

Use this command to configure how frequently the system sends remote data change notifications. The *interval* parameter is the number of seconds to wait between sending notifications. The valid interval range is 5-3600 seconds.

Default 5
Format lldp notification-interval *interval*
Mode Global Config

4.34.7.1 no lldp notification-interval

Use this command to return the notification interval to the default value.

Format no lldp notification-interval
Mode Global Config

4.34.8 clear lldp statistics

Use this command to reset all LLDP statistics, including MED-related information.

Format clear lldp statistics
Mode Privileged EXEC

4.34.9 clear lldp remote-data

Use this command to delete all information from the LLDP remote data table, including MED-related information.

Format clear lldp remote-data
Mode Global Config

4.34.10 show lldp

Use this command to display a summary of the current LLDP configuration.

Format show lldp
Mode Privileged EXEC

Term	Definition
Transmit Interval	How frequently the system transmits local data LLDPDUs, in seconds.
Transmit Hold Multiplier	The multiplier on the transmit interval that sets the TTL in local data LLDPDUs.
Re-initialization Delay	The delay before reinitialization, in seconds.
Notification Interval	How frequently the system sends remote data change notifications, in seconds.

4.34.11 show lldp interface

Use this command to display a summary of the current LLDP configuration for a specific interface or for all interfaces.

Format show lldp interface {*slot/port* | all}
Mode Privileged EXEC

Term	Definition
Interface	The interface in a <i>slot/port</i> format.
Link	Shows whether the link is up or down.
Transmit	Shows whether the interface transmits LLDPDUs.
Receive	Shows whether the interface receives LLDPDUs.
Notify	Shows whether the interface sends remote data change notifications.
TLVs	Shows whether the interface sends optional TLVs in the LLDPDUs. The TLV codes can be 0 (Port Description), 1 (System Name), 2 (System Description), or 3 (System Capability).
Mgmt	Shows whether the interface transmits system management address information in the LLDPDUs.

4.34.12 show lldp statistics

Use this command to display the current LLDP traffic and remote table statistics for a specific interface or for all interfaces.

Format `show lldp statistics {slot/port | all}`

Mode Privileged EXEC

Term	Definition
Last Update	The amount of time since the last update to the remote table in days, hours, minutes, and seconds.
Total Inserts	Total number of inserts to the remote data table.
Total Deletes	Total number of deletes from the remote data table.
Total Drops	Total number of times the complete remote data received was not inserted due to insufficient resources.
Total Ageouts	Total number of times a complete remote data entry was deleted because the Time to Live interval expired.

The table contains the following column headings:

Term	Definition
Interface	The interface in <i>slot/port</i> format.
TX Total	Total number of LLDP packets transmitted on the port.
RX Total	Total number of LLDP packets received on the port.
Discards	Total number of LLDP frames discarded on the port for any reason.
Errors	The number of invalid LLDP frames received on the port.
Ageouts	Total number of times a complete remote data entry was deleted for the port because the Time to Live interval expired.
TVL Discards	The number of TLVs discarded.
TVL Unknowns	Total number of LLDP TLVs received on the port where the type value is in the reserved range, and not recognized.
TLV MED	The total number of LLDP-MED TLVs received on the interface.
TLV 802.1	The total number of LLDP TLVs received on the interface which are of type 802.1.
TLV 802.3	The total number of LLDP TLVs received on the interface which are of type 802.3.

4.34.13 show lldp remote-device

Use this command to display summary information about remote devices that transmit current LLDP data to the system. You can show information about LLDP remote data received on all ports or on a specific port.

Format show lldp remote-device {slot/port | all}

Mode Privileged EXEC

Term	Definition
Local Interface	The interface that received the LLDPDU from the remote device.
RemID	An internal identifier to the switch to mark each remote device to the system.
Chassis ID	The ID that is sent by a remote device as part of the LLDP message, it is usually a MAC address of the device.
Port ID	The port number that transmitted the LLDPDU.
System Name	The system name of the remote device.

Example: The following shows example CLI display output for the command.
(FASTPATH Switching) #show lldp remote-device all

LLDP Remote Device Summary

```

Local
Interface RemID   Chassis ID           Port ID           System Name
-----
0/1
0/2
0/3
0/4
0/5
0/6
0/7      2      00:FC:E3:90:01:0F    00:FC:E3:90:01:11
0/7      3      00:FC:E3:90:01:0F    00:FC:E3:90:01:12
0/7      4      00:FC:E3:90:01:0F    00:FC:E3:90:01:13
0/7      5      00:FC:E3:90:01:0F    00:FC:E3:90:01:14
0/7      1      00:FC:E3:90:01:0F    00:FC:E3:90:03:11
0/7      6      00:FC:E3:90:01:0F    00:FC:E3:90:04:11
0/8
0/9
0/10
0/11
0/12
--More-- or (q)uit

```

4.34.14 show lldp remote-device detail

Use this command to display detailed information about remote devices that transmit current LLDP data to an interface on the system.

Format show lldp remote-device detail slot/port

Mode Privileged EXEC

Term	Definition
Local Interface	The interface that received the LLDPDU from the remote device.
Remote Identifier	An internal identifier to the switch to mark each remote device to the system.
Chassis ID Subtype	The type of identification used in the Chassis ID field.

Term	Definition
Chassis ID	The chassis of the remote device.
Port ID Subtype	The type of port on the remote device.
Port ID	The port number that transmitted the LLDPDU.
System Name	The system name of the remote device.
System Description	Describes the remote system by identifying the system name and versions of hardware, operating system, and networking software supported in the device.
Port Description	Describes the port in an alpha-numeric format. The port description is configurable.
System Capabilities Supported	Indicates the primary function(s) of the device.
System Capabilities Enabled	Shows which of the supported system capabilities are enabled.
Management Address	For each interface on the remote device with an LLDP agent, lists the type of address the remote LLDP agent uses and specifies the address used to obtain information related to the device.
Time To Live	The amount of time (in seconds) the remote device's information received in the LLDPDU should be treated as valid information.

Example: The following shows example CLI display output for the command.
(FASTPATH Switching) #show lldp remote-device detail 0/7

LLDP Remote Device Detail

Local Interface: 0/7

Remote Identifier: 2
Chassis ID Subtype: MAC Address
Chassis ID: 00:FC:E3:90:01:0F
Port ID Subtype: MAC Address
Port ID: 00:FC:E3:90:01:11
System Name:
System Description:
Port Description:
System Capabilities Supported:
System Capabilities Enabled:
Time to Live: 24 seconds

4.34.15 show lldp local-device

Use this command to display summary information about the advertised LLDP local data. This command can display summary information or detail for each interface.

Format show lldp local-device {slot/port | all}

Mode Privileged EXEC

Term	Definition
Interface	The interface in a slot/port format.
Port ID	The port ID associated with this interface.
Port Description	The port description associated with the interface.

4.34.16 show lldp local-device detail

Use this command to display detailed information about the LLDP data a specific interface transmits.

Format show lldp local-device detail *slot/port*

Mode Privileged EXEC

Term	Definition
Interface	The interface that sends the LLDPDU.
Chassis ID Subtype	The type of identification used in the Chassis ID field.
Chassis ID	The chassis of the local device.
Port ID Subtype	The type of port on the local device.
Port ID	The port number that transmitted the LLDPDU.
System Name	The system name of the local device.
System Description	Describes the local system by identifying the system name and versions of hardware, operating system, and networking software supported in the device.
Port Description	Describes the port in an alpha-numeric format.
System Capabilities Supported	Indicates the primary function(s) of the device.
System Capabilities Enabled	Shows which of the supported system capabilities are enabled.
Management Address	The type of address and the specific address the local LLDP agent uses to send and receive information.

4.35 LLDP-MED Commands

Link Layer Discovery Protocol - Media Endpoint Discovery (LLDP-MED) (ANSI-TIA-1057) provides an extension to the LLDP standard. Specifically, LLDP-MED provides extensions for network configuration and policy, device location, Power over Ethernet (PoE) management and inventory management.

4.35.1 lldp med

Use this command to enable MED on an interface or a range of interfaces. By enabling MED, you will be effectively enabling the transmit and receive function of LLDP.

Default disabled

Format lldp med

Mode Interface Config

4.35.1.1 no lldp med

Use this command to disable MED.

Format no lldp med

Mode Interface Config

4.35.2 lldp med confignotification

Use this command to configure an interface or a range of interfaces to send the topology change notification.

Default disabled
Format lldp med confignotification
Mode Interface Config

4.35.2.1 no lldp med confignotification

Use this command to disable notifications.

Format no lldp med confignotification
Mode Interface Config

4.35.3 lldp med transmit-tlv

Use this command to specify which optional Type Length Values (TLVs) in the LLDP MED set will be transmitted in the Link Layer Discovery Protocol Data Units (LLDPDUs) from this interface or a range of interfaces.

Default By default, the capabilities and network policy TLVs are included.
Format lldp med transmit-tlv [capabilities] [ex-pd] [ex-pse] [inventory] [location] [network-policy]
Mode Interface Config

Term	Definition
capabilities	Transmit the LLDP capabilities TLV.
ex-pd	Transmit the LLDP extended PD TLV.
ex-pse	Transmit the LLDP extended PSE TLV.
inventory	Transmit the LLDP inventory TLV.
location	Transmit the LLDP location TLV.
network-policy	Transmit the LLDP network policy TLV.

4.35.3.1 no lldp med transmit-tlv

Use this command to remove a TLV.

Format no lldp med transmit-tlv [capabilities] [network-policy] [ex-pse] [ex-pd] [location] [inventory]
Mode Interface Config

4.35.4 lldp med all

Use this command to configure LLDP-MED on all the ports.

Format lldp med all
Mode Global Config

4.35.5 lldp med confignotification all

Use this command to configure all the ports to send the topology change notification.

Format lldp med confignotification all
Mode Global Config

4.35.6 lldp med faststartrepeatcount

Use this command to set the value of the fast start repeat count. *[count]* is the number of LLDP PDUs that will be transmitted when the product is enabled. The range is 1 to 10.

Default 3
Format lldp med faststartrepeatcount *[count]*
Mode Global Config

4.35.6.1 no lldp med faststartrepeatcount

Use this command to return to the factory default value.

Format no lldp med faststartrepeatcount
Mode Global Config

4.35.7 lldp med transmit-tlv all

Use this command to specify which optional Type Length Values (TLVs) in the LLDP MED set will be transmitted in the Link Layer Discovery Protocol Data Units (LLDPDUs).

Default By default, the capabilities and network policy TLVs are included.
Format lldp med transmit-tlv all *[capabilities] [ex-pd] [ex-pse] [inventory] [location] [network-policy]*
Mode Global Config

Term	Definition
capabilities	Transmit the LLDP capabilities TLV.
ex-pd	Transmit the LLDP extended PD TLV.
ex-pse	Transmit the LLDP extended PSE TLV.
inventory	Transmit the LLDP inventory TLV.
location	Transmit the LLDP location TLV.
network-policy	Transmit the LLDP network policy TLV.

4.35.7.1 no lldp med transmit-tlv

Use this command to remove a TLV.

Format no lldp med transmit-tlv *[capabilities] [network-policy] [ex-pse] [ex-pd] [location] [inventory]*
Mode Global Config

4.35.8 show lldp med

Use this command to display a summary of the current LLDP MED configuration.

Format show lldp med
Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show lldp med
LLDP MED Global Configuration
```

```
Fast Start Repeat Count: 3
Device Class: Network Connectivity
```

```
(FASTPATH Routing) #
```

4.35.9 show lldp med interface

Use this command to display a summary of the current LLDP MED configuration for a specific interface. *slot/port* indicates a specific physical interface. *all* indicates all valid LLDP interfaces.

Format show lldp med interface {slot/port | all}

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show lldp med interface all
```

Interface	Link	configMED	operMED	ConfigNotify	TLVsTx
0/1	Down	Disabled	Disabled	Disabled	0,1
0/2	Up	Disabled	Disabled	Disabled	0,1
0/3	Down	Disabled	Disabled	Disabled	0,1
0/4	Down	Disabled	Disabled	Disabled	0,1
0/5	Down	Disabled	Disabled	Disabled	0,1
0/6	Down	Disabled	Disabled	Disabled	0,1
0/7	Down	Disabled	Disabled	Disabled	0,1
0/8	Down	Disabled	Disabled	Disabled	0,1
0/9	Down	Disabled	Disabled	Disabled	0,1
0/10	Down	Disabled	Disabled	Disabled	0,1
0/11	Down	Disabled	Disabled	Disabled	0,1
0/12	Down	Disabled	Disabled	Disabled	0,1
0/13	Down	Disabled	Disabled	Disabled	0,1
0/14	Down	Disabled	Disabled	Disabled	0,1

```
TLV Codes: 0- Capabilities,      1- Network Policy
            2- Location,         3- Extended PSE
            4- Extended Pd,      5- Inventory
```

```
--More-- or (q)uit
```

```
(FASTPATH Routing) #show lldp med interface 0/2
```

Interface	Link	configMED	operMED	ConfigNotify	TLVsTx
0/2	Up	Disabled	Disabled	Disabled	0,1

```
TLV Codes: 0- Capabilities,      1- Network Policy
            2- Location,         3- Extended PSE
            4- Extended Pd,      5- Inventory
```

```
(FASTPATH Routing) #
```

4.35.10 show lldp med local-device detail

Use this command to display detailed information about the LLDP MED data that a specific interface transmits. *sSlot/port* indicates a specific physical interface.

Format show lldp med local-device detail *sSlot/port*

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show lldp med local-device detail 0/8

LLDP MED Local Device Detail

Interface: 0/8

Network Policies

Media Policy Application Type : voice

Vlan ID: 10

Priority: 5

DSCP: 1

Unknown: False

Tagged: True

Media Policy Application Type : streamingvideo

Vlan ID: 20

Priority: 1

DSCP: 2

Unknown: False

Tagged: True

Inventory

Hardware Rev: xxx xxx xxx

Firmware Rev: xxx xxx xxx

Software Rev: xxx xxx xxx

Serial Num: xxx xxx xxx

Mfg Name: xxx xxx xxx

Model Name: xxx xxx xxx

Asset ID: xxx xxx xxx

Location

Subtype: elin

Info: xxx xxx xxx

Extended POE

Device Type: pseDevice

Extended POE PSE

Available: 0.3 Watts

Source: primary

Priority: critical

Extended POE PD

Required: 0.2 Watts

Source: local

Priority: low

4.35.11 show lldp med remote-device

Use this command to display the summary information about remote devices that transmit current LLDP MED data to the system. You can show information about LLDP MED remote data received on all valid LLDP interfaces or on a specific physical interface.

Format show lldp med remote-device {slot/port | all}

Mode Privileged EXEC

Term	Definition
Local Interface	The interface that received the LLDPDU from the remote device.
Remote ID	An internal identifier to the switch to mark each remote device to the system.
Device Class	Device classification of the remote device.

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show lldp med remote-device all

LLDP MED Remote Device Summary

```

Local
Interface Remote ID Device Class
-----
0/8        1      Class I
0/9        2      Not Defined
0/10       3      Class II
0/11       4      Class III
0/12       5      Network Con

```

4.35.12 show lldp med remote-device detail

Use this command to display detailed information about remote devices that transmit current LLDP MED data to an interface on the system.

Format show lldp med remote-device detail slot/port

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show lldp med remote-device detail 0/8

LLDP MED Remote Device Detail

```

Local Interface: 0/8
Remote Identifier: 18
Capabilities
MED Capabilities Supported: capabilities, networkpolicy, location, extendedpse
MED Capabilities Enabled: capabilities, networkpolicy
Device Class: Endpoint Class I

Network Policies
Media Policy Application Type : voice
Vlan ID: 10
Priority: 5
DSCP: 1
Unknown: False
Tagged: True

```


Media Policy Application Type : streamingvideo
 Vlan ID: 20
 Priority: 1
 DSCP: 2
 Unknown: False
 Tagged: True

Inventory
 Hardware Rev: xxx xxx xxx
 Firmware Rev: xxx xxx xxx
 Software Rev: xxx xxx xxx
 Serial Num: xxx xxx xxx
 Mfg Name: xxx xxx xxx
 Model Name: xxx xxx xxx
 Asset ID: xxx xxx xxx

Location
 Subtype: elin
 Info: xxx xxx xxx

Extended POE
 Device Type: pseDevice

Extended POE PSE
 Available: 0.3 Watts
 Source: primary
 Priority: critical

Extended POE PD

Required: 0.2 Watts
 Source: local
 Priority: low

4.36 Denial of Service Commands



Note...

Denial of Service (DataPlane) is supported on XGS-III and later platforms only.

This section describes the commands you use to configure Denial of Service (DoS) Control. FASTPATH software provides support for classifying and blocking specific types of Denial of Service attacks. You can configure your system to monitor and block these types of attacks:

- **SIP = DIP:** Source IP address = Destination IP address.
- **First Fragment:** TCP Header size smaller than configured value.
- **TCP Fragment:** Allows the device to drop packets that have a TCP payload where the IP payload length minus the IP header size is less than the minimum allowed TCP header size.
- **TCP Flag:** TCP Flag SYN set and Source Port < 1024 or TCP Control Flags = 0 and TCP Sequence Number = 0 or TCP Flags FIN, URG, and PSH set and TCP Sequence Number = 0 or TCP Flags SYN and FIN set.
- **L4 Port:** Source TCP/UDP Port = Destination TCP/UDP Port.
- **ICMP:** Limiting the size of ICMP Ping packets

**Note...**

Monitoring and blocking of the types of attacks listed below are only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

- **SMAC = DMAC:** Source MAC address = Destination MAC address
- **TCP Port:** Source TCP Port = Destination TCP Port
- **UDP Port:** Source UDP Port = Destination UDP Port
- **TCP Flag & Sequence:** TCP Flag SYN set and Source Port < 1024 or TCP Control Flags = 0 and TCP Sequence Number = 0 or TCP Flags FIN, URG, and PSH set and TCP Sequence Number = 0 or TCP Flags SYN and FIN set.
- **TCP Offset:** Allows the device to drop packets that have a TCP header Offset set to 1.
- **TCP SYN:** TCP Flag SYN set.
- **TCP SYN & FIN:** TCP Flags SYN and FIN set.
- **TCP FIN & URG & PSH:** TCP Flags FIN and URG and PSH set and TCP Sequence Number = 0.
- **ICMP V6:** Limiting the size of ICMPv6 Ping packets.
- **ICMP Fragment:** Checks for fragmented ICMP packets.

4.36.1 dos-control all

This command enables Denial of Service protection checks globally.

Default disabled
Format dos-control all
Mode Global Config

4.36.1.1 no dos-control all

This command disables Denial of Service prevention checks globally.

Format no dos-control all
Mode Global Config

4.36.2 dos-control sipdip

This command enables Source IP address = Destination IP address (SIP = DIP) Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress with SIP = DIP, the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control sipdip
Mode Global Config

4.36.2.1 no dos-control sipdip

This command disables Source IP address = Destination IP address (SIP = DIP) Denial of Service prevention.

Format no dos-control sipdip
Mode Global Config

4.36.3 dos-control firstfrag

This command enables Minimum TCP Header Size Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having a TCP Header Size smaller than the configured value, the packets will be dropped if the mode is enabled. The default is *disabled*. If you enable dos-control firstfrag, but do not provide a Minimum TCP Header Size, the system sets that value to 20.

Default disabled (20)
Format dos-control firstfrag [0-255]
Mode Global Config

4.36.3.1 no dos-control firstfrag

This command sets Minimum TCP Header Size Denial of Service protection to the default value of *disabled*.

Format no dos-control firstfrag
Mode Global Config

4.36.4 dos-control tcpfrag

This command enables TCP Fragment Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack and packets that have a TCP payload in which the IP payload length minus the IP header size is less than the minimum allowed TCP header size are dropped.

Default disabled
Format dos-control tcpfrag
Mode Global Config

4.36.4.1 no dos-control tcpfrag

This command disables TCP Fragment Denial of Service protection.

Format no dos-control tcpfrag
Mode Global Config

4.36.5 dos-control tcpflag

This command enables TCP Flag Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attacks. If packets ingress having TCP Flag SYN set and a source port less than 1024 or having TCP Control Flags set to 0 and TCP Sequence Number set to 0 or having TCP Flags FIN, URG, and PSH set and TCP Sequence Number set to 0 or having TCP Flags SYN and FIN both set, the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control tcpflag
Mode Global Config

4.36.5.1 no dos-control tcpflag

This command sets disables TCP Flag Denial of Service protections.

Format no dos-control tcpflag

Mode Global Config

4.36.6 dos-control l4port

This command enables L4 Port Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having Source TCP/UDP Port Number equal to Destination TCP/UDP Port Number, the packets will be dropped if the mode is enabled.

**Note...**

Some applications mirror source and destination L4 ports - RIP for example uses 520 for both. If you enable dos-control l4port, applications such as RIP may experience packet loss which would render the application inoperable.

Default disabled

Format dos-control l4port

Mode Global Config

4.36.6.1 no dos-control l4port

This command disables L4 Port Denial of Service protections.

Format no dos-control l4port

Mode Global Config

4.36.7 dos-control smacdmac

**Note...**

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables Source MAC address = Destination MAC address (SMAC = DMAC) Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress with SMAC = DMAC, the packets will be dropped if the mode is enabled.

Default disabled

Format dos-control smacdmac

Mode Global Config

4.36.7.1 no dos-control smacdmac

This command disables Source MAC address = Destination MAC address (SMAC = DMAC) DoS protection.

Format no dos-control smacdmac
Mode Global Config

4.36.8 dos-control tcpport



Note...

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables TCP L4 source = destination port number (Source TCP Port = Destination TCP Port) Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress with Source TCP Port = Destination TCP Port, the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control tcpport
Mode Global Config

4.36.8.1 no dos-control tcpport

This command disables TCP L4 source = destination port number (Source TCP Port = Destination TCP Port) Denial of Service protection.

Format no dos-control tcpport
Mode Global Config

4.36.9 dos-control udpport



Note...

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables UDP L4 source = destination port number (Source UDP Port = Destination UDP Port) DoS protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress with Source UDP Port = Destination UDP Port, the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control udpport
Mode Global Config

4.36.9.1 no dos-control udpport

This command disables UDP L4 source = destination port number (Source UDP Port = Destination UDP Port) Denial of Service protection.

Format no dos-control udpport
Mode Global Config

4.36.10 dos-control tcpflagseq

**Note...**

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables TCP Flag and Sequence Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP Flag SYN set and a source port less than 1024 or having TCP Control Flags set to 0 and TCP Sequence Number set to 0 or having TCP Flags FIN, URG, and PSH set and TCP Sequence Number set to 0 or having TCP Flags SYN and FIN both set, the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control tcpflagseq
Mode Global Config

4.36.10.1 no dos-control tcpflagseq

This command sets disables TCP Flag and Sequence Denial of Service protection.

Format no dos-control tcpflagseq
Mode Global Config

4.36.11 dos-control tcpoffset

**Note...**

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables TCP Offset Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP Header Offset equal to one (1), the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control tcpoffset
Mode Global Config

4.36.11.1 no dos-control tcpoffset

This command disabled TCP Offset Denial of Service protection.

Format no dos-control tcpoffset
Mode Global Config

4.36.12 dos-control tcpsyn

**Note...**

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables TCP SYN and L4 source = 0-1023 Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP flag SYN set and an L4 source port from 0 to 1023, the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control tcpsyn
Mode Global Config

4.36.12.1 no dos-control tcpsyn

This command sets disables TCP SYN and L4 source = 0-1023 Denial of Service protection.

Format no dos-control tcpsyn
Mode Global Config

4.36.13 dos-control tcpsynfin

**Note...**

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables TCP SYN and FIN Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP flags SYN and FIN set, the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control tcpsynfin
Mode Global Config

4.36.13.1 no dos-control tcpsynfin

This command sets disables TCP SYN & FIN Denial of Service protection.

Format no dos-control tcpsynfin
Mode Global Config

4.36.14 dos-control tcpfinurgpsh

**Note...**

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables TCP FIN and URG and PSH and SEQ = 0 checking Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP FIN, URG, and PSH all set and TCP Sequence Number set to 0, the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control tcpfinurgpsh
Mode Global Config

4.36.14.1 no dos-control tcpfinurgpsh

This command sets disables TCP FIN and URG and PSH and SEQ = 0 checking Denial of Service protections.

Format no dos-control tcpfinurgpsh
Mode Global Config

4.36.15 dos-control icmpv4



Note...

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables Maximum ICMPv4 Packet Size Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If ICMPv4 Echo Request (PING) packets ingress having a size greater than the configured value, the packets will be dropped if the mode is enabled.

Default disabled (512)
Format dos-control icmpv4 [0-16376]
Mode Global Config

4.36.15.1 no dos-control icmpv4

This command disables Maximum ICMP Packet Size Denial of Service protections.

Format no dos-control icmpv4
Mode Global Config

4.36.16 dos-control icmpv6



Note...

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables Maximum ICMPv6 Packet Size Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If ICMPv6 Echo Request (PING) packets ingress having a size greater than the configured value, the packets will be dropped if the mode is enabled.

Default disabled (512)
Format dos-control icmpv6 0-16376
Mode Global Config

4.36.16.1 no dos-control icmpv6

This command disables Maximum ICMP Packet Size Denial of Service protections.

Format no dos-control icmpv6
Mode Global Config

4.36.17 dos-control icmpfrag



Note...

This command is only supported on the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

This command enables ICMP Fragment Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having fragmented ICMP packets, the packets will be dropped if the mode is enabled.

Default disabled
Format dos-control icmpfrag
Mode Global Config

4.36.17.1 no dos-control icmpfrag

This command disabled ICMP Fragment Denial of Service protection.

Format no dos-control icmpfrag
Mode Global Config

4.36.18 show dos-control

This command displays Denial of Service configuration information.

Format show dos-control
Mode Privileged EXEC



Note...

Some of the information below displays only if you are using the BCM56224, BCM56514, BCM56624, BCM56634, BCM56636 and BCM56820 platforms.

Term	Definition
First Fragment Mode	The administrative mode of First Fragment DoS prevention. When enabled, this causes the switch to drop packets that have a TCP header smaller than the configured Min TCP Hdr Size.
Min TCP Hdr Size	The minimum TCP header size the switch will accept if First Fragment DoS prevention is enabled.
ICMPv4 Mode	The administrative mode of ICMPv4 DoS prevention. When enabled, this causes the switch to drop ICMP packets that have a type set to ECHO_REQ (ping) and a size greater than the configured ICMPv4 Payload Size.
Max ICMPv4 Payload Size	The maximum ICMPv4 payload size to accept when ICMPv4 DoS protection is enabled.
ICMPv6 Mode	The administrative mode of ICMPv6 DoS prevention. When enabled, this causes the switch to drop ICMP packets that have a type set to ECHO_REQ (ping) and a size greater than the configured ICMPv6 Payload Size.
Max ICMPv6 Payload Size	The maximum ICMPv6 payload size to accept when ICMPv6 DoS protection is enabled.
ICMPv4 Fragment Mode	The administrative mode of ICMPv4 Fragment DoS prevention. When enabled, this causes the switch to drop fragmented ICMPv4 packets.
TCP Port Mode	The administrative mode of TCP Port DoS prevention. When enabled, this causes the switch to drop packets that have the TCP source port equal to the TCP destination port.
UDP Port Mode	The administrative mode of UDP Port DoS prevention. When enabled, this causes the switch to drop packets that have the UDP source port equal to the UDP destination port.
SIPDIP Mode	The administrative mode of SIP=DIP DoS prevention. Enabling this causes the switch to drop packets that have a source IP address equal to the destination IP address. The factory default is disabled.
SMACDMAC Mode	The administrative mode of SMAC=DMAC DoS prevention. Enabling this causes the switch to drop packets that have a source MAC address equal to the destination MAC address.
TCP FIN&URG& PSH Mode	The administrative mode of TCP FIN & URG & PSH DoS prevention. Enabling this causes the switch to drop packets that have TCP flags FIN, URG, and PSH set and TCP Sequence Number = 0.
TCP Flag & Sequence Mode	The administrative mode of TCP Flag DoS prevention. Enabling this causes the switch to drop packets that have TCP control flags set to 0 and TCP sequence number set to 0.
TCP SYN Mode	The administrative mode of TCP SYN DoS prevention. Enabling this causes the switch to drop packets that have TCP Flags SYN set.
TCP SYN & FIN Mode	The administrative mode of TCP SYN & FIN DoS prevention. Enabling this causes the switch to drop packets that have TCP Flags SYN and FIN set.
TCP Fragment Mode	The administrative mode of TCP Fragment DoS prevention. Enabling this causes the switch to drop packets that have a TCP payload in which the IP payload length minus the IP header size is less than the minimum allowed TCP header size.
TCP Offset Mode	The administrative mode of TCP Offset DoS prevention. Enabling this causes the switch to drop packets that have a TCP header Offset equal to 1.

4.37 MAC Database Commands

This section describes the commands you use to configure and view information about the MAC databases.

4.37.1 bridge aging-time

This command configures the forwarding database address aging timeout in seconds. The *seconds* parameter must be within the range of 10 to 1,000,000 seconds. In an SVL system, the [fdbid/all] parameter is not used and will be ignored if entered. In an SVL system, the [fdbid/all] parameter is not used and will be ignored if entered.

Default 300
Format bridge aging-time 10-1,000,000
Mode Global Config

4.37.1.1 no bridge aging-time

This command sets the forwarding database address aging timeout to the default value. In an SVL system, the [fdbid/all] parameter is not used and will be ignored if entered.

Format no bridge aging-time
Mode Global Config

4.37.2 show forwardingdb agetime

This command displays the timeout for address aging.

Default all
Format show forwardingdb agetime
Mode Privileged EXEC

Term	Definition
Address Aging Timeout	Displays the system's address aging timeout value in seconds.

4.37.3 show mac-address-table multicast

This command displays the Multicast Forwarding Database (MFDB) information. If you enter the command with no parameter, the entire table is displayed. You can display the table entry for one MAC Address by specifying the MAC address as an optional parameter.

Format show mac-address-table multicast *macaddr*
Mode Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC address is learned.
MAC Address	A multicast MAC address for which the switch has forwarding or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Source	The component that is responsible for this entry in the Multicast Forwarding Database. The source can be IGMP Snooping, GMRP, and Static Filtering.

Term	Definition
Type	The type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).
Fwd Interface	The resultant forwarding list is derived from combining all the component's forwarding interfaces and removing the interfaces that are listed as the static filtering interfaces.

Example: If one or more entries exist in the multicast forwarding table, the command output looks similar to the following:

(Routing) #show mac-address-table multicast

VLAN ID	MAC Address	Source	Type	Description	Interface	Fwd Interface
1	01:00:5E:01:02:03	Filter	Static	Mgmt Config	Fwd: 0/1, 0/2, 0/3, 0/4, 0/5, 0/6, 0/7, 0/8, 0/9, 0/10,	Fwd: 0/1, 0/2, 0/3, 0/4, 0/5, 0/6, 0/7, 0/8, 0/9, 0/10,

--More-- or (q)uit

4.37.4 show mac-address-table stats

This command displays the Multicast Forwarding Database (MFDB) statistics.

Format show mac-address-table stats

Mode Privileged EXEC

Term	Definition
Total Entries	The total number of entries that can possibly be in the Multicast Forwarding Database table.
Most MFDB Entries Ever Used	The largest number of entries that have been present in the Multicast Forwarding Database table. This value is also known as the MFDB high-water mark.
Current Entries	The current number of entries in the MFDB.

4.38 ISDP Commands

This section describes the commands you use to configure the industry standard Discovery Protocol (ISDP).

4.38.1 isdp run

This command enables ISDP on the switch.

Default Enabled

Format isdp run

Mode Global Config

4.38.1.1 no isdp run

This command disables ISDP on the switch.

Format no isdp run

Mode Global Config

4.38.2 isdp holdtime

This command configures the hold time for ISDP packets that the switch transmits. The hold time specifies how long a receiving device should store information sent in the ISDP packet before discarding it. The range is given in seconds.

Default 180 seconds

Format isdp holdtime 10-255

Mode Global Config

4.38.3 isdp timer

This command sets the period of time between sending new ISDP packets. The range is given in seconds.

Default 60 seconds

Format isdp timer 5-254

Mode Global Config

4.38.4 isdp advertise-v2

This command enables the sending of ISDP version 2 packets from the device.

Default Enabled

Format isdp advertise-v2

Mode Global Config

4.38.4.1 no isdp advertise-v2

This command disables the sending of ISDP version 2 packets from the device.

Format no isdp advertise-v2

Mode Global Config

4.38.5 isdp enable

This command enables ISDP on an interface or range of interfaces.



Note...

ISDP must be enabled both globally and on the interface in order for the interface to transmit ISDP packets. If ISDP is globally disabled on the switch, the interface will not transmit ISDP packets, regardless of the ISDP status on the interface. To enable ISDP globally, use the command "isdp run" on page 516".

Default Enabled
Format isdp enable
Mode Interface Config

4.38.5.1 no isdp enable

This command disables ISDP on the interface.

Format no isdp enable
Mode Interface Config

4.38.6 clear isdp counters

This command clears ISDP counters.

Format clear isdp counters
Mode Privileged EXEC

4.38.7 clear isdp table

This command clears entries in the ISDP table.

Format clear isdp table
Mode Privileged EXEC

4.38.8 show isdp

This command displays global ISDP settings.

Format show isdp
Mode Privileged EXEC

Term	Definition
Timer	The frequency with which this device sends ISDP packets. This value is given in seconds.
Hold Time	The length of time the receiving device should save information sent by this device. This value is given in seconds.
Version 2 Advertisements	The setting for sending ISDPv2 packets. If disabled, version 1 packets are transmitted.
Neighbors table time since last change	The amount of time that has passed since the ISPD neighbor table changed.
Device ID	The Device ID advertised by this device. The format of this Device ID is characterized by the value of the Device ID Format object.
Device ID Format Capability	Indicates the Device ID format capability of the device. <code>serialNumber</code> indicates that the device uses a serial number as the format for its Device ID. <code>macAddress</code> indicates that the device uses a Layer 2 MAC address as the format for its Device ID. <code>other</code> indicates that the device uses its platform-specific format as the format for its Device ID.

Term	Definition
Device ID Format	Indicates the Device ID format of the device. <code>serialNumber</code> indicates that the value is in the form of an ASCII string containing the device serial number. <code>macAddress</code> indicates that the value is in the form of a Layer 2 MAC address. <code>other</code> indicates that the value is in the form of a platform specific ASCII string containing info that identifies the device. For example, ASCII string contains serialNumber appended/prepended with system name.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show isdp

```

Timer..... 30
Hold Time..... 180
Version 2 Advertisements..... Enabled
Neighbors table time since last change..... 0 days 00:00:00
Device ID..... 1114728
Device ID format capability..... Serial Number, Host Name
Device ID format..... Serial Number

```

4.38.9 show isdp interface

This command displays ISDP settings for the specified interface.

Format show isdp interface {all | slot/port}

Mode Privileged EXEC

Term	Definition
Interface	The <i>slot/port</i> of the specified interface.
Mode	ISDP mode enabled/disabled status for the interface(s).

Example: The following shows example CLI display output for the command.

(Routing) #show isdp interface 0/1

```

Interface      Mode
-----
0/1            Enabled

```

Example: The following shows example CLI display output for the command.

(Switching) #show isdp interface all

```

Interface      Mode
-----
0/1            Enabled
0/2            Enabled
0/3            Enabled
0/4            Enabled

```


Format show isdp neighbors [{slot/port | detail}]
Mode Privileged EXEC

Term	Definition
Device ID	The device ID associated with the neighbor which advertised the information.
IP Addresses	The IP addresses associated with the neighbor.
Capability	ISDP functional capabilities advertised by the neighbor.
Platform	The hardware platform advertised by the neighbor.
Interface	The interface (slot/port) on which the neighbor's advertisement was received.
Port ID	The port ID of the interface from which the neighbor sent the advertisement.
Hold Time	The hold time advertised by the neighbor.
Advertisement Version	The version of the advertisement packet received from the neighbor.
Entry Last Changed Time	Time when the entry was last modified.
Version	The software version that the neighbor is running.

Example: The following shows example CLI display output for the command.

```
(Switching) #show isdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge,
                  S - Switch, H - Host, I - IGMP, r - Repeater
```

Device ID	Intf	Holdtime	Capability	Platform	Port ID
Switch	0/1	165	RI	cisco WS-C4948	GigabitEthernet1/1

Example: The following shows example CLI display output for the command.

```
(Switching) #show isdp neighbors detail
```

```
Device ID           0001f45f1bc0
Address(es):
  IP Address:       10.27.7.57
Capability          Router Trans Bridge Switch IGMP
Platform           SecureStack C2
Interface          0/48
Port ID            ge.3.14
Holdtime           131
Advertisement Version 2
Entry last changed time 0 days 00:01:59
Version:           05.00.56
```

4.38.12 show isdp traffic

This command displays ISDP statistics.

Format show isdp traffic
Mode Privileged EXEC

Term	Definition
ISDP Packets Received	Total number of ISDP packets received
ISDP Packets Transmitted	Total number of ISDP packets transmitted
ISDPv1 Packets Received	Total number of ISDPv1 packets received

Term	Definition
ISDPv1 Packets Transmitted	Total number of ISDPv1 packets transmitted
ISDPv2 Packets Received	Total number of ISDPv2 packets received
ISDPv2 Packets Transmitted	Total number of ISDPv2 packets transmitted
ISDP Bad Header	Number of packets received with a bad header
ISDP Checksum Error	Number of packets received with a checksum error
ISDP Transmission Failure	Number of packets which failed to transmit
ISDP Invalid Format	Number of invalid packets received
ISDP Table Full	Number of times a neighbor entry was not added to the table due to a full database
ISDP IP Address Table Full	Displays the number of times a neighbor entry was added to the table without an IP address.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show isdp traffic

```
ISDP Packets Received..... 4253
ISDP Packets Transmitted..... 127
ISDPv1 Packets Received..... 0
ISDPv1 Packets Transmitted..... 0
ISDPv2 Packets Received..... 4253
ISDPv2 Packets Transmitted..... 4351
ISDP Bad Header..... 0
ISDP Checksum Error..... 0
ISDP Transmission Failure..... 0
ISDP Invalid Format..... 0
ISDP Table Full..... 392
ISDP IP Address Table Full..... 737
```

4.38.13 debug isdp packet

This command enables tracing of ISDP packets processed by the switch. ISDP must be enabled on both the device and the interface in order to monitor packets for a particular interface.

Format debug isdp packet [{receive | transmit}]

Mode Privileged EXEC

4.38.13.1 no debug isdp packet

This command disables tracing of ISDP packets on the receive or the transmit sides or on both sides.

Format no debug isdp packet [{receive | transmit}]

Mode Privileged EXEC

4.39 Interface Error Disable and Auto Recovery

Interface error disable automatically disables an interface when an error is detected; no traffic is allowed until the interface is either manually re-enabled or, if auto recovery is configured, the configured auto recovery time interval has passed.

For interface error disable and auto recovery, an error condition is detected for an interface, the interface is placed in a diagnostic disabled state by shutting down the interface. The error disabled interface does not allow any traffic until the interface is re-enabled. The error disabled interface can be manually enabled. Alternatively administrator can enable auto recovery feature. FASTPATH Auto Recovery re-enables the interface after the expiry of configured time interval.

4.39.1 errdisable recovery cause

Use this command to enable auto recovery for a specified cause or all causes. When auto recovery is enabled, ports in the diag-disable state are recovered (link up) when the recovery interval expires. If the interface continues to experience errors, the interface may be placed back in the diag-disable state and disabled (link down). Interfaces in the diag-disable state can be manually recovered by entering the `no shutdown` command for the interface.

Default	None
Format	<code>errdisable recovery cause {all arp-inspection bpduguard dhcp-rate-limit sfp-mismatch udd ucast-storm bcast-storm mcast-storm bpdustorm keep-alive}</code>
Mode	Global Config

4.39.1.1 no errdisable recovery cause

Use this command to disable auto recovery for a specific cause. When disabled, auto recovery will not occur for interfaces in a diag-disable state due to that cause.

Format	<code>no errdisable recovery cause {all arp-inspection bpduguard dhcp-rate-limit sfp-mismatch udd ucast-storm bcast-storm mcast-storm bpdustorm keep-alive}</code>
Mode	Global Config

4.39.2 errdisable recovery interval

Use this command to configure the auto recovery time interval. The auto recovery time interval is common for all causes. The time can be any value from 30 to 86400 seconds. When the recovery interval expires, the system attempts to bring interfaces in the diag-disable state back into service (link up).

Default	300
Format	<code>errdisable recovery interval 30-86400</code>
Mode	Global Config

4.39.2.1 no errdisable recovery interval

Use this command to reset the auto recovery interval to the factory default value of 300.

Format	<code>no errdisable recovery interval</code>
Mode	Global Config

4.39.3 show errdisable recovery

Use this command to display the errdisable configuration status of all configurable causes.

Format	<code>show errdisable recovery</code>
Mode	Privileged EXEC

The following information is displayed.

Parameter	Description
arp-inspection	Enable/Disable status of arp-inspection auto recovery.

Parameter	Description
bpdguard	Enable/Disable status of bpduguard auto recovery.
dhcp-rate-limit	Enable/Disable status of dhcp-rate-limit auto recovery.
sfp-mismatch	Enable/Disable status of sfp-mismatch auto recovery.
udld	Enable/Disable status of UDLD auto recovery.
bpdustorm	Enable/Disable status of bpdustorm auto recovery.
keepalive	Enable/Disable status of keepalive auto recovery.
time interval	Time interval for auto recovery in seconds.

Example:

```
(Routing) #
(Routing) #
(Routing) #show errdisable recovery
```

```
Errdisable Reason      Auto-recovery Status
-----
dhcp-rate-limit        Disabled
arp-inspection         Disabled
udld                   Disabled
bpduguard              Disabled
bpdustorm              Disabled
sfp-mismatch           Disabled
keepalive              Disabled

Timeout for Auto-recovery from D-Disable state  300
```

4.39.4 show interfaces status err-disabled

Use this command to display the interfaces that are error disabled and the amount of time remaining for auto recovery.

Format show interfaces status err-disabled
Mode Privileged EXEC

The following information is displayed.

Parameter	Description
interface	An interface that is error disabled.
Errdisable Reason	The cause of the interface being error disabled.
Auto-Recovery Time Left	The amount of time left before auto recovery begins.

Example:

```
(Routing) #show interfaces status err-disabled
```

Interface	Errdisable Reason	Auto-Recovery Time Left(sec)
-----	-----	-----
0/1	udld	279
0/2	bpduguard	285
0/3	bpdustorm	291
0/4	keepalive	11

4.40 Multicast Handling Commands**4.40.1 multicast (interface)**

This command configures the port based multicast handling. The command defines the handling for port specific unregistered multicast addresses. The default handling in FASTPATH is that such packets are flooded (argument 'default'). The user can change the behaviour that such packets are dropped (argument 'none'). The flooding mode is set per port. It can be applied to either individual physical ports or to a port-channel.

Format `multicast flood {default | none}`

Mode Interface Config

4.40.2 show port multicast

This command displays the port based multicast handling. The commands displays for a specified interface or all interfaces the multicast flooding settings. The displayed fields are

- the interface
- the multicast flooding, indicating whether a packet with unregistered multicast address should be flooded or not (yes/no)

Format `show port multicast {<unit/slot/port> | all}`

Mode Privileged Exec

4.40.3 multicast (VLAN)

This command configures the VLAN based multicast handling. The command defines the handling for VLAN based unregistered multicast addresses. The default handling in FASTPATH is that such packets are flooded (argument 'default'). The user can change the behaviour that such packets are dropped (argument 'none'). The flooding mode is set per VLAN, the VLAN ID range is 1-4093. If a created VLAN is deleted again, the flooding mode is reset to default.

Format `multicast <1-4093> flood {default | none}`

Mode VLAN Config

4.40.4 show vlan multicast

This command displays the VLAN based multicast handling. The command displays for a specified VLAN ID (range is 1-4093) or all created VLANs (inclusive default VLAN) the multicast flooding settings. The displayed fields are

- the VLAN Identifier (VID) associated with each VLAN
- the VLAN type (default, static or dynamic)
- the multicast flooding, indicating whether a packet with unregistered multicast address should be flooded or not (yes/no)

Format `show vlan multicast { <1 - 4093> | all }`
Mode Privileged Exec

4.40.5 `set igmp proxy-report interfacemode`

This command enables sending of IGMP reports to the specified interface. The reports are sent for all locally subscribed multicast groups. All received membership reports are forwarded at once, the leave report is only sent if the last member has left the group. This command is similar to "set igmp mrouter interfacemode" command, but multicast traffic will not be forwarded to the interface by default. The command can also be used for "querier" ports (connected to an external querier) to avoid the forwarding of multicast traffic for multicast groups registered on other interfaces.

The forwarding of IGMP messages is done independent of any VLAN configuration. If the forwarding should be done with considering the VLAN configuration, the parameter "vlan-aware" must be specified. In this case the IGMP message is only forwarded if the forwarding port (egress) is member of the related (ingress) VLAN.

Format `set igmp proxy-report interfacemode [vlan-aware]`
Mode Interface Config

4.40.5.1 `no set igmp proxy-report interfacemode`

If using the 'no' command with parameter "vlan-aware" only the vlan aware flag is deleted but the proxy setting is kept. If using the 'no' command without parameter, the proxy setting is deleted.

Format `no set igmp proxy-report interfacemode [vlan-aware]`
Mode Interface Config

4.41 Port Bridging Commands

4.41.1 L2-port-bridge

This command configures layer2 port bridging. L2 port bridging is a feature that allows a packet to be transmitted in egress direction through the same port it was received on.

Format **L2-port-bridge**

Mode Interface Config

4.41.1.1 no L2-port-bridge

This command resets L2 port bridging.

Format **no L2-port-bridge**

Mode Interface Config

4.41.2 show port L2-port-bridge

This command displays the L2 port bridge setting. The command displays for a specified interface or all interfaces the settings. The displayed fields are

- the interface
- enabled/disabled L2 port bridge

Format **show port L2-port-bridge** {<unit/slot/port> | all}

Mode Priviledged Exec

5 Routing Commands

This chapter describes the routing commands available in the FASTPATH CLI.

The Routing Commands chapter contains the following sections:

- "Address Resolution Protocol Commands" on page 528"
- "IP Routing Commands" on page 534"
- "Routing Policy Commands" on page 555"
- "Router Discovery Protocol Commands" on page 570"
- "Virtual Router Redundancy Protocol Commands" on page 575"
- "DHCP and BOOTP Relay Commands" on page 582"
- "IP Helper Commands" on page 585"
- "Open Shortest Path First Commands" on page 591"
- "Routing Information Protocol Commands" on page 635"
- "ICMP Throttling Commands" on page 641"
- "Bidirectional Forwarding Detection Commands" on page 643"



Note...

The commands in this chapter are in one of three functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- Clear commands clear some or all of the settings to factory defaults.

5.1 Address Resolution Protocol Commands

This section describes the commands you use to configure Address Resolution Protocol (ARP) and to view ARP information on the switch. ARP associates IP addresses with MAC addresses and stores the information as ARP entries in the ARP cache.

5.1.1 arp

This command creates an ARP entry. The value for *ipaddress* is the IP address of a device on a subnet attached to an existing routing interface. The parameter *macaddr* is a unicast MAC address for that device. The interface parameter specifies the next hop interface.

The format of the MAC address is 6 two-digit hexadecimal numbers that are separated by colons, for example 00:06:29:32:81:40.

Format	<code>arp ipaddress macaddr interface {unit/slot/port vlan id}</code>
Mode	Global Config

5.1.1.1 no arp

This command deletes an ARP entry. The value for *arpenry* is the IP address of the interface. The value for *ipaddress* is the IP address of a device on a subnet attached to an existing routing interface. The parameter *macaddr* is a unicast MAC address for that device. The interface parameter specifies the next hop interface.

Format no arp *ipaddress macaddr interface unit/slot/port*

Mode Global Config

5.1.2 ip proxy-arp

This command enables proxy ARP on a router interface or range of interfaces. Without proxy ARP, a device only responds to an ARP request if the target IP address is an address configured on the interface where the ARP request arrived. With proxy ARP, the device may also respond if the target IP address is reachable. The device only responds if all next hops in its route to the destination are through interfaces other than the interface that received the ARP request.

Default enabled

Format ip proxy-arp

Mode Interface Config

5.1.2.1 no ip proxy-arp

This command disables proxy ARP on a router interface.

Format no ip proxy-arp

Mode Interface Config

5.1.3 ip local-proxy-arp

Use this command to allow an interface to respond to ARP requests for IP addresses within the subnet and to forward traffic between hosts in the subnet.

Default disabled

Format ip local-proxy-arp

Mode Interface Config

5.1.3.1 no ip local-proxy-arp

This command resets the local proxy ARP mode on the interface to the default value.

Format no ip local-proxy-arp

Mode Interface Config

5.1.4 arp cachesize

This command configures the ARP cache size. The ARP cache size value is a platform specific integer value. The default size also varies depending on the platform.

Format arp cachesize *platform specific integer value*

Mode Global Config

5.1.4.1 no arp cachesize

This command configures the default ARP cache size.

Format no arp cachesize

Mode Global Config

5.1.5 arp dynamicrenew

This command enables the ARP component to automatically renew dynamic ARP entries when they age out. When an ARP entry reaches its maximum age, the system must decide whether to retain or delete the entry. If the entry has recently been used to forward data packets, the system will renew the entry by sending an ARP request to the neighbor. If the neighbor responds, the age of the ARP cache entry is reset to 0 without removing the entry from the hardware. Traffic to the host continues to be forwarded in hardware without interruption. If the entry is not being used to forward data packets, then the entry is deleted from the ARP cache, unless the dynamic renew option is enabled. If the dynamic renew option is enabled, the system sends an ARP request to renew the entry. When an entry is not renewed, it is removed from the hardware and subsequent data packets to the host trigger an ARP request. Traffic to the host may be lost until the router receives an ARP reply from the host. Gateway entries, entries for a neighbor router, are always renewed. The dynamic renew option applies only to host entries.

The disadvantage of enabling dynamic renew is that once an ARP cache entry is created, that cache entry continues to take space in the ARP cache as long as the neighbor continues to respond to ARP requests, even if no traffic is being forwarded to the neighbor. In a network where the number of potential neighbors is greater than the ARP cache capacity, enabling dynamic renew could prevent some neighbors from communicating because the ARP cache is full.

Default disabled

Format arp dynamicrenew

Mode Privileged EXEC

5.1.5.1 no arp dynamicrenew

This command prevents dynamic ARP entries from renewing when they age out.

Format no arp dynamicrenew

Mode Privileged EXEC

5.1.6 arp purge

This command causes the specified IP address to be removed from the ARP cache. Only entries of type dynamic or gateway are affected by this command.

Format arp purge *ipaddress ipaddress interface {unit/slot/port | vlan id}*

Mode Privileged EXEC

Parameter	Description
ipaddress	The IP address to remove from the ARP cache.
interface	The interface from which IP addresses will be removed.

5.1.7 arp resptime

This command configures the ARP request response timeout.

The value for *seconds* is a valid positive integer, which represents the IP ARP entry response timeout time in seconds. The range for *seconds* is between 1-10 seconds.

Default 1
Format arp resptime 1-10
Mode Global Config

5.1.7.1 no arp resptime

This command configures the default ARP request response timeout.

Format no arp resptime
Mode Global Config

5.1.8 arp retries

This command configures the ARP count of maximum request for retries.

The value for *retries* is an integer, which represents the maximum number of request for retries. The range for *retries* is an integer between 0-10 retries.

Default 4
Format arp retries 0-10
Mode Global Config

5.1.8.1 no arp retries

This command configures the default ARP count of maximum request for retries.

Format no arp retries
Mode Global Config

5.1.9 arp timeout

This command configures the ARP entry ageout time.

The value for *seconds* is a valid positive integer, which represents the IP ARP entry ageout time in seconds. The range for *seconds* is between 15-21600 seconds.

Default 1200
Format arp timeout 15-21600
Mode Global Config

5.1.9.1 no arp timeout

This command configures the default ARP entry ageout time.

Format no arp timeout

Mode Global Config

5.1.10 clear arp-cache

This command causes all ARP entries of type dynamic to be removed from the ARP cache . If the *gateway* keyword is specified, the dynamic entries of type gateway are purged as well.

Format clear arp-cache [gateway]

Mode Privileged EXEC

5.1.11 clear arp-switch

Use this command to clear the contents of the switch's Address Resolution Protocol (ARP) table that contains entries learned through the Management port. To observe whether this command is successful, ping from the remote system to the DUT. Issue the `show arp switch` command to see the ARP entries. Then issue the `clear arp-switch` command and check the `show arp switch` entries. There will be no more arp entries.

Format clear arp-switch

Mode Privileged EXEC

5.1.12 show arp

This command displays the Address Resolution Protocol (ARP) cache. The displayed results are not the total ARP entries. To view the total ARP entries, the operator should view the `show arp` results in conjunction with the `show arp switch` results.

Format show arp

Mode Privileged EXEC

Term	Definition
Age Time (seconds)	The time it takes for an ARP entry to age out. This is configurable. Age time is measured in seconds.
Response Time (seconds)	The time it takes for an ARP request timeout. This value is configurable. Response time is measured in seconds.
Retries	The maximum number of times an ARP request is retried. This value is configurable.
Cache Size	The maximum number of entries in the ARP table. This value is configurable.
Dynamic Renew Mode	Displays whether the ARP component automatically attempts to renew dynamic ARP entries when they age out.
Total Entry Count Current / Peak	The total entries in the ARP table and the peak entry count in the ARP table.
Static Entry Count Current / Max	The static entry count in the ARP table and maximum static entry count in the ARP table.

The following are displayed for each ARP entry:

Term	Definition
IP Address	The IP address of a device on a subnet attached to an existing routing interface.
MAC Address	The hardware MAC address of that device.

Term	Definition
Interface	The routing <i>slot/port</i> associated with the device ARP entry.
Type	The type that is configurable. The possible values are Local, Gateway, Dynamic and Static.
Age	The current age of the ARP entry since last refresh (in hh:mm:ss format)

5.1.13 show arp brief

This command displays the brief Address Resolution Protocol (ARP) table information.

Format show arp brief

Mode Privileged EXEC

Term	Definition
Age Time (seconds)	The time it takes for an ARP entry to age out. This value is configurable. Age time is measured in seconds.
Response Time (seconds)	The time it takes for an ARP request timeout. This value is configurable. Response time is measured in seconds.
Retries	The maximum number of times an ARP request is retried. This value is configurable.
Cache Size	The maximum number of entries in the ARP table. This value is configurable.
Dynamic Renew Mode	Displays whether the ARP component automatically attempts to renew dynamic ARP entries when they age out.
Total Entry Count Current / Peak	The total entries in the ARP table and the peak entry count in the ARP table.
Static Entry Count Current / Max	The static entry count in the ARP table and maximum static entry count in the ARP table.

5.1.14 show arp switch

This command displays the contents of the switch's Address Resolution Protocol (ARP) table.

Format show arp switch

Mode Privileged EXEC

Term	Definition
IP Address	The IP address of a device on a subnet attached to the switch.
MAC Address	The hardware MAC address of that device.
Interface	The routing <i>slot/port</i> associated with the device's ARP entry.

5.2 IP Routing Commands

This section describes the commands you use to enable and configure IP routing on the switch.

5.2.1 routing

This command enables IPv4 and IPv6 routing for an interface or range of interfaces. You can view the current value for this function with the `show ip brief` command. The value is labeled as "Routing Mode."

Default	disabled
Format	routing
Mode	Interface Config

5.2.1.1 no routing

This command disables routing for an interface.

You can view the current value for this function with the `show ip brief` command. The value is labeled as "Routing Mode."

Format	no routing
Mode	Interface Config

5.2.2 ip routing

This command enables the IP Router Admin Mode for the master switch.

Format	ip routing
Mode	• Global Config • Virtual Router Config

5.2.2.1 no ip routing

This command disables the IP Router Admin Mode for the master switch.

Format	no ip routing
Mode	Global Config

5.2.3 ip address

This command configures an IP address on an interface or range of interfaces. You can also use this command to configure one or more secondary IP addresses on the interface. The command supports RFC 3021 and accepts using 31-bit prefixes on IPv4 point-to-point links. This command adds the label IP address in the command "show ip interface" on page 542".



Note...

The 31-bit subnet mask is only supported on routing interfaces. The feature is not supported on network port and service port interfaces because FASTPATH acts as a host, not a router, on these management interfaces.

Format `ip address ipaddr [subnetmask | /masklen] [secondary]`
Mode Interface Config

Parameter	Description
ipaddr	The IP address of the interface.
subnetmask	A 4-digit dotted-decimal number which represents the subnet mask of the interface.
masklen	Implements RFC 3021. Using the <i>/</i> notation of the subnet mask, this is an integer that indicates the length of the subnet mask. Range is 5 to 32 bits.

Example: The following example of the command shows the configuration of the subnet mask with an IP address in the dotted decimal format on interface 0/4/1.

```
(router1) #config
(router1) (Config)#interface 0/4/1
(router1) (Interface 0/4/1)#ip address 192.168.10.1 255.255.255.254
```

Example: The next example of the command shows the configuration of the subnet mask with an IP address in the */* notation on interface 0/4/1.

```
(router1) #config
(router1) (Config)#interface 0/4/1
(router1) (Interface 0/4/1)#ip address 192.168.10.1 /31
```

5.2.3.1 no ip address

This command deletes an IP address from an interface. The value for *ipaddr* is the IP address of the interface in a.b.c.d format where the range for a, b, c, and d is 1-255. The value for *subnetmask* is a 4-digit dotted-decimal number which represents the Subnet Mask of the interface. To remove all of the IP addresses (primary and secondary) configured on the interface, enter the command `no ip address`.

Format `no ip address [{ipaddr subnetmask [secondary]}]`
Mode Interface Config

5.2.4 ip address dhcp

This command enables the DHCPv4 client on an in-band interface so that it can acquire network information, such as the IP address, subnet mask, and default gateway, from a network DHCP server. When DHCP is enabled on the interface, the system automatically deletes all manually configured IPv4 addresses on the interface.

To enable the DHCPv4 client on an in-band interface and send DHCP client messages with the client identifier option, use the **ip address dhcp client-id** configuration command in interface configuration mode.

Default disabled
Format `ip address dhcp [client-id]`
Mode Interface Config

Example: In the following example, DHCPv4 is enabled on interface 0/4/1.

```
(router1) #config
(router1) (Config)#interface 0/4/1
(router1) (Interface 0/4/1)#ip address dhcp
```

5.2.4.1 no ip address dhcp

The **no ip address dhcp** command releases a leased address and disables DHCPv4 on an interface. The **no** form of the **ip address dhcp client-id** command removes the client-id option and also disables the DHCP client on the in-band interface.

Format no ip address dhcp [client-id]

Mode Interface Config

5.2.5 ip default-gateway

This command manually configures a default gateway for the switch. Only one default gateway can be configured. If you invoke this command multiple times, each command replaces the previous value.

When the system does not have a more specific route to a packet's destination, it sends the packet to the default gateway. The system installs a default IPv4 route with the gateway address as the next hop address. The route preference is 253. A default gateway configured with this command is more preferred than a default gateway learned from a DHCP server.

Format ip default-gateway *ipaddr*

Mode • Global Config
 • Virtual Router Config

Parameter	Description
ipaddr	The IPv4 address of an attached router.

Example: The following example sets the default gateway to 10.1.1.1.

```
(router1) #config
(router1) (Config)#ip default-gateway 10.1.1.1
```

5.2.5.1 no ip default-gateway

This command removes the default gateway address from the configuration.

Format no ip default-gateway *ipaddr*

Mode Interface Config

5.2.6 ip load-sharing

This command configures IP ECMP load balancing mode.

Default 6

Format ip load-sharing *mode* {inner | outer}

Mode Global Config

Parameter	Description
mode	Configures the load balancing or sharing mode for all EMCP groups. • 1: Based on a hash using the Source IP address of the packet. • 2: Based on a hash using the Destination IP address of the packet. • 3: Based on a hash using the Source and Destination IP addresses of the packet. • 4: Based on a hash using the Source IP address and the Source TCP/UDP Port field of the packet. • 5: Based on a hash using the Destination IP address and the Destination TCP/UDP Port field of the packet. • 6: Based on a hash using the Source and Destination IP address, and the Source and Destination TCP/UDP Port fields of the packet.
inner	Use the inner IP header for tunneled packets.
outer	Use the outer IP header for tunneled packets.

5.2.6.1 no ip load-sharing

Format no ip load-sharing

Mode Global Config

5.2.7 release dhcp

Use this command to force the DHCPv4 client to release the leased address from the specified interface. The DHCP client sends a DHCP Release message telling the DHCP server that it no longer needs the IP address, and that the IP address can be reassigned to another

5.2.8 renew dhcp

Use this command to force the DHCPv4 client to immediately renew an IPv4 address lease on the specified interface.



Note...

This command can be used on in-band ports as well as the service or network (out-of-band) port.

Format renew dhcp *slot/port*

Mode Privileged EXEC

5.2.9 renew dhcp network-port

Use this command to renew an IP address on a network port.

Format renew dhcp network-port

Mode Privileged EXEC

5.2.10 renew dhcp service-port

Use this command to renew an IP address on a service port.

Format `renew dhcp service-port`
Mode Privileged EXEC

5.2.11 `ip route`

This command configures a static route. The *ipaddr* parameter is a valid IP address, and *subnetmask* is a valid subnet mask. The *nexthopip* parameter is a valid IP address of the next hop router. Specifying `Null0` as *nexthop* parameter adds a static reject route. The optional *preference* parameter is an integer (value from 1 to 255) that allows you to specify the preference value (sometimes called “administrative distance”) of an individual static route. Among routes to the same destination, the route with the lowest preference value is the route entered into the forwarding database. By specifying the preference of a static route, you control whether a static route is more or less preferred than routes from dynamic routing protocols. The preference also controls whether a static route is more or less preferred than other static routes to the same destination. A route with a preference of 255 cannot be used to forward traffic.

For the static routes to be visible, you must perform the following steps:

- Enable ip routing globally.
- Enable ip routing for the interface.
- Confirm that the associated link is also up.

Default `preference—1`
Format `ip route ipaddr subnetmask { slot/port | Null0 | nexthopip [{slot/port| vlan-id}]} [preference]`
Mode Global Config

Example:

Subnetwork 9.0.0.0/24 is a connected subnetwork in global table and subnet 56.6.6.0/24 is reachable via a gateway 9.0.0.2 in the global table.

Subnet 8.0.0.0/24 is a connected subnetwork in virtual router *Red*.

Now we leak the 2 routes from global route table into the virtual router *Red* and leak the connected subnet 8.0.0.0/24 from *Red* to global table.

When leaking connected route in the global routing table to a virtual router, the /32 host route for the leaked host is added in the virtual router instance’s route table.

Also we add a non-leaked static route for 66.6.6.0/24 subnetwork scoped to the domain of virtual router *Red* below.

```
(Router) (Config)#ip routing
(Router) (Config)#ip vrf Red
(Router) (Config)#interface 0/27
(Router) (Interface 0/27)#routing
(Router) (Interface 0/27)#ip vrf forwarding Red
(Router) (Interface 0/27)#ip address 8.0.0.1 /24

(Router) (Interface 0/27)#interface 0/26
(Router) (Interface 0/26)#routing
(Router) (Interface 0/26)#ip address 9.0.0.1 /24
(Router) (Interface 0/26)#exit

(Router) (Config)#ip route 56.6.6.0 /24 9.0.0.2
```

Routes leaked from global routing table to VRF's route table are :
 (Router) (Config)#ip route vrf Red 9.0.0.2 255.255.255.255 9.0.0.2 0/26
 (Router) (Config)#ip route vrf Red 56.6.6.0 255.255.255.0 9.0.0.2 0/26

Route leaked from VRF's route table to global routing table is :
 (Router) (Config)#ip route 8.0.0.2 255.255.255.255 0/27

Route (non-leaked) internal to VRF's route table is :
 (Router) (Config)#ip route vrf Red 66.6.6.0 255.255.255.0 8.0.0.2

5.2.11.1 no ip route

This command deletes a single next hop to a destination static route. If you use the *nexthopip* parameter, the next hop is deleted. If you use the *preference* value, the preference value of the static route is reset to its default.

Format no ip route *ipaddr subnetmask* [{*nexthopip* [*preference*] | Null0}]
Mode Global Config

5.2.12 ip route default

This command configures the default route. The value for *nexthopip* is a valid IP address of the next hop router. The *preference* is an integer value from 1 to 255. A route with a preference of 255 cannot be used to forward traffic.

Default preference—1
Format ip route default *nexthopip* [*preference*]
Mode Global Config

5.2.12.1 no ip route default

This command deletes all configured default routes. If the optional *nexthopip* parameter is designated, the specific next hop is deleted from the configured default route and if the optional preference value is designated, the preference of the configured default route is reset to its default.

Format no ip route default [{*nexthopip* | *preference*}]
Mode Global Config

5.2.13 ip route distance

This command sets the default distance (preference) for static routes. Lower route distance values are preferred when determining the best route. The *ip route* and *ip route default* commands allow you to optionally set the distance (preference) of an individual static route. The default distance is used when no distance is specified in these commands. Changing the default distance does not update the distance of existing static routes, even if they were assigned the original default distance. The new default distance will only be applied to static routes created after invoking the *ip route distance* command.

Default 1
Format ip route distance 1-255
Mode Global Config

5.2.13.1 no ip route distance

This command sets the default static route preference value in the router. Lower route preference values are preferred when determining the best route.

Format no ip route distance
Mode Global Config

5.2.14 ip route net-prototype

This command adds net prototype IPv4 routes to the hardware.

Format ip route net-prototype *prefix/prefix-Length nexthopip num-routes*
Mode Global Config

Parameter	Description
prefix/prefix-length	The destination network and mask for the route.
nexthopip	The next-hop ip address, It must belong to an active routing interface, but it does not need to be resolved.
num-routes	The number of routes need to added into hardware starting from the given prefix argument and within the given prefix-length.

5.2.14.1 no ip route net-prototype

This command deletes all the net prototype IPv4 routes added to the hardware.

Format ip route net-prototype *prefix/prefix-Length nexthopip num-routes*
Mode Global Config

5.2.15 ip netdirbcast

This command enables the forwarding of network-directed broadcasts on an interface or range of interfaces. When enabled, network directed broadcasts are forwarded. When disabled they are dropped.

Default disabled
Format ip netdirbcast
Mode Interface Config

5.2.15.1 no ip netdirbcast

This command disables the forwarding of network-directed broadcasts. When disabled, network directed broadcasts are dropped.

Format no ip netdirbcast
Mode Interface Config

5.2.16 ip mtu

This command sets the IP Maximum Transmission Unit (MTU) on a routing interface or range of interfaces. The IP MTU is the size of the largest IP packet that can be transmitted on the interface without fragmentation. Forwarded packets are dropped if they exceed the IP MTU of the outgoing interface.

Packets originated on the router, such as OSPF packets, may be fragmented by the IP stack.

OSPF advertises the IP MTU in the Database Description packets it sends to its neighbors during database exchange. If two OSPF neighbors advertise different IP MTUs, they will not form an adjacency. (unless OSPF has been instructed to ignore differences in IP MTU with the `ip ospf mtu-ignore` command.)



Note...

The IP MTU size refers to the maximum size of the IP packet (IP Header + IP payload). It does not include any extra bytes that may be required for Layer-2 headers. To receive and process packets, the Ethernet MTU (see “mtu” on page 305”) must take into account the size of the Ethernet header.

For more information about the FASTPATH IP MTU, see the *Maximum Transmission Unit in FASTPATH* Application Note (document number FASTPATH-AN40X-R).

Default 1500 bytes
Format `ip mtu 68-12270`
Mode Interface Config

5.2.16.1 `no ip mtu`

This command resets the ip mtu to the default value.

Format `no ip mtu`
Mode Interface Config

5.2.17 `encapsulation`

This command configures the link layer encapsulation type for the packet on an interface or range of interfaces. The encapsulation type can be ethernet or snap.

Default ethernet
Format `encapsulation {ethernet | snap}`
Mode Interface Config



Note...

Routed frames are always ethernet encapsulated when a frame is routed to a VLAN.

5.2.18 `show dhcp lease`

This command displays a list of IPv4 addresses currently leased from a DHCP server on a specific in-band interface or all in-band interfaces. This command does not apply to service or network ports.

Format `show dhcp lease [interface slot/port]`
Modes Privileged EXEC

Term	Definition
IP address, Subnet mask	The IP address and network mask leased from the DHCP server

Term	Definition
DHCP Lease server	The IPv4 address of the DHCP server that leased the address.
State	State of the DHCPv4 Client on this interface
DHCP transaction ID	The transaction ID of the DHCPv4 Client
Lease	The time (in seconds) that the IP address was leased by the server
Renewal	The time (in seconds) when the next DHCP renew Request is sent by DHCPv4 Client to renew the leased IP address
Rebind	The time (in seconds) when the DHCP Rebind process starts
Retry count	Number of times the DHCPv4 client sends a DHCP REQUEST message before the server responds

5.2.19 show ip brief

This command displays the summary information of the IP global configurations, including the ICMP rate limit configuration and the global ICMP Redirect configuration.

Format show ip brief

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Default Time to Live	The computed TTL (Time to Live) of forwarding a packet from the local router to the final destination.
Routing Mode	Shows whether the routing mode is enabled or disabled.
Maximum Next Hops	The maximum number of next hops the packet can travel.
Maximum Routes	The maximum number of routes the packet can travel.
ICMP Rate Limit Interval	Shows how often the token bucket is initialized with burst-size tokens. <i>Burst-interval</i> is from 0 to 2147483647 milliseconds. The default <i>burst-interval</i> is 1000 msec.
ICMP Rate Limit Burst Size	Shows the number of ICMPv4 error messages that can be sent during one <i>burst-interval</i> . The range is from 1 to 200 messages. The default value is 100 messages.
ICMP Echo Replies	Shows whether ICMP Echo Replies are enabled or disabled.
ICMP Redirects	Shows whether ICMP Redirects are enabled or disabled.

Example: The following shows example CLI display output for the command.
(Switch) #show ip brief

```

Default Time to Live..... 64
Routing Mode..... Disabled
Maximum Next Hops..... 4
Maximum Routes..... 128
ICMP Rate Limit Interval..... 1000 msec
ICMP Rate Limit Burst Size..... 100 messages
ICMP Echo Replies..... Enabled
ICMP Redirects..... Enabled

```

5.2.20 show ip interface

This command displays all pertinent information about the IP interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

- Format** `show ip interface {slot/port/vlan 1-4093/loopback 0-7}`
- Modes** • Privileged EXEC
- User EXEC

Term	Definition
Routing Interface Status	Determine the operational status of IPv4 routing Interface. The possible values are Up or Down.
Primary IP Address	The primary IP address and subnet masks for the interface. This value appears only if you configure it.
Method	Shows whether the IP address was configured manually or acquired from a DHCP server.
Secondary IP Address	One or more secondary IP addresses and subnet masks for the interface. This value appears only if you configure it.
Helper IP Address	The helper IP addresses configured by the command "ip helper-address (Interface Config)" on page 587".
Routing Mode	The administrative mode of router interface participation. The possible values are enable or disable. This value is configurable.
Administrative Mode	The administrative mode of the specified interface. The possible values of this field are enable or disable. This value is configurable.
Forward Net Directed Broadcasts	Displays whether forwarding of network-directed broadcasts is enabled or disabled. This value is configurable.
Proxy ARP	Displays whether Proxy ARP is enabled or disabled on the system.
Local Proxy ARP	Displays whether Local Proxy ARP is enabled or disabled on the interface.
Active State	Displays whether the interface is active or inactive. An interface is considered active if its link is up and it is in forwarding state.
Link Speed Data Rate	An integer representing the physical link data rate of the specified interface. This is measured in Megabits per second (Mbps).
MAC Address	The burned in physical address of the specified interface. The format is 6 two-digit hexadecimal numbers that are separated by colons.
Encapsulation Type	The encapsulation type for the specified interface. The types are: Ethernet or SNAP.
IP MTU	The maximum transmission unit (MTU) size of a frame, in bytes.
Bandwidth	Shows the bandwidth of the interface.
Destination Unreachables	Displays whether ICMP Destination Unreachables may be sent (enabled or disabled).
ICMP Redirects	Displays whether ICMP Redirects may be sent (enabled or disabled).
DHCP Client Identifier	The client identifier is displayed in the output of the command only if DHCP is enabled with the client-id option on the in-band interface. See "ip address dhcp" on page 535".

Example: The following shows example CLI display output for the command.
(switch)#show ip interface 0/2

```

Routing Interface Status..... Down
Primary IP Address..... 1.2.3.4/255.255.255.0
Method..... Manual
Secondary IP Address(es)..... 21.2.3.4/255.255.255.0
..... 22.2.3.4/255.255.255.0
Helper IP Address..... 1.2.3.4
..... 1.2.3.5
Routing Mode..... Disable
Administrative Mode..... Enable
Forward Net Directed Broadcasts..... Disable

```

```

Proxy ARP..... Enable
Local Proxy ARP..... Disable
Active State..... Inactive
Link Speed Data Rate..... Inactive
MAC Address..... 00:10:18:82:0C:68
Encapsulation Type..... Ethernet
IP MTU..... 1500
Bandwidth..... 100000 kbps
Destination Unreachables..... Enabled
ICMP Redirects..... Enabled

```

Example: In the following example the DHCP client is enabled on a VLAN routing interface.

```
(Routing) #show ip interface vlan 10
```

```

Routing Interface Status..... Up
Method..... DHCP
Routing Mode..... Enable
Administrative Mode..... Enable
Forward Net Directed Broadcasts..... Disable
Active State..... Inactive
Link Speed Data Rate..... 10 Half
MAC address..... 00:10:18:82:16:0E
Encapsulation Type..... Ethernet
IP MTU..... 1500
Bandwidth..... 10000 kbps
Destination Unreachables..... Enabled
ICMP Redirects..... Enabled
Interface Suppress Status..... Unsuppressed
DHCP Client Identifier..... 0fastpath-0010.1882.160E-v110

```

5.2.21 show ip interface brief

This command displays summary information about IP configuration settings for all ports in the router, and indicates how each IP address was assigned.

Format show ip interface brief

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	slot/port
State	Routing operational state of the interface.
IP Address	The IP address of the routing interface in 32-bit dotted decimal format.
IP Mask	The IP mask of the routing interface in 32-bit dotted decimal format.
Method	Indicates how each IP address was assigned. The field contains one of the following values: • DHCP - The address is leased from a DHCP server. • Manual - The address is manually configured.

Example: The following shows example CLI display output for the command.

```
(alpha1) #show ip interface brief
```

```

Interface   State   IP Address      IP Mask          Method
-----
0/17        Up      192.168.75.1    255.255.255.0    DHCP

```


5.2.22 show ip load-sharing

This command displays the currently configured IP ECMP load balancing mode.

Format show ip load-sharing

Mode Privileged Exec

Example: The following shows example CLI display output for the command.

(Routing) #show ip load-sharing

```
ip load-sharing 6 inner
```

5.2.23 show ip protocols

This command lists a summary of the configuration and status for each unicast routing protocol running in the specified virtual router. The command lists routing protocols which are configured and enabled. If a protocol is selected on the command line, the display will be limited to that protocol.

Format show ip protocols [ospf|rip]

Mode Privileged EXEC

Parameter	Description
Routing Protocol	OSPFv2.
Router ID	The router ID configured for OSPFv2.
OSPF Admin Mode	Whether OSPF is enabled or disabled globally.
Maximum Paths	The maximum number of next hops in an OSPF route.
Routing for Networks	The address ranges configured with an OSPF network command.
Distance	The administrative distance (or "route preference") for intra-area, inter-area, and external routes.
Default Route Advertise	Whether OSPF is configured to originate a default route.
Always	Whether default advertisement depends on having a default route in the common routing table.
Metric	The metric configured to be advertised with the default route.
Metric Type	The metric type for the default route.
Redist Source	A type of routes that OSPF is redistributing.
Metric	The metric to advertise for redistributed routes of this type.
Metric Type	The metric type to advertise for redistributed routes of this type.
Subnets	Whether OSPF redistributes subnets of classful addresses, or only classful prefixes.
Dist List	A distribute list used to filter routes of this type. Only routes that pass the distribute list are redistributed.
Number of Active Areas	The number of OSPF areas with at least one interface running on this router. Also broken down by area type.
ABR Status	Whether the router is currently an area border router. A router is an area border router if it has interfaces that are up in more than one area.
ASBR Status	Whether the router is an autonomous system boundary router. The router is an ASBR if it is redistributing any routes or originating a default route.
RIP Section	
RIP Admin Mode	Whether RIP is globally enabled.

Parameter	Description
Split Horizon Mode	Whether RIP advertises routes on the interface where they were received.
Default Metric	The metric assigned to redistributed routes.
Default Route Advertise	Whether this router is originating a default route.
Distance	The administrative distance for RIP routes.
Redistribution	A table showing information for each source protocol (connected, static and ospf). For each of these source the distribution list and metric are shown. Fields which are not configured are left blank. For ospf, configured ospf match parameters are also shown.
Interface	The interfaces where RIP is enabled and the version sent and accepted on each interface.

Example: The following shows example CLI display output for the command.

(Router) #show ip protocols

```

Routing Protocol..... BGP
Router ID..... 6.6.6.6
Local AS Number..... 65001
BGP Admin Mode..... Enable
Maximum Paths..... Internal 32, External 32
Always compare MED ..... FALSE
Maximum AS Path Length ..... 75
Fast Internal Failover ..... Enable
Fast External Failover ..... Enable

```

```

Distance..... Ext 20 Int 200 Local 200

```

Address	Wildcard	Distance	Pfx List
172.20.0.0	0.0.255.255	40	None
172.21.0.0	0.0.255.255	45	1

```

Prefix List In..... PfxList1
Prefix List Out..... None

```

Redistributing:

Source	Metric	Dist List	Route Map
connected		connected_list	
static	32120		static_routemap
rip	30000		rip_routemap
ospf			ospf_map
ospf match: int ext1 nssa-ext2			

Networks Originated:

```

10.1.1.0 255.255.255.0 (active)
20.1.1.0 255.255.255.0

```

Neighbors:

```

172.20.1.100
  Filter List In..... 1
  Filter List Out..... 2
  Prefix List In..... PfxList2
  Prefix List Out..... PfxList3
  Route Map In..... rmapUp
  Route Map Out..... rmapDown
172.20.5.1
  Prefix List Out..... PfxList12

```

```

Routing Protocol..... OSPFv2
Router ID..... 6.6.6.6
OSPF Admin Mode..... Enable
Maximum Paths..... 32
Routing for Networks..... 172.24.0.0 0.0.255.255 area 0
                        10.0.0.0 0.255.255.255 area 1
                        192.168.75.0 0.0.0.255 area 2
Distance..... Intra 110 Inter 110 Ext 110

Default Route Advertise..... Disabled
Always..... FALSE
Metric..... Not configured
Metric Type..... External Type 2

Redist
Source      Metric      Metric Type      Subnets      Dist List
-----
static      default          2              Yes           None
connected   10                2              Yes           1

Number of Active Areas..... 3 (3 normal, 0 stub, 0 nssa)
ABR Status..... Yes
ASBR Status..... Yes

```

```

Routing Protocol..... RIP
RIP Admin Mode..... Enable
Split Horizon Mode..... Simple
Default Metric..... Not configured
Default Route Advertise..... Disable
Distance..... 120

```

Redistribution:

```

Source      Metric Dist List Match
-----
connected   6
static      10          15
ospf        20 int ext1 ext2 nssa-ext1

```

```

Interface      Send      Recv
-----
0/25           RIPv2     RIPv2

```

5.2.24 show ip route

This command displays the routing table. The *ip-address* specifies the network for which the route is to be displayed and displays the best matching best-route for the address. The *mask* specifies the subnet mask for the given *ip-address*. When you use the *longer-prefixes* keyword, the *ip-address* and *mask* pair becomes the prefix, and the command displays the routes to the addresses that match that prefix. Use the *protocol* parameter to specify the protocol that installed the routes. The value for *protocol* can be *connected*, *ospf*, *rip*, *static*. Use the *all* parameter to display all routes including best and nonbest routes. If you do not use the *all* parameter, the command displays only the best route.



Note...

If you use the *connected* keyword for *protocol*, the *all* option is not available because there are no best or nonbest connected routes.

**Note...**

If you use the `static` keyword for *protocol*, the `description` option is also available, for example: `show ip route ip-address static description`. This command shows the description configured with the specified static route(s).

Format	<code>show ip route [{ip-address [protocol] {ip-address mask [longer-prefixes] [protocol] protocol} [all] all}]</code>
Modes	• Privileged EXEC • User EXEC

Term	Definition
Route Codes	The key for the routing protocol codes that might appear in the routing table output.

The `show ip route` command displays the routing tables in the following format:

Code IP-Address/Mask [Preference/Metric] via Next-Hop, Route-Timestamp, Interface, Truncated

The columns for the routing table display the following information:

Term	Definition
Code	The codes for the routing protocols that created the routes.
Default Gateway	The IP address of the default gateway. When the system does not have a more specific route to a packet's destination, it sends the packet to the default gateway.
IP-Address/Mask	The IP-Address and mask of the destination network corresponding to this route.
Preference	The administrative distance associated with this route. Routes with low values are preferred over routes with higher values.
Metric	The cost associated with this route.
via Next-Hop	The outgoing router IP address to use when forwarding traffic to the next router (if any) in the path toward the destination.
Route-Timestamp	The last updated time for dynamic routes. The format of Route-Timestamp will be • Days:Hours:Minutes if days >= 1 • Hours:Minutes:Seconds if days < 1
Interface	The outgoing router interface to use when forwarding traffic to the next destination. For reject routes, the next hop interface would be Null0 interface.
T	A flag appended to a route to indicate that it is an ECMP route, but only one of its next hops has been installed in the forwarding table. The forwarding table may limit the number of ECMP routes or the number of ECMP groups. When an ECMP route cannot be installed because such a limit is reached, the route is installed with a single next hop. Such truncated routes are identified by a T after the interface name.

To administratively control the traffic destined to a particular network and prevent it from being forwarded through the router, you can configure a static reject route on the router. Such traffic would be discarded and the ICMP destination unreachable message is sent back to the source. This is typically used for preventing routing loops. The reject route added in the RTO is of the type **OSPF Inter-Area**. Reject routes (routes of REJECT type installed by any protocol) are not redistributed by OSPF/RIP. Reject routes are supported in both OSPFv2 and OSPFv3.

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) `#show ip route`

```
Route Codes: R - RIP Derived, O - OSPF Derived, C - Connected, S - Static
              B - BGP Derived, IA - OSPF Inter Area
              E1 - OSPF External Type 1, E2 - OSPF External Type 2
```

N1 - OSPF NSSA External Type 1, N2 - OSPF NSSA External Type 2
L-Leaked Route

Default gateway is 1.1.1.2

```
C 1.1.1.0/24 [0/1] directly connected, 0/11
C 2.2.2.0/24 [0/1] directly connected, 0/1
C 5.5.5.0/24 [0/1] directly connected, 0/5
S 7.0.0.0/8 [1/0] directly connected, Null0
OIA 10.10.10.0/24 [110/6] via 5.5.5.2, 00h:00m:01s, 0/5
C 11.11.11.0/24 [0/1] directly connected, 0/11
S 12.0.0.0/8 [5/0] directly connected, Null0
S 23.0.0.0/8 [3/0] directly connected, Null0
C 1.1.1.0/24 [0/1] directly connected, 0/11
C 2.2.2.0/24 [0/1] directly connected, 0/1
C 5.5.5.0/24 [0/1] directly connected, 0/5
C 11.11.11.0/24 [0/1] directly connected, 0/11
S 10.3.2.0/24 [1/0] via 1.1.1.2, 0/11
```

Example: The following shows example CLI display output for the command to indicate a truncated route.

```
(router) #show ip route
```

```
Route Codes: R - RIP Derived, O - OSPF Derived, C - Connected, S - Static
              B - BGP Derived, IA - OSPF Inter Area
              E1 - OSPF External Type 1, E2 - OSPF External Type 2
              N1 - OSPF NSSA External Type 1, N2 - OSPF NSSA External Type 2
              L-Leaked Route
```

```
O E1 100.1.161.0/24 [110/10] via 172.20.11.100, 00h:00m:13s, 2/11 T
O E1 100.1.162.0/24 [110/10] via 172.20.11.100, 00h:00m:13s, 2/11 T
O E1 100.1.163.0/24 [110/10] via 172.20.11.100, 00h:00m:13s, 2/11 T
```

Example: The following shows an example of output that displays leaked routes.

Subnetwork 9.0.0.0/24 is a connected subnetwork in global table and subnet 56.6.6.0/24 is reachable via a gateway 9.0.0.2 in the global table. These two routes leak into the virtual router *Red* and leak the connected subnet 8.0.0.0/24 from *Red* to global table.

When leaking connected route in the global routing table to a virtual router, the /32 host route for the leaked host is added in the virtual router instance's route table. Leaking of non /32 connected routes into the virtual router table from global routing table is not supported.

This enables the nodes in subnet 8.0.0.0/24 to access shared services via the global routing table. Also we add a non-leaked static route for 66.6.6.0/24 subnetwork scoped to the domain of virtual router *Red*.

```
(Router) (Config)#ip route vrf Red 9.0.0.2 255.255.255.255 9.0.0.2 0/26
(Router) (Config)#ip route vrf Red 56.6.6.0 255.255.255.0 9.0.0.2 0/26
(Router) (Config)#ip route vrf Red 66.6.6.0 255.255.255.0 8.0.0.2
(Router) (Config)#ip route 8.0.0.0 255.255.255.0 0/27
```

```
(Router) #show ip route vrf Red
```

```
Route Codes: R - RIP Derived, O - OSPF Derived, C - Connected, S - Static
              B - BGP Derived, IA - OSPF Inter Area
              E1 - OSPF External Type 1, E2 - OSPF External Type 2
              N1 - OSPF NSSA External Type 1, N2 - OSPF NSSA External Type 2
              L - Leaked Route
```

```
C      8.0.0.0/24 [0/1] directly connected, 0/27
S L    9.0.0.2/32 [1/1] directly connected, 0/26
S L    56.6.6.0/24 [1/1] via 9.0.0.2, 02d:22h:15m, 0/26
S      66.6.6.0/24 [1/1] via 8.0.0.2, 01d:22h:15m, 0/27
```

```
(Router) #show ip route
```

```
Route Codes: R - RIP Derived, O - OSPF Derived, C - Connected, S - Static
              B - BGP Derived, IA - OSPF Inter Area
              E1 - OSPF External Type 1, E2 - OSPF External Type 2
              N1 - OSPF NSSA External Type 1, N2 - OSPF NSSA External Type 2
              L - Leaked Route
```

```
C      9.0.0.0/24 [0/1] directly connected,    0/26
S L    8.0.0.0/24 [1/1] directly connected,    0/27
```

5.2.25 show ip route ecmp-groups

This command reports all current ECMP groups in the IPv4 routing table. An ECMP group is a set of two or more next hops used in one or more routes. The groups are numbered arbitrarily from 1 to n. The output indicates the number of next hops in the group and the number of routes that use the set of next hops. The output lists the IPv4 address and outgoing interface of each next hop in each group.

Format show ip route ecmp-groups

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(router) #show ip route ecmp-groups
```

```
ECMP Group 1 with 2 next hops (used by 1 route)
  172.20.33.100 on interface 2/33
  172.20.34.100 on interface 2/34
```

```
ECMP Group 2 with 3 next hops (used by 1 route)
  172.20.32.100 on interface 2/32
  172.20.33.100 on interface 2/33
  172.20.34.100 on interface 2/34
```

```
ECMP Group 3 with 4 next hops (used by 1 route)
  172.20.31.100 on interface 2/31
  172.20.32.100 on interface 2/32
  172.20.33.100 on interface 2/33
  172.20.34.100 on interface 2/34
```

5.2.26 show ip route hw-failure

Use this command to display the routes that failed to be added to the hardware due to hash errors or a table full condition.

Format show ip route hw-failure

Mode Privileged EXEC

Example: The following example displays the command output.

```
(Routing) (Config)#ip route net-prototype 66.6.6.0/24 9.0.0.2 4
```

```
(Routing) #show ip route connected
```

```
Route Codes: R - RIP Derived, O - OSPF Derived, C - Connected, S - Static
              B - BGP Derived, IA - OSPF Inter Area
              E1 - OSPF External Type 1, E2 - OSPF External Type 2
              N1 - OSPF NSSA External Type 1, N2 - OSPF NSSA External Type 2
              S U - Unnumbered Peer, L - Leaked Route, K - Kernel
```

P - Net Prototype

```
C    9.0.0.0/24 [0/0] directly connected,    0/1
C    8.0.0.0/24 [0/0] directly connected,    0/2
```

(Routing) #show ip route hw-failure

Route Codes: R - RIP Derived, O - OSPF Derived, C - Connected, S - Static
 B - BGP Derived, IA - OSPF Inter Area
 E1 - OSPF External Type 1, E2 - OSPF External Type 2
 N1 - OSPF NSSA External Type 1, N2 - OSPF NSSA External Type 2
 S U - Unnumbered Peer, L - Leaked Route, K - Kernel
 P - Net Prototype

```
P    66.6.6.0/24 [1/1] via 9.0.0.2,    01d:22h:15m,    0/1 hw-failure
P    66.6.7.0/24 [1/1] via 9.0.0.2,    01d:22h:15m,    0/1 hw-failure
P    66.6.8.0/24 [1/1] via 9.0.0.2,    01d:22h:15m,    0/1 hw-failure
P    66.6.9.0/24 [1/1] via 9.0.0.2,    01d:22h:15m,    0/1 hw-failure
```

5.2.27 show ip route net-prototype

This command displays the net-prototype routes. The net-prototype routes are displayed with a P.

Format show ip route net-prototype

Modes Privileged EXEC

Example:

(Routing) #show ip route net-prototype

Route Codes: R - RIP Derived, O - OSPF Derived, C - Connected, S - Static
 B - BGP Derived, IA - OSPF Inter Area
 E1 - OSPF External Type 1, E2 - OSPF External Type 2
 N1 - OSPF NSSA External Type 1, N2 - OSPF NSSA External Type 2
 S U - Unnumbered Peer, L - Leaked Route, K - Kernel
 P - Net Prototype

```
P    56.6.6.0/24 [1/1] via 9.0.0.2,    01d:22h:15m,    0/1
P    56.6.7.0/24 [1/1] via 9.0.0.2,    01d:22h:15m,    0/1
```

5.2.28 show ip route summary

This command displays a summary of the state of the routing table. When the optional **all** keyword is given, some statistics, such as the number of routes from each source, include counts for alternate routes. An alternate route is a route that is not the most preferred route to its destination and therefore is not installed in the forwarding table. To include only the number of best routes, do not use the optional keyword.

Format show ip route summary [all]

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Connected Routes	The total number of connected routes in the routing table.
Static Routes	Total number of static routes in the routing table.
RIP Routes	Total number of routes installed by RIP protocol.
OSPF Routes	Total number of routes installed by OSPF protocol.

Term	Definition
Intra Area Routes	Total number of Intra Area routes installed by OSPF protocol.
Inter Area Routes	Total number of Inter Area routes installed by OSPF protocol.
External Type-1 Routes	Total number of External Type-1 routes installed by OSPF protocol.
External Type-2 Routes	Total number of External Type-2 routes installed by OSPF protocol.
Reject Routes	Total number of reject routes installed by all protocols.
Total Routes	Total number of routes in the routing table.
Best Routes (High)	The number of best routes currently in the routing table. This number only counts the best route to each destination. The value in parentheses indicates the highest count of unique best routes since counters were last cleared.
Alternate Routes	The number of alternate routes currently in the routing table. An alternate route is a route that was not selected as the best route to its destination.
Route Adds	The number of routes that have been added to the routing table.
Route Modifies	The number of routes that have been changed after they were initially added to the routing table.
Route Deletes	The number of routes that have been deleted from the routing table.
Unresolved Route Adds	The number of route adds that failed because none of the route's next hops were on a local subnet. Note that static routes can fail to be added to the routing table at startup because the routing interfaces are not yet up. This counter gets incremented in this case. The static routes are added to the routing table when the routing interfaces come up.
Invalid Route Adds	The number of routes that failed to be added to the routing table because the route was invalid. A log message is written for each of these failures.
Failed Route Adds	The number of routes that failed to be added to the routing table because of a resource limitation in the routing table.
Reserved Locals	The number of routing table entries reserved for a local subnet on a routing interface that is down. Space for local routes is always reserved so that local routes can be installed when a routing interface bounces.
Unique Next Hops (High)	The number of distinct next hops used among all routes currently in the routing table. These include local interfaces for local routes and neighbors for indirect routes. The value in parentheses indicates the highest count of unique next hops since counters were last cleared.
Next Hop Groups (High)	The current number of next hop groups in use by one or more routes. Each next hop group includes one or more next hops. The value in parentheses indicates the highest count of next hop groups since counters were last cleared.
ECMP Groups (High)	The number of next hop groups with multiple next hops. The value in parentheses indicates the highest count of next hop groups since counters were last cleared.
ECMP Groups	The number of next hop groups with multiple next hops.
ECMP Routes	The number of routes with multiple next hops currently in the routing table.
Truncated ECMP Routes	The number of ECMP routes that are currently installed in the forwarding table with just one next hop. The forwarding table may limit the number of ECMP routes or the number of ECMP groups. When an ECMP route cannot be installed because such a limit is reached, the route is installed with a single next hop.
ECMP Retries	The number of ECMP routes that have been installed in the forwarding table after initially being installed with a single next hop.
Routes with n Next Hops	The current number of routes with each number of next hops.

Example: The following shows example CLI display output for the command.

```
(Routing) #show ip route summary
Connected Routes..... 7
Static Routes..... 1
RIP Routes..... 20
BGP Routes..... 10
```



```

External..... 0
Internal..... 10
Local..... 0
OSPF Routes..... 1004
  Intra Area Routes..... 4
  Inter Area Routes..... 1000
  External Type-1 Routes..... 0
  External Type-2 Routes..... 0
Reject Routes..... 0
Total routes..... 1032

Best Routes (High)..... 1032 (1032)
Alternate Routes..... 0
Route Adds..... 1010
Route Modifies..... 1
Route Deletes..... 10
Unresolved Route Adds..... 0
Invalid Route Adds..... 0
Failed Route Adds..... 0
Reserved Locals..... 0

Unique Next Hops (High)..... 13 (13)
Next Hop Groups (High)..... 13 (14)
ECMP Groups (High)..... 2 (3)
ECMP Routes..... 1001
Truncated ECMP Routes..... 0
ECMP Retries..... 0
Routes with 1 Next Hop..... 31
Routes with 2 Next Hops..... 1
Routes with 4 Next Hops..... 1000

```

5.2.29 clear ip route counters

The command resets to zero the IPv4 routing table counters reported in the command “show ip route summary” on page 551". The command only resets event counters. Counters that report the current state of the routing table, such as the number of routes of each type, are not reset.

Format clear ip route counters

Mode Privileged EXEC

5.2.30 show ip route preferences

This command displays detailed information about the route preferences for each type of route. Route preferences are used in determining the best route. Lower router preference values are preferred over higher router preference values. A route with a preference of 255 cannot be used to forward traffic.

Format show ip route preferences

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Local	The local route preference value.
Static	The static route preference value.
OSPF Intra	The OSPF Intra route preference value.
OSPF Inter	The OSPF Inter route preference value.
OSPF External	The OSPF External route preference value.

Term	Definition
RIP	The RIP route preference value.
Configured Default Gateway	The route preference value of the statically-configured default gateway
DHCP Default Gateway	The route preference value of the default gateway learned from the DHCP server.

Example: The following shows example CLI display output for the command.

(alpha-stack) #show ip route preferences

```

Local..... 0
Static..... 1
OSPF Intra..... 110
OSPF Inter..... 110
OSPF External..... 110
RIP..... 120
Configured Default Gateway..... 253
DHCP Default Gateway..... 254

```

5.2.31 show ip stats

This command displays IP statistical information.

Format show ip stats

Modes

- Privileged EXEC
- User EXEC

5.2.32 show routing heap summary

This command displays a summary of the memory allocation from the routing heap. The routing heap is a chunk of memory set aside when the system boots for use by the routing applications.

Format show routing heap summary

Mode Privileged EXEC

Parameter	Description
Heap Size	The amount of memory, in bytes, allocated at startup for the routing heap.
Memory In Use	The number of bytes currently allocated.
Memory on Free List	The number of bytes currently on the free list. When a chunk of memory from the routing heap is freed, it is placed on a free list for future reuse.
Memory Available in Heap	The number of bytes in the original heap that have never been allocated.
In Use High Water Mark	The maximum memory in use since the system last rebooted.

Example: The following shows example CLI display output for the command.

(Router) #show routing heap summary

```

Heap Size..... 95053184
Memory In Use..... 56998
Memory on Free List..... 47
Memory Available in Heap..... 94996170
In Use High Water Mark..... 57045

```

5.3 Routing Policy Commands

5.3.1 ip policy route-map

Use this command to identify a route map to use for policy-based routing on an interface specified by *route-map-name*. Policy-based routing is configured on the interface that *receives* the packets, not on the interface from which the packets are sent.

When a route-map applied on the interface is changed, that is, if new statements are added to route-map or match/set terms are added/removed from route-map statement, and also if route-map that is applied on an interface is removed, route-map needs to be removed from interface and added back again in order to have changed route-map configuration to be effective.



Note...

Route-map and Diffserv cannot work on the same interface.

Format ip policy *route-map-name*

Mode Interface Config

Example: The following is an example of this command.

```
(FASTPATH Routing) (Config)#interface 0/1
(FASTPATH Routing) (Interface 0/1)#
(FASTPATH Switching) (Interface 0/1)# #ip policy route-map equal-access
```

In order to disable policy based routing from an interface, use no form of this command
no ip policy <*route-map-name*>

5.3.2 ip prefix-list

To create a prefix list or add a prefix list entry, use the ip prefix-list command in Global Configuration mode. Prefix lists allow matching of route prefixes with those specified in the prefix list. Each prefix list includes of a sequence of prefix list entries ordered by their sequence numbers. A router sequentially examines each prefix list entry to determine if the route's prefix matches that of the entry. An empty or nonexistent prefix list permits all prefixes. An implicit deny is assume if a given prefix does not match any entries of a prefix list. Once a match or deny occurs the router does not go through the rest of the list. A prefix list may be used within a route map to match a route's prefix using the command "match ip address" on page 559".

Up to 128 prefix lists may be configured. The maximum number of statements allowed in prefix list is 64.

Default No prefix lists are configured by default. When neither the **ge** nor the **le** option is configured, the destination prefix must match the network/length exactly. If the **ge** option is configured without the **le** option, any prefix with a network mask greater than or equal to the **ge** value is considered a match. Similarly, if the **le** option is configured without the **ge** option, a prefix with a network mask less than or equal to the **le** value is considered a match.

Format ip prefix-list *list-name* {[seq *number*] {permit | deny} *network/Length* [*ge Length*] [*le Length*] | renumber *renumber-interval first-statement-number*}

Mode Global Configuration

Parameter	Description
list-name	The text name of the prefix list. Up to 32 characters.

Parameter	Description
seq number	(Optional) The sequence number for this prefix list statement. Prefix list statements are ordered from lowest sequence number to highest and applied in that order. If you do not specify a sequence number, the system will automatically select a sequence number five larger than the last sequence number in the list. Two statements may not be configured with the same sequence number. The value ranges from 1 to 4,294,967,294.
permit	Permit routes whose destination prefix matches the statement.
deny	Deny routes whose destination prefix matches the statement.
network/length	Specifies the match criteria for routes being compared to the prefix list statement. The network can be any valid IP prefix. The length is any IPv4 prefix length from 0 to 32.
ge length	(Optional) If this option is configured, then a prefix is only considered a match if its network mask length is greater than or equal to this value. This value must be longer than the network length and less than or equal to 32.
le length	(Optional) If this option is configured, then a prefix is only considered a match if its network mask length is less than or equal to this value. This value must be longer than the ge length and less than or equal to 32.
renumber	(Optional) Provides the option to renumber the sequence numbers of the IP prefix list statements with a given interval starting from a particular sequence number. The valid range for <i>renumber-interval</i> is 1–100, and the valid range for <i>first-statement-number</i> is 1–1000.

Example: The following example configures a prefix list that allows routes with one of two specific destination prefixes, 172.20.0.0/16 and 192.168.1.0/24:

```
(Routing)(config)# ip prefix-list apple seq 10 permit 172.20.0.0/16
(Routing)(config)# ip prefix-list apple seq 20 permit 192.168.10/24
```

Example: The following example disallows only the default route.

```
(Routing)(config)# ip prefix-list orange deny 0.0.0.0/0
(Routing)(config)# ip prefix-list orange permit 0.0.0.0/0 ge 1
```

5.3.2.1 no ip prefix-list

To delete a prefix list or a statement in a prefix list, use the **no** form of this command. The command **no ip prefix-list list-name** deletes the entire prefix list. To remove an individual statement from a prefix list, you must specify the statement exactly, with all its options.

Format `no ip prefix-list list-name [seq number] { permit | deny } network/length [ge length] [le length]`
Mode Global Configuration

5.3.3 ip prefix-list description

To apply a text description to a prefix list, use the **ip prefix-list description** command in Global Configuration mode.

Default No description is configured by default.
Format `ip prefix-list list-name description text`
Mode Global Configuration

Parameter	Description
list-name	The text name of the prefix list.

Parameter	Description
description text	Text description of the prefix list. Up to 80 characters.

5.3.3.1 no ip prefix-list description

To remove the text description, use the **no** form of this command.

5.3.4 ipv6 prefix-list

Format no ip prefix-list *list-name* description

Mode Global Configuration

Use this command to create IPv6 prefix lists. An IPv6 prefix list can contain only ipv6 addresses. Prefix lists allow matching of route prefixes with those specified in the prefix list. Each prefix list includes of a sequence of prefix list entries ordered by their sequence numbers. A router sequentially examines each prefix list entry to determine if the route's prefix matches that of the entry. For IPv6 routes, only IPv6 prefix lists are matched. An empty or nonexistent prefix list permits all prefixes. An implicit deny is assumed if a given prefix does not match any entries of a prefix list. Once a match or deny occurs the router does not go through the rest of the list. An IPv6 prefix list may be used within a route map to match a route's prefix using the `match ipv6 address` command. A route map may contain both IPv4 and IPv4 prefix lists. If a route being matched is an IPv6 route, only the IPv6 prefix lists are matched.

Up to 128 prefix lists may be configured. The maximum number of statements allowed in prefix list is 64. These numbers indicate only IPv6 prefix lists. IPv4 prefix lists may be configured in appropriate numbers independently.

Default No prefix lists are configured by default. When neither the **ge** nor the **le** option is configured, the destination prefix must match the network/length exactly. If the **ge** option is configured without the **le** option, any prefix with a network mask greater than or equal to the **ge** value is considered a match. Similarly, if the **le** option is configured without the **ge** option, a prefix with a network mask less than or equal to the **le** value is considered a match.

Format ipv6 prefix-list *list-name* [*seq seq-number*] { {*permit/deny*} *ipv6-prefix/prefix-length* [*ge ge-value*] [*le le-value*] | *description text* | *renumber renumber-interval first-statement-number*}

Mode Global Configuration

Parameter	Description
list-name	The text name of the prefix list. Up to 32 characters.
seq number	(Optional) The sequence number for this prefix list statement. Prefix list statements are ordered from lowest sequence number to highest and applied in that order. If you do not specify a sequence number, the system will automatically select a sequence number five larger than the last sequence number in the list. Two statements may not be configured with the same sequence number. The value ranges from 1 to 4,294,967,294.
permit	Permit routes whose destination prefix matches the statement.
deny	Deny routes whose destination prefix matches the statement.
ipv6-prefix/prefix-length	Specifies the match criteria for routes being compared to the prefix list statement. The <i>ipv6-prefix</i> can be any valid IPv6 prefix where the address is specified in hexadecimal using 16-bit values between colons. The <i>prefix-length</i> is the The length of the IPv6 prefix, given as a decimal value that indicates how many of the high-order contiguous bits of the address comprise the prefix (the network portion of the address). A slash mark must precede the decimal value.
ge length	(Optional) If this option is configured, specifies a prefix length greater than or equal to the <i>ipv6-prefix/prefix-length</i> . It is the lowest value of a range of the length.

Parameter	Description
le length	(Optional) If this option is configured, specifies a prefix length less than or equal to the ipv6-prefix/prefix-length . It is the highest value of a range of the length.
Description	A description of the prefix list. It can be up to 80 characters in length.
renumber	(Optional) Provides the option to renumber the sequence numbers of the IPv6 prefix list statements with a given interval starting from a particular sequence number.

Example: The following example configures a prefix list that allows routes with one of two specific destination prefixes, 2001::/64 and 5F00::/48:

```
(R1)(config)# ipv6 prefix-list apple seq 10 permit 2001::/64
(R1)(config)# ipv6 prefix-list apple seq 20 permit 5F00::/48
```

5.3.4.1 no ipv6 prefix-list

Use this command to delete either the entire prefix list or an individual statement from a prefix list.

Format ipv6 prefix-list *list-name*

Mode Global Configuration



Note...

The description must be removed using `no ip prefix-list description` before using this command to delete an IPv6 Prefix List.

5.3.5 route-map

To create a route map and enter Route Map Configuration mode, use the **route-map** command in Global Configuration mode. One use of a route map is to limit the redistribution of routes to a specified range of route prefixes. The redistribution command specifies a route map which refers to a prefix list. The prefix list identifies the prefixes that may be redistributed. FASTPATH accepts up to 64 route maps.

Default No route maps are configured by default. If no permit or deny tag is given, *permit* is the default.

Format route-map *map-tag* [permit|deny] [*sequence-number*]

Mode Global Configuration

Parameter	Description
map-tag	Text name of the route map. Route maps with the same name are grouped together in order of their sequence numbers. A route map name may be up to 32 characters long.
permit	(Optional) Permit routes that match all of the match conditions in the route map.
deny	(Optional) Deny routes that match all of the match conditions in the route map.
sequence-number	(Optional) An integer used to order the set of route maps with the same name. Route maps are ordered from lowest to greatest sequence number, with lower sequence numbers being considered first. If no sequence number is specified, the system assigns a value ten greater than the last statement in the route map. The range is 0 to 65,535.

Example: In the following example, BGP is configured to redistribute the all prefixes within 172.20.0.0 and reject all others.

```
(Routing)(config)# ip prefix-list redist-pl permit 172.20.0.0/16 le 32
(Routing)(config)# route-map redist-rm permit
(Routing)(config-route-map)# match ip address prefix-list redist-pl
(Routing)(config-route-map)# exit
(Routing)(config) router bgp 1
(Routing)(Config-router) redistribute ospf route-map redist-rm
```

5.3.5.1 no route-map

To delete a route map or one of its statements, use the **no** form of this command.

Format no route-map *map-tag* [permit|deny] [*sequence-number*]
Mode Global Configuration

5.3.6 match ip address

To configure a route map to match based on a destination prefix, use the **match ip address** command in Route Map Configuration mode. If you specify multiple prefix lists in one statement, then a match occurs if a prefix matches any one of the prefix lists. If you configure a match ip address statement within a route map section that already has a match ip address statement, the new prefix lists are added to the existing set of prefix lists, and a match occurs if any prefix list in the combined set matches the prefix.

Default No match criteria are defined by default.
Format match ip address prefix-list *prefix-list-name* [*prefix-list-name*...]
Mode Route Map Configuration

Parameter	Description
prefix-list-name	The name of a prefix list used to identify the set of matching routes. Up to eight prefix lists may be specified.

5.3.6.1 no match ip address

To delete a match statement from a route map, use the **no** form of this command.

Format no match ip address [prefix-list *prefix-list-name* [*prefix-list-name*...]]
Mode Route Map Configuration

5.3.7 match ip address <access-list-number | access-list-name>

Use this command to configure a route map in order to match based on the match criteria configured in an IP access-list. Note that an IP ACL must be configured before it is linked to a route-map. Actions present in an IP ACL configuration are applied with other actions involved in route-map. If an IP ACL referenced by a route-map is removed or rules are added or deleted from that ACL, the configuration is rejected.

If there are a list of IP access-lists specified in this command and the packet matches at least one of these access-list match criteria, the corresponding set of actions in route-map are applied to packet.

If there are duplicate IP access-list numbers/names in this command, the duplicate configuration is ignored.

Default	No match criteria are defined by default.
Format	match ip address <i>access-list-number</i> <i>access-list-name</i> [... <i>access-list-number</i> <i>name</i>]
Mode	Route Map Configuration

Parameter	Description
Access-list-number	The access-list number that identifies an access-list configured through access-list CLI configuration commands. This number is 1 to 99 for standard access list number. This number is 100 to 199 for extended access list number.
Access-list-name	The access-list name that identifies named IP ACLs. Access-list name can be up to 31 characters in length. A maximum of 16 ACLs can be specified in this 'match' clause.

Example: The following sequence shows creating a route-map with "match" clause on ACL number and applying that route-map on an interface.

```
(FASTPATH Routing) (config)#access-list 1 permit ip 10.1.0.0 0.0.255.255
(FASTPATH Routing) (config)#access-list 2 permit ip 10.2.0.0 0.0.255.255
(FASTPATH Routing) (config)#route-map equal-access permit 10
(FASTPATH Routing) (config-route-map)#match ip address 1
(FASTPATH Routing) (config-route-map)#set ip default next-hop 192.168.6.6
(FASTPATH Routing) (config-route-map)#route-map equal-access permit 20
(FASTPATH Routing) (config-route-map)#match ip address 2
(FASTPATH Routing) (config-route-map)#set ip default next-hop 172.16.7.7
(FASTPATH Routing) (config)#interface 0/1
(FASTPATH Routing) (Interface 0/1)#ip address 10.1.1.1 255.255.255.0
(FASTPATH Routing) (Interface 0/1)#ip policy route-map equal-access
(FASTPATH Routing) (config)#interface 0/2
(FASTPATH Routing) (Interface 0/2)#ip address 192.168.6.5 255.255.255.0
(FASTPATH Routing) (config)#interface 0/3
(FASTPATH Routing) (Interface 0/3)#ip address 172.16.7.6 255.255.255.0
The ip policy route-map equal-access command is applied to interface 0/1. All packets coming inside
0/1 are policy-routed.
Sequence number 10 in route map equal-access is used to match all packets sourced from any host in
subnet 10.1.0.0. If there is a match, and if the router has no explicit route for the packet's
destination, it is sent to next-hop address 192.168.6.6 .
Sequence number 20 in route map equal-access is used to match all packets sourced from any host in
subnet 10.2.0.0. If there is a match, and if the router has no explicit route for the packet's
destination, it is sent to next-hop address 172.16.7.7.
Rest all packets are forwarded as per normal L3 destination-based routing.
```

Example: This example illustrates the scenario where IP ACL referenced by a route-map is removed or rules are added or deleted from that ACL, this is how configuration is rejected:

```
(FASTPATH Routing) #show ip access-lists
```

Current number of ACLs: 9 Maximum number of ACLs: 100

ACL ID/Name	Rules	Direction	Interface(s)	VLAN(s)
-----	-----	-----	-----	-----
1	1			
2	1			
3	1			
4	1			
5	1			
madan	1			

```
FASTPATH Routing) #show mac access-lists
```

Current number of all ACLs: 9 Maximum number of all ACLs: 100

MAC ACL Name	Rules	Direction	Interface(s)	VLAN(s)
-----	----	-----	-----	-----
madan	1			
mohan	1			
goud	1			

(FASTPATH Routing) #

(FASTPATH Routing) #

(FASTPATH Routing) #configure

(FASTPATH Routing) (Config)#route-map madan

(FASTPATH Routing) (route-map)#match ip address 1 2 3 4 5 madan

(FASTPATH Routing) (route-map)#match mac-list madan mohan goud

(FASTPATH Routing) (route-map)#exit

(FASTPATH Routing) (Config)#exit

(FASTPATH Routing) #show route-map

route-map madan permit 10

Match clauses:

ip address (access-lists) : 1 2 3 4 5 madan

mac-list (access-lists) : madan mohan goud

Set clauses:

(FASTPATH Routing) (Config)#access-list 2 permit every

Request denied. Another application using this ACL restricts the number of rules allowed.

(FASTPATH Routing) (Config)#ip access-list madan

(FASTPATH Routing) (Config-ipv4-acl)#permit udp any any

Request denied. Another application using this ACL restricts the number of rules allowed.

5.3.7.1 no match ip address

To delete a match statement from a route map, use the **no** form of this command.

Format no match ip address [*access-list-number* | *access-list-name*]

Mode Route Map Configuration

5.3.8 match ipv6 address

Use this command to configure a route map to match based on a destination prefix. *prefix-list prefix-list-name* identifies the name of an IPv6 prefix list used to identify the set of matching routes. Up to eight prefix lists may be specified. If multiple prefix lists are specified, a match occurs if a prefix matches any one of the prefix lists. If you configure a match ipv6 address statement within a route map section that already has a match ipv6 address statement, the new prefix lists are added to the existing set of prefix lists, and a match occurs if any prefix list in the combined set matches the prefix.

Default	No match criteria are defined by default.
Format	<code>match ipv6 address prefix-list <i>prefix-list-name</i> [<i>prefix-list-name</i>...]</code>
Mode	Route Map Configuration

Example: In the example below, IPv6 addresses specified by the prefix list `apple` are matched through the route map `abc`.

```
Router(config)# route-map abc
Router(config-route-map)# match ipv6 address prefix-list apple
```

5.3.8.1 no match ipv6 address

To delete a match statement from a route map, use the `no` form of this command.

Format	<code>no match ipv6 address prefix-list <i>prefix-list-name</i> [<i>prefix-list-name</i>...]</code>
Mode	Route Map Configuration

5.3.9 match length

Use this command to configure a route map to match based on the Layer 3 packet length between specified minimum and maximum values. *min* specifies the packet's minimum Layer 3 length, inclusive, allowed for a match. *max* specifies the packet's maximum Layer 3 length, inclusive, allowed for a match. Each route-map statement can contain one 'match' statement on packet length range.

Default	No match criteria are defined by default.
Format	<code>match length <i>min max</i></code>
Mode	Route Map Configuration

Example: The following shows an example of the command.

```
(Routing) (config-route-map)# match length 64 1500
```

5.3.9.1 no match length

Use this command to delete a match statement from a route map.

Format	<code>no match length</code>
Mode	Route Map Configuration

5.3.10 match mac-list

Use this command to configure a route map in order to match based on the match criteria configured in an MAC access-list.

A MAC ACL is configured before it is linked to a route-map. Actions present in MAC ACL configuration are applied with other actions involved in route-map. When a MAC ACL referenced by a route-map is removed, the route-map rule is also removed and the corresponding rule is not effective. When a MAC ACL referenced by a route-map is removed or rules are added or deleted from that ACL, the configuration is rejected.

Default	No match criteria are defined by default.
Format	<code>match mac-list <i>mac-list-name</i> [<i>mac-list-name</i>]</code>
Mode	Route Map Configuration

Parameter	Description
mac-list-name	The mac-list name that identifies MAC ACLs. MAC Access-list name can be up to 31 characters in length.

Example: The following is an example of the command.

```
(FASTPATH Routing) (config-route-map)# match mac-list MacList1
```

Example 2:

This example illustrates the scenario where MAC ACL referenced by a route-map is removed or rules are added or deleted from that ACL, this is how configuration is rejected:

```
FASTPATH Routing) #show mac access-lists
```

```
Current number of all ACLs: 9 Maximum number of all ACLs: 100
```

MAC ACL Name	Rules	Direction	Interface(s)	VLAN(s)
-----	-----	-----	-----	-----
madan	1			
mohan	1			
goud	1			

```
(FASTPATH Routing) #
```

```
(FASTPATH Routing) #
```

```
(FASTPATH Routing) #configure
```

```
(FASTPATH Routing) (Config)#route-map madan
```

```
(FASTPATH Routing) (route-map)#match mac-list madan mohan goud
```

```
(FASTPATH Routing) (route-map)#exit
```

```
(FASTPATH Routing) (Config)#exit
```

```
(FASTPATH Routing) #show route-map
```

```
route-map madan permit 10
```

```
Match clauses:
```

```
mac-list (access-lists) : madan mohan goud
```

```
Set clauses:
```

```
(FASTPATH Routing) (Config)#mac access-list extended madan
```

```
(FASTPATH Routing) (Config-mac-access-list)#permit 00:00:00:00:00:01 ff:ff:ff:ff:ff:ff any
```

Request denied. Another application using this ACL restricts the number of rules allowed.

```
5.3.10.1 no match mac-list
```

To delete a match statement from a route map, use the **no** form of this command.

Format no match mac-list [...*mac-list-name*]

Mode Route Map Configuration

5.3.11 set interface

If network administrator does not want to revert to normal forwarding but instead want to drop a packet that does not match the specified criteria, a set statement needs to be configured to route the packets to interface null 0 as the last entry in the route-map. `set interface null0` needs to be configured in a separate statement. It should not be added along with any other statement having other match/set terms.

A route-map statement that is used for PBR is configured as permit or deny. If the statement is marked as deny, traditional destination-based routing is performed on the packet meeting the match criteria. If the statement is marked as permit, and if the packet meets all the match criteria, then set commands in the route-map statement are applied. If no match is found in the route-map, the packet is not dropped, instead the packet is forwarded using the routing decision taken by performing destination-based routing.

Format set interface null0

Mode Route Map Configuration

5.3.12 set ip next-hop

Use this command to specify the adjacent next-hop router in the path toward the destination to which the packets should be forwarded. If more than one IP address is specified, the first IP address associated with a currently up-connected interface is used to route the packets.

This command affects all incoming packet types and is always used if configured. If configured next-hop is not present in the routing table, an ARP request is sent from the router.

In a route-map statement, 'set ip next-hop' and 'set ip default next-hop' terms are mutually exclusive. However, a 'set ip default next-hop' can be configured in a separate route-map statement.

Format set ip next-hop ip-address [...*ip-address*]

Mode Route Map Configuration

Parameter	Description
ip-address	The IP address of the next hop to which packets are output. It must be the address of an adjacent router. A maximum of 16 next-hop IP addresses can be specified in this 'set' clause.

5.3.12.1 no set ip next-hop

Use this command to remove a set command from a route map.

Format no set ip next-hop ip-address [...*ip-address*]

Mode Route Map Configuration

5.3.13 set ip default next-hop

Use this command to set a list of default next-hop IP addresses. If more than one IP address is specified, the first next hop specified that appears to be adjacent to the router is used. The optional specified IP addresses are tried in turn.

A packet is routed to the next hop specified by this command only if there is *no* explicit route for the packet's destination address in the routing table. A default route in the routing table is not considered an explicit route for an unknown destination address.

In a route-map statement, 'set ip next-hop' and 'set ip default next-hop' terms are mutually exclusive. However, a 'set ip next-hop' can be configured in a separate route-map statement

Format set ip default next-hop ip-address [...*ip-address*]

Mode Route Map Configuration

Parameter	Description
ip-address	The IP address of the next hop to which packets are output. It must be the address of an adjacent router. A maximum of 16 next-hop IP addresses can be specified in this 'set' clause.

5.3.13.1 no set ip default next-hop

Use this command to remove a set command from a route map.

Format no set ip default next-hop ip-address [...*ip-address*]

Mode Route Map Configuration

5.3.14 set ip precedence

Use this command to set the three IP precedence bits in the IP packet header. With three bits, you have eight possible values for the IP precedence; values 0 through 7 are defined. This command is used when implementing QoS and can be used by other QoS services, such as weighted fair queuing (WFQ) and weighted random early detection (WRED).

Format set ip precedence 0-7

Mode Route Map Configuration

Parameter	Description
0	Sets the routine precedence
1	Sets the priority precedence
2	Sets the immediate precedence
3	Sets the Flash precedence
4	Sets the Flash override precedence
5	Sets the critical precedence
6	Sets the internetwork control precedence
7	Sets the network control precedence

5.3.14.1 no set ip precedence

Use this command to reset the three IP precedence bits in the IP packet header to the default.

Format no set ip precedence

Mode Route Map Configuration

5.3.15 show ip policy

This command lists the route map associated with each interface.

Format show ip policy

Mode Privileged EXEC

Term	Definition
Interface	The interface.
Route-map	The route map

5.3.16 show ip prefix-list

This command displays configuration and status for a prefix list.

Format show ip prefix-list [detail | summary] *prefix-list-name* [*network/length*] [seq *sequence-number*] [longer] [first-match]

Mode Privileged EXEC

Parameter	Description
detail summary	(Optional) Displays detailed or summarized information about all prefix lists.
prefix-list-name	(Optional) The name of a specific prefix list.
network/length	(Optional) The network number and length (in bits) of the network mask.
seq	(Optional) Applies the sequence number to the prefix list entry.
sequence-number	(Optional) The sequence number of the prefix list entry.
longer	(Optional) Displays all entries of a prefix list that are more specific than the given network/length.
first-match	(Optional) Displays the entry of a prefix list that matches the given network/length.

Acceptable forms of this command are as follows:

```
show ip prefix-list prefix-list-name network/length first-match
```

```
show ip prefix-list prefix-list-name network/length longer
```

```
show ip prefix-list prefix-list-name network/length
```

```
show ip prefix-list prefix-list-name seq sequence-number
```

```
show ip prefix-list prefix-list-name
```

```
show ip prefix-list summary
```

```
show ip prefix-list summary prefix-list-name
```

```
show ip prefix-list detail
```

```
show ip prefix-list detail prefix-list-name
```

Example: The following shows example CLI display output for the command.

```
(Routing) #show ip prefix-list fred
```

```
ip prefix-list fred:
  count: 3, range entries: 3, sequences: 5 - 15, refcount: 0
  seq 5 permit 10.10.1.1/20 ge 22
  seq 10 permit 10.10.1.2/20 le 30
  seq 15 permit 10.10.1.2/20 ge 29 le 30
```

Example: The following shows example CLI display output for the command.

```
(Routing) #show ip prefix-list summary fred
```

```
ip prefix-list fred:
  count: 3, range entries: 3, sequences: 5 - 15, refcount: 0
```

Example: The following shows example CLI display output for the command.

```
(Routing) #show ip prefix-list detail fred
```

```
ip prefix-list fred:
  count: 3, range entries: 3, sequences: 5 - 15, refcount: 0
  seq 5 permit 10.10.1.1/20 ge 22 (hitcount: 0)
  seq 10 permit 10.10.1.2/20 le 30 (hitcount: 0)
  seq 15 permit 10.10.1.2/20 ge 29 le 30 (hitcount: 0)
```

5.3.17 show ipv6 prefix-list

This command displays configuration and status for a selected prefix list.

Format `show ipv6 prefix-list [detail | summary] listname [ipv6-prefix/prefix-length] [seq sequence-number] [longer] [first-match]`

Mode Privileged EXEC

Parameter	Description
detail summary	(Optional) Displays detailed or summarized information about all prefix lists.
list-name	(Optional) The name of a specific prefix list.
ipv6-prefix/prefix-length	(Optional) The network number and length (in bits) of the network mask.
seq	(Optional) Applies the sequence number to the prefix list entry.
sequence-number	(Optional) The sequence number of the prefix list entry.
longer	(Optional) Displays all entries of a prefix list that are more specific than the given network/length.
first-match	(Optional) Displays the entry of a prefix list that matches the given network/length.

Acceptable forms of this command are as follows:

```
show ipv6 prefix-list listname ipv6-prefix/prefix-length first-match
```

```
show ipv6 prefix-list listname ipv6-prefix/prefix-length longer
```

```
show ipv6 prefix-list listname ipv6-prefix/prefix-length
```

```
show ipv6 prefix-list listname seq sequence-number
```

```
show ipv6 prefix-list listname
```

show ipv6 prefix-list summary

show ipv6 prefix-list summary prefix-list-name

show ipv6 prefix-list detail

show ipv6 prefix-list detail prefix-list-name

The command outputs the following information.

Parameter	Description
count	Number of entries in the prefix list.
range entries	Number of entries that match the input range.
ref count	Number of entries referencing the given prefix list.
seq	Sequence number of the entry in the list.
permit/deny	The action to take.
sequences	Range of sequence numbers for the entries in the list
hit count	Number of matches for the prefix entry

Example: The following shows example CLI display output for the command.

```
(Switch) #show ipv6 prefix-list apple
```

```
ipv6 prefix-list apple:
```

```
count: 6, range entries: 3, sequences: 5 - 30, refcount: 31
```

```
seq 5 deny 5F00::/8 le 128
```

```
seq 10 deny ::/0
```

```
seq 15 deny ::/1
```

```
seq 20 deny ::/2
```

```
seq 25 deny ::/3 ge 4
```

```
    seq 30 permit ::/0 le 128
```

```
(Switch) #show ipv6 prefix-list summary apple
```

```
ipv6 prefix-list apple:
```

```
count: 6, range entries: 3, sequences: 5 - 30, refcount: 31
```

```
(Switch) #show ipv6 prefix-list detail apple
```

```
ipv6 prefix-list apple:
```

```
count: 6, range entries: 3, sequences: 5 - 30, refcount: 31
```

```
seq 5 deny 5F00::/8 le 128 (hit count: 0, refcount: 1)
```

```
seq 10 deny ::/0 (hit count: 0, refcount: 1)
```

```
seq 15 deny ::/1 (hit count: 0, refcount: 1)
```

```
seq 20 deny ::/2 (hit count: 0, refcount: 1)
```

```
seq 25 deny ::/3 ge 4 (hit count: 0, refcount: 1)
```

```
    seq 30 permit ::/0 le 128 (hit count: 240664, refcount: 0)
```

5.3.18 show route-map

To display a route map, use the **show route-map** command in Privileged EXEC mode.

Format show route-map [*map-name*]

Mode Privileged EXEC

Parameter	Description
map-name	(Optional) Name of a specific route map.

Example: The following shows example CLI display output for the command.

```
(Routing) # show route-map test
route-map test, permit, sequence 10
  Match clauses:
    ip address prefix-lists: orange
  Set clauses:
    set metric 50
```

5.3.19 clear ip prefix-list

To reset IP prefix-list counters, use the **clear ip prefix-list** command in Privileged EXEC mode. This command is used to clear prefix-list hit counters. The hit count is a value indicating the number of matches to a specific prefix list entry.

Format clear ip prefix-list [*prefix-list-name*] [*network/length*]

Mode Privileged EXEC

Parameter	Description
prefix-list-name	(Optional) Name of the prefix list from which the hit count is to be cleared.
network/length	(Optional) Network number and length (in bits) of the network mask. If this option is specified, hit counters are only cleared for the matching statement.

Example: The following shows an example of the command.

```
(Routing) # clear ip prefix-list orange 20.0.0.0/8
```

5.3.20 clear ipv6 prefix-list

Use this command to reset and clear IPv6 prefix-list hit counters. The hit count is a value indicating the number of matches to a specific prefix list entry.

Format clear ipv6 prefix-list [*prefix-list-name*] [*ipv6-prefix/prefix-length*]

Mode Privileged EXEC

Parameter	Description
list-name	(Optional) Name of the prefix list from which the hit count is to be cleared.
ipv6-prefix/prefix-length	(Optional) IPv6 prefix number and length (in bits) of the network mask. If this option is specified, hit counters are only cleared for the matching statement.

5.4 Router Discovery Protocol Commands

This section describes the commands you use to view and configure Router Discovery Protocol settings on the switch. The Router Discovery Protocol enables a host to discover the IP address of routers on the subnet.

5.4.1 ip irdp

This command enables Router Discovery on an interface or range of interfaces.

Default disabled
Format ip irdp
Mode Interface Config

5.4.1.1 no ip irdp

This command disables Router Discovery on an interface.

Format no ip irdp
Mode Interface Config

5.4.2 ip irdp address

This command configures the address that the interface uses to send the router discovery advertisements. The valid values for *ipaddr* are 224.0.0.1, which is the all-hosts IP multicast address, and 255.255.255.255, which is the limited broadcast address.

Default 224.0.0.1
Format ip irdp address *ipaddr*
Mode Interface Config

5.4.2.1 no ip irdp address

This command configures the default address used to advertise the router for the interface.

Format no ip irdp address
Mode Interface Config

5.4.3 ip irdp holdtime

This command configures the value, in seconds, of the holdtime field of the router advertisement sent from this interface. The holdtime range is the value of 4 to 9000 seconds.

Default 3 * maxinterval
Format ip irdp holdtime 4-9000
Mode Interface Config

5.4.3.1 no ip irdp holdtime

This command configures the default value, in seconds, of the holdtime field of the router advertisement sent from this interface.

Format `no ip irdp holdtime`
Mode Interface Config

5.4.4 `ip irdp maxadvertinterval`

This command configures the maximum time, in seconds, allowed between sending router advertisements from the interface. The range for maxadvertinterval is 4 to 1800 seconds.

Default 600
Format `ip irdp maxadvertinterval 4-1800`
Mode Interface Config

5.4.4.1 `no ip irdp maxadvertinterval`

This command configures the default maximum time, in seconds.

Format `no ip irdp maxadvertinterval`
Mode Interface Config

5.4.5 `ip irdp minadvertinterval`

This command configures the minimum time, in seconds, allowed between sending router advertisements from the interface. The range for minadvertinterval is 3–1800.

Default $0.75 * \text{maxadvertinterval}$
Format `ip irdp minadvertinterval 3-1800`
Mode Interface Config

5.4.5.1 `no ip irdp minadvertinterval`

This command sets the default minimum time to the default.

Format `no ip irdp minadvertinterval`
Mode Interface Config

5.4.6 `ip irdp multicast`

This command configures the destination IP address for router advertisements as 224.0.0.1, which is the default address. The *no* form of the command configures the IP address as 255.255.255.255 to instead send router advertisements to the limited broadcast address.

Format `ip irdp multicast ip address`
Mode Interface Config

5.4.6.1 `no ip irdp multicast`

By default, router advertisements are sent to 224.0.0.1. To instead send router advertisements to the limited broadcast address, 255.255.255.255, use the *no* form of this command.

Format no ip irdp multicast

Mode Interface Config

5.4.7 ip irdp preference

This command configures the preferability of the address as a default router address, relative to other router addresses on the same subnet.

Default 0

Format ip irdp preference -2147483648 to 2147483647

Mode Interface Config

5.4.7.1 no ip irdp preference

This command configures the default preferability of the address as a default router address, relative to other router addresses on the same subnet.

Format no ip irdp preference

Mode Interface Config

5.4.8 show ip irdp

This command displays the router discovery information for all interfaces, a specified interface, or specified VLAN. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

Format show ip irdp {*slot/port*|vlan 1-4093|all}

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	The <i>slot/port</i> that corresponds to a physical routing interface or vlan routing interface.
vlan	Use this keyword to specify the VLAN ID of the routing VLAN directly instead of in a <i>slot/port</i> format.
Ad Mode	The advertise mode, which indicates whether router discovery is enabled or disabled on this interface.
Dest Address	The destination IP address for router advertisements.
Max Int	The maximum advertise interval, which is the maximum time, in seconds, allowed between sending router advertisements from the interface.
Min Int	The minimum advertise interval, which is the minimum time, in seconds, allowed between sending router advertisements from the interface.
Hold Time	The amount of time, in seconds, that a system should keep the router advertisement before discarding it.
Preference	The preference of the address as a default router address, relative to other router addresses on the same subnet.

5.5 Virtual LAN Routing Commands

This section describes the commands you use to view and configure VLAN routing and to view VLAN routing status information.

5.5.1 vlan routing

This command enables routing on a VLAN. The *vlanid* value has a range from 1 to 4093. The [*interface ID*] value has a range from 1 to 128. Typically, you will not supply the interface ID argument, and the system automatically selects the interface ID. However, if you specify an interface ID, the interface ID becomes the port number in the *slot/port* for the VLAN routing interface. If you select an interface ID that is already in use, the CLI displays an error message and does not create the VLAN interface. For products that use text-based configuration, including the interface ID in the `vlan routing` command for the text configuration ensures that the *slot/port* for the VLAN interface stays the same across a restart. Keeping the *slot/port* the same ensures that the correct interface configuration is applied to each interface when the system restarts.

Format `vlan routing vlanid [interface ID]`

Mode VLAN Config

5.5.1.1 no vlan routing

This command deletes routing on a VLAN.

Format `no vlan routing vlanid`

Mode VLAN Config

Example: Example 1 shows the command specifying a *vlanid* value. The interface ID argument is not used.

```
(Switch)(Vlan)#vlan 14
(Switch)(Vlan)#vlan routing 14 ?
<cr>                               Press enter to execute the command.
<1-24>                             Enter interface ID
```

Typically, you press **<Enter>** without supplying the Interface ID value; the system automatically selects the interface ID.

Example: In Example 2, the command specifies interface ID 51 for VLAN 14 interface. The interface ID becomes the port number in the *slot/port* for the VLAN routing interface. In this example, *slot/port* is 4/51 for VLAN 14 interface.

```
(Switch)(Vlan)#vlan 14 51
(Switch)(Vlan)#
(Switch)#show ip vlan
MAC Address used by Routing VLANs: 00:11:88:59:47:36
```

VLAN ID	Logical Interface	IP Address	Subnet Mask
10	4/1	172.16.10.1	255.255.255.0
11	4/50	172.16.11.1	255.255.255.0
12	4/3	172.16.12.1	255.255.255.0
13	4/4	172.16.13.1	255.255.255.0
14	4/51	0.0.0.0	0.0.0.0 <--u/s/p is 4/51 for VLAN 14 interface

Example: In Example 3, you select an interface ID that is already in use. In this case, the CLI displays an error message and does not create the VLAN interface.

```
(Switch) #show ip vlan
```

```
MAC Address used by Routing VLANs: 00:11:88:59:47:36
```

VLAN ID	Logical Interface	IP Address	Subnet Mask
10	4/1	172.16.10.1	255.255.255.0
11	4/50	172.16.11.1	255.255.255.0
12	4/3	172.16.12.1	255.255.255.0
13	4/4	172.16.13.1	255.255.255.0
14	4/51	0.0.0.0	0.0.0.0

```
(Switch)#config
```

```
(Switch)(Config)#exit
```

```
(Switch)#vlan database
```

```
(Switch)(Vlan)#vlan 15
```

```
(Switch)(Vlan)#vlan routing 15 1
```

Interface ID 1 is already assigned to another interface

Example: The show running configuration command always lists the interface ID for each routing VLAN, as shown in Example 4 below.

```
(Switch) #show running-config
```

```
!!Current Configuration:
```

```
!
```

```
!System Description "Trident 56846 Development System - 48xTenGig + 4 FortyGig , R.7.28.4, Linux 2.6.34.6"
```

```
!System Software Version "R.7.28.4"
```

```
!System Up Time "0 days 8 hrs 38 mins 3 secs"
```

```
!Cut-through mode is configured as disabled
```

```
!Additional Packages FASTPATH BGP-4,FASTPATH QOS,FASTPATH Multicast,FASTPATH IPv6,FASTPATH IPv6 Management,FASTPATH Metro,FASTPATH Routing,FASTPATH Data Center
```

```
!Current SNTP Synchronized Time: SNTP Client Mode Is Disabled
```

```
!
```

```
vlan database
```

```
exit
```

```
configure
```

```
no logging console
```

```
aaa authentication enable "enableNetList" none
```

```
line console
```

```
serial timeout 0
```

```
exit
```

```
line telnet
```

```
exit
```

```
line ssh
```

```
exit
```

```
!
```

```
router rip
```

```
exit
```

```
router ospf
```

```
exit
```

```
ipv6 router ospf
```

```
exit
```

```
exit
```

5.5.2 interface vlan

Use this command to enter Interface configuration mode for the specified VLAN. The vlan-id range is 1 to 4093.

Format interface vlan vlan-id

Mode Global Config

5.5.3 show ip vlan

This command displays the VLAN routing information for all VLANs with routing enabled.

Format show ip vlan

Modes • Privileged EXEC
 • User EXEC

Term	Definition
MAC Address used by Routing VLANs	The MAC Address associated with the internal bridge-router interface (IBRI). The same MAC Address is used by all VLAN routing interfaces. It will be displayed above the per-VLAN information.
VLAN ID	The identifier of the VLAN.
Logical Interface	The logical <i>sLot/port</i> associated with the VLAN routing interface.
IP Address	The IP address associated with this VLAN.
Subnet Mask	The subnet mask that is associated with this VLAN.

5.6 Virtual Router Redundancy Protocol Commands

This section describes the commands you use to view and configure Virtual Router Redundancy Protocol (VRRP) and to view VRRP status information. VRRP helps provide failover and load balancing when you configure two devices as a VRRP pair.

5.6.1 ip vrrp (Global Config)

Use this command in Global Config mode to enable the administrative mode of VRRP on the router.

Default none

Format ip vrrp

Mode Global Config

5.6.1.1 no ip vrrp

Use this command in Global Config mode to disable the default administrative mode of VRRP on the router.

Format no ip vrrp

Mode Global Config

5.6.2 ip vrrp (Interface Config)

Use this command in Interface Config mode to create a virtual router associated with the interface or range of interfaces. The parameter *vrid* is the virtual router ID, which has an integer value range from 1 to 255.

Format `ip vrrp vrid`
Mode Interface Config

5.6.2.1 `no ip vrrp`

Use this command in Interface Config mode to delete the virtual router associated with the interface. The virtual Router ID, *vrid*, is an integer value that ranges from 1 to 255.

Format `no ip vrrp vrid`
Mode Interface Config

5.6.3 `ip vrrp mode`

This command enables the virtual router configured on the specified interface. Enabling the status field starts a virtual router. The parameter *vrid* is the virtual router ID which has an integer value ranging from 1 to 255.

Default disabled
Format `ip vrrp vrid mode`
Mode Interface Config

5.6.3.1 `no ip vrrp mode`

This command disables the virtual router configured on the specified interface. Disabling the status field stops a virtual router.

Format `no ip vrrp vrid mode`
Mode Interface Config

5.6.4 `ip vrrp ip`

This command sets the virtual router IP address value for an interface or range of interfaces. The value for *ipaddr* is the IP address which is to be configured on that interface for VRRP. The parameter *vrid* is the virtual router ID which has an integer value range from 1 to 255. You can use the optional [*secondary*] parameter to designate the IP address as a secondary IP address.

Default none
Format `ip vrrp vrid ip ipaddr [secondary]`
Mode Interface Config

5.6.4.1 `no ip vrrp ip`

Use this command in Interface Config mode to delete a secondary IP address value from the interface. To delete the primary IP address, you must delete the virtual router on the interface.

Format `no ip vrrp vrid ipaddress secondary`
Mode Interface Config

5.6.5 `ip vrrp accept-mode`

Use this command to allow the VRRP Master to accept ping packets sent to one of the virtual router's IP addresses.

**Note...**

VRRP accept-mode allows only ICMP Echo Request packets. No other type of packet is allowed to be delivered to a VRRP address.

Default	disabled
Format	<code>ip vrrp vrid accept-mode</code>
Mode	Interface Config

5.6.5.1 `no ip vrrp accept-mode`

Use this command to prevent the VRRP Master from accepting ping packets sent to one of the virtual router's IP addresses.

Format	<code>no ip vrrp vrid accept-mode</code>
Mode	Interface Config

5.6.6 `ip vrrp authentication`

This command sets the authorization details value for the virtual router configured on a specified interface or range of interfaces. The parameter `{none | simple}` specifies the authorization type for virtual router configured on the specified interface. The parameter `[key]` is optional, it is only required when authorization type is simple text password. The parameter `vrid` is the virtual router ID which has an integer value ranges from 1 to 255.

Default	no authorization
Format	<code>ip vrrp vrid authentication {none simple key}</code>
Mode	Interface Config

5.6.6.1 `no ip vrrp authentication`

This command sets the default authorization details value for the virtual router configured on a specified interface or range of interfaces.

Format	<code>no ip vrrp vrid authentication</code>
Mode	Interface Config

5.6.7 `ip vrrp preempt`

This command sets the preemption mode value for the virtual router configured on a specified interface or range of interfaces. The parameter `vrid` is the virtual router ID, which is an integer from 1 to 255.

Default	enabled
Format	<code>ip vrrp vrid preempt</code>
Mode	Interface Config

5.6.7.1 no ip vrrp preempt

This command sets the default preemption mode value for the virtual router configured on a specified interface or range of interfaces.

Format no ip vrrp *vrid* preempt

Mode • Interface Config

5.6.8 ip vrrp priority

This command sets the priority of a router within a VRRP group. It can be used to configure an interface or a range of interfaces. Higher values equal higher priority. The range is from 1 to 254. The parameter *vrid* is the virtual router ID, whose range is from 1 to 255.

The router with the highest priority is elected master. If a router is configured with the address used as the address of the virtual router, the router is called the "address owner." The priority of the address owner is always 255 so that the address owner is always master. If the master has a priority less than 255 (it is not the address owner) and you configure the priority of another router in the group higher than the master's priority, the router will take over as master only if preempt mode is enabled.

Default 100 unless the router is the address owner, in which case its priority is automatically set to 255.

Format ip vrrp *vrid* priority 1-254

Mode • Interface Config

5.6.8.1 no ip vrrp priority

This command sets the default priority value for the virtual router configured on a specified interface or range of interfaces.

Format no ip vrrp *vrid* priority

Mode Interface Config

5.6.9 ip vrrp timers advertise

This command sets the frequency, in seconds, that an interface or range of interfaces on the specified virtual router sends a virtual router advertisement.

Default 1

Format ip vrrp *vrid* timers advertise 1-255

Mode Interface Config

5.6.9.1 no ip vrrp timers advertise

This command sets the default virtual router advertisement value for an interface or range of interfaces.

Format no ip vrrp *vrid* timers advertise

Mode Interface Config

5.6.10 ip vrrp track interface

Use this command to alter the priority of the VRRP router based on the availability of its interfaces. This command is useful for tracking interfaces that are not configured for VRRP. Only IP interfaces are tracked. A tracked interface is up if the IP on that interface is up. Otherwise, the tracked interface is down. You can use this command to configure a single interface or range of interfaces. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

When the tracked interface is down or the interface has been removed from the router, the priority of the VRRP router will be decremented by the value specified in the *priority* argument. When the interface is up for IP protocol, the priority will be incremented by the *priority* value.

A VRRP configured interface can track more than one interface. When a tracked interface goes down, then the priority of the router will be decreased by 10 (the default priority decrement) for each downed interface. The default priority decrement is changed using the *priority* argument. The default priority of the virtual router is 100, and the default decrement priority is 10. By default, no interfaces are tracked. If you specify just the interface to be tracked, without giving the optional priority, then the default priority will be set. The default priority decrement is 10.

Default priority: 10
Format ip vrrp *vrid* track interface {*slot/port/vlan 1-4093*} [*decrement priority*]
Mode Interface Config

5.6.10.1 no ip vrrp track interface

Use this command to remove the interface or range of interfaces from the tracked list or to restore the priority decrement to its default.

Format no ip vrrp *vrid* track interface {*slot/port/vlan 1-4093*} [*decrement*]
Mode Interface Config

5.6.11 ip vrrp track ip route

Use this command to track the route reachability on an interface or range of interfaces. When the tracked route is deleted, the priority of the VRRP router will be decremented by the value specified in the *priority* argument. When the tracked route is added, the priority will be incremented by the same.

A VRRP configured interface can track more than one route. When a tracked route goes down, then the priority of the router will be decreased by 10 (the default priority decrement) for each downed route. By default no routes are tracked. If you specify just the route to be tracked, without giving the optional priority, then the default priority will be set. The default priority decrement is 10. The default priority decrement is changed using the *priority* argument.

Default priority: 10
Format ip vrrp *vrid* track ip route *ip-address/prefix-length* [*decrement priority*]
Mode Interface Config

5.6.11.1 no ip vrrp track ip route

Use this command to remove the route from the tracked list or to restore the priority decrement to its default. When removing a tracked IP route from the tracked list, the priority should be incremented by the decrement value if the route is not reachable.

Format `no ip vrrp vrid track interface slot/port [decrement]`
Mode Interface Config

5.6.12 `show ip vrrp interface stats`

This command displays the statistical information about each virtual router configured on the switch. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format.

Format `show ip vrrp interface stats {slot/port/vlan 1-4093} vrid`
Modes • Privileged EXEC
 • User EXEC

Term	Definition
Uptime	The time that the virtual router has been up, in days, hours, minutes and seconds.
Protocol	The protocol configured on the interface.
State Transitioned to Master	The total number of times virtual router state has changed to MASTER.
Advertisement Received	The total number of VRRP advertisements received by this virtual router.
Advertisement Interval Errors	The total number of VRRP advertisements received for which advertisement interval is different than the configured value for this virtual router.
Authentication Failure	The total number of VRRP packets received that don't pass the authentication check.
IP TTL errors	The total number of VRRP packets received by the virtual router with IP TTL (time to live) not equal to 255.
Zero Priority Packets Received	The total number of VRRP packets received by virtual router with a priority of '0'.
Zero Priority Packets Sent	The total number of VRRP packets sent by the virtual router with a priority of '0'.
Invalid Type Packets Received	The total number of VRRP packets received by the virtual router with invalid 'type' field.
Address List Errors	The total number of VRRP packets received for which address list does not match the locally configured list for the virtual router.
Invalid Authentication Type	The total number of VRRP packets received with unknown authentication type.
Authentication Type Mismatch	The total number of VRRP advertisements received for which 'auth type' not equal to locally configured one for this virtual router.
Packet Length Errors	The total number of VRRP packets received with packet length less than length of VRRP header.

5.6.13 `show ip vrrp`

This command displays whether VRRP functionality is enabled or disabled on the switch. It also displays some global parameters which are required for monitoring. This command takes no options.

Format `show ip vrrp`
Modes • Privileged EXEC
 • User EXEC

Term	Definition
VRRP Admin Mode	The administrative mode for VRRP functionality on the switch.
Router Checksum Errors	The total number of VRRP packets received with an invalid VRRP checksum value.
Router Version Errors	The total number of VRRP packets received with Unknown or unsupported version number.
Router VRID Errors	The total number of VRRP packets received with invalid VRID for this virtual router.

5.6.14 show ip vrrp interface

This command displays all configuration information and VRRP router statistics of a virtual router configured on a specific interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is the VLAN ID of the routing VLAN instead of in a *slot/port* format. Use the output of the command to verify the track interface and track IP route configurations.

Format show ip vrrp interface {*slot/port/vlan 1-4093*} *vrid*

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
IP Address	The configured IP address for the Virtual router.
VMAC address	The VMAC address of the specified router.
Authentication type	The authentication type for the specific virtual router.
Priority	The priority value for the specific virtual router, taking into account any priority decrements for tracked interfaces or routes.
Configured Priority	The priority configured through the <code>ip vrrp <i>vrid</i> priority 1-254</code> command.
Advertisement interval	The advertisement interval in seconds for the specific virtual router.
Pre-Empt Mode	The preemption mode configured on the specified virtual router.
Administrative Mode	The status (Enable or Disable) of the specific router.
Accept Mode	When enabled, the VRRP Master can accept ping packets sent to one of the virtual router's IP addresses.
State	The state (Master/backup) of the virtual router.

Example: The following shows example CLI display output for the command.

show ip vrrp interface <u/s/p> *vrid*

```

Primary IP Address..... 1.1.1.5
VMAC Address..... 00:00:5e:00:01:01
Authentication Type..... None
Priority..... 80
    Configured priority..... 100
Advertisement Interval (secs)..... 1
Pre-empt Mode..... Enable
Administrative Mode..... Enable
Accept Mode..... Enable
State..... Initialized
Track Interface      State      DecrementPriority
-----

```

```

<0/1>          down          10
TrackRoute (pfx/len)      State      DecrementPriority
-----
10.10.10.1/255.255.255.0  down          10

```

5.6.15 show ip vrrp interface brief

This command displays information about each virtual router configured on the switch. This command takes no options. It displays information about each virtual router.

Format show ip vrrp interface brief

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Interface	<i>slot/port</i>
VRID	The router ID of the virtual router.
IP Address	The virtual router IP address.
Mode	Indicates whether the virtual router is enabled or disabled.
State	The state (Master/backup) of the virtual router.

5.7 DHCP and BOOTP Relay Commands

This section describes the commands you use to configure BootP/DHCP Relay on the switch. A DHCP relay agent operates at Layer 3 and forwards DHCP requests and replies between clients and servers when they are not on the same physical subnet.

5.7.1 bootpdhcprelay cidoptmode

This command enables the circuit ID option mode for BootP/DHCP Relay on the system.

Default disabled

Format bootpdhcprelay cidoptmode

Mode

- Global Config
- Virtual Router Config

5.7.1.1 no bootpdhcprelay cidoptmode

This command disables the circuit ID option mode for BootP/DHCP Relay on the system.

Format no bootpdhcprelay cidoptmode

Mode

- Global Config
- Virtual Router Config

5.7.2 bootpdhcprelay maxhopcount

This command configures the maximum allowable relay agent hops for BootP/DHCP Relay on the system. The *hops* parameter has a range of 1 to 16.

Default 4
Format bootpdhcprelay maxhopcount 1-16
Mode

- Global Config
- Virtual Router Config

5.7.2.1 no bootpdhcprelay maxhopcount

This command configures the default maximum allowable relay agent hops for BootP/DHCP Relay on the system.

Format no bootpdhcprelay maxhopcount
Mode

- Global Config
- Virtual Router Config

5.7.3 bootpdhcprelay minwaittime

This command configures the minimum wait time in seconds for BootP/DHCP Relay on the system. When the BOOTP relay agent receives a BOOTREQUEST message, it MAY use the seconds-since-client-began-booting field of the request as a factor in deciding whether to relay the request or not. The parameter has a range of 0 to 100 seconds.

Default 0
Format bootpdhcprelay minwaittime 0-100
Mode

- Global Config
- Virtual Router Config

5.7.3.1 no bootpdhcprelay minwaittime

This command configures the default minimum wait time in seconds for BootP/DHCP Relay on the system.

Format no bootpdhcprelay minwaittime
Mode

- Global Config
- Virtual Router Config

5.7.4 bootpdhcprelay serverip

This command configures the server IP address of the BootP/DHCP Relay on the system. The *ipaddr* parameter is the IP address of the server.

Default 0.0.0.0
Format bootpdhcprelay serverip ipaddr
Mode Global Config

5.7.4.1 no bootpdhcprelay serverip

This command returns the server IP address of the BootP/DHCP Relay on the system to the default value of 0.0.0.0.

Format no bootpdhcprelay serverip
Mode Global Config

5.7.5 bootpdhcprelay enable

Use this command to enable the relay of DHCP packets.

Default disabled
Format bootpdhcprelay enable
Mode Global Config

5.7.5.1 no bootpdhcprelay enable

Use this command to disable the relay of DHCP packets.

Default disabled
Format no bootpdhcprelay enable
Mode Global Config

5.7.6 show bootpdhcprelay

This command displays the BootP/DHCP Relay information .

Format show bootpdhcprelay
Modes

- Privileged EXEC
- User EXEC

Term	Definition
Maximum Hop Count	The maximum allowable relay agent hops.
Minimum Wait Time (Seconds)	The minimum wait time.
Admin Mode	Indicates whether relaying of requests is enabled or disabled.
Circuit Id Option Mode	The DHCP circuit Id option which may be enabled or disabled.

5.7.7 show ip bootpdhcprelay

This command displays BootP/DHCP Relay information.

Format show ip bootpdhcprelay
Modes

- Privileged EXEC
- User EXEC

Parameter	Definition
Maximum Hop Count	The maximum allowable relay agent hops.
Minimum Wait Time (Seconds)	The minimum wait time.
Admin Mode	Indicates whether relaying of requests is enabled or disabled.
Circuit Id Option Mode	The DHCP circuit Id option which may be enabled or disabled.

Example: The following shows an example of the command.
(Routing) >show ip bootpdhcrelay

```
Maximum Hop Count..... 4
Minimum Wait Time(Seconds)..... 0
Admin Mode..... Disable
Circuit Id Option Mode..... Enable
```

5.8 IP Helper Commands

This section describes the commands to configure and monitor the IP Helper agent. IP Helper relays DHCP and other broadcast UDP packets from a local client to one or more servers which are not on the same network at the client.

The IP Helper feature provides a mechanism that allows a router to forward certain configured UDP broadcast packets to a particular IP address. This allows various applications to reach servers on nonlocal subnets, even if the application was designed to assume a server is always on a local subnet and uses broadcast packets (with either the limited broadcast address 255.255.255.255, or a network directed broadcast address) to reach the server.

The network administrator can configure relay entries both globally and on routing interfaces. Each relay entry maps an ingress interface and destination UDP port number to a single IPv4 address (the helper address). The network administrator may configure multiple relay entries for the same interface and UDP port, in which case the relay agent relays matching packets to each server address. Interface configuration takes priority over global configuration. That is, if a packet's destination UDP port matches any entry on the ingress interface, the packet is handled according to the interface configuration. If the packet does not match any entry on the ingress interface, the packet is handled according to the global IP helper configuration.

The network administrator can configure discard relay entries, which direct the system to discard matching packets. Discard entries are used to discard packets received on a specific interface when those packets would otherwise be relayed according to a global relay entry. Discard relay entries may be configured on interfaces, but are not configured globally.

In addition to configuring the server addresses, the network administrator also configures which UDP ports are forwarded. Certain UDP port numbers can be specified by name in the UI as a convenience, but the network administrator can configure a relay entry with any UDP port number. The network administrator may configure relay entries that do not specify a destination UDP port. The relay agent relays assumes these entries match packets with the UDP destination ports listed in [Table 3](#). This is the list of default ports.

Table 3: Default Ports - UDP Port Numbers Implied by Wildcard

Protocol	UDP Port Number
IEN-116 Name Service	42
DNS	53
NetBIOS Name Server	137
NetBIOS Datagram Server	138
TACACS Server	49
Time Service	37
DHCP	67
Trivial File Transfer Protocol (TFTP)	69

The system limits the number of relay entries to four times the maximum number of routing interfaces. The network administrator can allocate the relay entries as he likes. There is no limit to the number of relay entries on an individual interface, and no limit to the number of servers for a given {interface, UDP port} pair.

The relay agent relays DHCP packets in both directions. It relays broadcast packets from the client to one or more DHCP servers, and relays to the client packets that the DHCP server unicasts back to the relay agent. For other protocols, the relay agent only relays broadcast packets from the client to the server. Packets from the server back to the client are assumed to be unicast directly to the client. Because there is no relay in the return direction for protocols other than DHCP, the relay agent retains the source IP address from the original client packet. The relay agent uses a local IP address as the source IP address of relayed DHCP client packets.

When a switch receives a broadcast UDP packet on a routing interface, the relay agent checks if the interface is configured to relay the destination UDP port. If so, the relay agent unicasts the packet to the configured server IP addresses. Otherwise, the relay agent checks if there is a global configuration for the destination UDP port. If so, the relay agent unicasts the packet to the configured server IP addresses. Otherwise the packet is not relayed. Note that if the packet matches a discard relay entry on the ingress interface, then the packet is not forwarded, regardless of the global configuration.

The relay agent only relays packets that meet the following conditions:

- The destination MAC address must be the all-ones broadcast address (FF:FF:FF:FF:FF:FF)
- The destination IP address must be the limited broadcast address (255.255.255.255) or a directed broadcast address for the receive interface.
- The IP time-to-live (TTL) must be greater than 1.
- The protocol field in the IP header must be UDP (17).
- The destination UDP port must match a configured relay entry.

5.8.1 clear ip helper statistics

Use this command to reset to zero the statistics displayed in the `show ip helper statistics` command.

Format clear ip helper statistics

Mode Privileged EXEC

Example: The following shows an example of the command.
(switch) #clear ip helper statistics

5.8.2 ip helper-address (Global Config)

Use this command to configure the relay of certain UDP broadcast packets received on any interface. This command can be invoked multiple times, either to specify multiple server addresses for a given UDP port number or to specify multiple UDP port numbers handled by a specific server.

Default No helper addresses are configured.

Format ip helper-address server-address [dest-udp-port | dhcp | domain | isakmp | mobile-ip | nameserver | netbios-dgm | netbios-ns | ntp | pim-auto-rp | rip | tacacs | tftp | time]

Mode

- Global Config
- Virtual Router Config

Parameter	Description
server-address	The IPv4 unicast or directed broadcast address to which relayed UDP broadcast packets are sent. The server address cannot be an IP address configured on any interface of the local router.
dest-udp-port	A destination UDP port number from 0 to 65535.
port-name	The destination UDP port may be optionally specified by its name. Whether a port is specified by its number or its name has no effect on behavior. The names recognized are as follows: • dhcp (port 67) • domain (port 53) • isakmp (port 500) • mobile-ip (port 434) • nameserver (port 42) • netbios-dgm (port 138) • netbios-ns (port 137) • ntp (port 123) • pim-auto-rp (port 496) • rip (port 520) • tacacs (port 49) • tftp (port 69) • time (port 37) Other ports must be specified by number.

Example: To relay DHCP packets received on any interface to two DHCP servers, 10.1.1.1 and 10.1.2.1, use the following commands:

```
(switch)#config
(switch)(config)#ip helper-address 10.1.1.1 dhcp
(switch)(config)#ip helper-address 10.1.2.1 dhcp
```

Example: To relay UDP packets received on any interface for all default ports to the server at 20.1.1.1, use the following commands:

```
(switch)#config
(switch)(config)#ip helper-address 20.1.1.1
```

5.8.2.1 no ip helper-address (Global Config)

Use the **no** form of the command to delete an IP helper entry. The command **no ip helper-address** with no arguments clears all global IP helper addresses.

Format no ip helper-address [server-address [dest-udp-port | dhcp | domain | isakmp | mobile-ip | nameserver | netbios-dgm | netbios-ns | ntp | pim-auto-rp | rip | tacacs | tftp | time]]

Mode Global Config

5.8.3 ip helper-address (Interface Config)

Use this command to configure the relay of certain UDP broadcast packets received on a specific interface or range of interfaces. This command can be invoked multiple times on a routing interface, either to specify multiple server addresses for a given port number or to specify multiple port numbers handled by a specific server.

Default	No helper addresses are configured.
Format	<code>ip helper-address {server-address discard} [dest-udp-port dhcp domain isakmp mobile ip nameserver netbios-dgm netbios-ns ntp pim-auto-rp rip tacacs tftp time]</code>
Mode	Interface Config

Parameter	Description
server-address	The IPv4 unicast or directed broadcast address to which relayed UDP broadcast packets are sent. The server address cannot be in a subnet on the interface where the relay entry is configured, and cannot be an IP address configured on any interface of the local router.
discard	Matching packets should be discarded rather than relayed, even if a global ip helper-address configuration matches the packet.
dest-udp-port	A destination UDP port number from 0 to 65535.
port-name	The destination UDP port may be optionally specified by its name. Whether a port is specified by its number or its name has no effect on behavior. The names recognized are as follows: • dhcp (port 67) • domain (port 53) • isakmp (port 500) • mobile-ip (port 434) • nameserver (port 42) • netbios-dgm (port 138) • netbios-ns (port 137) • ntp (port 123) • pim-auto-rp (port 496) • rip (port 520) • tacacs (port 49) • tftp (port 69) • time (port 37) Other ports must be specified by number.

Example: To relay DHCP packets received on interface 0/2 to two DHCP servers, 192.168.10.1 and 192.168.20.1, use the following commands:

```
(switch)#config
(switch)(config)#interface 0/2
(switch)(interface 0/2)#ip helper-address 192.168.10.1 dhcp
(switch)(interface 0/2)#ip helper-address 192.168.20.1 dhcp
```

Example: To relay both DHCP and DNS packets to 192.168.30.1, use the following commands:

```
(switch)#config
(switch)(config)#interface 0/2
(switch)(interface 0/2)#ip helper-address 192.168.30.1 dhcp
(switch)(interface 0/2)#ip helper-address 192.168.30.1 dns
```

Example: This command takes precedence over an ip helper-address command given in global configuration mode. With the following configuration, the relay agent relays DHCP packets received on any interface other than 0/2 and 0/17 to 192.168.40.1, relays DHCP and DNS packets received on 0/2 to 192.168.40.2, relays SNMP traps (port 162) received on interface 0/17 to 192.168.23.1, and drops DHCP packets received on 0/17:

```
(switch)#config
```

```
(switch)(config)#ip helper-address 192.168.40.1 dhcp
(switch)(config)#interface 0/2
(switch)(interface 0/2)#ip helper-address 192.168.40.2 dhcp
(switch)(interface 0/2)#ip helper-address 192.168.40.2 domain
(switch)(interface 0/2)#exit
(switch)(config)#interface 0/17
(switch)(interface 0/17)#ip helper-address 192.168.23.1 162
(switch)(interface 0/17)#ip helper-address discard dhcp
```

5.8.3.1 no ip helper-address (Interface Config)

Use this command to delete a relay entry on an interface. The `no` command with no arguments clears all helper addresses on the interface.

Format `no ip helper-address [server-address | discard ][dest-udp-port | dhcp | domain | isakmp | mobile ip | nameserver | netbios-dgm | netbios-ns | ntp | pim-auto-rp | rip | tacacs | tftp | time]`

Mode Interface Config

5.8.4 ip helper enable

Use this command to enable relay of UDP packets. This command can be used to temporarily disable IP helper without deleting all IP helper addresses. This command replaces the `bootpdhcprelay enable` command, but affects not only relay of DHCP packets, but also relay of any other protocols for which an IP helper address has been configured.

Default disabled

Format `ip helper enable`

Mode • Global Config
• Virtual Router Config

Example: The following shows an example of the command.

```
(switch)(config)#ip helper enable
```

5.8.4.1 no ip helper enable

Use the `no` form of this command to disable relay of all UDP packets.

Format `no ip helper enable`

Mode Global Config

5.8.5 show ip helper-address

Use this command to display the IP helper address configuration. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format.

Format `show ip helper-address [{slot/port/vlan 1-4093}]`

Mode Privileged EXEC

Parameter	Description
interface	The relay configuration is applied to packets that arrive on this interface. This field is set to <code>any</code> for global IP helper entries.
UDP Port	The relay configuration is applied to packets whose destination UDP port is this port. Entries whose UDP port is identified as <code>any</code> are applied to packets with the destination UDP ports listed in Table 4.
Discard	If Yes, packets arriving on the given interface with the given destination UDP port are discarded rather than relayed. Discard entries are used to override global IP helper address entries which otherwise might apply to a packet.
Hit Count	The number of times the IP helper entry has been used to relay or discard a packet.
Server Address	The IPv4 address of the server to which packets are relayed.

Example: The following shows example CLI display output for the command.
(switch) #show ip helper-address

IP helper is enabled

Interface	UDP Port	Discard	Hit Count	Server Address
0/1	dhcp	No	10	10.100.1.254 10.100.2.254
0/17	any	Yes	2	
any	dhcp	No	0	10.200.1.254

5.8.6 show ip helper statistics

Use this command to display the number of DHCP and other UDP packets processed and relayed by the UDP relay agent

Format show ip helper statistics

Mode Privileged EXEC

Parameter	Description
DHCP client messages received	The number of valid messages received from a DHCP client. The count is only incremented if IP helper is enabled globally, the ingress routing interface is up, and the packet passes a number of validity checks, such as having a TTL>1 and having valid source and destination IP addresses.
DHCP client messages relayed	The number of DHCP client messages relayed to a server. If a message is relayed to multiple servers, the count is incremented once for each server.
DHCP server messages received	The number of DHCP responses received from the DHCP server. This count only includes messages that the DHCP server unicasts to the relay agent for relay to the client.
DHCP server messages relayed	The number of DHCP server messages relayed to a client.
UDP clients messages received	The number of valid UDP packets received. This count includes DHCP messages and all other protocols relayed. Conditions are similar to those for the first statistic in this table.
UDP clients messages relayed	The number of UDP packets relayed. This count includes DHCP messages relayed as well as all other protocols. The count is incremented for each server to which a packet is sent.
DHCP message hop count exceeded max	The number of DHCP client messages received whose hop count is larger than the maximum allowed. The maximum hop count is a configurable value listed in show bootpdhcrelay. A log message is written for each such failure. The DHCP relay agent does not relay these packets.
DHCP message with secs field below min	The number of DHCP client messages received whose secs field is less than the minimum value. The minimum secs value is a configurable value and is displayed in show bootpdhcrelay. A log message is written for each such failure. The DHCP relay agent does not relay these packets.

Parameter	Description
DHCP message with giaddr set to local address	The number of DHCP client messages received whose gateway address, giaddr, is already set to an IP address configured on one of the relay agent's own IP addresses. In this case, another device is attempting to spoof the relay agent's address. The relay agent does not relay such packets. A log message gives details for each occurrence.
Packets with expired TTL	The number of packets received with TTL of 0 or 1 that might otherwise have been relayed.
Packets that matched a discard entry	The number of packets ignored by the relay agent because they match a discard relay entry.

Example: The following shows example CLI display output for the command.
(switch)#show ip helper statistics

```

DHCP client messages received..... 8
DHCP client messages relayed..... 2
DHCP server messages received..... 2
DHCP server messages relayed..... 2
UDP client messages received..... 8
UDP client messages relayed..... 2
DHCP message hop count exceeded max..... 0
DHCP message with secs field below min..... 0
DHCP message with giaddr set to local address.. 0
Packets with expired TTL..... 0
Packets that matched a discard entry..... 0

```

5.9 Open Shortest Path First Commands

This section describes the commands you use to view and configure Open Shortest Path First (OSPF), which is a link-state routing protocol that you use to route traffic within a network. This section contains the following subsections:

- "General OSPF Commands" on page 591"
- "OSPF Interface Commands" on page 608"
- "IP Event Dampening Commands" on page 613"
- "OSPFv2 Stub Router Commands" on page 617"
- "OSPF Show Commands" on page 618"

General OSPF Commands

5.9.1 router ospf

Use this command to enter Router OSPF mode.

Format router ospf
Mode Global Config

5.9.2 enable (OSPF)

This command resets the default administrative mode of OSPF in the router (active).

Default enabled
Format enable
Mode Router OSPF Config

5.9.2.1 no enable (OSPF)

This command sets the administrative mode of OSPF in the router to inactive.

Format no enable
Mode Router OSPF Config

5.9.3 network area (OSPF)

Use this command to enable OSPFv2 on an interface and set its area ID if the IP address of an interface is covered by this network command.

Default disabled
Format network *ip-address wildcard-mask area area-id*
Mode Router OSPF Config

5.9.3.1 no network area (OSPF)

Use this command to disable the OSPFv2 on a interface if the IP address of an interface was earlier covered by this network command.

Format no network *ip-address wildcard-mask area area-id*
Mode Router OSPF Config

5.9.4 1583compatibility

This command enables OSPF 1583 compatibility.

**Note...**

1583 compatibility mode is enabled by default. If all OSPF routers in the routing domain are capable of operating according to RFC 2328, OSPF 1583 compatibility mode should be disabled.

Default enabled
Format 1583compatibility
Mode Router OSPF Config

5.9.4.1 no 1583compatibility

This command disables OSPF 1583 compatibility.

Format no 1583compatibility
Mode Router OSPF Config

5.9.5 area default-cost (OSPF)

This command configures the default cost for the stub area. You must specify the area ID and an integer value between 1-16777215.

Format area *areaid* default-cost *1-16777215*
Mode Router OSPF Config

5.9.6 area nssa (OSPF)

This command configures the specified *areaid* to function as an NSSA.

Format area *areaid* nssa

Mode Router OSPF Config

5.9.6.1 no area nssa

This command disables nssa from the specified area id.

Format no area *areaid* nssa

Mode Router OSPF Config

5.9.7 area nssa default-info-originate (OSPF)

This command configures the metric value and type for the default route advertised into the NSSA. The optional metric parameter specifies the metric of the default route and is to be in a range of 1-16777214. If no metric is specified, the default value is *****. The metric type can be comparable (nssa-external 1) or noncomparable (nssa-external 2).

Format area *areaid* nssa default-info-originate [*metric*] [{comparable | non-comparable}]

Mode Router OSPF Config

5.9.7.1 no area nssa default-info-originate (OSPF)

This command disables the default route advertised into the NSSA.

Format no area *areaid* nssa default-info-originate [*metric*] [{comparable | non-comparable}]

Mode Router OSPF Config

5.9.8 area nssa no-redistribute (OSPF)

This command configures the NSSA Area Border router (ABR) so that learned external routes will not be redistributed to the NSSA.

Format area *areaid* nssa no-redistribute

Mode Router OSPF Config

5.9.8.1 no area nssa no-redistribute (OSPF)

This command disables the NSSA ABR so that learned external routes are redistributed to the NSSA.

Format no area *areaid* nssa no-redistribute

Mode Router OSPF Config

5.9.9 area nssa no-summary (OSPF)

This command configures the NSSA so that summary LSAs are not advertised into the NSSA.

Format area *areaid* nssa no-summary

Mode Router OSPF Config

5.9.9.1 no area nssa no-summary (OSPF)

This command disables nssa from the summary LSAs.

Format no area *areaid* nssa no-summary

Mode Router OSPF Config

5.9.10 area nssa translator-role (OSPF)

This command configures the translator role of the NSSA. A value of *always* causes the router to assume the role of the translator the instant it becomes a border router and a value of *candidate* causes the router to participate in the translator election process when it attains border router status.

Format area *areaid* nssa translator-role {always | candidate}

Mode Router OSPF Config

5.9.10.1 no area nssa translator-role (OSPF)

This command disables the nssa translator role from the specified area id.

Format no area *areaid* nssa translator-role {always | candidate}

Mode Router OSPF Config

5.9.11 area nssa translator-stab-intv (OSPF)

This command configures the translator *stabilityinterval* of the NSSA. The *stabilityinterval* is the period of time that an elected translator continues to perform its duties after it determines that its translator status has been deposed by another router.

Format area *areaid* nssa translator-stab-intv *stabilityinterval*

Mode Router OSPF Config

5.9.11.1 no area nssa translator-stab-intv (OSPF)

This command disables the nssa translator's *stabilityinterval* from the specified area id.

Format no area *areaid* nssa translator-stab-intv *stabilityinterval*

Mode Router OSPF Config

5.9.12 area range (OSPF)

Use the area range command in Router Configuration mode to configure a summary prefix that an area border router advertises for a specific area.

Default No area ranges are configured by default. No cost is configured by default.

Format area *areaid* range *ip-address netmask* {summarylink | nssaexternallink} [advertise | not-advertise] [cost *cost*]

Mode OSPFv2 Router Configuration

Parameter	Description
area-id	The area identifier for the area whose networks are to be summarized.
prefix netmask	The summary prefix to be advertised when the ABR computes a route to one or more networks within this prefix in this area.

Parameter	Description
summarylink	When this keyword is given, the area range is used when summarizing prefixes advertised in type 3 summary LSAs.
nssaexternallink	When this keyword is given, the area range is used when translating type 7 LSAs to type 5 LSAs.
advertise	[Optional] When this keyword is given, the summary prefix is advertised when the area range is active. This is the default.
not-advertise	[Optional] When this keyword is given, neither the summary prefix nor the contained prefixes are advertised when the area range is active. When the not-advertise option is given, any static cost previously configured is removed from the system configuration.
cost	[Optional] If an optional cost is given, OSPF sets the metric field in the summary LSA to the configured value rather than setting the metric to the largest cost among the networks covered by the area range. A static cost may only be configured if the area range is configured to advertise the summary. The range is 0 to 16,777,215. If the cost is set to 16,777,215 for type 3 summarization, a type 3 summary LSA is not advertised, but contained networks are suppressed. This behavior is equivalent to specifying the not-advertise option. If the range is configured for type 7 to type 5 translation, a type 5 LSA is sent if the metric is set to 16,777,215; however, other routers will not compute a route from a type 5 LSA with this metric.

5.9.12.1 no area range

The **no** form of this command deletes a specified area range or reverts an option to its default.

Format no area *areaid* range *prefix netmask* {summarylink | nssaexternallink} [advertise | not-advertise] [cost]

Mode OSPFv2 Router Configuration

Example: The following shows an example of the command.

```
!! Create area range
(Router) (Config-router)#area 1 range 10.0.0.0 255.0.0.0 summarylink
!! Delete area range
(Router) (Config-router)#no area 1 range 10.0.0.0 255.0.0.0 summarylink
```

The **no** form may be used to revert the [advertise | not-advertise] option to its default without deleting the area range. Deleting and recreating the area range would cause OSPF to temporarily advertise the prefixes contained within the range. Note that using either the **advertise** or **not-advertise** keyword reverts the configuration to the default. For example:

```
!! Create area range. Suppress summary.
(Router) (Config-router)#area 1 range 10.0.0.0 255.0.0.0 summarylink not-advertise
!! Advertise summary.
(Router) (Config-router)#no area 1 range 10.0.0.0 255.0.0.0 summarylink not-advertise
```

The **no** form may be used to remove a static area range cost, so that OSPF sets the cost to the largest cost among the contained routes.

```
!! Create area range with static cost.
(Router) (Config-router)#area 1 range 10.0.0.0 255.0.0.0 summarylink cost 1000
!! Remove static cost.
(Router) (Config-router)#no area 1 range 10.0.0.0 255.0.0.0 summarylink cost
```

5.9.13 area stub (OSPF)

This command creates a stub area for the specified area ID. A stub area is characterized by the fact that AS External LSAs are not propagated into the area. Removing AS External LSAs and Summary LSAs can significantly reduce the link state database of routers within the stub area.

Format area *areaid* stub

Mode Router OSPF Config

5.9.13.1 no area stub

This command deletes a stub area for the specified area ID.

Format no area *areaid* stub

Mode Router OSPF Config

5.9.14 area stub no-summary (OSPF)

This command configures the Summary LSA mode for the stub area identified by *areaid*. Use this command to prevent LSA Summaries from being sent.

Default disabled

Format area *areaid* stub no-summary

Mode Router OSPF Config

5.9.14.1 no area stub no-summary

This command configures the default Summary LSA mode for the stub area identified by *areaid*.

Format no area *areaid* stub no-summary

Mode Router OSPF Config

5.9.15 area virtual-link (OSPF)

This command creates the OSPF virtual interface for the specified *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format area *areaid* virtual-link *neighbor*

Mode Router OSPF Config

5.9.15.1 no area virtual-link

This command deletes the OSPF virtual interface from the given interface, identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format no area *areaid* virtual-link *neighbor*

Mode Router OSPF Config

5.9.16 area virtual-link authentication

This command configures the authentication type and key for the OSPF virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The value for *type* is either none, simple, or encrypt. The *key* is composed of standard displayable, noncontrol keystrokes from a Standard 101/102-key keyboard. The authentication key must be 8 bytes or less if the authentication type is simple. If the type is encrypt, the key may be up to 16 bytes. Unauthenticated interfaces do not need an authentication key. If the type is encrypt, a key id in the range of 0 and 255 must be specified. The default value for authentication type is none. Neither the default password key nor the default key id are configured.

Default none

Format area *areaid* virtual-link *neighbor* authentication {none | {simple *key*} | {encrypt *key* *keyid*}}

Mode Router OSPF Config

5.9.16.1 no area virtual-link authentication

This command configures the default authentication type for the OSPF virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format no area *areaid* virtual-link *neighbor* authentication

Mode Router OSPF Config

5.9.17 area virtual-link dead-interval (OSPF)

This command configures the dead interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for seconds is 1 to 65535.

Default 40

Format area *areaid* virtual-link *neighbor* dead-interval *seconds*

Mode Router OSPF Config

5.9.17.1 no area virtual-link dead-interval

This command configures the default dead interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format no area *areaid* virtual-link *neighbor* dead-interval

Mode Router OSPF Config

5.9.18 area virtual-link hello-interval (OSPF)

This command configures the hello interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 1 to 65535.

Default 10

Format area *areaid* virtual-link *neighbor* hello-interval 1-65535

Mode Router OSPF Config

5.9.18.1 no area virtual-link hello-interval

This command configures the default hello interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format no area *areaid* virtual-link *neighbor* hello-interval

Mode Router OSPF Config

5.9.19 area virtual-link retransmit-interval (OSPF)

This command configures the retransmit interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for seconds is 0 to 3600.

Default 5

Format area *areaid* virtual-link *neighbor* retransmit-interval *seconds*

Mode Router OSPF Config

5.9.19.1 no area virtual-link retransmit-interval

This command configures the default retransmit interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format no area *areaid* virtual-link *neighbor* retransmit-interval

Mode Router OSPF Config

5.9.20 area virtual-link transmit-delay (OSPF)

This command configures the transmit delay for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for seconds is 0 to 3600 (1 hour).

Default 1

Format area *areaid* virtual-link *neighbor* transmit-delay *seconds*

Mode Router OSPF Config

5.9.20.1 no area virtual-link transmit-delay

This command resets the default transmit delay for the OSPF virtual interface to the default value.

Format no area *areaid* virtual-link *neighbor* transmit-delay

Mode Router OSPF Config

5.9.21 auto-cost (OSPF)

By default, OSPF computes the link cost of each interface from the interface bandwidth. Faster links have lower metrics, making them more attractive in route selection. The configuration parameters in the auto-cost reference bandwidth and bandwidth commands give you control over the default link cost. You can configure for OSPF an interface bandwidth that is independent of the actual link speed. A second configuration parameter allows you to control the ratio of interface bandwidth to link cost. The link cost is computed as the ratio of a reference bandwidth to the interface bandwidth ($\text{ref\_bw} / \text{interface bandwidth}$), where interface bandwidth is defined by the bandwidth command. Because the default reference bandwidth is 100 Mbps, OSPF uses the same default link cost for all interfaces whose bandwidth is 100 Mbps or greater. Use the auto-cost command to change the reference bandwidth, specifying the reference bandwidth in megabits per second (Mbps). The reference bandwidth range is 1-4294967 Mbps.

Default 100 Mbps
Format auto-cost reference-bandwidth 1-4294967
Mode Router OSPF Config

5.9.21.1 no auto-cost reference-bandwidth (OSPF)

Use this command to set the reference bandwidth to the default value.

Format no auto-cost reference-bandwidth
Mode Router OSPF Config

5.9.22 capability opaque

Use this command to enable Opaque Capability on the Router. The information contained in Opaque LSAs may be used directly by OSPF or indirectly by an application wishing to distribute information throughout the OSPF domain. FASTPATH supports the storing and flooding of Opaque LSAs of different scopes. The default value of `enabled` means that OSPF will forward opaque LSAs by default. If you want to upgrade from a previous release, where the default was disabled, opaque LSA forwarding will be enabled. If you want to disable opaque LSA forwarding, then you should enter the command `no capability opaque` in OSPF router configuration mode after the software upgrade.

Default enabled
Format capability opaque
Mode Router Config

5.9.22.1 no capability opaque

Use this command to disable opaque capability on the router.

Format no capability opaque
Mode Router Config

5.9.23 clear ip ospf

Use this command to disable and re-enable OSPF for the specified virtual router. If no virtual router is specified, the default router is disabled and re-enabled.

Format clear ip ospf [vrf vrf-name]
Mode Privileged EXEC

5.9.24 clear ip ospf configuration

Use this command to reset the OSPF configuration to factory defaults for the specified virtual router. If no virtual router is specified, the default router is cleared.

Format clear ip ospf configuration [vrf *vrf-name*]

Mode Privileged EXEC

5.9.25 clear ip ospf counters

Use this command to reset global and interface statistics for the specified virtual router. If no virtual router is specified, the global and interface statistics are reset for the default router.

Format clear ip ospf counters

Mode Privileged EXEC

5.9.26 clear ip ospf neighbor

Use this command to drop the adjacency with all OSPF neighbors for the specified virtual router. On each neighbor's interface, send a one-way hello. Adjacencies may then be re-established. If no router is specified, adjacency with all OSPF neighbors is dropped for the default router. To drop all adjacencies with a specific router ID, specify the neighbor's Router ID using the optional parameter [*neighbor-id*].

Format clear ip ospf neighbor [vrf *vrf-name*] [*neighbor-id*]

Mode Privileged EXEC

5.9.27 clear ip ospf neighbor interface

To drop adjacency with all neighbors on a specific interface, use the optional parameter [*slot/port*]. To drop adjacency with a specific router ID on a specific interface, use the optional parameter [*neighbor-id*].

Format clear ip ospf neighbor interface [*slot/port*] [*neighbor-id*]

Mode Privileged EXEC

5.9.28 clear ip ospf redistribution

Use this command to flush all self-originated external LSAs for the specified virtual router. If no router is specified, the command is executed for the default router. Reapply the redistribution configuration and reoriginate prefixes as necessary.

Format clear ip ospf redistribution [vrf *vrf-name*]

Mode Privileged EXEC

5.9.29 default-information originate (OSPF)

This command is used to control the advertisement of default routes.

Default	- metric—unspecified - type—2
Format	default-information originate [always] [metric 0-16777214] [metric-type {1 2}]
Mode	Router OSPF Config

5.9.29.1 no default-information originate (OSPF)

This command is used to control the advertisement of default routes.

Format	no default-information originate [<i>metric</i>] [<i>metric-type</i>]
Mode	Router OSPF Config

5.9.30 default-metric (OSPF)

This command is used to set a default for the metric of distributed routes.

Format	default-metric 1-16777214
Mode	Router OSPF Config

5.9.30.1 no default-metric (OSPF)

This command is used to set a default for the metric of distributed routes.

Format	no default-metric
Mode	Router OSPF Config

5.9.31 distance ospf (OSPF)

This command sets the route preference value of OSPF in the router. Lower route preference values are preferred when determining the best route. The type of OSPF route can be *intra*, *inter*, or *external*. All the external type routes are given the same preference value. The range of *preference* value is 1 to 255.

Default	110
Format	distance ospf {intra-area 1-255 inter-area 1-255 external 1-255}
Mode	Router OSPF Config

5.9.31.1 no distance ospf

This command sets the default route preference value of OSPF routes in the router. The type of OSPF can be *intra*, *inter*, or *external*. All the external type routes are given the same preference value.

Format	no distance ospf { <i>intra-area</i> <i>inter-area</i> <i>external</i> }
Mode	Router OSPF Config

5.9.32 distribute-list out (OSPF)

Use this command to specify the access list to filter routes received from the source protocol.

Format distribute-list 1-199 out {rip | static | connected}

Mode Router OSPF Config

5.9.32.1 no distribute-list out

Use this command to specify the access list to filter routes received from the source protocol.

Format no distribute-list 1-199 out {rip | static | connected}

Mode Router OSPF Config

5.9.33 exit-overflow-interval (OSPF)

This command configures the exit overflow interval for OSPF. It describes the number of seconds after entering overflow state that a router will wait before attempting to leave the overflow state. This allows the router to again originate nondefault AS-external-LSAs. When set to 0, the router will not leave overflow state until restarted. The range for seconds is 0 to 2147483647 seconds.

Default 0

Format exit-overflow-interval *seconds*

Mode Router OSPF Config

5.9.33.1 no exit-overflow-interval

This command configures the default exit overflow interval for OSPF.

Format no exit-overflow-interval

Mode Router OSPF Config

5.9.34 external-lsdb-limit (OSPF)

This command configures the external LSDB limit for OSPF. If the value is -1, then there is no limit. When the number of nondefault AS-external-LSAs in a router's link-state database reaches the external LSDB limit, the router enters overflow state. The router never holds more than the external LSDB limit nondefault AS-external-LSAs in its database. The external LSDB limit MUST be set identically in all routers attached to the OSPF backbone and/or any regular OSPF area. The range for limit is -1 to 2147483647.

Default -1

Format external-lsdb-limit *limit*

Mode Router OSPF Config

5.9.34.1 no external-lsdb-limit

This command configures the default external LSDB limit for OSPF.

Format no external-lsdb-limit

Mode Router OSPF Config

5.9.35 log-adjacency-changes

To enable logging of OSPFv2 neighbor state changes, use the log-adjacency-changes command in router configuration mode. State changes are logged with INFORMATIONAL severity.

Default	Adjacency state changes are logged, but without the detail option.
Format	log-adjacency-changes [detail]
Mode	OSPFv2 Router Configuration

Parameter	Description
detail	(Optional) When this keyword is specified, all adjacency state changes are logged. Otherwise, OSPF only logs transitions to FULL state and when a backwards transition occurs.

5.9.35.1 no log-adjacency-changes

Use the no form of the command to disable state change logging.

Format	no log-adjacency-changes [detail]
Mode	OSPFv2 Router Configuration

5.9.36 prefix-suppression (Router OSPF Config)

This command suppresses the advertisement of all the IPv4 prefixes except for prefixes that are associated with secondary IPv4 addresses, loopbacks, and passive interfaces from the OSPFv2 router advertisements.

To suppress a loopback or passive interface, use the `ip ospf prefix-suppression` command in interface configuration mode. Prefixes associated with secondary IPv4 addresses can never be suppressed.

Default	Prefix suppression is disabled.
Format	prefix-suppression
Mode	Router OSPF Config

5.9.36.1 no prefix-suppression

This command disables prefix-suppression. No prefixes are suppressed from getting advertised.

Format	no prefix-suppression
Mode	Router OSPF Config

5.9.37 prefix-suppression (Router OSPFv3 Config)

This command suppresses the advertisement of all the IPv6 prefixes except for prefixes that are associated with secondary IPv6 addresses, loopbacks, and passive interfaces from the OSPFv3 router advertisements.

To suppress a loopback or passive interface, use the `ipv ospf prefix-suppression` command in interface configuration mode. Prefixes associated with secondary IPv6 addresses can never be suppressed.

Default	Prefix suppression is disabled.
Format	prefix-suppression
Mode	Router OSPFv3 Config

5.9.37.1 no prefix-suppression

This command disables prefix-suppression. No prefixes are suppressed from getting advertised.

Format no prefix-suppression

Mode Router OSPFv3 Config

5.9.38 router-id (OSPF)

This command sets a 4-digit dotted-decimal number uniquely identifying the router ospf id. The *ipaddress* is a configured value.

Format router-id *ipaddress*

Mode Router OSPF Config

5.9.39 redistribute (OSPF)

This command configures OSPF protocol to allow redistribution of routes from the specified source protocol/routers.

Default

- metric—unspecified
- type—2
- tag—0

Format redistribute {rip | static | connected} [metric 0-16777214] [metric-type {1 | 2}] [tag 0-4294967295] [subnets]

Mode Router OSPF Config

5.9.39.1 no redistribute

This command configures OSPF protocol to prohibit redistribution of routes from the specified source protocol/routers.

Format no redistribute {rip | static | connected} [metric] [metric-type] [tag] [subnets]

Mode Router OSPF Config

5.9.40 maximum-paths (OSPF)

This command sets the number of paths that OSPF can report for a given destination where *maxpaths* is platform dependent.

Default 4

Format maximum-paths *maxpaths*

Mode Router OSPF Config

5.9.40.1 no maximum-paths

This command resets the number of paths that OSPF can report for a given destination back to its default value.

Format no maximum-paths

Mode Router OSPF Config

5.9.41 passive-interface default (OSPF)

Use this command to enable global passive mode by default for all interfaces. It overrides any interface level passive mode. OSPF will not form adjacencies over a passive interface.

Default disabled

Format passive-interface default

Mode Router OSPF Config

5.9.41.1 no passive-interface default

Use this command to disable the global passive mode by default for all interfaces. Any interface previously configured to be passive reverts to nonpassive mode.

Format no passive-interface default

Mode Router OSPF Config

5.9.42 passive-interface (OSPF)

Use this command to set the interface as passive. It overrides the global passive mode that is currently effective on the interface. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format.

Default disabled

Format passive-interface {*slot/port/vlan 1-4093*}

Mode Router OSPF Config

5.9.42.1 no passive-interface

Use this command to set the interface as nonpassive. It overrides the global passive mode that is currently effective on the interface.

Format no passive-interface {*slot/port/vlan 1-4093*}

Mode Router OSPF Config

5.9.43 timers pacing flood

To adjust the rate at which OSPFv2 sends LS Update packets, use the `timers pacing flood` command in router OSPFv2 global configuration mode. OSPF distributes routing information in Link State Advertisements (LSAs), which are bundled into Link State Update (LS Update) packets. To reduce the likelihood of sending a neighbor more packets than it can buffer, OSPF rate limits the transmission of LS Update packets. By default, OSPF sends up to 30 updates per second on each interface (1/the pacing interval). Use this command to adjust this packet rate.

Default 33 milliseconds

Format timers pacing flood *milliseconds*

Mode OSPFv2 Router Configuration

Parameter	Description
milliseconds	The average time between transmission of LS Update packets. The range is from 5 ms to 100 ms. The default is 33 ms.

5.9.43.1 no timers pacing flood

To revert LSA transmit pacing to the default rate, use the no timers pacing flood command.

Format no timers pacing flood

Mode OSPFv2 Router Configuration

5.9.44 timers pacing lsa-group

To adjust how OSPF groups LSAs for periodic refresh, use the timers pacing lsa-group command in OSPFv2 Router Configuration mode. OSPF refreshes self-originated LSAs approximately once every 30 minutes. When OSPF refreshes LSAs, it considers all self-originated LSAs whose age is from 1800 to 1800 plus the pacing group size. Grouping LSAs for refresh allows OSPF to combine refreshed LSAs into a minimal number of LS Update packets. Minimizing the number of Update packets makes LSA distribution more efficient.

When OSPF originates a new or changed LSA, it selects a random refresh delay for the LSA. When the refresh delay expires, OSPF refreshes the LSA. By selecting a random refresh delay, OSPF avoids refreshing a large number of LSAs at one time, even if a large number of LSAs are originated at one time.

Default 60 seconds

Format timers pacing lsa-group *seconds*

Mode OSPFv2 Router Configuration

Parameter	Description
seconds	Width of the window in which LSAs are refreshed. The range for the pacing group window is from 10 to 1800 seconds.

5.9.45 timers spf

Use this command to configure the SPF delay time and hold time. The valid range for both parameters is 0-65535 seconds.

Default • delay-time—5

• hold-time—10

Format timers spf *delay-time hold-time*

Mode Router OSPF Config

5.9.46 trapflags (OSPF)

Use this command to enable individual OSPF traps, enable a group of trap flags at a time, or enable all the trap flags at a time. The different groups of trapflags, and each group's specific trapflags to enable or disable, are listed in [Table 4](#).

Table 4: Trapflags Groups

Group	Flags
errors	• authentication-failure • bad-packet • config-error • virt-authentication-failure • virt-bad-packet • virt-config-error
lsa	• lsa-maxage • lsa-originate
overflow	• lsdbs-overflow • lsdbs-approaching-overflow
retransmit	• packets • virt-packets
state-change	• if-state-change • neighbor-state-change • virtif-state-change • virtneighbor-state-change

- To enable the individual flag, enter the group name followed by that particular flag.
- To enable all the flags in that group, give the group name followed by **all**.
- To enable all the flags, give the command as **trapflags all**.

Default disabled

Format `trapflags {
all | errors {all | authentication-failure | bad-packet | config-error | virt-authentication-failure | virt-bad-packet | virt-config-error} |
lsa {all | lsa-maxage | lsa-originate} |
overflow {all | lsdbs-overflow | lsdbs-approaching-overflow} |
retransmit {all | packets | virt-packets} |
state-change {all | if-state-change | neighbor-state-change | virtif-state-change | virtneighbor-state-change}
}`

Mode Router OSPF Config

5.9.46.1 no trapflags

Use this command to revert to the default reference bandwidth.

- To disable the individual flag, enter the group name followed by that particular flag.
- To disable all the flags in that group, give the group name followed by **all**.
- To disable all the flags, give the command as **trapflags all**.

Format no trapflags {
 all |
 errors {all | authentication-failure | bad-packet | config-error | virt-
 authentication-failure | virt-bad-packet | virt-config-error} |
 lsa {all | lsa-maxage | lsa-originate} |
 overflow {all | lsdb-overflow | lsdb-approaching-overflow} |
 retransmit {all | packets | virt-packets} |
 state-change {all | if-state-change | neighbor-state-change | virtif-state-
 change | virtneighbor-state-change}
 }
Mode Router OSPF Config

OSPF Interface Commands

5.9.47 ip ospf area

Use this command to enable OSPFv2 and set the area ID of an interface or range of interfaces. The *area-id* is an IP address formatted as a 4-digit dotted-decimal number or a decimal value in the range of 0-4294967295. This command supersedes the effects of the `network area` command. It can also be used to configure the advertiseability of the secondary addresses on this interface into the OSPFv2 domain.

Default disabled
Format ip ospf area *area-id* [secondaries none]
Mode Interface Config

5.9.47.1 no ip ospf area

Use this command to disable OSPF on an interface.

Format no ip ospf area [secondaries none]
Mode Interface Config

5.9.48 bandwidth

By default, OSPF computes the link cost of an interface as the ratio of the reference bandwidth to the interface bandwidth. Reference bandwidth is specified with the `auto-cost` command. For the purpose of the OSPF link cost calculation, use the `bandwidth` command to specify the interface bandwidth. The bandwidth is specified in kilobits per second. If no bandwidth is configured, the bandwidth defaults to the actual interface bandwidth for port-based routing interfaces and to 10 Mbps for VLAN routing interfaces. This command does not affect the actual speed of an interface. You can use this command to configure a single interface or a range of interfaces.

Default actual interface bandwidth
Format bandwidth *1-10000000*
Mode Interface Config

5.9.48.1 no bandwidth

Use this command to set the interface bandwidth to its default value.

Format no bandwidth
Mode Interface Config

5.9.49 ip ospf authentication

This command sets the OSPF Authentication Type and Key for the specified interface or range of interfaces. The value of *type* is either none, simple or encrypt. The *key* is composed of standard displayable, noncontrol keystrokes from a Standard 101/102-key keyboard. The authentication key must be 8 bytes or less if the authentication type is simple. If the type is encrypt, the key may be up to 16 bytes. If the type is encrypt a *keyid* in the range of 0 and 255 must be specified. Unauthenticated interfaces do not need an authentication key or authentication key ID. There is no default value for this command.

Format ip ospf authentication {none | {simple *key*} | {encrypt *key* *keyid*}}

Mode Interface Config

5.9.49.1 no ip ospf authentication

This command sets the default OSPF Authentication Type for the specified interface.

Format no ip ospf authentication

Mode Interface Config

5.9.50 ip ospf cost

This command configures the cost on an OSPF interface or range of interfaces. The *cost* parameter has a range of 1 to 65535.

Default 10

Format ip ospf cost 1-65535

Mode Interface Config

5.9.50.1 no ip ospf cost

This command configures the default cost on an OSPF interface.

Format no ip ospf cost

Mode Interface Config

5.9.51 ip ospf database-filter all out

Use the **ip ospf database-filter all out** command in Interface Configuration mode to disable OSPFv2 LSA flooding on an interface.

Default Disabled

Format ip ospf database-filter all out

Mode Interface Configuration

5.9.51.1 no ip ospf database-filter all out

Use the **no ip ospf database-filter all out** command in Interface Configuration mode to enable OSPFv2 LSA flooding on an interface.

Default Disabled

Format ip ospf database-filter all out

Mode Interface Configuration

5.9.52 ip ospf dead-interval

This command sets the OSPF dead interval for the specified interface or range of interfaces. The value for *seconds* (range: 1–65535) is a valid positive integer, which represents the length of time in seconds that a router's Hello packets have not been seen before its neighbor routers declare that the router is down. The value for the length of time must be the same for all routers attached to a common network. This value should be some multiple of the Hello Interval (i.e. 4). Valid values range in seconds from 1 to 65535.

Default 40
Format ip ospf dead-interval *seconds*
Mode Interface Config

5.9.52.1 no ip ospf dead-interval

This command sets the default OSPF dead interval for the specified interface.

Format no ip ospf dead-interval
Mode Interface Config

5.9.53 ip ospf hello-interval

This command sets the OSPF hello interval for the specified interface or range of interfaces. The value for seconds is a valid positive integer, which represents the length of time in seconds. The value for the length of time must be the same for all routers attached to a network. Valid values range from 1 to 65535.

Default 10
Format ip ospf hello-interval *seconds*
Mode Interface Config

5.9.53.1 no ip ospf hello-interval

This command sets the default OSPF hello interval for the specified interface.

Format no ip ospf hello-interval
Mode Interface Config

5.9.54 ip ospf network

Use this command to configure OSPF to treat an interface or range of interfaces as a point-to-point rather than broadcast interface. The broadcast option sets the OSPF network type to broadcast. The point-to-point option sets the OSPF network type to point-to-point. OSPF treats interfaces as broadcast interfaces by default. (Loopback interfaces have a special loopback network type, which cannot be changed.) When there are only two routers on the network, OSPF can operate more efficiently by treating the network as a point-to-point network. For point-to-point networks, OSPF does not elect a designated router or generate a network link state advertisement (LSA). Both endpoints of the link must be configured to operate in point-to-point mode.

Default broadcast
Format ip ospf network {broadcast | point-to-point}
Mode Interface Config

5.9.54.1 `no ip ospf network`

Use this command to return the OSPF network type to the default.

Format `no ip ospf network`

Mode Interface Config

5.9.55 `ip ospf prefix-suppression`

This command suppresses the advertisement of the IPv4 prefixes that are associated with an interface, except for those associated with secondary IPv4 addresses. This command takes precedence over the global configuration. If this configuration is not specified, the global prefix-suppression configuration applies.

prefix-suppression can be disabled at the interface level by using the `disable` option. The `disable` option is useful for excluding specific interfaces from performing prefix-suppression when the feature is enabled globally.

Note that the `disable` option `disable` is not equivalent to not configuring the interface specific prefix-suppression. If prefix-suppression is not configured at the interface level, the global prefix-suppression configuration is applicable for the IPv4 prefixes associated with the interface.

Default Prefix-suppression is not configured.

Format `ip ospf prefix-suppression [disable]`

Mode Interface Config

5.9.55.1 `no ip ospf prefix-suppression`

This command removes prefix-suppression configurations at the interface level. When `no ip ospf prefix-suppression` command is used, global prefix-suppression applies to the interface. Not configuring the command is not equal to disabling interface level prefix-suppression.

Format `no ip ospf prefix-suppression`

Mode Interface Config

5.9.56 `ip ospf priority`

This command sets the OSPF priority for the specified router interface or range of interfaces. The priority of the interface is a priority integer from 0 to 255. A value of 0 indicates that the router is not eligible to become the designated router on this network.

Default 1, which is the highest router priority

Format `ip ospf priority 0-255`

Mode Interface Config

5.9.56.1 `no ip ospf priority`

This command sets the default OSPF priority for the specified router interface.

Format `no ip ospf priority`

Mode Interface Config

5.9.57 ip ospf retransmit-interval

This command sets the OSPF retransmit Interval for the specified interface or range of interfaces. The retransmit interval is specified in seconds. The value for *seconds* is the number of seconds between link-state advertisement retransmissions for adjacencies belonging to this router interface. This value is also used when retransmitting database description and link-state request packets. Valid values range from 0 to 3600 (1 hour).

Default 5
Format ip ospf retransmit-interval 0-3600
Mode Interface Config

5.9.57.1 no ip ospf retransmit-interval

This command sets the default OSPF retransmit Interval for the specified interface.

Format no ip ospf retransmit-interval
Mode Interface Config

5.9.58 ip ospf transmit-delay

This command sets the OSPF Transit Delay for the specified interface or range of interfaces. The transmit delay is specified in seconds. In addition, it sets the estimated number of seconds it takes to transmit a link state update packet over this interface. Valid values for *seconds* range from 1 to 3600 (1 hour).

Default 1
Format ip ospf transmit-delay 1-3600
Mode Interface Config

5.9.58.1 no ip ospf transmit-delay

This command sets the default OSPF Transit Delay for the specified interface.

Format no ip ospf transmit-delay
Mode Interface Config

5.9.59 ip ospf mtu-ignore

This command disables OSPF maximum transmission unit (MTU) mismatch detection on an interface or range of interfaces. OSPF Database Description packets specify the size of the largest IP packet that can be sent without fragmentation on the interface. When a router receives a Database Description packet, it examines the MTU advertised by the neighbor. By default, if the MTU is larger than the router can accept, the Database Description packet is rejected and the OSPF adjacency is not established.

Default enabled
Format ip ospf mtu-ignore
Mode Interface Config

5.9.59.1 no ip ospf mtu-ignore

This command enables the OSPF MTU mismatch detection.

Format no ip ospf mtu-ignore

Mode Interface Config

IP Event Dampening Commands

5.9.60 dampening

Use this command to enable IP event dampening on a routing interface.

Format dampening [*half-life period*] [*reuse-threshold suppress-threshold max-suppress-time*
[*restart restart-penalty*]]

Mode Interface Config

Parameter	Description
Half-life period	The number of seconds it takes for the penalty to reduce by half. The configurable range is 1-30 seconds. Default value is 5 seconds.
Reuse Threshold	The value of the penalty at which the dampened interface is restored. The configurable range is 1-20,000. Default value is 1000.
Suppress Threshold	The value of the penalty at which the interface is dampened. The configurable range is 1-20,000. Default value is 2000.
Max Suppress Time	The maximum amount of time (in seconds) an interface can be in suppressed state after it stops flapping. The configurable range is 1-255 seconds. The default value is four times of half-life period. If half-period value is allowed to default, the maximum suppress time defaults to 20 seconds.
Restart Penalty	Penalty applied to the interface after the device reloads. The configurable range is 1-20,000. Default value is 2000.

5.9.60.1 no dampening

This command disables IP event dampening on a routing interface.

Format no dampening

Mode Interface Config

5.9.61 show dampening interface

This command summarizes the number of interfaces configured with dampening and the number of interfaces being suppressed.

Format show dampening interface

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Router)# show dampening interface
2 interfaces are configured with dampening.
1 interface is being suppressed.
```

5.9.62 show interface dampening

This command displays the status and configured parameters of the interfaces configured with dampening.

Format show interface dampening

Mode Privileged EXEC

Parameter	Description
Flaps	The number times the link state of an interface changed from UP to DOWN.
Penalty	Accumulated Penalty.
Supp	Indicates if the interface is suppressed or not.
ReuseTm	Number of seconds until the interface is allowed to come up again.
HalfL	Configured half-life period.
ReuseV	Configured reuse-threshold.
SuppV	Configured suppress threshold.
MaxSTm	Configured maximum suppress time in seconds.
MaxP	Maximum possible penalty.
Restart	Configured restart penalty.
Note: 1. The CLI command "clear counters" on page 189" resets the flap count to zero. 2. The interface CLI command "no shutdown" on page 306" resets the suppressed state to <code>False</code>. 3. Any change in the dampening configuration resets the current penalty, reuse time and suppressed state to their default values, meaning 0, 0, and <code>FALSE</code> respectively.	

Example: The following shows example CLI display output for the command.

```
Router# show interface dampening
```

```
Interface 0/2
```

```
Flaps  Penalty  Supp  ReuseTm  HalfL  ReuseV  SuppV  MaxSTm  MaxP  Restart  16000  0
0      0      FALSE  0      5      1000   2000   20      30      2828   1500
```

```
Interface 0/3
```

```
Flaps  Penalty  Supp  ReuseTm  HalfL  ReuseV  SuppV  MaxSTm  MaxP  Restart  2828  1500
6      1865   TRUE  18      20     1000   2001   30      2828  1500
```

5.9.63 OSPF Graceful Restart Commands

The OSPF protocol can be configured to participate in the checkpointing service, so that these protocols can execute a "graceful restart" when the management unit fails. In a graceful restart, the hardware to continues forwarding IPv4 packets using OSPF routes while a backup switch takes over management unit responsibility

Graceful restart uses the concept of "helpful neighbors". A fully adjacent router enters helper mode when it receives a link state announcement (LSA) from the restarting management unit indicating its intention of performing a graceful restart. In helper mode, a switch continues to advertise to the rest of the network that they have full adjacencies with the restarting router, thereby avoiding announcement of a topology change and and the potential for flooding of LSAs and shortest-path-first (SPF) runs (which determine OSPF routes). Helpful neighbors continue to forward packets through the restarting router. The restarting router relearns the network topology from its helpful neighbors.

Graceful restart can be enabled for either planned or unplanned restarts, or both. A planned restart is initiated by the operator through the management command `initiate failover`. The operator may initiate a failover in order to take the management unit out of service (for example, to address a partial hardware failure), to correct faulty system behavior which cannot be corrected through less severe management actions, or other reasons. An unplanned restart is an unexpected failover caused by a fatal hardware failure of the management unit or a software hang or crash on the management unit.

5.9.64 `nsf`

Use this command to enable the OSPF graceful restart functionality on an interface. To disable graceful restart, use the `no` form of the command.

Default Disabled
Format `nsf [ietf] [planned-only]`
Modes OSPF Router Configuration

Parameter	Description
ietf	This keyword is accepted but not required.
planned-only	This optional keyword indicates that OSPF should only perform a graceful restart when the restart is planned (i.e., when the restart is a result of the <code>initiate failover</code> command).

5.9.64.1 `no nsf`

Use this command to disable graceful restart for all restarts.

5.9.65 `nsf restart-interval`

Use this command to configure the number of seconds that the restarting router asks its neighbors to wait before exiting helper mode. This is referred to as the grace period. The restarting router includes the grace period in its grace LSAs. For planned restarts (using the `initiate failover` command), the grace LSAs are sent prior to restarting the management unit, whereas for unplanned restarts, they are sent after reboot begins.

The grace period must be set long enough to allow the restarting router to reestablish all of its adjacencies and complete a full database exchange with each of those neighbors.

Default 120 seconds
Format `nsf [ietf] restart-interval 1-1800`
Modes OSPF Router Configuration

Parameter	Description
ietf	This keyword is accepted but not required.
seconds	The number of seconds that the restarting router asks its neighbors to wait before exiting helper mode. The range is from 1 to 1800 seconds.

5.9.65.1 `no nsf restart-interval`

Use this command to revert the grace period to its default value.

Format `no [ietf] nsf restart-interval`
Modes OSPF Router Configuration

5.9.66 `nsf helper`

Use this command to enable helpful neighbor functionality for the OSPF protocol. You can enable this functionality for planned or unplanned restarts, or both.

Default OSPF may act as a helpful neighbor for both planned and unplanned restarts
Format `nsf helper [planned-only]`
Modes OSPF Router Configuration

Parameter	Description
planned-only	This optional keyword indicates that OSPF should only help a restarting router performing a planned restart.

5.9.66.1 `no nsf helper`

Use this command to disable helpful neighbor functionality for OSPF.

Format `no nsf helper`
Modes OSPF Router Configuration

5.9.67 `nsf ietf helper disable`

Use this command to disable helpful neighbor functionality for OSPF.

**Note...**

The commands `no nsf helper` and `nsf ietf helper disable` are functionally equivalent. The command `nsf ietf helper disable` is supported solely for compatibility with other network software CLI.

Format `nsf ietf helper disable`
Modes OSPF Router Configuration

5.9.68 `nsf helper strict-lsa-checking`

The restarting router is unable to react to topology changes. In particular, the restarting router will not immediately update its forwarding table; therefore, a topology change may introduce forwarding loops or black holes that persist until the graceful restart completes. By exiting the graceful restart on a topology change, a router tries to eliminate the loops or black holes as quickly as possible by routing around the restarting router. A helpful neighbor considers a link down with the restarting router to be a topology change, regardless of the strict LSA checking configuration.

Use this command to require that an OSPF helpful neighbor exit helper mode whenever a topology change occurs.

Default Enabled.
Format `nsf [ietf] helper strict-lsa-checking`
Modes OSPF Router Configuration

Parameter	Description
ietf	This keyword is accepted but not required.

5.9.68.1 `no nsf [ietf] helper strict-lsa-checking`

Use this command to allow OSPF to continue as a helpful neighbor in spite of topology changes.

Default Enabled.
Format `nsf [ietf] helper strict-lsa-checking`
Modes OSPF Router Configuration

OSPFv2 Stub Router Commands

5.9.69 `max-metric router-lsa`

To configure OSPF to enter stub router mode, use this command in Router OSPF Global Configuration mode. When OSPF is in stub router mode, as defined by RFC 3137, OSPF sets the metric in the nonstub links in its router LSA to LsInfinity. Other routers therefore compute very long paths through the stub router, and prefer any alternate path. Doing so eliminates all transit traffic through the stub router, when alternate routes are available. Stub router mode is useful when adding or removing a router from a network or to avoid transient routes when a router reloads.

You can administratively force OSPF into stub router mode. OSPF remains in stub router mode until you take OSPF out of stub router mode. Alternatively, you can configure OSPF to start in stub router mode for a configurable period of time after the router boots up.

If you set the summary LSA metric to 16,777,215, other routers will skip the summary LSA when they compute routes.

If you have configured the router to enter stub router mode on startup (`max-metric router-lsa on-startup`), and then enter `max-metric router-lsa`, there is no change. If OSPF is administratively in stub router mode (the `max-metric router-lsa` command has been given), and you configure OSPF to enter stub router mode on startup (`max-metric router-lsa on-startup`), OSPF exits stub router mode (assuming the startup period has expired) and the configuration is updated.

Default OSPF is not in stub router mode by default
Format `max-metric router-lsa [on-startup seconds] [summary-lsa {metric}]`
Mode OSPFv2 Router Configuration

Parameter	Description
on-startup	(Optional) OSPF starts in stub router mode after a reboot.
seconds	(Required if on-startup) The number of seconds that OSPF remains in stub router mode after a reboot. The range is 5 to 86,400 seconds. There is no default value.
summary-lsa	(Optional) Set the metric in type 3 and type 4 summary LSAs to LsInfinity (0xFFFFF).
metric	(Optional) Metric to send in summary LSAs when in stub router mode. The range is 1 to 16,777,215. The default is 16,711,680 (0xFF0000).

5.9.69.1 no max-metric router-lsa

Use this command in OSPFv2 Router Configuration mode to disable stub router mode. The command clears either type of stub router mode (always or on-startup) and resets the **summary-lsa** option. If OSPF is configured to enter global configuration mode on startup, and during normal operation you want to immediately place OSPF in stub router mode, issue the command **no max-metric router-lsa on-startup**. The command **no max-metric router-lsa summary-lsa** causes OSPF to send summary LSAs with metrics computed using normal procedures defined in RFC 2328.

Format `no max-metric router-lsa [on-startup] [summary-lsa]`

Mode OSPFv2 Router Configuration

5.9.70 clear ip ospf stub-router

Use the `clear ip ospf stub-router` command in Privileged EXEC mode to force OSPF to exit stub router mode for the specified virtual router when it has automatically entered stub router mode because of a resource limitation. OSPF only exits stub router mode if it entered stub router mode because of a resource limitation or it is in stub router mode at startup. If no virtual router is specified, the command is executed for the default router. This command has no effect if OSPF is configured to be in stub router mode permanently.

Format `clear ip ospf stub-router [vrf vrf-name]`

Mode Privileged EXEC

OSPF Show Commands

5.9.71 show ip ospf

This command displays OSPF global configuration information for the specified virtual router. If no router is specified, it displays information for the default router.

Format `show ip ospf [vrf vrf-name]`

Mode Privileged EXEC

**Note...**

Some of the information below displays only if you enable OSPF and configure certain features.

Term	Definition
Router ID	A 32-bit integer in dotted decimal format identifying the router, about which information is displayed. This is a configured value.
OSPF Admin Mode	Shows whether the administrative mode of OSPF in the router is enabled or disabled. This is a configured value.
RFC 1583 Compatibility	Indicates whether 1583 compatibility is enabled or disabled. This is a configured value.
External LSDB Limit	The maximum number of nondefault AS-external-LSA (link state advertisement) entries that can be stored in the link-state database.
Exit Overflow Interval	The number of seconds that, after entering overflow state, a router will attempt to leave overflow state.

Term	Definition
Spf Delay Time	The number of seconds between two subsequent changes of LSAs, during which time the routing table calculation is delayed.
Spf Hold Time	The number of seconds between two consecutive spf calculations.
Flood Pacing Interval	The average time, in milliseconds, between LS Update packet transmissions on an interface. This is the value configured with the command "timers pacing flood" on page 605".
LSA Refresh Group Pacing Time	The size in seconds of the LSA refresh group window. This is the value configured with the command "timers pacing lsa-group" on page 606".
Opaque Capability	Shows whether the router is capable of sending Opaque LSAs. This is a configured value.
Autocost Ref BW	Shows the value of auto-cost reference bandwidth configured on the router.
Default Passive Setting	Shows whether the interfaces are passive by default.
Maximum Paths	The maximum number of paths that OSPF can report for a given destination.
Default Metric	Default value for redistributed routes.
Stub Router Configuration	When OSPF runs out of resources to store the entire link state database, or any other state information, OSPF goes into stub router mode. As a stub router, OSPF reoriginates its own router LSAs, setting the cost of all nonstub interfaces to infinity. Use this field to set stub router configuration to one of Always, Startup, None .
Stub Router Startup Time	Configured value in seconds. This row is only listed if OSPF is configured to be a stub router at startup.
Summary LSA Metric Override	One of Enabled (met) , Disabled , where <i>met</i> is the metric to be sent in summary LSAs when in stub router mode.
Default Route Advertise	Indicates whether the default routes received from other source protocols are advertised or not.
Always	Shows whether default routes are always advertised.
Metric	The metric of the routes being redistributed. If the metric is not configured, this field is blank.
Metric Type	Shows whether the routes are External Type 1 or External Type 2.
Number of Active Areas	The number of active OSPF areas. An "active" OSPF area is an area with at least one interface up.
ABR Status	Shows whether the router is an OSPF Area Border Router.
ASBR Status	Reflects whether the ASBR mode is enabled or disabled. Enable implies that the router is an autonomous system border router. The router automatically becomes an ASBR when it is configured to redistribute routes learnt from other protocols. The possible values for the ASBR status is enabled (if the router is configured to redistribute routes learned by other protocols) or disabled (if the router is not configured for the same).
Stub Router Status	One of Active, Inactive .
Stub Router Reason	One of Configured, Startup, Resource Limitation . Note: The row is only listed if stub router is active.
Stub Router Startup Time Remaining	The remaining time, in seconds, until OSPF exits stub router mode. This row is only listed if OSPF is in startup stub router mode.
Stub Router Duration	The time elapsed since the router last entered the stub router mode. The row is only listed if stub router is active and the router entered stub mode because of a resource limitation. The duration is displayed in DD:HH:MM:SS format.
External LSDB Overflow	When the number of nondefault external LSAs exceeds the configured limit, External LSDB Limit, OSPF goes into LSDB overflow state. In this state, OSPF withdraws all of its self-originated nondefault external LSAs. After the Exit Overflow Interval, OSPF leaves the overflow state, if the number of external LSAs has been reduced.
External LSA Count	The number of external (LS type 5) link-state advertisements in the link-state database.
External LSA Checksum	The sum of the LS checksums of external link-state advertisements contained in the link-state database.

Term	Definition
AS_OPAQUE LSA Count	Shows the number of AS Opaque LSAs in the link-state database.
AS_OPAQUE LSA Checksum	Shows the sum of the LS Checksums of AS Opaque LSAs contained in the link-state database.
New LSAs Originated	The number of new link-state advertisements that have been originated.
LSAs Received	The number of link-state advertisements received determined to be new instantiations.
LSA Count	The total number of link state advertisements currently in the link state database.
Maximum Number of LSAs	The maximum number of LSAs that OSPF can store.
LSA High Water Mark	The maximum size of the link state database since the system started.
AS Scope LSA Flood List Length	The number of LSAs currently in the global flood queue waiting to be flooded through the OSPF domain. LSAs with AS flooding scope, such as type 5 external LSAs and type 11 Opaque LSAs.
Retransmit List Entries	The total number of LSAs waiting to be acknowledged by all neighbors. An LSA may be pending acknowledgment from more than one neighbor.
Maximum Number of Retransmit Entries	The maximum number of LSAs that can be waiting for acknowledgment at any given time.
Retransmit Entries High Water Mark	The maximum number of LSAs on all neighbors' retransmit lists at any given time.
NSF Support	Indicates whether nonstop forwarding (NSF) is enabled for the OSPF protocol for planned restarts, unplanned restarts or both ("Always").
NSF Restart Interval	The user-configurable grace period during which a neighboring router will be in the helper state after receiving notice that the management unit is performing a graceful restart.
NSF Restart Status	The current graceful restart status of the router. • Not Restarting • Planned Restart • Unplanned Restart
NSF Restart Age	Number of seconds until the graceful restart grace period expires.
NSF Restart Exit Reason	Indicates why the router last exited the last restart: • None— Graceful restart has not been attempted. • In Progress— Restart is in progress. • Completed— The previous graceful restart completed successfully. • Timed Out— The previous graceful restart timed out. • Topology Changed— The previous graceful restart terminated prematurely because of a topology change.
NSF Help Support	Indicates whether helpful neighbor functionality has been enabled for OSPF for planned restarts, unplanned restarts, or both (Always).
NSF help Strict LSA checking	Indicates whether strict LSA checking has been enabled. If enabled, then an OSPF helpful neighbor will exit helper mode whenever a topology change occurs. If disabled, an OSPF neighbor will continue as a helpful neighbor in spite of topology changes.
Prefix-suppression	Displays whether prefix-suppression is enabled or disabled.

Example: The following shows example CLI display output for the command.

```
(alpha3) #show ip ospf
```

```
Router ID..... 3.3.3.3
OSPF Admin Mode..... Enable
RFC 1583 Compatibility..... Enable
External LSDB Limit..... No Limit
Exit Overflow Interval..... 0
Spf Delay Time..... 5
Spf Hold Time..... 10
Flood Pacing Interval..... 33 ms
LSA Refresh Group Pacing Time..... 60 sec
Opaque Capability..... Enable
AutoCost Ref BW..... 100 Mbps
Default Passive Setting..... Disabled
Maximum Paths..... 4
Default Metric..... Not configured
Stub Router Configuration..... <val>
Stub Router Startup Time..... <val> seconds
Summary LSA Metric Override..... Enabled (<met>)

Default Route Advertise..... Disabled
Always..... FALSE
Metric..... Not configured
Metric Type..... External Type 2

Number of Active Areas..... 1 (1 normal, 0 stub, 0 nssa)
ABR Status..... Disable
ASBR Status..... Disable
Stub Router..... FALSE
Stub Router Status..... Inactive
Stub Router Reason..... <reason>
Stub Router Startup Time Remaining..... <duration> seconds
Stub Router Duration..... <duration>
External LSDB Overflow..... FALSE
External LSA Count..... 0
External LSA Checksum..... 0
AS_OPAQUE LSA Count..... 0
AS_OPAQUE LSA Checksum..... 0
New LSAs Originated..... 55
LSAs Received..... 82
LSA Count..... 1
Maximum Number of LSAs..... 24200
LSA High Water Mark..... 9
AS Scope LSA Flood List Length..... 0
Retransmit List Entries..... 0
Maximum Number of Retransmit Entries..... 96800
Retransmit Entries High Water Mark..... 1
NSF Helper Support..... Always
NSF Helper Strict LSA Checking..... Enabled
Prefix-suppression..... Disabled
```

```
5.9.72      show ip ospf abr
```

This command displays the internal OSPF routing table entries to Area Border Routers (ABR) for the specified virtual router. If no router is specified, it displays information for the default router.

Format `show ip ospf abr [vrf vrf-name]`

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Type	The type of the route to the destination. It can be either: • intra — Intra-area route • inter — Inter-area route
Router ID	Router ID of the destination.
Cost	Cost of using this route.
Area ID	The area ID of the area from which this route is learned.
Next Hop	Next hop toward the destination.
Next Hop Intf	The outgoing router interface to use when forwarding traffic to the next hop.

5.9.73 `show ip ospf area`

This command displays information about the area for the specified virtual router. If no router is specified, it displays information for the default router. The *areaid* identifies the OSPF area that is being displayed.

Format `show ip ospf area areaid [vrf vrf-name]`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
AreaID	The area id of the requested OSPF area.
External Routing	A number representing the external routing capabilities for this area.
Spf Runs	The number of times that the intra-area route table has been calculated using this area's link-state database.
Area Border Router Count	The total number of area border routers reachable within this area.
Area LSA Count	Total number of link-state advertisements in this area's link-state database, excluding AS External LSA's.
Area LSA Checksum	A number representing the Area LSA Checksum for the specified AreaID excluding the external (LS type 5) link-state advertisements.
Flood List Length	The number of LSAs waiting to be flooded within the area.
Import Summary LSAs	Shows whether to import summary LSAs.
OSPF Stub Metric Value	The metric value of the stub area. This field displays only if the area is configured as a stub area.

The following OSPF NSSA specific information displays only if the area is configured as an NSSA:

Term	Definition
Import Summary LSAs	Shows whether to import summary LSAs into the NSSA.
Redistribute into NSSA	Shows whether to redistribute information into the NSSA.

Term	Definition
Default Information Originate	Shows whether to advertise a default route into the NSSA.
Default Metric	The metric value for the default route advertised into the NSSA.
Default Metric Type	The metric type for the default route advertised into the NSSA.
Translator Role	The NSSA translator role of the ABR, which is always or candidate.
Translator Stability Interval	The amount of time that an elected translator continues to perform its duties after it determines that its translator status has been deposed by another router.
Translator State	Shows whether the ABR translator state is disabled, always, or elected.

Example: The following shows example CLI display output for the command.

(R1) #show ip ospf area 1

```

AreaID..... 0.0.0.1
External Routing..... Import External LSAs
Spf Runs..... 10
Area Border Router Count..... 0
Area LSA Count..... 3004
Area LSA Checksum..... 0x5e0abed
Flood List Length..... 0
Import Summary LSAs..... Enable

```

5.9.74 show ip ospf asbr

This command displays the internal OSPF routing table entries to Autonomous System Boundary Routers (ASBR) for the specified virtual router. If no router is specified, it displays information for the default router.

Format show ip ospf asbr [vrf vrf-name]

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Type	The type of the route to the destination. It can be one of the following values: intra — Intra-area route inter — Inter-area route
Router ID	Router ID of the destination.
Cost	Cost of using this route.
Area ID	The area ID of the area from which this route is learned.
Next Hop	Next hop toward the destination.
Next Hop Intf	The outgoing router interface to use when forwarding traffic to the next hop.

5.9.75 show ip ospf database

This command displays information about the link state database when OSPF is enabled for the specified virtual router. If no router is specified, it displays information for the default router. If you do not enter any parameters, the command displays the LSA headers for all areas. Use the optional *areaid* parameter to display database information about a specific area. Use the optional parameters to specify the type of link state advertisements to display.

Parameter	Description
vrf-name	Specifies the virtual router for which to display information.
asbr-summary	Use <i>asbr-summary</i> to show the autonomous system boundary router (ASBR) summary LSAs.
external	Use <i>external</i> to display the external LSAs.
network	Use <i>network</i> to display the network LSAs.
nssa-external	Use <i>nssa-external</i> to display NSSA external LSAs.
opaque-area	Use <i>opaque-area</i> to display area opaque LSAs.
opaque-as	Use <i>opaque-as</i> to display AS opaque LSAs.
opaque-link	Use <i>opaque-link</i> to display link opaque LSAs.
router	Use <i>router</i> to display router LSAs.
summary	Use <i>summary</i> to show the LSA database summary information.
lsid	Use <i>lsid</i> to specify the link state ID (LSID). The value of <i>lsid</i> can be an IP address or an integer in the range of 0-4294967295.
adv-router	Use <i>adv-router</i> to show the LSAs that are restricted by the advertising router.
self-originate	Use <i>self-originate</i> to display the LSAs in that are self originated. The information below is only displayed if OSPF is enabled

The information below is only displayed if OSPF is enabled.

Format `show ip ospf [areaid] database [vrf vrf-name] [{database-summary | [{asbr-summary | external | network | nssa-external | opaque-area | opaque-as | opaque-link | router | summary}] [lsid] [{adv-router [ipaddr] | self-originate}]}]`

Mode

- Privileged EXEC
- User EXEC

For each link-type and area, the following information is displayed:

Term	Definition
Link Id	A number that uniquely identifies an LSA that a router originates from all other self originated LSAs of the same LS type.
Adv Router	The Advertising Router. Is a 32-bit dotted decimal number representing the LSDB interface.
Age	A number representing the age of the link state advertisement in seconds.
Sequence	A number that represents which LSA is more recent.
Checksum	The total number LSA checksum.
Options	This is an integer. It indicates that the LSA receives special handling during routing calculations.
Rtr Opt	Router Options are valid for router links only.

5.9.76 `show ip ospf database database-summary`

Use this command to display the number of each type of LSA in the database for each area and for the router. The command also displays the total number of LSAs in the database.

Format `show ip ospf database database-summary`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Router	Total number of router LSAs in the OSPF link state database.
Network	Total number of network LSAs in the OSPF link state database.
Summary Net	Total number of summary network LSAs in the database.
Summary ASBR	Number of summary ASBR LSAs in the database.
Type-7 Ext	Total number of Type-7 external LSAs in the database.
Self-Originated Type-7	Total number of self originated AS external LSAs in the OSPF link state database.
Opaque Link	Number of opaque link LSAs in the database.
Opaque Area	Number of opaque area LSAs in the database.
Subtotal	Number of entries for the identified area.
Opaque AS	Number of opaque AS LSAs in the database.
Total	Number of entries for all areas.

5.9.77 show ip ospf interface

This command displays the information for the IFO object or virtual interface tables. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format.

Format `show ip ospf interface {slot/port/vlan 1-4093| loopback loopback-id}`

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
IP Address	The IP address for the specified interface.
Subnet Mask	A mask of the network and host portion of the IP address for the OSPF interface.
Secondary IP Address(es)	The secondary IP addresses if any are configured on the interface.
OSPF Admin Mode	States whether OSPF is enabled or disabled on a router interface.
OSPF Area ID	The OSPF Area ID for the specified interface.
OSPF Network Type	The type of network on this interface that the OSPF is running on.
Router Priority	A number representing the OSPF Priority for the specified interface.
Retransmit Interval	A number representing the OSPF Retransmit Interval for the specified interface.
Hello Interval	A number representing the OSPF Hello Interval for the specified interface.
Dead Interval	A number representing the OSPF Dead Interval for the specified interface.
LSA Ack Interval	A number representing the OSPF LSA Acknowledgment Interval for the specified interface.
Transmit Delay	A number representing the OSPF Transmit Delay Interval for the specified interface.
Authentication Type	The OSPF Authentication Type for the specified interface are: none, simple, and encrypt.
Metric Cost	The cost of the OSPF interface.
Passive Status	Shows whether the interface is passive or not.
OSPF MTU-ignore	Indicates whether to ignore MTU mismatches in database descriptor packets sent from neighboring routers.
Flood Blocking	Indicates whether flood blocking is enabled on the interface.

The information below will only be displayed if OSPF is enabled.

Term	Definition
OSPF Interface Type	Broadcast LANs, such as Ethernet and IEEE 802.5, take the value <i>broadcast</i> . The OSPF Interface Type will be 'broadcast'.
State	The OSPF Interface States are: down, loopback, waiting, point-to-point, designated router, and backup designated router.
Designated Router	The router ID representing the designated router.
Backup Designated Router	The router ID representing the backup designated router.
Number of Link Events	The number of link events.
Local Link LSAs	The number of Link Local Opaque LSAs in the link-state database.
Local Link LSA Checksum	The sum of LS Checksums of Link Local Opaque LSAs in the link-state database.
Prefix-suppression	Displays whether prefix-suppression is enabled, disabled, or unconfigured on the given interface.

Example: The following shows example CLI display output for the command when the OSPF Admin Mode is disabled.
(FASTPATH Routing) >show ip ospf interface 0/1

```

IP Address..... 0.0.0.0
Subnet Mask..... 0.0.0.0
Secondary IP Address(es).....
OSPF Admin Mode..... Disable
OSPF Area ID..... 0.0.0.0
OSPF Network Type..... Broadcast
Router Priority..... 1
Retransmit Interval..... 5
Hello Interval..... 10
Dead Interval..... 40
LSA Ack Interval..... 1
Transmit Delay..... 1
Authentication Type..... None
Metric Cost..... 1 (computed)
Passive Status..... Non-passive interface
OSPF Mtu-ignore..... Disable
Flood Blocking..... Disable

```

OSPF is not enabled on this interface.

(FASTPATH Routing) #

5.9.78 show ip ospf interface brief

This command displays brief information for the IFO object or virtual interface tables for the specified virtual router. If no router is specified, it displays information for the default router.

Format show ip ospf interface brief [vrf vrf-name]

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Interface	<i>slot/port</i>
OSPF Admin Mode	States whether OSPF is enabled or disabled on a router interface.
OSPF Area ID	The OSPF Area Id for the specified interface.

Term	Definition
Router Priority	A number representing the OSPF Priority for the specified interface.
Cost	The metric cost of the OSPF interface.
Hello Interval	A number representing the OSPF Hello Interval for the specified interface.
Dead Interval	A number representing the OSPF Dead Interval for the specified interface.
Retransmit Interval	A number representing the OSPF Retransmit Interval for the specified interface.
Interface Transmit Delay	A number representing the OSPF Transmit Delay for the specified interface.
LSA Ack Interval	A number representing the OSPF LSA Acknowledgment Interval for the specified interface.

5.9.79 show ip ospf interface stats

This command displays the statistics for a specific interface. The information below will only be displayed if OSPF is enabled. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword `vlan` is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format.

Format show ip ospf interface stats {slot/port/vlan 1-4093}

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
OSPF Area ID	The area id of this OSPF interface.
Area Border Router Count	The total number of area border routers reachable within this area. This is initially zero, and is calculated in each SPF pass.
AS Border Router Count	The total number of Autonomous System border routers reachable within this area.
Area LSA Count	The total number of link-state advertisements in this area's link-state database, excluding AS External LSAs.
IP Address	The IP address associated with this OSPF interface.
OSPF Interface Events	The number of times the specified OSPF interface has changed its state, or an error has occurred.
Virtual Events	The number of state changes or errors that occurred on this virtual link.
Neighbor Events	The number of times this neighbor relationship has changed state, or an error has occurred.
Sent Packets	The number of OSPF packets transmitted on the interface.
Received Packets	The number of valid OSPF packets received on the interface.
Discards	The number of received OSPF packets discarded because of an error in the packet or an error in processing the packet.
Bad Version	The number of received OSPF packets whose version field in the OSPF header does not match the version of the OSPF process handling the packet.
Source Not On Local Subnet	The number of received packets discarded because the source IP address is not within a subnet configured on a local interface. Note: This field applies only to OSPFv2.
Virtual Link Not Found	The number of received OSPF packets discarded where the ingress interface is in a nonbackbone area and the OSPF header identifies the packet as belonging to the backbone, but OSPF does not have a virtual link to the packet's sender.
Area Mismatch	The number of OSPF packets discarded because the area ID in the OSPF header is not the area ID configured on the ingress interface.

Term	Definition
Invalid Destination Address	The number of OSPF packets discarded because the packet's destination IP address is not the address of the ingress interface and is not the AllDrRouters or AllSpfRouters multicast addresses.
Wrong Authentication Type	The number of packets discarded because the authentication type specified in the OSPF header does not match the authentication type configured on the ingress interface. Note: This field applies only to OSPFv2.
Authentication Failure	The number of OSPF packets dropped because the sender is not an existing neighbor or the sender's IP address does not match the previously recorded IP address for that neighbor. Note: This field applies only to OSPFv2.
No Neighbor at Source Address	The number of OSPF packets dropped because the sender is not an existing neighbor or the sender's IP address does not match the previously recorded IP address for that neighbor. Note: Does not apply to Hellos.
Invalid OSPF Packet Type	The number of OSPF packets discarded because the packet type field in the OSPF header is not a known type.
Hellos Ignored	The number of received Hello packets that were ignored by this router from the new neighbors after the limit has been reached for the number of neighbors on an interface or on the system as a whole.

Table 5 lists the number of OSPF packets of each type sent and received on the interface.

Table 5: Type of OSPF Packets Sent and Received on the Interface

Packet Type	Sent	Received
Hello	6960	6960
Database Description	3	3
LS Request	1	1
LS Update	141	42
LS Acknowledgment	40	135

5.9.80 show ip ospf lsa-group

This command displays the number of self-originated LSAs within each LSA group for the specified virtual router. If no router is specified, it displays information for the default router.

Format show ip ospf lsa-group [vrf vrf-name]

- Modes**
- Privileged EXEC
 - User EXEC

Field	Description
Total self-originated LSAs	The number of LSAs the router is currently originating.
Average LSAs per group	The number of self-originated LSAs divided by the number of LSA groups. The number of LSA groups is the refresh interval (1800 seconds) divided by the pacing interval (configured with timers pacing lsa-group) plus two.
Pacing group limit	The maximum number of self-originated LSAs in one LSA group. If the number of LSAs in a group exceeds this limit, OSPF redistributes LSAs throughout the refresh interval to achieve better balance.
Groups	For each LSA pacing group, the output shows the range of LSA ages in the group and the number of LSAs in the group.

5.9.81 show ip ospf neighbor

This command displays information about OSPF neighbors for the specified virtual router. If no router is specified, it displays information for the default router. If you do not specify a neighbor IP address, the output displays summary information in a table. If you specify an interface or tunnel, only the information for that interface or tunnel displays, if the interface is a physical routing interface and vlan format if the interface is a routing vlan. The *ip-address* is the IP address of the neighbor, and when you specify this, detailed information about the neighbor displays. The information below only displays if OSPF is enabled and the interface has a neighbor.

Format show ip ospf neighbor [*vrf vrf-name*][*interface {slot/port|vlan 1-4093}*] [*ip-address*]
Modes

- Privileged EXEC
- User EXEC

If you do not specify an IP address, a table with the following columns displays for all neighbors or the neighbor associated with the interface that you specify:

Term	Definition
Router ID	The 4-digit dotted-decimal number of the neighbor router.
Priority	The OSPF priority for the specified interface. The priority of an interface is a priority integer from 0 to 255. A value of '0' indicates that the router is not eligible to become the designated router on this network.
IP Address	The IP address of the neighbor.
Interface	The interface of the local router in <i>slot/port</i> format.
State	The state of the neighboring routers. Possible values are: • Down—Initial state of the neighbor conversation; no recent information has been received from the neighbor. • Attempt—No recent information has been received from the neighbor but a more concerted effort should be made to contact the neighbor. • Init—An Hello packet has recently been seen from the neighbor, but bidirectional communication has not yet been established. • 2 way—Communication between the two routers is bidirectional. • Exchange start—The first step in creating an adjacency between the two neighboring routers, the goal is to decide which router is the master and to decide upon the initial DD sequence number. • Exchange—The router is describing its entire link state database by sending Database Description packets to the neighbor. • Loading—Link State Request packets are sent to the neighbor asking for the more recent LSAs that have been discovered (but not yet received) in the Exchange state. • Full—The neighboring routers are fully adjacent and they will now appear in router-LSAs and network-LSAs.
Dead Time	The amount of time, in seconds, to wait before the router assumes the neighbor is unreachable.

If you specify an IP address for the neighbor router, the following fields display:

Term	Definition
Interface	<i>slot/port</i>
Neighbor IP Address	The IP address of the neighbor router.
Interface Index	The interface ID of the neighbor router.

Term	Definition
Area ID	The area ID of the OSPF area associated with the interface.
Options	An integer value that indicates the optional OSPF capabilities supported by the neighbor. The neighbor's optional OSPF capabilities are also listed in its Hello packets. This enables received Hello Packets to be rejected (i.e., neighbor relationships will not even start to form) if there is a mismatch in certain crucial OSPF capabilities.
Router Priority	The OSPF priority for the specified interface. The priority of an interface is a priority integer from 0 to 255. A value of '0' indicates that the router is not eligible to become the designated router on this network.
Dead Timer Due	The amount of time, in seconds, to wait before the router assumes the neighbor is unreachable.
Up Time	Neighbor uptime; how long since the adjacency last reached the Full state.
State	The state of the neighboring routers.
Events	The number of times this neighbor relationship has changed state, or an error has occurred.
Retransmitted LSAs	The number of LSAs retransmitted to this neighbor.
Retransmission Queue Length	An integer representing the current length of the retransmission queue of the specified neighbor router Id of the specified interface.
Restart Helper Status	Indicates the status of this router as a helper during a graceful restart of the router specified in the command line: • Helping—This router is acting as a helpful neighbor to this neighbor. A helpful neighbor does not report an adjacency change during graceful restart, but continues to advertise the restarting router as a FULL adjacency. A helpful neighbor continues to forward data packets to the restarting router, trusting that the restarting router's forwarding table is maintained during the restart. • Not Helping—This router is not a helpful neighbor at this time.
Restart Reason	When this router is in helpful neighbor mode, this indicates the reason for the restart as provided by the restarting router: • Unknown (0) • Software restart (1) • Software reload/upgrade (2) • Switch to redundant control processor (3) • Unrecognized - a value not defined in RFC 3623 When FASTPATH sends a grace LSA, it sets the Restart Reason to Software Restart on a planned warm restart (when the <code>initiate failover</code> command is invoked), and to Unknown on an unplanned warm restart.
Remaining Grace Time	The number of seconds remaining the in current graceful restart interval. This is displayed only when this router is currently acting as a helpful neighbor for the router specified in the command.
Restart Helper Exit Reason	Indicates the reason that the specified router last exited a graceful restart. • None—Graceful restart has not been attempted • In Progress—Restart is in progress • Completed—The previous graceful restart completed successfully • Timed Out—The previous graceful restart timed out • Topology Changed—The previous graceful restart terminated prematurely because of a topology change

Example: The following shows example CLI display output for the command.

(alpha1) #show ip ospf neighbor 170.1.1.50

```
Interface.....0/17
Neighbor IP Address.....170.1.1.50
Interface Index.....17
Area Id.....0.0.0.2
Options.....0x2
Router Priority.....1
Dead timer due in (secs).....15
Up Time.....0 days 2 hrs 8 mins 46 secs
State.....Full/BACKUP-DR
Events.....4
Retransmitted LSAs.....32
Retransmission Queue Length.....0
Restart Helper Status..... Helping
Restart Reason..... Software Restart (1)
Remaining Grace Time..... 10 sec
Restart Helper Exit Reason..... In Progress
```

5.9.82 show ip ospf range

This command displays the set of OSPFv2 area ranges configured for a given area for the specified virtual router. If no router is specified, it displays information for the default router. .

Format show ip ospf range *areaid* [*vrf vrf-name*]

Modes Privileged EXEC

Term	Definition
Prefix	The summary prefix.
Subnet Mask	The subnetwork mask of the summary prefix.
Type	S (Summary Link) or E (External Link)
Action	Advertise or Suppress
Cost	Metric to be advertised when the range is active. If a static cost is not configured, the field displays Auto . If the action is Suppress , the field displays N/A .
Active	Whether the range is currently active. Y or N .

Example: The following shows example CLI display output for the command.

(R1) #show ip ospf range 0

Prefix	Subnet Mask	Type	Action	Cost	Active
10.1.0.0	255.255.0.0	S	Advertise	Auto	N
172.20.0.0	255.255.0.0	S	Advertise	500	Y

5.9.83 show ip ospf statistics

This command displays information about recent Shortest Path First (SPF) calculations for the specified virtual router. If no router is specified, it displays information for the default router. The SPF is the OSPF routing table calculation. The output lists the number of times the SPF has run for each OSPF area. A table follows this information. For each of the 15 most recent SPF runs, the command shows statistics for how long ago the SPF ran, how long the SPF took, the reasons why the SPF was scheduled, the individual components of the routing table calculation time and to show the RIB update time. The most recent statistics are displayed at the end of the table.

Format show ip ospf statistics [vrf vrf-name]

Modes Privileged EXEC

Term	Definition
Delta T	The time since the routing table was computed. The time is in the format hours, minutes, and seconds (hh:mm:ss).
Intra	The time taken to compute intra-area routes, in milliseconds.
Summ	The time taken to compute inter-area routes, in milliseconds.
Ext	The time taken to compute external routes, in milliseconds.
SPF Total	The total time to compute routes, in milliseconds. The total may exceed the sum of the Intra, Summ, and Ext times.
RIB Update	The time from the completion of the routing table calculation until all changes have been made in the common routing table [the Routing Information Base (RIB)], in milliseconds.
Reason	The event or events that triggered the SPF. Reason codes are as follows: • R - new router LSA • N - new network LSA • SN - new network summary LSA • SA - new ASBR summary LSA • X - new external LSA

Example: The following shows example CLI display output for the command.
(Router) #show ip ospf statistics

Area 0.0.0.0: SPF algorithm executed 15 times

Delta T	Intra	Summ	Ext	SPF Total	RIB Update	Reason
00:05:33	0	0	0	0	0	R
00:05:30	0	0	0	0	0	R
00:05:19	0	0	0	0	0	N, SN
00:05:15	0	10	0	10	0	R, N, SN
00:05:11	0	0	0	0	0	R
00:04:50	0	60	0	60	460	R, N
00:04:46	0	90	0	100	60	R, N
00:03:42	0	70	10	90	160	R
00:03:39	0	70	40	120	240	X
00:03:36	0	60	60	130	160	X
00:01:28	0	60	50	130	240	X
00:01:25	0	30	50	110	310	SN
00:01:22	0	0	40	50	260	SN
00:01:19	0	0	20	20	190	X
00:01:16	0	0	0	0	110	R, X

5.9.84 show ip ospf stub table

This command displays the OSPF stub table for the virtual router. If no router is specified, the information for the default router will be displayed. The information below will only be displayed if OSPF is initialized on the switch.

Format show ip ospf stub table [vrf vrf-name]

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Area ID	A 32-bit identifier for the created stub area.
Type of Service	The type of service associated with the stub metric. FASTPATH only supports Normal TOS.
Metric Val	The metric value is applied based on the TOS. It defaults to the least metric of the type of service among the interfaces to other areas. The OSPF cost for a route is a function of the metric value.
Import Summary LSA	Controls the import of summary LSAs into stub areas.

5.9.85 `show ip ospf traffic`

This command displays OSPFv2 packet and LSA statistics and OSPFv2 message queue statistics for the virtual router. If no router is specified, the information for the default router will be displayed. Packet statistics count packets and LSAs since OSPFv2 counters were last cleared (using the command “clear ip ospf counters” on page 600”).



Note...

The `clear ip ospf counters` command does not clear the message queue high water marks.

Format `show ip ospf traffic [vrf vrf-name]`

Modes Privileged EXEC

Parameter	Description
OSPFv2 Packet Statistics	The number of packets of each type sent and received since OSPF counters were last cleared.
LSAs Retransmitted	The number of LSAs retransmitted by this router since OSPF counters were last cleared.
LS Update Max Receive Rate	The maximum rate of LS Update packets received during any 5-second interval since OSPF counters were last cleared. The rate is in packets per second.
LS Update Max Send Rate	The maximum rate of LS Update packets transmitted during any 5-second interval since OSPF counters were last cleared. The rate is in packets per second.
Number of LSAs Received	The number of LSAs of each type received since OSPF counters were last cleared.
OSPFv2 Queue Statistics	For each OSPFv2 message queue, the current count, the high water mark, the number of packets that failed to be enqueued, and the queue limit. The high water marks are not cleared when OSPF counters are cleared.

Example: The following shows example CLI display output for the command.

(Router) `#show ip ospf traffic`

Time Since Counters Cleared: 4000 seconds

OSPFv2 Packet Statistics

	Hello	Database Desc	LS Request	LS Update	LS ACK	Total
Recd:	500	10	20	50	20	600
Sent:	400	8	16	40	16	480

LSAs Retransmitted.....0
 LS Update Max Receive Rate.....20 pps
 LS Update Max Send Rate.....10 pps

Number of LSAs Received

```

T1 (Router).....10
T2 (Network).....0
T3 (Net Summary).....300
T4 (ASBR Summary).....15
T5 (External).....20
T7 (NSSA External).....0
T9 (Link Opaque).....0
T10 (Area Opaque).....0
T11 (AS Opaque).....0
Total.....345

```

OSPFv2 Queue Statistics

	Current	Max	Drops	Limit
Hello	0	10	0	500
ACK	2	12	0	1680
Data	24	47	0	500
Event	1	8	0	1000

5.9.86 show ip ospf virtual-link

This command displays the OSPF Virtual Interface information for a specific area and neighbor for the virtual router. If no router is specified, the information for the default router will be displayed. The *areaid* parameter identifies the area and the *neighbor* parameter identifies the neighbor's Router ID.

Format `show ip ospf virtual-link [vrf vrf-name] areaid neighbor`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Area ID	The area id of the requested OSPF area.
Neighbor Router ID	The input neighbor Router ID.
Hello Interval	The configured hello interval for the OSPF virtual interface.
Dead Interval	The configured dead interval for the OSPF virtual interface.
Interface Transmit Delay	The configured transmit delay for the OSPF virtual interface.
Retransmit Interval	The configured retransmit interval for the OSPF virtual interface.
Authentication Type	The configured authentication type of the OSPF virtual interface.
State	The OSPF Interface States are: down, loopback, waiting, point-to-point, designated router, and backup designated router. This is the state of the OSPF interface.
Neighbor State	The neighbor state.

5.9.87 show ip ospf virtual-link brief

This command displays the OSPF Virtual Interface information for all areas in the system.

Format `show ip ospf virtual-link brief`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Area ID	The area id of the requested OSPF area.
Neighbor	The neighbor interface of the OSPF virtual interface.
Hello Interval	The configured hello interval for the OSPF virtual interface.
Dead Interval	The configured dead interval for the OSPF virtual interface.
Retransmit Interval	The configured retransmit interval for the OSPF virtual interface.
Transmit Delay	The configured transmit delay for the OSPF virtual interface.

5.10 Routing Information Protocol Commands

This section describes the commands you use to view and configure Routing Information Protocol (RIP), which is a distance-vector routing protocol that you use to route traffic within a small network.

5.10.1 router rip

Use this command to enter Router RIP mode.

Format router rip
Mode Global Config

5.10.2 enable (RIP)

This command resets the default administrative mode of RIP in the router (active).

Default enabled
Format enable
Mode Router RIP Config

5.10.2.1 no enable (RIP)

This command sets the administrative mode of RIP in the router to inactive.

Format no enable
Mode Router RIP Config

5.10.3 ip rip

This command enables RIP on a router interface or range of interfaces.

Default disabled
Format ip rip
Mode Interface Config

5.10.3.1 no ip rip

This command disables RIP on a router interface.

Format no ip rip

Mode Interface Config

5.10.4 auto-summary

This command enables the RIP auto-summarization mode.

Default disabled

Format auto-summary

Mode Router RIP Config

5.10.4.1 no auto-summary

This command disables the RIP auto-summarization mode.

Format no auto-summary

Mode Router RIP Config

5.10.5 default-information originate (RIP)

This command is used to control the advertisement of default routes.

Format default-information originate

Mode Router RIP Config

5.10.5.1 no default-information originate (RIP)

This command is used to control the advertisement of default routes.

Format no default-information originate

Mode Router RIP Config

5.10.6 default-metric (RIP)

This command is used to set a default for the metric of distributed routes.

Format default-metric 0-15

Mode Router RIP Config

5.10.6.1 no default-metric (RIP)

This command is used to reset the default metric of distributed routes to its default value.

Format no default-metric

Mode Router RIP Config

5.10.7 distance rip

This command sets the route preference value of RIP in the router. Lower route preference values are preferred when determining the best route. A route with a preference of 255 cannot be used to forward traffic.

Default 15
Format distance rip 1-255
Mode Router RIP Config

5.10.7.1 no distance rip

This command sets the default route preference value of RIP in the router.

Format no distance rip
Mode Router RIP Config

5.10.8 distribute-list out (RIP)

This command is used to specify the access list to filter routes received from the source protocol.

Default 0
Format distribute-list 1-199 out {ospf | static | connected}
Mode Router RIP Config

5.10.8.1 no distribute-list out

This command is used to specify the access list to filter routes received from the source protocol.

Format no distribute-list 1-199 out {ospf | static | connected}
Mode Router RIP Config

5.10.9 ip rip authentication

This command sets the RIP Version 2 Authentication Type and Key for the specified interface or range of interfaces. The value of *type* is either *none*, *simple*, or *encrypt*. The value for authentication key [*key*] must be 16 bytes or less. The [*key*] is composed of standard displayable, noncontrol keystrokes from a Standard 101/102-key keyboard. If the value of *type* is *encrypt*, a keyid in the range of 0 and 255 must be specified. Unauthenticated interfaces do not need an authentication key or authentication key ID.

Default none
Format ip rip authentication {none | {simple *key*} | {encrypt *key* *keyid*}}
Mode Interface Config

5.10.9.1 no ip rip authentication

This command sets the default RIP Version 2 Authentication Type for an interface.

Format no ip rip authentication
Mode Interface Config

5.10.10 ip rip receive version

This command configures an interface or range of interfaces to allow RIP control packets of the specified version(s) to be received.

The value for *mode* is one of: *rip1* to receive only RIP version 1 formatted packets, *rip2* for RIP version 2, *both* to receive packets from either format, or *none* to not allow any RIP control packets to be received.

Default both
Format ip rip receive version {rip1 | rip2 | both | none}
Mode Interface Config

5.10.10.1 no ip rip receive version

This command configures the interface to allow RIP control packets of the default version(s) to be received.

Format no ip rip receive version
Mode Interface Config

5.10.11 ip rip send version

This command configures an interface or range of interfaces to allow RIP control packets of the specified version to be sent. The value for *mode* is one of: *rip1* to broadcast RIP version 1 formatted packets, *rip1c* (RIP version 1 compatibility mode) which sends RIP version 2 formatted packets via broadcast, *rip2* for sending RIP version 2 using multicast, or *none* to not allow any RIP control packets to be sent.

Default rip2
Format ip rip send version {rip1 | rip1c | rip2 | none}
Mode Interface Config

5.10.11.1 no ip rip send version

This command configures the interface to allow RIP control packets of the default version to be sent.

Format no ip rip send version
Mode Interface Config

5.10.12 hostroutesaccept

This command enables the RIP hostroutesaccept mode.

Default enabled
Format hostroutesaccept
Mode Router RIP Config

5.10.12.1 no hostroutesaccept

This command disables the RIP hostroutesaccept mode.

Format no hostroutesaccept
Mode Router RIP Config

5.10.13 split-horizon

This command sets the RIP split horizon mode. Split horizon is a technique for avoiding problems caused by including routes in updates sent to the router from which the route was originally learned. The options are: None - no special processing for this case. Simple - a route will not be included in updates sent to the router from which it was learned. Poisoned reverse - a route will be included in updates sent to the router from which it was learned, but the metric will be set to infinity.

Default simple
Format split-horizon {none | simple | poison}
Mode Router RIP Config

5.10.13.1 no split-horizon

This command sets the default RIP split horizon mode.

Format no split-horizon
Mode Router RIP Config

5.10.14 redistribute (RIP)

This command configures RIP protocol to redistribute routes from the specified source protocol/routers. There are five possible match options. When you submit the command redistribute ospf match *match-type* the match-type or types specified are added to any match types presently being redistributed. Internal routes are redistributed by default.

Default

- metric—not-configured
- match—internal

Format for OSPF as source protocol redistribute ospf [metric 0-15] [match [internal] [external 1] [external 2] [nssa-external 1] [nssa-external-2]]

Format for other source protocol redistribute {static | connected} [metric 0-15]

Mode Router RIP Config

5.10.14.1 no redistribute

This command de-configures RIP protocol to redistribute routes from the specified source protocol/routers.

Format no redistribute {ospf | static | connected} [metric] [match [internal] [external 1] [external 2] [nssa-external 1] [nssa-external-2]]
Mode Router RIP Config

5.10.15 show ip rip

This command displays information relevant to the RIP router.

Format show ip rip
Modes

- Privileged EXEC
- User EXEC

Term	Definition
RIP Admin Mode	Enable or disable.
Split Horizon Mode	None, simple or poison reverse.
Auto Summary Mode	Enable or disable. If enabled, groups of adjacent routes are summarized into single entries, in order to reduce the total number of entries. The default is enable.
Host Routes Accept Mode	Enable or disable. If enabled the router accepts host routes. The default is enable.
Global Route Changes	The number of route changes made to the IP Route Database by RIP. This does not include the refresh of a route's age.
Global queries	The number of responses sent to RIP queries from other systems.
Default Metric	The default metric of redistributed routes if one has already been set, or blank if not configured earlier. The valid values are 1 to 15.
Default Route Advertise	The default route.

5.10.16 show ip rip interface brief

This command displays general information for each RIP interface. For this command to display successful results routing must be enabled per interface (i.e., ip rip).

Format show ip rip interface brief

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	<i>slot/port</i>
IP Address	The IP source address used by the specified RIP interface.
Send Version	The RIP version(s) used when sending updates on the specified interface. The types are none, RIP-1, RIP-1c, RIP-2
Receive Version	The RIP version(s) allowed when receiving updates from the specified interface. The types are none, RIP-1, RIP-2, Both
RIP Mode	The administrative mode of router RIP operation (enabled or disabled).
Link State	The mode of the interface (up or down).

5.10.17 show ip rip interface

This command displays information related to a particular RIP interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a *slot/port* format.

Format show ip rip interface {*slot/port/vlan 1-4093*}

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	<i>slot/port</i> This is a configured value.
IP Address	The IP source address used by the specified RIP interface. This is a configured value.
Send Version	The RIP version(s) used when sending updates on the specified interface. The types are none, RIP-1, RIP-1c, RIP-2. This is a configured value.

Term	Definition
Receive Version	The RIP version(s) allowed when receiving updates from the specified interface. The types are none, RIP-1, RIP-2, Both. This is a configured value.
RIP Admin Mode	RIP administrative mode of router RIP operation; enable activates, disable de-activates it. This is a configured value.
Link State	Indicates whether the RIP interface is up or down. This is a configured value.
Authentication Type	The RIP Authentication Type for the specified interface. The types are none, simple, and encrypt. This is a configured value.

The following information will be invalid if the link state is down.

Term	Definition
Bad Packets Received	The number of RIP response packets received by the RIP process which were subsequently discarded for any reason.
Bad Routes Received	The number of routes contained in valid RIP packets that were ignored for any reason.
Updates Sent	The number of triggered RIP updates actually sent on this interface.

5.11 ICMP Throttling Commands

This section describes the commands you use to configure options for the transmission of various types of ICMP messages.

5.11.1 ip unreachable

Use this command to enable the generation of ICMP Destination Unreachable messages on an interface or range of interfaces. By default, the generation of ICMP Destination Unreachable messages is enabled.

Default	enable
Format	ip unreachable
Mode	Interface Config

5.11.1.1 no ip unreachable

Use this command to prevent the generation of ICMP Destination Unreachable messages.

Format	no ip unreachable
Mode	Interface Config

5.11.2 ip redirects

Use this command to enable the generation of ICMP Redirect messages by the router. By default, the generation of ICMP Redirect messages is enabled. You can use this command to configure an interface, a range of interfaces, or all interfaces.

Default	enable
Format	ip redirects
Mode	• Global Config • Interface Config • Virtual Router Config

5.11.2.1 no ip redirects

Use this command to prevent the generation of ICMP Redirect messages by the router.

Format no ip redirects
Mode • Global Config
 • Interface Config

5.11.3 ipv6 redirects

Use this command to enable the generation of ICMPv6 Redirect messages by the router. By default, the generation of ICMP Redirect messages is enabled. You can use this command to configure an interface, a range of interfaces, or all interfaces.

Default enable
Format ipv6 redirects
Mode Interface Config

5.11.3.1 no ipv6 redirects

Use this command to prevent the generation of ICMPv6 Redirect messages by the router.

Format no ipv6 redirects
Mode Interface Config

5.11.4 ip icmp echo-reply

Use this command to enable the generation of ICMP Echo Reply messages by the router. By default, the generation of ICMP Echo Reply messages is enabled.

Default enable
Format ip icmp echo-reply
Mode • Global Config
 • Virtual Router Config

5.11.4.1 no ip icmp echo-reply

Use this command to prevent the generation of ICMP Echo Reply messages by the router.

Format no ip icmp echo-reply
Mode Global Config

5.11.5 ip icmp error-interval

Use this command to limit the rate at which IPv4 ICMP error messages are sent. The rate limit is configured as a token bucket, with two configurable parameters, *burst-size* and *burst-interval*.

The *burst-interval* specifies how often the token bucket is initialized with *burst-size* tokens. *burst-interval* is from 0 to 2147483647 milliseconds (msec). The *burst-size* is the number of ICMP error messages that can be sent during one *burst-interval*. The range is from 1 to 200 messages. To disable ICMP rate limiting, set *burst-interval* to zero (0).

Default	• <i>burst-interval</i> of 1000 msec. • <i>burst-size</i> of 100 messages
Format	<code>ip icmp error-interval <i>burst-interval</i> [<i>burst-size</i>]</code>
Mode	• Global Config • Virtual Router Config

5.11.5.1 `no ip icmp error-interval`

Use the **no** form of the command to return *burst-interval* and *burst-size* to their default values.

Format	<code>no ip icmp error-interval</code>
Mode	Global Config

5.12 Bidirectional Forwarding Detection Commands

Bidirectional Forwarding Detection (BFD) verifies bidirectional connectivity between forwarding engines, which can be a single or multi-hop away. The protocol works over any underlying transmission mechanism and protocol layer with a wide range of detection times, especially in scenarios where fast failure detection is required in data plane level for multiple concurrent sessions.

Use the following commands to configure Bidirectional Forwarding Detection commands (BFD).

5.12.1 `bfd`

This command enables BFD on all interfaces associated with the OSPF process.

Default	Disabled
Format	<i>bfd</i>
Mode	Router OSPF Config

Example: Do the following to trigger BFD processing through OSPF on all the interfaces that are associated with it.

```
(Router) (Config)# router ospf
(Router) (Config-router)# bfd
(Router) (Config-router)# exit
```

5.12.1.1 `no bfd`

This command disables BFD on all interfaces associated with the OSPF process.

Format	<i>no bfd</i>
Mode	Router OSPF Config

5.12.2 `feature bfd`

This command enables BFD on the device. Note that BFD must be enabled in order to configure other protocol and interface parameters.

Default	Disabled
Format	<i>feature bfd</i>
Mode	Global Config

5.12.2.1 no feature bfd

Disables BFD globally and removes runtime session data. Static configurations are retained.

Format	<i>no feature bfd</i>
Mode	Global Config

Example:

```
(Router)# configure
(Router) (Config)# feature bfd
(Router) (Config)# exit
```

5.12.3 bfd echo

This command enables BFD echo mode on an IP interface.

Default	Disabled
Format	<i>bfd echo</i>
Mode	Interface Config

Example:

```
(Router) (Config)# interface 0/1
(Router) (Interface 0/1)# no bfd echo
(Router) (Interface 0/1)# exit
```

5.12.3.1 no bfd echo

This command disables BFD echo mode on an IP interface.

Format	<i>no bfd echo</i>
Mode	Interface Config

5.12.4 bfd interval

This command configures the BFD session parameters for all available interfaces on the device (Global Config mode) or IP interface (Interface Config mode). It overwrites any BFD configurations present on individual interfaces (Global Config mode) or globally configured BFD session parameters (Interface Config).

Default	None
Format	<i>bfd interval transmit-interval min_rx minimum-receive-interval multiplier detection-time-multiplier</i>
Mode	• Global Config • Interface Config

Parameters	Description
<i>transmit-interval</i>	The desired minimum transmit interval, which is the minimum interval that the user wants to use while transmitting BFD control packets. It is represented in milliseconds. Its range is 100 ms to 1000 ms (with a change granularity of 100) with a default value of 100 ms.
<i>minimum-receive-interval</i>	The required minimum receive interval, which is the minimum interval at which the system can receive BFD control packets. It is represented in milliseconds. Its range is 100 ms to 1000 ms (with a change granularity of 100) with a default value of 100 ms.
<i>detection-time-multiplier</i>	The number of BFD control packets that must be missed in a row to declare a session down. Its range is 1 to 50 with default value of 3.

Example: The following steps configure BFD session parameters on the device, in Privileged EXEC mode.

```
(Router)# configure
(Router) (Config)# bfd interval 100 min_rx 200 multiplier 5
(Router) (Config)# exit
```

Example: The following steps configure BFD session parameters on an interface (for example, 0/1).

```
(Router) (Config)# interface 0/1
(Router) (Interface 0/1)# bfd interval 100 min_rx 200 multiplier 5
(Router) (Interface 0/0/1)# exit
```

5.12.4.1 no bfd interval

In Global Config mode, this command resets the BFD session parameters for all available interfaces on the device to their default values. In Interface Config mode, this command resets the BFD session parameters for all sessions on an IP interface to their default values.

Format no bfd interval

Mode

- Global Config
- Interface Config

5.12.5 bfd slow-timer

This command sets up the required echo receive interval preference value. This value determines the interval the asynchronous sessions use for BFD control packets when the echo function is enabled. The slow-timer value is used as the new control packet interval, while the echo packets use the configured BFD intervals.

Default 2000

Format bfd slow-timer *echo-receive-interval*

Mode Global Config

Parameters	Description
<i>echo-receive-interval</i>	The value is represented in milliseconds. Its range is 1000 ms to 30000 ms (with a change granularity of 100) with default value of 2000 ms.

Example:

```
(Router)# configure
(Router) (Config)# bfd slow-timer 10000
(Router) (Config)# exit
```

5.12.5.1 no bfd slow-timer

This command resets the BFD slow-timer preference value to its default.

Format no bfd slow-timer
Mode Global Config

5.12.6 ip ospf bfd

This command enables BFD on interfaces associated with the OSPF process.

Default Disabled
Format ip ospf bfd
Mode Interface Config

5.12.6.1 no ip ospf bfd

This command disables BFD on interfaces associated with the OSPF process.

Default Disabled
Format no ip ospf bfd
Mode Interface Config

5.12.7 debug bfd event

This command displays BFD state transition information.

Format debug bfd event
Mode Privileged EXEC

5.12.8 debug bfd packet

This command displays BFD control packet debugging information.

Format debug bfd packet
Mode Privileged EXEC

6 IPv6 Management Commands

This chapter describes the IPv6 commands available in the FASTPATH CLI.

This chapter contains the following sections:

- "IPv6 Management Commands" on page 647"
- "Tunnel Interface Commands" on page 653"
- "Loopback Interface Commands" on page 655"
- "IPv6 Routing Commands" on page 656"
- "OSPFv3 Commands" on page 683"
- "DHCPv6 Commands" on page 718"
- "DHCPv6 Snooping Configuration Commands" on page 727"



Note...

The commands in this chapter are in one of three functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- Clear commands clear some or all of the settings to factory defaults.

6.1 IPv6 Management Commands

IPv6 Management commands allow a device to be managed via an IPv6 address in a switch or IPv4 routing (i.e., independent from the IPv6 Routing package). For Routing/IPv6 builds of FASTPATH dual IPv4/IPv6 operation over the service port is enabled. FASTPATH has capabilities such as:

- Static assignment of IPv6 addresses and gateways for the service/network ports.
- The ability to ping an IPv6 link-local address over the service/network port.
- Using IPv6 Management commands, you can send SNMP traps and queries via the service/network port.
- The user can manage a device via the network port (in addition to a Routing Interface or the Service port).

6.1.1 serviceport ipv6 enable

Use this command to enable IPv6 operation on the service port. By default, IPv6 operation is enabled on the service port.

Default	enabled
Format	serviceport ipv6 enable
Mode	Privileged EXEC

6.1.1.1 no serviceport ipv6 enable

Use this command to disable IPv6 operation on the service port.

Format	no serviceport ipv6 enable
Mode	Privileged EXEC

6.1.2 network ipv6 enable

Use this command to enable IPv6 operation on the network port. By default, IPv6 operation is enabled on the network port.

Default enabled
Format network ipv6 enable
Mode Privileged EXEC

6.1.2.1 no network ipv6 enable

Use this command to disable IPv6 operation on the network port.

Format no network ipv6 enable
Mode Privileged EXEC

6.1.3 serviceport ipv6 address

Use the options of this command to manually configure IPv6 global address, enable/disable stateless global address autoconfiguration and to enable/disable dhcpv6 client protocol information on the service port.



Note...

Multiple IPv6 prefixes can be configured on the service port.

Format serviceport ipv6 address {*address/prefix-length* [eui64] | autoconfig | dhcp}
Mode Privileged EXEC

Parameter	Description
address	IPv6 prefix in IPv6 global address format.
prefix-length	IPv6 prefix length value.
eui64	Formulate IPv6 address in eui64 address format.
autoconfig	Configure stateless global address autoconfiguration capability.
dhcp	Configure dhcpv6 client protocol.

6.1.3.1 no serviceport ipv6 address

Use the command `no serviceport ipv6 address` to remove all configured IPv6 prefixes on the service port interface.

Use the command with the `address` option to remove the manually configured IPv6 global address on the network port interface.

Use the command with the `autoconfig` option to disable the stateless global address autoconfiguration on the service port.

Use the command with the `dhcp` option to disable the dhcpv6 client protocol on the service port.

Format no serviceport ipv6 address {*address/prefix-length* [eui64] | autoconfig | dhcp}
Mode Privileged EXEC

6.1.4 serviceport ipv6 gateway

Use this command to configure IPv6 gateway (i.e. Default routers) information for the service port.

**Note...**

Only a single IPv6 gateway address can be configured for the service port. There may be a combination of IPv6 prefixes and gateways that are explicitly configured and those that are set through auto-address configuration with a connected IPv6 router on their service port interface.

Format serviceport ipv6 gateway *gateway-address*

Mode Privileged EXEC

Parameter	Description
gateway-address	Gateway address in IPv6 global or link-local address format.

6.1.4.1 no serviceport ipv6 gateway

Use this command to remove IPv6 gateways on the service port interface.

Format no serviceport ipv6 gateway

Mode Privileged EXEC

6.1.5 serviceport ipv6 neighbor

Use this command to manually add IPv6 neighbors to the IPv6 neighbor table for the service port. If an IPv6 neighbor already exists in the neighbor table, the entry is automatically converted to a static entry. Static entries are not modified by the neighbor discovery process. They are, however, treated the same for IPv6 forwarding. Static IPv6 neighbor entries are applied to the kernel stack and to the hardware when the corresponding interface is operationally active.

Format serviceport ipv6 neighbor *ipv6-address macaddr*

Mode Privileged EXEC

Parameter	Description
ipv6-address	The IPv6 address of the neighbor or interface.
macaddr	The link-layer address.

6.1.5.1 no serviceport ipv6 neighbor

Use this command to remove IPv6 neighbors from the IPv6 neighbor table for the service port.

Format no serviceport ipv6 neighbor *ipv6-address macaddr*

Mode Privileged EXEC

6.1.6 network ipv6 address

Use the options of this command to manually configure IPv6 global address, enable/disable stateless global address autoconfiguration and to enable/disable dhcpv6 client protocol information for the network port. Multiple IPv6 addresses can be configured on the network port.

Format network ipv6 address {*address/prefix-length* [eui64] | autoconfig | dhcp}

Mode Privileged EXEC

Parameter	Description
address	IPv6 prefix in IPv6 global address format.
prefix-length	IPv6 prefix length value.
eui64	Formulate IPv6 address in eui64 format.
autoconfig	Configure stateless global address autoconfiguration capability.
dhcp	Configure dhcpv6 client protocol.

6.1.6.1 no network ipv6 address

The command `no network ipv6 address` removes all configured IPv6 prefixes.

Use this command with the `address` option to remove the manually configured IPv6 global address on the network port interface.

Use this command with the `autoconfig` option to disable the stateless global address autoconfiguration on the network port.

Use this command with the `dhcp` option disables the dhcpv6 client protocol on the network port.

Format no network ipv6 address {*address/prefix-length* [eui64] | autoconfig | dhcp}

Mode Privileged EXEC

6.1.7 network ipv6 gateway

Use this command to configure IPv6 gateway (i.e. default routers) information for the network port.

Format network ipv6 gateway *gateway-address*

Mode Privileged EXEC

Parameter	Description
gateway-address	Gateway address in IPv6 global or link-local address format.

6.1.7.1 no network ipv6 gateway

Use this command to remove IPv6 gateways on the network port interface.

Format no network ipv6 gateway

Mode Privileged EXEC

6.1.8 network ipv6 neighbor

Use this command to manually add IPv6 neighbors to the IPv6 neighbor table for this network port. If an IPv6 neighbor already exists in the neighbor table, the entry is automatically converted to a static entry. Static entries are not modified by the neighbor discovery process. They are, however, treated the same for IPv6 forwarding. Static IPv6 neighbor entries are applied to the kernel stack and to the hardware when the corresponding interface is operationally active.

Format network ipv6 neighbor *ipv6-address macaddr*

Mode Privileged EXEC

Parameter	Description
ipv6-address	The IPv6 address of the neighbor or interface.
macaddr	The link-layer address.

6.1.8.1 no network ipv6 neighbor

Use this command to remove IPv6 neighbors from the neighbor table.

Format no network ipv6 neighbor *ipv6-address macaddr*

Mode Privileged EXEC

6.1.9 show network ipv6 neighbors

Use this command to display the information about the IPv6 neighbor entries cached on the network port. The information is updated to show the type of the entry.

Default None

Format show network ipv6 neighbors

Mode

- Privileged EXEC

Field	Description
IPv6 Address	The IPv6 address of the neighbor.
MAC Address	The MAC Address of the neighbor.
isRtr	Shows if the neighbor is a router. If TRUE, the neighbor is a router; FALSE it is not a router.
Neighbor State	The state of the neighbor cache entry. Possible values are: Incomplete, Reachable, Stale, Delay, Probe, and Unknown
Age	The time in seconds that has elapsed since an entry was added to the cache.
Last Updated	The time in seconds that has elapsed since an entry was added to the cache.
Type	The type of neighbor entry. The type is Static if the entry is manually configured and Dynamic if dynamically resolved.

Example: The following is an example of the command.
(FASTPATH Routing) #show network ipv6 neighbors

IPv6 Address	MAC Address	isRtr	Neighbor State	Age (Secs)	Type
FE80::5E26:AFF:FEBD:852C	5c:26:0a:bd:85:2c	FALSE	Reachable	0	Static

6.1.10 show serviceport ipv6 neighbors

Use this command to displays information about the IPv6 neighbor entries cached on the service port. The information is updated to show the type of the entry.

Default	None
Format	show serviceport ipv6 neighbors
Mode	Privileged EXEC

Field	Description
IPv6 Address	The IPv6 address of the neighbor.
MAC Address	The MAC Address of the neighbor.
isRtr	Shows if the neighbor is a router. If TRUE, the neighbor is a router; if FALSE, it is not a router.
Neighbor State	The state of the neighbor cache entry. The possible values are: Incomplete, Reachable, Stale, Delay, Probe, and Unknown.
Age	The time in seconds that has elapsed since an entry was added to the cache.
Type	The type of neighbor entry. The type is Static if the entry is manually configured and Dynamic if dynamically resolved.

Example: The following is an example of the command.

(FASTPATH Routing) #show serviceport ipv6 neighbors

IPv6 Address	MAC Address	isRtr	Neighbor State	Age (Secs)	Type
FE80::5E26:AFF:FEBD:852C	5c:26:0a:bd:85:2c	FALSE	Reachable	0	Dynamic

6.1.11 ping ipv6

Use this command to determine whether another computer is on the network. Ping provides a synchronous response when initiated from the CLI and Web interfaces. To use the command, configure the switch for network (in-band) connection. The source and target devices must have the ping utility enabled and running on top of TCP/IP. The switch can be pinged from any IP workstation with which the switch is connected through the default VLAN (VLAN 1), as long as there is a physical path between the switch and the workstation. The terminal interface sends three pings to the target station. Use the *ipv6-address/hostname* parameter to ping an interface by using the global IPv6 address of the interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a *slot/port* format. Use the optional *size* keyword to specify the size of the ping packet.

You can utilize the ping or traceroute facilities over the service/network ports when using an IPv6 global address *ipv6-global-address/hostname*. Any IPv6 global address or gateway assignments to these interfaces will cause IPv6 routes to be installed within the IP stack such that the ping or traceroute request is routed out the service/network port properly. When referencing an IPv6 link-local address, you must also specify the service or network port interface by using the *serviceport* or *network* parameter.

Default	• The default count is 1. • The default interval is 3 seconds. • The default size is 0 bytes.
Format	<code>ping ipv6 {ipv6-global-address/hostname {interface {slot/port vlan 1-4093 serviceport network} link-local-address} [size datagram-size]}</code>
Mode	• Privileged EXEC • User EXEC

6.1.12 ping ipv6 interface

Use this command to determine whether another computer is on the network. To use the command, configure the switch for network (in-band) connection. The source and target devices must have the ping utility enabled and running on top of TCP/IP. The switch can be pinged from any IP workstation with which the switch is connected through the default VLAN (VLAN 1), as long as there is a physical path between the switch and the workstation. The terminal interface sends three pings to the target station. You can use a loopback, network port, service port, tunnel, vlan, or physical interface as the source. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

Format	<code>ping ipv6 interface {slot/port vlan 1-4093 loopback Loopback-id network serviceport tunnel tunnel-id } {link-local-address Link-Local-address ipv6-address} [size datagram-size]</code>
Modes	• Privileged EXEC • User EXEC

Keyword	Description
interface	Use the <i>interface</i> keyword to ping an interface by using the link-local address or the global IPv6 address of the interface.
size	Use the optional <i>size</i> keyword to specify the size of the ping packet.
ipv6-address	The link local IPv6 address of the device you want to query.

6.2 Tunnel Interface Commands

The commands in this section describe how to create, delete, and manage tunnel interfaces. Several different types of tunnels provide functionality to facilitate the transition of IPv4 networks to IPv6 networks. These tunnels are divided into two classes: configured and automatic. The distinction is that configured tunnels are explicitly configured with a destination or endpoint of the tunnel. Automatic tunnels, in contrast, infer the endpoint of the tunnel from the destination address of packets routed into the tunnel. To assign an IP address to the tunnel interface, see "ip address" on page 534". To assign an IPv6 address to the tunnel interface, see "ipv6 address" on page 657".

6.2.1 interface tunnel

Use this command to enter the Interface Config mode for a tunnel interface. The *tunnel-id* range is 0 to 7.

Format	<code>interface tunnel tunnel-id</code>
Mode	Global Config

6.2.1.1 no interface tunnel

This command removes the tunnel interface and associated configuration parameters for the specified tunnel interface.

Format no interface tunnel *tunnel-id*

Mode Global Config

6.2.2 tunnel source

This command specifies the source transport address of the tunnel, either explicitly or by reference to an interface.

Format tunnel source {*ipv4-address* | ethernet *slot/port*}

Mode Interface Config

6.2.3 tunnel destination

This command specifies the destination transport address of the tunnel.

Format tunnel destination {*ipv4-address*}

Mode Interface Config

6.2.4 tunnel mode ipv6ip

This command specifies the mode of the tunnel. With the optional 6to4 argument, the tunnel mode is set to 6to4 automatic. Without the optional 6to4 argument, the tunnel mode is configured.

Format tunnel mode ipv6ip [6to4]

Mode Interface Config

6.2.5 show interface tunnel

This command displays the parameters related to tunnel such as tunnel mode, tunnel source address and tunnel destination address.

Format show interface tunnel [*tunnel-id*]

Mode Privileged EXEC

If you do not specify a tunnel ID, the command shows the following information for each configured tunnel:

Term	Definition
Tunnel ID	The tunnel identification number.
Interface	The name of the tunnel interface.
Tunnel Mode	The tunnel mode.
Source Address	The source transport address of the tunnel.
Destination Address	The destination transport address of the tunnel.

If you specify a tunnel ID, the command shows the following information for the tunnel:

Term	Definition
Interface Link Status	Shows whether the link is up or down.
MTU Size	The maximum transmission unit for packets on the interface.
IPv6 Address/Length	If you enable IPv6 on the interface and assign an address, the IPv6 address and prefix display.

6.3 Loopback Interface Commands

The commands in this section describe how to create, delete, and manage loopback interfaces. A loopback interface is always expected to be up. This interface can provide the source address for sent packets and can receive both local and remote packets. The loopback interface is typically used by routing protocols.

To assign an IP address to the loopback interface, see "ip address" on page 534". To assign an IPv6 address to the loopback interface, see "ipv6 address" on page 657".

6.3.1 interface loopback

Use this command to enter the Interface Config mode for a loopback interface. The range of the loopback ID is 0 to 7.

Format interface loopback *Loopback-id*

Mode Global Config

6.3.1.1 no interface loopback

This command removes the loopback interface and associated configuration parameters for the specified loopback interface.

Format no interface loopback *Loopback-id*

Mode Global Config

6.3.2 show interface loopback

This command displays information about configured loopback interfaces.

Format show interface loopback [*Loopback-id*]

Mode Privileged EXEC

If you do not specify a loopback ID, the following information appears for each loopback interface on the system:

Term	Definition
Loopback ID	The loopback ID associated with the rest of the information in the row.
Interface	The interface name.
IP Address	The IPv4 address of the interface.

If you specify a loopback ID, the following information appears:

Term	Definition
Interface Link Status	Shows whether the link is up or down.

Term	Definition
IP Address	The IPv4 address of the interface.
MTU size	The maximum transmission size for packets on this interface, in bytes.

6.4 IPv6 Routing Commands

This section describes the IPv6 commands you use to configure IPv6 on the system and on the interfaces. This section also describes IPv6 management commands and show commands.

6.4.1 ipv6 hop-limit

This command defines the unicast hop count used in ipv6 packets originated by the node. The value is also included in router advertisements. Valid values for *hops* are 1-255 inclusive. The default “not configured” means that a value of zero is sent in router advertisements and a value of 64 is sent in packets originated by the node. Note that this is not the same as configuring a value of 64.

Default not configured
Format ipv6 hop-limit *hops*
Mode Global Config

6.4.1.1 no ipv6 hop-limit

This command returns the unicast hop count to the default.

Format no ipv6 hop-limit
Mode Global Config

6.4.2 ipv6 unicast-routing

Use this command to enable the forwarding of IPv6 unicast datagrams.

Default disabled
Format ipv6 unicast-routing
Mode Global Config

6.4.2.1 no ipv6 unicast-routing

Use this command to disable the forwarding of IPv6 unicast datagrams.

Format no ipv6 unicast-routing
Mode Global Config

6.4.3 ipv6 enable

Use this command to enable IPv6 routing on an interface or range of interfaces, including tunnel and loopback interfaces, that has not been configured with an explicit IPv6 address. When you use this command, the interface is automatically configured with a link-local address. You do not need to use this command if you configured an IPv6 global address on the interface.

Default	disabled
Format	ipv6 enable
Mode	Interface Config

6.4.3.1 no ipv6 enable

Use this command to disable IPv6 routing on an interface.

Format	no ipv6 enable
Mode	Interface Config

6.4.4 ipv6 address

Use this command to configure an IPv6 address on an interface or range of interfaces, including tunnel and loopback interfaces, and to enable IPv6 processing on this interface. You can assign multiple globally reachable addresses to an interface by using this command. You do not need to assign a link-local address by using this command since one is automatically created. The *prefix* field consists of the bits of the address to be configured. The *prefix_Length* designates how many of the high-order contiguous bits of the address make up the prefix.

You can express IPv6 addresses in eight blocks. Also of note is that instead of a period, a colon now separates each block. For simplification, leading zeros of each 16 bit block can be omitted. One sequence of 16 bit blocks containing only zeros can be replaced with a double colon "::", but not more than one at a time (otherwise it is no longer a unique representation).

- Dropping zeros: 3ffe:ffff:100:f101:0:0:0:1 becomes 3ffe:ffff:100:f101::1
- Local host: 0000:0000:0000:0000:0000:0000:0000:0001 becomes ::1
- Any host: 0000:0000:0000:0000:0000:0000:0000:0000 becomes ::

The hexadecimal letters in the IPv6 addresses are not case-sensitive. An example of an IPv6 prefix and prefix length is 3ffe:1::1234/64.

The optional [eui-64] field designates that IPv6 processing on the interfaces was enabled using an EUI-64 interface ID in the low order 64 bits of the address. If you use this option, the value of *prefix_Length* must be 64 bits.

Format	ipv6 address <i>prefix/prefix_Length</i> [eui64]
Mode	Interface Config

6.4.4.1 no ipv6 address

Use this command to remove all IPv6 addresses on an interface or specified IPv6 address. The *prefix* parameter consists of the bits of the address to be configured. The *prefix_Length* designates how many of the high-order contiguous bits of the address comprise the prefix. The optional [eui-64] field designates that IPv6 processing on the interfaces was enabled using an EUI-64 interface ID in the low order 64 bits of the address.

If you do not supply any parameters, the command deletes all the IPv6 addresses on an interface.

Format	no ipv6 address [<i>prefix/prefix_Length</i>] [eui64]
Mode	Interface Config

6.4.5 ipv6 address autoconfig

Use this command to allow an in-band interface to acquire an IPv6 address through IPv6 Neighbor Discovery Protocol (NDP) and through the use of Router Advertisement messages.

Default	disabled
Format	ipv6 address autoconfig
Mode	Interface Config

6.4.5.1 no ipv6 address autoconfig

This command the IPv6 autoconfiguration status on an interface to the default value.

Format	no ipv6 address autoconfig
Mode	Interface Config

6.4.6 ipv6 address dhcp

This command enables the DHCPv6 client on an in-band interface so that it can acquire network information, such as the IPv6 address, from a network DHCP server.

Default	disabled
Format	ipv6 address dhcp
Mode	Interface Config

6.4.6.1 no ipv6 address dhcp

This command releases a leased address and disables DHCPv6 on an interface.

Format	no ipv6 address dhcp
Mode	Interface Config

6.4.7 ipv6 route

Use this command to configure an IPv6 static route. The *ipv6-prefix* is the IPv6 network that is the destination of the static route. The *prefix_length* is the length of the IPv6 prefix — a decimal value (usually 0-64) that shows how many of the high-order contiguous bits of the address comprise the prefix (the network portion of the address). A slash mark must precede the *prefix_length*. The *next-hop-address* is the IPv6 address of the next hop that can be used to reach the specified network. Specifying `Null0` as nexthop parameter adds a static reject route. The *preference* parameter is a value the router uses to compare this route with routes from other route sources that have the same destination. The range for *preference* is 1-255, and the default value is 1. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a *slot/port* format. You can specify a *slot/port* or *vlan id* or *tunnel tunnel_id* interface to identify direct static routes from point-to-point and broadcast interfaces. The interface must be specified when using a link-local address as the next hop. A route with a preference of 255 cannot be used to forward traffic.

Default	disabled
Format	ipv6 route <i>ipv6-prefix/prefix_length</i> { <i>next-hop-address</i> <code>Null0</code> interface { <i>slot/port/vlan 1-4093</i> <i>tunnel tunnel_id</i> } <i>next-hop-address</i> } [<i>preference</i>]
Mode	Global Config

6.4.7.1 no ipv6 route

Use this command to delete an IPv6 static route. Use the command without the optional parameters to delete all static routes to the specified destination. Use the *preference* parameter to revert the preference of a route to the default preference.

Format `no ipv6 route ipv6-prefix/prefix_Length [{next-hop-address | Null0 | interface {slot/port/vlan 1-4093|tunnel tunnel_id} next-hop-address | preference}]`

Mode Global Config

6.4.8 ipv6 route distance

This command sets the default distance (preference) for IPv6 static routes. Lower route distance values are preferred when determining the best route. The `ipv6 route` command allows you to optionally set the distance (preference) of an individual static route. The default distance is used when no distance is specified in this command.

Changing the default distance does not update the distance of existing static routes, even if they were assigned the original default distance. The new default distance will only be applied to static routes created after invoking the `ipv6 route distance` command.

Default 1

Format `ipv6 route distance 1-255`

Mode Global Config

6.4.8.1 no ipv6 route distance

This command resets the default static route preference value in the router to the original default preference. Lower route preference values are preferred when determining the best route.

Format `no ipv6 route distance`

Mode Global Config

6.4.9 ipv6 route net-prototype

This command adds net prototype IPv6 routes to the hardware.

Format `ip route net-prototype prefix/prefix-Length nexthopip num-routes`

Mode Global Config

Parameter	Description
prefix/prefix-length	The destination network and mask for the route.
nexthopip	The next-hop ip address, It must belong to an active routing interface, but it does not need to be resolved.
num-routes	The number of routes need to added into hardware starting from the given prefix argument and within the given prefix-length.

6.4.9.1 no ipv6 route net-prototype

This command deletes all the net prototype IPv6 routes added to the hardware.

Format ip route net-prototype *prefix/prefix-length nexthopip num-routes*
Mode Global Config

6.4.10 ipv6 mtu

This command sets the maximum transmission unit (MTU) size, in bytes, of IPv6 packets on an interface or range of interfaces. This command replaces the default or link MTU with a new MTU value.

**Note...**

The default MTU value for a tunnel interface is 1480. You cannot change this value.

Default 0 or link speed (MTU value (1500))
Format ipv6 mtu *1280-1500*
Mode Interface Config

6.4.10.1 no ipv6 mtu

This command resets maximum transmission unit value to default value.

Format no ipv6 mtu
Mode Interface Config

6.4.11 ipv6 nd dad attempts

This command sets the number of duplicate address detection probes transmitted on an interface or range of interfaces. Duplicate address detection verifies that an IPv6 address on an interface is unique.

Default 1
Format ipv6 nd dad attempts *0 - 600*
Mode Interface Config

6.4.11.1 no ipv6 nd dad attempts

This command resets to number of duplicate address detection value to default value.

Format no ipv6 nd dad attempts
Mode Interface Config

6.4.12 ipv6 nd managed-config-flag

This command sets the “managed address configuration” flag in router advertisements on the interface or range of interfaces. When the value is true, end nodes use DHCPv6. When the value is false, end nodes automatically configure addresses.

Default false
Format ipv6 nd managed-config-flag
Mode Interface Config

6.4.12.1 no ipv6 nd managed-config-flag

This command resets the “managed address configuration” flag in router advertisements to the default value.

Format no ipv6 nd managed-config-flag
Mode Interface Config

6.4.13 ipv6 nd ns-interval

This command sets the interval between router advertisements for advertised neighbor solicitations, in milliseconds. An advertised value of 0 means the interval is unspecified. This command can configure a single interface or a range of interfaces.

Default 0
Format ipv6 nd ns-interval {1000-4294967295 / 0}
Mode Interface Config

6.4.13.1 no ipv6 nd ns-interval

This command resets the neighbor solicit retransmission interval of the specified interface to the default value.

Format no ipv6 nd ns-interval
Mode Interface Config

6.4.14 ipv6 nd other-config-flag

This command sets the “other stateful configuration” flag in router advertisements sent from the interface.

Default false
Format ipv6 nd other-config-flag
Mode Interface Config

6.4.14.1 no ipv6 nd other-config-flag

This command resets the “other stateful configuration” flag back to its default value in router advertisements sent from the interface.

Format no ipv6 nd other-config-flag
Mode Interface Config

6.4.15 `fip6 nd ra-interval`

This command sets the transmission interval between router advertisements on the interface or range of interfaces.

Default 600
Format `ipv6 nd ra-interval-max 4- 1800`
Mode Interface Config

6.4.15.1 `no ipv6 nd ra-interval`

This command sets router advertisement interval to the default.

Format `no ipv6 nd ra-interval-max`
Mode Interface Config

6.4.16 `ipv6 nd ra-lifetime`

This command sets the value, in seconds, that is placed in the Router Lifetime field of the router advertisements sent from the interface or range of interfaces. The *Lifetime* value must be zero, or it must be an integer between the value of the router advertisement transmission interval and 9000. A value of zero means this router is not to be used as the default router.

Default 1800
Format `ipv6 nd ra-lifetime Lifetime`
Mode Interface Config

6.4.16.1 `no ipv6 nd ra-lifetime`

This command resets router lifetime to the default value.

Format `no ipv6 nd ra-lifetime`
Mode Interface Config

6.4.17 `ipv6 nd ra hop-limit unspecified`

This command configures the router to send Router Advertisements on an interface with an unspecified (0) Current Hop Limit value. This tells the hosts on that link to ignore the Hop Limit from this Router.

Default Disable
Format `ipv6 nd ra hop-limit unspecified`
Mode Interface Config

6.4.17.1 `no ipv6 nd ra hop-limit unspecified`

This command configures the router to send Router Advertisements on an interface with the global configured Hop Limit value.

Format `no ipv6 nd ra hop-limit unspecified`
Mode Interface Config

6.4.18 `ipv6 nd reachable-time`

This command sets the router advertisement time to consider a neighbor reachable after neighbor discovery confirmation. Reachable time is specified in milliseconds. A value of zero means the time is unspecified by the router. This command can configure a single interface or a range of interfaces.

Default 0
Format `ipv6 nd reachable-time 0-4294967295`
Mode Interface Config

6.4.18.1 `no ipv6 nd reachable-time`

This command means reachable time is unspecified for the router.

Format `no ipv6 nd reachable-time`
Mode Interface Config

6.4.19 `ipv6 nd router-preference`

Use this command to configure default router preferences that the interface advertises in router advertisement messages.

Default medium
Format `ipv6 nd router-preference { low | medium | high }`
Mode Interface Config

6.4.19.1 `no ipv6 nd router-preference`

This command resets the router preference advertised by the interface to the default value.

Format `no ipv6 nd router-preference`
Mode Interface Config

6.4.20 `ipv6 nd suppress-ra`

This command suppresses router advertisement transmission on an interface or range of interfaces.

Default disabled
Format `ipv6 nd suppress-ra`
Mode Interface Config

6.4.20.1 `no ipv6 nd suppress-ra`

This command enables router transmission on an interface.

Format `no ipv6 nd suppress-ra`
Mode Interface Config

6.4.21 `ipv6 nd prefix`

Use the `ipv6 nd prefix` command to configure parameters associated with prefixes the router advertises in its router advertisements. The first optional parameter is the valid lifetime of the router, in seconds. You can specify a value or indicate that the lifetime value is infinite. The second optional parameter is the preferred lifetime of the router.

This command can be used to configure a single interface or a range of interfaces.

The router advertises its global IPv6 prefixes in its router advertisements (RAs). An RA only includes the prefixes of the IPv6 addresses configured on the interface where the RA is transmitted. Addresses are configured using the `ipv6 address` interface configuration command. Each prefix advertisement includes information about the prefix, such as its lifetime values and whether hosts should use the prefix for on-link determination or address auto-configuration. Use the `ipv6 nd prefix` command to configure these values.

The `ipv6 nd prefix` command allows you to preconfigure RA prefix values before you configure the associated interface address. In order for the prefix to be included in RAs, you must configure an address that matches the prefix using the `ipv6 address` command. Prefixes specified using `ipv6 nd prefix` without associated interface address will not be included in RAs and will not be committed to the device configuration.

Default	• valid-lifetime—2592000 • preferred-lifetime— 604800 • autoconfig—enabled • on-link—enabled
Format	<code>ipv6 nd prefix <i>prefix/prefix_Length</i> [{0-4294967295 infinite} {0-4294967295 infinite}] [no-autoconfig off-link]</code>
Mode	Interface Config

6.4.21.1 `no ipv6 nd prefix`

This command sets prefix configuration to default values.

Format	<code>no ipv6 nd prefix <i>prefix/prefix_Length</i></code>
Mode	Interface Config

6.4.22 `ipv6 neighbor`

Configures a static IPv6 neighbor with the given IPv6 address and MAC address on a routing or host interface.

Format	<code>ipv6 neighbor <i>ipv6address</i> {<i>sSlot/port</i> <i>vlan</i> 1-4093} <i>macaddr</i></code>
Mode	Global Config

Term	Definition
ipv6address	The IPv6 address of the neighbor.
slot/port	The <i>sSlot/port</i> for the interface.
vlan	The VLAN for the interface.
macaddr	The MAC address for the neighbor.

6.4.22.1 no ipv6 neighbor

Removes a static IPv6 neighbor with the given IPv6 address on a routing or host interface.

Format no ipv6 neighbor *ipv6address* {*slot/port*|*vlan 1-4093*}

Mode Global Config

6.4.23 ipv6 neighbors dynamicrenew

Use this command to automatically renew the IPv6 neighbor entries. Enables/disables the periodic NUD (neighbor unreachability detection) to be run on the existing IPv6 neighbor entries based on the activity of the entries in the hardware. If the setting is disabled, only those entries that are actively used in the hardware are triggered for NUD at the end of STALE timeout of 1200 seconds. If the setting is enabled, periodically every 40 seconds a set of 300 entries are triggered for NUD irrespective of their usage in the hardware.

Default Disabled

Format ipv6 neighbors dynamicrenew

Mode Global Config

6.4.23.1 no ipv6 neighbors dynamicrenew

Disables automatic renewing of IPv6 neighbor entries.

Format no ipv6 neighbors dynamicrenew

Mode Global Config

6.4.24 ipv6 nud

Use this command to configure Neighbor Unreachability Detection (NUD). NUD verifies that communication with a neighbor exists.

Format ipv6 nud {backoff-multiple | max-multicast-solicits | max-unicast-solicits}

Mode Global Config

Term	Definition
backoff-multiple	Sets the exponential backoff multiple to calculate time outs in NS transmissions during NUD. The value ranges from 1 to 5. 1 is the default. The next timeout value is limited to a maximum value of 60 seconds if the value with exponential backoff calculation is greater than 60 seconds.
max-multicast-solicits	Sets the maximum number of multicast solicits sent during Neighbor Unreachability Detection. The value ranges from 3 to 255. 3 is the default.
max-unicast-solicits	Sets the maximum number of unicast solicits sent during Neighbor Unreachability Detection. The value ranges from 3 to 10. 3 is the default.

6.4.25 ipv6 prefix-list

To create a prefix list or add a prefix list entry, use the `ipv6 prefix-list` command in Global Configuration mode. Prefix lists allow matching of route prefixes with those specified in the prefix list. Each prefix list includes a sequence of prefix list entries ordered by their sequence numbers. A router sequentially examines each prefix list entry to determine if the route's prefix matches that of the entry. An empty or nonexistent prefix list permits all prefixes. An implicit deny is assumed if a given prefix does not match any entries of a prefix list. Once a match or deny occurs the router does not go through the rest of the list. A prefix list may be used within a route map to match a route's prefix using the command "match ip address" on page 559".

Up to 128 prefix lists may be configured. The maximum number of statements allowed in prefix list is 64.

Default	No prefix lists are configured by default. When neither the ge nor the le option is configured, the destination prefix must match the network/length exactly. If the ge option is configured without the le option, any prefix with a network mask greater than or equal to the ge value is considered a match. Similarly, if the le option is configured without the ge option, a prefix with a network mask less than or equal to the le value is considered a match.
Format	<code>ip prefix-list list-name [{seq number} {permit deny} ipv6-prefix/prefix-length [ge Length] [le Length] renumber renumber-interval first-statement-number}</code>
Mode	Global Configuration

Parameter	Description
list-name	The text name of the prefix list. Up to 32 characters.
seq number	(Optional) The sequence number for this prefix list statement. Prefix list statements are ordered from lowest sequence number to highest and applied in that order. If you do not specify a sequence number, the system will automatically select a sequence number five larger than the last sequence number in the list. Two statements may not be configured with the same sequence number. The value ranges from 1 to 4,294,967,294.
permit	Permit routes whose destination prefix matches the statement.
deny	Deny routes whose destination prefix matches the statement.
ipv6-prefix/prefix-length	Specifies the match criteria for routes being compared to the prefix list statement. The ipv6-prefix can be any valid IP prefix. The length is any IPv6 prefix length from 0 to 32.
ge length	(Optional) If this option is configured, then a prefix is only considered a match if its network mask length is greater than or equal to this value. This value must be longer than the network length and less than or equal to 32.
le length	(Optional) If this option is configured, then a prefix is only considered a match if its network mask length is less than or equal to this value. This value must be longer than the ge length and less than or equal to 32.
renumber	(Optional) Provides the option to renumber the sequence numbers of the IP prefix list statements with a given interval starting from a particular sequence number. The valid range for <i>renumber-interval</i> is 1–100, and the valid range for <i>first-statement-number</i> is 1–1000.

6.4.25.1 no ip prefix-list

To delete a prefix list or a statement in a prefix list, use the **no** form of this command. The command **no ip prefix-list list-name** deletes the entire prefix list. To remove an individual statement from a prefix list, you must specify the statement exactly, with all its options.

Format	<code>no ip prefix-list list-name [seq number] {permit deny} network/length [ge Length] [le Length]</code>
Mode	Global Configuration

6.4.26 `ipv6 unreachable`

Use this command to enable the generation of ICMPv6 Destination Unreachable messages on the interface or range of interfaces. By default, the generation of ICMPv6 Destination Unreachable messages is enabled.

Default	enable
Format	<code>ipv6 unreachable</code>
Mode	Interface Config

6.4.26.1 `no ipv6 unreachable`

Use this command to prevent the generation of ICMPv6 Destination Unreachable messages.

Format	<code>no ipv6 unreachable</code>
Mode	Interface Config

6.4.27 `ipv6 unresolved-traffic`

Use this command to control the rate at which IPv6 data packets come into the CPU. By default, rate limiting is disabled. When enabled, the rate can range from 50 to 1024 packets per second.

Default	enable
Format	<code>ipv6 unresolved-traffic rate-limit <50-1024></code>
Mode	Global Config

6.4.27.1 `no ipv6 unresolved-traffic`

Use this command to disable the rate limiting.

Format	<code>no ipv6 unresolved-traffic rate-limit</code>
Mode	Global Config

6.4.28 `ipv6 icmp error-interval`

Use this command to limit the rate at which ICMPv6 error messages are sent. The rate limit is configured as a token bucket, with two configurable parameters, *burst-size* and *burst-interval*.

The *burst-interval* specifies how often the token bucket is initialized with *burst-size* tokens. *burst-interval* is from 0 to 2147483647 milliseconds (msec).

The *burst-size* is the number of ICMPv6 error messages that can be sent during one *burst-interval*. The range is from 1 to 200 messages.

To disable ICMP rate limiting, set *burst-interval* to zero (0).

Default	<i>burst-interval</i> of 1000 msec. <i>burst-size</i> of 100 messages
Format	<code>ipv6 icmp error-interval burst-interval [burst-size]</code>
Mode	Global Config

6.4.28.1 no ipv6 icmp error-interval

Use the **no** form of the command to return *burst-interval* and *burst-size* to their default values.

Format no ipv6 icmp error-interval

Mode Global Config

6.4.29 show ipv6 brief

Use this command to display the IPv6 status of forwarding mode and IPv6 unicast routing mode.

Format show ipv6 brief

Mode Privileged EXEC

Term	Definition
IPv6 Forwarding Mode	Shows whether the IPv6 forwarding mode is enabled.
IPv6 Unicast Routing Mode	Shows whether the IPv6 unicast routing mode is enabled.
IPv6 Hop Limit	Shows the unicast hop count used in IPv6 packets originated by the node. For more information, see "ipv6 hop-limit" on page 656".
ICMPv6 Rate Limit Error Interval	Shows how often the token bucket is initialized with burst-size tokens. For more information, see "ipv6 icmp error-interval" on page 667".
ICMPv6 Rate Limit Burst Size	Shows the number of ICMPv6 error messages that can be sent during one <i>burst-interval</i> . For more information, see "ipv6 icmp error-interval" on page 667".
Maximum Routes	Shows the maximum IPv6 route table size.
IPv6 Unresolved Data Rate Limit	Shows the rate in packets-per-second for the number of IPv6 data packets trapped to CPU when the packet fails to be forwarded in the hardware due to unresolved hardware address of the destined IPv6 node.
IPv6 Neighbors Dynamic Renew	Shows the dynamic renewal mode for the periodic NUD (neighbor unreachability detection) run on the existing IPv6 neighbor entries based on the activity of the entries in the hardware.
IPv6 NUD Maximum Unicast Solicits	Shows the maximum number of unicast Neighbor Solicitations sent during NUD (neighbor unreachability detection) before switching to multicast Neighbor Solicitations.
IPv6 NUD Maximum Multicast Solicits	Shows the maximum number of multicast Neighbor Solicitations sent during NUD (neighbor unreachability detection) when in UNREACHABLE state.
IPv6 NUD Exponential Backoff Multiple	Shows the exponential backoff multiple to be used in the calculation of the next timeout value for Neighbor Solicitation transmission during NUD (neighbor unreachability detection) following the exponential backoff algorithm.

Example: The following shows example CLI display output for the command.

(Switch) #show ipv6 brief

```
IPv6 Unicast Routing Mode..... Disable
IPv6 Hop Limit..... 0
ICMPv6 Rate Limit Error Interval..... 1000 msec
ICMPv6 Rate Limit Burst Size..... 100 messages
Maximum Routes..... 4096

IPv6 Unresolved Data Rate Limit..... 1024 pps
```

```
IPv6 Neighbors Dynamic Renew..... Disable
IPv6 NUD Maximum Unicast Solicits..... 3
IPv6 NUD Maximum Multicast Solicits..... 3
IPv6 NUD Exponential Backoff Multiple..... 1
```

6.4.30 show ipv6 interface

Use this command to show the usability status of IPv6 interfaces and whether ICMPv6 Destination Unreachable messages may be sent. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a *slot/port* format. The keyword **loopback** specifies the loopback interface directly. The keyword **tunnel** specifies the IPv6 tunnel interface.

Format show ipv6 interface {brief | *slot/port/vlan 1-4093/loopback 0-7/tunnel 0-7*}

Mode Privileged EXEC

If you use the *brief* parameter, the following information displays for all configured IPv6 interfaces:

Term	Definition
Interface	The interface in <i>slot/port</i> format.
IPv6 Operational Mode	Shows whether the mode is enabled or disabled.
IPv6 Address/Length	Shows the IPv6 address and length on interfaces with IPv6 enabled.
Method	Indicates how each IP address was assigned. The field contains one of the following values: • DHCP - The address is leased from a DHCP server. • Manual - The address is manually configured. Global addresses with no annotation are assumed to be manually configured.

If you specify an interface, the following information also appears.

Term	Definition
Routing Mode	Shows whether IPv6 routing is enabled or disabled.
IPv6 Enable Mode	Shows whether IPv6 is enabled on the interface.
Administrative Mode	Shows whether the interface administrative mode is enabled or disabled.
Bandwidth	Shows bandwidth of the interface.
Interface Maximum Transmission Unit	The MTU size, in bytes.
Router Duplicate Address Detection Transmits	The number of consecutive duplicate address detection probes to transmit.
Address Autoconfigure Mode	Shows whether the autoconfigure mode is enabled or disabled.
Address DHCP Mode	Shows whether the DHCPv6 client is enabled on the interface.
IPv6 Hop Limit Unspecified	Indicates if the router is configured on this interface to send Router Advertisements with unspecified (0) as the Current Hop Limit value.
Router Advertisement NS Interval	The interval, in milliseconds, between router advertisements for advertised neighbor solicitations.
Router Advertisement Lifetime	Shows the router lifetime value of the interface in router advertisements.
Router Advertisement Reachable Time	The amount of time, in milliseconds, to consider a neighbor reachable after neighbor discovery confirmation.
Router Advertisement Interval	The frequency, in seconds, that router advertisements are sent.

Term	Definition
Router Advertisement Managed Config Flag	Shows whether the managed configuration flag is set (enabled) for router advertisements on this interface.
Router Advertisement Other Config Flag	Shows whether the other configuration flag is set (enabled) for router advertisements on this interface.
Router Advertisement Router Preference	Shows the router preference.
Router Advertisement Suppress Flag	Shows whether router advertisements are suppressed (enabled) or sent (disabled).
IPv6 Destination Unreachables	Shows whether ICMPv6 Destination Unreachable messages may be sent (enabled) or not (disabled). For more information, see "ipv6 unreachable" on page 667".
ICMPv6 Redirect	Specifies if ICMPv6 redirect messages are sent back to the sender by the Router in the redirect scenario is enabled on this interface.

If an IPv6 prefix is configured on the interface, the following information also appears.

Term	Definition
IPv6 Prefix is	The IPv6 prefix for the specified interface.
Preferred Lifetime	The amount of time the advertised prefix is a preferred prefix.
Valid Lifetime	The amount of time the advertised prefix is valid.
Onlink Flag	Shows whether the onlink flag is set (enabled) in the prefix.
Autonomous Flag	Shows whether the autonomous address-configuration flag (autoconfig) is set (enabled) in the prefix.

Example: The following shows example CLI display output for the command.

(alpha-stack) #show ipv6 interface brief

```

Interface    Oper.   IPv6 Address/Length
-----
0/33         Enabled FE80::211:88FF:FE2A:3E3C/128
              2033::211:88FF:FE2A:3E3C/64
0/17         Enabled FE80::211:88FF:FE2A:3E3C/128
              2017::A42A:26DB:1049:43DD/128           [DHCP]
4/1          Enabled FE80::211:88FF:FE2A:3E3C/128
              2001::211:88FF:FE2A:3E3C/64           [AUTO]
4/2          Disabled FE80::211:88FF:FE2A:3E3C/128           [TENT]

```

Example: The following shows example CLI display output for the command.

(Switch) #show ipv6 interface 0/4/1

```

IPv6 is enabled
IPv6 Prefix is ..... fe80::210:18ff:fe00:1105/128
                      2001::1/64
Routing Mode..... Enabled
IPv6 Enable Mode..... Enabled
Administrative Mode..... Enabled
IPv6 Operational Mode..... Enabled
Bandwidth..... 10000 kbps
Interface Maximum Transmit Unit..... 1500
Router Duplicate Address Detection Transmits... 1
Address DHCP Mode..... Disabled
IPv6 Hop Limit Unspecified..... Enabled
Router Advertisement NS Interval..... 0
Router Advertisement Lifetime..... 1800
Router Advertisement Reachable Time..... 0
Router Advertisement Interval..... 600

```

```

Router Advertisement Managed Config Flag..... Disabled
Router Advertisement Other Config Flag..... Disabled
Router Advertisement Router Preference..... medium
Router Advertisement Suppress Flag..... Disabled
IPv6 Destination Unreachables..... Enabled
ICMPv6 Redirects..... Enabled

```

```

Prefix 2001::1/64
Preferred Lifetime..... 604800
Valid Lifetime..... 2592000
Onlink Flag..... Enabled
Autonomous Flag..... Enabled

```

6.4.31 show ipv6 interface vlan

Use the show ipv6 interface vlan in Privileged EXEC mode to show the usability status of IPv6 VLAN interfaces.

Format show ipv6 interface vlan *vlan-id* [prefix]

- Mode**
- Privileged EXEC
 - User EXEC

Parameter	Description
vlan-id	Valid VLAN ID
prefix	Display IPv6 Interface Prefix Information

6.4.32 show ipv6 dhcp interface

This command displays a list of all IPv6 addresses currently leased from a DHCP server on a specific in-band interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a *slot/port* format.

Format show ipv6 dhcp [interface {*slot/port/vlan 1-4093*}]

Modes Privileged EXEC

Term	Definition
Mode	Displays whether the specified interface is in Client mode or not.
State	State of the DHCPv6 Client on this interface. The valid values are: INACTIVE, SOLICIT, REQUEST, ACTIVE, RENEW, REBIND, RELEASE.
Server DUID	DHCPv6 Unique Identifier of the DHCPv6 Server on this interface.
T1 Time	The T1 time specified by the DHCPv6 server. After the client has held the address for this length of time, the client tries to renew the lease.
T2 Time	The T2 time specified by the DHCPv6 server. If the lease renewal fails, then when the client has held the lease for this length of time, the client sends a Rebind message to the server.
Interface IAID	An identifier for an identity association chosen by this client.
Leased Address	The IPv6 address leased by the DHCPv6 Server for this interface.
Preferred Lifetime	The preferred lifetime of the IPv6 address, as defined in RFC 2462.
Valid Lifetime	The valid lifetime of the IPv6 address, as defined by RFC 2462.
Renew Time	The time until the client tries to renew the lease

Term	Definition
Expiry Time	The time until the address expires.

6.4.33 show ipv6 nd raguard policy

This command shows the status of IPv6 RA GUARD feature on the switch. It lists the ports/interfaces on which this feature is enabled and the associated device role.

Format show ipv6 nd raguard policy

Mode Privileged EXEC

Term	Definition
Interface	The port/interface on which this feature is enabled.
Role	The associated device role for the interface.

Example:

(Switching) # show ipv6 nd raguard policy

Configured Interfaces

Interface	Role
-----	-----
Gi0/1	Host

6.4.34 show ipv6 neighbors

Use this command to display information about the IPv6 neighbors.

Format show ipv6 neighbor [interface {slot/port | vlan 1-4093 | tunnel 0-7} | ipv6-address]

Mode Privileged EXEC

Term	Definition
Interface	The interface in <i>slot/port</i> format.
IPv6 Address	IPv6 address of neighbor or interface.
MAC Address	Link-layer Address.
IsRtr	Shows whether the neighbor is a router. If the value is TRUE, the neighbor is known to be a router, and FALSE otherwise. A value of FALSE might mean that routers are not always <i>known</i> to be routers.
Neighbor State	State of neighbor cache entry. Possible values are Incomplete, Reachable, Stale, Delay, Probe, and Unknown.
Last Updated	The time in seconds that has elapsed since an entry was added to the cache.
Type	The type of neighbor entry. The type is Static if the entry is manually configured and Dynamic if dynamically resolved.

6.4.35 clear ipv6 neighbors

Use this command to clear all entries IPv6 neighbor table or an entry on a specific interface. Use the *slot/port* parameter to specify the interface.

Format `clear ipv6 neighbors [slot/port]`
Mode Privileged EXEC

6.4.36 `show ipv6 protocols`

This command lists a summary of the configuration and status for the active IPv6 routing protocols. The command lists routing protocols that are configured and enabled. If a protocol is selected on the command line, the display is limited to that protocol.

Format `show ipv6 protocols [ospf]`
Mode Privileged EXEC

Parameter	Description
Routing Protocol	OSPFv3.
Router ID	The router ID configured for OSPFv3.
OSPF Admin Mode	Whether OSPF is enabled or disabled globally.
Maximum Paths	The maximum number of next hops in an OSPF route.
Default Route Advertise	Whether OSPF is configured to originate a default route.
Always	Whether default advertisement depends on having a default route in the common routing table.
Metric	The metric configured to be advertised with the default route.
Metric Type	The metric type for the default route.

Example: The following shows example CLI display output for the command.

(Router) #show ipv6 protocols

```

Routing Protocol ..... OSPFv3
Router ID ..... 1.1.1.1
OSPF Admin Mode ..... Enable
Maximum Paths ..... 4
Distance ..... Intra 110 Inter 110 Ext 110

Default Route Advertise ..... Disabled
Always ..... FALSE
Metric ..... Not configured
Metric Type ..... External Type 2

Number of Active Areas ..... 0 (0 normal, 0 stub, 0 nssa)
ABR Status ..... Disable
ASBR Status ..... Disable

```

6.4.37 `show ipv6 route`

This command displays the IPv6 routing table. The *ipv6-address* specifies a specific IPv6 address for which the best-matching route would be displayed. The *ipv6-prefix/ipv6-prefix-length* specifies a specific IPv6 network for which the matching route would be displayed. The *interface* specifies that the routes with next-hops on the *interface* be displayed. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a *slot/port* format. The *protocol* specifies the protocol that installed the routes. The *protocol* is one of the following keywords: *connected*, *ospf*, *static*. The *all* specifies that all routes including best and nonbest routes are displayed. Otherwise, only the best routes are displayed.

**Note...**

If you use the *connected* keyword for *protocol*, the *all* option is not available because there are no best or nonbest connected routes.

Format	<code>show ipv6 route [{ipv6-address [protocol] {{ipv6-prefix/ipv6-prefix-length slot/port/vlan 1-4093} [protocol] protocol summary} [all] all}]</code>
Modes	• Privileged EXEC • User EXEC

Term	Definition
Route Codes	The key for the routing protocol codes that might appear in the routing table output.

The `show ipv6 route` command displays the routing tables in the following format:

Codes: C - connected, S - static

O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF Ext 1, OE2 - OSPF Ext 2

ON1 - OSPF NSSA Ext Type 1, ON2 - OSPF NSSA Ext Type 2, Truncated

The columns for the routing table display the following information:

Term	Definition
Code	The code for the routing protocol that created this routing entry.
Default Gateway	The IPv6 address of the default gateway. When the system does not have a more specific route to a packet's destination, it sends the packet to the default gateway.
IPv6-Prefix/IPv6-Prefix-Length	The IPv6-Prefix and prefix-length of the destination IPv6 network corresponding to this route.
Preference/Metric	The administrative distance (preference) and cost (metric) associated with this route. An example of this output is [1/0], where 1 is the preference and 0 is the metric.
Tag	The decimal value of the tag associated with a redistributed route, if it is not 0.
Next-Hop	The outgoing router IPv6 address to use when forwarding traffic to the next router (if any) in the path toward the destination.
Route-Timestamp	The last updated time for dynamic routes. The format of Route-Timestamp will be • Days:Hours:Minutes if days >= 1 • Hours:Minutes:Seconds if days < 1
Interface	The outgoing router interface to use when forwarding traffic to the next destination. For reject routes, the next hop interface would be Null0 interface.
T	A flag appended to an IPv6 route to indicate that it is an ECMP route, but only one of its next hops has been installed in the forwarding table. The forwarding table may limit the number of ECMP routes or the number of ECMP groups. When an ECMP route cannot be installed because such a limit is reached, the route is installed with a single next hop. Such truncated routes are identified by a T after the interface name.

To administratively control the traffic destined to a particular network and prevent it from being forwarded through the router, you can configure a static reject route on the router. Such traffic would be discarded and the ICMP destination unreachable message is sent back to the source. This is typically used for preventing routing loops. The reject route added in the RTO is of the type **OSPF Inter-Area**. Reject routes (routes of REJECT type installed by any protocol) are not redistributed by OSPF/RIP. Reject routes are supported in both OSPFv2 and OSPFv3.

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show ipv6 route

IPv6 Routing Table - 3 entries

Codes: C - connected, S - static

0 - OSPF Intra, OI - OSPF Inter, OE1 - OSPF Ext 1, OE2 - OSPF Ext 2

ON1 - OSPF NSSA Ext Type 1, ON2 - OSPF NSSA Ext Type 2

```
S 2001::/64 [10/0] directly connected, Null0
C 2003::/64 [0/0]
  via ::, 0/11
S 2005::/64 [1/0]
  via 2003::2, 0/11
C 5001::/64 [0/0]
  via ::, 0/5
OE1 6001::/64 [110/1]
  via fe80::200:42ff:fe7d:2f19, 00h:00m:23s, 0/5
OI 7000::/64 [110/6]
  via fe80::200:4fff:fe35:c8bb, 00h:01m:47s, 0/11
```

Example: The following shows example CLI display output for the command to indicate a truncated route.

(router) #show ipv6 route

IPv6 Routing Table - 2 entries

Codes: C - connected, S - static, 6To4 - 6to4 Route

0 - OSPF Intra, OI - OSPF Inter, OE1 - OSPF Ext 1, OE2 - OSPF Ext 2

ON1 - OSPF NSSA Ext Type 1, ON2 - OSPF NSSA Ext Type 2

```
C 2001:db9:1::/64 [0/0]
  via ::, 0/1
OI 3000::/64 [110/1]
  via fe80::200:e7ff:fe2e:ec3f, 00h:00m:11s, 0/1 T
```

6.4.38 show ipv6 route ecmp-groups

This command reports all current ECMP groups in the IPv6 routing table. An ECMP group is a set of two or more next hops used in one or more routes. The groups are numbered arbitrarily from 1 to n. The output indicates the number of next hops in the group and the number of routes that use the set of next hops. The output lists the IPv6 address and outgoing interface of each next hop in each group.

Format show ipv6 route ecmp-groups

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

(router) #show ipv6 route ecmp-groups

ECMP Group 1 with 2 next hops (used by 1 route)

2001:DB8:1::1 on interface 2/1

2001:DB8:2::14 on interface 2/2

ECMP Group 2 with 3 next hops (used by 1 route)

2001:DB8:4::15 on interface 2/32

2001:DB8:7::12 on interface 2/33

2001:DB8:9::45 on interface 2/34

6.4.39 show ipv6 route hw-failure

Use this command to display the routes that failed to be added to the hardware due to hash errors or a table full condition.

Format show ipv6 route hw-failure

Mode Privileged EXEC

Example: The following example displays the command output.

(Routing) #show ipv6 route connected

IPv6 Routing Table - 2 entries

Codes: C - connected, S - static, 6To4 - 6to4 Route, B - BGP Derived
 O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF Ext 1, OE2 - OSPF Ext 2
 ON1 - OSPF NSSA Ext Type 1, ON2 - OSPF NSSA Ext Type 2, K - kernel
 P - Net Prototype

```
C 2001::/128 [0/0]
  via ::, 0/1
C 2005::/128 [0/0]
  via ::, 0/2
```

(Routing) #show ipv6 route hw-failure

IPv6 Routing Table - 4 entries

Codes: C - connected, S - static, 6To4 - 6to4 Route, B - BGP Derived
 O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF Ext 1, OE2 - OSPF Ext 2
 ON1 - OSPF NSSA Ext Type 1, ON2 - OSPF NSSA Ext Type 2, K - kernel
 P - Net Prototype

```
P 3001::/64 [0/1]
  via 2001::4, 00h:00m:04s, 0/1 hw-failure
P 3001:0:0:1::/64 [0/1]
  via 2001::4, 00h:00m:04s, 0/1 hw-failure
P 3001:0:0:2::/64 [0/1]
  via 2001::4, 00h:00m:04s, 0/1 hw-failure
P 3001:0:0:3::/64 [0/1]
  via 2001::4, 00h:00m:04s, 0/1 hw-failure
```

6.4.40 show ipv6 route net-prototype

This command displays the net-prototype routes. The net-prototype routes are displayed with a P.

Format show ipv6 route net-prototype

Modes Privileged EXEC

Example:

(Routing) #show ipv6 route net-prototype

IPv6 Routing Table - 2 entries

Codes: C - connected, S - static, 6To4 - 6to4 Route, B - BGP Derived
 O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF Ext 1, OE2 - OSPF Ext 2
 ON1 - OSPF NSSA Ext Type 1, ON2 - OSPF NSSA Ext Type 2, K - kernel
 P - Net Prototype

```
P 3001::/64 [0/1]
```

```

    via 2001::4, 00h:00m:04s, 0/1
P  3001:0:0:1::/64 [0/1]
    via 2001::4, 00h:00m:04s, 0/1

```

6.4.41 show ipv6 route preferences

Use this command to show the preference value associated with the type of route. Lower numbers have a greater preference. A route with a preference of 255 cannot be used to forward traffic.

Format show ipv6 route preferences

Mode Privileged EXEC

Term	Definition
Local	Preference of directly-connected routes.
Static	Preference of static routes.
OSPF Intra	Preference of routes within the OSPF area.
OSPF Inter	Preference of routes to other OSPF routes that are outside of the area.
OSPF External	Preference of OSPF external routes.

6.4.42 show ipv6 route summary

This command displays a summary of the state of the routing table. When the optional **all** keyword is given, some statistics, such as the number of routes from each source, include counts for alternate routes. An alternate route is a route that is not the most preferred route to its destination and therefore is not installed in the forwarding table. To include only the number of best routes, do not use the optional keyword.

Format show ipv6 route summary [**all**]

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Connected Routes	Total number of connected routes in the routing table.
Static Routes	Total number of static routes in the routing table.
OSPF Routes	Total number of routes installed by OSPFv3 protocol.
Reject Routes	Total number of reject routes installed by all protocols.
Number of Prefixes	Summarizes the number of routes with prefixes of different lengths.
Total Routes	The total number of routes in the routing table.
Best Routes	The number of best routes currently in the routing table. This number only counts the best route to each destination.
Alternate Routes	The number of alternate routes currently in the routing table. An alternate route is a route that was not selected as the best route to its destination.
Route Adds	The number of routes that have been added to the routing table.
Route Modifies	The number of routes that have been changed after they were initially added to the routing table.
Route Deletes	The number of routes that have been deleted from the routing table.
Unresolved Route Adds	The number of route adds that failed because none of the route's next hops were on a local subnet. Note that static routes can fail to be added to the routing table at startup because the routing interfaces are not yet up. This counter gets incremented in this case. The static routes are added to the routing table when the routing interfaces come up.

Term	Definition
Invalid Route Adds	The number of routes that failed to be added to the routing table because the route was invalid. A log message is written for each of these failures.
Failed Route Adds	The number of routes that failed to be added to the routing table because of a resource limitation in the routing table.
Reserved Locals	The number of routing table entries reserved for a local subnet on a routing interface that is down. Space for local routes is always reserved so that local routes can be installed when a routing interface bounces.
Unique Next Hops	The number of distinct next hops used among all routes currently in the routing table. These include local interfaces for local routes and neighbors for indirect routes.
Unique Next Hops High Water	The highest count of unique next hops since counters were last cleared.
Next Hop Groups	The current number of next hop groups in use by one or more routes. Each next hop group includes one or more next hops.
Next Hop Groups High Water	The highest count of next hop groups since counters were last cleared.
ECMP Groups	The number of next hop groups with multiple next hops.
ECMP Routes	The number of routes with multiple next hops currently in the routing table.
Truncated ECMP Routes	The number of ECMP routes that are currently installed in the forwarding table with just one next hop. The forwarding table may limit the number of ECMP routes or the number of ECMP groups. When an ECMP route cannot be installed because such a limit is reached, the route is installed with a single next hop.
ECMP Retries	The number of ECMP routes that have been installed in the forwarding table after initially being installed with a single next hop.
Routes with n Next Hops	The current number of routes with each number of next hops.

Example: The following shows example CLI display output for the command.

(FASTPATH Routing) #show ipv6 route summary

```

Connected Routes..... 4
Static Routes..... 0
6To4 Routes..... 0
BGP Routes..... 10
  External..... 0
  Internal..... 10
  Local..... 0
OSPF Routes..... 13
  Intra Area Routes..... 0
  Inter Area Routes..... 13
  External Type-1 Routes..... 0
  External Type-2 Routes..... 0
Reject Routes..... 0
Total routes..... 17

Best Routes (High)..... 17 (17)
Alternate Routes..... 0
Route Adds..... 44
Route Deletes..... 27
Unresolved Route Adds..... 0
Invalid Route Adds..... 0
Failed Route Adds..... 0
Reserved Locals..... 0

Unique Next Hops (High)..... 8 (8)
Next Hop Groups (High)..... 8 (8)
ECMP Groups (High)..... 3 (3)
ECMP Routes..... 12
Truncated ECMP Routes..... 0
ECMP Retries..... 0

```

```

Routes with 1 Next Hop..... 5
Routes with 2 Next Hops..... 1
Routes with 3 Next Hops..... 1
Routes with 4 Next Hops..... 10

```

```

Number of Prefixes:
/64: 17

```

6.4.43 show ipv6 snooping counters

This command displays the counters associated with IPv6 RA GUARD feature. The number of router advertisement and router redirect packets dropped by the switch globally due to RA GUARD feature are displayed in the command output.

Format show ipv6 snooping counters

Modes

- Privileged EXEC
- Global Config

Example:

```
(Switching) # show ipv6 snooping counters
```

IPv6 Dropped Messages

RA(Router Advertisement - ICMP type 134)

REDIR(Router Redirect - ICMP type 137)

```

RA          Redir
-----
0           0

```

6.4.44 show ipv6 vlan

This command displays IPv6 VLAN routing interface addresses.

Format show ipv6 vlan

Modes

- Privileged EXEC
- User EXEC

Term	Definition
MAC Address used by Routing VLANs	Shows the MAC address.

The rest of the output for this command is displayed in a table with the following column headings:

Column Headings	Definition
VLAN ID	The VLAN ID of a configured VLAN.
Logical Interface	The interface in <i>sSlot/port</i> format that is associated with the VLAN ID.
IPv6 Address/ Prefix Length	The IPv6 prefix and prefix length associated with the VLAN ID.

6.4.45 show ipv6 traffic

Use this command to show traffic and statistics for IPv6 and ICMPv6. Specify a logical, loopback, or tunnel interface to view information about traffic on a specific interface. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format. If you do not specify an interface, the command displays information about traffic on all interfaces.

Format show ipv6 traffic [{*slot/port/vlan 1-4093* | *loopback loopback-id* | *tunnel tunnel-id*}]

Mode Privileged EXEC

Term	Definition
Total Datagrams Received	Total number of input datagrams received by the interface, including those received in error.
Received Datagrams Locally Delivered	Total number of datagrams successfully delivered to IPv6 user-protocols (including ICMP). This counter increments at the interface to which these datagrams were addressed, which might not necessarily be the input interface for some of the datagrams.
Received Datagrams Discarded Due To Header Errors	Number of input datagrams discarded due to errors in their IPv6 headers, including version number mismatch, other format errors, hop count exceeded, errors discovered in processing their IPv6 options, etc.
Received Datagrams Discarded Due To MTU	Number of input datagrams that could not be forwarded because their size exceeded the link MTU of outgoing interface.
Received Datagrams Discarded Due To No Route	Number of input datagrams discarded because no route could be found to transmit them to their destination.
Received Datagrams With Unknown Protocol	Number of locally-addressed datagrams received successfully but discarded because of an unknown or unsupported protocol. This counter increments at the interface to which these datagrams were addressed, which might not be necessarily the input interface for some of the datagrams.
Received Datagrams Discarded Due To Invalid Address	Number of input datagrams discarded because the IPv6 address in their IPv6 header's destination field was not a valid address to be received at this entity. This count includes invalid addresses (for example, <code>::0</code>) and unsupported addresses (for example, addresses with unallocated prefixes). For entities which are not IPv6 routers and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
Received Datagrams Discarded Due To Truncated Data	Number of input datagrams discarded because datagram frame didn't carry enough data.
Received Datagrams Discarded Other	Number of input IPv6 datagrams for which no problems were encountered to prevent their continue processing, but which were discarded (e.g., for lack of buffer space). Note that this counter does not include datagrams discarded while awaiting re-assembly.
Received Datagrams Reassembly Required	Number of IPv6 fragments received which needed to be reassembled at this interface. Note that this counter increments at the interface to which these fragments were addressed, which might not be necessarily the input interface for some of the fragments.
Datagrams Successfully Reassembled	Number of IPv6 datagrams successfully reassembled. Note that this counter increments at the interface to which these datagrams were addressed, which might not be necessarily the input interface for some of the fragments.
Datagrams Failed To Reassemble	Number of failures detected by the IPv6 reassembly algorithm (for whatever reason: timed out, errors, etc.). Note that this is not necessarily a count of discarded IPv6 fragments since some algorithms (notably the algorithm in by combining them as they are received. This counter increments at the interface to which these fragments were addressed, which might not be necessarily the input interface for some of the fragments.

Term	Definition
Datagrams Forwarded	Number of output datagrams which this entity received and forwarded to their final destinations. In entities which do not act as IPv6 routers, this counter will include only those packets which were Source-Routed via this entity, and the Source-Route processing was successful. Note that for a successfully forwarded datagram the counter of the outgoing interface increments.
Datagrams Locally Transmitted	Total number of IPv6 datagrams which local IPv6 user-protocols (including ICMP) supplied to IPv6 in requests for transmission. Note that this counter does not include any datagrams counted in <code>ipv6IfStatsOutForwDatagrams</code> .
Datagrams Transmit Failed	Number of output IPv6 datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded (e.g., for lack of buffer space). Note that this counter would include datagrams counted in <code>ipv6IfStatsOutForwDatagrams</code> if any such packets met this (discretionary) discard criterion.
Fragments Created	Number of output datagram fragments that have been generated as a result of fragmentation at this output interface.
Datagrams Successfully Fragmented	Number of IPv6 datagrams that have been successfully fragmented at this output interface.
Datagrams Failed To Fragment	Number of IPv6 datagrams that have been discarded because they needed to be fragmented at this output interface but could not be.
Fragments Created	The number of fragments that were created.
Multicast Datagrams Received	Number of multicast packets received by the interface.
Multicast Datagrams Transmitted	Number of multicast packets transmitted by the interface.
Total ICMPv6 messages received	Total number of ICMP messages received by the interface which includes all those counted by <code>ipv6IfIcmpInErrors</code> . Note that this interface is the interface to which the ICMP messages were addressed which may not be necessarily the input interface for the messages.
ICMPv6 Messages with errors	Number of ICMP messages which the interface received but determined as having ICMP-specific errors (bad ICMP checksums, bad length, etc.).
ICMPv6 Destination Unreachable Messages Received	Number of ICMP Destination Unreachable messages received by the interface.
ICMPv6 Messages Prohibited Administratively Received	Number of ICMP destination unreachable/communication administratively prohibited messages received by the interface.
ICMPv6 Time Exceeded Messages Received	Number of ICMP Time Exceeded messages received by the interface.
ICMPv6 Parameter Problem Messages Received	Number of ICMP Parameter Problem messages received by the interface.
ICMPv6 Packet Too Big Messages Received	Number of ICMP Packet Too Big messages received by the interface.
ICMPv6 Echo Request Messages Received	Number of ICMP Echo (request) messages received by the interface.
ICMPv6 Echo Reply Messages Received	Number of ICMP Echo Reply messages received by the interface.
ICMPv6 Router Solicit Messages Received	Number of ICMP Router Solicit messages received by the interface.
ICMPv6 Router Advertisement Messages Received	Number of ICMP Router Advertisement messages received by the interface.
ICMPv6 Neighbor Solicit Messages Received	Number of ICMP Neighbor Solicit messages received by the interface.
ICMPv6 Neighbor Advertisement Messages Received	Number of ICMP Neighbor Advertisement messages received by the interface.
ICMPv6 Redirect Messages Received	Number of Redirect messages received by the interface.

Term	Definition
ICMPv6 Group Membership Query Messages Received	Number of ICMPv6 Group Membership Query messages received by the interface.
ICMPv6 Group Membership Response Messages Received	Number of ICMPv6 Group Membership response messages received by the interface.
ICMPv6 Group Membership Reduction Messages Received	Number of ICMPv6 Group Membership reduction messages received by the interface.
Total ICMPv6 Messages Transmitted	Total number of ICMP messages which this interface attempted to send. Note that this counter includes all those counted by icmpOutErrors.
ICMPv6 Messages Not Transmitted Due To Error	Number of ICMP messages which this interface did not send due to problems discovered within ICMP such as a lack of buffers. This value should not include errors discovered outside the ICMP layer such as the inability of IPv6 to route the resultant datagram. In some implementations there may be no types of error which contribute to this counter's value.
ICMPv6 Destination Unreachable Messages Transmitted	Number of ICMP Destination Unreachable messages sent by the interface.
ICMPv6 Messages Prohibited Administratively Transmitted	Number of ICMP destination unreachable/communication administratively prohibited messages sent.
ICMPv6 Time Exceeded Messages Transmitted	Number of ICMP Time Exceeded messages sent by the interface.
ICMPv6 Parameter Problem Messages Transmitted	Number of ICMP Parameter Problem messages sent by the interface.
ICMPv6 Packet Too Big Messages Transmitted	Number of ICMP Packet Too Big messages sent by the interface.
ICMPv6 Echo Request Messages Transmitted	Number of ICMP Echo (request) messages sent by the interface. ICMP echo messages sent.
ICMPv6 Echo Reply Messages Transmitted	Number of ICMP Echo Reply messages sent by the interface.
ICMPv6 Router Solicit Messages Transmitted	Number of ICMP Router Solicitation messages sent by the interface.
ICMPv6 Router Advertisement Messages Transmitted	Number of ICMP Router Advertisement messages sent by the interface.
ICMPv6 Neighbor Solicit Messages Transmitted	Number of ICMP Neighbor Solicitation messages sent by the interface.
ICMPv6 Neighbor Advertisement Messages Transmitted	Number of ICMP Neighbor Advertisement messages sent by the interface.
ICMPv6 Redirect Messages Received	Number of Redirect messages sent. For a host, this object will always be zero, since hosts do not send redirects.
ICMPv6 Group Membership Query Messages Transmitted	Number of ICMPv6 Group Membership Query messages sent.
ICMPv6 Group Membership Response Messages Transmitted	Number of ICMPv6 Group Membership Response messages sent.
ICMPv6 Group Membership Reduction Messages Transmitted	Number of ICMPv6 Group Membership Reduction messages sent.
ICMPv6 Duplicate Address Detects	Number of duplicate addresses detected by the interface.

6.4.46 clear ipv6 route counters

The command resets to zero the IPv6 routing table counters reported in the command "show ipv6 route summary" on page 677". The command only resets event counters. Counters that report the current state of the routing table, such as the number of routes of each type, are not reset.

Format clear ipv6 route counters

Mode Privileged EXEC

6.4.47 clear ipv6 snooping counters

This command clears the counters associated with IPv6 RA GUARD feature.

Format clear ipv6 snooping counters

Mode

- Privileged EXEC
- Global Config

6.4.48 clear ipv6 statistics

Use this command to clear IPv6 statistics for all interfaces or for a specific interface, including loopback and tunnel interfaces. IPv6 statistics display in the output of the show ipv6 traffic command. If you do not specify an interface, the counters for all IPv6 traffic statistics reset to zero.

Format clear ipv6 statistics [{slot/port | loopback loopback-id | tunnel tunnel-id}]

Mode Privileged EXEC

6.5 OSPFv3 Commands

This section describes the commands you use to configure OSPFv3, which is a link-state routing protocol that you use to route traffic within a network. This section includes the following subsections:

- "Global OSPFv3 Commands" on page 683"
- "OSPFv3 Interface Commands" on page 696"
- "OSPFv3 Graceful Restart Commands" on page 701"
- "OSPFv3 Stub Router Commands" on page 703"
- "OSPFv3 Show Commands" on page 704"

Global OSPFv3 Commands

6.5.1 ipv6 router ospf

Use this command to enter Router OSPFv3 Config mode.

Format router ospf

Mode Global Config

6.5.2 area default-cost (OSPFv3)

This command configures the monetary default cost for the stub area. The operator must specify the area id and an integer value between 1–16777215.

Format `area areaid default-cost 1-16777215`
Mode Router OSPFv3 Config

6.5.3 `area nssa (OSPFv3)`

This command configures the specified *areaid* to function as an NSSA.

Format `area areaid nssa`
Mode Router OSPFv3 Config

6.5.3.1 `no area nssa`

This command disables *nssa* from the specified area id.

Format `no area areaid nssa`
Mode Router OSPFv3 Config

6.5.4 `area nssa default-info-originate (OSPFv3)`

This command configures the metric value and type for the default route advertised into the NSSA. The optional metric parameter specifies the metric of the default route and is to be in a range of 1-16777214. If no metric is specified, the default value is 10. The metric type can be comparable (*nssa-external 1*) or noncomparable (*nssa-external 2*).

Format `area areaid nssa default-info-originate [metric] [{comparable | non-comparable}]`
Mode Router OSPFv3 Config

6.5.4.1 `no area nssa default-info-originate (OSPFv3)`

This command disables the default route advertised into the NSSA.

Format `no area areaid nssa default-info-originate [metric] [{comparable | non-comparable}]`
Mode Router OSPFv3 Config

6.5.5 `area nssa no-redistribute (OSPFv3)`

This command configures the NSSA ABR so that learned external routes will not be redistributed to the NSSA.

Format `area areaid nssa no-redistribute`
Mode Router OSPFv3 Config

6.5.5.1 `no area nssa no-redistribute (OSPFv3)`

This command disables the NSSA ABR so that learned external routes are redistributed to the NSSA.

Format `no area areaid nssa no-redistribute`
Mode Router OSPFv3 Config

6.5.6 area nssa no-summary (OSPFv3)

This command configures the NSSA so that summary LSAs are not advertised into the NSSA.

Format area *areaid* nssa no-summary

Mode Router OSPFv3 Config

6.5.6.1 no area nssa no-summary (OSPFv3)

This command disables nssa from the summary LSAs.

Format no area *areaid* nssa no-summary

Mode Router OSPFv3 Config

6.5.7 area nssa translator-role (OSPFv3)

This command configures the translator role of the NSSA. A value of *always* causes the router to assume the role of the translator the instant it becomes a border router and a value of *candidate* causes the router to participate in the translator election process when it attains border router status.

Format area *areaid* nssa translator-role {always | candidate}

Mode Router OSPFv3 Config

6.5.7.1 no area nssa translator-role (OSPFv3)

This command disables the nssa translator role from the specified area id.

Format no area *areaid* nssa translator-role {always | candidate}

Mode Router OSPFv3 Config

6.5.8 area nssa translator-stab-intv (OSPFv3)

This command configures the translator *stabilityinterval* of the NSSA. The *stabilityinterval* is the period of time that an elected translator continues to perform its duties after it determines that its translator status has been deposed by another router.

Format area *areaid* nssa translator-stab-intv *stabilityinterval*

Mode Router OSPFv3 Config

6.5.8.1 no area nssa translator-stab-intv (OSPFv3)

This command disables the nssa translator's *stabilityinterval* from the specified area id.

Format no area *areaid* nssa translator-stab-intv *stabilityinterval*

Mode Router OSPFv3 Config

6.5.9 area range (OSPFv3)

Use this command to configure a summary prefix that an area border router advertises for a specific area.

Default	No area ranges are configured by default. No cost is configured by default.
Format	area <i>area-id</i> range <i>prefix netmask</i> {summarylink nssaexternallink} [advertise not-advertise] [cost <i>cost</i>]
Mode	Router OSPFv3 Config

Parameter	Description
area-id	The area identifier for the area whose networks are to be summarized.
prefix netmask	The summary prefix to be advertised when the ABR computes a route to one or more networks within this prefix in this area.
summarylink	When this keyword is given, the area range is used when summarizing prefixes advertised in type 3 summary LSAs.
nssaexternallink	When this keyword is given, the area range is used when translating type 7 LSAs to type 5 LSAs.
advertise	[Optional] When this keyword is given, the summary prefix is advertised when the area range is active. This is the default.
not-advertise	[Optional] When this keyword is given, neither the summary prefix nor the contained prefixes are advertised when the area range is active. When the not-advertise option is given, any static cost previously configured is removed from the system configuration.
cost	[Optional] If an optional cost is given, OSPF sets the metric field in the inter-area -prefix LSA to the configured value rather than setting the metric to the largest cost among the networks covered by the area range.

6.5.9.1 no area range

The **no** form of this command to delete a summary prefix or remove a static cost.

Format	no area <i>areaid</i> range <i>prefix netmask</i> {summarylink nssaexternallink} cost
Mode	Router OSPFv3 Config

6.5.10 area stub (OSPFv3)

This command creates a stub area for the specified area ID. A stub area is characterized by the fact that AS External LSAs are not propagated into the area. Removing AS External LSAs and Summary LSAs can significantly reduce the link state database of routers within the stub area.

Format	area <i>areaid</i> stub
Mode	Router OSPFv3 Config

6.5.10.1 no area stub

This command deletes a stub area for the specified area ID.

Format	no area <i>areaid</i> stub
Mode	Router OSPFv3 Config

6.5.11 area stub no-summary (OSPFv3)

This command disables the import of Summary LSAs for the stub area identified by *areaid*.

Default	enabled
Format	area <i>areaid</i> stub no-summary
Mode	Router OSPFv3 Config

6.5.11.1 no area stub no-summary

This command sets the Summary LSA import mode to the default for the stub area identified by *areaid*.

Format	no area <i>areaid</i> stub summarylsa
Mode	Router OSPFv3 Config

6.5.12 area virtual-link (OSPFv3)

This command creates the OSPF virtual interface for the specified *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	area <i>areaid</i> virtual-link <i>neighbor</i>
Mode	Router OSPFv3 Config

6.5.12.1 no area virtual-link

This command deletes the OSPF virtual interface from the given interface, identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	no area <i>areaid</i> virtual-link <i>neighbor</i>
Mode	Router OSPFv3 Config

6.5.13 area virtual-link dead-interval (OSPFv3)

This command configures the dead interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 1 to 65535.

Default	40
Format	area <i>areaid</i> virtual-link <i>neighbor</i> dead-interval <i>seconds</i>
Mode	Router OSPFv3 Config

6.5.13.1 no area virtual-link dead-interval

This command configures the default dead interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	no area <i>areaid</i> virtual-link <i>neighbor</i> dead-interval
Mode	Router OSPFv3 Config

6.5.14 area virtual-link hello-interval (OSPFv3)

This command configures the hello interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 1 to 65535.

Default 10
Format area *areaid* virtual-link *neighbor* hello-interval *seconds*
Mode Router OSPFv3 Config

6.5.14.1 no area virtual-link hello-interval

This command configures the default hello interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format no area *areaid* virtual-link *neighbor* hello-interval
Mode Router OSPFv3 Config

6.5.15 area virtual-link retransmit-interval (OSPFv3)

This command configures the retransmit interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 0 to 3600.

Default 5
Format area *areaid* virtual-link *neighbor* retransmit-interval *seconds*
Mode Router OSPFv3 Config

6.5.15.1 no area virtual-link retransmit-interval

This command configures the default retransmit interval for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format no area *areaid* virtual-link *neighbor* retransmit-interval
Mode Router OSPFv3 Config

6.5.16 area virtual-link transmit-delay (OSPFv3)

This command configures the transmit delay for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 0 to 3600 (1 hour).

Default 1
Format area *areaid* virtual-link *neighbor* transmit-delay *seconds*
Mode Router OSPFv3 Config

6.5.16.1 no area virtual-link transmit-delay

This command configures the default transmit delay for the OSPF virtual interface on the virtual interface identified by *areaid* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format `no area areaid virtual-link neighbor transmit-delay`
Mode Router OSPFv3 Config

6.5.17 `auto-cost (OSPFv3)`

By default, OSPF computes the link cost of each interface from the interface bandwidth. Faster links have lower metrics, making them more attractive in route selection. The configuration parameters in the `auto-cost` `reference` `bandwidth` and `bandwidth` commands give you control over the default link cost. You can configure for OSPF an interface bandwidth that is independent of the actual link speed. A second configuration parameter allows you to control the ratio of interface bandwidth to link cost. The link cost is computed as the ratio of a reference bandwidth to the interface bandwidth ($\text{ref\_bw} / \text{interface bandwidth}$), where interface bandwidth is defined by the `bandwidth` command. Because the default reference bandwidth is 100 Mbps, OSPF uses the same default link cost for all interfaces whose bandwidth is 100 Mbps or greater. Use the `auto-cost` command to change the reference bandwidth, specifying the reference bandwidth in megabits per second (Mbps). The reference bandwidth range is 1–4294967 Mbps.

Default 100Mbps
Format `auto-cost reference-bandwidth 1-4294967`
Mode Router OSPFv3 Config

6.5.17.1 `no auto-cost reference-bandwidth (OSPFv3)`

Use this command to set the reference bandwidth to the default value.

Format `no auto-cost reference-bandwidth`
Mode Router OSPFv3 Config

6.5.18 `clear ipv6 ospf`

Use this command to disable and re-enable OSPF.

Format `clear ipv6 ospf`
Mode Privileged EXEC

6.5.19 `clear ipv6 ospf configuration`

Use this command to reset the OSPF configuration to factory defaults.

Format `clear ipv6 ospf configuration`
Mode Privileged EXEC

6.5.20 `clear ipv6 ospf counters`

Use this command to reset global and interface statistics.

Format `clear ipv6 ospf counters`
Mode Privileged EXEC

6.5.21 clear ipv6 ospf neighbor

Use this command to drop the adjacency with all OSPF neighbors. On each neighbor's interface, send a one-way hello. Adjacencies may then be re-established. To drop all adjacencies with a specific router ID, specify the neighbor's Router ID using the optional parameter *[neighbor-id]*.

Format clear ipv6 ospf neighbor *[neighbor-id]*

Mode Privileged EXEC

6.5.22 clear ipv6 ospf neighbor interface

To drop adjacency with all neighbors on a specific interface, use the optional parameter *[slot/port]*. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a *slot/port* format. To drop adjacency with a specific router ID on a specific interface, use the optional parameter *[neighbor-id]*.

Format clear ipv6 ospf neighbor interface *[slot/port|vlan 1-4093] [neighbor-id]*

Mode Privileged EXEC

6.5.23 clear ipv6 ospf redistribution

Use this command to flush all self-originated external LSAs. Reapply the redistribution configuration and re-originate prefixes as necessary.

Format clear ipv6 ospf redistribution

Mode Privileged EXEC

6.5.24 default-information originate (OSPFv3)

This command is used to control the advertisement of default routes.

Default

- metric—unspecified
- type—2

Format default-information originate *[always] [metric 0-16777214] [metric-type {1 | 2}]*

Mode Router OSPFv3 Config

6.5.24.1 no default-information originate (OSPFv3)

This command is used to control the advertisement of default routes.

Format no default-information originate *[metric] [metric-type]*

Mode Router OSPFv3 Config

6.5.25 default-metric (OSPFv3)

This command is used to set a default for the metric of distributed routes.

Format default-metric *1-16777214*

Mode Router OSPFv3 Config

6.5.25.1 no default-metric (OSPFv3)

This command is used to set a default for the metric of distributed routes.

Format no default-metric

Mode Router OSPFv3 Config

6.5.26 distance ospf (OSPFv3)

This command sets the route preference value of OSPF route types in the router. Lower route preference values are preferred when determining the best route. The type of OSPF route can be intra, inter, or external. All the external type routes are given the same preference value. The range of *preference* value is 1 to 255.

Default 110

Format distance ospf {intra-area 1-255 | inter-area 1-255 | external 1-255}

Mode Router OSPFv3 Config

6.5.26.1 no distance ospf

This command sets the default route preference value of OSPF routes in the router. The type of OSPF route can be intra, inter, or external. All the external type routes are given the same preference value.

Format no distance ospf {intra-area | inter-area | external}

Mode Router OSPFv3 Config

6.5.27 enable (OSPFv3)

This command resets the default administrative mode of OSPF in the router (active).

Default enabled

Format enable

Mode Router OSPFv3 Config

6.5.27.1 no enable (OSPFv3)

This command sets the administrative mode of OSPF in the router to inactive.

Format no enable

Mode Router OSPFv3 Config

6.5.28 exit-overflow-interval (OSPFv3)

This command configures the exit overflow interval for OSPF. It describes the number of seconds after entering Overflow state that a router will wait before attempting to leave the overflow state. This allows the router to again originate nondefault AS-external-LSAs. When set to 0, the router will not leave overflow state until restarted. The range for *seconds* is 0 to 2147483647 seconds.

Default 0

Format exit-overflow-interval seconds

Mode Router OSPFv3 Config

6.5.28.1 no exit-overflow-interval

This command configures the default exit overflow interval for OSPF.

Format no exit-overflow-interval

Mode Router OSPFv3 Config

6.5.29 external-lsdb-limit (OSPFv3)

This command configures the external LSDB limit for OSPF. If the value is -1, then there is no limit. When the number of nondefault AS-external-LSAs in a router's link-state database reaches the external LSDB limit, the router enters overflow state. The router never holds more than the external LSDB limit nondefault AS-external-LSAs in its database. The external LSDB limit MUST be set identically in all routers attached to the OSPF backbone and/or any regular OSPF area. The range for *limit* is -1 to 2147483647.

Default -1

Format external-lsdb-limit *limit*

Mode Router OSPFv3 Config

6.5.29.1 no external-lsdb-limit

This command configures the default external LSDB limit for OSPF.

Format no external-lsdb-limit

Mode Router OSPFv3 Config

6.5.30 maximum-paths (OSPFv3)

This command sets the number of paths that OSPF can report for a given destination where *maxpaths* is platform dependent.

Default 4

Format maximum-paths *maxpaths*

Mode Router OSPFv3 Config

6.5.30.1 no maximum-paths

This command resets the number of paths that OSPF can report for a given destination back to its default value.

Format no maximum-paths

Mode Router OSPFv3 Config

6.5.31 passive-interface default (OSPFv3)

Use this command to enable global passive mode by default for all interfaces. It overrides any interface level passive mode. OSPF shall not form adjacencies over a passive interface.

Default disabled

Format passive-interface default

Mode Router OSPFv3 Config

6.5.31.1 no passive-interface default

Use this command to disable the global passive mode by default for all interfaces. Any interface previously configured to be passive reverts to nonpassive mode.

Format no passive-interface default

Mode Router OSPFv3 Config

6.5.32 passive-interface (OSPFv3)

Use this command to set the interface or tunnel as passive. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format. It overrides the global passive mode that is currently effective on the interface or tunnel.

Default disabled

Format passive-interface {*slot/port/vlan 1-4093*|tunnel *tunnel-id*}

Mode Router OSPFv3 Config

6.5.32.1 no passive-interface

Use this command to set the interface or tunnel as nonpassive. It overrides the global passive mode that is currently effective on the interface or tunnel.

Format no passive-interface {*slot/port/vlan 1-4093*|tunnel *tunnel-id*}

Mode Router OSPFv3 Config

6.5.33 redistribute (OSPFv3)

This command configures the OSPFv3 protocol to allow redistribution of routes from the specified source protocol/routers.

Default

- metric—unspecified
- type—2
- tag—0

Format redistribute {static | connected} [*metric 0-16777214*] [*metric-type {1 | 2}*] [*tag 0-4294967295*]

Mode Router OSPFv3 Config

6.5.33.1 no redistribute

This command configures OSPF protocol to prohibit redistribution of routes from the specified source protocol/routers.

Format no redistribute {static | connected} [*metric*] [*metric-type*] [*tag*]

Mode Router OSPFv3 Config

6.5.34 router-id (OSPFv3)

This command sets a 4-digit dotted-decimal number uniquely identifying the router ospf id. The *ipaddress* is a configured value.

Format router-id *ipaddress*

Mode Router OSPFv3 Config

6.5.35 timers pacing lsa-group

Use this command to adjust how OSPFv3 groups LSAs for periodic refresh. OSPFv3 refreshes self-originated LSAs approximately once every 30 minutes. When OSPFv3 refreshes LSAs, it considers all self-originated LSAs whose age is from 1800 to 1800 plus the pacing group size. Grouping LSAs for refresh allows OSPFv3 to combine refreshed LSAs into a minimal number of LS Update packets. Minimizing the number of Update packets makes LSA distribution more efficient.

When OSPFv3 originates a new or changed LSA, it selects a random refresh delay for the LSA. When the refresh delay expires, OSPFv3 refreshes the LSA. By selecting a random refresh delay, OSPFv3 avoids refreshing a large number of LSAs at one time, even if a large number of LSAs are originated at one time.

seconds is the width of the window in which LSAs are refreshed. The range for the pacing group window is from 10 to 1800 seconds.

Default 60 seconds

Format timers pacing lsa-group *seconds*

Mode Privileged EXEC

6.5.35.1 no timers pacing lsa-group

This command returns the LSA Group Pacing parameter to the factory default value of 60 seconds.

Format no timers pacing lsa-group

Mode Privileged EXEC

6.5.36 timers throttle spf

The initial "wait interval" is set to an amount of delay specified by the spf-hold value. If an SPF calculation is not scheduled during the current "wait interval", the next SPF calculation is scheduled at a delay of *spf-start*. If there has been an SPF calculation scheduled during the current "wait interval", the "wait interval" is set to two times the current "wait interval" until the "wait interval" reaches the maximum time in milliseconds as specified in *spf-maximum*. Subsequent wait times remain at the maximum until the values are reset or an LSA is received between SPF calculations.

Default *spf-start*= 2000 ms

spf-hold= 5000 ms

spf-maximum= 5000 ms

Format timers throttle spf *spf-start spf-hold spf-maximum*

Mode Privileged EXEC

Parameter	Description
spf-start	Indicates the SPF schedule delay in milliseconds when no SPF calculation has been scheduled during the current "wait interval". Value range is 1 to 600000 milliseconds.
spf-hold	Indicates the initial SPF "wait interval" in milliseconds. Value range is 1 to 600000 milliseconds.
spf-maximum	Indicates the maximum SPF "wait interval" in milliseconds. Value range is 1 to 600000 milliseconds.

6.5.36.1 no timers throttle spf

This command returns the SPF throttling parameters to the factory default values.

Format no timers throttle spf

Mode Privileged EXEC

6.5.37 trapflags (OSPFv3)

Use this command to enable individual OSPF traps, enable a group of trap flags at a time, or enable all the trap flags at a time. The different groups of trapflags, and each group's specific trapflags to enable or disable, are listed in [Table 6](#).

Table 6: Trapflag Groups (OSPFv3)

Group	Flags
errors	• authentication-failure • bad-packet • config-error • virt-authentication-failure • virt-bad-packet • virt-config-error
lsa	• lsa-maxage • lsa-originate
overflow	• lsdb-overflow • lsdb-approaching-overflow
retransmit	• packets • virt-packets
state-change	• if-state-change • neighbor-state-change • virtif-state-change • virtneighbor-state-change

- To enable the individual flag, enter the group name followed by that particular flag.
- To enable all the flags in that group, give the group name followed by **all**.
- To enable all the flags, give the command as **trapflags all**.

Default	disabled
Format	<pre>trapflags { all errors {all authentication-failure bad-packet config-error virt- authentication-failure virt-bad-packet virt-config-error} lsa {all lsa-maxage lsa-originate} overflow {all lsdb-overflow lsdb-approaching-overflow} retransmit {all packets virt-packets} state-change {all if-state-change neighbor-state-change virtif-state-change virtneighbor-state-change} }</pre>
Mode	Router OSPFv3 Config

6.5.37.1 no trapflags

Use this command to revert to the default reference bandwidth.

- To disable the individual flag, enter the group name followed by that particular flag.
- To disable all the flags in that group, give the group name followed by all.
- To disable all the flags, give the command as trapflags all.

Format	<pre>no trapflags { all errors {all authentication-failure bad-packet config-error virt- authentication-failure virt-bad-packet virt-config-error} lsa {all lsa-maxage lsa-originate} overflow {all lsdb-overflow lsdb-approaching-overflow} retransmit {all packets virt-packets} state-change {all if-state-change neighbor-state-change virtif-state- change virtneighbor-state-change} }</pre>
Mode	Router OSPFv3 Config

OSPFv3 Interface Commands

6.5.38 ipv6 ospf area

This command sets the OSPF area to which the specified router interface or range of interfaces belongs. It also enables OSPF on the specified router interface or range of interfaces. The *area* is a 32-bit integer, formatted as a 4-digit dotted-decimal number or a decimal value in the range of 0-4294967295. The *area* uniquely identifies the area to which the interface connects. Assigning an area ID for an area that does not yet exist, causes the area to be created with default values.

Format	ipv6 ospf area 0-4294967295
Mode	Interface Config

6.5.39 ipv6 ospf cost

This command configures the cost on an OSPF interface or range of interfaces. The *cost* parameter has a range of 1 to 65535.

Default 10
Format ipv6 ospf cost 1-65535
Mode Interface Config

6.5.39.1 no ipv6 ospf cost

This command configures the default cost on an OSPF interface.

Format no ipv6 ospf cost
Mode Interface Config

6.5.40 ipv6 ospf dead-interval

This command sets the OSPF dead interval for the specified interface or range of interfaces. The value for *seconds* is a valid positive integer, which represents the length of time in seconds that a router's Hello packets have not been seen before its neighbor routers declare that the router is down. The value for the length of time must be the same for all routers attached to a common network. This value should be some multiple of the Hello Interval (i.e., 4). Valid values range for *seconds* is from 1 to 2147483647.



Note...

Effective with FASTPATH 4.4.4 and later, valid values range in seconds from 1 to 65535.

Default 40
Format ipv6 ospf dead-interval 1-2147483647
Mode Interface Config

6.5.40.1 no ipv6 ospf dead-interval

This command sets the default OSPF dead interval for the specified interface or range of interfaces.

Format no ipv6 ospf dead-interval
Mode Interface Config

6.5.41 ipv6 ospf hello-interval

This command sets the OSPF hello interval for the specified interface. The value for *seconds* is a valid positive integer, which represents the length of time in seconds. The value for the length of time must be the same for all routers attached to a network. Valid values for *seconds* range from 1 to 65535.

Default 10
Format ipv6 ospf hello-interval seconds
Mode Interface Config

6.5.41.1 no ipv6 ospf hello-interval

This command sets the default OSPF hello interval for the specified interface.

Format no ipv6 ospf hello-interval
Mode Interface Config

6.5.42 ipv6 ospf link-lsa-suppression

Use this command to enable Link LSA Suppression on an interface. When Link LSA Suppression is enabled on a point-to-point (P2P) interface, no Link LSA protocol packets are originated (transmitted) on the interface. This configuration does not apply to non-P2P interfaces.

Default False
Format ipv6 ospf link-lsa-suppression
Mode Privileged EXEC

6.5.42.1 no ipv6 ospf link-lsa-suppression

This command returns Link LSA Suppression for the interface to disabled. When Link LSA Suppression is disabled, Link LSA protocol packets are originated (transmitted) on the P2P interface.

Format no ipv6 ospf link-lsa-suppression
Mode Privileged EXEC

6.5.43 ipv6 ospf mtu-ignore

This command disables OSPF maximum transmission unit (MTU) mismatch detection on an interface or range of interfaces. OSPF Database Description packets specify the size of the largest IP packet that can be sent without fragmentation on the interface. When a router receives a Database Description packet, it examines the MTU advertised by the neighbor. By default, if the MTU is larger than the router can accept, the Database Description packet is rejected and the OSPF adjacency is not established.

Default enabled
Format ipv6 ospf mtu-ignore
Mode Interface Config

6.5.43.1 no ipv6 ospf mtu-ignore

This command enables the OSPF MTU mismatch detection.

Format no ipv6 ospf mtu-ignore
Mode Interface Config

6.5.44 ipv6 ospf network

This command changes the default OSPF network type for the interface or range of interfaces. Normally, the network type is determined from the physical IP network type. By default all Ethernet networks are OSPF type broadcast. Similarly, tunnel interfaces default to point-to-point. When an Ethernet port is used as a single large bandwidth IP network between two routers, the network type can be point-to-point since there are only two routers. Using point-to-point as the network type eliminates the overhead of the OSPF designated router election. It is normally not useful to set a tunnel to OSPF network type broadcast.

Default broadcast
Format ipv6 ospf network {broadcast | point-to-point}
Mode Interface Config

6.5.44.1 no ipv6 ospf network

This command sets the interface type to the default value.

Format no ipv6 ospf network {broadcast | point-to-point}
Mode Interface Config

6.5.45 ipv6 ospf prefix-suppression

This command suppresses the advertisement of the IPv6 prefixes that are associated with an interface, except for those associated with secondary IPv6 addresses. This command takes precedence over the global configuration. If this configuration is not specified, the global prefix-suppression configuration applies.

prefix-suppression can be disabled at the interface level by using the disable option. The disable option is useful for excluding specific interfaces from performing prefix-suppression when the feature is enabled globally.

Note that the disable option disable is not equivalent to not configuring the interface specific prefix-suppression. If prefix-suppression is not configured at the interface level, the global prefix-suppression configuration is applicable for the IPv6 prefixes associated with the interface.

Default prefix-suppression is not configured.
Format ipv6 ospf prefix-suppression [disable]
Mode Interface Config

6.5.45.1 no ipv6 ospf prefix-suppression

This command removes prefix-suppression configurations at the interface level. When the `no ipv6 ospf prefix-suppression` command is used, global prefix-suppression applies to the interface. Not configuring the command is not equal to disabling interface level prefix-suppression.

Format no ipv6 ospf prefix-suppression
Mode Interface Config

6.5.46 ipv6 ospf priority

This command sets the OSPF priority for the specified router interface or range of interfaces. The priority of the interface is a priority integer from 0 to 255. A value of 0 indicates that the router is not eligible to become the designated router on this network.

Default 1, which is the highest router priority
Format ipv6 ospf priority 0-255
Mode Interface Config

6.5.46.1 no ipv6 ospf priority

This command sets the default OSPF priority for the specified router interface.

Format no ipv6 ospf priority
Mode Interface Config

6.5.47 ipv6 ospf retransmit-interval

This command sets the OSPF retransmit Interval for the specified interface or range of interfaces. The retransmit interval is specified in seconds. The value for *seconds* is the number of seconds between link-state advertisement retransmissions for adjacencies belonging to this router interface. This value is also used when retransmitting database description and link-state request packets. Valid values range from 0 to 3600 (1 hour).

Default 5
Format ipv6 ospf retransmit-interval *seconds*
Mode Interface Config

6.5.47.1 no ipv6 ospf retransmit-interval

This command sets the default OSPF retransmit Interval for the specified interface.

Format no ipv6 ospf retransmit-interval
Mode Interface Config

6.5.48 ipv6 ospf transmit-delay

This command sets the OSPF Transit Delay for the specified interface or range of interfaces. The transmit delay is specified in seconds. In addition, it sets the estimated number of seconds it takes to transmit a link state update packet over this interface. Valid values for *seconds* range from 1 to 3600 (1 hour).

Default 1
Format ipv6 ospf transmit-delay *seconds*
Mode Interface Config

6.5.48.1 no ipv6 ospf transmit-delay

This command sets the default OSPF Transit Delay for the specified interface.

Format no ipv6 ospf transmit-delay
Mode Interface Config

OSPFv3 Graceful Restart Commands

The OSPFv3 protocol can be configured to participate in the checkpointing service, so that these protocols can execute a “graceful restart” when the management unit fails. In a graceful restart, the hardware to continues forwarding IPv6 packets using OSPFv3 routes while a backup switch takes over management unit responsibility.

Graceful restart uses the concept of “helpful neighbors”. A fully adjacent router enters helper mode when it receives a link state announcement (LSA) from the restarting management unit indicating its intention of performing a graceful restart. In helper mode, a switch continues to advertise to the rest of the network that they have full adjacencies with the restarting router, thereby avoiding announcement of a topology change and and the potential for flooding of LSAs and shortest-path-first (SPF) runs (which determine OSPF routes). Helpful neighbors continue to forward packets through the restarting router. The restarting router relearns the network topology from its helpful neighbors.

Graceful restart can be enabled for either planned or unplanned restarts, or both. A planned restart is initiated by the operator through the management command `initiate failover`. The operator may initiate a failover in order to take the management unit out of service (for example, to address a partial hardware failure), to correct faulty system behavior which cannot be corrected through less severe management actions, or other reasons. An unplanned restart is an unexpected failover caused by a fatal hardware failure of the management unit or a software hang or crash on the management unit.

6.5.49 `nsf` (OSPFv3)

Use this command to enable the OSPF graceful restart functionality on an interface. To disable graceful restart, use the `no` form of the command.

Default	Disabled
Format	<code>nsf [ietf] [planned-only]</code>
Modes	Router OSPFv3 Config

Parameter	Description
ietf	This keyword is accepted but not required.
planned-only	This optional keyword indicates that OSPF should only perform a graceful restart when the restart is planned (i.e., when the restart is a result of the <code>initiate failover</code> command).

6.5.49.1 `no nsf` (OSPFv3)

Use this command to disable graceful restart for all restarts.

6.5.50 `nsf restart-interval` (OSPFv3)

Use this command to configure the number of seconds that the restarting router asks its neighbors to wait before exiting helper mode. This is referred to as the grace period. The restarting router includes the grace period in its grace LSAs. For planned restarts (using the `initiate failover` command), the grace LSAs are sent prior to restarting the management unit, whereas for unplanned restarts, they are sent after reboot begins.

The grace period must be set long enough to allow the restarting router to reestablish all of its adjacencies and complete a full database exchange with each of those neighbors.

Default	120 seconds
Format	<code>nsf [ietf] restart-interval 1-1800</code>
Modes	Router OSPFv3 Config

Parameter	Description
ietf	This keyword is accepted but not required.
seconds	The number of seconds that the restarting router asks its neighbors to wait before exiting helper mode. The range is from 1 to 1800 seconds.

6.5.50.1 `no nsf restart-interval` (OSPFv3)

Use this command to revert the grace period to its default value.

Format `no [ietf] nsf restart-interval`

Modes Router OSPFv3 Config

6.5.51 `nsf helper` (OSPFv3)

Use this command to enable helpful neighbor functionality for the OSPF protocol. You can enable this functionality for planned or unplanned restarts, or both.

Default OSPF may act as a helpful neighbor for both planned and unplanned restarts

Format `nsf helper [planned-only]`

Modes Router OSPFv3 Config

Parameter	Description
planned-only	This optional keyword indicates that OSPF should only help a restarting router performing a planned restart.

6.5.51.1 `no nsf helper` (OSPFv3)

Use this command to disable helpful neighbor functionality for OSPF.

Format `no nsf helper`

Modes Router OSPFv3 Config

6.5.52 `nsf ietf helper disable` (OSPFv3)

Use this command to disable helpful neighbor functionality for OSPF.



Note...

The commands `no nsf helper` and `nsf ietf helper disable` are functionally equivalent. The command `nsf ietf helper disable` is supported solely for compatibility with other network software CLI.

Format `nsf ietf helper disable`

Modes Router OSPFv3 Config

6.5.53 nsf helper strict-lsa-checking (OSPFv3)

The restarting router is unable to react to topology changes. In particular, the restarting router will not immediately update its forwarding table; therefore, a topology change may introduce forwarding loops or black holes that persist until the graceful restart completes. By exiting the graceful restart on a topology change, a router tries to eliminate the loops or black holes as quickly as possible by routing around the restarting router. A helpful neighbor considers a link down with the restarting router to be a topology change, regardless of the strict LSA checking configuration.

Use this command to require that an OSPF helpful neighbor exit helper mode whenever a topology change occurs.

Default Enabled.
Format nsf [ietf] helper strict-lsa-checking
Modes Router OSPFv3 Config

Parameter	Description
ietf	This keyword is accepted but not required.

6.5.53.1 no nsf [ietf] helper strict-lsa-checking (OSPFv3)

Use this command to allow OSPF to continue as a helpful neighbor in spite of topology changes.

Default Enabled.
Format nsf [ietf] helper strict-lsa-checking
Modes Router OSPFv3 Config

OSPFv3 Stub Router Commands

6.5.54 max-metric router-lsa

To configure OSPFv3 to enter stub router mode, use this command in Router OSPFv3 Global Configuration mode. When OSPFv3 is in stub router mode, OSPFv3 sets the metric in the nonstub links in its router LSA to MaxLinkMetric. Other routers therefore compute very long paths through the stub router, and prefer any alternate path. Doing so eliminates all transit traffic through the stub router, when alternate routes are available. Stub router mode is useful when adding or removing a router from a network or to avoid transient routes when a router reloads.

You can administratively force OSPFv3 into stub router mode. OSPFv3 remains in stub router mode until you take OSPFv3 out of stub router mode. Alternatively, you can configure OSPF to start in stub router mode for a configurable period of time after the router boots up.

If you set the summary LSA metric to 16,777,215, other routers will skip the summary LSA when they compute routes.

If you have configured the router to enter stub router mode on startup (max-metric router-lsa on-startup), and then enter max-metric router lsa, there is no change. If OSPFv3 is administratively in stub router mode (the max-metric router-lsa command has been given), and you configure OSPFv3 to enter stub router mode on startup (max-metric router-lsa on-startup), OSPFv3 exits stub router mode (assuming the startup period has expired) and the configuration is updated. Without any parameters, stub router mode only sends maximum metric values for router LSAs.

Default	OSPF is not in stub router mode by default
Format	max-metric router-lsa [on-startup seconds] [summary-lsa {metric}] max-metric router-lsa [external-lsa [max-metric-value]] [inter-area-lsas [max-metric-value]] [on-startup seconds] [summary-lsa [max-metric-value]]
Mode	OSPFv3 Router Configuration

Parameter	Description
external-lsa	(Optional) Sends the maximum metric values for external LSAs. <i>max-metric-value</i> is the maximum metric value to use for LSAs. The range is 1 to 16777215 (0xFFFFF). The default value is 16711680 (0xFF0000).
inter-area-lsas	(Optional) Sends the maximum metric values for Inter-Area-Router LSAs
on-startup	(Optional) Starts OSPF in stub router mode. <i>seconds</i> is the number of seconds that OSPF remains in stub router mode after a reboot. The range is 5 to 86,400 seconds. There is no default value.
summary-lsa	(Optional) Sends the maximum metric values for Summary LSAs

6.5.54.1 no max-metric router-lsa

Use this command in OSPFv3 Router Configuration mode to disable stub router mode. The command clears either type of stub router mode (always or on-startup) and resets all LSA options. If OSPF is configured to enter global configuration mode on startup, and during normal operation you want to immediately place OSPF in stub router mode, issue the command **no max-metric router-lsa on-startup**. The command **no max-metric** with the external-lsa, inter-area-lsas, or summary-lsa option **router-lsa summary-lsa** causes OSPF to send summary LSAs with metrics computed using normal procedures.

Format	no max-metric router-lsa [external-lsa] [inter-area-lsas] [on-startup] [summary-lsa]
Mode	OSPFv3 Router Configuration

6.5.55 clear ipv6 ospf stub-router

Use this command to force OSPF to exit stub router mode when it has automatically entered stub router mode because of a resource limitation. OSPF only exits stub router mode if it entered stub router mode because of a resource limitation or if it is in stub router mode at startup. This command has no effect if OSPF is configured to be in stub router mode permanently.

Format	clear ipv6 ospf stub-router
Mode	Privileged EXEC

OSPFv3 Show Commands

6.5.56 show ipv6 ospf

This command displays information relevant to the OSPF router.

Format	show ipv6 ospf
Mode	- Privileged EXEC - User EXEC

**Note...**

Some of the information below displays only if you enable OSPF and configure certain features.

Term	Definition
Router ID	A 32-bit integer in dotted decimal format identifying the router, about which information is displayed. This is a configured value.
OSPF Admin Mode	Shows whether the administrative mode of OSPF in the router is enabled or disabled. This is a configured value.
External LSDB Limit	The maximum number of non-default AS-external-LSAs entries that can be stored in the link-state database.
Exit Overflow Interval	The number of seconds that, after entering overflow state, a router will attempt to leave overflow state.
SPF Start Time	The number of milliseconds the SPF calculation is delayed if no SPF calculation has been scheduled during the current "wait interval".
SPF Hold Time	The number of milliseconds of the initial "wait interval".
SPF Maximum Hold Time	The maximum number of milliseconds of the "wait interval".
LSA Refresh Group Pacing Time	The size of the LSA refresh group window, in seconds.
AutoCost Ref BW	Shows the value of the auto-cost reference bandwidth configured on the router.
Default Passive Setting	Shows whether the interfaces are passive by default.
Maximum Paths	The maximum number of paths that OSPF can report for a given destination.
Default Metric	Default value for redistributed routes.
Default Route Advertise	Indicates whether the default routes received from other source protocols are advertised or not.
Always	Shows whether default routes are always advertised.
Metric	The metric for the advertised default routes. If the metric is not configured, this field is blank.
Metric Type	Shows whether the routes are External Type 1 or External Type 2.
Number of Active Areas	The number of active OSPF areas. An "active" OSPF area is an area with at least one interface up.
ABR Status	Shows whether the router is an OSPF Area Border Router.
ASBR Status	Shows if the ASBR mode is enabled or disabled. Enable implies that the router is an autonomous system border router. Router automatically becomes an ASBR when it is configured to redistribute routes learnt from other protocol. The possible values for the ASBR status is enabled (if the router is configured to re-distribute routes learned by other protocols) or disabled (if the router is not configured for the same).
Stub Router Status	The status of the stub router: Active or Inactive.
Stub Router Reason	This is displayed only if the stub router is active. Shows the reason for the stub router: Configured, Startup, or Resource Limitation
Stub Router Startup Time Remaining	This is displayed only if the stub router is in startup stub router mode. The remaining time (in seconds) until OSPF exits stub router mode.
Stub Router Duration	This row is only listed if the stub router is active and the router entered stub mode because of a resource limitation. The time elapsed since the router last entered the stub router mode. The duration is displayed in DD:HH:MM:SS format.

Term	Definition
External LSDB Overflow	When the number of non-default external LSAs exceeds the configured limit, External LSDB Limit, OSPF goes into LSDB overflow state. In this state, OSPF withdraws all of its self-originated non-default external LSAs. After the Exit Overflow Interval, OSPF leaves the overflow state, if the number of external LSAs has been reduced.
External LSA Count	The number of external (LS type 5) link-state advertisements in the link-state database.
External LSA Checksum	The sum of the LS checksums of external link-state advertisements contained in the link-state database.
New LSAs Originated	The number of new link-state advertisements that have been originated.
LSAs Received	The number of link-state advertisements received determined to be new instantiations.
LSA Count	The total number of link state advertisements currently in the link state database.
Maximum Number of LSAs	The maximum number of LSAs that OSPF can store.
LSA High Water Mark	The maximum size of the link state database since the system started.
Retransmit List Entries	The total number of LSAs waiting to be acknowledged by all neighbors. An LSA may be pending acknowledgment from more than one neighbor.
Maximum Number of Retransmit Entries	The maximum number of LSAs that can be waiting for acknowledgment at any given time.
Retransmit Entries High Water Mark	The highest number of LSAs that have been waiting for acknowledgment.
Redistributing	This field is a heading and appears only if you configure the system to take routes learned from a non-OSPF source and advertise them to its peers.
Source	Shows source protocol/routes that are being redistributed. Possible values are static, connected or RIP.
Metric	The metric of the routes being redistributed.
Metric Type	Shows whether the routes are External Type 1 or External Type 2.
Tag	The decimal value attached to each external route.
Subnets	For redistributing routes into OSPF, the scope of redistribution for the specified protocol.
Distribute-List	The access list used to filter redistributed routes.
Prefix-suppression	Displays whether prefix-suppression is enabled or disabled on the given interface.
NSF Support	Indicates whether nonstop forwarding (NSF) is enabled for the OSPF protocol for planned restarts, unplanned restarts or both (Always).
NSF Restart Interval	The user-configurable grace period during which a neighboring router will be in the helper state after receiving notice that the management unit is performing a graceful restart.
NSF Restart Status	The current graceful restart status of the router.
NSF Restart Age	Number of seconds until the graceful restart grace period expires.
NSF Restart Exit Reason	Indicates why the router last exited the last restart: • None— Graceful restart has not been attempted. • In Progress— Restart is in progress. • Completed— The previous graceful restart completed successfully. • Timed Out— The previous graceful restart timed out. • Topology Changed— The previous graceful restart terminated prematurely because of a topology change.
NSF Help Support	Indicates whether helpful neighbor functionality has been enabled for OSPF for planned restarts, unplanned restarts, or both (Always).

Term	Definition
NSF help Strict LSA checking	Indicates whether strict LSA checking has been enabled. If enabled, then an OSPF helpful neighbor will exit helper mode whenever a topology change occurs. If disabled, an OSPF neighbor will continue as a helpful neighbor in spite of topology changes.

6.5.57 `show ipv6 ospf abr`

This command displays the internal OSPFv3 routes to reach Area Border Routers (ABR). This command takes no options.

Format `show ipv6 ospf abr`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Type	The type of the route to the destination. It can be either: • intra — Intra-area route • inter — Inter-area route
Router ID	Router ID of the destination.
Cost	Cost of using this route.
Area ID	The area ID of the area from which this route is learned.
Next Hop	Next hop toward the destination.
Next Hop Intf	The outgoing router interface to use when forwarding traffic to the next hop.

6.5.58 `show ipv6 ospf area`

This command displays information about the area. The *areaid* identifies the OSPF area that is being displayed.

Format `show ipv6 ospf area areaid`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
AreaID	The area id of the requested OSPF area.
External Routing	A number representing the external routing capabilities for this area.
Spf Runs	The number of times that the intra-area route table has been calculated using this area's link-state database.
Area Border Router Count	The total number of area border routers reachable within this area.
Area LSA Count	Total number of link-state advertisements in this area's link-state database, excluding AS External LSAs.
Area LSA Checksum	A number representing the Area LSA Checksum for the specified AreaID excluding the external (LS type 5) link-state advertisements.
Stub Mode	Represents whether the specified Area is a stub area or not. The possible values are enabled and disabled. This is a configured value.
Import Summary LSAs	Shows whether to import summary LSAs (enabled).

Term	Definition
OSPF Stub Metric Value	The metric value of the stub area. This field displays only if the area is configured as a stub area.

The following OSPF NSSA specific information displays only if the area is configured as an NSSA.

Term	Definition
Import Summary LSAs	Shows whether to import summary LSAs into the NSSA.
Redistribute into NSSA	Shows whether to redistribute information into the NSSA.
Default Information Originate	Shows whether to advertise a default route into the NSSA.
Default Metric	The metric value for the default route advertised into the NSSA.
Default Metric Type	The metric type for the default route advertised into the NSSA.
Translator Role	The NSSA translator role of the ABR, which is always or candidate.
Translator Stability Interval	The amount of time that an elected translator continues to perform its duties after it determines that its translator status has been deposed by another router.
Translator State	Shows whether the ABR translator state is disabled, always, or elected.

6.5.59 `show ipv6 ospf asbr`

This command displays the internal OSPFv3 routes to reach Autonomous System Boundary Routers (ASBR). This command takes no options.

Format `show ipv6 ospf asbr`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Type	The type of the route to the destination. It can be either: • intra — Intra-area route • inter — Inter-area route
Router ID	Router ID of the destination.
Cost	Cost of using this route.
Area ID	The area ID of the area from which this route is learned.
Next Hop	Next hop toward the destination.
Next Hop Intf	The outgoing router interface to use when forwarding traffic to the next hop.

6.5.60 show ipv6 ospf database

This command displays information about the link state database when OSPFv3 is enabled. If you do not enter any parameters, the command displays the LSA headers for all areas. Use the optional *areaid* parameter to display database information about a specific area. Use the other optional parameters to specify the type of link state advertisements to display. Use *external* to display the external LSAs. Use *inter-area* to display the inter-area LSAs. Use *link* to display the link LSAs. Use *network* to display the network LSAs. Use *nssa-external* to display NSSA external LSAs. Use *prefix* to display intra-area Prefix LSAs. Use *router* to display router LSAs. Use *unknown area*, *unknown as*, or *unknown link* to display unknown area, AS or link-scope LSAs, respectively. Use *lsid* to specify the link state ID (LSID). Use *adv-router* to show the LSAs that are restricted by the advertising router. Use *self-originate* to display the LSAs in that are self originated. The information below is only displayed if OSPF is enabled.

Format `show ipv6 ospf [areaid] database [{external | inter-area {prefix | router} | link | net work | nssa-external | prefix} | router | unknown {area | as | link}}] [lsid] [{adv-router [rtrid] | self-originate}]`

Modes • Privileged EXEC
 • User EXEC

For each link-type and area, the following information is displayed.

Term	Definition
Link Id	A number that uniquely identifies an LSA that a router originates from all other self originated LSAs of the same LS type.
Adv Router	The Advertising Router. Is a 32-bit dotted decimal number representing the LSDB interface.
Age	A number representing the age of the link state advertisement in seconds.
Sequence	A number that represents which LSA is more recent.
Checksum	The total number LSA checksum.
Prefix	The IPv6 prefix.
Interface	The interface for the link.
Rtr Count	The number of routers attached to the network.

6.5.61 show ipv6 ospf database database-summary

Use this command to display the number of each type of LSA in the database and the total number of LSAs in the database.

Format `show ipv6 ospf database database-summary`

Modes • Privileged EXEC
 • User EXEC

Term	Definition
Router	Total number of router LSAs in the OSPFv3 link state database.
Network	Total number of network LSAs in the OSPFv3 link state database.
Inter-area Prefix	Total number of inter-area prefix LSAs in the OSPFv3 link state database.
Inter-area Router	Total number of inter-area router LSAs in the OSPFv3 link state database.
Type-7 Ext	Total number of NSSA external LSAs in the OSPFv3 link state database.
Link	Total number of link LSAs in the OSPFv3 link state database.
Intra-area Prefix	Total number of intra-area prefix LSAs in the OSPFv3 link state database.

Term	Definition
Link Unknown	Total number of link-source unknown LSAs in the OSPFv3 link state database.
Area Unknown	Total number of area unknown LSAs in the OSPFv3 link state database.
AS Unknown	Total number of as unknown LSAs in the OSPFv3 link state database.
Type-5 Ext	Total number of AS external LSAs in the OSPFv3 link state database.
Self-Originated Type-5	Total number of self originated AS external LSAs in the OSPFv3 link state database.
Total	Total number of router LSAs in the OSPFv3 link state database.

6.5.62 show ipv6 ospf interface

This command displays the information for the IFO object or virtual interface tables. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format.

Format `show ipv6 ospf interface {slot/port/vlan 1-4093|loopback loopback-id | tunnel tunnel-id}`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
IP Address	The IPv6 address of the interface.
ifIndex	The interface index number associated with the interface.
OSPF Admin Mode	Shows whether the admin mode is enabled or disabled.
OSPF Area ID	The area ID associated with this interface.
Router Priority	The router priority. The router priority determines which router is the designated router.
Retransmit Interval	The frequency, in seconds, at which the interface sends LSA.
Hello Interval	The frequency, in seconds, at which the interface sends Hello packets.
Dead Interval	The amount of time, in seconds, the interface waits before assuming a neighbor is down.
LSA Ack Interval	The amount of time, in seconds, the interface waits before sending an LSA acknowledgement after receiving an LSA.
Interface Transmit Delay	The number of seconds the interface adds to the age of LSA packets before transmission.
Authentication Type	The type of authentication the interface performs on LSAs it receives.
Metric Cost	The priority of the path. Low costs have a higher priority than high costs.
Prefix-suppression	Displays whether prefix-suppression is enabled, disabled, or unconfigured on the given interface.
Passive Status	Shows whether the interface is passive or not.
OSPF MTU-ignore	Shows whether to ignore MTU mismatches in database descriptor packets sent from neighboring routers.
Link LSA Suppression	The configured state of Link LSA Suppression for the interface.

The following information only displays if OSPF is initialized on the interface:

Term	Definition
OSPF Interface Type	Broadcast LANs, such as Ethernet and IEEE 802.5, take the value <i>broadcast</i> . The OSPF Interface Type will be 'broadcast'.
State	The OSPF Interface States are: down, loopback, waiting, point-to-point, designated router, and backup designated router.

Term	Definition
Designated Router	The router ID representing the designated router.
Backup Designated Router	The router ID representing the backup designated router.
Number of Link Events	The number of link events.
Metric Cost	The cost of the OSPF interface.

6.5.63 `show ipv6 ospf interface brief`

This command displays brief information for the IFO object or virtual interface tables.

Format `show ipv6 ospf interface brief`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Interface	<i>slot/port</i>
OSPF Admin Mode	States whether OSPF is enabled or disabled on a router interface.
OSPF Area ID	The OSPF Area ID for the specified interface.
Router Priority	The router priority. The router priority determines which router is the designated router.
Metric Cost	The priority of the path. Low costs have a higher priority than high costs.
Hello Interval	The frequency, in seconds, at which the interface sends Hello packets.
Dead Interval	The amount of time, in seconds, the interface waits before assuming a neighbor is down.
Retransmit Interval	The frequency, in seconds, at which the interface sends LSA.
Retransmit Delay Interval	The number of seconds the interface adds to the age of LSA packets before transmission.
LSA Ack Interval	The amount of time, in seconds, the interface waits before sending an LSA acknowledgement after receiving an LSA.

6.5.64 `show ipv6 ospf interface stats`

This command displays the statistics for a specific interface. The command displays information only if OSPF is enabled.

Format `show ipv6 ospf interface stats slot/port`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
OSPFv3 Area ID	The area id of this OSPF interface.
IP Address	The IP address associated with this OSPF interface.
OSPFv3 Interface Events	The number of times the specified OSPF interface has changed its state, or an error has occurred.
Virtual Events	The number of state changes or errors that occurred on this virtual link.
Neighbor Events	The number of times this neighbor relationship has changed state, or an error has occurred.
Packets Received	The number of OSPFv3 packets received on the interface.
Packets Transmitted	The number of OSPFv3 packets sent on the interface.

Term	Definition
LSAs Sent	The total number of LSAs flooded on the interface.
LSA Acks Received	The total number of LSA acknowledged from this interface.
LSA Acks Sent	The total number of LSAs acknowledged to this interface.
Sent Packets	The number of OSPF packets transmitted on the interface.
Received Packets	The number of valid OSPF packets received on the interface.
Discards	The number of received OSPF packets discarded because of an error in the packet or an error in processing the packet.
Bad Version	The number of received OSPF packets whose version field in the OSPF header does not match the version of the OSPF process handling the packet.
Virtual Link Not Found	The number of received OSPF packets discarded where the ingress interface is in a non-backbone area and the OSPF header identifies the packet as belonging to the backbone, but OSPF does not have a virtual link to the packet's sender.
Area Mismatch	The number of OSPF packets discarded because the area ID in the OSPF header is not the area ID configured on the ingress interface.
Invalid Destination Address	The number of OSPF packets discarded because the packet's destination IP address is not the address of the ingress interface and is not the AllDrouters or AllSpfRouters multicast addresses.
No Neighbor at Source Address	The number of OSPF packets dropped because the sender is not an existing neighbor or the sender's IP address does not match the previously recorded IP address for that neighbor. NOTE: Does not apply to Hellos.
Invalid OSPF Packet Type	The number of OSPF packets discarded because the packet type field in the OSPF header is not a known type.
Hellos Ignored	The number of received Hello packets that were ignored by this router from the new neighbors after the limit has been reached for the number of neighbors on an interface or on the system as a whole.

Table 4 on page 607 lists the number of OSPF packets of each type sent and received on the interface.

6.5.65 `show ipv6 ospf lsa-group`

This command displays the number of self-originated LSAs within each LSA group.

Format `show ipv6 ospf lsa-group`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Total self-originated LSAs	The number of LSAs the router is currently originating.
Average LSAs per group	The number of self-originated LSAs divided by the number of LSA groups. The number of LSA groups is the refresh interval (1800 seconds) divided by the pacing interval (configured with <code>timers pacing lsa-group</code>) plus two.
Pacing group limit	The maximum number of self-originated LSAs in one LSA group. If the number of LSAs in a group exceeds this limit, OSPF redistributes LSAs throughout the refresh interval to achieve better balance.
Groups	For each LSA pacing group, the output shows the range of LSA ages in the group and the number of LSAs in the group.

Example: The following shows an example of the command.

```
(R1) #show ipv6 ospf lsa-group
```

```
Total self-originated LSAs: 3019
Average LSAs per group: 100
Pacing group limit: 400
Number of self-originated LSAs within each LSA group...
```

Group	Start	Age	Group	End	Age	Count
		0			59	96
		60			119	88
		120			179	102
		180			239	95
		240			299	95
		300			359	92
		360			419	48
		420			479	58
		480			539	103
		540			599	99
		600			659	119
		660			719	110
		720			779	106
		780			839	122
		840			899	110
		900			959	99
		960			1019	135
		1020			1079	101
		1080			1139	94
		1140			1199	115
		1200			1259	110
		1260			1319	111
		1320			1379	111
		1380			1439	99
		1440			1499	102
		1500			1559	96
		1560			1619	106
		1620			1679	111
		1680			1739	106
		1740			1799	80
		1800			1859	0
		1860			1919	0

6.5.66 show ipv6 ospf max-metric

This command displays the configured maximum metrics for stub-router mode.

Format show ipv6 ospf max-metric

Modes • Privileged EXEC
 • User EXEC

Example: The following shows an example of the command.

```
(config)#show ipv6 ospf max-metric
OSPFv3 Router with ID (3.3.3.3)
Start time: 00:00:00, Time elapsed: 00:01:05
Originating router-LSAs with maximum metric
Condition: on startup for 1000 seconds, State: inactive
Advertise external-LSAs with metric 16711680
```

6.5.67 `show ipv6 ospf neighbor`

This command displays information about OSPF neighbors. If you do not specify a neighbor IP address, the output displays summary information in a table. If you specify an interface or tunnel, only the information for that interface or tunnel displays. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format. The `ip-address` is the IP address of the neighbor, and when you specify this, detailed information about the neighbor displays. The information below only displays if OSPF is enabled and the interface has a neighbor.

Format `show ipv6 ospf neighbor [interface {slot/port/vlan 1-4093|tunnel tunnel_id}][ip-address]`

Modes

- Privileged EXEC
- User EXEC

If you do not specify an IP address, a table with the following columns displays for all neighbors or the neighbor associated with the interface that you specify:

Term	Definition
Router ID	The 4-digit dotted-decimal number of the neighbor router.
Priority	The OSPF priority for the specified interface. The priority of an interface is a priority integer from 0 to 255. A value of '0' indicates that the router is not eligible to become the designated router on this network.
Intf ID	The interface ID of the neighbor.
Interface	The interface of the local router in <code>slot/port</code> format.
State	The state of the neighboring routers. Possible values are: • Down- initial state of the neighbor conversation - no recent information has been received from the neighbor. • Attempt - no recent information has been received from the neighbor but a more concerted effort should be made to contact the neighbor. • Init - an Hello packet has recently been seen from the neighbor, but bidirectional communication has not yet been established. • 2 way - communication between the two routers is bidirectional. • Exchange start - the first step in creating an adjacency between the two neighboring routers, the goal is to decide which router is the master and to decide upon the initial DD sequence number. • Exchange - the router is describing its entire link state database by sending Database Description packets to the neighbor. • Full - the neighboring routers are fully adjacent and they will now appear in router-LSAs and network-LSAs.
Dead Time	The amount of time, in seconds, to wait before the router assumes the neighbor is unreachable.
Restart Helper Status	Indicates the status of this router as a helper during a graceful restart of the router specified in the command line: • Helping—This router is acting as a helpful neighbor to the specified router. • Not Helping—This router is not a helpful neighbor at this time.
Restart Reason	When this router is in helpful neighbor mode, this indicates the reason for the restart as provided by the restarting router.
Remaining Grace Time	The number of seconds remaining the in current graceful restart interval. This is displayed only when this router is currently acting as a helpful neighbor for the router specified in the command.

Term	Definition
Restart Helper Exit Reason	Indicates the reason that the specified router last exited a graceful restart. • None—Graceful restart has not been attempted • In Progress—Restart is in progress • Completed—The previous graceful restart completed successfully • Timed Out—The previous graceful restart timed out • Topology Changed—The previous graceful restart terminated prematurely because of a topology change

If you specify an IP address for the neighbor router, the following fields display:

Term	Definition
Interface	The interface of the local router in <i>sLot/port</i> format.
Area ID	The area ID associated with the interface.
Options	An integer value that indicates the optional OSPF capabilities supported by the neighbor. These are listed in its Hello packets. This enables received Hello Packets to be rejected (i.e., neighbor relationships will not even start to form) if there is a mismatch in certain crucial OSPF capabilities.
Router Priority	The router priority for the specified interface.
Dead Timer Due	The amount of time, in seconds, to wait before the router assumes the neighbor is unreachable.
State	The state of the neighboring routers.
Events	Number of times this neighbor relationship has changed state, or an error has occurred.
Retransmission Queue Length	An integer representing the current length of the retransmission queue of the specified neighbor router Id of the specified interface.

6.5.68 `show ipv6 ospf range`

This command displays the set of OSPFv3 area ranges configured for a given area.

Format `show ipv6 ospf range areaid`
Modes Privileged EXEC

Term	Definition
Area ID	The area whose prefixes are summarized.
IPv6 Prefix/Prefix Length	The summary prefix and prefix length.
Type	S (Summary Link) or E (External Link)
Action	Enabled or Disabled
Cost	Metric to be advertised when the range is active.

6.5.69 `show ipv6 ospf statistics`

This command displays information about the 15 most recent Shortest Path First (SPF) calculations. SPF is the OSPF routing table calculation.

Format `show ipv6 ospf statistics`
Modes

- Privileged EXEC
- User EXEC

The command displays the following information with the most recent statistics displayed at the end of the table.

Term	Definition
Delta T	The time since the routing table was computed. The time is in the format hours, minutes, and seconds (hh:mm:ss).
Intra	The time taken to compute intra-area routes, in milliseconds.
Summ	The time taken to compute inter-area routes, in milliseconds.
Ext	The time taken to compute external routes, in milliseconds.
SPF Total	The total time taken to compute routes, in milliseconds. The total may exceed the sum of Intra, Summ, and Ext times.
RIB Update	The time from the completion of the routing table calculation until all changes have been made in the common routing table [the Routing Information Base (RIB)], in milliseconds
Reason	The event or events that triggered the SPF. The reason codes are as follows: • R: New router LSA • N: New network LSA • SN: New network (inter-area prefix) summary LSA • SA: New ASBR (inter-area router) summary LSA • X: New external LSA • IP: New intra-area prefix LSA • L: New Link LSA

Example: The following shows example CLI display output for the command.

```
(Routing) #show ipv6 ospf statistics
```

```
Area 0.0.0.0: SPF algorithm executed 10 times
```

Delta T	Intra	Summ	Ext	SPF Total	RIB Update	Reason
23:32:46	0	0	0	0	0	R, IP
23:32:09	0	0	0	0	0	R, N, IP
23:32:04	0	0	0	0	0	R
23:31:44	0	0	0	0	0	R, N, IP
23:31:39	0	0	0	0	1	R
23:29:57	0	3	7	10	131	R
23:29:52	0	14	29	43	568	SN
04:07:23	0	9	23	33	117	SN
04:07:23	0	9	23	33	117	SN
04:07:18	0	0	0	1	485	SN
04:07:14	0	1	0	1	3	X

6.5.70 show ipv6 ospf stub table

This command displays the OSPF stub table. The information below will only be displayed if OSPF is initialized on the switch.

Format show ipv6 ospf stub table

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Area ID	A 32-bit identifier for the created stub area.
Type of Service	Type of service associated with the stub metric. For this release, Normal TOS is the only supported type.
Metric Val	The metric value is applied based on the TOS. It defaults to the least metric of the type of service among the interfaces to other areas. The OSPF cost for a route is a function of the metric value.
Import Summary LSA	Controls the import of summary LSAs into stub areas.

6.5.71 show ipv6 ospf virtual-link

This command displays the OSPF Virtual Interface information for a specific area and neighbor. The *areaid* parameter identifies the area and the *neighbor* parameter identifies the neighbor's Router ID.

Format show ipv6 ospf virtual-link *areaid neighbor*

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Area ID	The area id of the requested OSPF area.
Neighbor Router ID	The input neighbor Router ID.
Hello Interval	The configured hello interval for the OSPF virtual interface.
Dead Interval	The configured dead interval for the OSPF virtual interface.
Interface Transmit Delay	The configured transmit delay for the OSPF virtual interface.
Retransmit Interval	The configured retransmit interval for the OSPF virtual interface.
Authentication Type	The type of authentication the interface performs on LSAs it receives.
State	The OSPF Interface States are: down, loopback, waiting, point-to-point, designated router, and backup designated router. This is the state of the OSPF interface.
Neighbor State	The neighbor state.

6.5.72 show ipv6 ospf virtual-link brief

This command displays the OSPFV3 Virtual Interface information for all areas in the system.

Format show ipv6 ospf virtual-link brief

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Area ID	The area id of the requested OSPFV3 area.
Neighbor	The neighbor interface of the OSPFV3 virtual interface.
Hello Interval	The configured hello interval for the OSPFV3 virtual interface.
Dead Interval	The configured dead interval for the OSPFV3 virtual interface.
Retransmit Interval	The configured retransmit interval for the OSPFV3 virtual interface.
Transmit Delay	The configured transmit delay for the OSPFV3 virtual interface.

6.6 DHCPv6 Commands

This section describes the commands you use to configure the DHCPv6 server on the system and to view DHCPv6 information.

6.6.1 service dhcpv6

This command enables DHCPv6 configuration on the router.

Default	enabled
Format	service dhcpv6
Mode	Global Config

6.6.1.1 no service dhcpv6

This command disables DHCPv6 configuration on router.

Format	no service dhcpv6
Mode	Global Config

6.6.2 ipv6 dhcp client pd

Use this command to enable the Dynamic Host Configuration Protocol (DHCP) for IPv6 client process (if the process is not currently running) and to enable requests for prefix delegation through a specified interface. When prefix delegation is enabled and a prefix is successfully acquired, the prefix is stored in the IPv6 general prefix pool with an internal name defined by the automatic argument.



Note...

The Prefix Delegation client is supported on only one IP interface.

rapid-commit enables the use of a two-message exchange method for prefix delegation and other configuration. If enabled, the client includes the rapid commit option in a solicit message.

The DHCP for IPv6 client, server, and relay functions are mutually exclusive on an interface. If one of these functions is already enabled and a user tries to configure a different function on the same interface, a message is displayed.

Default	Prefix delegation is disabled on an interface.
Format	ipv6 dhcp client pd [rapid-commit]
Mode	Interface Config

Example: The following examples enable prefix delegation on interface 0/1:

```
(Switch) #configure
(Switch) (Config)#interface 0/1
(Switch) (Interface 0/1)# ipv6 dhcp client pd

(Switch) #configure
(Switch) (Config)#interface 0/1
(Switch) (Interface 0/1)# ipv6 dhcp client pd rapid-commit
```

6.6.2.1 no ipv6 dhcp client pd

This command disables requests for prefix delegation.

Format no ipv6 dhcp client pd
Mode Interface Config

6.6.3 ipv6 dhcp server

Use this command to configure DHCPv6 server functionality on an interface or range of interfaces. The *pool-name* is the DHCPv6 pool containing stateless and/or prefix delegation parameters, *automatic* enables the server to automatically determine which pool to use when allocating addresses for a client, *rapid-commit* is an option that allows for an abbreviated exchange between the client and server, and *pref-value* is a value used by clients to determine preference between multiple DHCPv6 servers. For a particular interface, DHCPv6 server and DHCPv6 relay functions are mutually exclusive.

Format ipv6 dhcp server {*pool-name* | *automatic*}[*rapid-commit*] [*preference pref-value*]
Mode Interface Config

6.6.4 ipv6 dhcp relay destination

Use this command to configure an interface for DHCPv6 relay functionality on an interface or range of interfaces. Use the *destination* keyword to set the relay server IPv6 address. The *relay-address* parameter is an IPv6 address of a DHCPv6 relay server. Use the *interface* keyword to set the relay server interface. The *relay-interface* parameter is an interface (*slot/port*) to reach a relay server. The optional *remote-id* is the Relay Agent Information Option "remote ID" suboption to be added to relayed messages. This can either be the special keyword *duid-ifid*, which causes the "remote ID" to be derived from the DHCPv6 server DUID and the relay interface number, or it can be specified as a user-defined string.



Note...

If relay-address is an IPv6 global address, then relay-interface is not required. If relay-address is a link-local or multicast address, then relay-interface is required. Finally, if you do not specify a value for relay-address, then you must specify a value for relay-interface and the DHCPv6-ALL-AGENTS multicast address (i.e. FF02::1:2) is used to relay DHCPv6 messages to the relay server.

Format ipv6 dhcp relay {*destination [relay-address]* *interface [relay-interface]* | *interface [relay-interface]*} [*remote-id (duid-ifid | user-defined-string)*]
Mode Interface Config

6.6.5 ipv6 dhcp pool

Use this command from Global Config mode to enter IPv6 DHCP Pool Config mode. Use the *exit* command to return to Global Config mode. To return to the User EXEC mode, enter CTRL+Z. The *pool-name* should be less than 31 alphanumeric characters. DHCPv6 pools are used to specify information for DHCPv6 server to distribute to DHCPv6 clients. These pools are shared between multiple interfaces over which DHCPv6 server capabilities are configured.

Once the DHCP for IPv6 configuration information pool has been created, use the *ipv6 dhcp server* command to associate the pool with a server on an interface. If you do not configure an information pool, use the *ipv6 dhcp server interface* configuration command to enable the DHCPv6 server function on an interface.

When you associate a DHCPv6 pool with an interface, only that pool services requests on the associated interface. The pool also services other interfaces. If you do not associate a DHCPv6 pool with an interface, it can service requests on any interface. Not using any IPv6 address prefix means that the pool returns only configured options.

Format `ipv6 dhcp pool pool-name`

Mode Global Config

6.6.5.1 no ipv6 dhcp pool

This command removes the specified DHCPv6 pool.

Format `no ipv6 dhcp pool pool-name`

Mode Global Config

6.6.6 address prefix (IPv6)

Use this command to sets an address prefix for address assignment. This address must be in hexadecimal, using 16-bit values between colons.

If `lifetime` values are not configured, the default lifetime values for *valid-lifetime* and *preferred-lifetime* are considered to be infinite.

Format `address prefix ipv6-prefix [lifetime {valid-lifetime preferred-lifetime | infinite}]`

Mode IPv6 DHCP Pool Config

Term	Definition
lifetime	(Optional) Sets a length of time for the hosts to remember router advertisements. If configured, both valid and preferred lifetimes must be configured.
<i>valid-lifetime</i>	The amount of time, in seconds, the prefix remains valid for the requesting router to use. The range is from 60 through 4294967294. The <i>preferred-lifetime</i> value cannot exceed the <i>valid-lifetime</i> value.
<i>preferred-lifetime</i>	The amount of time, in seconds, that the prefix remains preferred for the requesting router to use. The range is from 60 through 4294967294. The <i>preferred-lifetime</i> value cannot exceed the <i>valid-lifetime</i> value.
infinite	An unlimited lifetime.

Example: The following example shows how to configure an IPv6 address prefix for the IPv6 configuration pool *pool1*:

```
(Switch) #configure
(Switch) (Config)# ipv6 dhcp pool pool1
(Switch) (Config-dhcp6s-pool)# address prefix 2001::/64
(Switch) (Config-dhcp6s-pool)# exit
```

6.6.7 domain-name (IPv6)

This command sets the DNS domain name which is provided to DHCPv6 client by DHCPv6 server. DNS domain name is configured for stateless server support. Domain name consist of no more than 31 alpha-numeric characters. DHCPv6 pool can have multiple number of domain names with maximum of 8.

Format `domain-name dns-domain-name`

Mode IPv6 DHCP Pool Config

6.6.7.1 no domain-name

This command will remove dhcpv6 domain name from dhcpv6 pool.

Format no domain-name *dns-domain-name*

Mode IPv6 DHCP Pool Config

6.6.8 dns-server (IPv6)

This command sets the ipv6 DNS server address which is provided to dhcpv6 client by dhcpv6 server. DNS server address is configured for stateless server support. DHCPv6 pool can have multiple number of domain names with a maximum of 8.

Format dns-server *dns-server-address*

Mode IPv6 DHCP Pool Config

6.6.8.1 no dns-server

This command will remove DHCPv6 server address from DHCPv6 server.

Format no dns-server *dns-server-address*

Mode IPv6 DHCP Pool Config

6.6.9 prefix-delegation (IPv6)

Multiple IPv6 prefixes can be defined within a pool for distributing to specific DHCPv6 Prefix delegation clients. Prefix is the delegated IPv6 prefix. DUID is the client's unique DUID value (Example: 00:01:00:09:f8:79:4e:00:04:76:73:43:76'). Name is 31 characters textual client's name which is useful for logging or tracing only. Valid lifetime is the valid lifetime for the delegated prefix in seconds and preferred lifetime is the preferred lifetime for the delegated prefix in seconds.

Default

- valid-lifetime—2592000
- preferred-lifetime—604800

Format prefix-delegation *prefix/prefixLength DUID [name hostname][valid-lifetime 0-4294967295][preferred-lifetime 0-4294967295]*

Mode IPv6 DHCP Pool Config

6.6.9.1 no prefix-delegation

This command deletes a specific prefix-delegation client.

Format no prefix-delegation *prefix/prefix-delegation DUID*

Mode IPv6 DHCP Pool Config

6.6.10 show ipv6 dhcp

This command displays the DHCPv6 server name and status.

Format show ipv6 dhcp

Mode Privileged EXEC

Term	Definition
DHCPv6 is Enabled (Disabled)	The status of the DHCPv6 server.
Server DUID	If configured, shows the DHCPv6 unique identifier.

6.6.11 `show ipv6 dhcp statistics`

This command displays the IPv6 DHCP statistics for all interfaces.

Format `show ipv6 dhcp statistics`

Mode Privileged EXEC

Term	Definition
DHCPv6 Solicit Packets Received	Number of solicit received statistics.
DHCPv6 Request Packets Received	Number of request received statistics.
DHCPv6 Confirm Packets Received	Number of confirm received statistics.
DHCPv6 Renew Packets Received	Number of renew received statistics.
DHCPv6 Rebind Packets Received	Number of rebind received statistics.
DHCPv6 Release Packets Received	Number of release received statistics.
DHCPv6 Decline Packets Received	Number of decline received statistics.
DHCPv6 Inform Packets Received	Number of inform received statistics.
DHCPv6 Relay-forward Packets Received	Number of relay forward received statistics.
DHCPv6 Relay-reply Packets Received	Number of relay-reply received statistics.
DHCPv6 Malformed Packets Received	Number of malformed packets statistics.
Received DHCPv6 Packets Discarded	Number of DHCP discarded statistics.
Total DHCPv6 Packets Received	Total number of DHCPv6 received statistics
DHCPv6 Advertisement Packets Transmitted	Number of advertise sent statistics.
DHCPv6 Reply Packets Transmitted	Number of reply sent statistics.
DHCPv6 Reconfig Packets Transmitted	Number of reconfigure sent statistics.
DHCPv6 Relay-reply Packets Transmitted	Number of relay-reply sent statistics.
DHCPv6 Relay-forward Packets Transmitted	Number of relay-forward sent statistics.
Total DHCPv6 Packets Transmitted	Total number of DHCPv6 sent statistics.

6.6.12 `show ipv6 dhcp interface`

This command displays DHCPv6 information for all relevant interfaces or the specified interface. The argument `slot/port` corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of a `slot/port` format. If you specify an interface, you can use the optional `statistics` parameter to view statistics for the specified interface.

Format `show ipv6 dhcp interface {slot/port/vlan 1-4093} [statistics]`

Mode Privileged EXEC

Term	Definition
IPv6 Interface	The interface name in <code>slot/port</code> format.
Mode	Shows whether the interface is a IPv6 DHCP relay or server.

If the interface mode is server, the following information displays.

Term	Definition
Pool Name	The pool name specifying information for DHCPv6 server distribution to DHCPv6 clients.
Server Preference	The preference of the server.
Option Flags	Shows whether rapid commit is enabled.

If the interface mode is relay, the following information displays.

Term	Definition
Relay Address	The IPv6 address of the relay server.
Relay Interface Number	The relay server interface in <i>slot/port</i> format.
Relay Remote ID	If configured, shows the name of the relay remote.
Option Flags	Shows whether rapid commit is configured.

If you use the statistics parameter, the command displays the IPv6 DHCP statistics for the specified interface. See "show ipv6 dhcp statistics" on page 722" for information about the output.

6.6.13 show ipv6 dhcp binding

This command displays configured DHCP pool.

Format show ipv6 dhcp binding [*ipv6-address*]
Mode Privileged EXEC

Term	Definition
DHCP Client Address	Address of DHCP Client.
DUID	String that represents the Client DUID.
IAID	Identity Association ID.
Prefix/Prefix Length	IPv6 address and mask length for delegated prefix.
Prefix Type	IPv6 Prefix type (IAPD, IANA, or IATA).
Client Address	Address of DHCP Client.
Client Interface	IPv6 Address of DHCP Client.
Expiration	Address of DNS server address.
Valid Lifetime	Valid lifetime in seconds for delegated prefix.
Preferred Lifetime	Preferred lifetime in seconds for delegated prefix.

6.6.14 show ipv6 dhcp pool

This command displays configured DHCP pool.

Format show ipv6 dhcp pool *pool-name*
Mode Privileged EXEC

Term	Definition
DHCP Pool Name	Unique pool name configuration.
Client DUID	Client's DHCP unique identifier. DUID is generated using the combination of the local system burned-in MAC address and a timestamp value.
Host	Name of the client.
Prefix/Prefix Length	IPv6 address and mask length for delegated prefix.
Preferred Lifetime	Preferred lifetime in seconds for delegated prefix.
Valid Lifetime	Valid lifetime in seconds for delegated prefix.
DNS Server Address	Address of DNS server address.
Domain Name	DNS domain name.

6.6.15 `show network ipv6 dhcp statistics`

This command displays the statistics of the DHCPv6 client running on the network management interface.

Format `show network ipv6 dhcp statistics`

Mode

- Privileged EXEC
- User EXEC

Field	Description
DHCPv6 Advertisement Packets Received	The number of DHCPv6 Advertisement packets received on the network interface.
DHCPv6 Reply Packets Received	The number of DHCPv6 Reply packets received on the network interface.
Received DHCPv6 Advertisement Packets Discarded	The number of DHCPv6 Advertisement packets discarded on the network interface.
Received DHCPv6 Reply Packets Discarded	The number of DHCPv6 Reply packets discarded on the network interface.
DHCPv6 Malformed Packets Received	The number of DHCPv6 packets that are received malformed on the network interface.
Total DHCPv6 Packets Received	The total number of DHCPv6 packets received on the network interface.
DHCPv6 Solicit Packets Transmitted	The number of DHCPv6 Solicit packets transmitted on the network interface.
DHCPv6 Request Packets Transmitted	The number of DHCPv6 Request packets transmitted on the network interface.
DHCPv6 Renew Packets Transmitted	The number of DHCPv6 Renew packets transmitted on the network interface.
DHCPv6 Rebind Packets Transmitted	The number of DHCPv6 Rebind packets transmitted on the network interface.
DHCPv6 Release Packets Transmitted	The number of DHCPv6 Release packets transmitted on the network interface.
Total DHCPv6 Packets Transmitted	The total number of DHCPv6 packets transmitted on the network interface.

Example: The following shows example CLI display output for the command.

```
(admin)#show network ipv6 dhcp statistics
```

```
DHCPv6 Client Statistics
```

```
-----
```

```
DHCPv6 Advertisement Packets Received..... 0
DHCPv6 Reply Packets Received..... 0
Received DHCPv6 Advertisement Packets Discarded..... 0
Received DHCPv6 Reply Packets Discarded..... 0
DHCPv6 Malformed Packets Received..... 0
Total DHCPv6 Packets Received..... 0

DHCPv6 Solicit Packets Transmitted..... 0
DHCPv6 Request Packets Transmitted..... 0
DHCPv6 Renew Packets Transmitted..... 0
DHCPv6 Rebind Packets Transmitted..... 0
DHCPv6 Release Packets Transmitted..... 0
Total DHCPv6 Packets Transmitted..... 0
```

```
6.6.16      show serviceport ipv6 dhcp statistics
```

This command displays the statistics of the DHCPv6 client running on the serviceport management interface.

Format show serviceport ipv6 dhcp statistics

Mode

- Privileged EXEC
- User EXEC

Field	Description
DHCPv6 Advertisement Packets Received	The number of DHCPv6 Advertisement packets received on the service port interface.
DHCPv6 Reply Packets Received	The number of DHCPv6 Reply packets received on the service port interface.
Received DHCPv6 Advertisement Packets Discarded	The number of DHCPv6 Advertisement packets discarded on the service port interface.
Received DHCPv6 Reply Packets Discarded	The number of DHCPv6 Reply packets discarded on the service port interface.
DHCPv6 Malformed Packets Received	The number of DHCPv6 packets that are received malformed on the service port interface.
Total DHCPv6 Packets Received	The total number of DHCPv6 packets received on the service port interface.
DHCPv6 Solicit Packets Transmitted	The number of DHCPv6 Solicit packets transmitted on the service port interface.
DHCPv6 Request Packets Transmitted	The number of DHCPv6 Request packets transmitted on the service port interface.
DHCPv6 Renew Packets Transmitted	The number of DHCPv6 Renew packets transmitted on the service port interface.
DHCPv6 Rebind Packets Transmitted	The number of DHCPv6 Rebind packets transmitted on the service port interface.
DHCPv6 Release Packets Transmitted	The number of DHCPv6 Release packets transmitted on the service port interface.
Total DHCPv6 Packets Transmitted	The total number of DHCPv6 packets transmitted on the service port interface.

Example: The following shows example CLI display output for the command.

```
(admin)#show serviceport ipv6 dhcp statistics
DHCPv6 Client Statistics
-----
```

```
DHCPv6 Advertisement Packets Received..... 0
DHCPv6 Reply Packets Received..... 0
Received DHCPv6 Advertisement Packets Discarded..... 0
Received DHCPv6 Reply Packets Discarded..... 0
DHCPv6 Malformed Packets Received..... 0
Total DHCPv6 Packets Received..... 0

DHCPv6 Solicit Packets Transmitted..... 0
DHCPv6 Request Packets Transmitted..... 0
DHCPv6 Renew Packets Transmitted..... 0
DHCPv6 Rebind Packets Transmitted..... 0
DHCPv6 Release Packets Transmitted..... 0
Total DHCPv6 Packets Transmitted..... 0
```

6.6.17 clear ipv6 dhcp

Use this command to clear DHCPv6 statistics for all interfaces or for a specific interface. Use the *slot/port* parameter to specify the interface.

Format clear ipv6 dhcp {statistics | interface *slot/port* statistics}
Mode Privileged EXEC

6.6.18 clear ipv6 dhcp binding

This command deletes an automatic address binding from the DHCP server database. *address* is a valid IPv6 address.

A binding table entry on the DHCP for IPv6 server is automatically:

- Created whenever a prefix is delegated to a client from the configuration pool.
- Updated when the client renews, rebinds, or confirms the prefix delegation.
- Deleted when the client releases all the prefixes in the binding voluntarily, all prefixes' valid lifetimes have expired, or an administrator runs the **clear ipv6 dhcp binding** command.

If the `clear ipv6 dhcp binding` command is used with the optional *ipv6-address* argument specified, only the binding for the specified client is deleted. If the `clear ipv6 dhcp binding` command is used without the *ipv6-address* argument, all automatic client bindings are deleted from the DHCP for IPv6 binding table.

Format clear ipv6 dhcp binding [*ipv6-address*]
Mode Privileged EXEC

6.6.19 clear network ipv6 dhcp statistics

Use this command to clear the DHCPv6 statistics on the *network management* interface.

Format clear network ipv6 dhcp statistics
Mode

- Privileged EXEC

6.6.20 clear serviceport ipv6 dhcp statistics

Use this command to clear the DHCPv6 client statistics *on the service port* interface.

Format clear serviceport ipv6 dhcp statistics

Mode • Privileged EXEC

6.7 DHCPv6 Snooping Configuration Commands

This section describes commands you use to configure IPv6 DHCP Snooping.

6.7.1 ipv6 dhcp snooping

Use this command to globally enable IPv6 DHCP Snooping.

Default disabled

Format ipv6 dhcp snooping

Mode Global Config

6.7.1.1 no ipv6 dhcp snooping

Use this command to globally disable IPv6 DHCP Snooping.

Format no ipv6 dhcp snooping

Mode Global Config

6.7.2 ipv6 dhcp snooping vlan

Use this command to enable DHCP Snooping on a list of comma-separated VLAN ranges.

Default disabled

Format ipv6 dhcp snooping vlan *vlan-list*

Mode Global Config

6.7.2.1 no ipv6 dhcp snooping vlan

Use this command to disable DHCP Snooping on VLANs.

Format no ipv6 dhcp snooping vlan *vlan-list*

Mode Global Config

6.7.3 ipv6 dhcp snooping verify mac-address

Use this command to enable verification of the source MAC address with the client hardware address in the received DHCP message.

Default enabled

Format ipv6 dhcp snooping verify mac-address

Mode Global Config

6.7.3.1 no ipv6 dhcp snooping verify mac-address

Use this command to disable verification of the source MAC address with the client hardware address.

Format no ipv6 dhcp snooping verify mac-address

Mode Global Config

6.7.4 ipv6 dhcp snooping database

Use this command to configure the persistent location of the DHCP Snooping database. This can be local or a remote file on a given IP machine.

Default local

Format ipv6 dhcp snooping database {local|tftp://hostIP/filename}

Mode Global Config

6.7.5 ip dhcp snooping database write-delay

Use this command to configure the interval in seconds at which the DHCP Snooping database is persisted. The interval value ranges from 15 to 86400 seconds.

Default 300 seconds

Format ip dhcp snooping database write-delay *in seconds*

Mode Global Config

6.7.5.1 no ip dhcp snooping database write-delay

Use this command to set the write delay value to the default value.

Format no ip dhcp snooping database write-delay

Mode Global Config

6.7.6 ipv6 dhcp snooping binding

Use this command to configure static DHCP Snooping binding.

Format ipv6 dhcp snooping binding *mac-address* *vlan* *vlan id* *ip address* *interface* *interface id*

Mode Global Config

6.7.6.1 no ipv6 dhcp snooping binding

Use this command to remove the DHCP static entry from the DHCP Snooping database.

Format no ipv6 dhcp snooping binding *mac-address*

Mode Global Config

6.7.7 `ipv6 dhcp snooping trust`

Use this command to configure an interface or range of interfaces as trusted.

Default disabled
Format `ipv6 dhcp snooping trust`
Mode Interface Config

6.7.7.1 `no ipv6 dhcp snooping trust`

Use this command to configure the port as untrusted.

Format `no ipv6 dhcp snooping trust`
Mode Interface Config

6.7.8 `ipv6 dhcp snooping log-invalid`

Use this command to control the logging DHCP messages filtration by the DHCP Snooping application. This command can be used to configure a single interface or a range of interfaces.

Default disabled
Format `ipv6 dhcp snooping log-invalid`
Mode Interface Config

6.7.8.1 `no ipv6 dhcp snooping log-invalid`

Use this command to disable the logging DHCP messages filtration by the DHCP Snooping application.

Format `no ipv6 dhcp snooping log-invalid`
Mode Interface Config

6.7.9 `ipv6 dhcp snooping limit`

Use this command to control the rate at which the DHCP Snooping messages come on an interface or range of interfaces. By default, rate limiting is disabled. When enabled, the rate can range from 0 to 300 packets per second. The burst level range is 1 to 15 seconds. Rate limiting is configured on a physical port and may be applied to trusted and untrusted ports.

Default disabled (no limit)
Format `ipv6 dhcp snooping limit {rate pps [burst interval seconds]}`
Mode Interface Config

6.7.9.1 `no ipv6 dhcp snooping limit`

Use this command to set the rate at which the DHCP Snooping messages come, and the burst level, to the defaults.

Format `no ipv6 dhcp snooping limit`
Mode Interface Config

6.7.10 `ipv6 verify source`

Use this command to configure the IPv6SG source ID attribute to filter the data traffic in the hardware. Source ID is the combination of IP address and MAC address. Normal command allows data traffic filtration based on the IP address. With the “port-security” option, the data traffic is filtered based on the IP and MAC addresses.

This command can be used to configure a single interface or a range of interfaces.

Default the source ID is the IP address
Format `ipv6 verify source {port-security}`
Mode Interface Config

6.7.10.1 `no ipv6 verify source`

Use this command to disable the IPv6SG configuration in the hardware. You cannot disable port-security alone if it is configured.

Format `no ipv6 verify source`
Mode Interface Config

6.7.11 `ipv6 verify binding`

Use this command to configure static IPv6 source guard (IPv6SG) entries.

Format `ipv6 verify binding mac-address vlan vlan id ipv6 address interface interface id`
Mode Global Config

6.7.11.1 `no ipv6 verify binding`

Use this command to remove the IPv6SG static entry from the IPv6SG database.

Format `no ipv6 verify binding mac-address vlan vlan id ipv6 address interface interface id`
Mode Global Config

6.7.12 `show ipv6 dhcp snooping`

Use this command to display the DHCP Snooping global configurations and per port configurations.

Format `show ipv6 dhcp snooping`
Mode • Privileged EXEC
 • User EXEC

Term	Definition
Interface	The interface for which data is displayed.
Trusted	If it is enabled, DHCP snooping considers the port as trusted. The factory default is disabled.
Log Invalid Pkts	If it is enabled, DHCP snooping application logs invalid packets on the specified interface.

Example: The following shows example CLI display output for the command.
(switch) #show ipv6 dhcp snooping

```
DHCP snooping is Disabled
DHCP snooping source MAC verification is enabled
DHCP snooping is enabled on the following VLANs:
11 - 30, 40
```

Interface	Trusted	Log Invalid Pkts
0/1	Yes	No
0/2	No	Yes
0/3	No	Yes
0/4	No	No
0/6	No	No

6.7.13 show ipv6 dhcp snooping binding

Use this command to display the DHCP Snooping binding entries. To restrict the output, use the following options:

- **Dynamic:** Restrict the output based on DHCP snooping.
- **Interface:** Restrict the output based on a specific interface.
- **Static:** Restrict the output based on static entries.
- **VLAN:** Restrict the output based on VLAN.

Format show ipv6 dhcp snooping binding [{static/dynamic}] [interface slot/port] [vlan id]

Mode

- Privileged EXEC
- User EXEC

Term	Definition
MAC Address	Displays the MAC address for the binding that was added. The MAC address is the key to the binding database.
IPv6 Address	Displays the valid IPv6 address for the binding rule.
VLAN	The VLAN for the binding rule.
Interface	The interface to add a binding into the DHCP snooping interface.
Type	Binding type; statically configured from the CLI or dynamically learned.
Lease (sec)	The remaining lease time for the entry.

Example: The following shows example CLI display output for the command.
(switch) #show ipv6 dhcp snooping binding

Total number of bindings: 2

MAC Address	IPv6 Address	VLAN	Interface	Type	Lease time (Secs)
00:02:B3:06:60:80	2000::1/64	10	0/1		86400
00:0F:FE:00:13:04	3000::1/64	10	0/1		86400

6.7.14 show ipv6 dhcp snooping database

Use this command to display the DHCP Snooping configuration related to the database persistency.

Format show ipv6 dhcp snooping database

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Agent URL	Bindings database agent URL.
Write Delay	The maximum write time to write the database into local or remote.

Example: The following shows example CLI display output for the command.

```
(switch) #show ipv6 dhcp snooping database
```

```
agent url: /10.131.13.79:/sai1.txt
```

```
write-delay: 5000
```

6.7.15 show ipv6 dhcp snooping interfaces

Use this command to show the DHCP Snooping status of all interfaces or a specified interface.

Format show ipv6 dhcp snooping interfaces [interface slot/port]

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(switch) #show ipv6 dhcp snooping interfaces
```

Interface	Trust State	Rate Limit (pps)	Burst Interval (seconds)
-----	-----	-----	-----
1/g1	No	15	1
1/g2	No	15	1
1/g3	No	15	1

```
(switch) #show ip dhcp snooping interfaces ethernet 0/1
```

Interface	Trust State	Rate Limit (pps)	Burst Interval (seconds)
-----	-----	-----	-----
0/1	Yes	15	1

6.7.16 show ipv6 dhcp snooping statistics

Use this command to list statistics for IPv6 DHCP Snooping security violations on untrusted ports.

Format show ipv6 dhcp snooping statistics

Mode

- Privileged EXEC
- User EXEC

Term	Definition
Interface	The IPv6 address of the interface in <i>sSlot/port</i> format.
MAC Verify Failures	Represents the number of DHCP messages that were filtered on an untrusted interface because of source MAC address and client hardware address mismatch.
Client Ifc Mismatch	Represents the number of DHCP release and Deny messages received on the different ports than learned previously.
DHCP Server Msgs Rec'd	Represents the number of DHCP server messages received on Untrusted ports.

Example: The following shows example CLI display output for the command.
(switch) #show ipv6 dhcp snooping statistics

Interface	MAC Verify Failures	Client Ifc Mismatch	DHCP Server Msgs Rec'd
-----	-----	-----	-----
0/2	0	0	0
0/3	0	0	0
0/4	0	0	0
0/5	0	0	0
0/6	0	0	0
0/7	0	0	0
0/8	0	0	0
0/9	0	0	0
0/10	0	0	0
0/11	0	0	0
0/12	0	0	0
0/13	0	0	0
0/14	0	0	0
0/15	0	0	0
0/16	0	0	0
0/17	0	0	0
0/18	0	0	0
0/19	0	0	0
0/20	0	0	0

6.7.17 clear ipv6 dhcp snooping binding

Use this command to clear all DHCPv6 Snooping bindings on all interfaces or on a specific interface.

Format clear ipv6 dhcp snooping binding [interface *sSlot/port*]

- Mode**
- Privileged EXEC
 - User EXEC

6.7.18 clear ipv6 dhcp snooping statistics

Use this command to clear all DHCPv6 Snooping statistics.

Format clear ipv6 dhcp snooping statistics

- Mode**
- Privileged EXEC
 - User EXEC

6.7.19 show ipv6 verify

Use this command to display the IPv6 configuration on a specified slot/port.

Format show ipv6 verify *interface*

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	Interface address in slot/port format.
Filter Type	Is one of two values: • ip-v6mac: User has configured MAC address filtering on this interface. • ipv6: Only IPv6 address filtering on this interface.
IPv6 Address	IPv6 address of the interface
MAC Address	If MAC address filtering is not configured on the interface, the MAC Address field is empty. If port security is disabled on the interface, then the MAC Address field displays "permit-all."
VLAN	The VLAN for the binding rule.

Example: The following shows example CLI display output for the command.
(switch) #show ipv6 verify 0/1

Interface	Filter Type	IP Address	MAC Address	Vlan
0/1	ipv6-mac	2000::1/64	00:02:B3:06:60:80	10
0/1	ipv6-mac	3000::1/64	00:0F:FE:00:13:04	10

6.7.20 show ipv6 verify source

Use this command to display the IPv6SG configurations on all ports. If the interface option is specified, the output is restricted to the specified slot/port.

Format show ipv6 verify source {*interface*}

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	Interface address in slot/port format.
Filter Type	Is one of two values: • ip-v6mac: User has configured MAC address filtering on this interface. • ipv6: Only IPv6 address filtering on this interface.
IPv6 Address	IPv6 address of the interface
MAC Address	If MAC address filtering is not configured on the interface, the MAC Address field is empty. If port security is disabled on the interface, then the MAC Address field displays "permit-all."
VLAN	The VLAN for the binding rule.

Example: The following shows example CLI display output for the command.
(switch) #show ipv6 verify source

Interface	Filter Type	IP Address	MAC Address	Vlan
0/1	ipv6-mac	2000::1/64	00:02:B3:06:60:80	10
0/1	ipv6-mac	3000::1/64	00:0F:FE:00:13:04	10

6.7.21 show ipv6 source binding

Use this command to display the IPv6SG bindings.

Format show ipv6 source binding [{dhcp-snooping|static}] [interface *sSlot/port*] [vlan id]

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
MAC Address	The MAC address for the entry that is added.
IP Address	The IP address of the entry that is added.
Type	Entry type; statically configured from CLI or dynamically learned from DHCP Snooping.
VLAN	VLAN for the entry.
Interface	IP address of the interface in <i>sSlot/port</i> format.

Example: The following shows example CLI display output for the command.
(switch) #show ipv6 source binding

MAC Address	IP Address	Type	Vlan	Interface
00:00:00:00:00:08	2000::1	dhcp-snooping	2	0/1
00:00:00:00:00:09	3000::1	dhcp-snooping	3	0/1
00:00:00:00:00:0A	4000::1	dhcp-snooping	4	0/1

7 Quality of Service Commands

This chapter describes the Quality of Service (QoS) commands available in the FASTPATH CLI.

The QoS Commands chapter contains the following sections:

- "Class of Service Commands" on page 736"
- "Differentiated Services Commands" on page 746"
- "DiffServ Class Commands" on page 747"
- "DiffServ Policy Commands" on page 755"
- "DiffServ Service Commands" on page 761"
- "DiffServ Show Commands" on page 762"
- "MAC Access Control List Commands" on page 767"
- "IP Access Control List Commands" on page 774"
- "IPv6 Access Control List Commands" on page 788"
- "Time Range Commands for Time-Based ACLs" on page 796"
- "Auto-Voice over IP Commands" on page 798"
- "iSCSI Optimization Commands" on page 802"



Note...

The commands in this chapter are in one of two functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.

7.1 Class of Service Commands

This section describes the commands you use to configure and view Class of Service (CoS) settings for the switch. The commands in this section allow you to control the priority and transmission rate of traffic.



Note...

Commands you issue in the Interface Config mode only affect a single interface. Commands you issue in the Global Config mode affect all interfaces.

7.1.1 classofservice dot1p-mapping

This command maps an 802.1p priority to an internal traffic class. The *userpriority* values can range from 0-7. The *trafficclass* values range from 0-6, although the actual number of available traffic classes depends on the platform.

Format	<code>classofservice dot1p-mapping <i>userpriority trafficclass</i></code>
Modes	• Global Config • Interface Config

7.1.1.1 `no classofservice dot1p-mapping`

This command maps each 802.1p priority to its default internal traffic class value.

Format `no classofservice dot1p-mapping`

Modes

- Global Config
- Interface Config

7.1.2 `classofservice ip-dscp-mapping`

This command maps an IP DSCP value to an internal traffic class. The *ipdscp* value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef.

The *trafficclass* values can range from 0-6, although the actual number of available traffic classes depends on the platform.

Format `classofservice ip-dscp-mapping ipdscp trafficclass`

Mode Global Config

7.1.2.1 `no classofservice ip-dscp-mapping`

This command maps each IP DSCP value to its default internal traffic class value.

Format `no classofservice ip-dscp-mapping`

Mode Global Config

7.1.3 `classofservice ip-precedence-mapping`

This command maps an IP Precedence value to an internal traffic class for a specific interface. The *0-7* parameter is optional and is only valid on platforms that support independent per-port class of service mappings.

Format `classofservice ip-precedence-mapping 0-7`

Mode Global Config

Term	Definition
0-7	The IP Precedence value.

7.1.3.1 `no classofservice ip-precedence-mapping`

This command returns the mapping to its default value.

Format `no classofservice ip-dscp-mapping`

Mode Global Config

7.1.4 classofservice trust

This command sets the class of service trust mode of an interface or range of interfaces. You can set the mode to trust one of the Dot1p (802.1p), IP DSCP, or IP Precedence packet markings. You can also set the interface mode to untrusted. If you configure an interface to use Dot1p, the mode does not appear in the output of the [3.4.21show running-config](#) command because Dot1p is the default.



Note...

The `classofservice trust dot1p` command will not be supported in future releases of the software because Dot1p is the default value. Use the `no classofservice trust` command to set the mode to the default value.

Default	dot1p
Format	<code>classofservice trust {dot1p ip-dscp untrusted}</code>
Modes	• Global Config • Interface Config

7.1.4.1 no classofservice trust

This command sets the interface mode to the default value.

Format	<code>no classofservice trust</code>
Modes	• Global Config • Interface Config

7.1.5 cos-queue max-bandwidth

This command specifies the maximum transmission bandwidth guarantee for each interface queue on an interface, a range of interfaces, or all interfaces. The total number of queues supported per interface is platform specific. A value from 0-100 (percentage of link rate) must be specified for each supported queue, with 0 indicating no maximum bandwidth. The sum of all values entered must not exceed 100.

Format	<code>cos-queue max-bandwidth <i>bw-0 bw-1 ... bw-n</i></code>
Modes	• Global Config • Interface Config

7.1.5.1 no cos-queue max-bandwidth

This command restores the default for each queue's minimum bandwidth value.

Format	<code>no cos-queue min-bandwidth</code>
Modes	• Global Config • Interface Config

7.1.6 cos-queue min-bandwidth

This command specifies the minimum transmission bandwidth guarantee for each interface queue on an interface, a range of interfaces, or all interfaces. The total number of queues supported per interface is platform specific. A value from 0-100 (percentage of link rate) must be specified for each supported queue, with 0 indicating no guaranteed minimum bandwidth. The sum of all values entered must not exceed 100.

Format cos-queue min-bandwidth *bw-0 bw-1 ... bw-n*

Modes

- Global Config
- Interface Config

7.1.6.1 no cos-queue min-bandwidth

This command restores the default for each queue's minimum bandwidth value.

Format no cos-queue min-bandwidth

Modes

- Global Config
- Interface Config

7.1.7 cos-queue random-detect

This command activates weighted random early discard (WRED) for each specified queue on the interface. Specific WRED parameters are configured using the `random-detect queue-parms` and the `random-detect exponential-weighting-constant` commands.

Format cos-queue random-detect *queue-id-1 [queue-id-2 ... queue-id-n]*

Modes

- Global Config
- Interface Config

When specified in Interface Config' mode, this command affects a single interface only, whereas in Global Config mode, it applies to all interfaces.

At least one, but no more than *n* queue-id values are specified with this command. Duplicate queue-id values are ignored. Each queue-id value ranges from 0 to (*n*-1), where *n* is the total number of queues supported per interface. The number *n* = 7 and corresponds to the number of supported queues (traffic classes).

7.1.7.1 no cos-queue random-detect

Use this command to disable WRED, thereby restoring the default tail drop operation for the specified queues on the interface.

Format no cos-queue random-detect *queue-id-1 [queue-id-2 ... queue-id-n]*

Modes

- Global Config
- Interface Config

7.1.8 cos-queue strict

This command activates the strict priority scheduler mode for each specified queue for an interface queue on an interface, a range of interfaces, or all interfaces.

Format `cos-queue strict queue-id-1 [queue-id-2 ... queue-id-n]`

- Modes**
- Global Config
 - Interface Config

7.1.8.1 no cos-queue strict

This command restores the default weighted scheduler mode for each specified queue.

Format `no cos-queue strict queue-id-1 [queue-id-2 ... queue-id-n]`

- Modes**
- Global Config
 - Interface Config

7.1.9 random-detect

This command is used to enable WRED for the interface as a whole, and is only available when per-queue WRED activation control is not supported by the device. Specific WRED parameters are configured using the `random-detect queue-parms` and the `random-detect exponential-weighting-constant` commands.

Format `random-detect`

- Modes**
- Global Config
 - Interface Config

When specified in Interface Config mode, this command affects a single interface only, whereas in Global Config mode, it applies to all interfaces. The Interface Config mode command is only available on platforms that support independent per-port class of service queue configuration.

7.1.9.1 no random-detect

Use this command to disable WRED, thereby restoring the default tail drop operation for all queues on the interface.

Format `no random-detect`

- Modes**
- Global Config
 - Interface Config

7.1.10 random-detect exponential weighting-constant

This command is used to configure the WRED decay exponent for a CoS queue interface.

Format `random-detect exponential-weighting-constant 0-15`

- Modes**
- Global Config
 - Interface Config

7.1.10.1 no random-detect exponential-weighting-constant

Use this command to set the WRED decay exponent back to the default.

Format no random-detect exponential-weighting-constant

- Modes**
- Global Config
 - Interface Config

7.1.11 random-detect queue-parms

This command is used to configure WRED parameters for each drop precedence level supported by a queue. It is used only when per-COS queue configuration is enabled (using the `cos-queue random-detect` command).

Format random-detect queue-parms *queue-id-1* [*queue-id-2* ... *queue-id-n*] min-thresh *thresh-prec-1* ... *thresh-prec-n* max-thresh *thresh-prec-1* ... *thresh-prec-n* drop-probability *prob-prec-1* ... *prob-prec-n*

- Modes**
- Global Config
 - Interface Config

Each parameter is specified for each possible drop precedence (*color* of TCP traffic). The last precedence applies to all non-TCP traffic. For example, in a 3-color system, four of each parameter specified: green TCP, yellow TCP, red TCP, and non-TCP, respectively.

Term	Definition
min-thresh	The minimum threshold the queue depth (as a percentage) where WRED starts marking and dropping traffic.
max-thresh	The maximum threshold is the queue depth (as a percentage) above which WRED marks / drops all traffic.
drop-probability	The percentage probability that WRED will mark/drop a packet, when the queue depth is at the maximum threshold. (The drop probability increases linearly from 0 just before the minimum threshold, to this value at the maximum threshold, then goes to 100% for larger queue depths).

7.1.11.1 no random-detect queue-parms

Use this command to set the WRED configuration back to the default.

Format no random-detect queue-parms *queue-id-1* [*queue-id-2* ... *queue-id-n*]

- Modes**
- Global Config
 - Interface Config

7.1.12 traffic-shape

This command specifies the maximum transmission bandwidth limit for the interface as a whole. The bandwidth values are from 0-100 in increments of 1. You can also specify this value for a range of interfaces or all interfaces. Also known as rate shaping, traffic shaping has the effect of smoothing temporary traffic bursts over time so that the transmitted traffic rate is bounded.

Format traffic-shape *bw*

- Modes**
- Global Config
 - Interface Config

7.1.12.1 no traffic-shape

This command restores the interface shaping rate to the default value.

Format no traffic-shape

Modes

- Global Config
- Interface Config

7.1.13 show classofservice dot1p-mapping

This command displays the current Dot1p (802.1p) priority mapping to internal traffic classes for a specific interface. The *slot/port* parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If specified, the 802.1p mapping table of the interface is displayed. If omitted, the most recent global configuration settings are displayed. For more information, see "Voice VLAN Commands" on page 360".

Format show classofservice dot1p-mapping [*slot/port*]

Mode Privileged EXEC

The following information is repeated for each user priority.

Term	Definition
User Priority	The 802.1p user priority value.
Traffic Class	The traffic class internal queue identifier to which the user priority value is mapped.

7.1.14 show classofservice ip-dscp-mapping

This command displays the current IP DSCP mapping to internal traffic classes for the global configuration settings.

Format show classofservice ip-dscp-mapping

Mode Privileged EXEC

The following information is repeated for each user priority.

Term	Definition
IP DSCP	The IP DSCP value.
Traffic Class	The traffic class internal queue identifier to which the IP DSCP value is mapped.

7.1.15 show classofservice ip-precedence-mapping

This command displays the current IP Precedence mapping to internal traffic classes for a specific interface. The *slot/port* parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If specified, the IP Precedence mapping table of the interface is displayed. If omitted, the most recent global configuration settings are displayed.

Format show classofservice ip-precedence-mapping [*slot/port*]

Mode Privileged EXEC

Term	Definition
IP Precedence	The IP Precedence value.

Term	Definition
Traffic Class	The traffic class internal queue identifier to which the IP Precedence value is mapped.

7.1.16 show classofservice trust

This command displays the current trust mode setting for a specific interface. The *slot/port* parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If you specify an interface, the command displays the port trust mode of the interface. If you do not specify an interface, the command displays the most recent global configuration settings.

Format show classofservice trust [*slot/port*]

Mode Privileged EXEC

Term	Definition
Class of Service Trust Mode	The the trust mode, which is either Dot1P, IP DSCP, or Untrusted.
Non-IP Traffic Class	(IP DSCP mode only) The traffic class used for non-IP traffic.
Untrusted Traffic Class	(Untrusted mode only) The traffic class used for all untrusted traffic.

7.1.17 show interfaces cos-queue

This command displays the class-of-service queue configuration for the specified interface. The *slot/port* parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If specified, the class-of-service queue configuration of the interface is displayed. If omitted, the most recent global configuration settings are displayed.

Format show interfaces cos-queue [*slot/port*]

Mode Privileged EXEC

Term	Definition
Interface Shaping Rate	The global interface shaping rate value.
WRED Decay Exponent	The global WRED decay exponent value.
Queue Id	An interface supports n queues numbered 0 to (n-1). The specific n value is platform dependent.
Minimum Bandwidth	The minimum transmission bandwidth guarantee for the queue, expressed as a percentage. A value of 0 means bandwidth is not guaranteed and the queue operates using best-effort. This is a configured value.
Maximum Bandwidth	The maximum transmission bandwidth guarantee for the queue, expressed as a percentage. A value of 0 means bandwidth is not guaranteed and the queue operates using best-effort. This is a configured value.
Scheduler Type	Indicates whether this queue is scheduled for transmission using a strict priority or a weighted scheme. This is a configured value.
Queue Management Type	The queue depth management technique used for this queue (tail drop).

If you specify the interface, the command also displays the following information.

Term	Definition
Interface	The <i>slot/port</i> of the interface. If displaying the global configuration, this output line is replaced with a Global Config indication.

Term	Definition
Interface Shaping Rate	The maximum transmission bandwidth limit for the interface as a whole. It is independent of any per-queue maximum bandwidth value(s) in effect for the interface. This is a configured value.
WRED Decay Exponent	The configured WRED decay exponent for a CoS queue interface.

7.1.18 show interfaces random-detect

This command displays the global WRED settings for each CoS queue. If you specify the slot/port, the command displays the WRED settings for each CoS queue on the specified interface.

Format `show interfaces random-detect [slot/port]`

Mode Privileged EXEC

Term	Definition
Queue ID	An interface supports n queues numbered 0 to (n-1). The specific n value is platform dependent.
WRED Minimum Threshold	The configured minimum threshold the queue depth (as a percentage) where WRED starts marking and dropping traffic.
WRED Maximum Threshold	The configured maximum threshold is the queue depth (as a percentage) above which WRED marks / drops all traffic.
WRED Drop Probability	The configured percentage probability that WRED will mark/drop a packet, when the queue depth is at the maximum threshold. (The drop probability increases linearly from 0 just before the minimum threshold, to this value at the maximum threshold, then goes to 100% for larger queue depths).

7.1.19 show interfaces tail-drop-threshold

This command displays the tail drop threshold information. If you specify the slot/port, the command displays the tail drop threshold information for the specified interface.

Format `show interfaces tail-drop-threshold [slot/port]`

Mode Privileged EXEC

7.1.20 show protection-group

This command lists the protection groups and port egress masks. All or specified protection groups or port egress masks (for all or a specified interface) can be displayed. The protection groups are listed with the interface members, the egress masks are listed related to the calculation type (user specified, related to the protection group or '--' for default).

Format `show protection-group <0..3>`
 `show protection-group all`

Mode Privileged EXEC

7.1.21 protection-group (configure)

This command adds a protection group and/or a name associated to a group. The addition of a protection group has no effect as long as no members are included (interface). Optional a name can be assigned to a protection group with parameter 'name' when adding the group or for an already active group. The length of the name is restricted to 15 characters.

For stacking this command is only valid inside a unit (receiving and sending ports in same unit).

Format `protection-group <0..3>`
 `protection-group <0..3> name name`
Mode Global Config

7.1.21.1 no protection-group (configure)

This command deletes a protection group and/or a name associated to a group. If deleting a protection group all members of this group are deleted too. The name can be deleted by using the 'no' command with the parameter 'name' (the protection group remains active then). The length of the name is restricted to 15 characters.

Format `no protection-group <0..3>`
 `no protection-group <0..3> name name`
Mode Global Config

7.1.22 protection-group (interface)

This command includes/excludes interfaces to/from a protection group or sets an egress-mask for an interface.

If an interface is member in a protection group it may sent packets to interfaces which are not member of any group (unprotected) and to interfaces in the same group, but not to interfaces in another group. An egress-mask is calculated based on the protection-groups containing for each interface (bit 0 for first interface) a bit, indicating that it is allowed (1) or prohibited (0) to forward to this interface. The calculated egress-mask can be displayed by "show protection-group mask" below.

The calculated egress-mask may be overridden by setting directly this mask (use parameter "mask"). This is not supported for stacking mode.

For a LAG the minimal egress mask over all member interfaces (either calculated for protection-groups or directly set) is used (<mask-member-1> & ... & <mask-member-N>).

Format `protection-group {<0..3> | mask <mask>}`
Mode Interface Config

7.1.22.1 no protection-group (interface)

The command deletes an interface to a protection group or deletes an egress port mask. The command deletes an egress mask for an interface if specifying the keyword 'mask'.

Format `no protection-group {<0..3> | mask <mask>}`
Mode Interface Config

7.2 Differentiated Services Commands

This section describes the commands you use to configure QoS Differentiated Services (DiffServ).

You configure DiffServ in several stages by specifying three DiffServ components:

1. Class
 - a. Creating and deleting classes.
 - b. Defining match criteria for a class.
2. Policy
 - a. Creating and deleting policies
 - b. Associating classes with a policy
 - c. Defining policy statements for a policy/class combination
3. Service
 - a. Adding and removing a policy to/from an inbound interface

The DiffServ class defines the packet filtering criteria. The attributes of a DiffServ policy define the way the switch processes packets. You can define policy attributes on a per-class instance basis. The switch applies these attributes when a match occurs.

Packet processing begins when the switch tests the match criteria for a packet. The switch applies a policy to a packet when it finds a class match within that policy.

The following rules apply when you create a DiffServ class:

- Each class can contain a maximum of one referenced (nested) class
- Class definitions do not support hierarchical service policies

A given class definition can contain a maximum of one reference to another class. You can combine the reference with other match criteria. The referenced class is truly a reference and not a copy since additions to a referenced class affect all classes that reference it. Changes to any class definition currently referenced by any other class must result in valid class definitions for all derived classes, otherwise the switch rejects the change. You can remove a class reference from a class definition.

The only way to remove an individual match criterion from an existing class definition is to delete the class and re-create it.



Note...

The mark possibilities for policing include CoS, IP DSCP, and IP Precedence. While the latter two are only meaningful for IP packet types, CoS marking is allowed for both IP and non-IP packets, since it updates the 802.1p user priority field contained in the VLAN tag of the layer 2 packet header.

7.2.1 diffserv

This command sets the DiffServ operational mode to active. While disabled, the DiffServ configuration is retained and can be changed, but it is not activated. When enabled, DiffServ services are activated.

Format diffserv

Mode Global Config

7.2.1.1 no diffserv

This command sets the DiffServ operational mode to inactive. While disabled, the DiffServ configuration is retained and can be changed, but it is not activated. When enabled, DiffServ services are activated.

Format no diffserv

Mode Global Config

7.3 DiffServ Class Commands

Use the DiffServ class commands to define traffic classification. To classify traffic, you specify Behavior Aggregate (BA), based on DSCP and Multi-Field (MF) classes of traffic (name, match criteria).

This set of commands consists of class creation/deletion and matching, with the class match commands specifying Layer 3, Layer 2, and general match criteria. The class match criteria are also known as class rules, with a class definition consisting of one or more rules to identify the traffic that belongs to the class.



Note...

Once you create a class match criterion for a class, you cannot change or delete the criterion. To change or delete a class match criterion, you must delete and re-create the entire class.

The CLI command root is `class-map`.

7.3.1 class-map

This command defines a DiffServ class of type match-all. When used without any match condition, this command enters the class-map mode. The *class-map-name* is a case sensitive alphanumeric string from 1 to 31 characters uniquely identifying an existing DiffServ class.



Note...

The class-map-name 'default' is reserved and must not be used.

The class type of `match-all` indicates all of the individual match conditions must be true for a packet to be considered a member of the class. This command may be used without specifying a class type to enter the Class-Map Config mode for an existing DiffServ class.



Note...

The optional keywords [`ipv4` | `ipv6`] specify the Layer 3 protocol for this class. If not specified, this parameter defaults to `ipv4`. This maintains backward compatibility for configurations defined on systems before IPv6 match items were supported.

The optional keyword `appiq` creates a new DiffServ appiq class. Regular expressions found in the traffic patterns in layer 7 applications can be matched to the App-IQ class using a `match signature` command.



Note...

The CLI mode is changed to Class-Map Config or Ipv6-Class-Map Config when this command is successfully executed depending on the [`ipv4` | `ipv6`] keyword specified.

Format `class-map match-all class-map-name [{appiq | ipv4 | ipv6}]`
Mode Global Config

7.3.1.1 no class-map

This command eliminates an existing DiffServ class. The *class-map-name* is the name of an existing DiffServ class. (The class name **default** is reserved and is not allowed here.) This command may be issued at any time; if the class is currently referenced by one or more policies or by any other class, the delete action fails.

Format `no class-map class-map-name`
Mode Global Config

7.3.2 class-map rename

This command changes the name of a DiffServ class. The *class-map-name* is the name of an existing DiffServ class. The *new-class-map-name* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the class.

Default none
Format `class-map rename class-map-name new-class-map-name`
Mode Global Config

7.3.3 match ethertype

This command adds to the specified class definition a match condition based on the value of the ethertype. The *ethertype* value is specified as one of the following keywords: appletalk, arp, ibmsna, ipv4, ipv6, ipx, mplsmlcast, mplsucast, netbios, novell, pppoe, rarp or as a custom EtherType value in the range of 0x0600-0xFFFF. Use the [not] option to negate the match condition.



Note...

This command is not available on the Broadcom BCM5630x platform.

Format `match [not] ethertype {keyword / custom 0x0600-0xFFFF}`
Mode Class-Map Config
 Ipv6-Class-Map Config

7.3.4 match any

This command adds to the specified class definition a match condition whereby all packets are considered to belong to the class. Use the [not] option to negate the match condition.

Default none
Format `match [not] any`
Mode Class-Map Config
 Ipv6-Class-Map Config

7.3.5 match class-map

This command adds to the specified class definition the set of match conditions defined for another class. The *refClassName* is the name of an existing DiffServ class whose match conditions are being referenced by the specified class definition.

Default	none
Format	match class-map <i>refClassName</i>
Mode	Class-Map Config Ipv6-Class-Map Config

**Note...**

- The parameters *refClassName* and *class-map-name* can not be the same.
- Only one other class may be referenced by a class.
- Any attempts to delete the *refClassName* class while the class is still referenced by any *class-map-name* fails.
- The combined match criteria of *class-map-name* and *refClassName* must be an allowed combination based on the class type.
- Any subsequent changes to the *refClassName* class match criteria must maintain this validity, or the change attempt fails.
- The total number of class rules formed by the complete reference class chain (including both predecessor and successor classes) must not exceed a platform-specific maximum. In some cases, each removal of a refclass rule reduces the maximum number of available rules in the class definition by one.

7.3.5.1 no match class-map

This command removes from the specified class definition the set of match conditions defined for another class. The *refClassName* is the name of an existing DiffServ class whose match conditions are being referenced by the specified class definition.

Format	no match class-map <i>refClassName</i>
Mode	Class-Map Config Ipv6-Class-Map Config

7.3.6 match cos

This command adds to the specified class definition a match condition for the Class of Service value (the only tag in a single tagged packet or the first or outer 802.1Q tag of a double VLAN tagged packet). The value may be from 0 to 7. Use the [not] option to negate the match condition.

**Note...**

This command is not available on the Broadcom BCM5630x platform.

Default	none
Format	match [not] cos 0-7
Mode	Class-Map Config Ipv6-Class-Map Config

7.3.7 match secondary-cos

This command adds to the specified class definition a match condition for the secondary Class of Service value (the inner 802.1Q tag of a double VLAN tagged packet). The value may be from 0 to 7. Use the [not] option to negate the match condition.



Note...

This command is supported on the following platforms:

- BCM56314
- BCM56504
- BCM56214
- BCM56224

Default	none
Format	match [not]secondary-cos 0-7
Mode	Class-Map Config Ipv6-Class-Map Config

7.3.8 match destination-address mac

This command adds to the specified class definition a match condition based on the destination MAC address of a packet. The *macaddr* parameter is any layer 2 MAC address formatted as six, two-digit hexadecimal numbers separated by colons (e.g., 00:11:22:dd:ee:ff). The *macmask* parameter is a layer 2 MAC address bit mask, which need not be contiguous, and is formatted as six, two-digit hexadecimal numbers separated by colons (e.g., ff:07:23:ff:fe:dc). Use the [not] option to negate the match condition.



Note...

This command is not available on the Broadcom BCM5630x platform.

Default	none
Format	match [not] destination-address mac <i>macaddr macmask</i>
Mode	Class-Map Config Ipv6-Class-Map Config

7.3.9 match dstip

This command adds to the specified class definition a match condition based on the destination IP address of a packet. The *ipaddr* parameter specifies an IP address. The *ipmask* parameter specifies an IP address bit mask and must consist of a contiguous set of leading 1 bits. Use the [not] option to negate the match condition.

Default	none
Format	match [not] dstip <i>ipaddr ipmask</i>
Mode	Class-Map Config

7.3.10 match dstip6

This command adds to the specified class definition a match condition based on the destination IPv6 address of a packet. Use the [not] option to negate the match condition.

Default	none
Format	match [not] dstip6 <i>destination-ipv6-prefix/prefix-length</i>
Mode	Ipv6-Class-Map Config

7.3.11 match dstl4port

This command adds to the specified class definition a match condition based on the destination layer 4 port of a packet using a single keyword or numeric notation. To specify the match condition as a single keyword, the value for *portkey* is one of the supported port name keywords. The currently supported *portkey* values are: domain, echo, ftp, ftpdata, http, smtp, snmp, telnet, tftp, www. Each of these translates into its equivalent port number. To specify the match condition using a numeric notation, one layer 4 port number is required. The port number is an integer from 0 to 65535. Use the [not] option to negate the match condition.

Default	none
Format	match [not] dstl4port { <i>portkey</i> / 0-65535}
Mode	Class-Map Config Ipv6-Class-Map Config

7.3.12 match ip dscp

This command adds to the specified class definition a match condition based on the value of the IP DiffServ Code Point (DSCP) field in a packet, which is defined as the high-order six bits of the Service Type octet in the IP header (the low-order two bits are not checked).

The *dscpval* value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef. Use the [not] option to negate the match condition.



Note...

The ip dscp, ip precedence, and ip tos match conditions are alternative ways to specify a match criterion for the same Service Type field in the IP header, but with a slightly different user notation.

Default	none
Format	match [not] ip dscp <i>dscpval</i>
Mode	Class-Map Config Ipv6-Class-Map Config

7.3.13 match ip precedence

This command adds to the specified class definition a match condition based on the value of the IP Precedence field in a packet, which is defined as the high-order three bits of the Service Type octet in the IP header (the low-order five bits are not checked). The precedence value is an integer from 0 to 7. Use the [not] option to negate the match condition.

**Note...**

The IP DSCP, IP Precedence, and IP ToS match conditions are alternative ways to specify a match criterion for the same Service Type field in the IP header, but with a slightly different user notation.

Default	none
Format	match [not] ip precedence 0-7
Mode	Class-Map Config

7.3.14 match ip tos

This command adds to the specified class definition a match condition based on the value of the IP TOS field in a packet, which is defined as all eight bits of the Service Type octet in the IP header. The value of *tosbits* is a two-digit hexadecimal number from 00 to ff. The value of *tosmask* is a two-digit hexadecimal number from 00 to ff. The *tosmask* denotes the bit positions in *tosbits* that are used for comparison against the IP TOS field in a packet. For example, to check for an IP TOS value having bits 7 and 5 set and bit 1 clear, where bit 7 is most significant, use a *tosbits* value of a0 (hex) and a *tosmask* of a2 (hex). Use the [not] option to negate the match condition.

**Note...**

The IP DSCP, IP Precedence, and IP ToS match conditions are alternative ways to specify a match criterion for the same Service Type field in the IP header, but with a slightly different user notation.

**Note...**

This “free form” version of the IP DSCP/Precedence/TOS match specification gives the user complete control when specifying which bits of the IP Service Type field are checked.

Default	none
Format	match [not] ip tos <i>tosbits tosmask</i>
Mode	Class-Map Config

7.3.15 match ip6flowlbl

Use this command to enter an IPv6 flow label value. Use the [not] option to negate the match condition.

Default	none
Format	match [not] ip6flowlbl label 0-1048575
Mode	IPv6-Class-Map Config

7.3.16 match protocol

This command adds to the specified class definition a match condition based on the value of the IP Protocol field in a packet using a single keyword notation or a numeric value notation.

To specify the match condition using a single keyword notation, the value for *protocol-name* is one of the supported protocol name keywords. The currently supported values are: *icmp*, *igmp*, *ip*, *tcp*, *udp*. A value of *ip* matches all protocol number values.

To specify the match condition using a numeric value notation, the protocol number is a standard value assigned by IANA and is interpreted as an integer from 0 to 255. Use the [not] option to negate the match condition.

**Note...**

This command does not validate the protocol number value against the current list defined by IANA.

Default	none
Format	match [not] protocol { <i>protocol-name</i> / 0-255}
Mode	Class-Map Config Ipv6-Class-Map Config

7.3.17 match signature

This command maps the available signatures from the rules file to the AppIQ class. When the appiq class is created, this menu displays an index number and its signature pattern. A single signature can be mapped using a number or multiple signatures can be selected and mapped to a class. Using this command without an index value maps all the available signatures to the same class.

Default	none
Format	match signature [< <i>StartIndex</i> >-< <i>EndIndex</i> >]
Mode	Class-Map Config

7.3.18 match source-address mac

This command adds to the specified class definition a match condition based on the source MAC address of a packet. The *address* parameter is any layer 2 MAC address formatted as six, two-digit hexadecimal numbers separated by colons (e.g., 00:11:22:dd:ee:ff). The *macmask* parameter is a layer 2 MAC address bit mask, which may not be contiguous, and is formatted as six, two-digit hexadecimal numbers separated by colons (e.g., ff:07:23:ff:fe:dc). Use the [not] option to negate the match condition.

**Note...**

This command is not available on the Broadcom 5630x platform.

Default	none
Format	match [not] source-address mac <i>address macmask</i>
Mode	Class-Map Config Ipv6-Class-Map Config

7.3.19 match srcip

This command adds to the specified class definition a match condition based on the source IP address of a packet. The *ipaddr* parameter specifies an IP address. The *ipmask* parameter specifies an IP address bit mask and must consist of a contiguous set of leading 1 bits. Use the [not] option to negate the match condition.

Default none
Format match [not] srcip *ipaddr ipmask*
Mode Class-Map Config

7.3.20 match srcip6

This command adds to the specified class definition a match condition based on the source IP address of a packet. Use the [not] option to negate the match condition.

Default none
Format match [not] srcip6 *source-ipv6-prefix/prefix-length*
Mode Ipv6-Class-Map Config

7.3.21 match srcl4port

This command adds to the specified class definition a match condition based on the source layer 4 port of a packet using a single keyword or numeric notation. To specify the match condition as a single keyword notation, the value for *portkey* is one of the supported port name keywords (listed below). The currently supported *portkey* values are: domain, echo, ftp, ftpdata, http, smtp, snmp, telnet, tftp, www. Each of these translates into its equivalent port number, which is used as both the start and end of a port range.

To specify the match condition as a numeric value, one layer 4 port number is required. The port number is an integer from 0 to 65535. Use the [not] option to negate the match condition.

Default none
Format match [not] srcl4port {*portkey* | 0-65535}
Mode Class-Map Config
 Ipv6-Class-Map Config

7.3.22 match src port

This command adds a match condition for a range of layer source 4 ports. If an interface receives traffic that is within the configured range of layer 4 source ports, then only the *appiq* class is in effect. *portvalue* specifies a single source port.

Default none
Format match src port {*portstart-portend* | *portvalue*}
Mode Class-Map Config

7.3.23 match vlan

This command adds to the specified class definition a match condition based on the value of the layer 2 VLAN Identifier field (the only tag in a single tagged packet or the first or outer tag of a double VLAN tagged packet). The VLAN ID is an integer from 0 to 4093. Use the [not] option to negate the match condition.

**Note...**

This command is not available on the Broadcom 5630x platform.

Default	none
Format	match [not] vlan 0-4093
Mode	Class-Map Config Ipv6-Class-Map Config

7.3.24 match secondary-vlan

This command adds to the specified class definition a match condition based on the value of the layer 2 secondary VLAN Identifier field (the inner 802.1Q tag of a double VLAN tagged packet). The secondary VLAN ID is an integer from 0 to 4093. Use the [not] option to negate the match condition.

**Note...**

This command is not available on the Broadcom 5630x platform.

Default	none
Format	match [not] secondary-vlan 0-4093
Mode	Class-Map Config Ipv6-Class-Map Config

7.4 DiffServ Policy Commands

Use the DiffServ policy commands to specify traffic conditioning actions, such as policing and marking, to apply to traffic classes

Use the policy commands to associate a traffic class that you define by using the class command set with one or more QoS policy attributes. Assign the class/policy association to an interface to form a service. Specify the policy name when you create the policy.

Each traffic class defines a particular treatment for packets that match the class definition. You can associate multiple traffic classes with a single policy. When a packet satisfies the conditions of more than one class, preference is based on the order in which you add the classes to the policy. The first class you add has the highest precedence.

This set of commands consists of policy creation/deletion, class addition/removal, and individual policy attributes.

**Note...**

The only way to remove an individual policy attribute from a class instance within a policy is to remove the class instance and re-add it to the policy. The values associated with an existing policy attribute can be changed without removing the class instance.

The CLI command root is `policy-map`.

7.4.1 assign-queue

This command modifies the queue id to which the associated traffic stream is assigned. The *queueid* is an integer from 0 to *n*-1, where *n* is the number of egress queues supported by the device.

Format assign-queue *queueid*

Mode Policy-Class-Map Config

Incompatibilities Drop

7.4.2 drop

This command specifies that all packets for the associated traffic stream are to be dropped at ingress.

Format drop

Mode Policy-Class-Map Config

Incompatibilities Assign Queue, Mark (all forms), Mirror, Police, Redirect

7.4.3 mirror

This command specifies that all incoming packets for the associated traffic stream are copied to a specific egress interface (physical port or LAG).

**Note...**

This command is not available on the Broadcom 5630x platform.

Format mirror *slot/port*

Mode Policy-Class-Map Config

Incompatibilities Drop, Redirect

7.4.4 redirect

This command specifies that all incoming packets for the associated traffic stream are redirected to a specific egress interface (physical port or port-channel).

**Note...**

This command is not available on the Broadcom 5630x platform.

Format redirect *slot/port*

Mode Policy-Class-Map Config

Incompatibilities Drop, Mirror

7.4.5 conform-color

Use this command to enable color-aware traffic policing and define the conform-color class map. Used in conjunction with the police command where the fields for the conform level are specified. The *class-map-name* parameter is the name of an existing DiffServ class map.

**Note...**

This command may only be used after specifying a police command for the policy-class instance.

Format conform-color *class-map-name*
Mode Policy-Class-Map Config

7.4.6 class

This command creates an instance of a class definition within the specified policy for the purpose of defining treatment of the traffic class through subsequent policy attribute statements. The *classname* is the name of an existing DiffServ class.



Note...

This command causes the specified policy to create a reference to the class definition.



Note...

The CLI mode is changed to Policy-Class-Map Config when this command is successfully executed.

Format class *classname*
Mode Policy-Map Config

7.4.6.1 no class

This command deletes the instance of a particular class and its defined treatment from the specified policy. *classname* is the names of an existing DiffServ class.



Note...

This command removes the reference to the class definition for the specified policy.

Format no class *classname*
Mode Policy-Map Config

7.4.7 mark cos

This command marks all packets for the associated traffic stream with the specified class of service (CoS) value in the priority field of the 802.1p header (the only tag in a single tagged packet or the first or outer 802.1Q tag of a double VLAN tagged packet). If the packet does not already contain this header, one is inserted. The CoS value is an integer from 0 to 7.

Default 1
Format mark-cos *0-7*
Mode Policy-Class-Map Config
Incompatibilities Drop, Mark IP DSCP, IP Precedence, Police

7.4.8 mark secondary-cos

This command marks the outer VLAN tags in the packets for the associated traffic stream as secondary CoS.

Default	1
Format	mark secondary-cos 0-7
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mark IP DSCP, IP Precedence, Police

7.4.9 mark cos-as-sec-cos

This command marks outer VLAN tag priority bits of all packets as the inner VLAN tag priority, marking Cos as Secondary CoS. This essentially means that the inner VLAN tag CoS is copied to the outer VLAN tag CoS.

Format	mark-cos-as-sec-cos
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mark IP DSCP, IP Precedence, Police

Example: The following shows an example of the command.
(switch) (Config-policy-classmap)#mark cos-as-sec-cos

7.4.10 mark ip-dscp

This command marks all packets for the associated traffic stream with the specified IP DSCP value.

The *dscpval* value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef.

Format	mark ip-dscp dscpval
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mark CoS, Mark IP Precedence, Police

7.4.11 mark ip-precedence

This command marks all packets for the associated traffic stream with the specified IP Precedence value. The IP Precedence value is an integer from 0 to 7.



Note...

This command may not be used on IPv6 classes. IPv6 does not have a precedence field.

Format	mark ip-precedence 0-7
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mark CoS, Mark IP Precedence, Police
Policy Type	In

7.4.12 police-simple

This command is used to establish the traffic policing style for the specified class. The simple form of the **police** command uses a single data rate and burst size, resulting in two outcomes: conform and violate. The conforming data rate is specified in kilobits-per-second (Kbps) and is an integer from 1 to 4294967295. The conforming burst size is specified in kilobytes (KB) and is an integer from 1 to 128.

For each outcome, the only possible actions are drop, set-cos-as-sec-cos, set-cos-transmit, set-sec-cos-transmit, set-dscp-transmit, set-prec-transmit, or transmit. In this simple form of the **police** command, the conform action defaults to transmit and the violate action defaults to drop. These actions can be set with this command once the style has been configured.

For set-dscp-transmit, a *dscpval* value is required and is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef.

For set-prec-transmit, an IP Precedence value is required and is specified as an integer from 0-7.

For set-cos-transmit an 802.1p priority value is required and is specified as an integer from 0-7.

Format `police-simple {1-4294967295 1-128 conform-action {drop | set-cos-as-sec-cos | set-cos-transmit 0-7 | set-sec-cos-transmit 0-7 | set-prec-transmit 0-7 | set-dscp-transmit 0-63 | transmit} [violate-action {drop | set-cos-as-sec-cos | set-cos-transmit 0-7 | set-sec-cos-transmit 0-7 | set-prec-transmit 0-7 | set-dscp-transmit 0-63 | transmit}]}`

Mode Policy-Class-Map Config

Incompatibilities Drop, Mark (all forms)

Example: The following shows an example of the command.

```
(switch) (Config-policy-classmap)#police-simple 1 128 conform-action transmit violate-action drop
```

7.4.13 police-single-rate

This command is the single-rate form of the **police** command and is used to establish the traffic policing style for the specified class. For each outcome, the only possible actions are drop, set-cos-as-sec-cos, set-cos-transmit, set-sec-cos-transmit, set-dscp-transmit, set-prec-transmit, or transmit. In this single-rate form of the **police** command, the conform action defaults to send, the exceed action defaults to drop, and the violate action defaults to drop. These actions can be set with this command once the style has been configured.

Format `police-single-rate {1-4294967295 1-128 1-128 conform-action {drop | set-cos-as-sec-cos | set-cos-transmit 0-7 | set-sec-cos-transmit 0-7 | set-prec-transmit 0-7 | set-dscp-transmit 0-63 | transmit} exceed-action {drop | set-cos-as-sec-cos | set-cos-transmit 0-7 | set-sec-cos-transmit 0-7 | set-prec-transmit 0-7 | set-dscp-transmit 0-63 | transmit} [violate-action {drop | set-cos-as-sec-cos-transmit | set-cos-transmit 0-7 | set-sec-cos-transmit 0-7 | set-prec-transmit 0-7 | set-dscp-transmit 0-63 | transmit}]}`

Mode Policy-Class-Map Config

7.4.14 police-two-rate

This command is the two-rate form of the **police** command and is used to establish the traffic policing style for the specified class. For each outcome, the only possible actions are drop, set-cos-as-sec-cos, set-cos-transmit, set-sec-cos-transmit, set-dscp-transmit, set-prec-transmit, or transmit. In this two-rate form of the **police** command, the conform action defaults to send, the exceed action defaults to drop, and the violate action defaults to drop. These actions can be set with this command once the style has been configured.

Format	<code>police-two-rate {1-4294967295 1-4294967295 1-128 1-128 conform-action {drop set-cos-as-sec-cos set-cos-transmit 0-7 set-sec-cos-transmit 0-7 set-prec-transmit 0-7 set-dscp-transmit 0-63 transmit} exceed-action {drop set-cos-as-sec-cos set-cos-transmit 0-7 set-sec-cos-transmit 0-7 set-prec-transmit 0-7 set-dscp-transmit 0-63 transmit} [violate-action {drop set-cos-as-sec-cos set-cos-transmit 0-7 set-sec-cos-transmit 0-7 set-prec-transmit 0-7 set-dscp-transmit 0-63 transmit}]}</code>
Mode	Policy-Class-Map Config

7.4.15 policy-map

This command establishes a new DiffServ policy. The *polycyname* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the policy. The type of policy is specific to the inbound traffic direction as indicated by the *in* parameter, or the outbound traffic direction as indicated by the *out* parameter, respectively.



Note...

The CLI mode is changed to Policy-Map Config when this command is successfully executed.

Format	<code>policy-map <i>polycyname</i> {in out}</code>
Mode	Global Config

7.4.15.1 no policy-map

This command eliminates an existing DiffServ policy. The *polycyname* parameter is the name of an existing DiffServ policy. This command may be issued at any time. If the policy is currently referenced by one or more interface service attachments, this delete attempt fails.

Format	<code>no policy-map <i>polycyname</i></code>
Mode	Global Config

7.4.16 policy-map rename

This command changes the name of a DiffServ policy. The *polycyname* is the name of an existing DiffServ class. The *newpolycyname* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the policy.

Format	<code>policy-map rename <i>polycyname</i> <i>newpolycyname</i></code>
Mode	Global Config

7.4.17 egress-mask

This command sets a specific egress mask. It belongs to the policy commands. The bitmap mask contains for each interface a bit (interface 0/1 is bit 0) indicating forward (0) or drop (1). A maximum of 32 interfaces is supported currently.

Format	<code>egress-mask <bitmap-mask></code>
Mode	Policy-Class-Map Config

7.4.18 replace-port-bitmap

This command replaces the port bitmap mask. It belongs to the policy commands. The bitmap mask contains for each interface a bit (interface 0/1 is bit 0) indicating drop (0) or forward (1). A maximum of 32 interfaces is supported currently.

Format `replace-port-bitmap <bitmap-mask>`

Mode Policy-Class-Map Config

7.5 DiffServ Service Commands

Use the DiffServ service commands to assign a DiffServ traffic conditioning policy, which you specified by using the policy commands, to an interface in the incoming direction

The service commands attach a defined policy to a directional interface. You can assign only one policy at any one time to an interface in the inbound direction. DiffServ is not used in the outbound direction.

This set of commands consists of service addition/removal.

The CLI command root is `service-policy`.

7.5.1 service-policy

This command attaches a policy to an interface in the inbound direction as indicated by the `in` parameter, or the outbound direction as indicated by the `out` parameter, respectively. The *polycyname* parameter is the name of an existing DiffServ policy. This command causes a service to create a reference to the policy.

**Note...**

This command effectively enables DiffServ on an interface in the inbound direction. There is no separate interface administrative 'mode' command for DiffServ.

**Note...**

This command fails if any attributes within the policy definition exceed the capabilities of the interface. Once a policy is successfully attached to an interface, any attempt to change the policy definition, that would result in a violation of the interface capabilities, causes the policy change attempt to fail.

Format `service-policy {in|out} polycyname`

- Modes**
- Global Config
 - Interface Config

**Note...**

Each interface can have one policy attached.

7.5.1.1 no service-policy

This command detaches a policy from an interface in the inbound direction as indicated by the `in` parameter, or the outbound direction as indicated by the `out` parameter, respectively. The *polIcyname* parameter is the name of an existing DiffServ policy.

**Note...**

This command causes a service to remove its reference to the policy. This command effectively disables DiffServ on an interface in the inbound direction or an interface in the outbound direction. There is no separate interface administrative 'mode' command for DiffServ.

Format no service-policy {in|out} *polIcymapname*

Modes

- Global Config
- Interface Config

7.6 DiffServ Show Commands

Use the DiffServ show commands to display configuration and status information for classes, policies, and services. You can display DiffServ information in summary or detailed formats. The status information is only shown when the DiffServ administrative mode is enabled.

7.6.1 show class-map

This command displays all configuration information for the specified class. The *class-name* is the name of an existing DiffServ class.

Format show class-map *class-name*

Modes

- Privileged EXEC
- User EXEC

If the class-name is specified the following fields are displayed:

Term	Definition
Class Name	The name of this class.
Class Type	A class type of all means every match criterion defined for the class is evaluated simultaneously and must all be true to indicate a class match.
Class Layer3 Protocol	The Layer 3 protocol for this class. Possible values are IPv4 and IPv6.
Match Criteria	The Match Criteria fields are only displayed if they have been configured. Not all platforms support all match criteria values. They are displayed in the order entered by the user. The fields are evaluated in accordance with the class type. The possible Match Criteria fields are: Destination IP Address, Destination Layer 4 Port, Destination MAC Address, Ethertype, Source MAC Address, VLAN, Class of Service, Every, IP DSCP, IP Precedence, IP TOS, Protocol Keyword, Reference Class, Source IP Address, and Source Layer 4 Port.
Values	The values of the Match Criteria.

If you do not specify the Class Name, this command displays a list of all defined DiffServ classes. The following fields are displayed:

Term	Definition
Class Name	The name of this class. (Note that the order in which classes are displayed is not necessarily the same order in which they were created.)
Class Type	A class type of all means every match criterion defined for the class is evaluated simultaneously and must all be true to indicate a class match.
Ref Class Name	The name of an existing DiffServ class whose match conditions are being referenced by the specified class definition.

7.6.2 show diffserv

This command displays the DiffServ General Status Group information, which includes the current administrative mode setting as well as the current and maximum number of rows in each of the main DiffServ private MIB tables. This command takes no options.

Format show diffserv

Mode Privileged EXEC

Term	Definition
DiffServ Admin mode	The current value of the DiffServ administrative mode.
Class Table Size Current/Max	The current and maximum number of entries (rows) in the Class Table.
Class Rule Table Size Current/Max	The current and maximum number of entries (rows) in the Class Rule Table.
Policy Table Size Current/Max	The current and maximum number of entries (rows) in the Policy Table.
Policy Instance Table Size Current/Max	The current and maximum number of entries (rows) in the Policy Instance Table.
Policy Instance Table Max Current/Max	The current and maximum number of entries (rows) for the Policy Instance Table.
Policy Attribute Table Max Current/Max	The current and maximum number of entries (rows) for the Policy Attribute Table.
Service Table Size Current/Max	The current and maximum number of entries (rows) in the Service Table.

7.6.3 show policy-map

This command displays all configuration information for the specified policy. The *pol icynam e* is the name of an existing DiffServ policy.

Format show policy-map [*pol icynam e*]

Mode Privileged EXEC

If the Policy Name is specified the following fields are displayed:

Term	Definition
Policy Name	The name of this policy.
Policy Type	The policy type (only inbound policy definitions are supported for this platform.)
Class Members	The class that is a member of the policy.

The following information is repeated for each class associated with this policy (only those policy attributes actually configured are displayed):

Term	Definition
Assign Queue	Directs traffic stream to the specified QoS queue. This allows a traffic classifier to specify which one of the supported hardware queues are used for handling packets belonging to the class.
Class Name	The name of this class.
Committed Burst Size (KB)	The committed burst size, used in simple policing.
Committed Rate (Kbps)	The committed rate, used in simple policing.
Conform Action	The current setting for the action taken on a packet considered to conform to the policing parameters. This is not displayed if policing is not in use for the class under this policy.
Conform Color Mode	The current setting for the color mode. Policing uses either color blind or color aware mode. Color blind mode ignores the coloration (marking) of the incoming packet. Color aware mode takes into consideration the current packet marking when determining the policing outcome.
Conform COS	The CoS mark value if the conform action is set-cos-transmit.
Conform DSCP Value	The DSCP mark value if the conform action is set-dscp-transmit.
Conform IP Precedence Value	The IP Precedence mark value if the conform action is set-prec-transmit.
Drop	Drop a packet upon arrival. This is useful for emulating access control list operation using DiffServ, especially when DiffServ and ACL cannot co-exist on the same interface.
Exceed Action	The action taken on traffic that exceeds settings that the network administrator specifies.
Exceed Color Mode	The current setting for the color of exceeding traffic that the user may optionally specify.
Mark CoS	The class of service value that is set in the 802.1p header of inbound packets. This is not displayed if the mark cos was not specified.
Mark CoS as Secondary CoS	The secondary 802.1p priority value (second/inner VLAN tag. Same as CoS (802.1p) marking, but the dot1p value used for remarking is picked from the dot1p value in the secondary (i.e. inner) tag of a double-tagged packet.
Mark IP DSCP	The mark/re-mark value used as the DSCP for traffic matching this class. This is not displayed if mark ip description is not specified.
Mark IP Precedence	The mark/re-mark value used as the IP Precedence for traffic matching this class. This is not displayed if mark ip precedence is not specified.
Mirror	Copies a classified traffic stream to a specified egress port (physical port or LAG). This can occur in addition to any marking or policing action. It may also be specified along with a QoS queue assignment. This field does not display on Broadcom 5630x platforms.
Non-Conform Action	The current setting for the action taken on a packet considered to not conform to the policing parameters. This is not displayed if policing not in use for the class under this policy.
Non-Conform COS	The CoS mark value if the non-conform action is set-cos-transmit.
Non-Conform DSCP Value	The DSCP mark value if the non-conform action is set-dscp-transmit.
Non-Conform IP Precedence Value	The IP Precedence mark value if the non-conform action is set-prec-transmit.
Peak Rate	Guarantees a committed rate for transmission, but also transmits excess traffic bursts up to a user-specified peak rate, with the understanding that a downstream network element (such as the next hop's policer) might drop this excess traffic. Traffic is held in queue until it is transmitted or dropped (per type of queue depth management.) Peak rate shaping can be configured for the outgoing transmission stream for an AP traffic class (although average rate shaping could also be used.)
Peak Burst Size	(PBS). The network administrator can set the PBS as a means to limit the damage expedited forwarding traffic could inflict on other traffic (e.g., a token bucket rate limiter) Traffic that exceeds this limit is discarded.
Policing Style	The style of policing, if any, used (simple).
Redirect	Forces a classified traffic stream to a specified egress port (physical port or LAG). This can occur in addition to any marking or policing action. It may also be specified along with a QoS queue assignment. This field does not display on Broadcom 5630x platforms.

If the Policy Name is not specified this command displays a list of all defined DiffServ policies. The following fields are displayed:

Term	Definition
Policy Name	The name of this policy. (The order in which the policies are displayed is not necessarily the same order in which they were created.)
Policy Type	The policy type (Only inbound is supported).
Class Members	List of all class names associated with this policy.

Example: The following shows example CLI display output including the mark-cos-as-sec-cos option specified in the policy action.

```
(FASTPATH Routing) #show policy-map p1
Policy Name..... p1
Policy Type..... In
Class Name..... c1
Mark CoS as Secondary CoS..... Yes
```

Example: The following shows example CLI display output including the mark-cos-as-sec-cos action used in the policing (simple-police, police-single-rate, police two-rate) command.

```
(FASTPATH Routing) #show policy-map p2
Policy Name..... p2
Policy Type..... In
Class Name..... c2
Policing Style..... Police Two Rate
Committed Rate..... 1
Committed Burst Size..... 1
Peak Rate..... 1
Peak Burst Size..... 1
Conform Action..... Mark CoS as Secondary CoS
Exceed Action..... Mark CoS as Secondary CoS
Non-Conform Action..... Mark CoS as Secondary CoS
Conform Color Mode..... Blind
Exceed Color Mode..... Blind
```

7.6.4 show diffserv service

This command displays policy service information for the specified interface and direction. The *slot/port* parameter specifies a valid *slot/port* number for the system.

Format show diffserv service *slot/port* in

Mode Privileged EXEC

Term	Definition
DiffServ Admin Mode	The current setting of the DiffServ administrative mode. An attached policy is only in effect on an interface while DiffServ is in an enabled mode.
Interface	<i>slot/port</i>
Direction	The traffic direction of this interface service.
Operational Status	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface in the indicated direction.
Policy Details	Attached policy details, whose content is identical to that described for the show policy-map <i>polcymapname</i> command (content not repeated here for brevity).

7.6.5 show diffserv service brief

This command displays all interfaces in the system to which a DiffServ policy has been attached. The inbound direction parameter is optional.

Format show diffserv service brief [in]

Mode Privileged EXEC

Term	Definition
DiffServ Mode	The current setting of the DiffServ administrative mode. An attached policy is only active on an interface while DiffServ is in an enabled mode.

The following information is repeated for interface and direction (only those interfaces configured with an attached policy are shown):

Term	Definition
Interface	<i>slot/port</i>
Direction	The traffic direction of this interface service.
OperStatus	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface in the indicated direction.

7.6.6 show policy-map interface

This command displays policy-oriented statistics information for the specified interface and direction. The *slot/port* parameter specifies a valid interface for the system. Instead of *slot/port*, *lag lag-intf-num* can be used as an alternate way to specify the LAG interface. *lag lag-intf-num* can also be used to specify the LAG interface where *lag-intf-num* is the LAG port number.

**Note...**

This command is only allowed while the DiffServ administrative mode is enabled.

Format show policy-map interface *slot/port* [in]

Mode Privileged EXEC

Term	Definition
Interface	<i>slot/port</i>
Direction	The traffic direction of this interface service.
Operational Status	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface in the indicated direction.

The following information is repeated for each class instance within this policy:

Term	Definition
Class Name	The name of this class instance.
In Discarded Packets	A count of the packets discarded for this class instance for any reason due to DiffServ treatment of the traffic class.

7.6.7 show service-policy

This command displays a summary of policy-oriented statistics information for all interfaces in the specified direction.

Format show service-policy in

Mode Privileged EXEC

The following information is repeated for each interface and direction (only those interfaces configured with an attached policy are shown):

Term	Definition
Interface	<i>slot/port</i>
Operational Status	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface.

7.7 MAC Access Control List Commands

This section describes the commands you use to configure MAC Access Control List (ACL) settings. MAC ACLs ensure that only authorized users have access to specific resources and block any unwarranted attempts to reach network resources.

The following rules apply to MAC ACLs:

- The maximum number of ACLs you can create is hardware dependent. The limit applies to all ACLs, regardless of type.
- The system supports only Ethernet II frame types.
- The maximum number of rules per MAC ACL is hardware dependent.
- For the Broadcom 5630x platform, if you configure an IP ACL on an interface, you cannot configure a MAC ACL on the same interface.

7.7.1 mac access-list extended

This command creates a MAC Access Control List (ACL) identified by *name*, consisting of classification fields defined for the Layer 2 header of an Ethernet frame. The *name* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the MAC access list. The rate-limit attribute configures the committed rate and the committed burst size.

If a MAC ACL by this name already exists, this command enters Mac-Access-List config mode to allow updating the existing MAC ACL.



Note...

The CLI mode changes to Mac-Access-List Config mode when you successfully execute this command.

Format mac access-list extended *name*

Mode Global Config

7.7.1.1 no mac access-list extended

This command deletes a MAC ACL identified by *name* from the system.

Format no mac access-list extended *name*

Mode Global Config

7.7.2 mac access-list extended rename

This command changes the name of a MAC Access Control List (ACL). The *name* parameter is the name of an existing MAC ACL. The *newname* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the MAC access list.

This command fails if a MAC ACL by the name *newname* already exists.

Format mac access-list extended rename *name newname*

Mode Global Config

7.7.3 mac access-list resequence

Use this command to renumber the sequence numbers of the entries for specified MAC access list with the given increment value starting from a particular sequence number. The command is used to edit the sequence numbers of ACL rules in the ACL and change the order in which entries are applied. This command is not saved in startup configuration and is not displayed in running configuration.

**Note...**

If the generated sequence number exceeds the maximum sequence number, the ACL rule creation fails and an informational message is displayed.

Default 10

Format mac access-list resequence {*name* | *id* } *starting-sequence-number* *increment*

Mode Global Config

Parameter	Description
starting-sequence-number	The sequence number from which to start. The range is 1–2147483647. The default is 10.
increment	The amount to increment. The range is 1–2147483647. The default is 10.

7.7.4 {deny | permit} (MAC ACL)

This command creates a new rule for the current MAC access list. A rule may either deny or permit traffic according to the specified classification fields. At a minimum, the source and destination MAC value must be specified, each of which may be substituted using the keyword any to indicate a match on any value in that field. The remaining command parameters are all optional, but the most frequently used parameters appear in the same relative order as shown in the command format.

Format [*sequence-number*] {deny|permit} {*srcmac* | any} {*dstmac* | any} [*ethertypekey* | 0x0600-0xFFFF] [vlan {eq 0-4095}] [cos 0-7] [[log] [time-range *time-range-name*] [assign-queue *queue-id*]] [{mirror | redirect} *unit/slot/port*][rate-limit *rate burst-size*]

Mode Mac-Access-List Config



Note...

An implicit **deny all** MAC rule always terminates the access list.



Note...

For BCM5630x and BCM5650x based systems, assign-queue, redirect, and mirror attributes are configurable for a deny rule, but they have no operational effect.

The *sequence-number* specifies the sequence number for the ACL rule. The sequence number is specified by the user or is generated by device.

If a sequence number is not specified for the rule, a sequence number that is 10 greater than the last sequence number in ACL is used and this rule is placed in the end of the list. If this is the first ACL rule in the given ACL, a sequence number of 10 is assigned. If the calculated sequence number exceeds the maximum sequence number value, the ACL rule creation fails. A rule cannot be created that duplicates an already existing one and a rule cannot be configured with a sequence number that is already used for another rule.

For example, if user adds new ACL rule to ACL without specifying a sequence number, it is placed at the bottom of the list. By changing the sequence number, the user can move the ACL rule to a different position in the ACL.

The Ethertype may be specified as either a keyword or a four-digit hexadecimal value from 0x0600-0xFFFF. The currently supported *ethertypekey* values are: appletalk, arp, ibmsna, ipv4, ipv6, ipx, mpls multicast, mpls unicast, netbios, novell, pppoe, rarp. Each of these translates into its equivalent Ethertype value(s).

Ethertype Keyword	Corresponding Value
appletalk	0x809B
arp	0x0806
ibmsna	0x80D5
ipv4	0x0800
ipv6	0x86DD
ipx	0x8037
mplsmcast	0x8848
mplsucast	0x8847
netbios	0x8191
novell	0x8137, 0x8138
pppoe	0x8863, 0x8864
rarp	0x8035

The *vlan* and *cos* parameters refer to the VLAN identifier and 802.1p user priority fields, respectively, of the VLAN tag. For packets containing a double VLAN tag, this is the first (or outer) tag.

The *time-range* parameter allows imposing time limitation on the MAC ACL rule as defined by the parameter *time-range-name*. If a time range with the specified name does not exist and the MAC ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied immediately. If a time range with specified name exists and the MAC ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive. For information about configuring time ranges, see "Time Range Commands for Time-Based ACLs" on page 796".

The `assign-queue` parameter allows specification of a particular hardware queue for handling traffic that matches this rule. The allowed `queue-id` value is 0-(n-1), where n is the number of user configurable queues available for the hardware platform. The `assign-queue` parameter is valid only for a `permit` rule.

For the Broadcom 5650x platform, the `mirror` parameter allows the traffic matching this rule to be copied to the specified `unit/slot/port`, while the `redirect` parameter allows the traffic matching this rule to be forwarded to the specified `unit/slot/port`. The `assign-queue` and `redirect` parameters are only valid for a `permit` rule.



Note...

The `mirror` and `redirect` parameters are not available on the Broadcom 5630x platform.



Note...

The special command form `{deny | permit} any any` is used to match all Ethernet layer 2 packets, and is the equivalent of the IP access list "match every" rule.

The `permit` command's optional attribute **rate-limit** allows you to permit only the allowed rate of traffic as per the configured rate in kbps, and burst-size in kbytes.

Example: The following shows an example of the command.

```
(Routing) (Config)#mac access-list extended mac1
(Routing) (Config-mac-access-list)#permit 00:00:00:00:aa:bb ff:ff:ff:ff:00:00 any rate-limit 32 16
(Routing) (Config-mac-access-list)#exit
```

7.7.4.1 no sequence-number

Use this command to remove the ACL rule with the specified sequence number from the ACL.

Format `no sequence-number`

Mode MAC-Access-List Config

7.7.5 mac access-group

This command either attaches a specific MAC Access Control List (ACL) identified by *name* to an interface or range of interfaces, or associates it with a VLAN ID, in a given direction. The *name* parameter must be the name of an existing MAC ACL.

An optional sequence number may be specified to indicate the order of this mac access list relative to other mac access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified mac access list replaces the currently attached mac access list using that sequence number. If the sequence number is not specified for this command, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used.

This command specified in 'Interface Config' mode only affects a single interface, whereas the 'Global Config' mode setting is applied to all interfaces. The VLAN keyword is only valid in the 'Global Config' mode. The 'Interface Config' mode command is only available on platforms that support independent per-port class of service queue configuration.

An optional *control-plane* is specified to apply the MAC ACL on CPU port. The control packets like BPDU are also dropped because of the implicit deny all rule added to the end of the list. To overcome this, permit rules must be added to allow the control packets.

**Note...**

The keyword *control-plane* is only available in Global Config mode.

**Note...**

You should be aware that the *out* option may or may not be available, depending on the platform.

Format `mac access-group name {{control-plane/in|out}} vlan vlan-id {in|out}} [sequence 1-4294967295]`

- Modes**
- Global Config
 - Interface Config

Parameter	Description
name	The name of the Access Control List.
sequence	A optional sequence number that indicates the order of this IP access list relative to the other IP access lists already assigned to this interface and direction. The range is 1 to 4294967295.
vlan-id	A VLAN ID associated with a specific IP ACL in a given direction.

Example: The following shows an example of the command.

```
(Routing)(Config)#mac access-group mac1 control-plane
```

```
7.7.5.1      no mac access-group
```

This command removes a MAC ACL identified by *name* from the interface in a given direction.

Format `no mac access-group name {{control-plane/in|out}} vlan vlan-id {in|out}}`

- Modes**
- Global Config
 - Interface Config

Example: The following shows an example of the command.

```
(Routing)(Config)#no mac access-group mac1 control-plane
```

```
7.7.6      remark
```

This command adds a new comment to the ACL rule.

Use the remark keyword to add comments (remarks) to ACL rule entries belonging to an IPv4, IPv6, MAC, or ARP ACL. Up to L7_ACL_MAX_RULES_PER_LIST*10 remarks per ACL and up to 10 remarks per ACL rule can be configured. Also, up to L7_ACL_MAX_RULES*2 remarks for all QOS ACLs(IPv4/IPv6/MAC) for device can be configured. The total length of the remark cannot exceed 100 characters. A remark can contain characters in the range A-Z, a-z, 0-9, and special characters like space, hyphen, underscore. Remarks are associated to the ACL rule that is immediately created after the remarks are created. If the ACL rule is removed, the associated remarks are also deleted. Remarks are shown only in `show running-config` and are not displayed in `show ip access-lists`.

Remarks can only be added before creating the rule. If a user creates up to 10 remarks, each of them is linked to the next created rule.

Default	None
Format	remark <i>comment</i>
Mode	• IPv4-Access-List Config • IPv6-Access-List-Config • MAC-Access-List Config • ARP-Access-List Config

Example:

```
(Config)#arp access-list new
(Config-arp-access-list)#remark "test1"
(Config-arp-access-list)#permit ip host 1.1.1.1 mac host 00:01:02:03:04:05
(Config-arp-access-list)#remark "test1"
(Config-arp-access-list)#remark "test2"
(Config-arp-access-list)#remark "test3"
(Config-arp-access-list)#permit ip host 1.1.1.2 mac host 00:03:04:05:06:07
(Config-arp-access-list)#permit ip host 2.1.1.2 mac host 00:03:04:05:06:08
(Config-arp-access-list)#remark "test4"
(Config-arp-access-list)#remark "test5"
(Config-arp-access-list)#permit ip host 2.1.1.3 mac host 00:03:04:05:06:01
```

7.7.6.1 no remark

Use this command to remove a remark from an ACL access-list.

When the first occurrence of the remark in ACL is found, the remark is deleted. Repeated execution of this command with the same remark removes the remark from the next ACL rule that has the remark associated with it (if there is any rule configured with the same remark). If there are no more rules with this remark, an error message is displayed.

If there is no such remark associated with any rule and such remark is among not associated remarks, it is removed.

Default	None
Format	no remark <i>comment</i>
Mode	• IPv4-Access-List Config • IPv6-Access-List-Config • MAC-Access-List Config • ARP-Access-List Config

7.7.7 show mac access-lists

This command displays summary information for all Mac Access lists and ACL rule hit count of packets matching the configured ACL rule within an ACL. This counter value rolls-over on reaching the maximum value. There is a dedicated counter for each ACL rule. ACL counters do not interact with PBR counters.

For ACL with multiple rules, once a match occurs at any one specific rule, counters associated with this rule only get incremented (for example, consider an ACL with three rules, after matching rule two, counters for rule three would not be incremented).

For ACL counters, If an ACL rule is configured without RATE-LIMIT, the counter value is count of forwarded/discarded packets. (For example: For a burst of 100 packets, the Counter value is 100).

If the ACL rule is configured with RATE LIMIT, the counter value is the MATCHED packet count. If the sent traffic rate exceeds the configured limit, the counters still display matched packet count (despite getting dropped beyond the configured limit since match criteria is met) which would equal the sent rate. For example, if rate limit is set to 10 kbps and 'matching' traffic is sent at 100 kbps, counters reflect a 100 kbps value. If the sent traffic rate is less than the configured limit, counters display only the matched packet count. Either way, only the matched packet count is reflected in the counters, irrespective of whether they get dropped or forwarded. ACL counters do not interact with diffserv policies.

Use the access list name to display detailed information of a specific MAC ACL.



Note...

The command output varies based on the match criteria configured within the rules of an ACL.

Format `show mac access-lists [name]`

Mode Privileged EXEC

Term	Definition
Rule Number	The ordered rule number identifier defined within the MAC ACL.
Action	The action associated with each rule. The possible values are Permit or Deny.
Source MAC Address	The source MAC address for this rule.
Source MAC Mask	The source MAC mask for this rule.
Committed Rate	The committed rate defined by the rate-limit attribute.
Committed Burst Size	The committed burst size defined by the rate-limit attribute.
Destination MAC Address	The destination MAC address for this rule.
Ethertype	The Ethertype keyword or custom value for this rule.
VLAN ID	The VLAN identifier value or range for this rule.
COS	The COS (802.1p) value for this rule.
Log	Displays when you enable logging for the rule.
Assign Queue	The queue identifier to which packets matching this rule are assigned.
Mirror Interface	On Broadcom 5650x platforms, the slot/port to which packets matching this rule are copied.
Redirect Interface	On Broadcom 5650x platforms, the <i>s</i> lot/ <i>port</i> to which packets matching this rule are forwarded.
Time Range Name	Displays the name of the time-range if the MAC ACL rule has referenced a time range.
Rule Status	Status (Active/Inactive) of the MAC ACL rule.

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show mac access-lists mac1
```

```
ACL Name: mac1
```

```
Outbound Interface(s): control-plane
```

```
Rule Number: 1
```

```
Action..... permit
```

```
Source MAC Address..... 00:00:00:00:AA:BB
```

```
Source MAC Mask..... FF:FF:FF:FF:00:00
```

```
Committed Rate..... 32
```

Committed Burst Size..... 16

7.8 IP Access Control List Commands

This section describes the commands you use to configure IP Access Control List (ACL) settings. IP ACLs ensure that only authorized users have access to specific resources and block any unwarranted attempts to reach network resources.

The following rules apply to IP ACLs:

- FASTPATH software does not support IP ACL configuration for IP packet fragments.
- The maximum number of ACLs you can create is hardware dependent. The limit applies to all ACLs, regardless of type.
- The maximum number of rules per IP ACL is hardware dependent.
- On Broadcom 5630x platforms, if you configure a MAC ACL on an interface, you cannot configure an IP ACL on the same interface.
- Wildcard masking for ACLs operates differently from a subnet mask. A wildcard mask is in essence the inverse of a subnet mask. With a subnet mask, the mask has ones (1's) in the bit positions that are used for the network address, and has zeros (0's) for the bit positions that are not used. In contrast, a wildcard mask has (0's) in a bit position that must be checked. A 1 in a bit position of the ACL mask indicates the corresponding bit can be ignored.

7.8.1 access-list

This command creates an IP Access Control List (ACL) that is identified by the access list number, which is 1-99 for standard ACLs or 100-199 for extended ACLs. [Table 7](#) describes the parameters for the `access-list` command.

IP Standard ACL:

Format `access-list 1-99 {remark comment} | {[sequence-number]} [rule 1-1023] {deny | permit} {every | srcip srcmask | host srcip} [time-range time-range-name] [log] [assign-queue queue-id] [{mirror | redirect} unit/slot/port] [rate-limit rate burst-size]`

Mode Global Config

IP Extended ACL:

Format `access-list 100-199 {remark comment} | {[sequence-number]} [rule 1-1023] {deny | permit} {every | [{eigrp | gre | icmp | igmp | ip | ipinip | ospf | pim | tcp | udp | 0-255} {srcip srcmask|any|host srcip} [range {portkey|startport} {portkey|endport} {eq|neq|lt|gt} {portkey|0-65535}{dstip dstmask|any|host dstip}]{[range {portkey|startport} {portkey|endport} | {eq | neq | lt | gt} {portkey | 0-65535}] [flag [+fin | -fin] [+syn | -syn] [+rst | -rst] [+psh | -psh] [+ack | -ack] [+urg | -urg] [established]] [icmp-type icmp-type [icmp-code icmp-code] | icmp-message icmp-message] [igmp-type igmp-type] [fragments] [precedence precedence | tos tos [tosmask] | dscp dscp]]} [time-range time-range-name] [log] [assign-queue queue-id] [{mirror | redirect} unit/slot/port] [rate-limit rate burst-size]`

Mode Global Config



Note...

IPv4 extended ACLs have the following limitations for egress ACLs:

- Match on port ranges is not supported.
- The rate-limit command is not supported.

Table 7: ACL Command Parameters

Parameter	Description
<code>remark comment</code>	Use the remark keyword to add a comment (remark) to an IP standard or IP extended ACL. The remarks make the ACL easier to understand and scan. Each remark is limited to 100 characters. A remark can consist of characters in the range A-Z, a-z, 0-9, and special characters: space, hyphen, underscore. Remarks are displayed only in show running configuration. One remark per rule can be added for IP standard or IP extended ACL. User can remove only remarks that are not associated with a rule. Remarks associated with a rule are removed when the rule is removed
<code>sequence-number</code>	Specifies a sequence number for the ACL rule. Every rule receives a sequence number. A sequence number is specified by the user or is generated by the device. If a sequence number is not specified for the rule, a sequence number that is 10 greater than the last sequence number in the ACL is used and this rule is located in the end of the list. If this is the first ACL rule in the given ACL, a sequence number of 10 is assigned. If the calculated sequence number exceeds the maximum sequence number value, the ACL rule creation fails. It is not allowed to create a rule that duplicates an already existing one and a rule cannot be configured with a sequence number that is already used for another rule. For example, if user adds new ACL rule to ACL without specifying a sequence number, it is placed at the bottom of the list. By changing the sequence number, user can move the ACL rule to a different position in the ACL.
<code>1-99 or 100-199</code>	Range 1 to 99 is the access list number for an IP standard ACL. Range 100 to 199 is the access list number for an IP extended ACL.
<code>[rule 1-1023]</code>	Specifies the IP access list rule.
<code>{deny permit}</code>	Specifies whether the IP ACL rule permits or denies an action. Note: For 5630x and 5650x-based systems, assign-queue, redirect, and mirror attributes are configurable for a deny rule, but they have no operational effect.
<code>every</code>	Match every packet.
<code>{eigrp gre icmp igmp ip ipinip ospf pim tcp udp 0-255}</code>	Specifies the protocol to filter for an extended IP ACL rule.
<code>srcip srcmask any host scrip</code>	Specifies a source IP address and source netmask for match condition of the IP ACL rule. Specifying any specifies <i>srcip</i> as 0.0.0.0 and <i>srcmask</i> as 255.255.255.255. Specifying host <i>A.B.C.D</i> specifies <i>srcip</i> as A.B.C.D and <i>srcmask</i> as 0.0.0.0.

Table 7: ACL Command Parameters

Parameter	Description
<code>{[range{portkey startport}{portkey endport}]{eq neq lt gt} {portkey 0-65535}]</code>	Note: This option is available only if the protocol is TCP or UDP. Specifies the source layer 4 port match condition for the IP ACL rule. You can use the port number, which ranges from 0-65535, or you specify the <i>portkey</i>, which can be one of the following keywords: - For TCP: <i>bgp</i>, <i>domain</i>, <i>echo</i>, <i>ftp</i>, <i>ftp-data</i>, <i>http</i>, <i>smtp</i>, <i>telnet</i>, <i>www</i>, <i>pop2</i>, <i>pop3</i>. - For UDP: <i>domain</i>, <i>echo</i>, <i>ntp</i>, <i>rip</i>, <i>snmp</i>, <i>tftp</i>, <i>time</i>, and <i>who</i>. For both TCP and UDP, each of these keywords translates into its equivalent port number, which is used as both the start and end of a port range. If <i>range</i> is specified, the IP ACL rule matches only if the layer 4 port number falls within the specified port range. The <i>startport</i> and <i>endport</i> parameters identify the first and last ports that are part of the port range. They have values from 0 to 65535. The ending port must have a value equal or greater than the starting port. The starting port, ending port, and all ports in between will be part of the layer 4 port range. When <i>eq</i> is specified, the IP ACL rule matches only if the layer 4 port number is equal to the specified port number or portkey. When <i>lt</i> is specified, IP ACL rule matches if the layer 4 port number is less than the specified port number or portkey. It is equivalent to specifying the range as 0 to <specified port number - 1>. When <i>gt</i> is specified, the IP ACL rule matches if the layer 4 port number is greater than the specified port number or portkey. It is equivalent to specifying the range as <specified port number + 1> to 65535. When <i>neq</i> is specified, IP ACL rule matches only if the layer 4 port number is not equal to the specified port number or portkey. Two rules are added in the hardware one with range equal to 0 to <specified port number - 1> and one with range equal to <<specified port number + 1 to 65535>> Note: Port number matches only apply to unfragmented or first fragments.
<code>dstip dstmask any host dstip</code>	Specifies a destination IP address and netmask for match condition of the IP ACL rule. Specifying any implies specifying <i>dstip</i> as 0.0.0.0 and <i>dstmask</i> as 255.255.255.255. Specifying host A.B.C.D implies <i>dstip</i> as A.B.C.D and <i>dstmask</i> as 0.0.0.0.
<code>[precedence precedence tos tos [tosmask] dscp dscp]</code>	Specifies the TOS for an IP ACL rule depending on a match of precedence or DSCP values using the parameters <i>dscp</i>, <i>precedence</i>, <i>tos/tosmask</i>. Note: <i>tosmask</i> is an optional parameter.
<code>flag [+fin -fin] [+syn -syn] [+rst -rst] [+psh -psh] [+ack -ack] [+urg -urg] [established]</code>	Note: This option is available only if the protocol is tcp. Specifies that the IP ACL rule matches on the TCP flags. When +<tcpflagname> is specified, a match occurs if the specified <tcpflagname> flag is set in the TCP header. When -<tcpflagname> is specified, a match occurs if the specified <tcpflagname> flag is *NOT* set in the TCP header. When established is specified, a match occurs if the specified RST or ACK bits are set in the TCP header. Two rules are installed in the hardware when the established option is specified.

Table 7: ACL Command Parameters

Parameter	Description
[icmp-type <i>icmp-type</i> [icmp-code <i>icmp-code</i>] icmp-message <i>icmp-message</i>]	Note: This option is available only if the protocol is icmp. Specifies a match condition for ICMP packets. When <i>icmp-type</i> is specified, the IP ACL rule matches on the specified ICMP message type, a number from 0 to 255. When <i>icmp-code</i> is specified, the IP ACL rule matches on the specified ICMP message code, a number from 0 to 255. Specifying <i>icmp-message</i> implies that both <i>icmp-type</i> and <i>icmp-code</i> are specified. The following icmp-messages are supported: <i>echo</i>, <i>echo-reply</i>, <i>host-redirect</i>, <i>mobile-redirect</i>, <i>net-redirect</i>, <i>net-unreachable</i>, <i>redirect</i>, <i>packet-too-big</i>, <i>port-unreachable</i>, <i>source-quench</i>, <i>router-solicitation</i>, <i>router-advertisement</i>, <i>time-exceeded</i>, <i>ttl-exceeded</i> and <i>unreachable</i>.
igmp-type <i>igmp-type</i>	This option is available only if the protocol is igmp. When <i>igmp-type</i> is specified, the IP ACL rule matches on the specified IGMP message type, a number from 0 to 255.
fragments	Specifies that the IP ACL rule matches on fragmented IP packets.
[log]	Specifies that this rule is to be logged.
[time-range <i>time-range-name</i>]	Allows imposing time limitation on the ACL rule as defined by the parameter <i>time-range-name</i> . If a time range with the specified name does not exist and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied immediately. If a time range with specified name exists and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive. For information about configuring time ranges, see "Time Range Commands for Time-Based ACLs" on page 796".
[assign-queue <i>queue-id</i>]	Specifies the assign-queue, which is the queue identifier to which packets matching this rule are assigned.
[{mirror redirect} <i>slot/port</i>]	For Broadcom 5650x platforms, specifies the mirror or redirect interface which is the <i>slot/port</i> to which packets matching this rule are copied or forwarded, respectively. The <i>mirror</i> and <i>redirect</i> parameters are not available on the Broadcom 5630x platform.
[rate-limit <i>rate burst-size</i>]	Specifies the allowed rate of traffic as per the configured rate in kbps, and burst-size in kbytes.

7.8.1.1 no access-list

This command deletes an IP ACL that is identified by the parameter *accessListnumber* from the system. The range for *accessListnumber* 1-99 for standard access lists and 100-199 for extended access lists.

Format no access-list *accessListnumber* [rule 1-1023]

Mode Global Config

7.8.2 ip access-list

This command creates an extended IP Access Control List (ACL) identified by *name*, consisting of classification fields defined for the IP header of an IPv4 frame. The *name* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IP access list. The rate-limit attribute configures the committed rate and the committed burst size.

If an IP ACL by this name already exists, this command enters IPv4-Access_List config mode to allow updating the existing IP ACL.



Note...

The CLI mode changes to IPv4-Access-List Config mode when you successfully execute this command.

Format `ip access-list name`

Mode Global Config

7.8.2.1 `no ip access-list`

This command deletes the IP ACL identified by name from the system.

Format `no ip access-list name`

Mode Global Config

7.8.3 `ip access-list rename`

This command changes the name of an IP Access Control List (ACL). The *name* parameter is the names of an existing IP ACL. The new *name* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IP access list.

This command fails if an IP ACL by the name *newname* already exists.

Format `ip access-list rename name newname`

Mode Global Config

7.8.4 `ip access-list resequence`

Use this command to renumber the sequence numbers of the entries for specified IP access list with the given increment value starting from a particular sequence number. The command is used to edit the sequence numbers of ACL rules in the ACL and change the order in which entries are applied. This command is not saved in startup configuration and is not displayed in running configuration.



Note...

If the generated sequence number exceeds the maximum sequence number, the ACL rule creation fails and an informational message is displayed.

Default 10

Format `ip access-list resequence {name| id } starting-sequence-number increment`

Mode Global Config

Parameter	Description
starting-sequence-number	The sequence number from which to start. The range is 1–2147483647. The default is 10.
increment	The amount to increment. The range is 1–2147483647. The default is 10.

7.8.5 {deny | permit} (IP ACL)

This command creates a new rule for the current IP access list. A rule may either deny or permit traffic according to the specified classification fields. At a minimum, either the every keyword or the protocol, source address, and destination address values must be specified. The source and destination IP address fields may be specified using the keyword any to indicate a match on any value in that field. The remaining command parameters are all optional, but the most frequently used parameters appear in the same relative order as shown in the command format.

Format `[sequence-number] {deny | permit} {every | {{eigrp | gre | icmp | igmp | ip | ipinip | ospf | pim | tcp | udp | 0 -255} {srcip srcmask | any | host srcip} [{range {portkey | startport} {portkey | endport} | {eq | neq | lt | gt} {portkey | 0-65535}] {dstip dstmask | any | host dstip} [{range {portkey | startport} {portkey | endport} | {eq | neq | lt | gt} {portkey | 0-65535}] [flag [+fin | -fin] [+syn | -syn] [+rst | -rst] [+psh | -psh] [+ack | -ack] [+urg | -urg] [established]] [icmp-type icmp-type [icmp-code icmp-code] | icmp-message icmp-message] [igmp-type igmp-type] [fragments] [precedence precedence | tos tos [tosmask] | dscp dscp]}} [time-range time-range-name] [log] [assign-queue queue-id] [{mirror | redirect} unit/slot/port] [rate-limit rate burst-size]`

Mode Ipv4-Access-List Config

**Note...**

An implicit **deny all** IP rule always terminates the access list.

**Note...**

For BCM5630x-based systems, the *mirror* and *redirect* parameters are not available.

**Note...**

For BCM5650x-based systems, the *mirror* parameter allows the traffic matching this rule to be copied to the specified *unit/slot/port*, while the *redirect* parameter allows the traffic matching this rule to be forwarded to the specified *unit/slot/port*. The *assign-queue* and *redirect* parameters are only valid for a permit rule.

**Note...**

For IPv4, the following are not supported for egress ACLs:

- A match on port ranges
- The rate-limit command

**Note...**

This command takes effect only when PIM-SM is configured as the PIM mode.

The `time-range` parameter allows imposing time limitation on the IP ACL rule as defined by the specified time range. If a time range with the specified name does not exist and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied immediately. If a time range with specified name exists and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive. For information about configuring time ranges, see "Time Range Commands for Time-Based ACLs" on page 796".

The `assign-queue` parameter allows specification of a particular hardware queue for handling traffic that matches this rule. The allowed `queue-id` value is 0-(n-1), where n is the number of user configurable queues available for the hardware platform. The `assign-queue` parameter is valid only for a permit rule.

The **permit** command's optional attribute **rate-limit** allows you to permit only the allowed rate of traffic as per the configured rate in kbps, and burst-size in kbytes.

Parameter	Description
sequence-number	The <i>sequence-numbers</i> specifies the sequence number for the ACL rule. The sequence number is specified by the user or is generated by device. If a sequence number is not specified for the rule, a sequence number that is 10 greater than the last sequence number in ACL is used and this rule is placed at the end of the list. If this is the first ACL rule in the given ACL, a sequence number of 10 is assigned. If the calculated sequence number exceeds the maximum sequence number value, the ACL rule creation fails. A rule cannot be created that duplicates an already existing one and a rule cannot be configured with a sequence number that is already used for another rule. For example, if user adds new ACL rule to ACL without specifying a sequence number, it is placed at the bottom of the list. By changing the sequence number, the user can move the ACL rule to a different position in the ACL.
{deny permit}	Specifies whether the IP ACL rule permits or denies the matching traffic.
Every	Match every packet.
{eigrp gre icmp igmp ip ipinip ospf pim tcp udp 0 -255}	Specifies the protocol to match for the IP ACL rule.
srcip srcmask any host <i>srcip</i>	Specifies a source IP address and source netmask to match for the IP ACL rule. Specifying "any" implies specifying <i>srcip</i> as "0.0.0.0" and <i>srcmask</i> as "255.255.255.255". Specifying "host A.B.C.D" implies <i>srcip</i> as "A.B.C.D" and <i>srcmask</i> as "0.0.0.0".

Parameter	Description
[{range {portkey startport} {portkey endport} {eq neq lt gt} {portkey 0-65535}]	Note: This option is available only if the protocol is tcp or udp. Specifies the layer 4 port match condition for the IP ACL rule. Port number can be used, which ranges from 0-65535, or the portkey, which can be one of the following keywords: - For tcp protocol: bgp, domain, echo, ftp, ftp-data, http, smtp, telnet, www, pop2, pop3 - For udp protocol: domain, echo, ntp, rip, snmp, tftp, time, who Each of these keywords translates into its equivalent port number. When range is specified, the IP ACL rule matches only if the layer 4 port number falls within the specified port range. The startport and endport parameters identify the first and last ports that are part of the port range. They have values from 0 to 65535. The ending port must have a value equal to or greater than the starting port. The starting port, ending port, and all ports in between will be part of the layer 4 port range. When eq is specified, IP ACL rule matches only if the layer 4 port number is equal to the specified port number or portkey. When lt is specified, IP ACL rule matches if the layer 4 port number is less than the specified port number or portkey. It is equivalent to specifying the range as 0 to <specified port number - 1>. When gt is specified, IP ACL rule matches if the layer 4 port number is greater than the specified port number or portkey. It is equivalent to specifying the range as <specified port number + 1> to 65535. When neq is specified, IP ACL rule matches only if the layer 4 port number is not equal to the specified port number or port key. Two rules are added in the hardware one with range equal to 0 to <specified port number - 1> and one with range equal to <<specified port number + 1 to 65535>>. Note: Port number matches only apply to unfragmented or first fragments.
dstip dstmask any host dstip	Specifies a destination IP address and netmask for match condition of the IP ACL rule. Specifying any implies specifying dstip as 0.0.0.0 and dstmask as 255.255.255.255. Specifying host A.B.C.D implies dstip as A.B.C.D and dstmask as 0.0.0.0.
[precedence precedence tos tos [tosmask] dscp dscp]	Specifies the TOS for an IP ACL rule depending on a match of precedence or DSCP values using the parameters <i>dscp</i>, <i>precedence</i>, <i>tos</i>/<i>tosmask</i>. <i>tosmask</i> is an optional parameter.
flag [+fin -fin] [+syn -syn] [+rst -rst] [+psh -psh] [+ack -ack] [+urg -urg] [established]	Specifies that the IP ACL rule matches on the tcp flags. When +<tcpflagname> is specified, a match occurs if specified <tcpflagname> flag is set in the TCP header. When -<tcpflagname> is specified, a match occurs if specified <tcpflagname> flag is NOT set in the TCP header. When established is specified, a match occurs if either the specified RST or ACK bits are set in the TCP header. Two rules are installed in hardware to when the established option is specified. This option is available only if protocol is tcp.

Parameter	Description
[icmp-type <i>icmp-type</i> [icmp-code <i>icmp-code</i>] icmp-message <i>icmp-message</i>]	Note: This option is available only if the protocol is ICMP. Specifies a match condition for ICMP packets. When <i>icmp-type</i> is specified, IP ACL rule matches on the specified ICMP message type, a number from 0 to 255. When <i>icmp-code</i> is specified, IP ACL rule matches on the specified ICMP message code, a number from 0 to 255. Specifying <i>icmp-message</i> implies both <i>icmp-type</i> and <i>icmp-code</i> are specified. The following icmp-messages are supported: echo, echo-reply, host-redirect, mobile-redirect, net-redirect, net-unreachable, redirect, packet-too-big, port-unreachable, source-quench, router-solicitation, router-advertisement, time-exceeded, ttl-exceeded and unreachable. The ICMP message is decoded into corresponding ICMP type and ICMP code within that ICMP type.
igmp-type <i>igmp-type</i>	Note: This option is visible only if the protocol is IGMP. When <i>igmp-type</i> is specified, the IP ACL rule matches on the specified IGMP message type, a number from 0 to 255.
fragments	Specifies that IP ACL rule matches on fragmented IP packets.
log	Specifies that this rule is to be logged.
time-range <i>time-range-name</i>	Allows imposing a time limitation on the ACL rule as defined by the parameter <i>time-range-name</i> . If a time range with the specified name does not exist and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied immediately. If a time range with specified name exists and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive.
assign-queue <i>queue-id</i>	Specifies the assign-queue, which is the queue identifier to which packets matching this rule are assigned.
{mirror redirect} <i>unit/slot/port</i>	Specifies the mirror or redirect interface which is the unit/slot/port to which packets matching this rule are copied or forwarded, respectively.
rate-limit <i>rate burst-size</i>	Specifies the allowed rate of traffic as per the configured rate in kbps, and burst-size in kbytes.

Example: The following shows an example of the command.

```
(Routing) (Config)#ip access-list ip1
(Routing) (Config-ipv4-acl)#permit icmp any any rate-limit 32 16
(Routing) (Config-ipv4-acl)#exit
```

7.8.5.1 `no sequence-number`

Use this command to remove the ACL rule with the specified sequence number from the ACL.

Format `no sequence-number`

Mode Ipv4-Access-List Config

7.8.6 `ip access-group`

This command either attaches a specific IP Access Control List (ACL) identified by `accesslistnumber` or `name` to an interface, range of interfaces, or all interfaces; or associates it with a VLAN ID in a given direction. The parameter `name` is the name of the Access Control List.

An optional sequence number may be specified to indicate the order of this IP access list relative to other IP access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified access list replaces the currently attached IP access list using that sequence number. If the sequence number is not specified for this command, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used.

An optional *control-plane* is specified to apply the ACL on CPU port. The IPv4 control packets like RADIUS and TACACS+ are also dropped because of the implicit **deny all** rule added at the end of the list. To overcome this, permit rules must be added to allow the IPv4 control packets.

**Note...**

The keyword *control-plane* is only available in Global Config mode.

**Note...**

You should be aware that the `out` option may or may not be available, depending on the platform.

Default none

Format `ip access-group {accesslistnumber|name} [{control-plane|in|out}]vlan vlan-id {in|out}` [sequence 1-4294967295]

Modes

- Interface Config
- Global Config

Parameter	Description
accesslistnumber	Identifies a specific IP ACL. The range is 1 to 199.
sequence	A optional sequence number that indicates the order of this IP access list relative to the other IP access lists already assigned to this interface and direction. The range is 1 to 4294967295.
vlan-id	A VLAN ID associated with a specific IP ACL in a given direction.
name	The name of the Access Control List.

Example: The following shows an example of the command.

```
(Routing) (Config)#ip access-group ip1 control-plane
```

7.8.6.1 no ip access-group

This command removes a specified IP ACL from an interface.

Default	none
Format	no ip access-group { <i>accesslistnumber</i> <i>name</i> } {{ <i>control-plane</i> <i>in</i> <i>out</i> } vlan <i>vlan-id</i> { <i>in</i> <i>out</i> }}
Mode	• Interface Config • Global Config

Example: The following shows an example of the command.

```
(Routing)(Config)#no ip access-group ip1 control-plane
```

7.8.7 acl-trapflags

This command enables the ACL trap mode.

Default	disabled
Format	acl-trapflags
Mode	Global Config

7.8.7.1 no acl-trapflags

This command disables the ACL trap mode.

Format	no acl-trapflags
Mode	Global Config

7.8.8 show ip access-lists

Use this command to view summary information about all IP ACLs configured on the switch. To view more detailed information about a specific access list, specify the ACL number or name that is used to identify the IP ACL. It displays committed rate, committed burst size, and ACL rule hit count of packets matching the configured ACL rule within an ACL. This counter value rolls-over on reaching the maximum value. There is a dedicated counter for each ACL rule. ACL counters do not interact with PBR counters.

For ACL with multiple rules, once a match occurs at any one specific rule, counters associated with this rule only get incremented for example, consider an ACL with three rules, after matching rule two, counters for rule three would not be incremented).

For ACL counters, if an ACL rule is configured without RATE-LIMIT, the counter value is count of forwarded/discarded packets (for example: If burst of 100 packets sent from IXIA, the Counter value is 100).

If an ACL rule is configured with RATE LIMIT, the counter value will be the MATCHED packet count. If the sent traffic rate exceeds the configured limit, counters will still display matched packet count (despite getting dropped beyond the configured limit since match criteria is met) that would equal the sent rate. For example, if rate limit is set to 10 kbps and 'matching' traffic is sent at 100 kbps, counters would reflect 100 kbps value. If the sent traffic rate is less than the configured limit, counters would display only matched packet count. Either way, only matched packet count is reflected in the counters, irrespective of whether they get dropped or forwarded. ACL counters do not interact with diffserv policies.

Format `show ip access-lists [accesslistnumber | name]`
Mode Privileged EXEC

Term	Definition
ACL ID/Name	Identifies the configured ACL number or name.
Rules	Identifies the number of rules configured for the ACL.
Direction	Shows whether the ACL is applied to traffic coming into the interface (ingress) or leaving the interface (egress).
Interface(s)	Identifies the interface(s) to which the ACL is applied (ACL interface bindings).
VLAN(s)	Identifies the VLANs to which the ACL is applied (ACL VLAN bindings).

If you specify an IP ACL number or name, the following information displays:



Note...

Only the access list fields that you configure are displayed. Thus, the command output varies based on the match criteria configured within the rules of an ACL.

Term	Definition
Rule Number	The number identifier for each rule that is defined for the IP ACL.
Action	The action associated with each rule. The possible values are Permit or Deny.
Match All	Indicates whether this access list applies to every packet. Possible values are True or False.
Protocol	The protocol to filter for this rule.
ICMP Type	Note: This is shown only if the protocol is ICMP. The ICMP message type for this rule.
Starting Source L4 port	The starting source layer 4 port.
Ending Source L4 port	The ending source layer 4 port.
Starting Destination L4 port	The starting destination layer 4 port.
Ending Destination L4 port	The ending destination layer 4 port.
ICMP Code	Note: This is shown only if the protocol is ICMP. The ICMP message code for this rule.
Fragments	If the ACL rule matches on fragmented IP packets.
Committed Rate	The committed rate defined by the rate-limit attribute.
Committed Burst Size	The committed burst size defined by the rate-limit attribute.
Source IP Address	The source IP address for this rule.
Source IP Mask	The source IP Mask for this rule.
Source L4 Port Keyword	The source port for this rule.
Destination IP Address	The destination IP address for this rule.
Destination IP Mask	The destination IP Mask for this rule.
Destination L4 Port Keyword	The destination port for this rule.
IP DSCP	The value specified for IP DSCP.
IP Precedence	The value specified IP Precedence.
IP TOS	The value specified for IP TOS.
Log	Displays when you enable logging for the rule.

Term	Definition
Assign Queue	The queue identifier to which packets matching this rule are assigned.
Mirror Interface	The slot/port to which packets matching this rule are copied.
Redirect Interface	The slot/port to which packets matching this rule are forwarded.
Time Range Name	Displays the name of the time-range if the IP ACL rule has referenced a time range.
Rule Status	Status (Active/Inactive) of the IP ACL rule.
ACL Hit Count	The ACL rule hit count of packets matching the configured ACL rule within an ACL.

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show ip access-lists ip1
```

```
ACL Name: ip1
Inbound Interface(s): 0/30
```

```
Rule Number: 1
Action..... permit
Match All..... FALSE
Protocol..... 1(icmp)
Committed Rate..... 32
Committed Burst Size..... 16
```

7.8.9 show access-lists

This command displays IP ACLs, IPv6 ACLs, and MAC access control lists information for a designated interface and direction. Instead of `slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface. `lag lag-intf-num` can also be used to specify the LAG interface where `lag-intf-num` is the LAG port number. Use the **control-plane** keyword to display the ACLs applied on the CPU port.

Format `show access-lists interface {slot/port in|out | control-plane}`

Mode Privileged EXEC

Term	Definition
ACL Type	Type of access list (IP, IPv6, or MAC).
ACL ID	Access List name for a MAC or IPv6 access list or the numeric identifier for an IP access list.
Sequence Number	An optional sequence number may be specified to indicate the order of this access list relative to other access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified access list replaces the currently attached access list using that sequence number. If the sequence number is not specified by the user, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used. Valid range is (1 to 4294967295).
in out	• in – Display Access List information for a particular interface and the in direction. • out – Display Access List information for a particular interface and the out direction.

Example: The following shows an example of the command.

```
(Routing) #show access-lists interface control-plane
```

```
ACL Type      ACL ID      Sequence Number
-----
IPv6          ip61        1
```

7.8.10 show access-lists vlan

This command displays Access List information for a particular VLAN ID. The *vlan-id* parameter is the VLAN ID of the VLAN with the information to view. The {in | out} options specifies the direction of the VLAN ACL information to view.

Format show access-lists vlan *vlan-id* in|out

Mode Privileged EXEC

Term	Definition
ACL Type	Type of access list (IP, IPv6, or MAC).
ACL ID	Access List name for a MAC or IPv6 access list or the numeric identifier for an IP access list.
Sequence Number	An optional sequence number may be specified to indicate the order of this access list relative to other access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified access list replaces the currently attached access list using that sequence number. If the sequence number is not specified by the user, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used. Valid range is (1 to 4294967295).

7.8.11 acl-traptime

This command sets the time interval for generating ACL traps. An ACL trap is generated if ACL trap generation is enabled and an ACL rule applies for an incoming packet. The generation is checked for a specified time interval. The time interval value indicates seconds. The range is 30..600, the default value is 300.

Format acl-traptime <30-600>

Mode Global Config

7.8.11.1 no acl-traptime

This command disables the time interval for generating ACL traps.

Format no acl-traptime

Mode Global Config

7.8.12 show acl-traptime

This command displays the time interval for generating ACL traps. A trap is generated if an ACL rule applies for an incoming packet.

Format show acl-traptime

Mode Privileged Exec

7.9 IPv6 Access Control List Commands

This section describes the commands you use to configure IPv6 Access Control List (ACL) settings. IPv6 ACLs ensure that only authorized users have access to specific resources and block any unwarranted attempts to reach network resources.

The following rules apply to IPv6 ACLs:

- The maximum number of ACLs you create is 100, regardless of type.
- The system supports only Ethernet II frame types.
- The maximum number of rules per IPv6 ACL is hardware dependent.

7.9.1 ipv6 access-list

This command creates an IPv6 Access Control List (ACL) identified by *name*, consisting of classification fields defined for the IP header of an IPv6 frame. The *name* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IPv6 access list. The rate-limit attribute configures the committed rate and the committed burst size.

If an IPv6 ACL by this name already exists, this command enters IPv6-Access-List config mode to allow updating the existing IPv6 ACL.



Note...

The CLI mode changes to IPv6-Access-List Config mode when you successfully execute this command.

Format ipv6 access-list *name*

Mode Global Config

7.9.1.1 no ipv6 access-list

This command deletes the IPv6 ACL identified by *name* from the system.

Format no ipv6 access-list *name*

Mode Global Config

7.9.2 ipv6 access-list rename

This command changes the name of an IPv6 ACL. The *name* parameter is the name of an existing IPv6 ACL. The *newname* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IPv6 access list.

This command fails if an IPv6 ACL by the name *newname* already exists.

Format ipv6 access-list rename *name newname*

Mode Global Config

7.9.3 ipv6 access-list resequence

Use this command to renumber the sequence numbers of the entries for specified IPv6 access list with the given increment value starting from a particular sequence number. The command is used to edit the sequence numbers of ACL rules in the ACL and change the order in which entries are applied. This command is not saved in startup configuration and is not displayed in running configuration.

**Note...**

If the generated sequence number exceeds the maximum sequence number, the ACL rule creation fails and an informational message is displayed.

Default	10
Format	ipv6 access-list resequence { <i>name</i> <i>id</i> } <i>starting-sequence-number</i> <i>increment</i>
Mode	Global Config

Parameter	Description
starting-sequence-number	The sequence number from which to start. The range is 1–2147483647. The default is 10.
increment	The amount to increment. The range is 1–2147483647. The default is 10.

7.9.4 {deny | permit} (IPv6)

This command creates a new rule for the current IPv6 access list. A rule may either deny or permit traffic according to the specified classification fields. At a minimum, either the *every* keyword or the protocol, source address, and destination address values must be specified. The source and destination IPv6 address fields may be specified using the keyword *any* to indicate a match on any value in that field. The remaining command parameters are all optional, but the most frequently used parameters appear in the same relative order as shown in the command format.

Format	{deny permit} {every {{icmpv6 ipv6 tcp udp 0-255} {source-ipv6-prefix/prefix-length any host source-ipv6-address} [{range {portkey startport} {portkey endport} {eq neq lt gt} {portkey 0-65535}] {destination-ipv6-prefix/prefix-length any host destination-ipv6-address} [{range {portkey startport} {portkey endport} {eq neq lt gt} {portkey 0-65535}]} [flag [+fin -fin] [+syn -syn] [+rst -rst] [+psh -psh] [+ack -ack] [+urg -urg] [established]] [flow-label value] [icmp-type icmp-type [icmp-code icmp-code] icmp-message icmp-message] [routing] [fragments] [sequence sequence-number] [dscp dscp]}] [log] [assign-queue queue-id] [{mirror redirect} unit/slot/port] [rate-limit rate burst-size]
Mode	IPv6-Access-List Config

**Note...**

An implicit **deny all IPv6** rule always terminates the access list.

The *time-range* parameter allows imposing time limitation on the IPv6 ACL rule as defined by the parameter *time-range-name*. If a time range with the specified name does not exist and the IPv6 ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied immediately. If a time range with specified name exists and the IPv6 ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive. For information about configuring time ranges, see “Time Range Commands for Time-Based ACLs” on page 796”.

The *assign-queue* parameter allows specification of a particular hardware queue for handling traffic that matches this rule. The allowed *queue-id* value is 0-(n-1), where *n* is the number of user configurable queues available for the hardware platform. The *assign-queue* parameter is valid only for a permit rule.

For the Broadcom 5650x platform, the *mirror* parameter allows the traffic matching this rule to be copied to the specified *unit/slot/port*, while the *redirect* parameter allows the traffic matching this rule to be forwarded to the specified *unit/slot/port*. The *assign-queue* and *redirect* parameters are only valid for a permit rule.



Note...

The *mirror* and *redirect* parameters are not available on the Broadcom 5630x platform.

The **permit** command's optional attribute **rate-limit** allows you to permit only the allowed rate of traffic as per the configured rate in kbps, and burst-size in kbytes.

IPv6 ACLs have the following limitations:

- Port ranges are not supported for egress IPv6 ACLs.
- For BCM5684X platforms, The IPv6 ACL *routing* keyword is not supported when an IPv6 address is specified.
- For BCM5684X and BCM5644X platforms, the IPv6 ACL *fragment* keyword matches only on the first two IPv6 extension headers for the fragment header (next header code 44). If the fragment header appears in the third or subsequent header, it is not matched.
- For platforms other than BCM5684X and BCM5644X, the IPv6 ACL *fragment* keyword matches only on the first IPv6 extension header (next header code 44). If the fragment header appears in the second or subsequent header, it is not matched.
- For platforms other than the BCM5644X, the IPv6 ACL *routing* keyword matches only on the first IPv6 extension header (next header code 43). If the fragment header appears in the second or subsequent header, it is not matched.
- The rate-limit command is not supported for egress IPv6 ACLs.

Parameter	Description
{deny permit}	Specifies whether the IPv6 ACL rule permits or denies the matching traffic.
Every	Specifies to match every packet.
{protocolkey number}	Specifies the protocol to match for the IPv6 ACL rule. The current list is: <i>icmpv6</i> , <i>ipv6</i> , <i>tcp</i> , and <i>udp</i> .
source-ipv6-prefix/prefix-length any host source-ipv6-address	Specifies a source IPv6 source address and prefix length to match for the IPv6 ACL rule. Specifying any implies specifying "::/0" Specifying <i>host source-ipv6-address</i> implies matching the specified IPv6 address. This <i>source-ipv6-address</i> argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.

Parameter	Description
[{range {portkey startport} {portkey endport} {eq neq lt gt} {portkey 0-65535}]	Note: This option is available only if the protocol is TCP or UDP. Specifies the layer 4 port match condition for the IPv6 ACL rule. A port number can be used, in the range 0-65535, or the <i>portkey</i>, which can be one of the following keywords: - For TCP: <i>bgp, domain, echo, ftp, ftp-data, http, smtp, telnet, www, pop2, pop3</i> - For UDP: <i>domain, echo, ntp, rip, snmp, tftp, time, who.</i> Each of these keywords translates into its equivalent port number. When range is specified, IPv6 ACL rule matches only if the layer 4 port number falls within the specified port range. The <i>startport</i> and <i>endport</i> parameters identify the first and last ports that are part of the port range. They have values from 0 to 65535. The ending port must have a value equal or greater than the starting port. The starting port, ending port, and all ports in between are part of the layer 4 port range. When eq is specified, IPv6 ACL rule matches only if the layer 4 port number is equal to the specified port number or portkey. When lt is specified, IPv6 ACL rule matches if the layer 4 port number is less than the specified port number or portkey. It is equivalent to specifying the range as 0 to <specified port number - 1>. When gt is specified, IPv6 ACL rule matches if the layer 4 port number is greater than the specified port number or portkey. It is equivalent to specifying the range as <specified port number + 1> to 65535. When neq is specified, IPv6 ACL rule matches only if the layer 4 port number is not equal to the specified port number or portkey. Two rules are added in the hardware one with range equal to 0 to <specified port number - 1> and one with range equal to <<specified port number + 1 to 65535>>
<i>destination-ipv6-prefix/prefix-length</i> any <i>host destination-ipv6-address</i>	Specifies a destination IPv6 source address and prefix length to match for the IPv6 ACL rule. Specifying any implies specifying "::/0 " Specifying <i>host destination-ipv6-address</i> implies matching the specified IPv6 address. This <i>destination-ipv6-address</i> argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.

Parameter	Description
sequence <i>sequence-number</i>	Specifies a sequence number for the ACL rule. Every rule receives a sequence number. The sequence number is specified by the user or is generated by the device. If a sequence number is not specified for the rule, a sequence number that is 10 greater than the last sequence number in ACL is used and this rule is placed at the end of the list. If this is the first ACL rule in the given ACL, a sequence number of 10 is assigned. If the calculated sequence number exceeds the maximum sequence number value, the ACL rule creation fails. It is not allowed to create a rule that duplicates an already existing one. A rule cannot be configured with a sequence number that is already used for another rule. For example, if a user adds new ACL rule to ACL without specifying a sequence number, it is placed at the bottom of the list. By changing the sequence number, user can move the ACL rule to a different position in the ACL
[dscp <i>dscp</i>]	Specifies the dscp value to match for for the IPv6 rule.
flag [+fin -fin] [+syn -syn] [+rst -rst] [+psh -psh] [+ack -ack] [+urg -urg] [established]	Specifies that the IPv6 ACL rule matches on the tcp flags. When +<tcpflagname> is specified, a match occurs if specified <tcpflagname> flag is set in the TCP header. When "-<tcpflagname>" is specified, a match occurs if specified <tcpflagname> flag is *NOT* set in the TCP header. When established is specified, a match occurs if specified either RST or ACK bits are set in the TCP header. Two rules are installed in hardware to when "established" option is specified. This option is visible only if protocol is "tcp".
[icmp-type <i>icmp-type</i> [icmp-code <i>icmp-code</i>] / icmp-message <i>icmp-message</i>]	Note: This option is available only if the protocol is icmpv6. Specifies a match condition for ICMP packets. When <i>icmp-type</i> is specified, IPv6 ACL rule matches on the specified ICMP message type, a number from 0 to 255. When <i>icmp-code</i> is specified, IPv6 ACL rule matches on the specified ICMP message code, a number from 0 to 255. Specifying <i>icmp-message</i> implies both icmp-type and icmp-code are specified. The following icmp-messages are supported: <i>destination-unreachable</i>, <i>echo-reply</i>, <i>echo-request</i>, <i>header</i>, <i>hop-limit</i>, <i>mld-query</i>, <i>mld-reduction</i>, <i>mld-report</i>, <i>nd-na</i>, <i>nd-ns</i>, <i>next-header</i>, <i>no-admin</i>, <i>no-route</i>, <i>packet-too-big</i>, <i>port-unreachable</i>, <i>router-solicitation</i>, <i>router-advertisement</i>, <i>router-renumbering</i>, <i>time-exceeded</i>, and <i>unreachable</i>. The ICMP message is decoded into the corresponding ICMP type and ICMP code within that ICMP type.
Fragments	Specifies that IPv6 ACL rule matches on fragmented IPv6 packets (Packets that have the next header field is set to 44).
Routing	Specifies that IPv6 ACL rule matches on IPv6 packets that have routing extension headers (the next header field is set to 43).
Log	Specifies that this rule is to be logged.

Parameter	Description
<code>time-range <i>time-range-name</i></code>	Allows imposing a time limitation on the ACL rule as defined by the parameter <i>time-range-name</i> . If a time range with the specified name does not exist and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied immediately. If a time range with the specified name exists and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied when the time-range with the specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive.
<code>assign-queue <i>queue-id</i></code>	Specifies the assign-queue, which is the queue identifier to which packets matching this rule are assigned.
<code>{mirror redirect} <i>unit/slot/ port</i></code>	Specifies the mirror or redirect interface which is the unit/slot/port to which packets matching this rule are copied or forwarded, respectively.
<code>rate-limit <i>rate burst-size</i></code>	Specifies the allowed rate of traffic as per the configured rate in kbps, and burst-size in kbytes.

Example: The following shows an example of the command.

```
(Routing) (Config)#ipv6 access-list ip61
(Routing) (Config-ipv6-acl)#permit udp any any rate-limit 32 16
(Routing) (Config-ipv6-acl)#exit
```

7.9.4.1 no sequence-number

Use this command to remove the ACL rule with the specified sequence number from the ACL.

Format `no sequence-number`

Mode Ipv6-Access-List Config

7.9.5 ipv6 traffic-filter

This command either attaches a specific IPv6 ACL identified by *name* to an interface or range of interfaces, or associates it with a VLAN ID in a given direction. The *name* parameter must be the name of an existing IPv6 ACL.

An optional sequence number may be specified to indicate the order of this mac access list relative to other IPv6 access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified IPv6 access list replaces the currently attached IPv6 access list using that sequence number. If the sequence number is not specified for this command, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used.

This command specified in Interface Config mode only affects a single interface, whereas the Global Config mode setting is applied to all interfaces. The `vlan` keyword is only valid in the Global Config mode. The Interface Config mode command is only available on platforms that support independent per-port class of service queue configuration.

An optional *control-plane* is specified to apply the ACL on CPU port. The IPv6 control packets like IGMPv6 are also dropped because of the implicit *deny all* rule added at the end of the list. To overcome this, permit rules must be added to allow the IPv6 control packets.

**Note...**

The keyword *control-plane* is only available in Global Config mode.

**Note...**

You should be aware that the *out* option may or may not be available, depending on the platform.

Format `ipv6 traffic-filter name {{control-plane | in|out}|vlan vlan-id {in|out}} [sequence 1-4294967295]`

- Modes**
- Global Config
 - Interface Config

Example: The following shows an example of the command.

```
(Routing)(Config)#ipv6 traffic-filter ip61 control-plane
```

```
7.9.5.1            no ipv6 traffic-filter
```

This command removes an IPv6 ACL identified by *name* from the interface(s) in a given direction.

Format `no ipv6 traffic-filter <name>{{control-plane | in | out} | vlan <vlan-id> {in|out}}`

- Modes**
- Global Config
 - Interface Config

Example: The following shows an example of the command.

```
(Routing) (Config)#no ipv6 traffic-filter ip61 control-plane
```

```
7.9.6            show ipv6 access-lists
```

This command displays summary information of all the IPv6 Access lists. Use the access list *name* to display detailed information of a specific IPv6 ACL.

This command displays information about the attributes icmp-type, icmp-code, fragments, routing, tcp flags, and source and destination L4 port ranges. It displays committed rate, committed burst size and ACL rule hit count of packets matching the configured ACL rule within an ACL. This counter value rolls-over on reaching the maximum value. There is a dedicated counter for each ACL rule. ACL counters do not interact with PBR counters.

For ACL with multiple rules, once a match occurs at any one specific rule, counters associated with this rule only get incremented (for example, consider an ACL with three rules, after matching rule two, counters for rule three would not be incremented).

For ACL counters, If an ACL rule is configured without RATE-LIMIT, the counter value is a count of the forwarded/discarded packets. (For example: for a burst of 100 packets, the Counter value is 100).

If an ACL rule is configured with RATE LIMIT, the counter value is that of the MATCHED packet count. If the sent traffic rate exceeds the configured limit, the counters still display matched packet count (despite getting dropped beyond the configured limit since match criteria is met) that equals the sent rate. For example, if the rate limit is set to 10 kbps and 'matching' traffic is sent at 100 kbps, counters would reflect 100 kbps value. If the sent traffic rate is less than the configured limit, the counters display only the matched packet count. Either way, only the matched packet count is reflected in the counters, irrespective of whether they get dropped or forwarded. ACL counters do not interact with diffserv policies.

Format `show ipv6 access-lists [name]`

Mode Privileged EXEC



Note...

Only the access list fields that you configure are displayed. Thus, the command output varies based on the match criteria configured within the rules of an ACL.

Term	Definition
Rule Number	The ordered rule number identifier defined within the IPv6 ACL.
Action	The action associated with each rule. The possible values are Permit or Deny.
Match All	Indicates whether this access list applies to every packet. Possible values are True or False.
Protocol	The protocol to filter for this rule.
Committed Rate	The committed rate defined by the rate-limit attribute.
Committed Burst Size	The committed burst size defined by the rate-limit attribute.
Source IP Address	The source IP address for this rule.
Source L4 Port Keyword	The source port for this rule.
Destination IP Address	The destination IP address for this rule.
Destination L4 Port Keyword	The destination port for this rule.
IP DSCP	The value specified for IP DSCP.
Flow Label	The value specified for IPv6 Flow Label.
Log	Displays when you enable logging for the rule.
Assign Queue	The queue identifier to which packets matching this rule are assigned.
Mirror Interface	The <i>sSlot/port</i> to which packets matching this rule are copied.
Redirect Interface	The <i>sSlot/port</i> to which packets matching this rule are forwarded.
Time Range Name	Displays the name of the time-range if the IPv6 ACL rule has referenced a time range.
Rule Status	Status (Active/Inactive) of the IPv6 ACL rule.

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show ipv6 access-lists ip61
```

```
ACL Name: ip61
```

```
Outbound Interface(s): control-plane
```

```
Rule Number: 1
```

```
Action..... permit
```

```

Match Every..... FALSE
Protocol..... 17(udp)
Committed Rate..... 32
Committed Burst Size..... 16

```

7.10 Time Range Commands for Time-Based ACLs

Time-based ACLs allow one or more rules within an ACL to be based on time. Each ACL rule within an ACL except for the implicit *deny all* rule can be configured to be active and operational only during a specific time period. The time range commands allow you to define specific times of the day and week in order to implement time-based ACLs. The time range is identified by a name and can then be referenced by an ACL rule defined with in an ACL.

7.10.1 time-range

Use this command to create a time range identified by *name*, consisting of one absolute time entry and/or one or more periodic time entries. The *name* parameter is a case-sensitive, alphanumeric string from 1 to 31 characters that uniquely identifies the time range. An alpha-numeric string is defined as consisting of only alphabetic, numeric, dash, underscore, or space characters.

If a time range by this name already exists, this command enters Time-Range config mode to allow updating the time range entries



Note...

When you successfully execute this command, the CLI mode changes to Time-Range Config mode.

Format time-range *name*

Mode Global Config

7.10.1.1 no time-range

This command deletes a time-range identified by *name*.

Format no time-range *name*

Mode Global Config

7.10.2 absolute

Use this command to add an absolute time entry to a time range. Only one absolute time entry is allowed per time-range. The *time* parameter is based on the currently configured time zone.

The *[start time date]* parameters indicate the time and date at which the configuration that referenced the time range starts going into effect. The time is expressed in a 24-hour clock, in the form of hours:minutes. For example, 8:00 is 8:00 am and 20:00 is 8:00 pm. The date is expressed in the format day month year. If no start time and date are specified, the configuration statement is in effect immediately.

The *[end time date]* parameters indicate the time and date at which the configuration that referenced the time range is no longer in effect. The end time and date must be after the start time and date. If no end time and date are specified, the configuration statement is in effect indefinitely.

Format absolute *[start time date] [end time date]*

Mode Time-Range Config

7.10.2.1 no absolute

This command deletes the absolute time entry in the time range

Format no absolute
Mode Time-Range Config

7.10.3 periodic

Use this command to add a periodic time entry to a time range. The *time* parameter is based off of the currently configured time zone.

The first occurrence of the *days-of-the-week* argument is the starting day(s) from which the configuration that referenced the time range starts going into effect. The second occurrence is the ending day or days from which the configuration that referenced the time range is no longer in effect. If the end days-of-the-week are the same as the start, they can be omitted

This argument can be any single day or combinations of days: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday. Other possible values are:

- daily—Monday through Sunday
- weekdays—Monday through Friday
- weekend—Saturday and Sunday

If the ending days of the week are the same as the starting days of the week, they can be omitted.

The first occurrence of the *time* argument is the starting hours:minutes which the configuration that referenced the time range starts going into effect. The second occurrence is the ending hours:minutes at which the configuration that referenced the time range is no longer in effect.

The hours:minutes are expressed in a 24-hour clock. For example, 8:00 is 8:00 am and 20:00 is 8:00 pm.

Format *periodic days-of-the-week time to time*
Mode Time-Range Config

7.10.3.1 no periodic

This command deletes a periodic time entry from a time range

Format *no periodic days-of-the-week time to time*
Mode Time-Range Config

7.10.4 show time-range

Use this command to display a time range and all the absolute/periodic time entries that are defined for the time range. Use the *name* parameter to identify a specific time range to display. When *name* is not specified, all the time ranges defined in the system are displayed.

Format show time-range [*name*]
Mode Privileged EXEC

The information in the following table displays when no time range name is specified.

Term	Definition
Admin Mode	The administrative mode of the time range feature on the switch
Current number of all Time Ranges	The number of time ranges currently configured in the system.
Maximum number of all Time Ranges	The maximum number of time ranges that can be configured in the system.
Time Range Name	Name of the time range.
Status	Status of the time range (active/inactive)
Periodic Entry count	The number of periodic entries configured for the time range.
Absolute Entry	Indicates whether an absolute entry has been configured for the time range (Exists).

7.11 Auto-Voice over IP Commands

This section describes the commands you use to configure Auto-Voice over IP (VoIP) commands. The Auto-VoIP feature explicitly matches VoIP streams in Ethernet switches and provides them with a better class-of-service than ordinary traffic. When you enable the Auto-VoIP feature on an interface, the interface scans incoming traffic for the following call-control protocols:

- Session Initiation Protocol (SIP)
- H.323
- Skinny Client Control Protocol (SCCP)

When a call-control protocol is detected, the switch assigns the traffic in that session to the highest CoS queue, which is generally used for time-sensitive traffic.

7.11.1 auto-voip

Use this command to configure auto VoIP mode. The supported modes are protocol-based and oui-based. Protocol-based auto VoIP prioritizes the voice data based on the layer 4 port used for the voice session. OUI based auto VoIP prioritizes the phone traffic based on the known OUI of the phone.

When both modes are enabled, if the connected phone OUI is one of the configured OUI, then the voice data is prioritized using OUI Auto VoIP, otherwise protocol-based Auto VoIP is used to prioritize the voice data.

Active sessions are cleared if protocol-based auto VoIP is disabled on the port.

Default oui-based
Format auto-voip [protocol-based | oui-based]
Mode • Global Config
 • Interface Config

7.11.1.1 no auto-voip

Use the **no** form of the command to set the default mode.

7.11.2 auto-voip oui

Use this command to configure an OUI for Auto VoIP. The traffic from the configured OUI will get the highest priority over the other traffic. The `oui-prefix` is a unique OUI that identifies the device manufacturer or vendor. The OUI is specified in three octet values (each octets represented as two hexadecimal digits) separated by colons. The `string` is a description of the OUI that identifies the manufacturer or vendor associated with the OUI.

Default	A list of known OUIs is present.
Format	<code>auto-voip oui oui-prefix oui-desc string</code>
Mode	Global Config

Example: The following example shows how to add an OUI to the table.

```
(Routing) (Config)#auto-voip oui 00:03:6B desc "Cisco VoIPPhone"
```

7.11.2.1 `no auto-voip oui`

Use the **no** form of the command to remove a configured OUI prefix from the table.

Format	<code>no auto-voip oui oui-prefix</code>
Mode	Global Config

7.11.3 `auto-voip oui-based priority`

Use this command to configure the global OUI based auto VoIP priority. If the phone OUI matches one of the configured OUI, then the priority of traffic from the phone is changed to OUI priority configured through this command. The `priority-value` is the 802.1p priority used for traffic that matches a value in the known OUI list. If the interface detects an OUI match, the switch assigns the traffic in that session to the traffic class mapped to this priority value. Traffic classes with a higher value are generally used for time-sensitive traffic.

Default	Highest available priority.
Format	<code>auto-voip oui-based priority priority-value</code>
Mode	Global Config

Example: The following example shows how to add an OUI to the table.

```
(Routing) (Config)#auto-voip oui 00:03:6B desc "Cisco VoIPPhone"
```

7.11.3.1 `no auto-voip oui`

Use the **no** form of the command to remove a configured OUI prefix from the table.

Format	<code>no auto-voip oui oui-prefix</code>
Mode	• Global Config • Interface Config

7.11.4 `auto-voip protocol-based`

Use this command to configure the global protocol-based auto VoIP remarking priority or traffic-class. If remark priority is configured, the voice data of the session is remarked with the priority configured through this command. The `remark-priority` is the 802.1p priority used for protocol-based VoIP traffic. If the interface detects a call-control protocol, the device marks traffic in that session with the specified 802.1p priority value to ensure voice traffic always gets the highest priority throughout the network path.

The `tc` value is the traffic class used for protocol-based VoIP traffic. If the interface detects a call-control protocol, the device assigns the traffic in that session to the configured Class of Service (CoS) queue. Traffic classes with a higher value are generally used for time-sensitive traffic. The CoS queue associated with the specified traffic class should be configured with the appropriate bandwidth allocation to allow priority treatment for VoIP traffic.

**Note...**

You must enable tagging on auto VoIP enabled ports to remark the voice data upon egress.

Default	Traffic class 7
Format	<code>auto-voip protocol-based {remark remark-priority traffic-class tc}</code>
Mode	• Global Config • Interface Config

7.11.4.1 `no auto-voip protocol-based`

Use this command to reset the global protocol based auto VoIP remarking priority or traffic-class to the default.

Format	<code>no auto-voip protocol-based {remark remark-priority traffic-class tc}</code>
Mode	• Global Config • Interface Config

7.11.5 `auto-voip vlan`

Use this command to configure the global Auto VoIP VLAN ID. The VLAN behavior is depend on the configured auto VoIP mode. The auto-VoIP VLAN is the VLAN used to segregate VoIP traffic from other non-voice traffic. All VoIP traffic that matches a value in the known OUI list gets assigned to this VoIP VLAN.

Default	None
Format	<code>auto-voip vlan vlan-id</code>
Mode	Global Config

7.11.5.1 `no auto-voip vlan`

Use the **no** form of the command to reset the auto-VoIP VLAN ID to the default value.

Format	<code>no auto-voip vlan</code>
Mode	Global Config

7.11.6 `show auto-voip`

Use this command to display the auto VoIP settings on the interface or interfaces of the switch.

Format	<code>show auto-voip {protocol-based oui-based} interface {slot/port all}</code>
Mode	Privileged EXEC

Field	Description
VoIP VLAN ID	The global VoIP VLAN ID.
Prioritization Type	The type of prioritization used on voice traffic.

Field	Description
Class Value	- If the Prioritization Type is configured as <code>traffic-class</code>, then this value is the queue value. - If the Prioritization Type is configured as <code>remark</code>, then this value is 802.1p priority used to remark the voice traffic.
Priority	The 802.1p priority. This field is valid for OUI auto VoIP.
AutoVoIP Mode	The Auto VoIP mode on the interface.

Example: The following shows example CLI display output for the command.

```
(Routing)# show auto-voip protocol-based interface all
```

```
VoIP VLAN Id..... 2
Prioritization Type..... traffic-class
Class Value..... 7
```

Interface	Auto VoIP Mode	Operational Status
0/1	Disabled	Down
0/2	Disabled	Down
0/3	Disabled	Down
0/4	Disabled	Down

Example: The following shows example CLI display output for the command.

```
(Routing)# show auto-voip oui-based interface all
```

```
VoIP VLAN Id..... 2
Priority..... 7
```

Interface	Auto VoIP Mode	Operational Status
0/1	Disabled	Down
0/2	Disabled	Down
0/3	Disabled	Down
0/4	Disabled	Down
0/5	Disabled	Down

7.11.7 show auto-voip oui-table

Use this command to display the VoIP oui-table information.

Format show auto-voip oui-table

Mode Privileged EXEC

Parameter	Description
OUI	OUI of the source MAC address.
Status	Default or configured entry.
OUI Description	Description of the OUI.

Example: The following shows example CLI display output for the command.

```
(Routing)# show auto-voip oui-table
```

OUI	Status	Description
00:01:E3	Default	SIEMENS
00:03:6B	Default	CISCO1
00:01:01	Configured	VoIP phone

7.12 iSCSI Optimization Commands

This section describes commands you use to monitor iSCSI sessions and prioritize iSCSI packets. iSCSI Optimization provides a means of giving traffic between iSCSI initiator and target systems special Quality of Service (QoS) treatment. This is accomplished by monitoring traffic to detect packets used by iSCSI stations to establish iSCSI sessions and connections. Data from these exchanges is used to create classification rules that assign the traffic between the stations to a configured traffic class. Packets in the flow are queued and scheduled for egress on the destination port based on these rules.

7.12.1 iscsi aging time

This command sets the aging time for iSCSI sessions. Behavior when changing aging time:

- When aging time is increased, current sessions will be timed out according to the new value.
- When aging time is decreased, any sessions that have been dormant for a time exceeding the new setting will be immediately deleted from the table. All other sessions will continue to be monitored against the new time out value.

Default 10 minutes
Format iscsi aging time *time*
Mode Global Config

Parameter	Description
time	The number of minutes a session must be inactive prior to its removal. Range: 1-43,200.

Example: The following example sets the aging time for iSCSI sessions to 100 minutes.

```
(switch)(config)#iscsi aging time 100
```

7.12.1.1 no iscsi aging time

Use the **no** form of the command to reset the aging time value to the default value.

Format no iscsi aging time
Mode Global Config

7.12.2 iscsi cos

This command sets the quality of service profile that will be applied to iSCSI flows. iSCSI flows are assigned by default to the highest VPT/DSCP mapped to the highest queue not used for stack management. The user should also take care of configuring the relevant Class of Service parameters for the queue in order to complete the setting.

Setting the VPT/DSCP sets the QoS profile which determines the egress queue to which the frame is mapped. The switch default setting for egress queues scheduling is Weighted Round Robin (WRR).

You may complete the QoS setting by configuring the relevant ports to work in other scheduling and queue management modes via the Class of Service settings. Depending on the platform, these choices may include strict priority for the queue used for iSCSI traffic. The downside of strict priority is that, in certain circumstances (under heavy high priority traffic), other lower priority traffic may get starved. In WRR the queue to which the flow is assigned to can be set to get the required percentage.

Format `iscsi cos {vpt vpt | dscp dscp} [remark]`

Mode Global Config

Parameter	Description
vpt/dscp	The VLAN Priority Tag or DSCP to assign iSCSI session packets.
remark	Mark the iSCSI frames with the configured VPT/DSCP when egressing the switch.

Example: The following example sets the quality of service profile that will be applied to iSCSI flows.
`(switch)(config)#iscsi cos vpt 5 remark`

7.12.2.1 `no iscsi cos`

Use the `no` form of the command to return to the default.

Format `no iscsi cos`

Mode Global Config

7.12.3 `iscsi enable`

This command globally enables iSCSI awareness.

Default `disabled`

Format `iscsi enable`

Mode Global Config

Example: The following example enables iSCSI awareness.
`(switch)(config)#iscsi enable`

7.12.3.1 `no iscsi enable`

This command disables iSCSI awareness. When you use the `no iscsi enable` command, iSCSI resources will be released.

Format `no iscsi enable`

Mode Global Config

7.12.4 `iscsi target port`

This command configures an iSCSI target port and, optionally, a target system's IP address and IQN name. When working with private iSCSI ports (not IANA-assigned ports 3260/860), it is recommended to specify the target IP address as well, so that the switch will only snoop frames with which the TCP destination port is one of the configured TCP ports, and the destination IP is the target's IP address. This way the CPU will not be falsely loaded by non-iSCSI flows (if by chance other applications also choose to use these un-reserved ports).

When a port is already defined and not bound to an IP address, and you want to bind it to an IP address, you should first remove it by using the `no` form of the command and then add it again, this time together with the relevant IP address.

Target names are only for display when using the **show iscsi** command. These names are not used to match with the iSCSI session information acquired by snooping.

A maximum of 16 TCP ports can be configured either bound to IP or not.

Default	iSCSI well-known ports 3260 and 860 are configured as default but can be removed as any other configured target.
Format	<code>iscsi target port tcp-port-1 [tcp-port-2...tcp-port-16] [address ip-address] [name targetname]</code>
Mode	Global Config

Parameter	Description
tcp-port-n	TCP port number or list of TCP port numbers on which the iSCSI target listens to requests. Up to 16 TCP ports can be defined in the system in one command or by using multiple commands.
ip-address	IP address of the iSCSI target. When the <code>no</code> form of this command is used, and the tcp port to be deleted is one bound to a specific IP address, the address field must be present.
targetname	iSCSI name of the iSCSI target. The name can be statically configured; however, it can be obtained from iSNS or from sendTargets response. The initiator must present both its iSCSI Initiator Name and the iSCSI Target Name to which it wishes to connect in the first login request of a new session or connection.

Example: The following example configures TCP Port 49154 to target IP address 172.16.1.20.

```
(switch)(config)#iscsi target port 49154 address 172.16.1.20
```

7.12.4.1 `no iscsi target port`

Use the `no` form of the command to delete an iSCSI target port, address, and name.

7.12.5 `show iscsi`

This command displays the iSCSI settings.

Format	<code>show iscsi</code>
Mode	Privileged EXEC

Example: The following are examples of the commands used for iSCSI.

Example #1: Show iSCSI (Default Configuration)

```
(switch)#show iscsi
iSCSI disabled
iSCSI vpt is 5, remark
Session aging time: 10 min
Maximum number of sessions is 192
-----
iSCSI Targets and TCP ports:
-----
TCP Port   Target IP Address   Name
860        Not Configured      Not Configured
3260       Not Configured      Not Configured
```

Example #2: Enable iSCSI.

```
(switch)#configure
(switch)(config)#iscsi enable
```

Example #3: Show iSCSI (After Enable)

The following configuration detects iSCSI sessions and connections established using TCP ports 3260 or 860. Packets sent on detected iSCSI TCP connections are assigned to traffic class 2 (see the CoS configuration shown below). Since remark is enabled, the packets are marked with IEEE 802.1p priority to 5 before transmission.

```
(switch)#show iscsi
iscsi enabled
iSCSI vpt is 5, remark
Session aging time: 10 min
Maximum number of sessions is 192
-----
iSCSI Targets and TCP ports:
-----
TCP Port    Target IP Address    Name
860         Not Configured      Not Configured
3260        Not Configured      Not Configured

(switch)#show classofservice dot1p-mapping
User Priority    Traffic Class
-----
0                1
1                0
2                0
3                1
4                2
5                2
6                3
6                3
```

7.12.6 show iscsi sessions

This command displays the iSCSI sessions.

Default If not specified, sessions are displayed in short mode (not detailed).
Format show iscsi sessions [detailed]
Mode Privileged EXEC

Example: The following example displays the iSCSI sessions.

```
(switch) # show iscsi sessions
Target: iqn.1993-11.com.disk-vendor:diskarrays.sn.45678
-----
Initiator: iqn.1992-04.com.os-vendor.plan9:cdrom.12
ISID: 11
Initiator: iqn.1995-05.com.os-vendor.plan9:cdrom.10
ISID: 222
-----
Target: iqn.103-1.com.storage-vendor:sn.43338.
storage.tape:sys1.xyz
Session 3:
Initiator: iqn.1992-04.com.os-vendor.plan9:cdrom.12
Session 4:
Initiator: iqn.1995-05.com.os-vendor.plan9:cdrom.10
-----
```

```
(switch)# show iscsi sessions detailed
Target: iqn.1993-11.com.disk-vendor:diskarrays.sn.45678
```

```
-----
Session 1:
```

```
Initiator: iqn.1992-04.com.os
vendor.plan9:cdrom.12.storage:sys1.xyz
```

```
-----
Time started: 17-Jul-2008 10:04:50
Time for aging out: 10 min
ISID: 11
```

Initiator	Initiator	Target	Target
IP address	TCP port	IP address	IP port
172.16.1.3	49154	172.16.1.20	30001
172.16.1.4	49155	172.16.1.21	30001
172.16.1.5	49156	172.16.1.22	30001

```
Session 2:
```

```
-----
Initiator: iqn.1995-05.com.os-vendor.plan9:cdrom.10
Time started: 17-Aug-2008 21:04:50
Time for aging out: 2 min
ISID: 22
```

Initiator	Initiator	Target	Target
IP address	TCP port	IP address	IP port
172.16.1.30	49200	172.16.1.20	30001
172.16.1.30	49201	172.16.1.21	30001

8 IP Multicast Commands

This chapter describes the IP Multicast commands available in the FASTPATH CLI.

The IP Multicast Commands chapter contains the following sections:

- "Multicast Commands" on page 807"
- "DVMRP Commands" on page 815"
- "PIM Commands" on page 819"
- "Internet Group Message Protocol Commands" on page 834"
- "IGMP Proxy Commands" on page 840"



Note...

The commands in this chapter are in one of two functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.

8.1 Multicast Commands

This section describes the commands you use to configure IP Multicast and to view IP Multicast settings and statistics.

8.1.1 ip mcast boundary

This command adds an administrative scope multicast boundary specified by *groupipaddr* and *mask* for which this multicast administrative boundary is applicable. *groupipaddr* is a group IP address and *mask* is a group IP mask. This command can be used to configure a single interface or a range of interfaces.

Format ip mcast boundary *groupipaddr mask*

Mode Interface Config

8.1.1.1 no ip mcast boundary

This command deletes an administrative scope multicast boundary specified by *groupipaddr* and *mask* for which this multicast administrative boundary is applicable. *groupipaddr* is a group IP address and *mask* is a group IP mask.

Format no ip mcast boundary *groupipaddr mask*

Mode Interface Config

8.1.2 ip mroute

This command configures an IPv4 Multicast Static Route for a source.

Default No MRoute is configured on the system.

Format ip mroute *src-ip-addr src-mask rpf-addr preference*

Mode Global Config

Parameter	Description
src-ip-addr	The IP address of the multicast source network.
src-mask	The IP mask of the multicast data source.
rpf-ip-addr	The IP address of the RPF next-hop router toward the source.
preference	The administrative distance for this Static MRoute, that is, the preference value. The range is 1 to 255.

8.1.2.1 no ip mroute

This command removes the configured IPv4 Multicast Static Route.

Format no ip mroute *src-ip-addr*

Mode Global Config

8.1.3 ip multicast

This command sets the administrative mode of the IP multicast forwarder in the router to active. This command also enables the administrative mode of IPv6 multicast routing.

Default disabled

Format ip multicast

Mode Global Config

8.1.3.1 no ip multicast

This command sets the administrative mode of the IP multicast forwarder in the router to inactive.

Format no ip multicast

Mode Global Config

8.1.4 ip multicast ttl-threshold

This command is specific to IPv4. Use this command to apply the given Time-to-Live threshold value to a routing interface or range of interfaces. The *ttl-threshold* is the TTL threshold which is to be applied to the multicast Data packets which are to be forwarded from the interface. This command sets the Time-to-Live threshold value such that any data packets forwarded over the interface having TTL value above the configured value are dropped. The value for *ttl-threshold* ranges from 0 to 255.

Default 1

Format ip multicast ttl-threshold *ttlvalue*

Mode Interface Config

8.1.4.1 no ip multicast ttl-threshold

This command applies the default *ttl-threshold* to a routing interface. The *ttl-threshold* is the TTL threshold which is to be applied to the multicast Data packets which are to be forwarded from the interface.

Format no ip multicast ttl-threshold

Mode Interface Config

8.1.5 show ip mcast

This command displays the system-wide multicast information.

Format show ip mcast

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Admin Mode	The administrative status of multicast. Possible values are enabled or disabled.
Protocol State	The current state of the multicast protocol. Possible values are Operational or Non-Operational.
Table Max Size	The maximum number of entries allowed in the multicast table.
Protocol	The multicast protocol running on the router. Possible values are PIMDM, PIMSM, or DVMRP.
Multicast Forwarding Cache Entry Count	The number of entries in the multicast forwarding cache.

8.1.6 show ip mcast boundary

This command displays all the configured administrative scoped multicast boundaries. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

Format show ip mcast boundary {*slot/port*|*vlan 1-4093*|all}

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Interface	<i>slot/port</i>
Group Ip	The group IP address.
Mask	The group IP mask.

8.1.7 show ip mcast interface

This command displays the multicast information for the specified interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

Format show ip mcast interface {*slot/port*|*vlan 1-4093*}

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Interface	<i>slot/port</i>
TTL	The time-to-live value for this interface.

8.1.8 show ip mroute

This command displays a summary or all the details of the multicast table.

**Note...**

This command replaces the `show ip mcast mroute` command.

Format `show ip mroute {detail | summary | group group-address | source source-address}`

- Modes**
- Privileged EXEC
 - User EXEC

If you use the `detail`, `group`, or `source` parameters in PIM Sparse mode, the command displays the following fields:

Parameter	Description
Flags	• F: Register flag. Indicates that the source connected router is sending registers to RP. This flag can be seen only on Designated Router connected to source. • T: SPT-bit set. Indicates that packets have been received on the shortest path source tree. • R: RP-bit set. Indicates that the (S, G) entry is pointing toward the RP. This flag typically indicates a prune state along the shared tree for a particular source.
Outgoing interface flags	• C: Connected. A member of the multicast group is directly connected to the interface. • J: Received PIM (*,G) Join on this interface.
Timers:Uptime/Expires	• Uptime: Indicates per interface how long (in hours, minutes, and seconds) the entry has been in the IP multicast routing table. • Expires: Indicates per interface how long (in seconds) until the entry will be removed from the IP multicast routing table
Counters	• Joins: Indicates the number of (*,G) or (S,G) joins received for the given entry. • Prunes: Indicates the number of (*,G) or (S,G) prunes received for the given entry. • Registers: Indicates the number of register messages received for the given (S,G) entry. • Register Stops: Indicates the number of register stop messages received for the given (S,G) entry.
RPF Address	IP address of the upstream router to the source.
Outgoing interface list	List of outgoing Interfaces.
Protocol	The current operating multicast routing protocol.
RP	Address of the RP router.
Incoming interface	Expected interface for a multicast packet from the source. If the packet is not received on this interface, it is discarded.

If you use the `detail` parameter in any mode other than PIM sparse mode, the command displays the following fields:

Term	Definition
Source IP Addr	The IP address of the multicast data source.

Term	Definition
Group IP Addr	The IP address of the destination of the multicast packet.
Expiry Time	The time of expiry of this entry in seconds.
Up Time	The time elapsed since the entry was created in seconds.
RPF Neighbor	The IP address of the RPF neighbor.
Flags	The flags associated with this entry.

If you use the summary parameter in PIM Sparse mode, the command displays the following fields:

Parameter	Description
Source IP	Source address of the multicast route entry.
Group IP	Group address of the multicast route entry.
Protocol	The current operating multicast routing protocol.
Incoming Interface	Expected interface for a multicast packet from the source. If the packet is not received on this interface, it is discarded.
Outgoing Interface List	List of outgoing Interfaces.

If you use the summary parameter, the command displays the following fields:

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which the entry was created.
Incoming Interface	The interface on which the packet for the source/group arrives.
Outgoing Interface List	The list of outgoing interfaces on which the packet is forwarded.

Example: This example shows the output for the summary parameter in PIM Sparse mode.
(FASTPATH Routing) #show ip mroute summary

```

Multicast route table summary
Source IP      Group IP      Protocol    Incoming   Outgoing
Interface      Interface List
-----
192.168.10.1   225.1.1.1     PIMSM       V110       V120, V130

```

Example: This example shows the output for the detail parameter in PIM Sparse mode.
IP Multicast Routing Table
Flags: C - Connected, J - Received Pim (*,G) Join,
R - RP-bit set, F - Register flag, T - SPT-bit set
Timers: Uptime/Expires Protocol: PIMSM

```

( *,225.6.6.6)
00:00:41/000    RP: 1.1.1.1
Joins/Prunes: 0/0
Incoming interface:          RPF nbr: 0.0.0.0
Outgoing interface list:
4/1      00:00:41/218    Joins:          0    Flags:    C

( *,225.7.7.7)
00:00:36/000    RP: 1.1.1.1
Joins/Prunes: 0/0

```

```

Incoming interface:          RPF nbr: 0.0.0.0
Outgoing interface list:
4/1      00:00:36/224    Joins:          0    Flags:    C

(3.3.3.11,225.6.6.6)
00:00:51/158    Flags:    T
Joins/Prunes: 0/0    Reg/Reg-stop: 0/0
Incoming interface: 4/2    RPF nbr: 3.3.3.11
Outgoing interface list:
4/1      00:00:41/000    Joins:          0

(3.3.3.11,225.7.7.7)
00:17:42/201    Flags:    T
Joins/Prunes: 0/0    Reg/Reg-stop: 0/0
Incoming interface: 4/2    RPF nbr: 3.3.3.11
Outgoing interface list:
4/1      00:00:36/000    Joins:          0

```

Example: This example shows the output for the detail parameter in PIM Dense mode when a multicast routing protocol other than PIMSM is enabled.

```
(FASTPATH Routing) (Config)#show ip mroute detail
```

IP Multicast Routing Table

Source IP	Group IP	Expiry Time (hh:mm:ss)	Up Time (hh:mm:ss)	RPF Neighbor	Flags
192.168.10.1	225.1.1.1	00:02:45	05:37:09	192.168.20.5	SPT

Example: This example shows IPv6 output for the detail parameter in PIM Sparse mode.

```
#show ipv6 mroute detail
```

IP Multicast Routing Table

Flags: C - Connected, J - Received Pim (*,G) Join,
R - RP-bit set, F - Register flag, T - SPT-bit set
Timers: Uptime/Expires Protocol: PIMSM

```

( *,ff43::3)
00:00:41/000    RP: 2001::1
Joins/Prunes: 0/0
Incoming interface:          RPF nbr: ::
Outgoing interface list:
4/1      00:00:41/219    Joins:          0    Flags:    C

```

```

( *,ff24::6)
00:00:22/000    RP: 2001::1
Joins/Prunes: 0/0
Incoming interface:          RPF nbr: ::
Outgoing interface list:
4/1      00:00:41/219    Joins:          0    Flags:    C

```

```

(3001::10,ff43::3)
00:00:07/203    Flags:    T
Joins/Prunes: 0/0    Reg/Reg-stop: 0/0
Incoming interface: 4/2    RPF nbr: 3001::10
Outgoing interface list:
4/1      00:00:07/000    Joins:          0

```

```

(4001::33,ff22::3)
00:00:55/108    Flags:    T
Joins/Prunes: 0/0    Reg/Reg-stop: 0/0

```

```

Incoming interface: 4/1          RPF nbr: 3001::10
Outgoing interface list:
4/2          00:00:66/000    Joins:          0

(3001::10,ff43::3)
00:00:07/203    Flags:    T
Joins/Prunes: 0/0    Reg/Reg-stop: 0/0
Incoming interface: 4/1          RPF nbr: 3001::10
Outgoing interface list:
4/2          00:00:77/000    Joins:          0

```

Example: This example shows output for the group parameter in PIM Sparse mode.

```

(U16)# show ip mroute group 229.10.0.1
IP Multicast Routing Table

```

```

Flags: C - Connected, J - Received PIM (*,G) Join,
      R - RP-bit set, F - Register flag, T - SPT-bit set
Timers: Uptime(HH:MM:SS)/Expiry(SSS)
Protocol: PIMSM

```

```

(*, 229.10.0.1), 00:04:35/179, RP: 192.0.2.20
Joins/Prunes: 20/1
Incoming interface: Null, RPF Address: 0.0.0.0
Outgoing interface list:
  VLAN 6    00:00:30/150    Joins:15    Flags: C
  VLAN 5    00:04:35/150    Joins:10    Flags: C
  VLAN 2    00:01:28/0      Joins:20    Flags: J

```

```

(192.0.2.20, 229.10.0.1), 00:04:35/177, Flags: T
Joins/Prunes:20/1 , Reg/Reg-Stop:100/0
Incoming interface: VLAN 2, RPF Address: 0.0.0.0
Outgoing interface list:
  VLAN 5    00:03:25/0      Joins:20
  VLAN 6    00:00:10/0      Joins:5

```

Example: The following example shows output for the source parameter in PIM Sparse mode.

```

(U16)# show ip mroute source 192.0.2.20
IP Multicast Routing Table

```

```

Flags: C - Connected, J - Received PIM (*,G) Join,
      R - RP-bit set, F - Register flag, T - SPT-bit set
Timers: Uptime(HH:MM:SS)/Expiry(SSS)
Protocol: PIMSM

```

```

(192.0.2.20, 229.10.0.1), 00:04:35/177, Flags: T
Joins/Prunes:20/1 , Reg/Reg-Stop:100/0
Incoming interface: VLAN 2, RPF Address: 0.0.0.0
Outgoing interface list:
  VLAN 5    00:03:25/0      Joins:20
  VLAN 6    00:00:10/0      Joins:5

```

8.1.9 show ip mcast mroute group

This command displays the multicast configuration settings such as flags, timer settings, incoming and outgoing interfaces, RPF neighboring routers, and expiration times of all the entries in the multicast mroute table containing the given *groupipaddr*.

Format show ip mcast mroute group *groupipaddr* {detail | summary}

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which this entry was created.
Incoming Interface	The interface on which the packet for this group arrives.
Outgoing Interface List	The list of outgoing interfaces on which this packet is forwarded.

8.1.10 show ip mcast mroute source

This command displays the multicast configuration settings such as flags, timer settings, incoming and outgoing interfaces, RPF neighboring routers, and expiration times of all the entries in the multicast mroute table containing the given source IP address or source IP address and group IP address pair.

Format show ip mcast mroute source *sourceipaddr* {summary | *groupipaddr*}

Modes

- Privileged EXEC
- User EXEC

If you use the *groupipaddr* parameter, the command displays the following column headings in the output table:

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Expiry Time	The time of expiry of this entry in seconds.
Up Time	The time elapsed since the entry was created in seconds.
RPF Neighbor	The IP address of the RPF neighbor.
Flags	The flags associated with this entry.

If you use the summary parameter, the command displays the following column headings in the output table:

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which this entry was created.
Incoming Interface	The interface on which the packet for this source arrives.
Outgoing Interface List	The list of outgoing interfaces on which this packet is forwarded.

8.1.11 show ip mcast mroute static

Use the `show ip mcast mroute static` command in Privileged EXEC or User EXEC mode to display all the static routes configured in the static mcast table, if it is specified, or display the static route associated with the particular *sourceipaddr*.

Format show ip mcast mroute static [*sourceipaddr*]

Modes

- Privileged EXEC
- User EXEC

Parameter	Description
Source IP	IP address of the multicast source network.
Source Mask	The subnetwork mask pertaining to the source IP.
RPF Address	The IP address of the RPF next-hop router toward the source.
Preference	The administrative distance for this Static MRoute.

Example: The following shows example CLI display output for the command.

```
console#show ip mcast mroute static
```

MULTICAST STATIC ROUTES			
Source IP	Source Mask	RPF Address	Preference
1.1.1.1	255.255.255.0	2.2.2.2	23

```
8.1.12 clear ip mroute
```

This command deletes all or the specified IP multicast route entries.



Note...

This command only clears dynamic mroute entries. It does not clear static mroutes.

Format clear ip mroute {*|group-address[source-address]}

Modes Privileged EXEC

Parameter	Description
*	Deletes all IPv4 entries from the IP multicast routing table.
group-address	IP address of the multicast group.
source-address	The IP address of a multicast source that is sending multicast traffic to the group.

Example: The following deletes all entries from the IP multicast routing table:

```
(Broadcom FASTPATH Routing) # clear ip mroute *
```

Example: The following deletes all entries from the IP multicast routing table that match the given multicast group address (224.1.2.1), irrespective of which source is sending for this group:

```
(Broadcom FASTPATH Routing) # clear ip mroute 224.1.2.1
```

Example: The following deletes all entries from the IP multicast routing table that match the given multicast group address (224.1.2.1) and the multicast source address (192.168.10.10):

```
(Broadcom FASTPATH Routing) # clear ip mroute 224.1.2.1 192.168.10.10
```

8.2 DVMRP Commands

This section describes the Distance Vector Multicast Routing Protocol (DVMRP) commands.

```
8.2.1 ip dvmrp
```

This command sets administrative mode of DVMRP in the router to active.

Default disabled
Format ip dvmrp
Mode Global Config

8.2.1.1 no ip dvmrp

This command sets administrative mode of DVMRP in the router to inactive.

Format no ip dvmrp
Mode Global Config

8.2.2 ip dvmrp metric

This command configures the metric for an interface or range of interfaces. This value is used in the DVMRP messages as the cost to reach this network. This field has a range of 1 to 31.

Default 1
Format ip dvmrp metric *metric*
Mode Interface Config

8.2.2.1 no ip dvmrp metric

This command resets the metric for an interface to the default value. This value is used in the DVMRP messages as the cost to reach this network.

Format no ip dvmrp metric
Mode Interface Config

8.2.3 ip dvmrp trapflags

This command enables the DVMRP trap mode.

Default disabled
Format ip dvmrp trapflags
Mode Global Config

8.2.3.1 no ip dvmrp trapflags

This command disables the DVMRP trap mode.

Format no ip dvmrp trapflags

Mode Global Config

8.2.4 ip dvmrp

This command sets the administrative mode of DVMRP on an interface or range of interfaces to active.

Default disabled

Format ip dvmrp

Mode Interface Config

8.2.4.1 no ip dvmrp

This command sets the administrative mode of DVMRP on an interface to inactive.

Format no ip dvmrp

Mode Interface Config

8.2.5 show ip dvmrp

This command displays the system-wide information for DVMRP.

Format show ip dvmrp

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Admin Mode	Indicates whether DVMRP is enabled or disabled.
Version String	The version of DVMRP being used.
Number of Routes	The number of routes in the DVMRP routing table.
Reachable Routes	The number of entries in the routing table with non-infinite metrics.

The following fields are displayed for each interface.

Term	Definition
Interface	<i>slot/port</i>
Interface Mode	The mode of this interface. Possible values are Enabled and Disabled.
State	The current state of DVMRP on this interface. Possible values are Operational or Non-Operational.

8.2.6 show ip dvmrp interface

This command displays the interface information for DVMRP on the specified interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

Format show ip dvmrp interface {*slot/port/vlan 1-4093*}

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Interface Mode	Indicates whether DVMRP is enabled or disabled on the specified interface.
Metric	The metric of this interface. This is a configured value.
Local Address	The IP address of the interface.

The following field is displayed only when DVMRP is operational on the interface.

Term	Definition
Generation ID	The Generation ID value for the interface. This is used by the neighboring routers to detect that the DVMRP table should be resent.

The following fields are displayed only if DVMRP is enabled on this interface.

Term	Definition
Received Bad Packets	The number of invalid packets received.
Received Bad Routes	The number of invalid routes received.
Sent Routes	The number of routes that have been sent on this interface.

8.2.7 show ip dvmrp neighbor

This command displays the neighbor information for DVMRP.

Format show ip dvmrp neighbor

Modes

- Privileged EXEC
- User EXEC

Term	Definition
IfIndex	The value of the interface used to reach the neighbor.
Nbr IP Addr	The IP address of the DVMRP neighbor for which this entry contains information.
State	The state of the neighboring router. The possible value for this field are ACTIVE or DOWN.
Up Time	The time since this neighboring router was learned.
Expiry Time	The time remaining for the neighbor to age out. This field is not applicable if the State is DOWN.
Generation ID	The Generation ID value for the neighbor.
Major Version	The major version of DVMRP protocol of neighbor.
Minor Version	The minor version of DVMRP protocol of neighbor.
Capabilities	The capabilities of neighbor.
Received Routes	The number of routes received from the neighbor.
Rcvd Bad Pkts	The number of invalid packets received from this neighbor.
Rcvd Bad Routes	The number of correct packets received with invalid routes.

8.2.8 show ip dvmrp nexthop

This command displays the next hop information on outgoing interfaces for routing multicast datagrams.

Format show ip dvmrp nexthop

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Source IP	The sources for which this entry specifies a next hop on an outgoing interface.
Source Mask	The IP Mask for the sources for which this entry specifies a next hop on an outgoing interface.
Next Hop Interface	The interface in <i>sLot/port</i> format for the outgoing interface for this next hop.
Type	The network is a LEAF or a BRANCH.

8.2.9 show ip dvmrp prune

This command displays the table listing the router's upstream prune information.

Format show ip dvmrp prune

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Group IP	The multicast Address that is pruned.
Source IP	The IP address of the source that has pruned.
Source Mask	The network Mask for the prune source. It should be all 1s or both the prune source and prune mask must match.
Expiry Time (secs)	The expiry time in seconds. This is the time remaining for this prune to age out.

8.2.10 show ip dvmrp route

This command displays the multicast routing information for DVMRP.

Format show ip dvmrp route

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Source Address	The multicast address of the source group.
Source Mask	The IP Mask for the source group.
Upstream Neighbor	The IP address of the neighbor which is the source for the packets for a specified multicast address.
Interface	The interface used to receive the packets sent by the sources.
Metric	The distance in hops to the source subnet. This field has a different meaning than the Interface Metric field.
Expiry Time (secs)	The expiry time in seconds, which is the time left for this route to age out.
Up Time (secs)	The time when a specified route was learnt, in seconds.

8.3 PIM Commands

This section describes the commands you use to configure Protocol Independent Multicast -Dense Mode (PIM-DM) and Protocol Independent Multicast - Sparse Mode (PIM-SM). PIM-DM and PIM-SM are multicast routing protocols that provides scalable inter-domain multicast routing across the Internet, independent of the mechanisms provided by any particular unicast routing protocol. Only one PIM mode can be operational at a time.

8.3.1 ip pim dense

This command administratively enables the PIM Dense mode across the router.

Default	disabled
Format	ip pim dense
Mode	Global Config

Example: The following shows an example of the command.
(FASTPATH) (Config) #ip pim dense

8.3.1.1 no ip pim dense

This command administratively disables the PIM Dense mode across the router.

Format	no ip pim dense
Mode	Global Config

8.3.2 ip pim sparse

This command administratively enables the PIM Sparse mode across the router.

Default	disabled
Format	ip pim sparse
Mode	Global Config

Example: The following shows an example of the command.
(FASTPATH) (Config) #ip pim sparse

8.3.2.1 no ip pim sparse

This command administratively disables the PIM Sparse mode across the router.

Format	no ip pim sparse
Mode	Global Config

8.3.3 ip pim

Use this command to administratively enable PIM on the specified interface.

Default	disabled
Format	ip pim
Mode	Interface Config

Example: The following shows example CLI display output for the command.
(FASTPATH) (Interface 0/1) #ip pim

8.3.3.1 no ip pim

Use this command to disable PIM on the specified interface.

Format no ip pim
Mode Interface Config

8.3.4 ip pim hello-interval

This command configures the transmission frequency of PIM hello messages the specified interface. This field has a range of 0 to 18000 seconds.

Default 30
Format ip pim hello-interval *seconds*
Mode Interface Config

Example: The following shows an example of the command.
 (FASTPATH) (Interface 0/1) #ip pim hello-interval 50

8.3.4.1 no ip pim hello-interval

This command resets the transmission frequency of hello messages between PIM enabled neighbors to the default value.

Format no ip pim hello-interval
Mode Interface Config

8.3.5 ip pim bsr-border

Use this command to prevent bootstrap router (BSR) messages from being sent or received on the specified interface.



Note...

This command takes effect only when Sparse mode is enabled in the Global mode.

Default disabled
Format ip pim bsr-border
Mode Interface Config

Example: The following shows an example of the command.
 (FASTPATH) (Interface 0/1) #ip pim bsr-border

8.3.5.1 no ip pim bsr-border

Use this command to disable the specified interface from being the BSR border.

Format no ip pim bsr-border
Mode Interface Config

8.3.6 ip pim bsr-candidate

This command is used to configure the router to announce its candidacy as a bootstrap router (BSR). The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

**Note...**

This command takes effect only when PIM-SM is configured as the PIM mode.

Default	Disabled
Format	<code>ip pim bsr-candidate interface {slot/port/vlan 1-4093} hash-mask-length [bsr-priority] [interval interval]</code>
Mode	Global Config

Parameters	Description
slot/port	Interface number on this router from which the BSR address is derived, to make it a candidate. This interface must be enabled with PIM.
hash-mask-length	Length of a mask (32 bits maximum) that is to be ANDed with the group address before the hash function is called. All groups with the same seed hash correspond to the same RP. For example, if this value is 24, only the first 24 bits of the group addresses matter. This allows you to get one RP for multiple groups.
bsr-priority	Priority of the candidate BSR. The range is an integer from 0 to 255. The BSR with the larger priority is preferred. If the priority values are the same, the router with the larger IP address is the BSR. The default value is 0.
interval	[Optional] Indicates the BSR candidate advertisement interval. The range is from 1 to 16383 seconds. The default value is 60 seconds.

Example: The following shows examples of the command.

```
(FASTPATH) (Config) #ip pim bsr-candidate interface 0/1 32 5
(FASTPATH) (Config) #ip pim bsr-candidate interface 0/1 32 5 interval 100
```

8.3.6.1 `no ip pim bsr-candidate`

Use this command to remove the configured PIM Candidate BSR router.

Format	<code>no ip pim bsr-candidate interface {slot/port/vlan 1-4093}</code>
Mode	Global Config

8.3.7 `ip pim dr-priority`

Use this command to set the priority value for which a router is elected as the designated router (DR).

**Note...**

This command takes effect only when Sparse mode is enabled in the Global mode.

Default	1
Format	<code>ip pim dr-priority 0-2147483647</code>
Mode	Interface Config

Example: The following shows example CLI display output for the command.

```
(FASTPATH) (Interface 0/1) #ip pim dr-priority 10
```

8.3.7.1 no ip pim dr-priority

Use this command to return the DR Priority on the specified interface to its default value.

Format no ip pim dr-priority

Mode Interface Config

8.3.8 ip pim join-prune-interval

Use this command to configure the frequency of PIM Join/Prune messages on a specified interface. The join/prune interval is specified in seconds. This parameter can be configured to a value from 0 to 18000.

**Note...**

This command takes effect only when is configured as the PIM mode.

Default 60

Format ip pim join-prune-interval 0-18000

Mode Interface Config

Example: The following shows examples of the command.

(FASTPATH) (Interface 0/1) #ip pim join-prune-interval 90

8.3.8.1 no ip pim join-prune-interval

Use this command to set the join/prune interval on the specified interface to the default value.

Format no ip pim join-prune-interval

Mode Interface Config

8.3.9 ip pim rp-address

This command defines the address of a PIM Rendezvous point (RP) for a specific multicast group range.

**Note...**

This command takes effect only when PIM-SM is configured as the PIM mode.

Default 0

Format ip pim rp-address *rp-address group-address group-mask* [override]

Mode Global Config

Parameter	Description
rp-address	The IP address of the RP.
group-address	The group address supported by the RP.
group-mask	The group mask for the group address.
override	[Optional] Indicates that if there is a conflict, the RP configured with this command prevails over the RP learned by BSR.

Example: The following shows an example of the command.

```
(FASTPATH) (Config) #ip pim rp-address 192.168.10.1
224.1.2.0 255.255.255.0
```

8.3.9.1 no ip pim rp-address

Use this command to remove the address of the configured PIM Rendezvous point (RP) for the specified multicast group range.

Format no ip pim rp-address *rp-address group-address group-mask* [override]

Mode Global Config

8.3.10 ip pim rp-candidate

Use this command to configure the router to advertise itself as a PIM candidate rendezvous point (RP) to the bootstrap router (BSR) for a specific multicast group range. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.



Note...

This command takes effect only when PIM-SM is configured as the PIM mode.

Default Disabled

Format ip pim rp-candidate interface {*slot/port/vlan 1-4093*} *group-address group-mask* [*interval interval*]

Mode Global Config

Parameter	Description
slot/port	The IP address associated with this interface type and number is advertised as a candidate RP address. This interface must be enabled with PIM.
group-address	The multicast group address that is advertised in association with the RP address.
group-mask	The multicast group prefix that is advertised in association with the RP address.
interval	[Optional] Indicates the RP candidate advertisement interval. The range is from 1 to 16383 seconds. The default value is 60 seconds.

Example: The following shows examples of the command.

```
(FASTPATH) (Config) #ip pim rp-candidate interface 0/1 224.1.2.0 255.255.255.0
```

```
(FASTPATH) (Config) #ip pim rp-candidate interface 0/1 224.1.2.0 255.255.255.0 interval 200
```

8.3.10.1 no ip pim rp-candidate

Use this command to remove the configured PIM candidate Rendezvous point (RP) for a specific multicast group range.

Format no ip pim rp-candidate interface {*slot/port/vlan 1-4093*} *group-address group-mask*

Mode Global Config

8.3.11 ip pim ssm

Use this command to define the Source Specific Multicast (SSM) range of IP multicast addresses on the router.

**Note...**

This command takes effect only when PIM-SM is configured as the PIM mode.

Default	disabled
Format	ip pim ssm {default <i>group-address group-mask</i> }
Mode	Global Config

Parameter	Description
default-range	Defines the SSM range access list to 232/8.

Example: The following shows an example of the command.

```
(FASTPATH) (Config) #ip pim ssm default
(FASTPATH) (Config) #ip pim ssm 232.1.2.0 255.255.255.0
```

8.3.11.1 no ip pim ssm

Use this command to remove the Source Specific Multicast (SSM) range of IP multicast addresses on the router.

Format	no ip pim ssm {default <i>group-address group-mask</i> }
Mode	Global Config

8.3.12 ip pim-trapflags

This command enables the PIM trap mode for both Sparse Mode (SM) and Dense Mode. (DM).

Default	disabled
Format	ip pim-trapflags
Mode	Global Config

8.3.12.1 no ip pim-trapflags

This command sets the PIM trap mode to the default.

Format	no ip pim-trapflags
Mode	Global Config

8.3.13 ip pim spt-threshold

Use this command to configure the Data Threshold rate for the last-hop router to switch to the shortest path on the router. The rate is specified in Kilobits per second. The possible values are 0 to 2000.

**Note...**

This command takes effect only when PIM-SM is configured as the PIM mode.

Default 0
Format ip pim spt-threshold 0-2000
Modes Global Config

Example: The following shows an example of the command.

(FASTPATH) (Config) #ip pim spt-threshold 100

8.3.13.1 no ip pim spt-threshold

This command is used to set the data threshold rate for the RP router to the default value.

Format no ip pim-spt-threshold
Mode Global Config

8.3.14 show ip mfc

This command displays mroute entries in the multicast forwarding (MFC) database.

Format show ip mfc
Modes • Privileged EXEC
 • User EXEC

Terms	Parameters
MFC IPv4 Mode	Enabled when IPv4 Multicast routing is operational.
MFC IPv6 Mode	Enabled when IPv6 Multicast routing is operational.
MFC Entry Count	The number of entries present in MFC.
Current multicast IPv4 Protocol	The current operating IPv4 multicast routing protocol.
Current multicast IPv6 Protocol	The current operating multicast IPv6 routing protocol.
Total Software Forwarded packets	Total Number of multicast packets forwarded in software.
Source Address	Source address of the multicast route entry.
Group Address	Group address of the multicast route entry.
Packets Forwarded in Software for this entry	Number of multicast packets that are forwarded in software for a specific multicast route entry,
Protocol	Multicast Routing Protocol that has added a specific entry
Expiry Time (secs)	Expiry time for a specific Multicast Route entry in seconds.
Up Time (secs)	Up Time in seconds for a specific Multicast Routing entry.
Incoming interface	Incoming interface for a specific Multicast Route entry.
Outgoing interface list	Outgoing interface list for a specific Multicast Route entry.

Example:

(FASTPATH Routing) (Config)#show ip mfc

```
MFC IPv4 Mode..... Enabled
MFC IPv6 Mode..... Disabled
MFC Entry Count ..... 1
Current multicast IPv4 protocol..... PIMSM
Current multicast IPv6 protocol..... No protocol enabled.
Total software forwarded packets ..... 0
```

```

Source address: 192.168.10.5
Group address: 225.1.1.1
Packets forwarded in software for this entry: 0          Protocol: PIM-SM
Expiry Time (secs): 206      Up Time (secs): 4
Incoming interface: 0/10      Outgoing interface list: None

```

8.3.15 show ip pim

This command displays the system-wide information for PIM-DM or PIM-SM.

Format show ip pim

- Modes**
- Privileged EXEC
 - User EXEC



Note...

If the PIM mode is PIM-DM (dense), some of the fields in the following table do not display in the command output because they are applicable only to PIM-SM.

Term	Definition
PIM Mode	Indicates the configured mode of the PIM protocol as dense (PIM-DM) or sparse (PIM-SM)
Interface	<i>slot/port</i>
Interface Mode	Indicates whether PIM is enabled or disabled on this interface.
Operational Status	The current state of PIM on this interface: Operational or Non-Operational.

Example: The following shows example CLI display output for the command.

Example #1: PIM Mode - Dense
(FASTPATH) #show ip pim

```
PIM Mode      Dense
```

```

InterfaceInterface-ModeOperational-Status
-----
0/1      Enabled      Operational
0/3      Disabled     Non-Operational

```

Example #2: PIM Mode - Sparse
(FASTPATH) #show ip pim

```
PIM Mode      Sparse
```

```

InterfaceInterface-ModeOperational-Status
-----
0/1      Enabled      Operational
0/3      Disabled     Non-Operational

```

Example #3: PIM Mode - None
(FASTPATH) #show ip pim

PIM Mode None

None of the routing interfaces are enabled for PIM.

8.3.16 show ip pim ssm

This command displays the configured source specific IP multicast addresses. If no SSM Group range is configured, this command output is `No SSM address range is configured`.

Format show ip pim ssm

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Group Address	The IP multicast address of the SSM group.
Prefix Length	The network prefix length.

Example: The following shows example CLI display output for the command.

(FASTPATH) #show ip pim ssm

```
Group Address/Prefix Length
-----
232.0.0.0/8
```

If no SSM Group range is configured, this command displays the following message:

No SSM address range is configured.

8.3.17 show ip pim interface

This command displays the PIM interface status parameters. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format. If no interface is specified, the command displays the status parameters of all PIM-enabled interfaces.

Format show ip pim interface [*slot/port/vlan 1-4093*]

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Interface	<i>slot/port</i> The interface number.
Mode	Indicates the active PIM mode enabled on the interface is dense or sparse.
Hello Interval	The frequency at which PIM hello messages are transmitted on this interface. By default, the value is 30 seconds.
Join Prune Interval	The join/prune interval value for the PIM router. The interval is in seconds.

Term	Definition
DR Priority	The priority of the Designated Router configured on the interface. This field is not applicable if the interface mode is Dense.
BSR Border	Identifies whether this interface is configured as a bootstrap router border interface.
Neighbor Count	The number of PIM neighbors learned on this interface. This is a dynamic value and is shown only when a PIM interface is operational.
Designated Router	The IP address of the elected Designated Router for this interface. This is a dynamic value and will only be shown when a PIM interface is operational. This field is not applicable if the interface mode is Dense.

Example: The following shows example CLI display output for the command.
(FASTPATH) #show ip pim interface

```
Interface.....0/1
  Mode.....Sparse
  Hello Interval (secs).....30
  Join Prune Interval (secs).....60
  DR Priority.....1
  BSR Border.....Disabled
  Neighbor Count.....1
  Designated Router.....192.168.10.1

Interface.....0/2
  Mode.....Sparse
  Hello Interval (secs).....30
  Join Prune Interval (secs).....60
  DR Priority.....1
  BSR Border.....Disabled
  Neighbor Count.....1
  Designated Router.....192.168.10.1
```

If none of the interfaces are enabled for PIM, the following message is displayed:

```
None of the routing interfaces are enabled for PIM.
```

8.3.18 show ip pim neighbor

This command displays PIM neighbors discovered by PIMv2 Hello messages. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format. If the interface number is not specified, the command displays the status parameters of all PIM-enabled interfaces.

Format show ip pim neighbor [{*slot/port/vlan 1-4093*}]

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Neighbor Address	The IP address of the PIM neighbor on an interface.
Interface	<i>slot/port</i>
Up Time	The time since this neighbor has become active on this interface.
Expiry Time	Time remaining for the neighbor to expire.
DR Priority	The DR Priority configured on this Interface (PIM-SM only). Note: DR Priority is applicable only when sparse-mode configured routers are neighbors. Otherwise, NA is displayed in this field. Note: DR indicates that the neighbor is the PIM Designated Router in that subnet.

Example: The following shows example CLI display output for the command.
(FASTPATH) #show ip pim neighbor 0/1

```
Neighbor Addr   Interface Uptime      Expiry Time DR
                (hh:mm:ss) (hh:mm:ss) Priority
-----
192.168.10.2    0/1      00:02:55    00:01:15    10 (DR)
```

(FASTPATH) #show ip pim neighbor

```
Neighbor Addr   Interface Uptime      Expiry Time DR
                (hh:mm:ss) (hh:mm:ss) Priority
-----
192.168.10.2    0/1      00:02:55    00:01:15    10 (DR)
192.168.20.2    0/2      00:03:50    00:02:10     1
```

If no neighbors have been learned on any of the interfaces, the following message is displayed:

No neighbors exist on the router.

8.3.19 show ip pim bsr-router

This command displays the bootstrap router (BSR) information.

Format show ip pim bsr-router {candidate | elected}

Mode

- Privileged EXEC
- User EXEC

Parameter	Definition
BSR Address	IP address of the BSR.
BSR Priority	Priority as configured in the ip pim bsr-candidate command.
BSR Hash Mask Length	Length of a mask (maximum 32 bits) that is to be ANDed with the group address before the hash function is called. This value is configured in the ip pim bsr-candidate command.
C-BSR Advertisement Interval	Indicates the configured C-BSR Advertisement interval with which the router, acting as a C-BSR, will periodically send the C-BSR advertisement messages.
Next Bootstrap Message	Time (in hours, minutes, and seconds) in which the next bootstrap message is due from this BSR.

Example: The following shows example CLI display output for the command.

Example #1:

(FASTPATH) #show ip pim bsr-router elected

```
BSR Address..... 192.168.10.1
BSR Priority..... 0
BSR Hash Mask Length..... 30
Next Bootstrap message (hh:mm:ss)..... 00:00:24
```

Example #2:

(FASTPATH) #show ip pim bsr-router candidate

```
BSR Address..... 192.168.10.1
BSR Priority..... 0
BSR Hash Mask Length..... 30
```

```
C-BSR Advertisement Interval (secs)..... 60
Next Bootstrap message (hh:mm:ss)..... NA
```

If no configured or elected BSRs exist on the router, the following message is displayed:
No BSR's exist/learned on this router.

8.3.20 show ip pim rp-hash

This command displays the rendezvous point (RP) selected for the specified group address.

Format show ip pim rp-hash *group-address*

Modes

- Privileged EXEC
- User EXEC

Term	Definition
RP Address	The IP address of the RP for the group specified.
Type	Indicates the mechanism (BSR or static) by which the RP was selected.

Example: The following shows example CLI display output for the command.
(FASTPATH) #show ip pim rp-hash 224.1.2.0

```
RP Address192.168.10.1
TypeStatic
```

If no RP Group mapping exist on the router, the following message is displayed:
No RP-Group mappings exist/learned on this router.

8.3.21 show ip pim rp mapping

Use this command to display the mapping for the PIM group to the active Rendezvous points (RP) of which the router is aware (either configured or learned from the bootstrap router (BSR)). Use the optional parameters to limit the display to a specific RP address or to view group-to-candidate RP or group to Static RP mapping information.

Format show ip pim rp mapping [{*rp-address*|candidate|static}]

Modes

- Privileged EXEC
- User EXEC

Term	Definition
RP Address	The IP address of the RP for the group specified.
Group Address	The IP address of the multicast group.
Group Mask	The subnet mask associated with the group.
Origin	Indicates the mechanism (BSR or static) by which the RP was selected.
C-RP Advertisement Interval	Indicates the configured C-RP Advertisement interval with which the router acting as a Candidate RP will periodically send the C-RP advertisement messages to the elected BSR.

Example: The following show examples of CLI display output for the command.

Example #1:

(FASTPATH) #show ip pim rp mapping 192.168.10.1

```
RP Address      192.168.10.1
Group Address   224.1.2.1
Group Mask      255.255.255.0
Origin          Static
```

Example #2:

(FASTPATH) #show ip pim rp mapping

```
RP Address      192.168.10.1
Group Address   224.1.2.1
Group Mask      255.255.255.0
Origin          Static
```

```
RP Address      192.168.20.1
Group Address   229.2.0.0
Group Mask      255.255.0.0
Origin          Static
```

Example #3:

(FASTPATH) # show ip pim rp mapping candidate

```
RP Address..... 192.168.10.1
Group Address..... 224.1.2.1
Group Mask..... 255.255.0.0
Origin..... BSR
C-RP Advertisement Interval (secs)..... 60
Next Candidate RP Advertisement (hh:mm:ss). 00:00:15
```

If no RP Group mapping exist on the router, the following message is displayed:

No RP-Group mappings exist on this router.

8.3.22 show ip pim statistics

This command displays statistics for the received PIM control packets per interface. This command displays statistics only if PIM sparse mode is enabled.

Format show ip pim statistics

- Modes**
- Privileged EXEC
 - User EXEC

The following information is displayed.

Parameters	Description
Stat	RX: Packets received Tx: Packets transmitted
Interface	The PIM-enabled routing interface
Hello	The number of PIM Hello messages
Register	The number of PIM Register messages
Reg-Stop	The number of PIM Register-stop messages
Join/Pru	The number of PIM Join/Prune messages
BSR	The number of PIM Boot Strap messages

Parameters	Description
Assert	The number of PIM Assert messages
CRP	The number of PIM Candidate RP Advertisement messages.

Example:

Example 1:

(Routing) #show ip pim statistics

```
=====
Interface  Stat   Hello Register Reg-Stop Join/Pru  BSR  Assert  CRP
=====
Vl10      Rx      0        0        0        0        0      0      0
          Tx      2        0        0        0        0      0      0
```

Invalid Packets Received - 0

```
-----
Vl20      Rx      0        0        0        5        0      0      0
          Tx      8        7        0        0        0      0      0
```

Invalid Packets Received - 0

```
-----
0/5       Rx      0        0        6        5        0      0      0
          Tx     10        9        0        0        0      0      0
```

Invalid Packets Received - 0

Example 2:

(Routing) #show ip pim statistics vlan 10

```
=====
Interface  Stat   Hello Register Reg-Stop Join/Pru  BSR  Assert  CRP
=====
Vl10      Rx      0        0        0        0        0      0      0
          Tx      2        0        0        0        0      0      0
```

Invalid Packets Received - 0

Example 3:

(Routing) #show ip pim statistics 0/5

```
=====
Interface  Stat   Hello Register Reg-Stop Join/Pru  BSR  Assert  CRP
=====
0/5       Rx      0        0        6        5        0      0      0
          Tx     10        9        0        0        0      0      0
```

Invalid Packets Received - 0

**Note...**

For ipv6 statistics use the key word ipv6.

8.4 Internet Group Message Protocol Commands

This section describes the commands you use to view and configure Internet Group Message Protocol (IGMP) settings.

8.4.1 ip igmp

This command sets the administrative mode of IGMP in the system to active on an interface, range of interfaces, or on all interfaces.

Default	disabled
Format	ip igmp
Modes	• Global Config • Interface Config

8.4.1.1 no ip igmp

This command sets the administrative mode of IGMP in the system to inactive.

Format	no ip igmp
Modes	• Global Config • Interface Config

8.4.2 ip igmp header-validation

Use this command to enable header validation for IGMP messages.

Default	disabled
Format	ip igmp header-validation
Mode	Global Config

8.4.2.1 no ip igmp header-validation

This command disables header validation for IGMP messages.

Format	no ip igmp header-validation
Mode	Global Config

8.4.3 ip igmp version

This command configures the version of IGMP for an interface or range of interfaces. The value for *version* is either 1, 2 or 3.

Default	3
Format	ip igmp version <i>version</i>
Modes	Interface Config

8.4.3.1 no ip igmp version

This command resets the version of IGMP to the default value.

Format no ip igmp version

Modes Interface Config

8.4.4 ip igmp last-member-query-count

This command sets the number of Group-Specific Queries sent by the interface or range of interfaces before the router assumes that there are no local members on the interface. The range for *count* is 1 to 20.

Format ip igmp last-member-query-count *count*

Modes Interface Config

8.4.4.1 no ip igmp last-member-query-count

This command resets the number of Group-Specific Queries to the default value.

Format no ip igmp last-member-query-count

Modes Interface Config

8.4.5 ip igmp last-member-query-interval

This command configures the Maximum Response Time inserted in Group-Specific Queries which are sent in response to Leave Group messages. The range for *seconds* is 0 to 255 tenths of a second. This value can be configured on one interface or a range of interfaces

Default 10 tenths of a second (1 second)

Format ip igmp last-member-query-interval *seconds*

Modes Interface Config

8.4.5.1 no ip igmp last-member-query-interval

This command resets the Maximum Response Time to the default value.

Format no ip igmp last-member-query-interval

Modes Interface Config

8.4.6 ip igmp query-interval

This command configures the query interval for the specified interface or range of interfaces. The query interval determines how fast IGMP Host-Query packets are transmitted on this interface. The range for *query-interval* is 1 to 3600 seconds.

Default 125 seconds

Format ip igmp query-interval *seconds*

Modes Interface Config

8.4.6.1 no ip igmp query-interval

This command resets the query interval for the specified interface to the default value. This is the frequency at which IGMP Host-Query packets are transmitted on this interface.

Format no ip igmp query-interval

Modes Interface Config

8.4.7 ip igmp query-max-response-time

This command configures the maximum response time interval for the specified interface or range of interfaces, which is the maximum query response time advertised in IGMPv2 queries on this interface. The time interval is specified in tenths of a second. The range for `query-max-response-time` is 0 to 255 tenths of a second.

Default 100
Format ip igmp query-max-response-time 0-255
Mode Interface Config

8.4.7.1 no ip igmp query-max-response-time

This command resets the maximum response time interval for the specified interface, which is the maximum query response time advertised in IGMPv2 queries on this interface to the default value. The maximum response time interval is reset to the default time.

Format no ip igmp query-max-response-time
Mode Interface Config

8.4.8 ip igmp robustness

This command configures the robustness that allows tuning of the interface or range of interfaces. The robustness is the tuning for the expected packet loss on a subnet. If a subnet is expected to have a lot of loss, the Robustness variable may be increased for the interface. The range for `robustness` is 1 to 255.

Default 2
Format ip igmp robustness 1-255
Mode Interface Config

8.4.8.1 no ip igmp robustness

This command sets the robustness value to default.

Format no ip igmp robustness
Mode Interface Config

8.4.9 ip igmp startup-query-count

This command sets the number of Queries sent out on startup, separated by the Startup Query Interval on the interface or range of interfaces. The range for `count` is 1 to 20.

Default 2
Format ip igmp startup-query-count 1-20
Mode Interface Config

8.4.9.1 no ip igmp startup-query-count

This command resets the number of Queries sent out on startup, separated by the Startup Query Interval on the interface to the default value.

Format no ip igmp startup-query-count
Mode Interface Config

8.4.10 ip igmp startup-query-interval

This command sets the interval between General Queries sent on startup on the interface or range of interfaces. The time interval value is in seconds. The range for *interval* is 1 to 300 seconds.

Default 31
Format ip igmp startup-query-interval 1-300
Mode Interface Config

8.4.10.1 no ip igmp startup-query-interval

This command resets the interval between General Queries sent on startup on the interface to the default value.

Format no ip igmp startup-query-interval
Mode Interface Config

8.4.11 show ip igmp

This command displays the system-wide IGMP information.

Format show ip igmp
Modes

- Privileged EXEC
- User EXEC

Term	Definition
IGMP Admin Mode	The administrative status of IGMP. This is a configured value.
Interface	<i>slot/port</i>
Interface Mode	Indicates whether IGMP is enabled or disabled on the interface. This is a configured value.
Protocol State	The current state of IGMP on this interface. Possible values are Operational or Non-Operational.

8.4.12 show ip igmp groups

This command displays the registered multicast groups on the interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format. If [detail] is specified this command displays the registered multicast groups on the interface in detail.

Format show ip igmp groups {*slot/port/vlan 1-4093* [detail]}
Mode Privileged EXEC

If you do not use the **detail** keyword, the following fields appear:

Term	Definition
IP Address	The IP address of the interface participating in the multicast group.
Subnet Mask	The subnet mask of the interface participating in the multicast group.
Interface Mode	This displays whether IGMP is enabled or disabled on this interface.

The following fields are not displayed if the interface is not enabled:

Term	Definition
Querier Status	This displays whether the interface has IGMP in Querier mode or Non-Querier mode.
Groups	The list of multicast groups that are registered on this interface.

If you use the `detail` keyword, the following fields appear:

Term	Definition
Multicast IP Address	The IP address of the registered multicast group on this interface.
Last Reporter	The IP address of the source of the last membership report received for the specified multicast group address on this interface.
Up Time	The time elapsed since the entry was created for the specified multicast group address on this interface.
Expiry Time	The amount of time remaining to remove this entry before it is aged out.
Version1 Host Timer	The time remaining until the local router assumes that there are no longer any IGMP version 1 multicast members on the IP subnet attached to this interface. This could be an integer value or "-----" if there is no Version 1 host present.
Version2 Host Timer	The time remaining until the local router assumes that there are no longer any IGMP version 2 multicast members on the IP subnet attached to this interface. This could be an integer value or "-----" if there is no Version 2 host present.
Group Compatibility Mode	The group compatibility mode (v1, v2 or v3) for this group on the specified interface.

8.4.13 show ip igmp interface

This command displays the IGMP information for the interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

Format `show ip igmp interface {slot/port/vlan 1-4093}`

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	<i>slot/port</i>
IGMP Admin Mode	The administrative status of IGMP.
Interface Mode	Indicates whether IGMP is enabled or disabled on the interface.
IGMP Version	The version of IGMP running on the interface. This value can be configured to create a router capable of running either IGMP version 1 or 2.
Query Interval	The frequency at which IGMP Host-Query packets are transmitted on this interface.
Query Max Response Time	The maximum query response time advertised in IGMPv2 queries on this interface.
Robustness	The tuning for the expected packet loss on a subnet. If a subnet is expected to have a lot of loss, the Robustness variable may be increased for that interface.
Startup Query Interval	The interval between General Queries sent by a Querier on startup.
Startup Query Count	The number of Queries sent out on startup, separated by the Startup Query Interval.
Last Member Query Interval	The Maximum Response Time inserted into Group-Specific Queries sent in response to Leave Group messages.
Last Member Query Count	The number of Group-Specific Queries sent before the router assumes that there are no local members.

8.4.14 show ip igmp interface membership

This command displays the list of interfaces that have registered in the multicast group.

Format show ip igmp interface membership *multiipaddr* [detail]

Mode Privileged EXEC

Term	Definition
Interface	Valid unit, slot and port number separated by forward slashes.
Interface IP	The IP address of the interface participating in the multicast group.
State	The interface that has IGMP in Querier mode or Non-Querier mode.
Group Compatibility Mode	The group compatibility mode (v1, v2 or v3) for the specified group on this interface.
Source Filter Mode	The source filter mode (Include/Exclude) for the specified group on this interface. This is "-----" for IGMPv1 and IGMPv2 Membership Reports.

If you use the `detail` keyword, the following fields appear:

Term	Definition
Interface	Valid unit, slot and port number separated by forward slashes.
Group Compatibility Mode	The group compatibility mode (v1, v2 or v3) for the specified group on this interface.
Source Filter Mode	The source filter mode (Include/Exclude) for the specified group on this interface. This is "-----" for IGMPv1 and IGMPv2 Membership Reports.
Source Hosts	The list of unicast source IP addresses in the group record of the IGMPv3 Membership Report with the specified multicast group IP address. This is "-----" for IGMPv1 and IGMPv2 Membership Reports.
Expiry Time	The amount of time remaining to remove this entry before it is aged out. This is "-----" for IGMPv1 and IGMPv2 Membership Reports.

8.4.15 show ip igmp interface stats

This command displays the IGMP statistical information for the interface. The statistics are only displayed when the interface is enabled for IGMP. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

Format show ip igmp interface stats [*slot/port/vlan 1-4093*]

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Querier Status	The status of the IGMP router, whether it is running in Querier mode or Non-Querier mode.
Querier IP Address	The IP address of the IGMP Querier on the IP subnet to which this interface is attached.
Querier Up Time	The time since the interface Querier was last changed.
Querier Expiry Time	The amount of time remaining before the Other Querier Present Timer expires. If the local system is the querier, the value of this object is zero.

Term	Definition
Wrong Version Queries	The number of queries received whose IGMP version does not match the IGMP version of the interface.
Number of Joins	The number of times a group membership has been added on this interface.
Number of Groups	The current number of membership entries for this interface.

8.5 IGMP Proxy Commands

The IGMP Proxy is used by IGMP Router (IPv4 system) to enable the system to issue IGMP host messages on behalf of hosts that the system discovered through standard IGMP router interfaces. With IGMP Proxy enabled, the system acts as proxy to all the hosts residing on its router interfaces.

8.5.1 ip igmp-proxy

This command enables the IGMP Proxy on the an interface or range of interfaces. To enable the IGMP Proxy on an interface, you must enable multicast forwarding. Also, make sure that there are no multicast routing protocols enabled on the router.

Format ip igmp-proxy
Mode Interface Config

8.5.1.1 no ip igmp-proxy

This command disables the IGMP Proxy on the router.

Format no ip igmp-proxy
Mode Interface Config

8.5.2 ip igmp-proxy unsolicit-rprt-interval

This command sets the unsolicited report interval for the IGMP Proxy interface or range of interfaces. This command is valid only when you enable IGMP Proxy on the interface or range of interfaces. The value of *interval* can be 1-260 seconds.

Default 1
Format ip igmp-proxy unsolicit-rprt-interval 1-260
Mode Interface Config

8.5.2.1 no ip igmp-proxy unsolicit-rprt-interval

This command resets the unsolicited report interval of the IGMP Proxy router to the default value.

Format no ip igmp-proxy unsolicit-rprt-interval
Mode Interface Config

8.5.3 ip igmp-proxy reset-status

This command resets the host interface status parameters of the IGMP Proxy interface (or range of interfaces). This command is valid only when you enable IGMP Proxy on the interface.

Format ip igmp-proxy reset-status

Mode Interface Config

8.5.4 show ip igmp-proxy

This command displays a summary of the host interface status parameters. It displays the following parameters only when you enable IGMP Proxy.

Format show ip igmp-proxy

Modes • Privileged EXEC
 • User EXEC

Term	Definition
Interface index	The interface number of the IGMP Proxy.
Admin Mode	States whether the IGMP Proxy is enabled or not. This is a configured value.
Operational Mode	States whether the IGMP Proxy is operationally enabled or not. This is a status parameter.
Version	The present IGMP host version that is operational on the proxy interface.
Number of Multicast Groups	The number of multicast groups that are associated with the IGMP Proxy interface.
Unsolicited Report Interval	The time interval at which the IGMP Proxy interface sends unsolicited group membership report.
Querier IP Address on Proxy Interface	The IP address of the Querier, if any, in the network attached to the upstream interface (IGMP-Proxy interface).
Older Version 1 Querier Timeout	The interval used to timeout the older version 1 queriers.
Older Version 2 Querier Timeout	The interval used to timeout the older version 2 queriers.
Proxy Start Frequency	The number of times the IGMP Proxy has been stopped and started.

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show ip igmp-proxy

```
Interface Index..... 0/1
Admin Mode..... Enable
Operational Mode..... Enable
Version..... 3
Num of Multicast Groups..... 0
Unsolicited Report Interval..... 1
Querier IP Address on Proxy Interface..... 5.5.5.50
Older Version 1 Querier Timeout..... 0
Older Version 2 Querier Timeout..... 00::00:00
Proxy Start Frequency..... 1
```

8.5.5 show ip igmp-proxy interface

This command displays a detailed list of the host interface status parameters. It displays the following parameters only when you enable IGMP Proxy.

Format show ip igmp-proxy interface

Modes • Privileged EXEC
 • User EXEC

Term	Definition
Interface Index	The <i>slot/port</i> of the IGMP proxy.

The column headings of the table associated with the interface are as follows:

Term	Definition
Ver	The IGMP version.
Query Rcvd	Number of IGMP queries received.
Report Rcvd	Number of IGMP reports received.
Report Sent	Number of IGMP reports sent.
Leaves Rcvd	Number of IGMP leaves received. Valid for version 2 only.
Leaves Sent	Number of IGMP leaves sent on the Proxy interface. Valid for version 2 only.

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show ip igmp-proxy interface

Interface Index..... 0/1

Ver	Query Rcvd	Report Rcvd	Report Sent	Leave Rcvd	Leave Sent
1	0	0	0	----	----
2	0	0	0	0	0
3	0	0	0	----	----

8.5.6 show ip igmp-proxy groups

This command displays information about the subscribed multicast groups that IGMP Proxy reported. It displays a table of entries with the following as the fields of each column.

Format show ip igmp-proxy groups

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	The interface number of the IGMP Proxy.
Group Address	The IP address of the multicast group.
Last Reporter	The IP address of host that last sent a membership report for the current group on the network attached to the IGMP Proxy interface (upstream interface).
Up Time (in secs)	The time elapsed since last created.
Member State	The status of the entry. Possible values are IDLE_MEMBER or DELAY_MEMBER. • IDLE_MEMBER - interface has responded to the latest group membership query for this group. • DELAY_MEMBER - interface is going to send a group membership report to respond to a group membership query for this group.
Filter Mode	Possible values are Include or Exclude .
Sources	The number of sources attached to the multicast group.

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show ip igmp-proxy groups
```

```
Interface Index..... 0/1
```

Group Address	Last Reporter	Up Time	Member State	Filter Mode	Sources
225.4.4.4	5.5.5.48	00:02:21	DELAY_MEMBER	Include	3
226.4.4.4	5.5.5.48	00:02:21	DELAY_MEMBER	Include	3
227.4.4.4	5.5.5.48	00:02:21	DELAY_MEMBER	Exclude	0
228.4.4.4	5.5.5.48	00:02:21	DELAY_MEMBER	Include	3

8.5.7 show ip igmp-proxy groups detail

This command displays complete information about multicast groups that IGMP Proxy reported. It displays a table of entries with the following as the fields of each column.

Format show ip igmp-proxy groups detail

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	The interface number of the IGMP Proxy.
Group Address	The IP address of the multicast group.
Last Reporter	The IP address of host that last sent a membership report for the current group, on the network attached to the IGMP-Proxy interface (upstream interface).
Up Time (in secs)	The time elapsed since last created.
Member State	The status of the entry. Possible values are IDLE_MEMBER or DELAY_MEMBER. • IDLE_MEMBER - interface has responded to the latest group membership query for this group. • DELAY_MEMBER - interface is going to send a group membership report to respond to a group membership query for this group.
Filter Mode	Possible values are Include or Exclude .
Sources	The number of sources attached to the multicast group.
Group Source List	The list of IP addresses of the sources attached to the multicast group.
Expiry Time	Time left before a source is deleted.

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show ip igmp-proxy groups
```

```
Interface Index..... 0/1
```

Group Address	Last Reporter	Up Time	Member State	Filter Mode	Sources
225.4.4.4	5.5.5.48	00:02:21	DELAY_MEMBER	Include	3

Group Source List	Expiry Time
5.1.2.3	00:02:21
6.1.2.3	00:02:21

```

7.1.2.3                                00:02:21

226.4.4.4      5.5.5.48      00:02:21  DELAY_MEMBER      Include      3

Group Source List      Expiry Time
-----
2.1.2.3                00:02:21
6.1.2.3                00:01:44
8.1.2.3                00:01:44

227.4.4.4      5.5.5.48      00:02:21  DELAY_MEMBER      Exclude      0

228.4.4.4      5.5.5.48      00:03:21  DELAY_MEMBER      Include      3

Group Source List      Expiry Time
-----
9.1.2.3                00:03:21
6.1.2.3                00:03:21
7.1.2.3                00:03:21

```

9 IPv6 Multicast Commands

This chapter describes the IPv6 Multicast commands available in the FASTPATH CLI



Note...

There is no specific IP multicast enable for IPv6. Enabling of multicast at global config is common for both IPv4 and IPv6.

This chapter contains the following sections:

- "IPv6 Multicast Forwarder" on page 845"
- "IPv6 PIM Commands" on page 848"
- "IPv6 MLD Commands" on page 859"
- "IPv6 MLD-Proxy Commands" on page 865"



Note...

The commands in this chapter are in one of three functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- Clear commands clear some or all of the settings to factory defaults.

9.1 IPv6 Multicast Forwarder

9.1.1 ipv6 mroute

This command configures an IPv6 Multicast Static Route for a source.

Default	No MRoute is configured on the system.
Format	<code>ipv6 mroute <i>src-ip-addr</i> <i>src-mask</i> <i>rpf-addr</i> [<i>interface</i>] <i>preference</i></code>
Mode	Global Config

Parameter	Description
src-ip-addr	The IP address of the multicast source network.
src-mask	The IP mask of the multicast data source.
rpf-ip-addr	The IP address of the RPF next-hop router toward the source.
interface	Specify the interface if the RPF Address is a link-local address.
preference	The administrative distance for this Static MRoute, that is, the preference value. The range is 1 to 255.

9.1.1.1 no ipv6 mroute

This command removes the configured IPv6 Multicast Static Route.

Format	<code>no ip mroute <i>src-ip-addr</i></code>
Mode	Global Config

9.1.2 show ipv6 mroute

**Note...**

There is no specific IP multicast enable for IPv6. Enabling of multicast at global config is common for both IPv4 and IPv6.

Use this command to show the mroute entries specific for IPv6. (This command is the IPv6 equivalent of the IPv4 `show ip mroute` command.)

Format `show ipv6 mroute {[detail] | [summary] | [group {group-address} [detail | summary]] | [source {source-address} [grpaddr | summary ]]}`

Modes

- Privileged EXEC
- User EXEC

If you use the *detail* parameter, the command displays the following Multicast Route Table fields:

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Expiry Time	The time of expiry of this entry in seconds.
Up Time	The time elapsed since the entry was created in seconds.
RPF Neighbor	The IP address of the RPF neighbor.
Flags	The flags associated with this entry.

If you use the *summary* parameter, the command displays the following fields:

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which the entry was created.
Incoming Interface	The interface on which the packet for the source/group arrives.
Outgoing Interface List	The list of outgoing interfaces on which the packet is forwarded.

9.1.3 show ipv6 mroute group

This command displays the multicast configuration settings specific to IPv6 such as flags, timer settings, incoming and outgoing interfaces, RPF neighboring routers, and expiration times of all the entries in the multicast mroute table containing the given group IPv6 address *group-address*.

Format `show ipv6 mroute group group-address {detail | summary}`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which this entry was created.
Incoming Interface	The interface on which the packet for this group arrives.
Outgoing Interface List	The list of outgoing interfaces on which this packet is forwarded.

9.1.4 show ipv6 mroute source

This command displays the multicast configuration settings specific to IPv6 such as flags, timer settings, incoming and outgoing interfaces, RPF neighboring routers, and expiration times of all the entries in the multicast mroute table containing the given source IP address or source IP address and group IP address pair.

Format `show ipv6 mroute source source-address {grpaddr | summary}`

Modes

- Privileged EXEC
- User EXEC

If you use the *groupipaddr* parameter, the command displays the following column headings in the output table:

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Expiry Time	The time of expiry of this entry in seconds.
Up Time	The time elapsed since the entry was created in seconds.
RPF Neighbor	The IP address of the RPF neighbor.
Flags	The flags associated with this entry.

If you use the *summary* parameter, the command displays the following column headings in the output table:

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which this entry was created.
Incoming Interface	The interface on which the packet for this source arrives.
Outgoing Interface List	The list of outgoing interfaces on which this packet is forwarded.

9.1.5 show ipv6 mroute static

Use the `show ipv6 mroute static` command in Privileged EXEC or User EXEC mode to display all the configured IPv6 multicast static routes.

Format `show ipv6 mroute static [source-address]`

Modes

- Privileged EXEC
- User EXEC

Parameter	Description
Source Address	IP address of the multicast source network.
Source Mask	The subnet mask pertaining to the source IP.
RPF Address	The IP address of the RPF next-hop router toward the source.
Interface	The interface that is used to reach the RPF next-hop. This is valid if the RPF address is a link-local address.
Preference	The administrative distance for this Static MRoute.

9.1.6 clear ipv6 mroute

This command deletes all or the specified IPv6 multicast route entries.



Note...

This command only clears dynamic mroute entries. It does not clear static mroutes.

Format clear ipv6 mroute {*|group-address[source-address]}

Modes Privileged EXEC

Parameter	Description
*	Deletes all IPv6 entries from the IPv6 multicast routing table.
group-address	IPv6 address of the multicast group.
source-address	The IPv6 address of a multicast source that is sending multicast traffic to the group.

Example: The following deletes all entries from the IPv6 multicast routing table:

(Broadcom FASTPATH Routing) # clear ipv6 mroute *

Example: The following deletes all entries from the IPv6 multicast routing table that match the given multicast group address (FF4E::1), irrespective of which source is sending for this group:

(Broadcom FASTPATH Routing) # clear ipv6 mroute FF4E::1

Example: The following deletes all entries from the IPv6 multicast routing table that match the given multicast group address (FF4E::1) and the multicast source address (2001::2):

(Broadcom FASTPATH Routing) # clear ip mroute FF4E::1 2001::2

9.2 IPv6 PIM Commands

This section describes the commands you use to configure Protocol Independent Multicast -Dense Mode (PIM-DM) and Protocol Independent Multicast - Sparse Mode (PIM-SM) for IPv6 multicast routing. PIM-DM and PIM-SM are multicast routing protocols that provides scalable inter-domain multicast routing across the Internet, independent of the mechanisms provided by any particular unicast routing protocol. Only one PIM mode can be operational at a time.

9.2.1 ipv6 pim dense

This command enables the administrative mode of PIM-DM in the router.

Default disabled

Format ipv6 pim dense

Mode Global Config

Example: The following shows an example of the command.
(FASTPATH) (Config) #ipv6 pim dense

9.2.1.1 no ipv6 pim dense

This command disables the administrative mode of PIM-DM in the router.

Format no ipv6 pim dense

Mode Global Config

9.2.2 ipv6 pim sparse

This command enables the administrative mode of PIM-SM in the router.

Default disabled

Format ipv6 pim sparse

Mode Global Config

Example: The following shows an example of the command.
(FASTPATH) (Config) #ipv6 pim sparse

9.2.2.1 no ipv6 pim sparse

This command disables the administrative mode of PIM-SM in the router.

Format no ipv6 pim sparse

Mode Global Config

9.2.3 ipv6 pim

This command administratively enables PIM on an interface or range of interfaces.

Default disabled

Format ipv6 pim

Mode Interface Config

Example: The following shows example CLI display output for the command.
(FASTPATH) (Interface 0/1) #ipv6 pim

9.2.3.1 no ipv6 pim

This command sets the administrative mode of PIM on an interface to disabled.

Format no ipv6 pim

Mode Interface Config

9.2.4 ipv6 pim hello-interval

Use this command to configure the PIM hello interval for the specified router interface or range of interfaces. The hello-interval is specified in seconds and is in the range 0–18000.

Default 30

Format ipv6 pim hello-interval 0–18000

Mode Interface Config

Example: The following shows an example of the command.
(FASTPATH) (Interface 0/1) #ipv6 pim hello-interval 50

9.2.4.1 no ipv6 pim hello-interval

Use this command to set the PIM hello interval to the default value.

Format no ipv6 pim hello-interval

Mode Interface Config

9.2.5 ipv6 pim bsr-border

Use this command to prevent bootstrap router (BSR) messages from being sent or received on the specified interface.



Note...

This command takes effect only when PIM-SM is enabled in the Global mode.

Default disabled

Format ipv6 pim bsr-border

Mode Interface Config

Example: The following shows an example of the command.
(FASTPATH) (Interface 0/1) #ipv6 pim bsr-border

9.2.5.1 no ipv6 pim bsr-border

Use this command to disable the setting of BSR border on the specified interface.

Format no ipv6 pim bsr-border

Mode Interface Config

9.2.6 ipv6 pim bsr-candidate

This command is used to configure the router to announce its candidacy as a bootstrap router (BSR). The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.



Note...

This command takes effect only when PIM-SM is configured as the PIM mode.

Default Disabled

Format ipv6 pim bsr-candidate interface {slot/port/vlan 1-4093} hash-mask-length [bsr-priority] [interval interval]

Mode Global Config

Parameters	Description
slot/port	Interface number on this router from which the BSR address is derived, to make it a candidate. This interface must be enabled with PIM.

Parameters	Description
hash-mask-length	Length of a mask (32 bits maximum) that is to be ANDed with the group address before the hash function is called. All groups with the same seed hash correspond to the same RP. For example, if this value was 24, only the first 24 bits of the group addresses matter. This allows you to get one RP for multiple groups.
bsr-priority	Priority of the candidate BSR. The range is an integer from 0 to 255. The BSR with the larger priority is preferred. If the priority values are the same, the router with the larger IPv6 address is the BSR. The default value is 0.
interval	[Optional] Indicates the BSR candidate advertisement interval. The range is from 1 to 16383 seconds. The default value is 60 seconds.

Example: The following shows examples of the command.

```
(FASTPATH) (Config) #ip pim bsr-candidate interface 0/1 32 5
```

```
(FASTPATH) (Config) #ip pim bsr-candidate interface 0/1 32 5 interval 100
```

9.2.6.1 no ipv6 pim bsr-candidate

This command is used to remove the configured PIM Candidate BSR router.

Format no ipv6 pim bsr-candidate interface {slot/port/vlan 1-4093} hash-mask-length [priority]

Mode Global Config

9.2.7 ipv6 pim dr-priority

Use this command to set the priority value for which a router is elected as the designated router (DR).



Note...

This command takes effect only when PIM-SM is enabled in the Global mode.

Default 1

Format ipv6 pim dr-priority 0-2147483647

Mode Interface Config

Example: The following shows example CLI display output for the command.

```
(FASTPATH) (Interface 0/1) #ipv6 pim dr-priority 10
```

9.2.7.1 no ipv6 pim dr-priority

Use this command to return the DR Priority on the specified interface to its default value.

Format no ipv6 pim dr-priority

Mode Interface Config

9.2.8 ipv6 pim join-prune-interval

This command is used to configure the join/prune interval for the PIM-SM router on an interface or range of interfaces. The join/prune interval is specified in seconds. This parameter can be configured to a value from 0 to 18000.

**Note...**

This command takes effect only when PIM-SM is enabled in the Global mode.

Default 60
Format `ipv6 pim join-prune-interval 0-18000`
Mode Interface Config

Example: The following shows examples of the command.

(FASTPATH) (Interface 0/1) `#ipv6 pim join-prune-interval 90`

9.2.8.1 `no ipv6 pim join-prune-interval`

Use this command to set the join/prune interval on the specified interface to the default value.

Format `no ipv6 pim join-prune-interval`
Mode Interface Config

9.2.9 `ipv6 pim rp-address`

This command defines the address of a PIM Rendezvous point (RP) for a specific multicast group range.

**Note...**

This command takes effect only when PIM-SM is configured as the PIM mode.

Default 0
Format `ipv6 pim rp-address rp-address group-address/prefix-length [override]`
Mode Global Config

Parameter	Description
rp-address	The IPv6 address of the RP.
group-address	The group address supported by the RP.
group-mask	The group mask for the group address.
override	[Optional] Indicates that if there is a conflict, the RP configured with this command prevails over the RP learned by BSR.

Example: The following shows an example of the command.

(FASTPATH) (Config) `#ip pim rp-address 192.168.10.1
224.1.2.0 255.255.255.0`

9.2.9.1 `no ipv6 pim rp-address`

This command is used to remove the address of the configured PIM Rendezvous point (RP) for the specified multicast group range.

Format `no ipv6 pim rp-address rp-address group-address group-mask [override]`
Mode Global Config

9.2.10 ipv6 pim rp-candidate

This command is used to configure the router to advertise itself as a PIM candidate rendezvous point (RP) to the bootstrap router (BSR) for a specific multicast group range. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

**Note...**

This command takes effect only when PIM-SM is configured as the PIM mode.

Default	Disabled
Format	<code>ipv6 pim rp-candidate interface {slot/port/vlan 1-4093} group-address group-mask [interval interval]</code>
Mode	Global Config

Parameter	Description
slot/port	The IP address associated with this interface type and number is advertised as a candidate RP address. This interface must be enabled with PIM.
group-address	The multicast group address that is advertised in association with the RP address.
group-mask	The multicast group prefix that is advertised in association with the RP address.
interval	[Optional] Indicates the RP candidate advertisement interval. The range is from 1 to 16383 seconds. The default value is 60 seconds.

Example: The following shows examples of the command.

```
(FASTPATH) (Config) #ipv6 pim rp-candidate interface 0/1 224.1.2.0 255.255.255.0
```

```
(FASTPATH) (Config) #ipv6 pim rp-candidate interface 0/1 224.1.2.0 255.255.255.0 interval 200
```

9.2.10.1 no ipv6 pim rp-candidate

This command is used to disable the router to advertise itself as a PIM candidate rendezvous point (RP) to the bootstrap router (BSR).

Format	<code>no ipv6 pim rp-candidate interface {slot/port/vlan 1-4093} group-address group-mask</code>
Mode	Global Config

9.2.11 ipv6 pim ssm

Use this command to define the Source Specific Multicast (SSM) range of IPv6 multicast addresses on the router.

**Note...**

This command takes effect only when PIM-SM is configured as the PIM mode.

**Note...**

Some FASTPATH platforms do not support a non-zero data threshold rate. For these platforms, only a "Switch on First Packet" policy is supported.

Default disabled
Format ipv6 pim ssm {default | *group-address group-mask*}
Mode Global Config

Parameter	Description
default-range	Defines the SSM range access list FF3x::/32.

Example: The following shows an example of the command.

```
(FASTPATH) (Config) #ipv6 pim ssm default
(FASTPATH) (Config) #ipv6 pim ssm 232.1.2.0 255.255.255.0
```

9.2.11.1 no ipv6 pim ssm

Use this command to remove the Source Specific Multicast (SSM) range of IP multicast addresses on the router.

Format no ipv6 pim ssm {default | *group-address group-mask*}
Mode Global Config

9.2.12 show ipv6 pim

This command displays the system-wide information for PIM-DM or PIM-SM.

Format show ipv6 pim
Modes

- Privileged EXEC
- User EXEC



Note...

If the PIM mode is PIM-DM (dense), some of the fields in the following table do not display in the command output because they are applicable only to PIM-SM.

Term	Definition
PIM Mode	Indicates whether the PIM mode is dense (PIM-DM) or sparse (PIM-SM)
Interface	<i>slot/port</i>
Interface Mode	Indicates whether PIM is enabled or disabled on this interface.
Operational Status	The current state of PIM on this interface: Operational or Non-Operational.

Example: The following shows example CLI display output for the command.

Example #1: PIM Mode - Dense

```
(FASTPATH) #show ip pim
```

```
PIM Mode      Dense
```

```
InterfaceInterface-ModeOperational-Status
```

```
-----
0/1      Enabled      Operational
0/3      Disabled     Non-Operational
```

Example #2: PIM Mode - Sparse

```
(FASTPATH) #show ip pim
```

PIM Mode Sparse

InterfaceInterface-ModeOperational-Status

```
-----
0/1      Enabled      Operational
0/3      Disabled     Non-Operational
```

Example #3: PIM Mode - None

(FASTPATH) #show ip pim

PIM Mode None

None of the routing interfaces are enabled for PIM.

9.2.13 show ipv6 pim ssm

This command displays the configured source specific IPv6 multicast addresses. If no SSM Group range is configured, this command output is `No SSM address range is configured`.

Format show ipv6 pim ssm

Modes • Privileged EXEC
 • User EXEC

Term	Definition
Group Address	The IPv6 multicast address of the SSM group.
Prefix Length	The network prefix length.

Example: The following shows example CLI display output for the command.

(FASTPATH) #show ip pim ssm

```
Group Address/Prefix Length
-----
232.0.0.0/8
```

If no SSM Group range is configured, this command displays the following message:
`No SSM address range is configured`.

9.2.14 show ipv6 pim interface

This command displays the interface information for PIM on the specified interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format. If no interface is specified, the command displays the status parameters for all PIM-enabled interfaces.

Format show ipv6 pim interface [{*slot/port/vlan 1-4093*}]

Modes • Privileged EXEC
 • User EXEC

Term	Definition
Interface	<i>slot/port</i>
Mode	Indicates whether the PIM mode enabled on the interface is dense or sparse.
Hello Interval	The frequency at which PIM hello messages are transmitted on this interface. By default, the value is 30 seconds.
Join Prune Interval	The join/prune interval for the PIM router. The interval is in seconds.
DR Priority	The priority of the Designated Router configured on the interface. This field is not applicable if the interface mode is Dense
BSR Border	Identifies whether this interface is configured as a bootstrap router border interface.
Neighbor Count	The number of PIM neighbors learned on this interface. This is a dynamic value and is shown only when a PIM interface is operational.
Designated Router	The IP address of the elected Designated Router for this interface. This is a dynamic value and will only be shown when a PIM interface is operational. This field is not applicable if the interface mode is Dense

Example: The following shows example CLI display output for the command.
(FASTPATH) #show ipv6 pim interface

```
Interface.....0/1
  Mode.....Sparse
  Hello Interval (secs).....30
  Join Prune Interval (secs).....60
  DR Priority.....1
  BSR Border.....Disabled
  Neighbor Count.....1
  Designated Router.....192.168.10.1

Interface.....0/2
  Mode.....Sparse
  Hello Interval (secs).....30
  Join Prune Interval (secs).....60
  DR Priority.....1
  BSR Border.....Disabled
  Neighbor Count.....1
  Designated Router.....192.168.10.1
```

If none of the interfaces are enabled for PIM, the following message is displayed:

```
None of the routing interfaces are enabled for PIM.
```

9.2.15 show ipv6 pim neighbor

This command displays PIM neighbors discovered by PIMv2 Hello messages. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format. If the interface number is not specified, this command displays the neighbors discovered on all the PIM-enabled interfaces.

Format show ipv6 pim neighbor [{*slot/port/vlan 1-4093*}]

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Neighbor Address	The IPv6 address of the PIM neighbor on an interface.
Interface	<i>slot/port</i>

Term	Definition
Up Time	The time since this neighbor has become active on this interface.
Expiry Time	Time remaining for the neighbor to expire.
DR Priority	The DR Priority configured on this Interface (PIM-SM only). Note: DR Priority is applicable only when sparse-mode configured routers are neighbors. Otherwise, NA is displayed in this field.

Example: The following shows example CLI display output for the command.

(FASTPATH) #show ipv6 pim neighbor

Neighbor Addr	Interface	Uptime (HH:MM:SS)	Expiry Time (HH:MM:SS)
2001:DB8:39::/32	0/1	00:02:55	00:01:15
2001:DB8:A3::/32	0/2	00:03:50	00:02:10

If no neighbors have been learned on any of the interfaces, the following message is displayed:

No neighbors are learnt on any interface.

9.2.16 show ipv6 pim bsr-router

This command displays the bootstrap router (BSR) information.

Format show ipv6 pim bsr-router {candidate | elected}

Mode

- Privileged EXEC
- User EXEC

Term	Definition
BSR Address	IPv6 address of the BSR.
BSR Priority	Priority as configured in the ipv6 pim bsr-candidate command.
BSR Hash Mask Length	Length of a mask (maximum 32 bits) that is to be ANDed with the group address before the hash function is called. This value is configured in the ipv6 pim bsr-candidate command.
C-BSR Advertisement Interval	Indicates the configured C-BSR Advertisement interval with which the router, acting as a C-BSR, will periodically send the C-BSR advertisement messages.
Next Bootstrap Message	Time (in hours, minutes, and seconds) in which the next bootstrap message is due from this BSR.

Example: The following shows example CLI display output for the command.

(FASTPATH) #show ipv6 pim bsr-router candidate

Example #1:

(FASTPATH) #show ip pim bsr-router elected

```
BSR Address..... 192.168.10.1
BSR Priority..... 0
BSR Hash Mask Length..... 30
Next Bootstrap message (hh:mm:ss)..... 00:00:24
```

Example #2:

(FASTPATH) #show ip pim bsr-router candidate

```
BSR Address..... 192.168.10.1
BSR Priority..... 0
```

```

BSR Hash Mask Length..... 30
C-BSR Advertisement Interval (secs)..... 60
Next Bootstrap message (hh:mm:ss)..... NA

```

If no configured or elected BSRs exist on the router, the following message is displayed:
No BSR's exist/learned on this router.

9.2.17 show ipv6 pim rp-hash

This command displays which rendezvous point (RP) is being used for a specified group.

Format show ipv6 pim rp-hash *group-address*

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
RP Address	The IPv6 address of the RP for the group specified.
Type	Indicates the mechanism (BSR or static) by which the RP was selected.

Example: The following shows example CLI display output for the command.
(FASTPATH) #show ip pim rp-hash 224.1.2.0

```

RP Address192.168.10.1
TypeStatic

```

If no RP Group mapping exist on the router, the following message is displayed:
No RP-Group mappings exist/learned on this router.

9.2.18 show ipv6 pim rp mapping

Use this command to display the mapping for the PIM group to the active Rendezvous points (RP) of which the router is aware (either configured or learned from the bootstrap router (BSR)). Use the optional parameters to limit the display to a specific RP address or to view group-to-candidate RP or group to Static RP mapping information.

Format show ipv6 pim rp mapping [{*rp-address* | candidate | static}]

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
RP Address	The IPv6 address of the RP for the group specified.
Group Address	The IPv6 address and prefix length of the multicast group.
Origin	Indicates the mechanism (BSR or static) by which the RP was selected.
C-RP Advertisement Interval	Indicates the configured C-RP Advertisement interval with which the router acting as a Candidate RP will periodically send the C-RP advertisement messages to the elected BSR.

Example: The following show examples of CLI display output for the command.

Example #1:

```
(FASTPATH) #show ipv6 pim rp mapping 192.168.10.1
```

```
RP Address192.168.10.1
  Group Address224.1.2.1
  Group Mask255.255.255.0
  OriginStatic
```

Example #2:

```
(FASTPATH) #show ipv6 pim rp mapping
```

```
RP Address192.168.10.1
  Group Address224.1.2.1
  Group Mask255.255.255.0
  OriginStatic
```

```
RP Address192.168.20.1
  Group Address229.2.0.0
  Group Mask255.255.0.0
  OriginStatic
```

Example #3:

```
(FASTPATH) # show ipv6 pim rp mapping candidate
```

```
RP Address..... 192.168.10.1
  Group Address..... 224.1.2.1
  Group Mask..... 255.255.0.0
  Origin..... BSR
  C-RP Advertisement Interval (secs)..... 60
  Next Candidate RP Advertisement (hh:mm:ss). 00:00:15
```

If no RP Group mapping exist on the router, the following message is displayed:

No RP-Group mappings exist on this router.

9.3 IPv6 MLD Commands

IGMP/MLD Snooping is Layer 2 functionality but IGMP/MLD are Layer 3 multicast protocols. It requires that in a network setup there should be a multicast router (which can act as a querier) to be present to solicit the multicast group registrations. However some network setup does not need a multicast router as multicast traffic is destined to hosts within the same network. In this situation, FASTPATH has an IGMP/MLD Snooping Querier running on one of the switches and Snooping enabled on all the switches. For more information, see "IGMP Snooping Configuration Commands" on page 468" and "MLD Snooping Commands" on page 479".

9.3.1 ipv6 mld router

Use this command, in the administrative mode of the router, to enable MLD in the router.

Default	Disabled
Format	ipv6 mld router
Mode	Global Config

9.3.1.1 no ipv6 mld router

Use this command, in the administrative mode of the router, to disable MLD in the router.

Default	Disabled
Format	no ipv6 mld router
Mode	Global Config

9.3.2 ipv6 mld query-interval

Use this command to set the MLD router's query interval for the interface or range of interfaces. The query-interval is the amount of time between the general queries sent when the router is the querier on that interface. The range for *query-interval* is 1 to 3600 seconds.

Default	125
Format	ipv6 mld query-interval <i>query-interval</i>
Mode	Interface Config

9.3.2.1 no ipv6 mld query-interval

Use this command to reset the MLD query interval to the default value for that interface.

Format	no ipv6 mld query-interval
Mode	Interface Config

9.3.3 ipv6 mld query-max-response-time

Use this command to set the MLD querier's maximum response time for the interface or range of interfaces and this value is used in assigning the maximum response time in the query messages that are sent on that interface. The range for *query-max-response-time* is 0 to 65535 milliseconds.

Default	10000 milliseconds
Format	ipv6 mld query-max-response-time <i>query-max-response-time</i>
Mode	Interface Config

9.3.3.1 no ipv6 mld query-max-response-time

This command resets the MLD query max response time for the interface to the default value.

Format	no ipv6 mld query-max-response-time
Mode	Interface Config

9.3.4 ipv6 mld last-member-query-interval

Use this command to set the last member query interval for an MLD interface or range of interfaces, which is the value of the maximum response time parameter in the group specific queries sent out of this interface. The range for *Last-member-query-interval* is 0 to 65535 milliseconds.

Default 1000 milliseconds
Format `ipv6 mld last-member-query-interval Last-member-query-interval`
Mode Interface Config

9.3.4.1 `no ipv6 mld last-member-query-interval`

Use this command to reset the *Last-member-query-interval* parameter of the interface to the default value.

Format `no ipv6 mld last-member-query-interval`
Mode Interface Config

9.3.5 `ipv6 mld last-member-query-count`

Use this command to set the number of listener-specific queries sent before the router assumes that there are no local members on an interface or range of interfaces. The range for *Last-member-query-count* is 1 to 20.

Default 2
Format `ipv6 mld last-member-query-count Last-member-query-count`
Mode Interface Config

9.3.5.1 `no ipv6 mld last-member-query-count`

Use this command to reset the *Last-member-query-count* parameter of the interface to the default value.

Format `no ipv6 mld last-member-query-count`
Mode Interface Config

9.3.6 `ipv6 mld version`

Use this command to configure the MLD version that the interface uses.

Default 2
Format `ipv6 mld version { 1 | 2 }`
Mode Interface Config

9.3.6.1 `no ipv6 mld version`

This command resets the MLD version used by the interface to the default value.

Format `no ipv6 mld`
Mode Interface Config

9.3.7 `show ipv6 mld groups`

Use this command to display information about multicast groups that MLD reported. The information is displayed only when MLD is enabled on at least one interface. If MLD was not enabled on even one interface, there is no group information to be displayed. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

Format `show ipv6 mld groups {slot/port/vlan 1-4093/group-address}`

Mode • Privileged EXEC

 • User EXEC

The following fields are displayed as a table when *slot/port* is specified.

Field	Description
Group Address	The address of the multicast group.
Interface	Interface through which the multicast group is reachable.
Up Time	Time elapsed in hours, minutes, and seconds since the multicast group has been known.
Expiry Time	Time left in hours, minutes, and seconds before the entry is removed from the MLD membership table.

When *group-address* is specified, the following fields are displayed for each multicast group and each interface.

Field	Description
Interface	Interface through which the multicast group is reachable.
Group Address	The address of the multicast group.
Last Reporter	The IP Address of the source of the last membership report received for this multicast group address on that interface.
Filter Mode	The filter mode of the multicast group on this interface. The values it can take are <i>include</i> and <i>exclude</i> .
Version 1 Host Timer	The time remaining until the router assumes there are no longer any MLD version-1 Hosts on the specified interface.
Group Compat Mode	The compatibility mode of the multicast group on this interface. The values it can take are <i>MLDv1</i> and <i>MLDv2</i> .

The following table is displayed to indicate all the sources associated with this group.

Field	Description
Source Address	The IP address of the source.
Uptime	Time elapsed in hours, minutes, and seconds since the source has been known.
Expiry Time	Time left in hours, minutes, and seconds before the entry is removed.

Example: The following shows examples of CLI display output for the commands.
(FASTPATH Routing) `#show ipv6 mld groups ?`

```
group-address      Enter Group Address Info.
<slot/port>       Enter interface in slot/port format.
```

(FASTPATH Routing) `#show ipv6 mld groups 0/1`

```
Group Address..... FF43::3
Interface..... 0/1
Up Time (hh:mm:ss)..... 00:03:04
Expiry Time (hh:mm:ss)..... -----
```

```
(FASTPATH Routing) #show ipv6 mld groups ff43::3
```

```
Interface..... 0/1
Group Address..... FF43::3
Last Reporter..... FE80::200:FF:FE00:3
Up Time (hh:mm:ss)..... 00:02:53
Expiry Time (hh:mm:ss)..... -----
Filter Mode..... Include
Version1 Host Timer..... -----
Group compat mode..... v2
Source Address      ExpiryTime
-----
2003::10           00:04:17
2003::20           00:04:17
```

9.3.8 show ipv6 mld interface

Use this command to display MLD-related information for the interface. The argument *slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *slot/port* format.

Format show ipv6 mld interface {*slot/port/vlan 1-4093*}

Mode • Privileged EXEC

 • User EXEC

The following information is displayed for each of the interfaces or for only the specified interface.

Field	Description
Interface	The interface number in <i>slot/port</i> format.
MLD Mode	Displays the configured administrative status of MLD.
Operational Mode	The operational status of MLD on the interface.
MLD Version	Indicates the version of MLD configured on the interface.
Query Interval	Indicates the configured query interval for the interface.
Query Max Response Time	Indicates the configured maximum query response time (in seconds) advertised in MLD queries on this interface.
Robustness	Displays the configured value for the tuning for the expected packet loss on a subnet attached to the interface.
Startup Query interval	This value indicates the configured interval between General Queries sent by a Querier on startup.
Startup Query Count	This value indicates the configured number of Queries sent out on startup, separated by the Startup Query Interval.
Last Member Query Interval	This value indicates the configured Maximum Response Time inserted into Group-Specific Queries sent in response to Leave Group messages.
Last Member Query Count	This value indicates the configured number of Group-Specific Queries sent before the router assumes that there are no local members.

The following information is displayed if the operational mode of the MLD interface is enabled.

Field	Description
Querier Status	This value indicates whether the interface is an MLD querier or non-querier on the subnet it is associated with.
Querier Address	The IP address of the MLD querier on the subnet the interface is associated with.
Querier Up Time	Time elapsed in seconds since the querier state has been updated.

Field	Description
Querier Expiry Time	Time left in seconds before the Querier loses its title as querier.
Wrong Version Queries	Indicates the number of queries received whose MLD version does not match the MLD version of the interface.
Number of Joins	The number of times a group membership has been added on this interface.
Number of Leaves	The number of times a group membership has been removed on this interface.
Number of Groups	The current number of membership entries for this interface.

9.3.9 show ipv6 mld traffic

Use this command to display MLD statistical information for the router.

Format show ipv6 mld traffic

Mode

- Privileged EXEC
- User EXEC

Field	Description
Valid MLD Packets Received	The number of valid MLD packets received by the router.
Valid MLD Packets Sent	The number of valid MLD packets sent by the router.
Queries Received	The number of valid MLD queries received by the router.
Queries Sent	The number of valid MLD queries sent by the router.
Reports Received	The number of valid MLD reports received by the router.
Reports Sent	The number of valid MLD reports sent by the router.
Leaves Received	The number of valid MLD leaves received by the router.
Leaves Sent	The number of valid MLD leaves sent by the router.
Bad Checksum MLD Packets	The number of bad checksum MLD packets received by the router.
Malformed MLD Packets	The number of malformed MLD packets received by the router.

9.3.10 clear ipv6 mld counters

Use this command to reset the MLD counters to zero on the specified interface.

Format clear ipv6 mld *slot/port*

Mode Privileged EXEC

9.3.11 clear ipv6 mld traffic

Use this command to clear all entries in the MLD traffic database.

Format clear ipv6 mld *slot/port*

Mode Privileged EXEC

9.4 IPv6 MLD-Proxy Commands

MLD-Proxy is the IPv6 equivalent of IGMP-Proxy. MLD-Proxy commands allow you to configure the network device as well as to view device settings and statistics using either serial interface or telnet session. The operation of MLD-Proxy commands is the same as for IGMP-Proxy: MLD is for IPv6 and IGMP is for IPv4. MGMD is a term used to refer to both IGMP and MLD.

9.4.1 ipv6 mld-proxy

Use this command to enable MLD-Proxy on the interface or range of interfaces. To enable MLD-Proxy on the interface, you must enable multicast forwarding. Also, make sure that there are no other multicast routing protocols enabled in the router.

Format ipv6 mld-proxy

Mode Interface Config

9.4.1.1 no ipv6 mld-proxy

Use this command to disable MLD-Proxy on the router.

Format no ipv6 mld-proxy

Mode Interface Config

9.4.2 ipv6 mld-proxy unsolicit-rprt-interval

Use this command to set the unsolicited report interval for the MLD-Proxy interface or range of interfaces. This command is only valid when you enable MLD-Proxy on the interface. The value of *interval* is 1-260 seconds.

Default 1

Format ipv6 mld-proxy unsolicit-rprt-interval interval

Mode Interface Config

9.4.2.1 no ipv6 mld-proxy unsolicited-report-interval

Use this command to reset the MLD-Proxy router's unsolicited report interval to the default value.

Format no ipv6 mld-proxy unsolicit-rprt-interval

Mode Interface Config

9.4.3 ipv6 mld-proxy reset-status

Use this command to reset the host interface status parameters of the MLD-Proxy interface or range of interfaces. This command is only valid when you enable MLD-Proxy on the interface.

Format ipv6 mld-proxy reset-status

Mode Interface Config

9.4.4 show ipv6 mld-proxy

Use this command to display a summary of the host interface status parameters.

Format show ipv6 mld-proxy

- Mode**
- Privileged EXEC
 - User EXEC

The command displays the following parameters only when you enable MLD-Proxy.

Field	Description
Interface Index	The interface number of the MLD-Proxy.
Admin Mode	Indicates whether MLD-Proxy is enabled or disabled. This is a configured value.
Operational Mode	Indicates whether MLD-Proxy is operationally enabled or disabled. This is a status parameter.
Version	The present MLD host version that is operational on the proxy interface.
Number of Multicast Groups	The number of multicast groups that are associated with the MLD-Proxy interface.
Unsolicited Report Interval	The time interval at which the MLD-Proxy interface sends unsolicited group membership report.
Querier IP Address on Proxy Interface	The IP address of the Querier, if any, in the network attached to the upstream interface (MLD-Proxy interface).
Older Version 1 Querier Timeout	The interval used to timeout the older version 1 queriers.
Proxy Start Frequency	The number of times the MLD-Proxy has been stopped and started.

Example: The following shows example CLI display output for the command.

```
(FASTPATH Routing) #show ipv6 mld-proxy
Interface Index..... 0/3
Admin Mode..... Enable
Operational Mode..... Enable
Version..... 3
Num of Multicast Groups..... 0
Unsolicited Report Interval..... 1
Querier IP Address on Proxy Interface..... fe80::1:2:5
Older Version 1 Querier Timeout..... 00:00:00
Proxy Start Frequency.....
```

9.4.5 show ipv6 mld-proxy interface

This command displays a detailed list of the host interface status parameters. It displays the following parameters only when you enable MLD-Proxy.

Format show ipv6 mld-proxy interface

- Modes**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface Index	The <i>slot/port</i> of the MLD-proxy.

The column headings of the table associated with the interface are as follows:

Term	Definition
Ver	The MLD version.
Query Rcvd	Number of MLD queries received.
Report Rcvd	Number of MLD reports received.
Report Sent	Number of MLD reports sent.
Leaves Rcvd	Number of MLD leaves received. Valid for version 2 only.
Leaves Sent	Number of MLD leaves sent on the Proxy interface. Valid for version 2 only.

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show ipv6 mld-proxy interface

Interface Index..... 0/1

Ver	Query Rcvd	Report Rcvd	Report Sent	Leave Rcvd	Leave Sent
1	2	0	0	0	2
2	3	0	4	----	----

9.4.6 show ipv6 mld-proxy groups

Use this command to display information about multicast groups that the MLD-Proxy reported.

Format show ipv6 mld-proxy groups

Mode

- Privileged EXEC
- User EXEC

Field	Description
Interface	The interface number of the MLD-Proxy.
Group Address	The IP address of the multicast group.
Last Reporter	The IP address of the host that last sent a membership report for the current group, on the network attached to the MLD-Proxy interface (upstream interface).
Up Time (in secs)	The time elapsed in seconds since last created.
Member State	Possible values are: • Idle_Member. The interface has responded to the latest group membership query for this group. • Delay_Member. The interface is going to send a group membership report to respond to a group membership query for this group.
Filter Mode	Possible values are Include or Exclude .
Sources	The number of sources attached to the multicast group.

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show ipv6 mld-proxy groups

Interface Index..... 0/3

Group Address	Last Reporter	Up Time	Member State	Filter Mode	Sources
FF1E::1	FE80::100:2.3	00:01:40	DELAY_MEMBER	Exclude	2
FF1E::2	FE80::100:2.3	00:02:40	DELAY_MEMBER	Include	1
FF1E::3	FE80::100:2.3	00:01:40	DELAY_MEMBER	Exclude	0
FF1E::4	FE80::100:2.3	00:02:44	DELAY_MEMBER	Include	4

9.4.7 show ipv6 mld-proxy groups detail

Use this command to display information about multicast groups that MLD-Proxy reported.

Format show ipv6 mld-proxy groups detail

- Mode**
- Privileged EXEC
 - User EXEC

Field	Description
Interface	The interface number of the MLD-Proxy.
Group Address	The IP address of the multicast group.
Last Reporter	The IP address of the host that last sent a membership report for the current group, on the network attached to the MLD-Proxy interface (upstream interface).
Up Time (in secs)	The time elapsed in seconds since last created.
Member State	Possible values are: • Idle_Member. The interface has responded to the latest group membership query for this group. • Delay_Member. The interface is going to send a group membership report to respond to a group membership query for this group.
Filter Mode	Possible values are Include or Exclude .
Sources	The number of sources attached to the multicast group.
Group Source List	The list of IP addresses of the sources attached to the multicast group.
Expiry Time	The time left for a source to get deleted.

Example: The following shows example CLI display output for the command.
(FASTPATH Routing) #show ipv6 igmp-proxy groups

Interface Index..... 0/3

Group Address	Last Reporter	Up Time	Member State	Filter Mode	Sources
FF1E::1	FE80::100:2.3	244	DELAY_MEMBER	Exclude	2

Group Source List	Expiry Time
-----	-----
2001::1	00:02:40
2001::2	-----

FF1E::2	FE80::100:2.3	243	DELAY_MEMBER	Include	1

Group Source List	Expiry Time
-----	-----
3001::1	00:03:32
3002::2	00:03:32

FF1E::3	FE80::100:2.3	328	DELAY_MEMBER	Exclude	0

FF1E::4	FE80::100:2.3	255	DELAY_MEMBER	Include	4

Group Source List	Expiry Time
-----	-----
4001::1	00:03:40
5002::2	00:03:40
4001::2	00:03:40
5002::2	00:03:40

10 FASTPATH Log Messages

This chapter lists common log messages that are provided by FASTPATH, along with information regarding the cause of each message. There is no specific action that can be taken per message. When there is a problem being diagnosed, a set of these messages in the event log, along with an understanding of the system configuration and details of the problem will assist Broadcom in determining the root cause of such a problem. The most recent log messages are displayed first.



Note...

This chapter is not a complete list of all syslog messages.

The Log Messages chapter includes the following sections:

- "Core" on page 870"
- "Utilities" on page 872"
- "Management" on page 875"
- "Switching" on page 879"
- "QoS" on page 885"
- "Routing/IPv6 Routing" on page 886"
- "Multicast" on page 889"
- "Technologies" on page 894"
- "O/S Support" on page 895"

10.1 Core

Table 8: BSP Log Messages

Component	Message	Cause
BSP	Event(0xaaaaaaaa)	Switch has restarted.
BSP	Starting code...	BSP initialization complete, starting FASTPATH application.

Table 9: NIM Log Messages

Component	Message	Cause
NIM	NIM: L7_ATTACH out of order for interface unit x slot x port x	Interface creation out of order.
NIM	NIM: Failed to find interface at unit x slot x port x for event(x)	There is no mapping between the USP and Interface number.
NIM	NIM: L7_DETACH out of order for interface unit x slot x port x	Interface creation out of order.
NIM	NIM: L7_DELETE out of order for interface unit x slot x port x	Interface creation out of order.
NIM	NIM: event(x),intf(x),component(x), in wrong phase	An event was issued to NIM during the wrong configuration phase (probably Phase 1, 2, or WMU).

Table 9: NIM Log Messages (Continued)

Component	Message	Cause
NIM	NIM: Failed to notify users of interface change	Event was not propagated to the system.
NIM	NIM: failed to send message to NIM message Queue.	NIM message queue full or non-existent.
NIM	NIM: Failed to notify the components of L7_CREATE event	Interface not created.
NIM	NIM: Attempted event (x), on USP x.x.x before phase 3	A component issued an interface event during the wrong initialization phase.
NIM	NIM: incorrect phase for operation	An API call was made during the wrong initialization phase.
NIM	NIM: Component(x) failed on event(x) for interface	A component responded with a fail indication for an interface event.
NIM	NIM: Timeout event(x), interface remainingMask = xxxx	A component did not respond before the NIM timeout occurred.

Table 10: SIM Log Message

Component	Message	Cause
SIM	IP address conflict on service port/network port for IP address x.x.x.x. Conflicting host MAC address is xx:xx:xx:xx:xx:xx	This message appears when an address conflict is detected in the LAN for the service port/network port IP.

Table 11: System Log Messages

Component	Message	Cause
SYSTEM	Configuration file fastpath.cfg size is 0 (zero) bytes	The configuration file could not be read. This message may occur on a system for which no configuration has ever been saved or for which configuration has been erased.
SYSTEM	could not separate SYSAPI_CONFIG_FILENAME	The configuration file could not be read. This message may occur on a system for which no configuration has ever been saved or for which configuration has been erased.
SYSTEM	Building defaults for file <i>file name</i> version <i>version num</i>	Configuration did not exist or could not be read for the specified feature or file. Default configuration values will be used. The file name and version are indicated.

Table 11: System Log Messages (Continued)

Component	Message	Cause
SYSTEM	File <i>filename</i> : same version (<i>version num</i>) but the sizes (<i>version size</i> – <i>expected version size</i>) differ	The configuration file which was loaded was of a different size than expected for the version number. This message indicates the configuration file needed to be migrated to the version number appropriate for the code image. This message may appear after upgrading the code image to a more current release.
SYSTEM	Migrating config file <i>filename</i> from version <i>version num</i> to <i>version num</i>	The configuration file identified was migrated from a previous version number. Both the old and new version number are specified. This message may appear after upgrading the code image to a more current release.
SYSTEM	Building Defaults	Configuration did not exist or could not be read for the specified feature. Default configuration values will be used.
SYSTEM	sysapiCfgFileGet failed size = <i>expected size of file</i> version = <i>expected version</i>	Configuration did not exist or could not be read for the specified feature. This message is usually followed by a message indicating that default configuration values will be used.

10.2 Utilities

Table 12: Trap Mgr Log Message

Component	Message	Cause
Trap Mgr	Link Up/Down: slot/port	An interface changed link state.

Table 13: DHCP Filtering Log Messages

Component	Message	Cause
DHCP Filtering	Unable to create r/w lock for DHCP Filtering	Unable to create semaphore used for dhcp filtering configuration structure.
DHCP Filtering	Failed to register with nv Store.	Unable to register save and restore functions for configuration save.
DHCP Filtering	Failed to register with NIM	Unable to register with NIM for interface callback functions.
DHCP Filtering	Error on call to sysapiCfgFileWrite file	Error on trying to save configuration.

Table 14: NVStore Log Messages

Component	Message	Cause
NVStore	Building defaults for file XXX	A component's configuration file does not exist or the file's checksum is incorrect so the component's default configuration file is built.
NVStore	Error on call to osapiFsWrite routine on file XXX	Either the file cannot be opened or the OS's file I/O returned an error trying to write to the file.
NVStore	File XXX corrupted from file system. Checksum mismatch.	The calculated checksum of a component's configuration file in the file system did not match the checksum of the file in memory.
NVStore	Migrating config file XXX from version Y to Z	A configuration file version mismatch was detected so a configuration file migration has started.

Table 15: RADIUS Log Messages

Component	Message	Cause
RADIUS	RADIUS: Invalid data length - xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Failed to send the request	A problem communicating with the RADIUS server.
RADIUS	RADIUS: Failed to send all of the request	A problem communicating with the RADIUS server during transmit.
RADIUS	RADIUS: Could not get the Task Sync semaphore!	Resource issue with RADIUS Client service.
RADIUS	RADIUS: Buffer is too small for response processing	RADIUS Client attempted to build a response larger than resources allow.
RADIUS	RADIUS: Could not allocate accounting requestInfo	Resource issue with RADIUS Client service.
RADIUS	RADIUS: Could not allocate requestInfo	Resource issue with RADIUS Client service.
RADIUS	RADIUS: osapiSocketRecvFrom returned error	Error while attempting to read data from the RADIUS server.
RADIUS	RADIUS: Accounting-Response failed to validate, id = xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: User (xxx) needs to respond for challenge	An unexpected challenge was received for a configured user.
RADIUS	RADIUS: Could not allocate a buffer for the packet	Resource issue with RADIUS Client service.
RADIUS	RADIUS: Access-Challenge failed to validate, id = xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Failed to validate Message-Authenticator, id = xxx	The RADIUS Client received an invalid message from the server.

Table 15: RADIUS Log Messages (Continued)

Component	Message	Cause
RADIUS	RADIUS: Access-Accept failed to validate, id = xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Invalid packet length – xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Response is missing Message-Authenticator, id = xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Server address doesn't match configured server	RADIUS Client received a server response from an unconfigured server.

Table 16: TACACS+ Log Messages

Component	Message	Cause
TACACS+	TACACS+: authentication error, no server to contact	TACACS+ request needed, but no servers are configured.
TACACS+	TACACS+: connection failed to server x.x.x.x	TACACS+ request sent to server x.x.x.x but no response was received.
TACACS+	TACACS+: no key configured to encrypt packet for server x.x.x.x	No key configured for the specified server.
TACACS+	TACACS+: received invalid packet type from server.	Received packet type that is not supported.
TACACS+	TACACS+: invalid major version in received packet.	Major version mismatch.
TACACS+	TACACS+: invalid minor version in received packet.	Minor version mismatch.

Table 17: LLDP Log Message

Component	Message	Cause
LLDP	lldpTask(): invalid message type:xx. xxxxxx:xx	Unsupported LLDP packet received.

Table 18: SNTP Log Message

Component	Message	Cause
SNTP	SNTP: system clock synchronized on %s UTC	Indicates that SNTP has successfully synchronized the time of the box with the server.

Table 19: DHCPv6 Client Log Messages

Component	Message	Cause
DHCP6 Client	ip6Map dhcp add failed.	This message appears when the update of a DHCP leased IP address to IP6Map fails.
DHCP6 Client	osapiNetAddrV6Add failed on interface xxx.	This message appears when the update of a DHCP leased IP address to the kernel IP Stack fails.
DHCP6 Client	Failed to add DNS Server xxx to DNS Client.	This message appears when the update of a DNS6 Server address given by the DHCPv6 Server to the DNS6 Client fails.
DHCP6 Client	Failed to add Domain name xxx to DNS Client.	This message appears when the update of a DNS6 Domain name info given by the DHCPv6 Server to the DNS6 Client fails.

Table 20: DHCPv4 Client Log Messages

Component	Message	Cause
DHCP4 Client	Unsupported subOption (xxx) in Vendor Specific Option in received DHCP pkt	This message appears when a message is received from the DHCP Server that contains an unsupported Vendor Option.
DHCP4 Client	Failed to acquire an IP address on xxx; DHCP Server did not respond.	This message appears when the DHCP Client fails to lease an IP address from the DHCP Server.
DHCP4 Client	DNS name server entry add failed.	This message appears when the update of a DNS Domain name server info given by the DHCP Server to the DNS Client fails.
DHCP4 Client	DNS domain name list entry addition failed.	This message appears when the update of a DNS Domain name list info given by the DHCP Server to the DNS Client fails.
DHCP4 Client	Interface xxx Link State is Down. Connect the port and try again.	This message appears when the Network protocol is configured with DHCP without any active links in the Management VLAN.

10.3 Management

Table 21: SNMP Log Message

Component	Message	Cause
SNMP	EDB Callback: Unit Join: x.	A new unit has joined the stack.

Table 22: EmWeb Log Messages

Component	Message	Cause
EmWeb	EMWEB (Telnet): Max number of Telnet login sessions exceeded	A user attempted to connect via telnet when the maximum number of telnet sessions were already active.
EmWeb	EMWEB (SSH): Max number of SSH login sessions exceeded	A user attempted to connect via SSH when the maximum number of SSH sessions were already active.
EmWeb	Handle table overflow	All the available EmWeb connection handles are being used and the connection could not be made.
EmWeb	<i>ConnectionType</i> EmWeb socket accept() failed: errno	Socket accept failure for the specified connection type.
EmWeb	ewsNetHTTPReceive failure in NetReceiveLoop() - closing connection.	Socket receive failure.
EmWeb	EmWeb: connection allocation failed	Memory allocation failure for the new connection.
EmWeb	EMWEB TransmitPending: EWOULDBLOCK error sending data	Socket error on send.
EmWeb	ewaNetHTTPEnd: internal error - handle not in Handle table	EmWeb handle index not valid.
EmWeb	ewsNetHTTPReceive:rcvBufCnt exceeds MAX_QUEUED_RECV_BUFS!	The receive buffer limit has been reached. Bad request or DoS attack.
EmWeb	EmWeb accept: XXXX	Accept function for new SSH connection failed. XXXX indicates the error info.

Table 23: CLI_UTIL Log Messages

Component	Message	Cause
CLI_UTIL	Telnet Send Failed errno = 0x%x	Failed to send text string to the telnet client.
CLI_UTIL	osapiFsDir failed	Failed to obtain the directory information from a volume's directory.

Table 24: WEB Log Messages

Component	Message	Cause
WEB	Max clients exceeded	This message is shown when the maximum allowed java client connections to the switch is exceeded.
WEB	Error on send to sockfd XXXX, closing connection	Failed to send data to the java clients through the socket.
WEB	# (XXXX) Form Submission Failed. No Action Taken.	The form submission failed and no action is taken. XXXX indicates the file under consideration.
WEB	ewaFormServe_file_download() - WEB Unknown return code from tftp download result	Unknown error returned while downloading file using TFTP from web interface.
WEB	ewaFormServe_file_upload() - Unknown return code from tftp upload result	Unknown error returned while uploading file using TFTP from web interface.
WEB	Web UI Screen with unspecified access attempted to be brought up	Failed to get application-specific authorization handle provided to EmWeb/Server by the application in ewsAuthRegister(). The specified web page will be served in read-only mode.

Table 25: CLI_WEB_MGR Log Messages

Component	Message	Cause
CLI_WEB_MGR	File size is greater than 2K	The banner file size is greater than 2K bytes.
CLI_WEB_MGR	No. of rows greater than allowed maximum of XXXX	When the number of rows exceeds the maximum allowed rows.

Table 26: SSHD Log Messages

Component	Message	Cause
SSHD	SSHD: Unable to create the global (data) semaphore	Failed to create semaphore for global data protection.
SSHD	SSHD: Msg Queue is full, event = XXXX	Failed to send the message to the SSHD message queue as message queue is full. XXXX indicates the event to be sent.
SSHD	SSHD: Unknown UI event in message, event = XXXX	Failed to dispatch the UI event to the appropriate SSHD function as it's an invalid event. XXXX indicates the event to be dispatched.
SSHD	sshApiCnfgrCommand: Failed calling sshdIssueCmd.	Failed to send the message to the SSHD message queue.

Table 27: SSLT Log Messages

Component	Message	Cause
SSLT	SSLT: Exceeded maximum, ssltConnectionTask	Exceeded maximum allowed SSLT connections.
SSLT	SSLT: Error creating Secure server socket6	Failed to create secure server socket for IPV6.
SSLT	SSLT: Can't connect to unsecure server at XXXX, result = YYYY, errno = ZZZZ	Failed to open connection to unsecure server. XXXX is the unsecure server socket address. YYYY is the result returned from connect function and ZZZZ is the error code.
SSLT	SSLT: Msg Queue is full, event = XXXX	Failed to send the received message to the SSLT message queue as message queue is full. XXXX indicates the event to be sent.
SSLT	SSLT: Unknown UI event in message, event = XXXX	Failed to dispatch the received UI event to the appropriate SSLT function as it's an invalid event. XXXX indicates the event to be dispatched.
SSLT	ssltApiCnfgrCommand: Failed calling ssltIssueCmd.	Failed to send the message to the SSLT message queue.
SSLT	SSLT: Error loading certificate from file XXXX	Failed while loading the SSL certificate from specified file. XXXX indicates the file from where the certificate is being read.
SSLT	SSLT: Error loading private key from file	Failed while loading private key for SSL connection.
SSLT	SSLT: Error setting cipher list (no valid ciphers)	Failed while setting cipher list.
SSLT	SSLT: Could not delete the SSL semaphores	Failed to delete SSL semaphores during cleanup of all resources associated with the OpenSSL Locking semaphores.

Table 28: User_Manager Log Messages

Component	Message	Cause
User_Manager	User Login Failed for XXXX	Failed to authenticate user login. XXXX indicates the username to be authenticated.
User_Manager	Access level for user XXXX could not be determined. Setting to Level 1.	Invalid access level specified for the user. The access level is set to Level 1. XXXX indicates the username.
User_Manager	Could not migrate config file XXXX from version YYYY to ZZZZ. Using defaults.	Failed to migrate the config file. XXXX is the config file name. YYYY is the old version number and ZZZZ is the new version number.

10.4 Switching

Table 29: Protected Ports Log Messages

Component	Message	Cause
Protected Ports	Protected Port: failed to save configuration	This appears when the protected port configuration cannot be saved.
Protected Ports	protectedPortCnfrInitPhase1Process: Unable to create r/w lock for protected Port	This appears when protectedPortCfgRWLock Fails.
Protected Ports	protectedPortCnfrInitPhase2Process: Unable to register for VLAN change callback	This appears when nimRegisterIntfChange with VLAN fails.
Protected Ports	Cannot add interface xxx to group yyy	This appears when an interface could not be added to a particular group.
Protected Ports	unable to set protected port group	This appears when a dtl call fails to add interface mask at the driver level.
Protected Ports	Cannot delete interface xxx from group yyy	This appears when a dtl call to delete an interface from a group fails.
Protected Ports	Cannot update group YYY after deleting interface XXX	This message appears when an update group for a interface deletion fails.
Protected Ports	Received an interface change callback while not ready to receive it	This appears when an interface change call back has come before the protected port component is ready.

Table 30: IP Subnet VLANs Log Messages

Component	Message	Cause
IP subnet VLANs	ERROR vlanIpSubnetSubnetValid:Invalid subnet	This occurs when an invalid pair of subnet and netmask has come from the CLI.
IP subnet VLANs	IP Subnet Vlan: failed to save configuration	This message appears when save configuration of subnet vlans failed.
IP subnet VLANs	vlanIpSubnetCnfrInitPhase1Process: Unable to create r/w lock for vlanIpSubnet	This appears when a read/write lock creations fails.
IP subnet VLANs	vlanIpSubnetCnfrInitPhase2Process: Unable to register for VLAN change callback	This appears when this component unable to register for vlan change notifications.
IP subnet VLANs	vlanIpSubnetCnfrFiniPhase1Process: could not delete avl semaphore	This appears when a semaphore deletion of this component fails.
IP subnet VLANs	vlanIpSubnetDtlVlanCreate: Failed	This appears when a dtl call fails to add an entry into the table.
IP subnet VLANs	vlanIpSubnetSubnetDeleteApply: Failed	This appears when a dtl fails to delete an entry from the table.
IP subnet VLANs	vlanIpSubnetVlanChangeCallback: Failed to add an Entry	This appears when a dtl fails to add an entry for a vlan add notify event.
IP subnet VLANs	vlanIpSubnetVlanChangeCallback: Failed to delete an Entry	This appears when a dtl fails to delete an entry for a vlan delete notify event.

Table 31: Mac-based VLANs Log Messages

Component	Message	Cause
MAC based VLANs	MAC VLANs: Failed to save configuration	This message appears when save configuration of Mac vlans failed.
MAC based VLANs	vlanMacCnfrgInitPhase1Process: Unable to create r/w lock for vlanMac	This appears when a read/write lock creations fails.
MAC based VLANs	Unable to register for VLAN change callback	This appears when this component unable to register for vlan change notifications.
MAC based VLANs	vlanMacCnfrgFiniPhase1Process: could not delete avl semaphore	This appears when a semaphore deletion of this component fails.
MAC based VLANs	vlanMacAddApply: Failed to add an entry	This appears when a dtl call fails to add an entry into the table.
MAC based VLANs	vlanMacDeleteApply: Unable to delete an Entry	This appears when a dtl fails to delete an entry from the table.
MAC based VLANs	vlanMacVlanChangeCallback: Failed to add an entry	This appears when a dtl fails to add an entry for a vlan add notify event.
MAC based VLANs	vlanMacVlanChangeCallback: Failed to delete an entry	This appears when a dtl fails to delete an entry for a vlan delete notify event.

Table 32: 802.1X Log Messages

Component	Message	Cause
802.1X	<i>function</i> : Failed calling dot1xIssueCmd	802.1X message queue is full.
802.1X	<i>function</i> : EAP message not received from server	RADIUS server did not send required EAP message.
802.1X	<i>function</i> : Out of System buffers	802.1X cannot process/transmit message due to lack of internal buffers.
802.1X	<i>function</i> : could not set state to <i>authorized/unauthorized</i> , intf xxx	DTL call failed setting authorization state of the port.
802.1X	dot1xApplyConfigData: Unable to <i>enable/disable</i> dot1x in driver	DTL call failed enabling/disabling 802.1X.
802.1X	dot1xSendRespToServer: dot1xRadiusAccessRequestSend failed	Failed sending message to RADIUS server.
802.1X	dot1xRadiusAcceptProcess: error calling radiusAccountingStart, ifIndex = xxx	Failed sending accounting start to RADIUS server.
802.1X	<i>function</i> : failed sending terminate cause, intf xxx	Failed sending accounting stop to RADIUS server.

Table 33: IGMP Snooping Log Messages

Component	Message	Cause
IGMP Snooping	<i>function:</i> osapiMessageSend failed	IGMP Snooping message queue is full.
IGMP Snooping	Failed to set global igmp snooping mode to xxx	Failed to set global IGMP Snooping mode due to message queue being full.
IGMP Snooping	Failed to set igmp snooping mode xxx for interface yyy	Failed to set interface IGMP Snooping mode due to message queue being full.
IGMP Snooping	Failed to set igmp mrouter mode xxx for interface yyy	Failed to set interface multicast router mode due to IGMP Snooping message queue being full.
IGMP Snooping	Failed to set igmp snooping mode xxx for vlan yyy	Failed to set VLAN IGM Snooping mode due to message queue being full.
IGMP Snooping	Failed to set igmp mrouter mode%d for interface xxx on Vlan yyy	Failed to set VLAN multicast router mode due to IGMP Snooping message queue being full.
IGMP Snooping	snoopCnfrgInitPhase1Process: Error allocating small buffers	Could not allocate buffers for small IGMP packets.
IGMP Snooping	snoopCnfrgInitPhase1Process: Error allocating large buffers	Could not allocate buffers for large IGMP packets.

Table 34: GARP/GVRP/GMRP Log Messages

Component	Message	Cause
GARP/GVRP/GMRP	garpSpanState, garpIfStateChange, GarpIssueCmd, garpDot1sChangeCallBack, garpApiCnfrgCommand, garpLeaveAllTimerCallback, garpTimerCallback: QUEUE SEND FAILURE:	The garpQueue is full, logs specifics of the message content like internal interface number, type of message, etc.
GARP/GVRP/GMRP	GarpSendPDU: QUEUE SEND FAILURE	The garpPduQueue is full, logs specific of the GPDU, internal interface number, vlan id, buffer handle, etc.
GARP/GVRP/GMRP	garpMapIntfIsConfigurable, gmrpMapIntfIsConfigurable: Error accessing GARP/GMRP config data for interface %d in garpMapIntfIsConfigurable.	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.
GARP/GVRP/GMRP	garpTraceMsgQueueUsage: garpQueue usage has exceeded fifty/eighty/ninety percent	Traces the build up of message queue. Helpful in determining the load on GARP.
GARP/GVRP/GMRP	gid_destroy_port: Error Removing port %d registration for vlan-mac %d - %02X:%02X:%02X:%02X:%02X:%02X	Mismatch between the gmd (gmrp database) and MFDB.
GARP/GVRP/GMRP	gmd_create_entry: GMRP failure adding MFDB entry: vlan %d and address %s	MFDB table is full.

Table 35: 802.3ad Log Messages

Component	Message	Cause
802.3ad	dot3adReceiveMachine: received default event %x	Received a LAG PDU and the RX state machine is ignoring this LAGPDU.
802.3ad	dot3adNimEventCompletionCallback, dot3adNimEventCreateCompletionCallback: DOT3AD: notification failed for event(%d), intf(%d), reason(%d)	The event sent to NIM was not completed successfully.

Table 36: FDB Log Message

Component	Message	Cause
FDB	fdbSetAddressAgingTimeOut: Failure setting fid %d address aging timeout to %d	Unable to set the age time in the hardware.

Table 37: Double VLAN Tag Log Message

Component	Message	Cause
Double Vlan Tag	dvlantagIntfIsConfigurable: Error accessing dvlantag config data for interface %d	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.

Table 38: IPv6 Provisioning Log Message

Component	Message	Cause
IPV6 Provisioning	ipv6ProvIntfIsConfigurable: Error accessing IPv6 Provisioning config data for interface %d	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.

Table 39: MFDB Log Message

Component	Message	Cause
MFDB	mfdbTreeEntryUpdate: entry does not exist	Trying to update a non existing entry.

Table 40: 802.1Q Log Messages

Component	Message	Cause
802.1Q	dot1qIssueCmd: Unable to send message %d to dot1qMsgQueue for vlan %d - %d msgs in queue	dot1qMsgQueue is full.
802.1Q	dot1qVlanCreateProcess: Attempt to create a vlan with an invalid vlan id %d ; VLAN %d not in range,	This accommodates for reserved vlan ids. i.e. 4094 - x.
802.1Q	dot1qMapIntfIsConfigurable: Error accessing DOT1Q config data for interface %d in dot1qMapIntfIsConfigurable.	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.
802.1Q	dot1qVlanDeleteProcess: Deleting the default VLAN	Typically encountered during clear Vlan and clear config.
802.1Q	dot1qVlanMemberSetModify, dot1qVlanTaggedMemberSetModify: Dynamic entry %d can only be modified after it is converted to static	If this vlan is a learnt via GVRP then we cannot modify its member set via management.
802.1Q	dtl failure when adding ports to vlan id %d - portMask = %s	Failed to add the ports to VLAN entry in hardware.
802.1Q	dtl failure when deleting ports from vlan id %d - portMask = %s	Failed to delete the ports for a VLAN entry from the hardware.
802.1Q	dtl failure when adding ports to tagged list for vlan id %d - portMask = %s	Failed to add the port to the tagged list in hardware.
802.1Q	dtl failure when deleting ports from tagged list for vlan id %d - portMask = %s"	Failed to delete the port to the tagged list from the hardware.
802.1Q	dot1qTask: unsuccessful return code on receive from dot1qMsgQueue: %08x"	Failed to receive the dot1q message from dot1q message queue.
802.1Q	Unable to apply VLAN creation request for VLAN ID %d, Database reached MAX VLAN count!	Failed to create VLAN ID, VLAN Database reached maximum values.
802.1Q	Attempt to create a vlan (%d) that already exists	Creation of the existing Dynamic VLAN ID from the CLI.
802.1Q	DTL call to create VLAN %d failed with rc %d"	Failed to create VLAN ID in hardware.
802.1Q	Problem unrolling data for VLAN %d	Failed to delete VLAN from the VLAN database after failure of VLAN hardware creation.
802.1Q	Vlan %d does not exist	Failed to delete VLAN entry.
802.1Q	Vlan %d requestor type %d does not exist	Failed to delete dynamic VLAN ID if the given requestor is not valid.
802.1Q	Can not delete the VLAN, Some unknown component has taken the ownership!	Failed to delete, as some unknown component has taken the ownership.
802.1Q	Not valid permission to delete the VLAN %d requestor %d	Failed to delete the VLAN ID as the given requestor and VLAN entry status are not same.
802.1Q	VLAN Delete Call failed in driver for vlan %d	Failed to delete VLAN ID from the hardware.
802.1Q	Problem deleting data for VLAN %d	Failed to delete VLAN ID from the VLAN database.
802.1Q	Dynamic entry %d can only be modified after it is converted to static	Failed to modify the VLAN group filter
802.1Q	Cannot find vlan %d to convert it to static	Failed to convert Dynamic VLAN to static VLAN. VLAN ID not exists.
802.1Q	Only Dynamically created VLANs can be converted	Error while trying to convert the static created VLAN ID to static.

Table 40: 802.1Q Log Messages (Continued)

Component	Message	Cause
802.1Q	Cannot modify tagging of interface %s to non existence vlan %d"	Error for a given interface sets the tagging property for all the VLANs in the vlan mask.
802.1Q	Error in updating data for VLAN %d in VLAN database	Failed to add VLAN entry into VLAN database.
802.1Q	DTL call to create VLAN %d failed with rc %d	Failed to add VLAN entry in hardware.
802.1Q	Not valid permission to delete the VLAN %d	Failed to delete static VLAN ID. Invalid requestor.
802.1Q	Attempt to set access vlan with an invalid vlan id %d	Invalid VLAN ID.
802.1Q	Attempt to set access vlan with (%d) that does not exist	VLAN ID not exists.
802.1Q	VLAN create currently underway for VLAN ID %d	Creating a VLAN which is already under process of creation.
802.1Q	VLAN ID %d is already exists as static VLAN	Trying to create already existing static VLAN ID.
802.1Q	Cannot put a message on dot1q msg Queue, Returns:%d	Failed to send Dot1q message on Dot1q message Queue.
802.1Q	Invalid dot1q Interface: %s	Failed to add VLAN to a member of port.
802.1Q	Cannot set membership for user interface %s on management vlan %d	Failed to add VLAN to a member of port.
802.1Q	Incorrect tagmode for vlan tagging. tagmode: %d Interface: %s	Incorrect tagmode for VLAN tagging.
802.1Q	Cannot set tagging for interface %d on non existent VLAN %d"	The VLAN ID does not exist.
802.1Q	Cannot set tagging for interface %d which is not a member of VLAN %d	Failure in Setting the tagging configuration for a interface on a range of VLAN.
802.1Q	VLAN create currently underway for VLAN ID %d"	Trying to create the VLAN ID which is already under process of creation.
802.1Q	VLAN ID %d already exists	Trying to create the VLAN ID which is already exists.
802.1Q	Failed to delete, Default VLAN %d cannot be deleted	Trying to delete Default VLAN ID.
802.1Q	Failed to delete, VLAN ID %d is not a static VLAN	Trying to delete Dynamic VLAN ID from CLI.
802.1Q	Requestor %d attempted to release internal VLAN %d: owned by %d	-

Table 41: 802.1S Log Messages

Component	Message	Cause
802.1S	dot1sIssueCmd: Dot1s Msg Queue is full!!!!Event: %u, on interface: %u, for instance: %u	The message Queue is full.
802.1S	dot1sStateMachineRxBpdu(): Rcvd BPDU Discarded	The current conditions, like port is not enabled or we are currently not finished processing another BPDU on the same interface, does not allow us to process this BPDU.
802.1S	dot1sBpduTransmit(): could not get a buffer	Out of system buffers.

Table 42: Port Mac Locking Log Message

Component	Message	Cause
Port Mac Locking	pmlMapIntfIsConfigurable: Error accessing PML config data for interface %d in pmlMapIntfIsConfigurable.	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.

Table 43: Protocol-based VLANs Log Messages

Component	Message	Cause
Protocol Based VLANs	pbVlanCnfrInitPhase2Process: Unable to register NIM callback	Appears when nimRegisterIntfChange fails to register pbVlan for link state changes.
Protocol Based VLANs	pbVlanCnfrInitPhase2Process: Unable to register pbVlan callback with VLANs	Appears when VLANRegisterForChange fails to register pbVlan for VLAN changes.
Protocol Based VLANs	pbVlanCnfrInitPhase2Process: Unable to register pbVlan callback with nvStore	Appears when nvStoreRegister fails to register save and restore functions for configuration save.

10.5 QoS

Table 44: ACL Log Messages

Component	Message	Cause
ACL	Total number of ACL rules (x) exceeds max (y) on intf i.	The combination of all ACLs applied to an interface has resulted in requiring more rules than the platform supports.
ACL	ACL <i>name</i> , rule <i>x</i> : This rule is not being logged	The ACL configuration has resulted in a requirement for more logging rules than the platform supports. The specified rule is functioning normally except for the logging action.
ACL	aclLogTask: error logging ACL rule trap for correlator <i>number</i>	The system was unable to send an SNMP trap for this ACL rule which contains a logging attribute.
ACL	IP ACL <i>number</i> : Forced truncation of one or more rules during config migration	While processing the saved configuration, the system encountered an ACL with more rules than is supported by the current version. This may happen when code is updated to a version supporting fewer rules per ACL than the previous version.

Table 45: CoS Log Message

Component	Message	Cause
COS	cosCnfrInitPhase3Process: Unable to apply saved config -- using factory defaults	The COS component was unable to apply the saved configuration and has initialized to the factory default settings.

Table 46: DiffServ Log Messages

Component	Message	Cause
DiffServ	diffserv.c 165: diffServRestore Failed to reset DiffServ. Recommend resetting device	While attempting to clear the running configuration an error was encountered in removing the current settings. This may lead to an inconsistent state in the system and resetting is advised.
DiffServ	Policy invalid for service intf: policy <i>name</i> , interface <i>x</i> , direction <i>y</i>	The DiffServ policy definition is not compatible with the capabilities of the interface specified. Check the platform release notes for information on configuration limitations.

10.6 Routing/IPv6 Routing

Table 47: DHCP Relay Log Messages

Component	Message	Cause
DHCP relay	REQUEST hops field more than config value	The DHCP relay agent has processed a DHCP request whose HOPS field is larger than the maximum value allowed. The relay agent will not forward a message with a hop count greater than 4.
DHCP relay	Request's seconds field less than the config value	The DHCP relay agent has processed a DHCP request whose SECS field is larger than the configured minimum wait time allowed.
DHCP relay	processDhcpPacket: invalid DHCP packet type: %u\n	The DHCP relay agent has processed an invalid DHCP packet. Such packets are discarded by the relay agent.

Table 48: OSPFv2 Log Messages

Component	Message	Cause
OSPFv2	Best route client deregistration failed for OSPF Redist	OSPFv2 registers with the IPv4 routing table manager ("RTO") to be notified of best route changes. There are cases where OSPFv2 deregisters more than once, causing the second deregistration to fail. The failure is harmless.
OSPFv2	XX_Call() failure in _checkTimers for thread 0x869bcc0	An OSPFv2 timer has fired but the message queue that holds the event has filled up. This is normally a fatal error.
OSPFv2	Warning: OSPF LSDB is 90% full (22648 LSAs).	OSPFv2 limits the number of Link State Advertisements (LSAs) that can be stored in the link state database (LSDB). When the database becomes 90 or 95 percent full, OSPFv2 logs this warning. The warning includes the current size of the database.
OSPFv2	The number of LSAs, 25165, in the OSPF LSDB has exceeded the LSDB memory allocation.	When the OSPFv2 LSDB becomes full, OSPFv2 logs this message. OSPFv2 reoriginates its router LSAs with the metric of all non-stub links set to the maximum value to encourage other routers to not compute routes through the overloaded router.
OSPFv2	Dropping the DD packet because of MTU mismatch	OSPFv2 ignored a Database Description packet whose MTU is greater than the IP MTU on the interface where the DD was received.
OSPFv2	LSA Checksum error in LsUpdate, dropping LSID 1.2.3.4 checksum 0x1234.	OSPFv2 ignored a received link state advertisement (LSA) whose checksum was incorrect.

Table 49: OSPFv3 Log Messages

Component	Message	Cause
OSPFv3	Best route client deregistration failed for OSPFv3 Redist	OSPFv3 registers with the IPv6 routing table manager ("RTO6") to be notified of best route changes. There are cases where OSPFv3 deregisters more than once, causing the second deregistration to fail. The failure is harmless.
OSPFv3	Warning: OSPF LSDB is 90% full (15292 LSAs).	OSPFv3 limits the number of Link State Advertisements (LSAs) that can be stored in the link state database (LSDB). When the database becomes 90 or 95 percent full, OSPFv3 logs this warning. The warning includes the current size of the database.
OSPFv3	The number of LSAs, 16992, in the OSPF LSDB has exceeded the LSDB memory allocation.	When the OSPFv3 LSDB becomes full, OSPFv3 logs this message. OSPFv3 reoriginates its router LSAs with the R-bit clear indicating that OSPFv3 is overloaded.
OSPFv3	LSA Checksum error detected for LSID 1.2.3.4 checksum 0x34f5. OSPFv3 Database may be corrupted.	OSPFv3 periodically verifies the checksum of each LSA in memory. OSPFv3 logs this.

Table 50: Routing Table Manager Log Messages

Component	Message	Cause
RTO	RTO is no longer full. Routing table contains xxx best routes, xxx total routes, xxx reserved local routes.	When the number of best routes drops below full capacity, RTO logs this notice. The number of bad adds may give an indication of the number of route adds that failed while RTO was full, but a full routing table is only one reason why this count is incremented.
RTO	RTO is full. Routing table contains xxx best routes, xxx total routes, xxx reserved local routes. The routing table manager stores a limited number of best routes. The count of total routes includes alternate routes, which are not installed in hardware.	The routing table manager, also called "RTO," stores a limited number of best routes, based on hardware capacity. When the routing table becomes full, RTO logs this alert. The count of total routes includes alternate routes, which are not installed in hardware.

Table 51: VRRP Log Messages

Component	Message	Cause
VRRP	VRRP packet of size xxx dropped. Min VRRP packet size is xxx; Max VRRP packet size is xxx.	This message appears when there is flood of VRRP messages in the network.
VRRP	VR xxx on interface xxx started as xxx.	This message appears when the Virtual router is started in the role of a Master or a Backup.
VRRP	This router is the IP address owner for virtual router xxx on interface xxx. Setting the virtual router priority to xxx.	This message appears when the address ownership status for a specific VR is updated. If this router is the address owner for the VR, set the VR's priority to MAX priority (as per RFC 3768). If the router is no longer the address owner, revert the priority.

Table 52: ARP Log Message

Component	Message	Cause
ARP	IP address conflict on interface xxx for IP address yyy. Conflicting host MAC address is zzz.	When an address conflict is detected for any IP address on the switch upon reception of ARP packet from another host or router.

Table 53: RIP Log Message

Component	Message	Cause
RIP	RIP: discard response from xxx via unexpected interface	When RIP response is received with a source address not matching the incoming interface's subnet.

10.7 Multicast

Table 54: IGMP/MLD Log Messages

Component	Message	Cause
IGMP/MLD	MGMD Protocol Heap Memory Init Failed; Family – xxx.	MGMD Heap memory initialization Failed for the specified address family. This message appears when trying to enable MGMD Protocol.
IGMP/MLD	MGMD Protocol Heap Memory De-Init Failed; Family – xxx.	MGMD Heap memory de-initialization Failed for the specified address family. This message appears when trying to disable MGMD (IGMP/MLD) Protocol. As a result of this, the subsequent attempts to enable/disable MGMD will also fail.
IGMP/MLD	MGMD Protocol Initialization Failed; Family – xxx.	MGMD protocol initialization sequence Failed. This could be due to the non-availability of some resources. This message appears when trying to enable MGMD Protocol.
IGMP/MLD	MGMD All Routers Address - xxx Set to the DTL Mcast List Failed; Mode – xxx, intf – xxx.	This message appears when trying to enable/disable MGMD Protocol.
IGMP/MLD	MGMD All Routers Address - xxx Add to the DTL Mcast List Failed.	MGMD All Routers Address addition to the local multicast list Failed. As a result of this, MGMD Multicast packets with this address will not be received at the application.
IGMP/MLD	MGMD All Routers Address – xxx Delete from the DTL Mcast List Failed.	MGMD All Routers Address deletion from the local multicast list Failed. As a result of this, MGMD Multicast packets are still received at the application though MGMD is disabled.
IGMP/MLD	MLDv2 GroupAddr-[FF02::16] Enable with Interpeak Stack Failed; rtrIfNum - xxx, intf – xxx.	Registration of this Group address with the Interpeak stack failed. As a result of this, MLDv2 packets will not be received at the application.
IGMP/MLD	MGMD Group Entry Creation Failed; grpAddr - xxx, rtrIfNum – xxx.	The specified Group Address registration on the specified router interface failed.
IGMP/MLD	MGMD Socket Creation/Initialization Failed for addrFamily – xxx.	MGMD Socket Creation/options Set Failed. As a result of this, the MGMD Control packets cannot be sent out on an interface.

Table 55: IGMP-Proxy Log Messages

Component	Message	Cause
IGMP-Proxy/MLD-Proxy	MGMD-Proxy Protocol Initialization Failed; Family – xxx.	MGMD-Proxy protocol initialization sequence Failed. This could be due to the non-availability of some resources. This message appears when trying to enable MGMD-Proxy Protocol.
IGMP-Proxy/MLD-Proxy	MGMD-Proxy Protocol Heap Memory De-Init Failed; Family – xxx.	MGMD-Proxy Heap memory de-initialization is Failed for the specified address family. This message appears when trying to disable MGMD-Proxy Protocol. As a result of this, the subsequent attempts to enable/disable MGMD-Proxy will also fail.
IGMP-Proxy/MLD-Proxy	MGMD Proxy Route Entry Creation Failed; grpAddr – xxx, srcAddr – xxx, rtrIfNum – xxx.	Registration of the Multicast Forwarding entry for the specified Source and Group Address Failed when MGMD-Proxy is used.

Table 56: PIM-SM Log Messages

Component	Message	Cause
PIMSM	Non-Zero SPT/Data Threshold Rate – xxx is currently Not Supported on this platform.	This message appears when the user tries to configure the PIMSM SPT threshold value.
PIMSM	PIMSM Protocol Heap Memory Init Failed; Family – xxx.	PIMSM Heap memory initialization Failed for the specified address family. This message appears when trying to enable PIMSM Protocol.
PIMSM	PIMSM Protocol Heap Memory De-Init Failed; Family –xxx.	PIMSM Heap memory de-initialization Failed for the specified address family. This message appears when trying to disable PIMSM Protocol. As a result of this, the subsequent attempts to enable/disable PIMSM will also fail.
PIMSM	PIMSM Protocol Initialization Failed; Family –xxx.	PIMSM protocol initialization sequence Failed. This could be due to the non-availability of some resources. This message appears when trying to enable PIMSM Protocol.
PIMSM	PIMSM Protocol De-Initialization Failed; Family – xxx.	PIMSM protocol de-initialization sequence Failed. This message appears when trying to disable PIMSM Protocol.
PIMSM	PIMSM SSM Range Table is Full.	PIMSM SSM Range Table is Full. This message appears when the protocol cannot accommodate new SSM registrations.
PIMSM	PIM All Routers Address – xxx Delete from the DTL Mcast List Failed for intf – xxx.	PIM All Routers Address deletion from the local multicast list Failed. As a result of this, PIM Multicast packets are still received at the application though PIM is disabled.
PIMSM	PIM All Routers Address - xxx Add to the DTL Mcast List Failed for intf – xxx.	PIM All Routers Address addition to the local multicast list Failed. As a result of this, PIM Multicast packets with this address will not be received at the application.

Table 56: PIM-SM Log Messages (Continued)

Component	Message	Cause
PIMSM	Mcast Forwarding Mode Disable Failed for intf – xxx.	Multicast Forwarding Mode Disable Failed. As a result of this, Multicast packets are still received at the application though no protocol is enabled.
PIMSM	Mcast Forwarding Mode Enable Failed for intf – xxx.	Multicast Forwarding Mode Enable Failed. As a result of this, Multicast packets will not be received at the application though a protocol is enabled.
PIMSM	PIMSMv6 Socket Memb'ship Enable Failed for rtrIfNum – xxx.	PIMSMv6 Socket Creation/options Set with Kernel IP Stack Failed. As a result of this, the PIM Control packets cannot be received on the interface.
PIMSM	PIMSMv6 Socket Memb'ship Disable Failed for rtrIfNum – xxx.	PIMSMv6 Socket Creation/options Disable with Kernel IP Stack Failed. As a result of this, the PIM Control packets are still received on the interface at the application though no protocol is enabled.
PIMSM	PIMSM (S,G,RPt) Table Max Limit – xxx Reached; Cannot accommodate any further routes.	PIMSM Multicast Route table (S,G,RPt) has reached maximum capacity and cannot accommodate new registrations anymore.
PIMSM	PIMSM (S,G) Table Max Limit - xxx Reached; Cannot accommodate any further routes.	PIMSM Multicast Route table (S,G) has reached maximum capacity and cannot accommodate new registrations anymore.
PIMSM	PIMSM (*,G) Table Max Limit - xxx Reached; Cannot accommodate any further routes.	PIMSM Multicast Route table (*,G) has reached maximum capacity and cannot accommodate new registrations anymore.

Table 57: PIM-DM Log Messages

Component	Message	Cause
PIMDM	PIMDM Protocol Heap Memory Init Failed; Family – xxx.	PIMDM Heap memory initialization Failed for the specified address family. This message appears when trying to enable PIMDM Protocol.
PIMDM	PIMDM Protocol Heap Memory De-Init Failed; Family –xxx.	PIMDM Heap memory de-initialization Failed for the specified address family. This message appears when trying to disable PIMDM Protocol. As a result of this, the subsequent attempts to enable/disable PIMDM will also fail.
PIMDM	PIMDM Protocol Initialization Failed; Family –xxx.	PIMDM protocol initialization sequence Failed. This could be due to the non-availability of some resources. This message appears when trying to enable PIMDM Protocol.
PIMDM	PIMDM Protocol De-Initialization Failed; Family – xxx.	PIMDM protocol de-initialization sequence Failed. This message appears when trying to disable PIMDM Protocol.
PIMDM	PIM All Routers Address – xxx Delete from the DTL Mcast List Failed for intf – xxx.	PIM All Routers Address deletion from the local multicast list Failed. As a result of this, PIM Multicast packets are still received at the application though PIM is disabled.

Table 57: PIM-DM Log Messages (Continued)

Component	Message	Cause
PIMDM	PIM All Routers Address - xxx Add to the DTL Mcast List Failed for intf - xxx.	PIM All Routers Address addition to the local multicast list Failed. As a result of this, PIM Multicast packets with this address will not be received at the application.
PIMDM	Mcast Forwarding Mode Disable Failed for intf - xxx.	Multicast Forwarding Mode Disable Failed. As a result of this, Multicast packets are still received at the application though no protocol is enabled.
PIMDM	Mcast Forwarding Mode Enable Failed for intf - xxx.	Multicast Forwarding Mode Enable Failed. As a result of this, Multicast packets will not be received at the application though a protocol is enabled.
PIMDM	PIMDMv6 Socket Memb'ship Enable Failed for rtrIfNum - xxx.	PIMDMv6 Socket Creation/options Set with Kernel IP Stack Failed. As a result of this, the PIM Control packets cannot be received on the interface.
PIMDM	PIMDMv6 Socket Memb'ship Disable Failed for rtrIfNum - xxx.	PIMDMv6 Socket Creation/options Disable with Kernel IP Stack Failed. As a result of this, the PIM Control packets are still received on the interface at the application though no protocol is enabled.
PIMDM	PIMDM FSM Action Invoke Failed; rtrIfNum - xxx Out of Bounds for Event - xxx.	The PIMDM FSM Action invocation Failed due to invalid Routing interface number. In such cases, the FSM Action routine can never be invoked which may result in abnormal behavior. The failed FSM-name can be identified from the specified Event name.
PIMDM	PIMDM Socket Initialization Failed for addrFamily - xxx.	PIMDM Socket Creation/options Set Failed. As a result of this, the PIM Control packets cannot be sent out on an interface.
PIMDM	PIMDMv6 Socket Memb'ship Enable Failed for rtrIfNum - xxx.	Socket options Set to enable the reception of PIMv6 packets Failed. As a result of this, the PIMv6 packets will not be received by the application.
PIMDM	PIMDMv6 Socket Memb'ship Disable Failed for rtrIfNum - xxx.	PIMDMv6 Socket Creation/options Disable with Kernel IP Stack Failed. As a result of this, the PIMv6 Control packets are still received on the interface at the application though no protocol is enabled.
PIMDM	PIMDM MRT Table Max Limit - xxx Reached; Cannot accommodate any further routes.	PIMDM Multicast Route table (S,G) has reached maximum capacity and cannot accommodate new registrations anymore.

Table 58: DVMRP Log Messages

Component	Message	Cause
DVMRP	DVMRP Heap memory initialization is Failed for the specified address family.	This message appears when trying to enable DVMRP Protocol
DVMRP	DVMRP Heap memory de-initialization is Failed for the specified address family.	This message appears when trying to disable DVMRP Protocol. As a result of this, the subsequent attempts to enable/disable DVMRP will also fail.
DVMRP	DVMRP protocol initialization sequence Failed.	This could be due to the non-availability of some resources. This message appears when trying to enable DVMRP Protocol.
DVMRP	DVMRP All Routers Address - xxx Delete from the DTL Mcast List Failed for intf - xxx.	DMVRP All Routers Address deletion from the local multicast list Failed. As a result of this, DVMRP Multicast packets are still received at the application though DVMRP is disabled.
DVMRP	Mcast Forwarding Mode Disable Failed for intf - xxx.	The Multicast Forwarding mode Disable Failed for this routing interface.
DVMRP	DVMRP All Routers Address - xxx Add to the DTL Mcast List Failed for intf - xxx.	DMVRP All Routers Address addition to the local multicast list Failed. As a result of this, DVMRP Multicast packets with this address will not be received at the application.
DVMRP	Mcast Forwarding Mode Enable Failed for intf - xxx.	The Multicast Forwarding mode Enable Failed for this routing interface. As a result of this, the ability to forward Multicast packets does not function on this interface.
DVMRP	DVMRP Probe Control message Send Failed on rtrIfNum - xxx.	DVMRP Probe control message send failed. This could mostly be because of a Failure return status of the socket call sendto(). As a result of this, the DVMRP neighbor could be lost in the neighboring DVMRP routers.
DVMRP	DVMRP Prune Control message Send Failed; rtrIfNum - xxx.	Neighbor - %s, SrcAddr - %s, GrpAddr - %s DVMRP Prune control message send failed. This could mostly be because of a Failure return status of the socket call sendto(). As a result of this, the unwanted multicast traffic is still received and forwarded.
DVMRP	DVMRP Probe Control message Send Failed on rtrIfNum -xxx.	DVMRP Probe control message send failed. This could mostly be because of a Failure return status of the socket call sendto(). As a result of this, the DVMRP neighbor could be lost in the neighboring DVMRP routers.

10.8 Technologies

Table 59: Broadcom Error Messages

Component	Message	Cause
Broadcom	Invalid USP unit = x, slot = x, port = x	A port was not able to be translated correctly during the receive.
Broadcom	In hapiBroadSystemMacAddress call to 'bcm_l2_addr_add' - FAILED : x	Failed to add an L2 address to the MAC table. This should only happen when a hash collision occurs or the table is full.
Broadcom	Failed installing mirror action - rest of the policy applied successfully	A previously configured probe port is not being used in the policy. The release notes state that only a single probe port can be configured.
Broadcom	Policy x does not contain rule x	The rule was not added to the policy due to a discrepancy in the rule count for this specific policy. Additionally, the message can be displayed when an old rule is being modified, but the old rule is not in the policy.
Broadcom	ERROR: policy x, tmpPolicy x, size x, data x x x x x x x	An issue installing the policy due to a possible duplicate hash.
Broadcom	ACL x not found in internal table	Attempting to delete a non-existent ACL.
Broadcom	ACL internal table overflow	Attempting to add an ACL to a full table.
Broadcom	In hapiBroadQosCosQueueConfig, Failed to configure minimum bandwidth. Available bandwidth x	Attempting to configure the bandwidth beyond it's capabilities.
Broadcom	USL: failed to put sync response on queue	A response to a sync request was not enqueued. This could indicate that a previous sync request was received after it was timed out.
Broadcom	USL: failed to sync ipmc table on unit = x	Either the transport failed or the message was dropped.
Broadcom	usl_task_ipmc_msg_send(): failed to send with x	Either the transport failed or the message was dropped.
Broadcom	USL: No available entries in the STG table	The Spanning Tree Group table is full in USL.
Broadcom	USL: failed to sync stg table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	USL: A Trunk doesn't exist in USL	Attempting to modify a Trunk that doesn't exist.
Broadcom	USL: A Trunk being created by bcmx already existed in USL	Possible synchronization issue between the application, hardware, and sync layer.
Broadcom	USL: A Trunk being destroyed doesn't exist in USL	Possible synchronization issue between the application, hardware, and sync layer.
Broadcom	USL: A Trunk being set doesn't exist in USL	Possible synchronization issue between the application, hardware, and sync layer.
Broadcom	USL: failed to sync trunk table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	USL: Mcast entry not found on a join	Possible synchronization issue between the application, hardware, and sync layer.
Broadcom	USL: Mcast entry not found on a leave	Possible synchronization issue between the application, hardware, and sync layer.

Table 59: Broadcom Error Messages (Continued)

Component	Message	Cause
Broadcom	USL: failed to sync dVLAN data on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	USL: failed to sync policy table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	USL: failed to sync VLAN table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	Invalid LAG id x	Possible synchronization issue between the BCM driver and HAPI.
Broadcom	Invalid uport calculated from the BCM uport bcmx_l2_addr->lport = x	Uport not valid from BCM driver.
Broadcom	Invalid USP calculated from the BCM uport\nbcmx_l2_addr->lport = x	USP not able to be calculated from the learn event for BCM driver.
Broadcom	Unable to insert route R/P	Route R with prefix P could not be inserted in the hardware route table. A retry will be issued.
Broadcom	Unable to Insert host H	Host H could not be inserted in hardware host table. A retry will be issued.
Broadcom	USL: failed to sync L3 Intf table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	USL: failed to sync L3 Host table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	USL: failed to sync L3 Route table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	USL: failed to sync initiator table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	USL: failed to sync terminator table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
Broadcom	USL: failed to sync ip-multicast table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.

10.9 O/S Support

Table 60: Linux BSP Log Message

Component	Message	Cause
Linux BSP	rc = 10	Second message logged at bootup, right after <i>Starting code.... Always</i> logged.

Table 61: OSAPI Linux Log Messages

Component	Message	Cause
OSAPI Linux	osapiNetLinkNeighDump: could not open socket! - or - ipstkNdpFlush: could not open socket! - or - osapiNetlinkDumpOpen: unable to bind socket! errno = XX	Couldn't open a netlink socket. Make sure "ARP Daemon support" (CONFIG_ARPD) is enabled in the Linux kernel, if the reference kernel binary is not being used.
OSAPI Linux	ipstkNdpFlush: sending delete failed	Failed when telling the kernel to delete a neighbor table entry (the message is incorrect).
OSAPI Linux	unable to open /proc/net/ipv6/conf/default/hop_limit	IPv6 MIB objects read, but /proc file system is not mounted, or running kernel does not have IPV6 support.
OSAPI Linux	osapiRouteEntryAdd, errno XX adding 0xYY to ZZ - or - osapiRouteEntryDelete, errno XX deleting 0xYY from ZZ	Error adding or deleting an IPv4 route (listed in hex as YY), on the interface with Linux name ZZ Error code can be looked up in errno.h.
OSAPI Linux	l3intfAddRoute: Failed to Add Route - or - l3intfDeleteRoute: Failed to Delete Route	Error adding or deleting a default gateway in the kernel's routing table (the function is really osapiRawMRouteAdd()/Delete()).
OSAPI Linux	osapiNetIfConfig: ioctl on XX failed: addr: 0xYY, err: ZZ - or - osapiNetIPSet: ioctl on XX failed: addr: 0x%YY	Failed trying to set the IP address (in hex as YY) of the interface with Linux name XX, and the interface does not exist. Sometimes this is a harmless race condition (e.g. we try to set address 0 when DHCPing on the network port (dtl0) at bootup, before it's created using TAP).
OSAPI Linux	ping: sendto error	Trouble sending an ICMP echo request packet for the UI ping command. Maybe there was no route to that network.
OSAPI Linux	Failed to Create Interface	Out of memory at system initialization time.
OSAPI Linux	TAP Unable to open XX	The /dev/tap file is missing, or, if not using the reference kernel binary, the kernel is missing "Universal TUN/TAP device driver support" (CONFIG_TUN).
OSAPI Linux	Tap monitor task is spinning on select failures - then - Tap monitor select failed: XX	Trouble reading the /dev/tap device, check the error message XX for details.
OSAPI Linux	Log_Init: log file error - creating new log file	This pertains to the "event log" persistent file in flash. Either it did not exist, or had a bad checksum.
OSAPI Linux	Log_Init: Flash (event) log full; erasing	Event log file has been cleared; happens at boot time.
OSAPI Linux	Log_Init: Corrupt event log; erasing	Event log file had a non-blank entry after a blank entry; therefore, something was messed up.
OSAPI Linux	Failed to Set Interface IP Address - or - IP Netmask - or - Broadcast Address - or - Flags - or - Hardware Address - or - Failed to Retrieve Interface Flags	Trouble adding VRRP IP or MAC address(es) to a Linux network interface.

Appendix A: List of Commands

{deny permit} (IP ACL)	779
{deny permit} (IPv6)	789
{deny permit} (MAC ACL)	768
1583compatibility	592
aaa accounting	101
aaa authentication dot1x default	371
aaa authentication enable	81
aaa authentication login	80
aaa authorization	83
aaa ias-user username	100
aaa server radius dynamic-author	119
aaa session-id	100
absolute	796
access-list	774
accounting	103
acl-trapflags	784
acl-traptime	787
addport	407
address prefix (IPv6)	720
advertise speed	310
area default-cost (OSPF)	592
area default-cost (OSPFv3)	683
area nssa (OSPF)	593
area nssa (OSPFv3)	684
area nssa default-info-originate (OSPF)	593
area nssa default-info-originate (OSPFv3)	684
area nssa no-redistribute (OSPF)	593
area nssa no-redistribute (OSPFv3)	684
area nssa no-summary (OSPF)	593
area nssa no-summary (OSPFv3)	685
area nssa translator-role (OSPF)	594
area nssa translator-role (OSPFv3)	685
area nssa translator-stab-intv (OSPF)	594
area nssa translator-stab-intv (OSPFv3)	685
area range (OSPF)	594
area range (OSPFv3)	685
area stub (OSPF)	596
area stub (OSPFv3)	686
area stub no-summary (OSPF)	596
area stub no-summary (OSPFv3)	686
area virtual-link (OSPF)	596
area virtual-link (OSPFv3)	687
area virtual-link authentication	597
area virtual-link dead-interval (OSPF)	597
area virtual-link dead-interval (OSPFv3)	687
area virtual-link hello-interval (OSPF)	597
area virtual-link hello-interval (OSPFv3)	688

area virtual-link retransmit-interval (OSPF)	598
area virtual-link retransmit-interval (OSPFv3)	688
area virtual-link transmit-delay (OSPF)	598
area virtual-link transmit-delay (OSPFv3)	688
arp access-list	465
arp cachesize	529
arp dynamicrenew	530
arp purge	530
arp resptime	531
arp retries	531
arp timeout	531
arp	528
assign-queue	756
authentication enable	378
authentication order	379
authentication priority	379
authentication timer restart	379
authorization commands	84
authorization exec default	85
authorization exec	85
authorization network radius	120
auth-type	119
auto-cost (OSPF)	599
auto-cost (OSPFv3)	689
auto-negotiate all	304
auto-negotiate	304
auto-summary	636
auto-voip oui	798
auto-voip oui-based priority	799
auto-voip protocol-based	799
auto-voip vlan	800
auto-voip	798
bandwidth	608
bcmsh	271
bfd echo	644
bfd interval	644
bfd slow-timer	645
bfd	643
block	311
boot autoinstall dhcp startup-config	148
boot autoinstall file disable	147
boot autoinstall file	146
boot autoinstall	144
boot host autoreboot	145
boot host autosave	145
boot host dhcp	145
boot host retrycount	144
boot system	150
bootfile	214

bootpdhcprelay cidoptmode	582
bootpdhcprelay enable	584
bootpdhcprelay maxhopcount	582
bootpdhcprelay minwaittime	583
bootpdhcprelay serverip	583
bridge aging-time	515
cablestatus	271
capability opaque	599
capture file size	230
capture file remote line	229
capture line wrap	230
capture remote port	230
capture start	228
capture stop	229
class	757
class-map rename	748
class-map	747
classofservice dot1p-mapping	736
classofservice ip-dscp-mapping	737
classofservice ip-precedence-mapping	737
classofservice trust	738
clear aaa ias-users	103
clear accounting statistics	105
clear arp-cache	532
clear arp-switch	532
clear authentication authentication-history	383
clear authentication statistics	383
clear board event-log	198
clear config	188
clear counters keepalive	340
clear counters	189
clear cpu-traffic	235
clear dhcp l2relay statistics interface	452
clear dot1x authentication-history	372
clear dot1x statistics	372
clear errcounter	199
clear host	226
clear igmpsnooping	189
clear ip access-list counters	189
clear ip address-conflict-detect	228
clear ip arp inspection statistics	467
clear ip dhcp binding	219
clear ip dhcp conflict	219
clear ip dhcp force-client-id	454
clear ip dhcp server statistics	219
clear ip dhcp snooping binding	461
clear ip dhcp snooping statistics	461
clear ip helper statistics	586
clear ip mroute	815

clear ip ospf configuration	600
clear ip ospf counters	600
clear ip ospf neighbor interface	600
clear ip ospf neighbor	600
clear ip ospf redistribution	600
clear ip ospf stub-router	618
clear ip ospf	599
clear ip prefix-list	569
clear ip route counters	553
clear ipv6 access-list counters	189
clear ipv6 dhcp binding	726
clear ipv6 dhcp snooping binding	733
clear ipv6 dhcp snooping statistics	733
clear ipv6 dhcp	726
clear ipv6 mld counters	864
clear ipv6 mld traffic	864
clear ipv6 mroute	848
clear ipv6 neighbors	672
clear ipv6 ospf configuration	689
clear ipv6 ospf counters	689
clear ipv6 ospf neighbor interface	690
clear ipv6 ospf neighbor	690
clear ipv6 ospf redistribution	690
clear ipv6 ospf stub-router	704
clear ipv6 ospf	689
clear ipv6 prefix-list	569
clear ipv6 route counters	683
clear ipv6 snooping counters	683
clear ipv6 statistics	683
clear isdp counters	518
clear isdp table	518
clear lldp remote-data	495
clear lldp statistics	495
clear logging buffered	181
clear logging email statistics	185
clear mac access-list counters	189
clear mac-addr-table	174
clear mldsnooping	486
clear network ipv6 dhcp statistics	726
clear packet-trace packet-data	269
clear pass	189
clear port-channel all counters	424
clear port-channel counters	424
clear radius dynamic-author statistics	120
clear radius statistics	372
clear serviceport ipv6 dhcp statistics	727
clear traplog	190
clear vlan	190
clear vpc statistics	434

client	120
client-identifier	212
client-name	212
clock set	208
clock summer-time date	208
clock summer-time recurring	209
clock timezone	210
configure	63
conform-color	756
copy (pre-login banner)	140
copy	193
cos-queue max-bandwidth	738
cos-queue min-bandwidth	739
cos-queue random-detect	739
cos-queue strict	740
cpu-traffic direction interface	230
cpu-traffic direction match cust-filter	231
cpu-traffic direction match dstip	232
cpu-traffic direction match srcip	231
cpu-traffic direction match tcp	232
cpu-traffic direction match udp	232
cpu-traffic mode	233
cpu-traffic trace	233
crypto certificate generate	71
crypto key generate dsa	71
crypto key generate rsa	71
dampening	613
debug aaa accounting	236
debug aaa authorization	236
debug aaa coa	121
debug aaa pod	121
debug arp	236
debug authentication	237
debug auto-voip	237
debug bfd event	646
debug bfd packet	646
debug clear	237
debug console	237
debug crashlog	238
debug dcbx packet	239
debug debug-config	239
debug dhcp packet	239
debug dot1ag	239
debug dot1x packet	240
debug exception	261
debug fip-snooping packet	240
debug igmpsnooping packet receive	242
debug igmpsnooping packet transmit	241
debug igmpsnooping packet	241

debug ip acl.....	243
debug ip dvmrp packet.....	243
debug ip igmp packet	243
debug ip mcache packet.....	244
debug ip pimdm packet.....	244
debug ip pimsm packet	244
debug ip vrrp	245
debug ipv6 dhcp	245
debug ipv6 mcache packet.....	245
debug ipv6 mld packet	246
debug ipv6 ospfv3 packet	246
debug ipv6 pimdm packet.....	247
debug ipv6 pimsm packet	247
debug isdp packet.....	522
debug lacp packet.....	247
debug mldsnooping packet.....	248
debug mvr packet	406
debug mvr trace	406
debug ospf packet.....	248
debug ospfv3 packet	250
debug packet-trace	264
debug ping packet	250
debug rip packet.....	251
debug sflow packet	252
debug spanning-tree bpdu receive	252
debug spanning-tree bpdu transmit	253
debug spanning-tree bpdu	252
debug tacacs	254
debug telnetd start	254
debug telnetd stop.....	254
debug transfer	254
debug udd events	255
debug udd packet receive	255
debug udd packet transmit	255
debug vpc peer detection	435
debug vpc peer-keepalive.....	434
debug vpc peer-link control-message async	435
debug vpc peer-link control-message bulk	435
debug vpc peer-link control-message ckpt	435
debug vpc peer-link data-message	435
default-information originate (OSPF).....	601
default-information originate (OSPFv3)	690
default-information originate (RIP).....	636
default-metric (OSPF)	601
default-metric (OSPFv3).....	690
default-metric (RIP)	636
default-router	212
delete	150
deleteport (Global Config)	408

deleteport (Interface Config)	408
description	305
dhcp client vendor-id-option	452
dhcp client vendor-id-option-string	452
dhcp l2relay circuit-id subscription	446
dhcp l2relay circuit-id vlan	446
dhcp l2relay remote-id subscription	447
dhcp l2relay remote-id vlan	447
dhcp l2relay subscription	448
dhcp l2relay trust	448
dhcp l2relay vlan	449
dhcp l2relay	446
diffserv	746
dir	171
disconnect	79
distance ospf (OSPF)	601
distance ospf (OSPFv3)	691
distance rip	637
distribute-list out (OSPF)	602
distribute-list out (RIP)	637
dns-server (IPv6)	721
dns-server	213
do (Privileged EXEC commands)	57
domain-name (IPv6)	720
domain-name enable	215
domain-name	215
dos-control all	506
dos-control firstfrag	507
dos-control icmpfrag	513
dos-control icmpv4	512
dos-control icmpv6	512
dos-control l4port	508
dos-control sipdip	506
dos-control smacdmac	508
dos-control tcpfinurgpsh	511
dos-control tcpflag	507
dos-control tcpflagseq	510
dos-control tcpfrag	507
dos-control tcpoffset	510
dos-control tcpport	509
dos-control tcpsyn	511
dos-control tcpsynfin	511
dos-control udpport	509
dot1x dynamic-vlan enable	373
dot1x eapolflood	372
dot1x guest-vlan	373
dot1x initialize	373
dot1x mac-auth-bypass	375
dot1x max-req	373

dot1x max-users	374
dot1x pae	388
dot1x port-control all	375
dot1x port-control	374
dot1x re-authenticate	375
dot1x re-authentication	376
dot1x supplicant max-start	389
dot1x supplicant port-control	388
dot1x supplicant timeout auth-period	390
dot1x supplicant timeout held-period	390
dot1x supplicant timeout start-period	389
dot1x supplicant user	390
dot1x system-auth-control monitor	376
dot1x system-auth-control	376
dot1x timeout	377
dot1x unauthenticated-vlan	378
dot1x user	378
drop	756
dvlan-tunnel ethertype (Interface Config)	352
dvlan-tunnel ethertype primary-tpid	353
egress-mask	760
enable (OSPF)	591
enable (OSPFv3)	691
enable (Privileged EXEC access)	57
enable (RIP)	635
enable authentication	86
enable password (Privileged EXEC)	94
encapsulation	541
erase factory-defaults	146
erase startup-config	146
errdisable recovery cause	523
errdisable recovery interval	523
exception core-file	258
exception dump compression	259
exception dump filepath	257
exception dump ftp-server	259
exception dump nfs	257
exception dump stack-ip-address add	260
exception dump stack-ip-address protocol	259
exception dump stack-ip-address remove	260
exception dump tftp-server	256
exception nmi	260
exception protocol	256
exception switch-chip-register	258
Exec Authorization	83
exit-overflow-interval (OSPF)	602
exit-overflow-interval (OSPFv3)	691
external-lsdb-limit (OSPF)	602
external-lsdb-limit (OSPFv3)	692

feature bfd	643
feature vpc	425
file verify	196
fip6 nd ra-interval	662
flowcontrol {symmetric asymmetric}	363
flowcontrol	363
hardware profile eth-mux	203
hardware profile portmode copper-sfp	201
hardware-address	213
host	213
hostname	141
hostroutesaccept	638
ignore server-key	121
ignore session-key	122
interface lag	414
interface loopback	655
interface tunnel	653
interface vlan	575
interface	304
ip access-group	783
ip access-list rename	778
ip access-list resequence	778
ip access-list	777
ip address dhcp	535
ip address	534
ip address-conflict-detect run	227
ip arp inspection filter	464
ip arp inspection limit	464
ip arp inspection trust	464
ip arp inspection validate	463
ip arp inspection vlan logging	463
ip arp inspection vlan	463
ip default-gateway	536
ip dhcp bootp automatic	218
ip dhcp conflict logging	218
ip dhcp excluded-address	217
ip dhcp filtering trust	456
ip dhcp force-client-id	453
ip dhcp option-61	222
ip dhcp ping packets	217
ip dhcp pool	211
ip dhcp snooping binding	455
ip dhcp snooping database write-delay	455
ip dhcp snooping database write-delay	728
ip dhcp snooping database	455
ip dhcp snooping limit	456
ip dhcp snooping log-invalid	457
ip dhcp snooping trust	457
ip dhcp snooping verify mac-address	455

ip dhcp snooping vlan.....	454
ip dhcp snooping	454
ip domain list.....	223
ip domain lookup.....	223
ip domain name.....	223
ip domain retry	225
ip domain timeout	226
ip dvmrp metric	816
ip dvmrp trapflags.....	816
ip dvmrp	815
ip dvmrp	817
ip helper enable	589
ip helper-address (Global Config).....	586
ip helper-address (Interface Config)	587
ip host.....	225
ip http accounting exec, ip https accounting exec	72
ip http authentication	72
ip http java	74
ip http port.....	75
ip http rest-api port	75
ip http rest-api secure-port.....	75
ip http secure-port.....	78
ip http secure-protocol	78
ip http secure-server	74
ip http secure-session hard-timeout	77
ip http secure-session maxsessions	77
ip http secure-session soft-timeout	77
ip http server	74
ip http session hard-timeout.....	76
ip http session maxsessions	76
ip http session soft-timeout.....	76
ip https authentication	73
ip icmp echo-reply	642
ip icmp error-interval	642
ip igmp header-validation	834
ip igmp last-member-query-count.....	835
ip igmp last-member-query-interval	835
ip igmp query-interval	835
ip igmp query-max-response-time.....	836
ip igmp robustness.....	836
ip igmp startup-query-count	836
ip igmp startup-query-interval	837
ip igmp version	834
ip igmp	834
ip igmp-proxy reset-status.....	840
ip igmp-proxy unsolicit-rprt-interval	840
ip igmp-proxy	840
ip irdp address	570
ip irdp holdtime	570

ip irdp maxadvertinterval	571
ip irdp minadvertinterval.....	571
ip irdp multicast	571
ip irdp preference	572
ip irdp	570
ip load-sharing	536
ip local-proxy-arp	529
ip mcast boundary	807
ip mroute	807
ip mtu	540
ip multicast ttl-threshold	808
ip multicast	808
ip name server	224
ip name source-interface.....	224
ip netdirbcast	540
ip ospf area	608
ip ospf authentication	609
ip ospf bfd	646
ip ospf cost.....	609
ip ospf database-filter all out	609
ip ospf dead-interval	610
ip ospf hello-interval.....	610
ip ospf mtu-ignore	612
ip ospf network	610
ip ospf prefix-suppression	611
ip ospf priority	611
ip ospf retransmit-interval.....	612
ip ospf transmit-delay.....	612
ip pim bsr-border.....	821
ip pim bsr-candidate	821
ip pim dense	820
ip pim dr-priority	822
ip pim hello-interval.....	821
ip pim join-prune-interval	823
ip pim rp-address.....	823
ip pim rp-candidate.....	824
ip pim sparse	820
ip pim spt-threshold.....	825
ip pim ssm	825
ip pim.....	820
ip pim-trapflags	825
ip policy route-map	555
ip prefix-list description.....	556
ip prefix-list	555
ip proxy-arp.....	529
ip redirects.....	641
ip rip authentication	637
ip rip receive version	638
ip rip send version	638

ip rip	635
ip route default	539
ip route distance	539
ip route net-prototype	540
ip route	538
ip routing	534
ip ssh port	69
ip ssh protocol	69
ip ssh server enable	69
ip ssh	69
ip telnet port	65
ip telnet server enable	64
ip unreachable	641
ip verify binding	456
ip verify source	457
ip vrrp (Global Config)	575
ip vrrp (Interface Config)	575
ip vrrp accept-mode	577
ip vrrp authentication	577
ip vrrp ip	576
ip vrrp mode	576
ip vrrp preempt	577
ip vrrp priority	578
ip vrrp timers advertise	578
ip vrrp track interface	579
ip vrrp track ip route	579
ipv6 access-list rename	788
ipv6 access-list resequence	788
ipv6 access-list	788
ipv6 address autoconfig	658
ipv6 address dhcp	658
ipv6 address	657
ipv6 dhcp client pd	718
ipv6 dhcp pool	719
ipv6 dhcp relay destination	719
ipv6 dhcp server	719
ipv6 dhcp snooping binding	728
ipv6 dhcp snooping database	728
ipv6 dhcp snooping limit	729
ipv6 dhcp snooping log-invalid	729
ipv6 dhcp snooping trust	729
ipv6 dhcp snooping verify mac-address	727
ipv6 dhcp snooping vlan	727
ipv6 dhcp snooping	727
ipv6 enable	656
ipv6 hop-limit	656
ipv6 host	225
ipv6 icmp error-interval	667
ipv6 mld last-member-query-count	861

ipv6 mld last-member-query-interval.....	860
ipv6 mld query-interval.....	860
ipv6 mld query-max-response-time	860
ipv6 mld router	859
ipv6 mld version	861
ipv6 mld-proxy reset-status	865
ipv6 mld-proxy unsolicit-rprt-interval.....	865
ipv6 mld-proxy.....	865
ipv6 mroute.....	845
ipv6 mtu	660
ipv6 nd dad attempts.....	660
ipv6 nd managed-config-flag	660
ipv6 nd ns-interval.....	661
ipv6 nd other-config-flag	661
ipv6 nd prefix.....	664
ipv6 nd ra hop-limit unspecified	662
ipv6 nd ra-lifetime	662
ipv6 nd reachable-time	663
ipv6 nd router-preference	663
ipv6 nd suppress-ra.....	663
ipv6 neighbor	664
ipv6 neighbors dynamicrenew	665
ipv6 nud	665
ipv6 ospf area	696
ipv6 ospf cost.....	696
ipv6 ospf dead-interval	697
ipv6 ospf hello-interval.....	697
ipv6 ospf link-lsa-suppression	698
ipv6 ospf mtu-ignore	698
ipv6 ospf network	698
ipv6 ospf prefix-suppression	699
ipv6 ospf priority	699
ipv6 ospf retransmit-interval.....	700
ipv6 ospf transmit-delay	700
ipv6 pim bsr-border.....	850
ipv6 pim bsr-candidate	850
ipv6 pim dense	848
ipv6 pim dr-priority	851
ipv6 pim hello-interval	849
ipv6 pim join-prune-interval	851
ipv6 pim rp-address	852
ipv6 pim rp-candidate.....	853
ipv6 pim sparse	849
ipv6 pim ssm.....	853
ipv6 pim	849
ipv6 prefix-list	557
ipv6 prefix-list	666
ipv6 redirects.....	642
ipv6 route distance	659

ipv6 route net-prototype	659
ipv6 route	658
ipv6 router ospf	683
ipv6 traffic-filter	793
ipv6 unicast-routing	656
ipv6 unreachable	667
ipv6 unresolved-traffic	667
ipv6 verify binding	730
ipv6 verify source	730
iscsi aging time	802
iscsi cos	802
iscsi enable	803
iscsi target port	803
isdnp advertise-v2	517
isdnp enable	517
isdnp holdtime	517
isdnp run	516
isdnp timer	517
keepalive (Global Config)	338
keepalive (Interface Config)	338
keepalive action	338
keepalive disable-timer	339
keepalive retry	339
key	137
keystring	137
L2-port-bridge	527
lACP actor admin key	409
lACP actor admin state individual	409
lACP actor admin state longtimeout	409
lACP actor admin state passive	410
lACP actor admin state	410
lACP actor port priority	411
lACP admin key	408
lACP collector max-delay	408
lACP partner admin key	411
lACP partner admin state individual	412
lACP partner admin state longtimeout	412
lACP partner admin state passive	412
lACP partner port id	413
lACP partner port priority	413
lACP partner system priority	414
lACP partner system-id	414
lease	214
length value	172
line	63
link state group downstream	399
link state group upstream	399
link state group	399
linuxsh	79

lldp med all	500
lldp med confignotification all.....	500
lldp med confignotification.....	500
lldp med faststartrepeatcount	501
lldp med transmit-tlv all.....	501
lldp med transmit-tlv.....	500
lldp med	499
lldp notification	494
lldp notification-interval.....	495
lldp receive	493
lldp timers.....	493
lldp transmit.....	493
lldp transmit-mgmt.....	494
lldp transmit-tlv	494
llpf	401
log-adjacency-changes	603
logging buffered wrap	174
logging buffered.....	174
logging cli-command.....	175
logging console.....	175
logging email from-addr	182
logging email logtime.....	183
logging email message-type subject	183
logging email message-type to-addr.....	182
logging email test message-type.....	184
logging email urgent.....	182
logging email.....	181
logging host reconfigure	176
logging host remove	176
logging host	176
logging persistent	262
logging protocol.....	177
logging syslog port	177
logging syslog source-interface	177
logging syslog.....	177
logging traps	183
login authentication	92
logout	190
mac access-group	770
mac access-list extended rename	768
mac access-list extended	767
mac access-list resequence	768
macfilter adddest all.....	444
macfilter adddest.....	443
macfilter addsrc all	444
macfilter addsrc	444
macfilter	442
mac-learn	311
mail-server.....	185

mark cos	757
mark cos-as-sec-cos	758
mark ip-dscp	758
mark ip-precedence	758
mark secondary-cos	757
match any	748
match class-map	749
match cos	749
match destination-address mac	750
match dstip	750
match dstip6	751
match dstl4port	751
match ethertype	748
match ip address <access-list-number access-list-name>	559
match ip address	559
match ip dscp	751
match ip precedence	752
match ip tos	752
match ip6flowlbl	752
match ipv6 address	561
match length	562
match mac-list	562
match protocol	753
match secondary-cos	750
match secondary-vlan	755
match signature	753
match source-address mac	753
match src port	754
match srcip	754
match srcip6	754
match srcl4port	754
match vlan	754
maximum-paths (OSPF)	604
maximum-paths (OSPFv3)	692
max-metric router-lsa	617
max-metric router-lsa	703
mbuf	262
media-type	305
memory free low-watermark processor	173
mirror	756
mode dot1q-tunnel	353
mode dvlan-tunnel	353
monitor session destination	437
monitor session filter	438
monitor session mode	439
monitor session source	436
mtu	305
multicast (interface)	525
multicast (VLAN)	525

mvr group	402
mvr immediate	402
mvr mode	403
mvr querytime	403
mvr type	403
mvr vlan group	404
mvr vlan	404
mvr	402
netbios-name-server	215
netbios-node-type	216
network (DHCP Pool Config)	214
network area (OSPF)	592
network ipv6 address	650
network ipv6 enable	648
network ipv6 gateway	650
network ipv6 neighbor	651
network javamode	60
network mac-address	60
network mac-type	60
network mgmt_vlan	341
network parms	59
network protocol dhcp	59
network protocol	59
next-server	216
no 1583compatibility	592
no aaa accounting	102
no aaa authentication enable	83
no aaa authentication login	81
no aaa authorization	84
no aaa ias-user username	100
no aaa server radius dynamic-author	119
no aaa session-id	100
no absolute	797
no access-list	777
no accounting	104
no acl-trapflags	784
no acl-traptime	787
no advertise speed	311
no area nssa	593
no area nssa	684
no area nssa default-info-originate (OSPF)	593
no area nssa default-info-originate (OSPFv3)	684
no area nssa no-redistribute (OSPF)	593
no area nssa no-redistribute (OSPFv3)	684
no area nssa no-summary (OSPF)	594
no area nssa no-summary (OSPFv3)	685
no area nssa translator-role (OSPF)	594
no area nssa translator-role (OSPFv3)	685
no area nssa translator-stab-intv (OSPF)	594

no area nssa translator-stab-intv (OSPFv3)	685
no area range	595
no area range	686
no area stub	596
no area stub	686
no area stub no-summary	596
no area stub no-summary	687
no area virtual-link	596
no area virtual-link	687
no area virtual-link authentication	597
no area virtual-link dead-interval	597
no area virtual-link dead-interval	687
no area virtual-link hello-interval	598
no area virtual-link hello-interval	688
no area virtual-link retransmit-interval	598
no area virtual-link retransmit-interval	688
no area virtual-link transmit-delay	598
no area virtual-link transmit-delay	688
no arp	529
no arp access-list	465
no arp cachesize	530
no arp dynamicrenew	530
no arp resptime	531
no arp retries	531
no arp timeout	531
no authentication enable	379
no authentication order	379
no authentication priority	379
no authentication timer restart	380
no authorization commands	84
no authorization exec	85
no authorization exec default	85
no authorization network radius	120
no auth-type	120
no auto-cost reference-bandwidth (OSPF)	599
no auto-cost reference-bandwidth (OSPFv3)	689
no auto-negotiate	304
no auto-negotiate all	305
no auto-summary	636
no auto-voip	798
no auto-voip oui	799
no auto-voip oui	799
no auto-voip protocol-based	800
no auto-voip vlan	800
no bandwidth	608
no bfd	643
no bfd echo	644
no bfd interval	645
no bfd slow-timer	646

no block	311
no boot autoinstall dhcp startup-config	148
no boot autoinstall file	147
no boot autoinstall file disable	148
no boot host autoreboot	146
no boot host autosave	145
no boot host dhcp	145
no boot host retrycount	144
no bootfile	215
no bootpdhcprelay cidoptmode	582
no bootpdhcprelay enable	584
no bootpdhcprelay maxhopcount	583
no bootpdhcprelay minwaittime	583
no bootpdhcprelay serverip	583
no bridge aging-time	515
no capability opaque	599
no capture line wrap	230
no class	757
no class-map	748
no classofservice dot1p-mapping	737
no classofservice ip-dscp-mapping	737
no classofservice ip-precedence-mapping	737
no classofservice trust	738
no client	121
no client-identifier	212
no client-name	212
no clock summer-time	209
no clock timezone	210
no cos-queue max-bandwidth	738
no cos-queue min-bandwidth	739
no cos-queue random-detect	739
no cos-queue strict	740
no cpu-traffic direction interface	231
no cpu-traffic direction match cust-filter	231
no cpu-traffic direction match dstip	232
no cpu-traffic direction match srcip	232
no cpu-traffic direction match tcp	232
no cpu-traffic direction match udp	233
no cpu-traffic mode	233
no cpu-traffic trace	233
no crypto certificate generate	71
no crypto key generate dsa	72
no crypto key generate rsa	71
no dampening	613
no debug aaa accounting	236
no debug aaa authorization	236
no debug arp	237
no debug auto-voip	237
no debug console	238

no debug dhcp	239
no debug dot1x packet	240
no debug fip-snooping packet	240
no debug igmpsnooping packet	241
no debug igmpsnooping receive	243
no debug igmpsnooping transmit	242
no debug ip acl	243
no debug ip dvmrp packet	243
no debug ip igmp packet	244
no debug ip mcache packet	244
no debug ip pimdm packet	244
no debug ip pimsm packet	245
no debug ip vrrp	245
no debug ipv6 dhcp	245
no debug ipv6 mcache packet	246
no debug ipv6 mld packet	246
no debug ipv6 ospfv3 packet	246
no debug ipv6 pimdm packet	247
no debug ipv6 pimsm packet	247
no debug isdp packet	522
no debug lacp packet	248
no debug mldsnooping packet	248
no debug mvr packet	406
no debug mvr trace	406
no debug ospf packet	250
no debug ospfv3 packet	250
no debug ping packet	251
no debug rip packet	252
no debug sflow packet	252
no debug spanning-tree bpdu	252
no debug spanning-tree bpdu receive	253
no debug spanning-tree bpdu transmit	253
no debug transfer	255
no default-information originate (OSPF)	601
no default-information originate (OSPFv3)	690
no default-information originate (RIP)	636
no default-metric (OSPF)	601
no default-metric (OSPFv3)	691
no default-metric (RIP)	636
no default-router	213
no dhcp client vendor-id-option	452
no dhcp client vendor-id-option-string	453
no dhcp l2relay	446
no dhcp l2relay circuit-id subscription	446
no dhcp l2relay circuit-id vlan	447
no dhcp l2relay remote-id subscription	447
no dhcp l2relay remote-id vlan	448
no dhcp l2relay subscription	448
no dhcp l2relay trust	449

no dhcp l2relay vlan	449
no diffserv	747
no distance ospf	601
no distance ospf	691
no distance rip	637
no distribute-list out	602
no distribute-list out	637
no dns-server	213
no dns-server	721
no domain-name	215
no domain-name	721
no domain-name enable	215
no dos-control all	506
no dos-control firstfrag	507
no dos-control icmpfrag	513
no dos-control icmpv4	512
no dos-control icmpv6	513
no dos-control l4port	508
no dos-control sipdip	506
no dos-control smacdmac	508
no dos-control tcpfinurgpsh	512
no dos-control tcpflag	508
no dos-control tcpflagseq	510
no dos-control tcpfrag	507
no dos-control tcpoffset	510
no dos-control tcpport	509
no dos-control tcpsyn	511
no dos-control tcpsynfin	511
no dos-control udpport	509
no dot1x dynamic-vlan enable	373
no dot1x eapolflood	372
no dot1x guest-vlan	373
no dot1x mac-auth-bypass	375
no dot1x max-req	374
no dot1x max-users	374
no dot1x port-control	374
no dot1x port-control all	375
no dot1x re-authentication	376
no dot1x supplicant max-start	389
no dot1x supplicant port-control	389
no dot1x supplicant timeout auth-period	390
no dot1x supplicant timeout held-period	390
no dot1x supplicant timeout start-period	389
no dot1x system-auth-control	376
no dot1x system-auth-control monitor	377
no dot1x timeout	378
no dot1x unauthenticated-vlan	378
no dot1x user	378
no dvlan-tunnel ethertype (Interface Config)	352

no dvlan-tunnel ethertype primary-tpid	353
no enable (OSPF)	592
no enable (OSPFv3)	691
no enable (RIP)	635
no enable authentication	86
no enable password (Privileged EXEC)	95
no errdisable recovery cause	523
no errdisable recovery interval	523
no exception core-file	258
no exception dump compression	259
no exception dump filepath	257
no exception dump ftp-server	259
no exception dump nfs	257
no exception dump stack-ip-address protocol	259
no exception dump tftp-server	256
no exception protocol	256
no exit-overflow-interval	602
no exit-overflow-interval	692
no external-lsdb-limit	602
no external-lsdb-limit	692
no feature bfd	644
no feature vpc	425
no file verify	196
no flowcontrol	364
no flowcontrol {symmetric asymmetric}	363
no hardware profile portmode copper-sfp	201
no hardware-address	213
no host	214
no hostroutesaccept	638
no ignore server-key	121
no ignore session-key	122
no interface loopback	655
no interface tunnel	654
no ip access-group	784
no ip access-list	778
no ip address	535
no ip address dhcp	536
no ip arp inspection filter	465
no ip arp inspection limit	464
no ip arp inspection trust	464
no ip arp inspection validate	463
no ip arp inspection vlan	463
no ip arp inspection vlan logging	463
no ip default-gateway	536
no ip dhcp bootp automatic	218
no ip dhcp conflict logging	219
no ip dhcp excluded-address	217
no ip dhcp filtering trust	456
no ip dhcp force-client-id	453

no ip dhcp option-61	222
no ip dhcp ping packets	218
no ip dhcp pool	212
no ip dhcp snooping	454
no ip dhcp snooping binding	456
no ip dhcp snooping database write-delay	455
no ip dhcp snooping database write-delay	728
no ip dhcp snooping limit	457
no ip dhcp snooping log-invalid	457
no ip dhcp snooping trust	457
no ip dhcp snooping verify mac-address	455
no ip dhcp snooping vlan	454
no ip domain list	224
no ip domain lookup	223
no ip domain name	223
no ip domain retry	225
no ip domain timeout	226
no ip dvmrp	816
no ip dvmrp	817
no ip dvmrp metric	816
no ip dvmrp trapflags	817
no ip helper enable	589
no ip helper-address (Global Config)	587
no ip helper-address (Interface Config)	589
no ip host	225
no ip http authentication	73
no ip http java	75
no ip http port	75
no ip http rest-api port	75
no ip http secure-port	78
no ip http secure-server	74
no ip http secure-session hard-timeout	77
no ip http secure-session maxsessions	77
no ip http secure-session soft-timeout	78
no ip http server	74
no ip http session hard-timeout	76
no ip http session maxsessions	76
no ip http session soft-timeout	77
no ip http/https accounting exec	72
no ip https authentication	73
no ip icmp echo-reply	642
no ip icmp error-interval	643
no ip igmp	834
no ip igmp header-validation	834
no ip igmp last-member-query-count	835
no ip igmp last-member-query-interval	835
no ip igmp query-interval	835
no ip igmp query-max-response-time	836
no ip igmp robustness	836

no ip igmp startup-query-count	836
no ip igmp startup-query-interval	837
no ip igmp version	835
no ip igmp-proxy	840
no ip igmp-proxy unsolicit-rprt-interval	840
no ip irdp	570
no ip irdp address	570
no ip irdp holdtime	570
no ip irdp maxadvertinterval	571
no ip irdp minadvertinterval	571
no ip irdp multicast	571
no ip irdp preference	572
no ip load-sharing	537
no ip local-proxy-arp	529
no ip mcast boundary	807
no ip mroute	808
no ip mtu	541
no ip multicast	808
no ip multicast ttl-threshold	808
no ip name server	224
no ip name source-interface	224
no ip netdirbcast	540
no ip ospf area	608
no ip ospf authentication	609
no ip ospf bfd	646
no ip ospf cost	609
no ip ospf database-filter all out	609
no ip ospf dead-interval	610
no ip ospf hello-interval	610
no ip ospf mtu-ignore	613
no ip ospf network	611
no ip ospf prefix-suppression	611
no ip ospf priority	611
no ip ospf retransmit-interval	612
no ip ospf transmit-delay	612
no ip pim	820
no ip pim bsr-border	821
no ip pim bsr-candidate	822
no ip pim dense	820
no ip pim dr-priority	823
no ip pim hello-interval	821
no ip pim join-prune-interval	823
no ip pim rp-address	824
no ip pim rp-candidate	824
no ip pim sparse	820
no ip pim spt-threshold	826
no ip pim ssm	825
no ip pim-trapflags	825
no ip prefix-list	556

no ip prefix-list	666
no ip prefix-list description	557
no ip proxy-arp	529
no ip redirects	642
no ip rip	636
no ip rip authentication	637
no ip rip receive version	638
no ip rip send version	638
no ip route	539
no ip route default	539
no ip route distance	539
no ip route net-prototype	540
no ip routing	534
no ip ssh port	69
no ip ssh server enable	69
no ip telnet port	65
no ip telnet server enable	65
no ip unreachable	641
no ip verify binding	456
no ip verify source	458
no ip vrrp	575
no ip vrrp	576
no ip vrrp accept-mode	577
no ip vrrp authentication	577
no ip vrrp ip	576
no ip vrrp mode	576
no ip vrrp preempt	578
no ip vrrp priority	578
no ip vrrp timers advertise	578
no ip vrrp track interface	579
no ip vrrp track ip route	579
no ipv6 access-list	788
no ipv6 address	657
no ipv6 address autoconfig	658
no ipv6 address dhcp	658
no ipv6 dhcp client pd	718
no ipv6 dhcp pool	720
no ipv6 dhcp snooping	727
no ipv6 dhcp snooping binding	728
no ipv6 dhcp snooping limit	729
no ipv6 dhcp snooping log-invalid	729
no ipv6 dhcp snooping trust	729
no ipv6 dhcp snooping verify mac-address	728
no ipv6 dhcp snooping vlan	727
no ipv6 enable	657
no ipv6 hop-limit	656
no ipv6 host	225
no ipv6 icmp error-interval	668
no ipv6 mld last-member-query-count	861

no ipv6 mld last-member-query-interval	861
no ipv6 mld query-interval	860
no ipv6 mld query-max-response-time	860
no ipv6 mld router	860
no ipv6 mld version	861
no ipv6 mld-proxy	865
no ipv6 mld-proxy unsolicited-report-interval	865
no ipv6 mroute	845
no ipv6 mtu	660
no ipv6 nd dad attempts	660
no ipv6 nd managed-config-flag	661
no ipv6 nd ns-interval	661
no ipv6 nd other-config-flag	661
no ipv6 nd prefix	664
no ipv6 nd ra hop-limit unspecified	662
no ipv6 nd ra-interval	662
no ipv6 nd ra-lifetime	662
no ipv6 nd reachable-time	663
no ipv6 nd router-preference	663
no ipv6 nd suppress-ra	663
no ipv6 neighbor	665
no ipv6 neighbors dynamicrenew	665
no ipv6 ospf cost	697
no ipv6 ospf dead-interval	697
no ipv6 ospf hello-interval	697
no ipv6 ospf link-lsa-suppression	698
no ipv6 ospf mtu-ignore	698
no ipv6 ospf network	699
no ipv6 ospf prefix-suppression	699
no ipv6 ospf priority	699
no ipv6 ospf retransmit-interval	700
no ipv6 ospf transmit-delay	700
no ipv6 pim	849
no ipv6 pim bsr-border	850
no ipv6 pim bsr-candidate	851
no ipv6 pim dense	849
no ipv6 pim dr-priority	851
no ipv6 pim hello-interval	850
no ipv6 pim join-prune-interval	852
no ipv6 pim rp-address	852
no ipv6 pim rp-candidate	853
no ipv6 pim sparse	849
no ipv6 pim ssm	854
no ipv6 prefix-list	558
no ipv6 redirects	642
no ipv6 route	659
no ipv6 route distance	659
no ipv6 route net-prototype	660
no ipv6 traffic-filter	794

no ipv6 unicast-routing	656
no ipv6 unreachable	667
no ipv6 unresolved-traffic	667
no ipv6 verify binding	730
no ipv6 verify source	730
no iscsi aging time	802
no iscsi cos	803
no iscsi enable	803
no iscsi target port	804
no isdp advertise-v2	517
no isdp enable	518
no isdp run	517
no keepalive	338
no keepalive	338
no keepalive action	339
no keepalive disable-timer	339
no L2-port-bridge	527
no lacp actor admin key	409
no lacp actor admin state	411
no lacp actor admin state individual	409
no lacp actor admin state longtimeout	410
no lacp actor admin state passive	410
no lacp actor port priority	411
no lacp admin key	408
no lacp collector max delay	409
no lacp partner admin key	411
no lacp partner admin state individual	412
no lacp partner admin state longtimeout	412
no lacp partner admin state passive	413
no lacp partner port id	413
no lacp partner port priority	413
no lacp partner system priority	414
no lacp partner system-id	414
no ldp med confignotification	500
no lease	214
no length value	173
no link state group	399
no link state group downstream	399
no link state group upstream	399
no link state track	398
no lldp med	499
no lldp med faststartrepeatcount	501
no lldp med transmit-tlv	500
no lldp med transmit-tlv	501
no lldp notification	494
no lldp notification-interval	495
no lldp receive	493
no lldp timers	493
no lldp transmit	493

no lldp transmit-mgmt	494
no lldp transmit-tlv	494
no llpf	401
no log-adjacency-changes	603
no logging buffered	174
no logging buffered wrap	175
no logging cli-command	175
no logging console	175
no logging email	181
no logging email from-addr	182
no logging email logtime	183
no logging email message-type subject	183
no logging email message-type to-addr	182
no logging email urgent	182
no logging persistent	262
no logging syslog	177
no logging syslog port	177
no logging syslog source-interface	178
no logging traps	183
no login authentication	92
no mac access-group	771
no mac access-list extended	768
no macfilter	443
no macfilter adddest	443
no macfilter adddest all	444
no macfilter addsrc	444
no macfilter addsrc all	445
no mac-learn	312
no mail-server	185
no match class-map	749
no match ip address	559
no match ip address	561
no match ipv6 address	562
no match length	562
no match mac-list	563
no maximum-paths	605
no maximum-paths	692
no max-metric router-lsa	618
no max-metric router-lsa	704
no media-type	305
no mode dot1q-tunnel	353
no mode dvlan-tunnel	354
no monitor session destination	438
no monitor session filter	439
no monitor session mode	440
no monitor session source	437
no monitor session	440
no monitor	440
no mtu	306

no mvr	402
no mvr group	402
no mvr immediate	403
no mvr mode	403
no mvr querytime	403
no mvr type	403
no mvr vlan	404
no mvr vlan group	404
no netbios-name-server	216
no netbios-node-type	216
no network	214
no network area (OSPF)	592
no network ipv6 address	650
no network ipv6 enable	648
no network ipv6 gateway	650
no network ipv6 neighbor	651
no network javamode	60
no network mac-type	60
no network mgmt_vlan	341
no next-server	216
no nsf	615
no nsf (OSPFv3)	701
no nsf [ietf] helper strict-lsa-checking	617
no nsf [ietf] helper strict-lsa-checking (OSPFv3)	703
no nsf helper	616
no nsf helper (OSPFv3)	702
no nsfrestart-interval	615
no nsfrestart-interval (OSPFv3)	702
no option	217
no passive-interface	605
no passive-interface	693
no passive-interface default	605
no passive-interface default	693
no password (aaa IAS User Config)	94
no password (AAA IAS User Configuration)	102
no password (Line Configuration)	93
no passwords aging	96
no passwords history	95
no passwords lock-out	96
no passwords min-length	95
no passwords strength exclude-keyword	99
no passwords strength minimum character-classes	98
no passwords strength minimum lowercase-letters	97
no passwords strength minimum numeric-characters	98
no passwords strength minimum special-characters	98
no passwords strength minimum uppercase-letters	97
no passwords strength-check	96
no peer detection enable	426
no peer detection interval	426

no peer-keepalive destination	427
no peer-keepalive enable	427
no peer-keepalive timeout	427
no periodic	797
no permit ip host mac host	465
no policy-map	760
no port	122
no port lacpmode	415
no port lacpmode enable all	415
no port lacptimeout	416
no port lacptimeout	416
no port-channel adminmode	417
no port-channel linktrap	417
no port-channel load-balance	418
no port-channel local-preference	418
no port-channel static	415
no port-channel system priority	419
no port-security	489
no port-security mac-address	490
no port-security mac-address sticky	491
no port-security max-dynamic	489
no port-security max-static	490
no prefix-delegation	721
no prefix-suppression	603
no prefix-suppression	604
no private-vlan	357
no protection-group (configure)	745
no protection-group (interface)	745
no protocol group	346
no protocol vlan group	347
no protocol vlan group all	347
no radius accounting mode	123
no radius server attribute 4	123
no radius server host	124
no radius server msgauth	126
no radius server retransmit	126
no radius server timeout	127
no radius source-interface	127
no random-detect	740
no random-detect exponential-weighting-constant	740
no random-detect queue-parms	741
no redistribute	604
no redistribute	639
no redistribute	693
no remark	772
no rmon alarm	285
no rmon collection history	288
no rmon event	287
no rmon hcalarm	286

no role priority	428
no route-map	559
no routing	534
no sdm prefer	282
no <i>sequence-number</i>	770
no <i>sequence-number</i>	783
no <i>sequence-number</i>	793
no serial baudrate	63
no serial timeout	64
no server-key	128
no service dhcp	218
no service dhcpv6	718
no service-policy	762
no serviceport ipv6 address	648
no serviceport ipv6 enable	647
no serviceport ipv6 gateway	649
no serviceport ipv6 neighbor	649
no session-limit	66
no session-timeout	67
no set bootstopkey	197
no set bpdu forwarding	337
no set chkconfig	202
no set clibanner	142
no set garp timer join	366
no set garp timer leave	367
no set garp timer leaveall	367
no set gmrp adminmode	370
no set gmrp interfacemode	370
no set groupmembership-interval	481
no set gvrp adminmode	368
no set gvrp interfacemode	369
no set igmp	469
no set igmp fast-leave	470
no set igmp groupmembership-interval	471
no set igmp header-validation	469
no set igmp interfacemode	470
no set igmp maxresponse	471
no set igmp mcrtr_expiretime	471
no set igmp mrouter	472
no set igmp mrouter interface	472
no set igmp proxy-report interfacemode	526
no set igmp querier	476
no set igmp querier election participate	478
no set igmp querier query-interval	477
no set igmp querier timer expiry	477
no set igmp querier version	477
no set igmp report-suppression	473
no set ip default next-hop	565
no set ip next-hop	564

no set ip precedence	565
no set mld	479
no set mld fast-leave	481
no set mld interfacemode	480
no set mld maxresponse	481
no set mld mcrtextpiretime	482
no set mld mrouter	482
no set mld mrouter interface	483
no set mld querier	486
no set mld querier election participate	487
no set mld querier query_interval	487
no set mld querier timer expiry	487
no sflow poller	273
no sflow receiver	274
no sflow remote-agent ip	275
no sflow remote-agent monitor-session	275
no sflow remote-agent port	275
no sflow sample rate	276
no sflow sampler	276
no sflow sampler filter ip access-group	277
no sflow sampler filter mac access-group	277
no sflow sampler remote-agent	277
no sflow source-interface	278
no sfp auto-configure	200
no sfp auto-isolate	199
no sfp protocol	200
no show debugging	255
no shutdown	306
no shutdown all	307
no snmp trap link-status	108
no snmp trap link-status all	109
no snmp-server community	106
no snmp-server enable traps	107
no snmp-server enable traps	107
no snmp-server enable traps	118
no snmp-server enable traps linkmode	109
no snmp-server enable traps multiusers	109
no snmp-server enable traps sfp	201
no snmp-server enable traps stpmode	110
no snmp-server enable traps violation	107
no snmp-server engineID local	110
no snmp-server filter	111
no snmp-server group	112
no snmp-server host	112
no snmp-server port	108
no snmp-server user	113
no snmp-server view	113
no snmptrap source-interface	114
no snmp broadcast client poll-interval	203

no snmp client mode	204
no snmp client port	204
no snmp multicast client poll-interval	205
no snmp server	206
no snmp source-interface	206
no snmp unicast client poll-interval	204
no snmp unicast client poll-retry	205
no snmp unicast client poll-timeout	205
no spanning-tree	312
no spanning-tree auto-edge	313
no spanning-tree backbonefast	314
no spanning-tree bpdupfilter	314
no spanning-tree bpdupfilter default	314
no spanning-tree bpdupflood	315
no spanning-tree bpduguard	315
no spanning-tree configuration name	316
no spanning-tree configuration revision	316
no spanning-tree cost	316
no spanning-tree edgeport	317
no spanning-tree forceversion	317
no spanning-tree forward-time	317
no spanning-tree guard	318
no spanning-tree max-age	318
no spanning-tree max-hops	318
no spanning-tree mode	319
no spanning-tree mst	320
no spanning-tree mst instance	320
no spanning-tree mst priority	321
no spanning-tree mst vlan	321
no spanning-tree port mode	322
no spanning-tree port mode all	322
no spanning-tree tcnguard	322
no spanning-tree uplinkfast	323
no split-horizon	639
no sshcon maxsessions	70
no sshcon timeout	70
no stats flow-based	298
no stats flow-based	299
no stats group	297
no stats group	299
no storm-control broadcast	392
no storm-control broadcast action	392
no storm-control broadcast level	393
no storm-control broadcast rate	393
no storm-control multicast	394
no storm-control multicast action	394
no storm-control multicast level	395
no storm-control multicast rate	395
no storm-control unicast	396

no storm-control unicast action	396
no storm-control unicast level	396
no storm-control unicast rate	397
no switchport access vlan	359
no switchport mode	357
no switchport mode private-vlan	356
no switchport private-vlan	356
no switchport protected (Global Config)	365
no switchport protected (Interface Config)	365
no switchport trunk allowed vlan	358
no switchport trunk native vlan	358
no system-mac	428
no system-priority	429
no tacacs-server host	135
no tacacs-server key	135
no tacacs-server source-interface	136
no tacacs-server timeout	136
no telnetcon maxsessions	67
no telnetcon timeout	67
no terminal length	173
no time-range	796
no timers pacing flood	606
no timers pacing lsa-group	694
no timers throttle spf	695
no traffic-shape	742
no transport input telnet	66
no transport output telnet	66
no trapflags	607
no trapflags	696
no username	87
no username snmpv3 accessmode	88
no username snmpv3 authentication	89
no username snmpv3 encryption	89
no vlan	341
no vlan acceptframe	342
no vlan association mac	349
no vlan association subnet	348
no vlan ingressfilter	342
no vlan name	343
no vlan port acceptframe all	344
no vlan port ingressfilter all	345
no vlan port pvid all	345
no vlan port tagging all	345
no vlan protocol group add protocol	346
no vlan protocol group name	346
no vlan pvid	348
no vlan routing	573
no vlan tagging	348
no voice vlan (Global Config)	361

no voice vlan (Interface Config)	361
no vpc	429
no vpc domain	425
no vpc peer-link	429
nsf (OSPFv3)	701
nsf helper (OSPFv3)	702
nsf helper strict-lsa-checking (OSPFv3)	703
nsf helper strict-lsa-checking	616
nsf helper	616
nsf ietf helper disable (OSPFv3)	702
nsf ietf helper disable	616
nsf restart-interval (OSPFv3)	701
nsf restart-interval	615
nsf	615
option	217
OSPF Graceful Restart Commands	614
packet-trace eth	264
packet-trace ipv4	264
packet-trace ipv6	264
packet-trace l4	264
passive-interface (OSPF)	605
passive-interface (OSPFv3)	693
passive-interface default (OSPF)	605
passive-interface default (OSPFv3)	692
password (aaa IAS User Config)	94
password (AAA IAS User Configuration)	102
password (Line Configuration)	93
password (User EXEC)	93
password	186
password	92
passwords aging	96
passwords history	95
passwords lock-out	96
passwords min-length	95
passwords strength exclude-keyword	98
passwords strength maximum consecutive-characters	97
passwords strength maximum repeated-characters	97
passwords strength minimum character-classes	98
passwords strength minimum lowercase-letters	97
passwords strength minimum numeric-characters	98
passwords strength minimum special-characters	98
passwords strength minimum uppercase-letters	97
passwords strength-check	96
peer detection enable	426
peer detection interval	426
peer-keepalive destination	426
peer-keepalive enable	427
peer-keepalive timeout	427
Per-Command Authorization	83

periodic	797
permit ip host mac host.....	465
ping ipv6 interface	653
ping ipv6	652
ping	190
police-simple	759
police-single-rate	759
police-two-rate	759
policy-map rename	760
policy-map	760
port lacpmode enable all	415
port lacpmode.....	415
port lacptimeout (Global Config).....	416
port lacptimeout (Interface Config)	416
port	122
port	137
port	185
port-channel adminmode	416
port-channel hash multicast	424
port-channel linktrap	417
port-channel load-balance	417
port-channel local-preference.....	418
port-channel min-links	418
port-channel name	419
port-channel static	415
port-channel system priority.....	419
port-channel	407
port-security mac-address move	490
port-security mac-address sticky.....	490
port-security mac-address	490
port-security max-dynamic	489
port-security max-static.....	489
port-security.....	489
prefix-delegation (IPv6)	721
prefix-suppression (Router OSPF Config)	603
prefix-suppression (Router OSPFv3 Config)	603
priority (TACACS Config).....	137
private-vlan.....	356
process cpu threshold.....	164
protection-group (configure).....	745
protection-group (interface).....	745
protocol group	346
protocol vlan group all.....	347
protocol vlan group.....	347
quit	192
radius accounting mode	122
radius server attribute 4	123
radius server host	123
radius server key.....	125

radius server msgauth	125
radius server primary	126
radius server retransmit	126
radius server timeout	127
radius source-interface	127
random-detect exponential weighting-constant	740
random-detect queue-parms	741
random-detect	740
redirect	756
redistribute (OSPF)	604
redistribute (OSPFv3)	693
redistribute (RIP)	639
release dhcp	537
reload	192
remark	771
remote-span	349
renew dhcp network-port	537
renew dhcp service-port	537
renew dhcp	537
replace-port-bitmap	761
rmon ala^rm	284
rmon collection history	287
rmon event	286
rmon hcalarm	285
role priority	427
route-map	558
router ospf	591
router rip	635
router-id (OSPF)	604
router-id (OSPFv3)	694
routing	534
script apply	139
script delete	139
script list	140
script show	140
script validate	140
sdm prefer	281
security	185
serial baudrate	63
serial timeout	64
server-key	128
service dhcp	218
service dhcpv6	718
service-policy	761
serviceport ip	58
serviceport ipv6 address	648
serviceport ipv6 enable	647
serviceport ipv6 gateway	649
serviceport ipv6 neighbor	649

serviceport protocol dhcp	58
serviceport protocol	58
session start	270
session stop	270
session-limit	66
session-timeout	66
set board root-password	197
set bootstopkey	197
set bpdu forwarding	337
set chkconfig	202
set clibanner	141
set garp timer join	366
set garp timer leave	367
set garp timer leaveall	367
set gmrp adminmode	370
set gmrp interfacemode	370
set gvrp adminmode	368
set gvrp interfacemode	368
set igmp fast-leave	470
set igmp groupmembership-interval	470
set igmp header-validation	469
set igmp interfacemode	469
set igmp maxresponse	471
set igmp mcrtexpiretime	471
set igmp mrouter interface	472
set igmp mrouter	472
set igmp proxy-report interfacemode	526
set igmp querier election participate	478
set igmp querier query-interval	477
set igmp querier timer expiry	477
set igmp querier version	477
set igmp querier	476
set igmp report-suppression	472
set igmp	468
set interface	564
set ip default next-hop	564
set ip next-hop	564
set ip precedence	565
set mld fast-leave	480
set mld groupmembership-interval	481
set mld interfacemode	480
set mld maxresponse	481
set mld mcrtexpiretime	482
set mld mrouter interface	482
set mld mrouter	482
set mld querier election participate	487
set mld querier query_interval	487
set mld querier timer expiry	487
set mld querier	486

set mld	479
set prompt	141
sflow poller	272
sflow receiver owner notimeout	274
sflow receiver owner timeout	274
sflow receiver.....	273
sflow remote-agent ip.....	275
sflow remote-agent monitor-session	275
sflow remote-agent port	275
sflow sampler filter ip access-group	277
sflow sampler filter mac access-group	277
sflow sampler rate.....	276
sflow sampler remote-agent.....	276
sflow sampler.....	276
sflow source-interface	277
sfp auto-configure	200
sfp auto-isolate	199
sfp protocol.....	200
show aaa ias-users	103
show access-lists vlan	787
show access-lists	786
show accounting methods	104
show accounting	104
show acl-traptime	787
show advertise speed.....	311
show arp access-list	468
show arp brief	533
show arp switch	151
show arp switch.....	533
show arp	532
show authentication authentication-history	380
show authentication interface.....	380
show authentication methods	381
show authentication statistics.....	382
show authorization methods.....	85
show autoinstall file.....	147
show autoinstall.....	146
show auto-voip oui-table	801
show auto-voip	800
show block	311
show board address.....	197
show board cpu-load	197
show board memory-usage	197
show board port-map descr.....	197
show board post-status.....	198
show board version	198
show bootpdhcprelay	584
show bootvar	150
show bpdu forwarding	337

show capture packets	230
show chkconfig	202
show class-map	762
show classofservice dot1p-mapping	742
show classofservice ip-dscp-mapping.....	742
show classofservice ip-precedence-mapping	742
show classofservice trust.....	743
show clibanner.....	141
show clock detail	211
show clock	210
show cpu-traffic	233
show cpu-traffic interface.....	234
show cpu-traffic summary.....	234
show cpu-traffic trace.....	235
show dampening interface.....	613
show debugging	255
show dhcp client vendor-id-option	453
show dhcp l2relay agent-option vlan	451
show dhcp l2relay all.....	449
show dhcp l2relay circuit-id vlan	450
show dhcp l2relay interface	450
show dhcp l2relay remote-id vlan.....	450
show dhcp l2relay stats interface	450
show dhcp l2relay subscription interface	451
show dhcp l2relay vlan.....	452
show dhcp lease	541
show diffserv service brief	766
show diffserv service	765
show diffserv	763
show domain-name.....	105
show dos-control.....	513
show dot1q-tunnel	354
show dot1x authentication-history.....	387
show dot1x clients	387
show dot1x statistics.....	390
show dot1x users	388
show dot1x.....	383
show dvlan-tunnel	354
show errdisable recovery	523
show eventlog.....	151
show exception core-dump-file.....	261
show exception log	262
show exception	261
show fiber-ports optical-transceiver	161
show fiber-ports optical-transceiver-info.....	162
show flowcontrol	364
show forwardingdb agetime	515
show garp	368
show gmrp configuration	370

show gvrp configuration	369
show hardware	151
show hashdest	419
show hosts	226
show igmpsnooping mrouter interface	474
show igmpsnooping mrouter vlan	474
show igmpsnooping proxy-report.....	475
show igmpsnooping querier	478
show igmpsnooping ssm	475
show igmpsnooping	473
show interface counters	155
show interface dampening.....	614
show interface ethernet switchport	160
show interface ethernet	156
show interface lag.....	160
show interface loopback.....	655
show interface media-type.....	307
show interface tunnel.....	654
show interface	153
show interfaces cos-queue.....	743
show interfaces hardware profile eth-mux	203
show interfaces hardware profile	202
show interfaces random-detect	744
show interfaces status err-disabled	524
show interfaces status	154
show interfaces switchport	359
show interfaces switchport	360
show interfaces switchport	366
show interfaces tail-drop-threshold	744
show interfaces traffic	154
show ip access-lists.....	784
show ip address-conflict.....	228
show ip arp inspection interfaces	467
show ip arp inspection statistics	466
show ip arp inspection	465
show ip bootpdhcprelay	584
show ip brief.....	542
show ip dhcp binding.....	219
show ip dhcp conflict.....	221
show ip dhcp force-client-id.....	454
show ip dhcp global configuration.....	220
show ip dhcp option-61	222
show ip dhcp pool configuration	220
show ip dhcp server statistics	221
show ip dhcp snooping binding	458
show ip dhcp snooping database.....	459
show ip dhcp snooping interfaces	459
show ip dhcp snooping statistics.....	460
show ip dhcp snooping	458

show ip dvmrp interface	817
show ip dvmrp neighbor	818
show ip dvmrp nexthop	818
show ip dvmrp prune	819
show ip dvmrp route	819
show ip dvmrp	817
show ip helper statistics	590
show ip helper-address	589
show ip http	78
show ip igmp groups	837
show ip igmp interface membership	839
show ip igmp interface stats	839
show ip igmp interface	838
show ip igmp	837
show ip igmp-proxy groups detail	843
show ip igmp-proxy groups	842
show ip igmp-proxy interface	841
show ip igmp-proxy	841
show ip interface brief	544
show ip interface	542
show ip irdp	572
show ip load-sharing	545
show ip mcast boundary	809
show ip mcast interface	809
show ip mcast mroute group	813
show ip mcast mroute source	814
show ip mcast mroute static	814
show ip mcast	809
show ip mfc	826
show ip mroute	810
show ip name source-interface	227
show ip ospf abr	621
show ip ospf area	622
show ip ospf asbr	623
show ip ospf database database-summary	624
show ip ospf database	623
show ip ospf interface brief	626
show ip ospf interface stats	627
show ip ospf interface	625
show ip ospf lsa-group	628
show ip ospf neighbor	629
show ip ospf range	631
show ip ospf statistics	631
show ip ospf stub table	632
show ip ospf traffic	633
show ip ospf virtual-link brief	634
show ip ospf virtual-link	634
show ip ospf	618
show ip pim bsr-router	830

show ip pim interface	828
show ip pim neighbor	829
show ip pim rp mapping	831
show ip pim rp-hash	831
show ip pim ssm	828
show ip pim statistics	832
show ip pim	827
show ip policy	566
show ip prefix-list	566
show ip protocols	545
show ip rip interface brief	640
show ip rip interface	640
show ip rip	639
show ip route ecmp-groups	550
show ip route hw-failure	550
show ip route net-prototype	551
show ip route preferences	553
show ip route summary	551
show ip route	547
show ip source binding	462
show ip ssh	70
show ip stats	554
show ip verify interface	462
show ip verify source	461
show ip vlan	575
show ip vrrp interface brief	582
show ip vrrp interface stats	580
show ip vrrp interface	581
show ip vrrp	580
show ipv6 access-lists	794
show ipv6 brief	668
show ipv6 dhcp binding	723
show ipv6 dhcp interface	671
show ipv6 dhcp interface	722
show ipv6 dhcp pool	723
show ipv6 dhcp snooping binding	731
show ipv6 dhcp snooping database	732
show ipv6 dhcp snooping interfaces	732
show ipv6 dhcp snooping statistics	732
show ipv6 dhcp snooping	730
show ipv6 dhcp statistics	722
show ipv6 dhcp	721
show ipv6 interface vlan	671
show ipv6 interface	669
show ipv6 mld groups	861
show ipv6 mld interface	863
show ipv6 mld traffic	864
show ipv6 mld-proxy groups detail	868
show ipv6 mld-proxy groups	867

show ipv6 mld-proxy interface.....	866
show ipv6 mld-proxy	866
show ipv6 mroute group.....	846
show ipv6 mroute source	847
show ipv6 mroute static	847
show ipv6 mroute	846
show ipv6 nd rguard policy.....	672
show ipv6 neighbors	672
show ipv6 ospf abr	707
show ipv6 ospf area.....	707
show ipv6 ospf asbr	708
show ipv6 ospf database database-summary	709
show ipv6 ospf database	709
show ipv6 ospf interface brief.....	711
show ipv6 ospf interface stats	711
show ipv6 ospf interface.....	710
show ipv6 ospf lsa-group.....	712
show ipv6 ospf max-metric	713
show ipv6 ospf neighbor	714
show ipv6 ospf range.....	715
show ipv6 ospf statistics.....	715
show ipv6 ospf stub table	716
show ipv6 ospf virtual-link brief.....	717
show ipv6 ospf virtual-link.....	717
show ipv6 ospf	704
show ipv6 pim bsr-router.....	857
show ipv6 pim interface	855
show ipv6 pim neighbor	856
show ipv6 pim rp mapping	858
show ipv6 pim rp-hash	858
show ipv6 pim ssm	855
show ipv6 pim	854
show ipv6 prefix-list.....	567
show ipv6 protocols	673
show ipv6 route ecmp-groups.....	675
show ipv6 route hw-failure	676
show ipv6 route net-prototype	676
show ipv6 route preferences	677
show ipv6 route summary	677
show ipv6 route.....	673
show ipv6 snooping counters	679
show ipv6 source binding	735
show ipv6 traffic.....	680
show ipv6 verify source	734
show ipv6 verify	734
show ipv6 vlan	679
show iscsi sessions.....	805
show iscsi.....	804
show isdp entry	520

show isdp interface	519
show isdp neighbors.....	520
show isdp traffic	521
show isdp	518
show keepalive statistics	340
show keepalive	340
show lacp actor	421
show lacp partner	421
show link state group detail	400
show link state group	400
show lldp interface.....	495
show lldp local-device detail	499
show lldp local-device	498
show lldp med interface	502
show lldp med local-device detail.....	503
show lldp med remote-device detail.....	504
show lldp med remote-device	504
show lldp med	501
show lldp remote-device detail	497
show lldp remote-device	497
show lldp statistics	496
show lldp	495
show llpf interface	401
show logging backtrace	199
show logging buffered	179
show logging email config	184
show logging email statistics	184
show logging errcounter	199
show logging hosts	179
show logging persistent.....	180
show logging traplogs	181
show logging	178
show login session long	80
show login session.....	79
show mac access-lists	772
show mac-address-table gmrp.....	371
show mac-address-table igmpsnooping.....	475
show mac-address-table mldsnooping	485
show mac-address-table multicast	515
show mac-address-table static	445
show mac-address-table staticfiltering.....	445
show mac-address-table stats	516
show mac-addr-table.....	163
show mac-learn	312
show mail-server config	186
show mbuf total	263
show mbuf	262
show mldsnooping mrouter interface.....	484
show mldsnooping mrouter vlan	484

show mldsnooping querier.....	488
show mldsnooping ssm entries	484
show mldsnooping ssm groups	485
show mldsnooping ssm stats	485
show mldsnooping	483
show monitor session	440
show msg-queue	263
show mvr interface.....	405
show mvr members	405
show mvr traffic.....	405
show mvr	404
show network ipv6 dhcp statistics	724
show network ipv6 neighbors	651
show network	61
show packet-trace ecmp.....	265
show packet-trace lag.....	265
show packet-trace packet-data	265
show packet-trace port eth	267
show packet-trace port ipv4	268
show packet-trace port ipv6	268
show packet-trace port tcpv4	269
show packet-trace port tcpv6	269
show packet-trace port udpv4	269
show packet-trace port udpv6	269
show packet-trace port	266
show passwords configuration.....	99
show passwords result	99
show platform vpd	152
show policy-map interface	766
show policy-map	763
show port advertise.....	309
show port description	310
show port L2-port-bridge	527
show port multicast.....	525
show port protocol.....	347
show port.....	308
show port-channel brief.....	421
show port-channel counters.....	423
show port-channel hash multicast.....	424
show port-channel system priority	423
show port-channel.....	422
show port-security dynamic	491
show port-security static	492
show port-security violation	492
show port-security	491
show process app-list	164
show process app-resource-list.....	165
show process cpu	166
show process proc-list	167

show protection-group	744
show radius accounting statistics	132
show radius accounting	131
show radius servers	128
show radius servers	129
show radius source-interface	133
show radius statistics	133
show radius	129
show rmon collection history	289
show rmon events	290
show rmon hcalarms.....	295
show rmon history	291
show rmon log	293
show rmon statistics interfaces.....	293
show rmon	288
show route-map	568
show routing heap summary	554
show running-config interface	168
show running-config vpc.....	429
show running-config	167
show sdm prefer	282
show serial.....	64
show service-policy	767
show serviceport ipv6 dhcp statistics	725
show serviceport ipv6 neighbors	652
show serviceport	62
show sflow agent.....	278
show sflow pollers.....	278
show sflow receivers.....	279
show sflow remote-agents	280
show sflow samplers.....	280
show sflow source-interface.....	280
show sfp	201
show snmp engineID	116
show snmp filters.....	116
show snmp group.....	116
show snmp source-interface.....	117
show snmp user.....	117
show snmp views	117
show snmp	115
show snmp-server	117
show snmp-server	119
show snmp client	207
show snmp server.....	207
show snmp source-interface.....	208
show snmp	206
show spanning-tree backbonefast.....	327
show spanning-tree brief	328
show spanning-tree interface.....	329

show spanning-tree mst detailed	330
show spanning-tree mst port detailed	331
show spanning-tree mst port summary active	334
show spanning-tree mst port summary	333
show spanning-tree mst summary	335
show spanning-tree summary	335
show spanning-tree uplinkfast	336
show spanning-tree vlan	336
show spanning-tree	326
show stats flow-based	301
show stats group	300
show storm-control	397
show switchport protected	365
show sysinfo	171
show tacacs source-interface	138
show tacacs	138
show tech-support	172
show telnet	68
show telnetcon	68
show terminal length	173
show time-range	797
show trapflags	118
show users accounts	90
show users login-history [long]	92
show users login-history [username]	92
show users long	90
show users	90
show version	152
show vlan association mac	352
show vlan association subnet	351
show vlan brief	350
show vlan internal usage	350
show vlan multicast	525
show vlan port	351
show vlan remote-span	442
show vlan	349
show voice vlan	362
show vpc brief	430
show vpc consistency-parameters	431
show vpc peer-keepalive	432
show vpc role	433
show vpc statistics	433
show vpc	430
show xxx begin "string"	149
show xxx exclude "string"	149
show xxx include "string" exclude "string2"	148
show xxx include "string"	148
show xxx section "string" "string2"	150
show xxx section "string" include "string2"	150

show xxx section "string"	149
show	169
shutdown all	306
shutdown	306
snmp trap link-status all	108
snmp trap link-status	108
snmp-server community	106
snmp-server community-group	106
snmp-server enable traps all	107
snmp-server enable traps all	118
snmp-server enable traps linkmode	109
snmp-server enable traps multiusers	109
snmp-server enable traps sfp	200
snmp-server enable traps stpmode	110
snmp-server enable traps violation	107
snmp-server enable traps	107
snmp-server engineID local	110
snmp-server filter	111
snmp-server group	111
snmp-server host	112
snmp-server port	108
snmp-server user	112
snmp-server v3-host	113
snmp-server view	113
snmp-server	105
snmptrap ip6addr snmpversion	115
snmptrap ipaddr snmpversion	115
snmptrap source-interface	114
sntp broadcast client poll-interval	203
sntp client mode	203
sntp client port	204
sntp multicast client poll-interval	205
sntp server	205
sntp source-interface	206
sntp unicast client poll-interval	204
sntp unicast client poll-retry	205
sntp unicast client poll-timeout	204
spanning-tree auto-edge	312
spanning-tree backbonefast	313
spanning-tree bpdupfilter default	314
spanning-tree bpdupfilter	314
spanning-tree bpdupflood	314
spanning-tree bpduguard	315
spanning-tree bpdumigrationcheck	315
spanning-tree configuration name	315
spanning-tree configuration revision	316
spanning-tree cost	316
spanning-tree edgeport	316
spanning-tree forceversion	317

spanning-tree forward-time	317
spanning-tree guard	318
spanning-tree max-age	318
spanning-tree max-hops	318
spanning-tree mode	319
spanning-tree mst instance	320
spanning-tree mst priority	320
spanning-tree mst vlan	321
spanning-tree mst	319
spanning-tree port mode all	322
spanning-tree port mode	321
spanning-tree port-priority	322
spanning-tree tcnguard	322
spanning-tree transmit	323
spanning-tree uplinkfast	323
spanning-tree vlan cost	324
spanning-tree vlan forward-time	324
spanning-tree vlan hello-time	324
spanning-tree vlan max-age	325
spanning-tree vlan port-priority	325
spanning-tree vlan priority	326
spanning-tree vlan root	325
spanning-tree vlan	324
spanning-tree	312
speed all	307
speed	307
split-horizon	639
sshcon maxsessions	70
sshcon timeout	70
stats flow-based reporting	298
stats flow-based	298
stats flow-based	299
stats group	297
stats group	299
storm-control broadcast action	392
storm-control broadcast level	393
storm-control broadcast rate	393
storm-control broadcast	392
storm-control multicast action	394
storm-control multicast level	394
storm-control multicast rate	395
storm-control multicast	394
storm-control unicast action	396
storm-control unicast level	396
storm-control unicast rate	397
storm-control unicast	395
switchport access vlan	359
switchport mode private-vlan	356
switchport mode	357

switchport private-vlan	355
switchport protected (Global Config)	365
switchport protected (Interface Config)	365
switchport trunk allowed vlan	357
switchport trunk native vlan	358
system-mac	428
system-priority.....	428
tacacs-server host.....	134
tacacs-server key	135
tacacs-server keystring	135
tacacs-server source-interface.....	136
tacacs-server timeout	136
telnet.....	65
telnetcon maxsessions.....	67
telnetcon timeout.....	67
terminal length	173
timeout	138
time-range	796
timers pacing flood	605
timers pacing lsa-group	606
timers pacing lsa-group	694
timers spf.....	606
timers throttle spf.....	694
traceroute	186
traffic-shape.....	741
transport input telnet.....	65
transport output telnet.....	66
trapflags (OSPF)	606
trapflags (OSPFv3)	695
tunnel destination	654
tunnel mode ipv6ip	654
tunnel source.....	654
username (Global Config)	86
username (Mail Server Config).....	185
username nopassword	88
username snmpv3 accessmode	88
username snmpv3 authentication	88
username snmpv3 encryption encrypted.....	89
username snmpv3 encryption.....	89
username unlock	88
vlan acceptframe	341
vlan association mac	349
vlan association subnet.....	348
vlan database	341
vlan ingressfilter	342
vlan internal allocation	342
vlan makestatic	343
vlan name	343
vlan participation all	343

vlan participation	343
vlan port acceptframe all.....	344
vlan port ingressfilter all	344
vlan port priority all	362
vlan port pvid all	345
vlan port tagging all.....	345
vlan priority.....	362
vlan protocol group add protocol	346
vlan protocol group name.....	346
vlan protocol group.....	345
vlan pvid	348
vlan routing.....	573
vlan tagging	348
vlan	341
voice vlan (Global Config).....	361
voice vlan (Interface Config)	361
voice vlan data priority	361
vpc domain.....	425
vpc peer-link	429
vpc	429
watchdog clear.....	270
watchdog disable.....	270
watchdog enable	271
write core.....	260
write memory.....	196

CORPORATE OFFICES**Europe, Middle East & Africa**

Lise-Meitner-Straße 3-5
86156 Augsburg
Germany
Tel.: + 49 (0) 821 / 4086 0
Fax: + 49 (0) 821 / 4087 111
info@kontron.com

North America

14118 Stowe Drive
Poway, CA 92064-7147
USA
Tel.: + 1 888 294 4558
Fax: + 1 858 677 0898
info@us.kontron.com

Asia Pacific

17 Building,Block #1, ABP.
188 Southern West 4th Ring Road
Beijing 100070, P.R.China
Tel.: + 86 10 63751188
Fax: + 86 10 83682438
info@kontron.cn