



# KBox N-200 Series

Doc. User Guide, Rev. 1.2

Doc. ID: [To be Determined]

This page has been intentionally left blank

 KBOX N-200 SERIES - USER GUIDE

## Disclaimer

Kontron would like to point out that the information contained in this user guide may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the user guide or any product characteristics set out in the user guide. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this user guide are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this user guide only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This user guide is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this user guide is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this user guide only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners.

©2019 by Kontron AG

Kontron AG

Lise-Meitner-Str. 3-5  
86156 Augsburg  
Germany  
[www.kontron.com](http://www.kontron.com)

## High Risk Applications Hazard Notice

**THIS DEVICE AND ASSOCIATED SOFTWARE ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE FOR THE OPERATION OF NUCLEAR FACILITIES, THE NAVIGATION, CONTROL OR COMMUNICATION SYSTEMS FOR AIRCRAFT OR OTHER TRANSPORTATION, AIR TRAFFIC CONTROL, LIFE SUPPORT OR LIFE SUSTAINING APPLICATIONS, WEAPONS SYSTEMS, OR ANY OTHER APPLICATION IN A HAZARDOUS ENVIRONMENT, OR REQUIRING FAIL-SAFE PERFORMANCE, OR IN WHICH THE FAILURE OF PRODUCTS COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY, "HIGH RISK APPLICATIONS").**

You understand and agree that your use of Kontron devices as a component in High Risk Applications is entirely at your risk. To minimize the risks associated with your products and applications, you should provide adequate design and operating safeguards. You are solely responsible for compliance with all legal, regulatory, safety, and security related requirements concerning your products. You are responsible to ensure that your systems (and any Kontron hardware or software components incorporated in your systems) meet all applicable requirements. Unless otherwise stated in the product documentation, the Kontron device is not provided with error-tolerance capabilities and cannot therefore be deemed as being engineered, manufactured or setup to be compliant for implementation or for resale as device in High Risk Applications. All application and safety related information in this document (including application descriptions, suggested safety measures, suggested Kontron products, and other materials) is provided for reference only.

## Revision History

Revision	Brief Description of Changes	Date of Issue
1.0	Initial Issue	2019-Jan-28
1.1	Update power connector type	2019-Mar-27
1.2	Update product photos with front I/O panel	2019-Jun-19

## Terms and Conditions

Kontron warrants products in accordance with defined regional warranty periods. For more information about warranty compliance and conformity, and the warranty period in your region, visit <http://www.kontron.com/terms-and-conditions>.

Kontron sells products worldwide and declares regional General Terms & Conditions of Sale, and Purchase Order Terms & Conditions. Visit <http://www.kontron.com/terms-and-conditions>.

For contact information, refer to the corporate offices contact information on the last page of this user guide or visit our website [CONTACT US](#).

## Customer Support

Find Kontron contacts by visiting: <http://www.kontron.com/support>.

## Customer Service

As a trusted technology innovator and global solutions provider, Kontron extends its embedded market strengths into a services portfolio allowing companies to break the barriers of traditional product lifecycles. Proven product expertise coupled with collaborative and highly-experienced support enables Kontron to provide exceptional peace of mind to build and maintain successful products.

For more details on Kontron's service offerings such as: enhanced repair services, extended warranty, Kontron training academy, and more visit <http://www.kontron.com/support-and-services/services>.

## Customer Comments

If you have any difficulties using this user guide, discover an error, or just want to provide some feedback, contact [Kontron support](#). Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website.

## Symbols

The following symbols may be used in this user guide

### **⚠ DANGER**

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

### **⚠ WARNING**

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

### **NOTICE**

NOTICE indicates a property damage message.

### **⚠ CAUTION**

CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Electric Shock!

This symbol and title warn of hazards due to electrical shocks (> 60 V) when touching products or parts of products. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.



ESD Sensitive Device!

This symbol and title inform that the electronic boards and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.



HOT Surface!

Do NOT touch! Allow to cool before servicing.



Laser!

This symbol inform of the risk of exposure to laser beam and light emitting devices (LEDs) from an electrical device. Eye protection per manufacturer notice shall review before servicing.



This symbol indicates general information about the product and the user guide.

This symbol also indicates detail information about the specific product configuration.



This symbol precedes helpful hints and tips for daily use.

## For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

### High Voltage Safety Instructions

As a precaution and in case of danger, the power connector must be easily accessible. The power connector is the product's main disconnect device.

#### **CAUTION**

##### Warning

All operations on this product must be carried out by sufficiently skilled personnel only.

#### **CAUTION**



##### Electric Shock!

Before installing a non hot-swappable Kontron product into a system always ensure that your mains power is switched off. This also applies to the installation of piggybacks. Serious electrical shock hazards can exist during all installation, repair, and maintenance operations on this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing any work on this product.

Earth ground connection to vehicle's chassis or a central grounding point shall remain connected. The earth ground cable shall be the last cable to be disconnected or the first cable to be connected when performing installation or removal procedures on this product.

### Special Handling and Unpacking Instruction

#### **NOTICE**



##### ESD Sensitive Device!

Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the product is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the product.

## Lithium Battery Precautions

If your product is equipped with a lithium battery, take the following precautions when replacing the battery.

### **⚠ CAUTION**

---

**Danger of explosion if the battery is replaced incorrectly.**

- ▶ Replace only with same or equivalent battery type recommended by the manufacturer.
  - ▶ Dispose of used batteries according to the manufacturer's instructions.
- 

## General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the product, that are not explicitly approved by Kontron and described in this user guide or received from Kontron Support as a special handling instruction, will void your warranty.

This product should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This also applies to the operational temperature range of the specific board version that must not be exceeded. If batteries are present, their temperature restrictions must be taken into account.

In performing all necessary installation and application operations, only follow the instructions supplied by the present user guide.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the product then re-pack it in the same manner as it was delivered.

Special care is necessary when handling or unpacking the product. See Special Handling and Unpacking Instruction.

## Quality and Environmental Management

Kontron aims to deliver reliable high-end products designed and built for quality, and aims to complying with environmental laws, regulations, and other environmentally oriented requirements. For more information regarding Kontron's quality and environmental responsibilities, visit <http://www.kontron.com/about-kontron/corporate-responsibility/quality-management>.

## Disposal and Recycling

Kontron's products are manufactured to satisfy environmental protection requirements where possible. Many of the components used are capable of being recycled. Final disposal of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

## WEEE Compliance

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to:

- ▶ Reduce waste arising from electrical and electronic equipment (EEE)
- ▶ Make producers of EEE responsible for the environmental impact of their products, especially when the product become waste
- ▶ Encourage separate collection and subsequent treatment, reuse, recovery, recycling and sound environmental disposal of EEE
- ▶ Improve the environmental performance of all those involved during the lifecycle of EEE




---

**Environmental protection is a high priority with Kontron.**

**Kontron follows the WEEE directive**

**You are encouraged to return our products for proper disposal.**

---

# Table of Contents

Symbols.....	6
<b>For Your Safety</b> .....	<b>7</b>
High Voltage Safety Instructions .....	7
Special Handling and Unpacking Instruction .....	7
Lithium Battery Precautions.....	8
<b>General Instructions on Usage</b> .....	<b>8</b>
<b>Quality and Environmental Management</b> .....	<b>8</b>
Disposal and Recycling.....	8
WEEE Compliance.....	8
<b>Table of Contents</b> .....	<b>9</b>
<b>List of Tables</b> .....	<b>11</b>
<b>List of Figures</b> .....	<b>11</b>
<b>1/ General Safety Instructions for IT Equipment</b> .....	<b>13</b>
1.1. Electrostatic Discharge (ESD).....	15
1.1.1. Grounding Methods .....	15
1.2. Lithium Battery Replacement .....	15
<b>2/ Electromagnetic Compatibility</b> .....	<b>17</b>
2.1. Electromagnetic Compatibility (EU).....	17
2.2. FCC Statement (USA).....	17
2.3. EMC Compliance (Canada) .....	17
<b>3/ Shipment and Unpacking</b> .....	<b>18</b>
3.1. Unpacking .....	18
3.2. Scope of Delivery .....	18
3.2.1. Standard .....	18
3.2.2. Optional Parts .....	18
<b>4/ System Overview</b> .....	<b>19</b>
4.1. System Expansion Capabilities .....	19
4.1.1. System Expansion via mSATA / mPCIe Interface .....	20
4.1.2. System Expansion via M.2 Card Interface.....	20
4.1.3. System Expansion via Micro SIM Socket .....	20
4.2. Front I/O Panel.....	21
4.2.1. Power Button with LED.....	21
4.2.2. Storage LED .....	22
4.2.3. Wireless LED.....	22
4.2.4. User-defined LED.....	22
4.2.5. Wi-Fi Antenna Port.....	22
4.2.6. 3G / 4G Antenna Port.....	22
4.3. Rear I/O Panel .....	23
4.3.1. DC-In Jack .....	23
4.3.2. GbE.....	23
4.3.3. RS232 .....	24
4.3.4. Reset Button.....	24
4.3.5. Wafer for External Power Switch.....	24
4.4. Internal View.....	25
4.4.1. DDR4 SO-DIMM Memory Socket .....	25
4.4.2. mSATA / mPCIe Socket .....	26

4.4.3. M.2 Socket.....	26
4.4.4. Micro SIM Card Cage.....	26
4.4.5. mPCIe / mSATA Selection Jumper.....	26
4.4.6. M.2 Key B PCIe / SATA Selection Jumper .....	27
4.4.7. USB Power Selection Jumper .....	27
4.4.8. COM1 Pin-9 Selection Jumper.....	27
<b>5/ Accessing Internal Components.....</b>	<b>29</b>
5.1. Opening and Closing the KBox N-200 Series .....	30
5.1.1. Installing an mPCIe expansion card / mSATA SSD .....	31
5.1.2. Installing an M.2 SSD / M.2 expansion card .....	31
5.1.3. Installing the Micro SIM card .....	32
<b>6/ Thermal Considerations .....</b>	<b>34</b>
6.1. Available Processors.....	34
6.2. Convection Cooling .....	34
6.3. System Clearance.....	34
6.4. Maximum Temperatures.....	34
6.5. Third Party Components.....	34
<b>7/ Installation Instructions.....</b>	<b>35</b>
7.1. System Mounting .....	36
7.2. DC Power Connection.....	39
<b>8/ Starting Up.....</b>	<b>40</b>
8.1. Connecting to DC Power Supply.....	40
8.2. Operating System and Hardware Component Drivers .....	41
<b>9/ Maintenance and Cleaning.....</b>	<b>42</b>
<b>10/ Technical Specifications.....</b>	<b>43</b>
10.1. Mechanical Specifications.....	44
10.1.1. Mechanical Drawing.....	44
10.2. Environmental Conditions .....	45
10.3. Standards and Certifications .....	45
<b>11/ Standard Interfaces – Pin Assignments .....</b>	<b>46</b>
11.1.1. DC Jack.....	46
11.1.2. Ethernet Connectors.....	46
11.1.3. USB 3.0 Port.....	46
11.1.4. RS232 Serial Port .....	47
11.1.5. Wafer for External Power Switch.....	47
<b>12/ uEFI BIOS .....</b>	<b>48</b>
12.1. Starting the uEFI BIOS .....	48
12.2. Setup Menus.....	49
12.2.1. Main Setup Menu .....	49
12.2.2. Advanced Setup Menu.....	51
12.2.3. Power Setup Menu.....	64
12.2.4. Boot Setup Menu.....	66
12.2.5. Security Setup Menu .....	67
12.2.5.1. Remember the password .....	68
12.2.6. Save & Exit Setup Menu .....	69
<b>Appendix A: List of Acronyms.....</b>	<b>70</b>
About Kontron .....	71

## List of Tables

Table 1: Power LED Status .....	21
Table 2: Pin Assignment JP3 .....	26
Table 3: Pin Assignment JP2 .....	27
Table 4: Pin Assignment JP6 .....	27
Table 5: Pin Assignment JP7 .....	28
Table 6: Fixing bolt extensions and fastening screw .....	31
Table 7: Installation configuration of M.2 SSD / M.2 expansion card .....	32
Table 8: Technical Specifications .....	43
Table 9: Mechanical Specifications .....	44
Table 10: Environmental Conditions .....	45
Table 11: Standards and Certifications .....	45
Table 12: DC Jack (see Figure 2, pos.1) .....	46
Table 13: Ethernet Connector (see Figure 2, pos. 2) .....	46
Table 14: USB 3.0 Port (see Figure 1, pos. 5) .....	46
Table 15: RS232 Serial Port (see Figure 2, pos. 3) .....	47
Table 16: Wafer for External Power Switch (see Figure 2, pos. 5) .....	47
Table 17: Navigation Hot Keys Available in the Legend Bar .....	48
Table 18: Main Setup Menu Sub-Screens and Functions .....	49
Table 19: List of Acronyms .....	70

## List of Figures

Figure 1: Front I/O Panel .....	21
Figure 2: Rear I/O Panel .....	23
Figure 3: Ethernet LED Status .....	23
Figure 4: Internal view (without cover) .....	25
Figure 5: mPCIe / mSATA Selection Jumper (JP3) .....	26
Figure 6: M.2 Key B PCIe / SATA Selection Jumper (JP2) .....	27
Figure 7: USB Power Selection Jumper (JP6) .....	27
Figure 8: COM1 Pin-9 Selection Jumper (JP7) .....	27
Figure 9: Descrewing the access cover of the KBox N-200 Series .....	30
Figure 10: Location of M.2 sockets and fix bolts .....	32
Figure 11: Installing the Micro SIM card .....	33
Figure 12: Optional VESA mounting kit .....	36
Figure 13: Hole pattern of base mounting kit for KBox N-200 Series .....	36
Figure 14: Securing the base mounting bracket .....	37
Figure 15: Securing the hooked mounting bracket onto the KBox N-200 Series .....	37
Figure 16: Securing the KBox N-200 Series onto the mounting surface .....	37
Figure 17: Mechanical Drawing .....	44
Figure 18: BIOS Main Menu Screen System Data and Time .....	50
Figure 19: BIOS Advanced Menu .....	52
Figure 20: BIOS Advanced Menu - FIA HSI010 Configuration .....	53
Figure 21: BIOS Advanced Menu - CPU Chipset Configuration .....	54
Figure 22: BIOS Advanced Menu - NVMe Configuration .....	55
Figure 23: BIOS Advanced Menu - SATA Configuration .....	56
Figure 24: BIOS Advanced Menu - USB Configuration .....	57
Figure 25: BIOS Advanced Menu - Network Stack Configuration .....	58
Figure 26: BIOS Advanced Menu - Super IO Configuration .....	59
Figure 27: BIOS Advanced Menu - Super IO Configuration - Serial Port 1 Configuration .....	59
Figure 28: BIOS Advanced Menu - Serial Port Console Configuration .....	60
Figure 29: BIOS Advanced Menu - Serial Port Console Configuration - COM1 Console Redirection Settings .....	60
Figure 30: BIOS Advanced Menu - Serial Port Console Configuration - Legacy Console Redirection Settings .....	61
Figure 31: BIOS Advanced Menu - H/W Monitor .....	63
Figure 32: BIOS Power Setup Menu .....	64

Figure 33: BIOS Power Setup Menu - WatchDog Timer Configuration..... 65  
Figure 34: BIOS Boot Setup Menu ..... 66  
Figure 35: BIOS Security Setup Menu..... 67  
Figure 36: BIOS Save & Exit Setup Menu ..... 69

# 1/ General Safety Instructions for IT Equipment

## **⚠ WARNING**

Please read this chapter carefully and take careful note of the instructions, which have been compiled for your safety and to ensure to apply in accordance with intended regulations. If the following general safety instructions are not observed, it could lead to injuries to the operator and/or damage of the product; in cases of nonobservance of the instructions Kontron is exempt from accident liability, this also applies during the warranty period.

The product has been built and tested according to the basic safety requirements for low voltage (LVD) applications and has left the manufacturer in safety-related, flawless condition. To maintain this condition and also to ensure safe operation, the operator must not only observe the correct operating conditions for the product but also the following general safety instructions:

- ▶ The product must be used as specified in the product documentation, in which the instructions for safety for the product and for the operator are described. These contain guidelines for setting up, installation and assembly, maintenance, transport or storage.
- ▶ The on-site electrical installation must meet the requirements of the country's specific local regulations.
- ▶ If a power cable comes with the product, only this cable should be used. Do not use an extension cable to connect the product.
- ▶ To guarantee that sufficient air circulation is available to cool the product, please ensure that the ventilation openings are not covered or blocked. If an air filter is provided, this should be cleaned regularly. Do not place the system close to heat sources or damp places. Make sure the system is well ventilated.
- ▶ Only devices or parts which fulfill the requirements of SELV circuits (Safety Extra Low Voltage) as stipulated by IEC 60950-1 may be connected to the available interfaces.
- ▶ Before opening the device, make sure that the device is disconnected from the mains.
- ▶ Switching off the device by its power button does not disconnect it from the mains. Complete disconnection is only possible if the power cable is removed from the wall plug or from the device. Ensure that there is free and easy access to enable disconnection.
- ▶ The device may only be opened for the insertion or removal of add-on cards (depending on the configuration of the system). This may only be carried out by qualified operators.
- ▶ If extensions are being carried out, the following must be observed:
  - ▶ All effective legal regulations and all technical data are adhered to.
  - ▶ The power consumption of any add-on card does not exceed the specified limitations.
  - ▶ The current consumption of the system does not exceed the value stated on the product label.
- ▶ Only original accessories that have been approved by Kontron can be used.
- ▶ Please note: safe operation is no longer possible when any of the following applies:
  - ▶ The device has visible damages.
  - ▶ The device is no longer functioning.

In this case the device must be switched off and it must be ensured that the device can no longer be operated.

**Additional safety instructions for DC power supply circuits**

- ▶ To guarantee safe operation of devices with DC power supply voltages larger than 60 volts DC or a power consumption larger than 240 VA, please observe that:
  - ▶ the device is set up, installed and operated in a room or enclosure marked with "RESTRICTED ACCESS", if there are no safety messages on product as safety signs and labels on the device itself.
  - ▶ no cables or parts without insulation in electrical circuits with dangerous voltage or power should be touched directly or indirectly
  - ▶ a reliable protective earthing connection is provided
  - ▶ a suitable, easily accessible disconnecting device is used in the application (e.g. overcurrent protective device), if the device itself is not disconnectable
  - ▶ a disconnect device, if provided in or as part of the equipment, shall disconnect both poles simultaneously
  - ▶ interconnecting power circuits of different devices cause no electrical hazards
- ▶ A sufficient dimensioning of the power cable wires must be selected – according to the maximum electrical specifications on the product label – as stipulated by EN60950-1 or VDE0100 or EN60204 or UL508 regulations.
- ▶ The devices do not generally fulfill the requirements for "centralized DC power systems" (UL 60950-1, Annex NAB; D2) and therefore may not be connected to such devices!

## 1.1. Electrostatic Discharge (ESD)




---

A sudden discharge of electrostatic electricity can destroy static-sensitive devices or micro-circuitry.

---

Therefore proper packaging and grounding techniques are necessary precautions to prevent damage. Always take the following precautions:

1. Transport boards in ESD-safe containers such as boxes or bags.
2. Keep electrostatic sensitive parts in their containers until they arrive at the ESD-safe workplace.
3. Always be properly grounded when touching a sensitive board, component, or assembly.
4. Store electrostatic-sensitive boards in protective packaging or on antistatic mats.

### 1.1.1. Grounding Methods

By adhering to the guidelines below, electrostatic damage to the device can be avoided:

1. Cover workstations with approved antistatic material. Always wear a wrist strap connected to workplace. Always use properly grounded tools and equipment.
2. Use antistatic mats, heel straps, or air ionizers for more protection.
3. Always handle electrostatically sensitive components by their edge or by their casing.
4. Avoid contact with pins, leads, or circuitry.
5. Turn off power and input signals before inserting and removing connectors or connecting test equipment.
6. Keep work area free of non-conductive materials such as ordinary plastic assembly aids and Styrofoam.
7. Use only field service tools which are conductive, such as cutters, screwdrivers, and vacuum cleaners.
8. Always place drives and boards PCB-assembly-side down on the foam.

## 1.2. Lithium Battery Replacement

If replacing the lithium battery, follow the replacement precautions stated below.

### **▲WARNING**

**Do not ingest battery, Chemical Burn Hazard**

This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Replacement of a battery with an incorrect type, that can result in an explosion.

Replace only with the same or equivalent type recommended by the manufacturer. The lithium battery type must be UL recognized.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas

---

---

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas

---



---

Do not dispose of lithium batteries in general trash collection. Dispose of the battery according to the local regulations dealing with the disposal of these special materials, (e.g. to the collecting points for dispose of batteries).

---

## 2/ Electromagnetic Compatibility

For detailed information refer to section 10.3 "CE Directives and Standards".

### 2.1. Electromagnetic Compatibility (EU)

This product is intended only for use in industrial areas. The most recent version of the EMC guidelines (EMC Directive 2004/108/EC) apply. If the user modifies and/or adds to the equipment (e.g. installation of add-on cards) the prerequisites for the CE conformity declaration (safety requirements) may no longer apply.

**▲ WARNING**

---

**This is a class B product. In domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.**

---

### 2.2. FCC Statement (USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### 2.3. EMC Compliance (Canada)

The method of compliance is self-declaration to Canadian standard ICES-003:

(English): This Class B digital apparatus complies with the Canadian ICES-003.

(French): Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada.

## 3/ Shipment and Unpacking

Please check that your package is complete, and contains the items below (according to the ordered unit configuration). If you discover damaged or missing items, please contact your dealer.

### 3.1. Unpacking

Proceed as follows to unpack the unit:

1. Remove packaging.
2. Do not discard the original packaging. Keep it for future relocation.
3. Check the delivery for completeness by comparing it with your order.
4. Please keep the associated paperwork. It contains important information for handling the unit.
5. Check the contents for visible shipping damage.
6. If you notice any shipping damage or inconsistencies between the contents and your order, please contact Kontron for help and information.

### 3.2. Scope of Delivery

#### 3.2.1. Standard

- ▶ 1x KBox N-200 Series (corresponding to the ordered system configuration)
- ▶ 1x Power adapter
- ▶ 1x Power cord (plug type depending on country)

#### 3.2.2. Optional Parts

- ▶ Memory module (It may be pre-installed in the system depending on ordered configuration.)
- ▶ mSATA SSD (It may be pre-installed in the system depending on ordered configuration.)
- ▶ mPCIe expansion card (It may be pre-installed in the system depending on ordered configuration.)
- ▶ M.2 Key B SSD (It may be pre-installed in the system depending on ordered configuration.)
- ▶ M.2 Key B expansion card (It may be pre-installed in the system depending on ordered configuration.)
- ▶ M.2 Key M SSD (It may be pre-installed in the system depending on ordered configuration.)
- ▶ Antenna(s)
- ▶ VESA mounting kit

## 4/ System Overview

The KBox N-200 Series is a fanless system enclosed within a compact aluminum chassis with cooling fins, offering the superior qualities for network security controls.

It can be optionally factory-equipped with an mPCIe WLAN card and / or an M.2 (Key B) 3G / 4G card. Users may choose the implementation of an mSATA SSD card, an M.2 Key B SSD card and / or an M.2 Key M SSD card as storage media.

The following interfaces are available with the KBox N-200 Series:

### Standard Front Panel:

- ▶ 1x Power Button with LED
- ▶ 1x Storage LED
- ▶ 1x Wireless LED
- ▶ 2x User-defined LED
- ▶ 2x USB 3.0
- ▶ 2x Wi-Fi Antenna Port
- ▶ 1x 3G / 4G Antenna Port

### Standard Rear Panel:

- ▶ 4x GbE LAN
- ▶ 1x RS232
- ▶ 1x Lockable DC Jack
- ▶ 1x Reset Button
- ▶ 1x Wafer for External Power Switch

### Standard Baseboard and System Expansion Capabilities:

- ▶ 1x DDR4 SO-DIMM memory socket (DIMM1)
- ▶ 1x full-sized mSATA / mPCIe socket (MPCIE1)
- ▶ 1x M.2 Key B socket (M2B1, type 22x42 or type 30x42)
- ▶ 1x M.2 Key A socket (M2M1, type 22x80 or type 22x42)
- ▶ 1x Micro SIM Card Cage (SIM1)

### The device is designed to be operated in:

- ▶ Vertical position: mounted on the back of the monitor or inside a control cabinet / custom enclosure / machine (with a VESA mounting kit) or
- ▶ Horizontal position: placed as a desktop unit.

### **NOTICE**

When powering on the KBox N-200 Series, make sure that the cooling fins of the chassis are not obstructed (covered) by any objects.

To provide sufficient heat dissipation by the cooling of the device, do not cover the cooling fins of the KBox N-200 Series. Do not place any objects on the device. When installing the system, please keep clearance for air circulation.

## 4.1. System Expansion Capabilities

### 4.1.1. System Expansion via mSATA / mPCIe Interface

The baseboard comes with an onboard mPCIe / mSATA interface connector. The switch between mPCIe and mSATA can be taken via the Jumper JP3 or BIOS. The connector is intended to be used to install an mPCIe WLAN card when mPCIe is enabled (default setting). It is used to install an mSATA SSD drive when mSATA is enabled.

### 4.1.2. System Expansion via M.2 Card Interface

The baseboard comes with two onboard M.2 interface connectors. One supports Key B type 22x42 or type 30x42 and the other supports Key M type 22x80 or type 22x42. An additional fixing bolt extension is required when the Key M socket is installed a type 22x42 card.

The Key B socket is used to install an M.2 3G / 4G modem card or an M.2 PCIe x2 SSD drive when the PCIe x2 interface is routed, or a SATA SSD drive when the SATA interface is routed. The interface between PCIe and SATA can be switched via the Jumper JP2 or BIOS.

The Key M socket is used to install an M.2 PCIe x4 SSD drive. Users can choose an NVMe-capable SSD drive for performance boost.



---

To optimize the system functionality with both Wi-Fi and 3G / 4G, we suggest the following expansion configuration.

- an mPCIe Wi-Fi card in mPCIe / mSATA socket;
  - an M.2 3G / 4G modem card in M.2 Key B socket; and
  - an M.2 SSD drive in M.2 Key M socket.
- 


### 4.1.3. System Expansion via Micro SIM Socket

The baseboard comes with an onboard socket for a Micro SIM card.

In order to use the Micro SIM card reader functionality, a corresponding M.2 modem card must be installed to the M.2 Key B socket of your KBox N-200 Series.

## 4.2. Front I/O Panel

Figure 1: Front I/O Panel

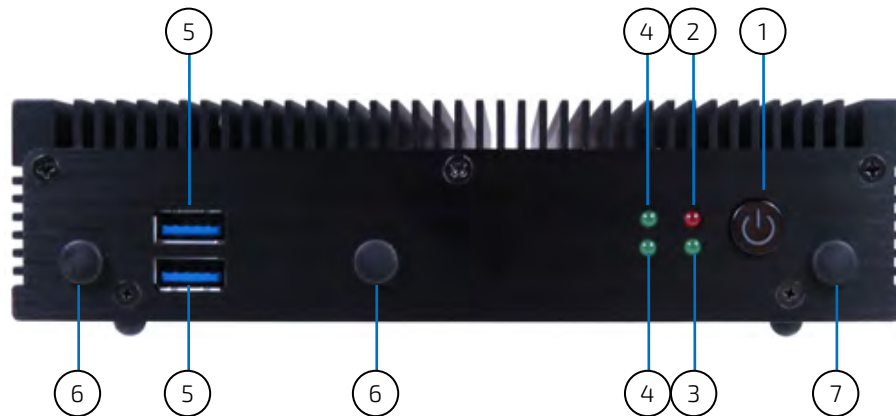

- 1 Power Button with LED (see Chapter 4.2.1)
- 2 Storage LED (see Chapter 4.2.2)
- 3 Wireless LED (see Chapter 4.2.3)
- 4 User-defined LED (see Chapter 4.2.4)
- 5 USB 3.0 (see Chapter 4.2.5)
- 6 Wi-Fi Antenna Port (see Chapter 4.2.6)
- 7 3G / 4G Antenna Port (see Chapter 4.2.7)

### 4.2.1. Power Button with LED

Press this button to turn the system on or off.

The power LED lights up blue if the system powered on.

**Prerequisite:** The system must be attached by means of the power cord to an appropriate mains (DC).

#### **⚠ WARNING**

Even when the system is turned off via the power button there is still a standby voltage on the baseboard. The unit is only completely disconnected from the DC mains, when the power is removed.

Table 1: Power LED Status

LED Status	Description
Blue LED On	S0 Power Status
Blue LED Blink	S1 Power Status
Red LED Blink	S3 Power Status
Red LED On	S4 / S5 Power Status
LED Off	EUP Power Status

#### 4.2.2. Storage LED

The storage LED blinks red when data is being written into or read from the storage media installed in M.2 Key M socket.

#### 4.2.3. Wireless LED

The wireless LED blinks green when the data is transferring over the wireless card installed in M.2 Key B socket.

#### 4.2.4. User-defined LED

The user-defined LED "UD1" and "UD2" light up green when the output value of SoC's GPIO139 pin and GPIO140 pin is equal to the value configured via the BIOS (see Figure 35).

#### 4.2.5. Wi-Fi Antenna Port


The KBox N-200 Series reserves two covered cutouts for the Reverse (RP) SMA connectors of the WLAN antennas (mPCIe WLAN card with 2 antennas is an option).

#### 4.2.6. 3G / 4G Antenna Port

The KBox N-200 Series reserves one covered cutout for the Reverse (RP) SMA connector of the 3G / 4G antenn (M.2 3G / 4G card with 1 antenna is an option).

### 4.3. Rear I/O Panel

Figure 2: Rear I/O Panel

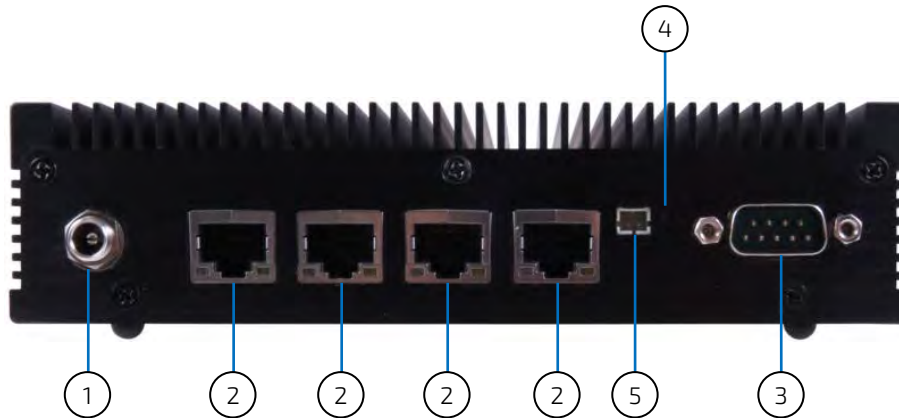

- 1 DC-In Jack (see Chapter 4.3.1)
- 2 GbE (see Chapter 4.3.2)
- 3 RS232 (see Chapter 4.3.3)
- 4 Reset Button (see Chapter 4.3.4)
- 5 Wafer for External Power Switch (see Chapter 4.3.5)

#### 4.3.1. DC-In Jack

For models with DC-In Jack, users can connect the supplied power adapter to this jack for converting AC power to DC. To prevent damage to the PC, always use the supplied power adapter.


**▲WARNING**

Adapter's power cord shall connected to a socket-outlet with earthing connection

#### 4.3.2. GbE

These connectors are Gigabit Ethernet 10/100/1000 Mbit/s, IEEE 1588 capable interfaces. The connectors are standard 8-pin RJ45 type connectors with status LEDs:

Figure 3: Ethernet LED Status

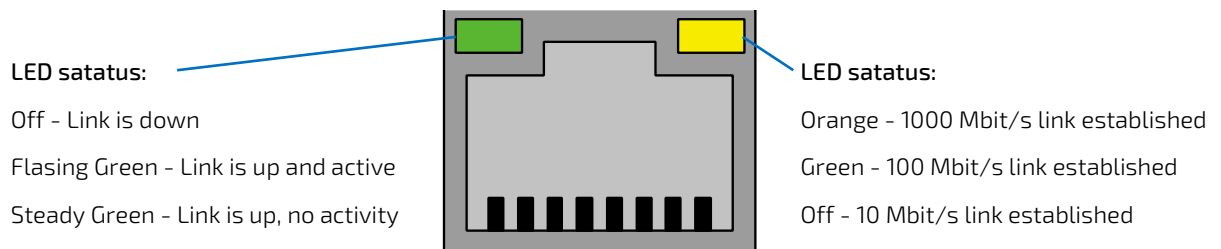

### **4.3.3. RS232**

The COM port is provided as a 9-pin D-SUB connector; it is RS232 configured and allows remote device console management.

### **4.3.4. Reset Button**


Find a paper clip or use the pin of a pen to press this button, allowing users to clear COMS.

### **4.3.5. Wafer for External Power Switch**

This wafer allows integrators to locate an external power button / switch to easily power on and off the system in case the system is intended to be mounted / placed inside a cabinet, custom enclosure or machine.

## 4.4. Internal View

Figure 4: Internal view (without cover)

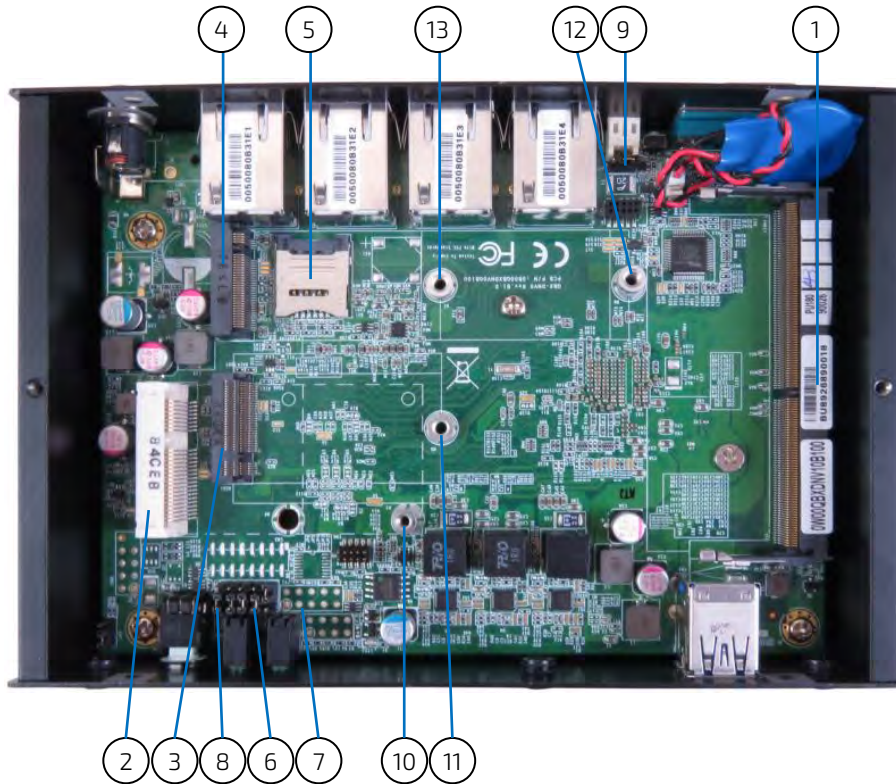

- 1 DDR4 SO-DIMM Memory Socket (DIMM1, see Chapter 4.4.1)
- 2 mSATA / mPCIe Socket (MPCIE1, see Chapter 4.4.2)
- 3 M.2 Key B Socket (M2B1, see Chapter 4.4.3)
- 4 M.2 Key M Socket (M2M1, see Chapter 4.4.3)
- 5 Micro SIM Card Cage (SIM1, see Chapter 4.4.4)
- 6 mPCIe / mSATA Selection Jumper (JP3, see Chapter 4.4.5)
- 7 M.2 Key B PCIe / SATA Selection Jumper (JP2, see Chapter 4.4.6)
- 8 USB Power Selection Jumper (JP6, see Chapter 4.4.7)
- 9 COM1 Pin-9 Selection Jumper (JP7, see Chapter 4.4.8)
- 10 mSATA / mPCIe fixing bolt
- 11 M.2 fixing bolt for Key B type 22x42 / 30x42
- 12 M.2 fixing bolt for Key M type 22x80
- 13 M.2 fixing bolt for Key M type 22x42

### 4.4.1. DDR4 SO-DIMM Memory Socket

The KBox N-200 Series provides one 260-pin DDR4 SO-DIMM socket to install memory RAM.

### 4.4.2. mSATA / mPCIe Socket

The KBox N-200 Series reserves one mPCIe / mSATA combo socket for expansion with a full-sized mPCIe WLAN card by default. To switch to mSATA for SSD installation, see jumper setting at JP3 in Chapter 4.4.5 or Advanced BIOS setting at FIA HSI010 Configuration in Chapter 12.2.2.

### 4.4.3. M.2 Socket

The KBox N-200 Series reserves two M.2 sockets.

One is Key B allowing the expansion with a type 22x42 / type 30x42 3G / 4G modem card or PCIe x2 / SATA SSD drive when the PCIe x2 interface is routed or a SATA SSD drive when the SATA interface is routed. The interface between PCIe and SATA can be switched via the Jumper JP2 (see Chapter 4.4.6) or BIOS (see Chapter 12.2.2 - Advanced - FIA HSI010 Configuration).

The other is Key M allowing the expansion with a type 22x42 / type 22x80 PCIe x4 NVMe SSD drive.



To fix a type 22x42 card in M.2 Key M socket, an additional fixing bolt extension is required to be mounted on the fixing bolt marked in Figure 4, pos. 13.

### 4.4.4. Micro SIM Card Cage

The baseboard of the KBox N-200 Series is equipped with a Micro SIM card cage, which is connected to M.2 Key B socket.



To avoid damage to the Micro SIM card, insert the Micro SIM card before you turn the power on and remove the Micro SIM card after you turn the power off.

### 4.4.5. mPCIe / mSATA Selection Jumper

The Jumper JP3 can switch the mPCIe / mSATA combo socket (MPCIE1) to mPCIe mode for Wi-Fi card installation or mSATA mode for mSATA SSD installation. The default setting is in "mPCIe" mode.

Figure 5: mPCIe / mSATA Selection Jumper (JP3)




Table 2: Pin Assignment JP3

Jumper 1 Position		Description
Pin 1-2	Pin 2-3	
X	-	mPCIe
-	X	mSATA

"X" = Jumper set (short) and "-" = jumper not set (open)

#### 4.4.6. M.2 Key B PCIe / SATA Selection Jumper (JP2)

The Jumper JP2 can switch the M.2 Key B socket (M2B1) to PCIe mode for 3G / 4G modem card / PCIe x2 SSD drive installation or SATA mode for M.2 SATA SSD installation. The default setting is in "PCIe" mode.

Figure 6: M.2 Key B PCIe / SATA Selection Jumper (JP2)




Table 3: Pin Assignment JP2

Jumper 1 Position		Description
Pin 1-2	Pin 2-3	
X	-	PCIe
-	X	SATA

"X" = Jumper set (short) and "-" = jumper not set (open)

#### 4.4.7. USB Power Selection Jumper

The Jumper JP6 can switch the USB power source between +5V and +5VSB. The default setting is "+5V". When the setting is +5VSB, the USB ports remain powered when the system is shut down. When the setting is +5V, the USB ports don't support USB standby power in case of system shutdown.

Figure 7: USB Power Selection Jumper (JP6)




Table 4: Pin Assignment JP6

Jumper 1 Position		Description
Pin 1-2	Pin 2-3	
X	-	+5V
-	X	+5VSB

"X" = Jumper set (short) and "-" = jumper not set (open)

#### 4.4.8. COM1 Pin-9 Selection Jumper

The Jumper JP7 allows users to set the Pin 9 of the COM 1 to receive RI (Ring Indicator) signals from the serial device or provide +5V power to the serial device. The default setting is "RI# input".

Figure 8: COM1 Pin-9 Selection Jumper (JP7)




Table 5: Pin Assignment JP7

Jumper 1 Position		Description
Pin 1-2	Pin 2-3	
X	-	RI# input
-	X	+5V output

"X" = Jumper set (short) and "-" = jumper not set (open)

## 5/ Accessing Internal Components

This section contains important information that you must read before accessing the internal components. You must follow these procedures properly when installing, removing or handling any board.

It is recommended to expand your system with additional storage / expansion cards before it is installed into an equipment, machine or cabinet. Please consider following instruction when you install (or remove) expansion cards.

**Before installing/removing an add-on card, please pay attention to the following information:**

---

**CAUTION**

Please observe the "General Safety Instructions for IT-Equipment" provided with the system (refer to the chapter 1/) and the installation instructions in this manual.

Only personnel with appropriate qualifications, trainings and authorization are permitted to install and work with the device.

The installation/removal of SSD and/or expansion cards may only be performed by a qualified person, according to the description in this manual.

Before removing the cover of the device, make sure that the device is turned off and disconnected from the power supply.

Before you upgrade the device with add-on cards, pay attention to the power specifications in chapter 10/ "Technical Specifications" and make sure that the power consumption of the add-on cards does not exceed 5 W per card.

---



---

Please follow the safety instructions for components that are sensitive to electrostatic discharge (ESD). Failure to observe this warning notice may result in damage to the device or the latter's components.

---



---

Please pay attention to the manufacturer's instructions before installing/removing an add-on card.

---

## 5.1. Opening and Closing the KBox N-200 Series


### **CAUTION**

Before opening the KBox N-200 Series, the system must be switched off and disconnected from the main power supply. Also, disconnect all peripheral devices from the KBox N-200 Series. Before you begin, ensure that you have a clean, flat and ESD-safe surface to work on.

For opening and closing the KBox N-200 Series, please perform the following steps:

1. Close all applications. Shut down the system properly and disconnect the connection to the main power source. Disconnect all peripherals.
2. The KBox N-200 Series should lay on a flat, clean surface with the access cover facing upwards.
3. Loosen and remove the Phillips screws (two located on front I/O panel, two on rear I/O panel and the other two on the bottom), that secure the access cover to the chassis. Retain the screws for later use.

Figure 9: Descrewing the access cover of the KBox N-200 Series

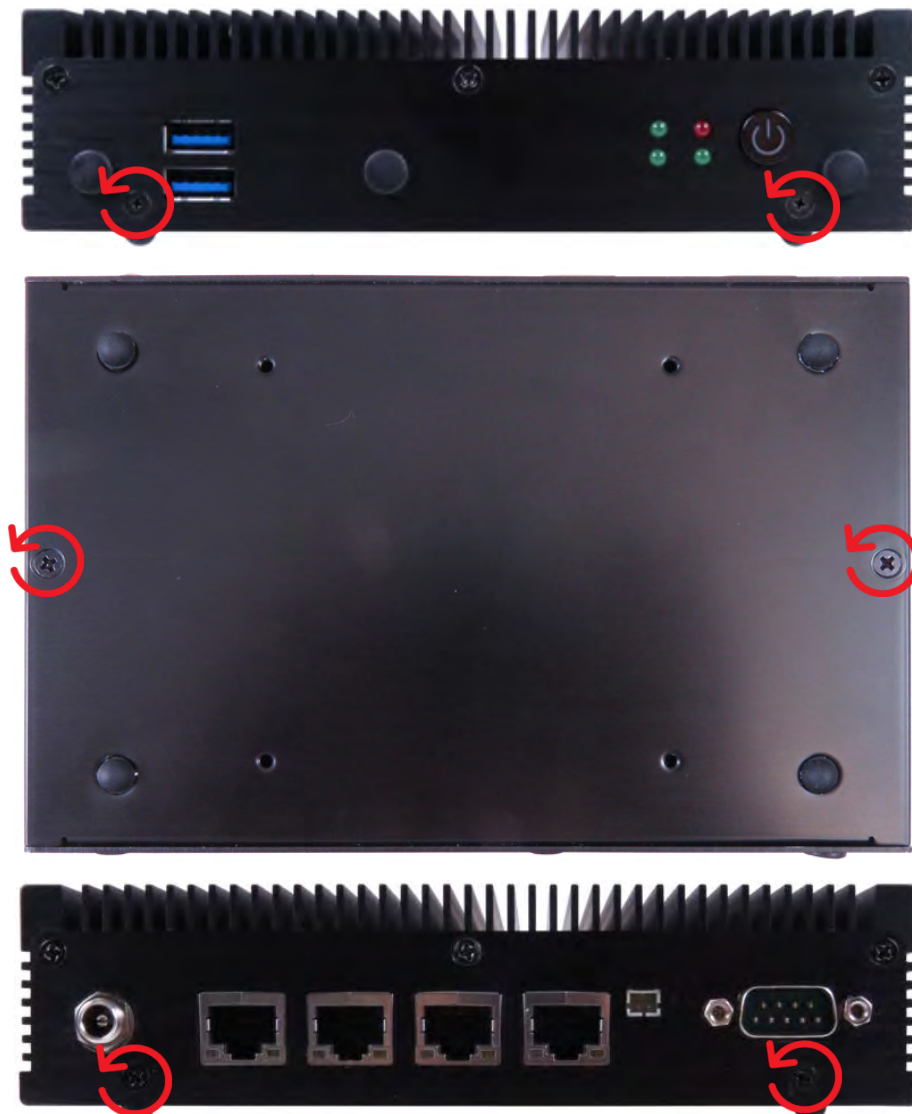

4. Lift the access cover up.
5. Now you have access to the internal DDR4 SO-DIMM, mSATA / mPCIe, M.2 and Micro-SIM card slots / sockets respectively in order to remove or install hardware components.
6. For closing replace carefully the access cover to the system and screw it on with the retained screws.
7. Tighten the retained screws when the cover is firmly in place.

### NOTICE

When used as intended, the KBox N-200 Series is to operate only in closed condition. Only when the access cover is properly fixed with the screws, it is ensured that the user does not have access to the internal parts of the KBox N-200 Series.

#### 5.1.1. Installing an mPCIe expansion card / mSATA SSD

To have access the mPCIe / mSATA socket please proceed according to the steps described:

1. Open the device as described in the subsection 5.1 "Opening and Closing the KBox N-200 Series" (step 1-5).
2. Locate the mPCIe / mSATA socket (MPCIE1) (Figure 4, pos. 2) and the corresponding fixing bolt. (Figure 4, pos. 10).
3. Align the notches on the mPCIe expansion card / mSATA SSD with the notches in the mPCIe / mSATA socket (MPCIE1). Insert the mPCIe expansion card / mSATA SSD into the corresponding socket (Figure 4, pos. 2) and rotate it down with the fixing hole of the card over the fixing bolt.
4. Press the mPCIe expansion card / mSATA SSD down on the side with the fixing hole and secure it with the available fastening screw (Figure 4, pos. 10).
5. In order to close the KBox N-200 Series, proceed step 6 & 7 described in the subsection 5.1 "Opening and Closing the KBox N-200 Series".

#### 5.1.2. Installing an M.2 SSD / M.2 expansion card

To have access the M.2 socket please proceed according to the steps described:

1. Open the device as described in the subsection 5.1 "Opening and Closing the KBox N-200 Series" (step 1-5).
2. Locate the M.2 socket (M2B1 / M2M1) (Figure 4, pos. 3 / pos. 4) which you intend to use for expansion and the corresponding fixing bolt. (Figure 4, pos. 11 / pos. 12 or 13). For configuration among card types, socket types, fixing bolts and fixing bolt extensions, view Chapter 4.1.2, Chapter 4.4.3, Table 6 and Table 7.

Table 6: Fixing bolt extensions and fastening screw



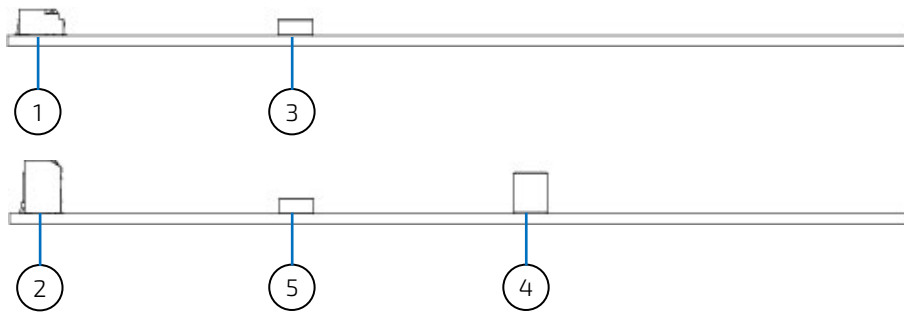
		
Item	A	B
Description	Fixing Bolt Extension	Fastening Screw
Dimensions	Nominal Size: M3 Length: 8.2 mm Head Height: 4.2 mm	Nominal Size: M3 Length: 3.3 mm Head Height: 0.8 mm

Figure 10: Location of M.2 sockets and fix bolts



- 1 M.2 Key B Socket (see Figure 4, pos. 3)
- 2 M.2 Key M Socket (see Figure 4, pos. 4)
- 3 M.2 fixing bolt for Key B type 22x42 or type 30x42 (see Figure 4, pos. 11)
- 4 M.2 fixing bolt for Key M type 22x80 (see Figure 4, pos. 12)
- 5 M.2 fixing bolt for Key M type 22x42 (see Figure 4, pos. 13)

Table 7: Installation configuration of M.2 SSD / M.2 expansion card

Key B type 22x42 / 30x42	
Key M type 22x80	
Key M type 22x42	

3. Align the notches on the M.2 SSD / M.2 expansion card with the notches in the M.2 socket (M2B1 / M2M1). Insert the M.2 SSD / M.2 expansion card into the corresponding socket (Figure 4, pos. 3 / pos. 4) and rotate it down with the fixing hole of the card over the fixing bolt.
4. Press the M.2 SSD / M.2 expansion card down on the side with the fixing hole (Figure 4, pos. 11 / pos. 12 / pos. 13) and secure it with the available fastening screw.
5. In order to close the KBox N-200 Series, proceed step 6 & 7 described in the subsection 5.1 "Opening and Closing the KBox N-200 Series".


### 5.1.3. Installing the Micro SIM card

To have access the Micro SIM card socket please proceed according to the steps described:

1. Open the device as described in the subsection 5.1 "Opening and Closing the KBox N-200 Series" (step 1-5).
2. Locate the Micro SIM card socket (SIM1) (Figure 4, pos. 5).
3. To unlock the Micro SIM card socket slide the cover of the Micro SIM socket in the direction shown in Figure 11.

4. Lift gently the slot cover and open the slot cover as shown in Figure 11.
5. Slide the Micro SIM card into the left and right card guides of the socket cover and push down the cover in order to close the cover as shown in Figure 11.
6. After closing the cover, lock the cover by sliding the closed cover in the direction shown in Figure 11.

Figure 11: Installing the Micro SIM card

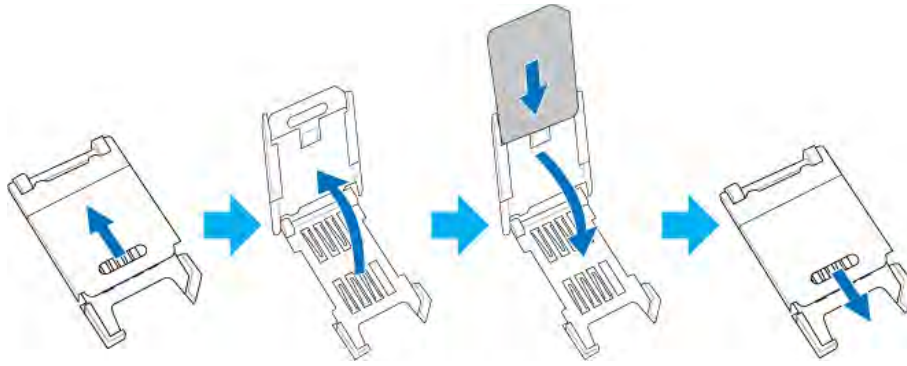

7. In order to close the KBox N-200 Series, proceed step 6 & 7 described in the subsection 5.1 "Opening and Closing the KBox N-200 Series".

## 6/ Thermal Considerations

### 6.1. Available Processors

Please refer to the chapter 10/ "Technical Specifications".



---

The list of processors may be extended over the product lifetime.

---

### 6.2. Convection Cooling

The applied cooling method provides adequate cooling of the device during operation and performs a one-way thermal transfer to the chassis. Three sides of the KBox N-200 Series consist of a compact aluminum U-shaped chassis with cooling fins. The cooling fins provide heat dissipation during operation.



---

To provide sufficient heat dissipation for the cooling of the KBox N-200 Series, never cover the cooling fins of the chassis. Do not place any objects on the device.

---

### 6.3. System Clearance

To provide a maximum of airflow through and around the box, proper distances to surrounding parts must be observed.

### 6.4. Maximum Temperatures



---

The maximum system ambient temperature depends mostly on the power consumption of the processor and the chipset.

---

For the temperature evaluation a specialised tool from Intel® was used to set the processor to a defined workload. Depending on the power consumption one or more cores were set to 75% workload. This includes the graphics core. The tool also handles the usage of the "Turbo Mode" of certain processor types.



---

The processor utilization depends highly on the software used. Software using multicore feature will run on several cores whereas standard software will only utilize one core. In this case the processor will use the "Turbo Mode" to increase the clock for the core with the highest workload, as long as the temperature is within limits.

---

### 6.5. Third Party Components

When the KBox N-200 Series is extended and configured with third party components like expansion card and SSD drive, it has to be taken into account that the air temperature inside the system is higher than the ambient temperature. An approximately internal temperature rise is given for assistance.

## 7/ Installation Instructions

The KBox N-200 Series system is designed for operating:

- ▶ within a control cabinet/ custom enclosure / machine or onto a wall / the back of a monitor by use of a VESA mounting kit
- ▶ as desktop unit.




---

Expansion card installation should be performed before installing the KBox N-200 Series into control cabinet / custom enclosure / machine, or onto wall / monitor.

---

### NOTICE

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of the system chassis.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Prior any installation work, ensure that there are no live wires on the installation site.

Do not handle the device if there is any damage visible.

Do not operate the KBox N-200 Series with foreign objects inside the chassis.

Further do not insert any retrieval device into the device while it is connected to power.

Kontron rejects all liability for any and all damages resulting from operation of the unit with foreign objects inside the chassis.

The KBox N-200 Series has to be installed and operated only by trained and qualified personnel.

Only personnel with appropriate qualifications, trainings and authorization are permitted to install and work with the Kontron KBox N-200 Series.

This device shall only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements.

The unit must be placed such that there is sufficient space in front and rear of it for connecting the cables to the I/O interface connectors and for operating the power button.

Leave sufficient free space around the unit to prevent the device from possibly overheating!

Refer also to section 10.1.2 "Mechanical Specifications".

The KBox N-200 Series must be firmly attached to a clean flat and solid mounting surface. Use proper fastening materials suitable for the mounting surface. Ensure that the mounting surface type and the used mounting solution safely support the load of the KBox N-200 Series and the attached components.

Please follow the local/national regulations for grounding.

The voltage feeds must not be overloaded. Adjust the cabling and the overcurrent protection to correspond with the electrical figures indicated on the type label.

The type label is located on the bottom side of the system.

It is recommended that the last cable attached to the system should be the power cable! Refer to the section 7.2 "DC Power Connection" and chapter 8/ "Starting Up".

---


## 7.1. System Mounting

In order to adapt the KBox N-200 Series for mounting Kontron offers different mounting solution such as:

- ▶ KBox N-200 Series configuration with a VESA mounting kit for vertical installation into a control cabinet / custom enclosure / machine or onto a wall / the back of a monitor
- ▶ KBox N-200 Series as desktop unit

Depending on the ordered KBox N-200 Series configuration, your system may be supplied with a VESA mounting kit (Figure 12). The kit consists of two parts: a base bracket (Figure 12, pos. 1) to be fixed permanently on the mounting surface and another hooked bracket to hold the KBox N-200 Series with a hand-screw knob (Figure 12, pos. 2) to secure two brackets.


Figure 12: Optional VESA mounting kit

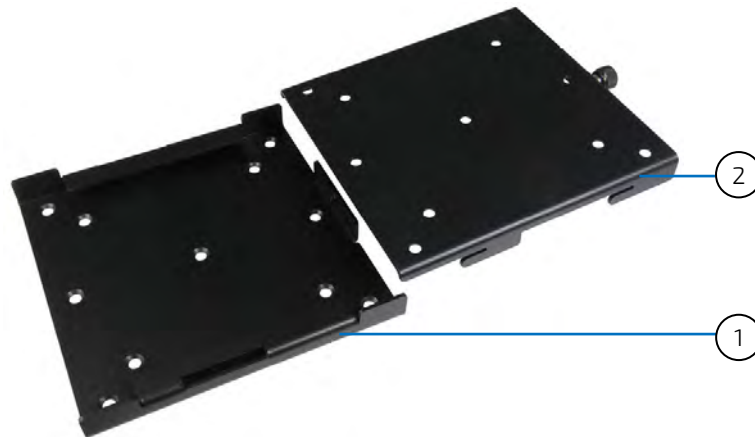

- 1 Base mounting bracket
- 2 Hooked mounting bracket with a hand-screw knob

The base mounting bracket complies with VESA 75 and VESA 100 patterns (Figure 13). To fasten the bracket, the control cabinet / custom enclosure / machine / monitor / wall must have VESA 75, VESA 100 or other screw pattern shown as Figure 13 for mounting.


Figure 13: Hole pattern of base mounting kit for KBox N-200 Series

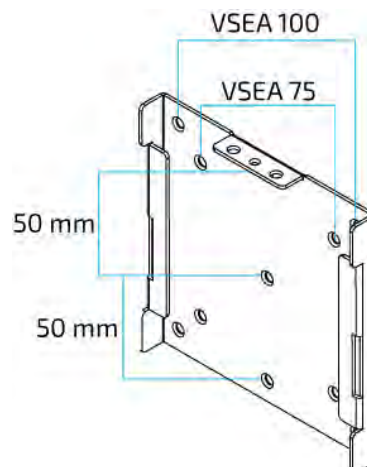

To mount the KBox N-200 Series please proceed according to the steps described:


1. Prepare the mounting surface with sufficient screws (four screws for VESA mount) and if necessary anchors corresponding to the mounting surface type if no VESA-compliant screw holes are available. (The recommended screw size is M4 x 6 ~ 10 mm but it still depends on the available screw holes of the mounting surface and never be larger than M4 if any.)
2. Secure the base mounting bracket to the mounting surface with screws (Figure 14). The following figures take VESA mounting to a monitor as an example.

Figure 14: Securing the base mounting bracket

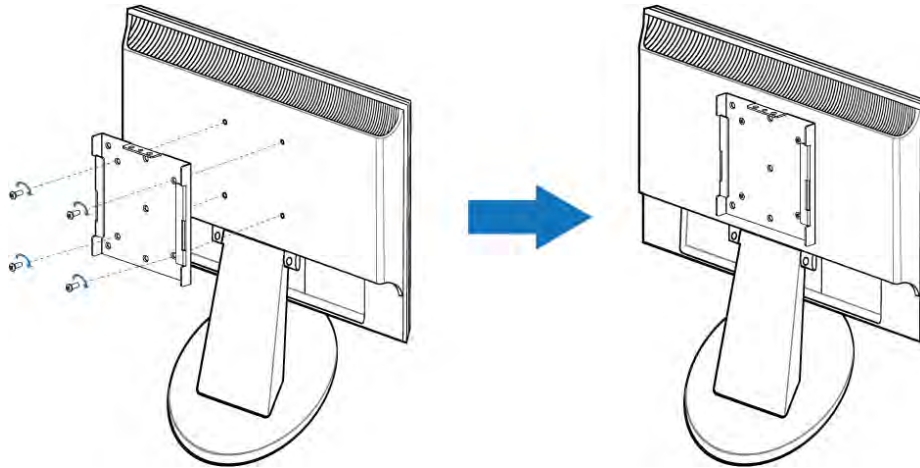


3. Secure the hooked mounting bracket onto the bottom side of the KBox N-200 (Figure 15) with M3 screws (6 mm long). The front I/O panel should be placed upward.

Figure 15: Securing the hooked mounting bracket onto the KBox N-200 Series

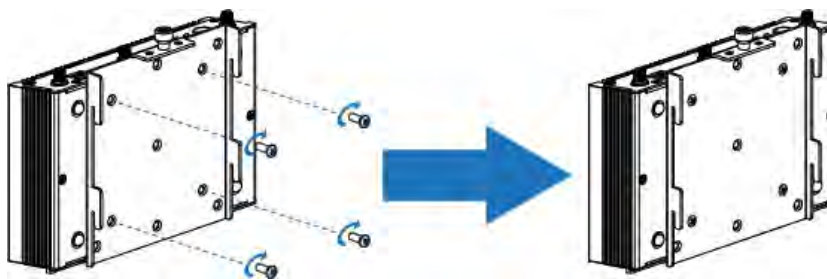

4. Place the KBox N-200 Series onto the mounting surface by sliding the hooked mounting bracket into the based mounting bracket (Figure 16).
5. Secure the hand-screw knob located on the hooked mounting bracket to fix two brackets (Figure 16).

Figure 16: Securing the KBox N-200 Series onto the mounting surface

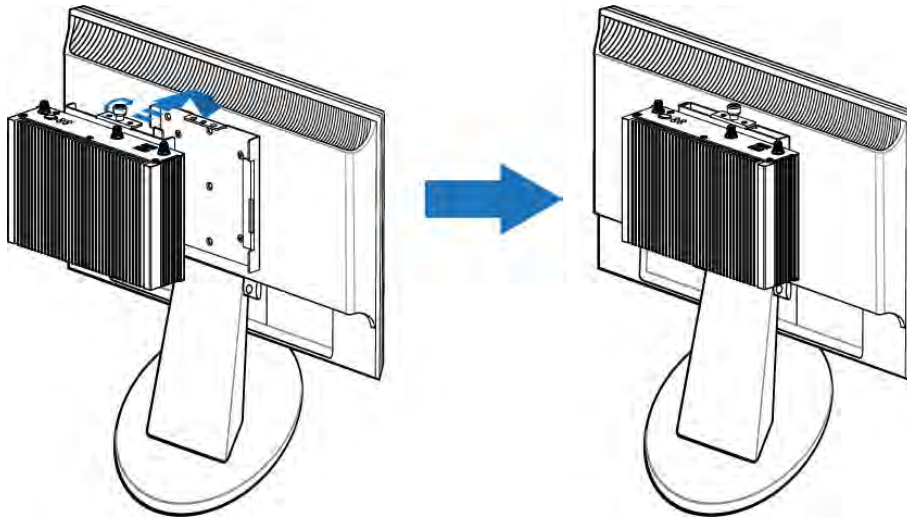

---

For a sufficient air circulation around the device, we recommend keep a proper clearance and not mount / operate any other devices within the clearance around the KBox N-200 Series.

---

## 7.2. DC Power Connection

The KBox N-200 Series is connected by a DC power input jack (Figure 2, pos. 1) to a DC power source.

The KBox N-200 Series is delivered with a power adapter to convert AC voltage into DC 12 V and a power cord to carry AC power to the power adapter.

## 8/ Starting Up



---

The KBox N-200 Series must be only operated with the nominal voltage of 12V ~ 19V DC of type SELV. For details refer to the chapter 10/ "Technical Specifications".

---

### 8.1. Connecting to DC Power Supply

The DC power input jack (Figure 2, pos. 1) is located on the rear side of the KBox N-200 Series. The KBox N-200 Series will be connected to a AC-to-DC power adapter via the supplied male DC power plug and corresponding power cable attached to the adapter.



---

Before using your system, become familiar with the system components and check that everything is connected properly. Following a proper cabling procedure will prevent a false power-on condition, which could result in unit operational failure.

When you install/disconnect the unit, the functional earth connection must always be made first and disconnected last.

Also, it is recommended that the last connections attached to the system should be the power wires!

---

#### **NOTICE**

---

The KBox N-200 Series must be connected DC power supply complying with the SELV (Safety Extra Low Voltage) requirements of EN 60950-1 standard. It must be observed that wiring and short-circuit/overcurrent protection is performed according to the applicable standards, regulations and respect to the electrical specification of the KBox N-200 Series.

The disconnecting device (fuse/circuit breaker) rating must be in accordance with the wire cross-section and the rated current of the KBox N-200 Series.

---



---

The cables must have some form of support so as to minimize the strain on the unit's connectors.

---

To connect the KBox N-200 Series to a corresponding DC power supply, please perform the following steps:

1. Connect the power adapter cable to the DC jack (DC IN, Figure 2, pos. 1) of the KBox N-200 Series.
2. Connect the power cable to the power adapter.
3. Connect the power cable to a power outlet.

## 8.2. Operating System and Hardware Component Drivers

Your system can be supplied optionally with a pre-installed operating system.

If you have ordered your KBox N-200 Series with a pre-installed operating system, all drivers are installed in accordance with the system configuration ordered (optional hardware components). Your system is fully operational when you switch it on for the first time. Please pay attention to the following note.

If you have ordered the KBox N-200 Series without a pre-installed operating system, you will need to install the operating system and the appropriate drivers for the system configuration you have ordered (optional hardware components) yourself.



---

**You can download the relevant drivers for the installed hardware from our web site at [www.kontron.com](http://www.kontron.com) by selecting the product.**

**Pay attention to the manufacturer specifications of the operating system and the integrated hardware components.**

---

## 9/ Maintenance and Cleaning

Equipment from Kontron requires only minimum servicing and maintenance for proper operation.

- ▶ For light soiling, clean the KBox N-200 Series with a dry cloth. Carefully remove dust from the surface of the cooling fins of the chassis using a clean, soft brush.
- ▶ Stubborn dirt should be removed using a mild detergent and a soft cloth.



---

**Do not use steel wool, metallic threads or solvents like abrasives, alcohol, acetone or benzene for cleaning the KBox N-200 Series.**

---

## 10/ Technical Specifications

Table 8: Technical Specifications

<b>System</b>	
<b>Processor</b>	▶ Intel® Atom® C3338 (Dual Core, 4M Cache, up to 2.20 GHz, FCBGA1310, 9 W TDP)
<b>Memory</b>	▶ 1x DDR4 SO-DIMM
<b>Network Connection</b>	
<b>Ethernet</b>	▶ 4x GbE LAN (RJ45 on rear, Marvell 88E1543)
<b>Peripheral Connection</b>	
<b>USB</b>	▶ 2x USB 3.0 (Type A on front)
<b>Serial Port</b>	▶ 1x RS232 (DB9 on rear)
<b>Storage &amp; Expansion</b>	
<b>Storage &amp; Expansion</b>	▶ 1x mSATA / mPCIe (full size, mixed w/ PCIe x1, SATA & USB 2.0) ▶ 1x M.2 Key B (type 22x42 / 30x42, mixed w/ PCIe x2, SATA & USB 2.0) ▶ 1x M.2 Key M (type 22x42 / 22x80, mixed w/ PCIe x4 & SATA) ▶ 1x Micro SIM Card Holder (controlled by M.2 Key B)
<b>Power</b>	
<b>System Input Voltage &amp; Connector</b>	▶ DC 12 V ~ 19 V for Lockable DC Jack (on rear)
<b>Power Adapter</b>	▶ AC 100 V ~ 240 V to DC 12 V
<b>Firmware</b>	
<b>BIOS</b>	▶ AMI uEFI BIOS w/ 128 Mb SPI Flash
<b>Watchdog</b>	▶ Programmable WDT to generate system reset
<b>H/W Monitor</b>	▶ Voltages, Temperatures
<b>Real Time Clock</b>	▶ SoC integrated RTC
<b>TPM</b>	▶ Optional (Infineon SLB 9665 TPM 2.0)
<b>System Control &amp; Monitoring</b>	
<b>Button, Switch &amp; Indicator</b>	▶ 1x Power Button w/ LED (on front) ▶ 1x Reset Button (on rear) ▶ 1x External Power Switch Wafer (on rear) ▶ 1x Storage LED (on front, red) ▶ 1x Wireless LED (on front, green) ▶ 2x User-defined LED (on front, green)
<b>Cooling</b>	
<b>Cooling Method</b>	▶ Passive
<b>Software</b>	
<b>OS Support</b>	▶ Windows Server ▶ Linux


## 10.1. Mechanical Specifications

Table 9: Mechanical Specifications

Construction	Aluminum Chassis
Dimensions (W x D x H)	165 mm x 109.4 mm x 40.2 mm / 6.50" x 4.31" x 1.58"
Weight	750 g / 1.65 lb

### 10.1.1. Mechanical Drawing

Figure 17: Mechanical Drawing

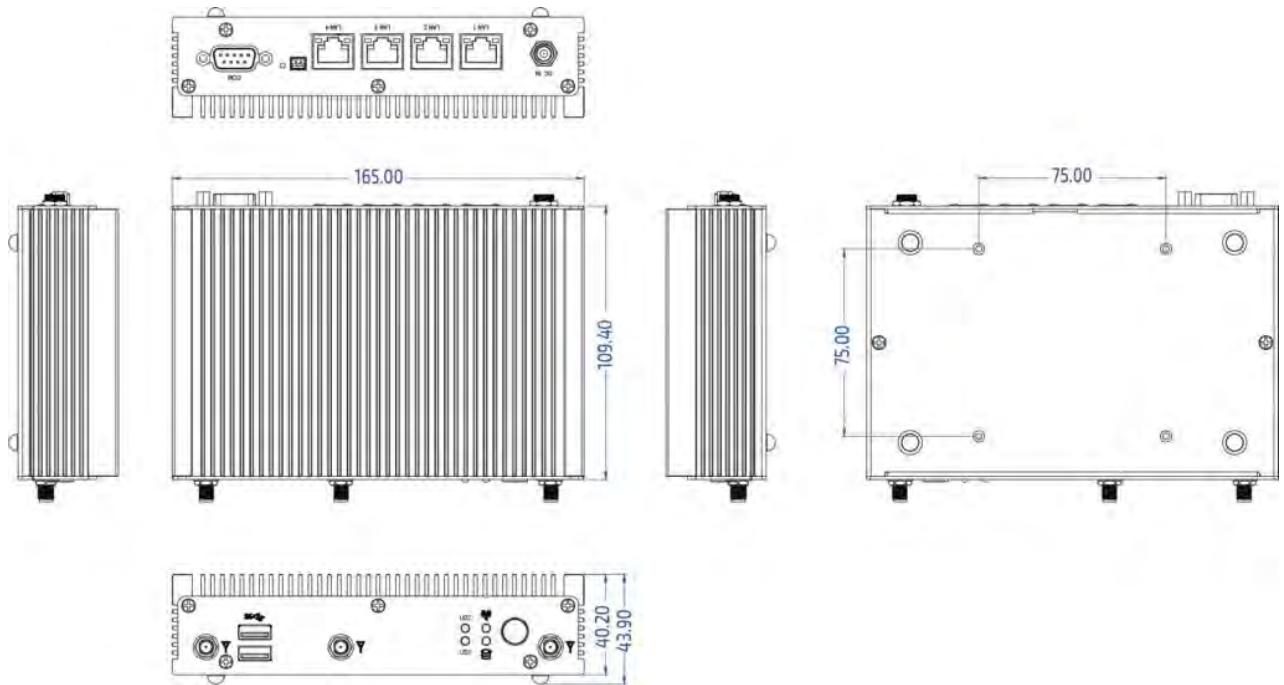

(unit: mm)

## 10.2. Environmental Conditions

Table 10: Environmental Conditions

Operating Temperature	0 °C ~ 45 °C / 32 °F ~ 113 °F
Storage Temperature	-20 °C ~ 80 °C / -4 °F ~ 176 °F
Humidity	0 % ~ 95 %

## 10.3. Standards and Certifications

Table 11: Standards and Certifications


CE Class B	▶ TBD
FCC Class B	▶ TBD

## 11/Standard Interfaces – Pin Assignments

Low-active signals are indicated by a minus sign.

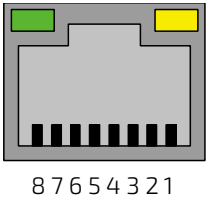
### 11.1.1. DC Jack

Table 12: DC Jack (see Figure 2, pos.1)

Pin	Signal Name	DC Jack (female)
1	+12~19Vin	
2	GND	


### 11.1.2. Ethernet Connectors

Table 13: Ethernet Connector (see Figure 2, pos. 2)

Pin	Signal Name	LAN1 ~ LAN6 (RJ45)
1	TX1+	
2	TX1-	
3	TX2+	
4	TX3+	
5	TX3-	
6	TX2-	
7	TX4+	
8	TX4-	

### 11.1.3. USB 3.0 Port

Table 14: USB 3.0 Port (see Figure 1, pos. 5)


USB 2.0 Contact Pins		USB 3.0 Contact Pins		9-pin USB Connector Type A Version 3.0 / 2.0
Pin	Signal Name	Pin	Signal Name	
1	+USB_VCC*	5	USB_RX-	
2	USB_D-	6	USB_RX+	
3	USB_D+	7	GND	
4	GND	8	USB_TX-	
		9	USB_TX+	



\* The power source of +USB\_VCC can be selected by JP6.

### 11.1.4. RS232 Serial Port

Table 15: RS232 Serial Port (see Figure 2, pos. 3)

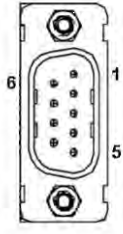
Pin	Signal Name	COM (9-pin D-SUB Male Connector)
1	DCD	
2	RXD	
3	TXD	
4	DTR	
5	GND	
6	DSR	
7	RTS	
8	CTS	
9	RI / +5V*	



\* Pin 9 configuration can be selected by Jumper JP7.

### 11.1.5. Wafer for External Power Switch

Table 16: Wafer for External Power Switch (see Figure 2, pos. 5)

Pin	Signal Name	Wafer for External Power Switch
1	Power_S/W+	
2	Power_S/W-	

## 12/ uEFI BIOS

### 12.1. Starting the uEFI BIOS

The KBox N-200 Series is provided with a Kontron-customized, pre-installed and configured version of AMI Aptio® V uEFI BIOS. AMI BIOS firmware is based on the Unified Extensible Firmware Interface (uEFI) specification and the Intel® Platform Innovation Framework for EFI. This uEFI BIOS provides a variety of new and enhanced functions specifically tailored to the hardware features of the KBox N-200 Series.




---

**The BIOS version covered in this document might not be the latest version. The latest version might have certain differences to the BIOS options and features described in this chapter.**

---

The uEFI BIOS comes with a setup program that provides quick and easy access to the individual function settings for control or modification of the uEFI BIOS configuration. The setup program allows the accessing of various menus that provide functions or access to sub-menus with more specific functions of their own.

To start the uEFI BIOS setup program, follow the steps below:

1. Power on the system. (Users can configure the BIOS by using the serial port as the console.)
2. Wait until the first characters appear on the screen (POST messages or splash screen).
3. Press the <DEL> key.
4. If the uEFI BIOS is password-protected, a request for password will appear. Enter either the User Password or the Supervisor Password (see Security menu), press <RETURN>, and proceed with step 5.
5. A setup menu will appear.

The KBox N-200 Series uEFI BIOS setup program uses a hot key-based navigation system. A hot key legend bar is located on the bottom of the setup screens.

The following table provides information concerning the usage of these hot keys.

**Table 17: Navigation Hot Keys Available in the Legend Bar**

Hotkeys	Description
<F1>	The <F1> key invokes the General Help window.
<->	The <Minus> key selects the next lower value within a field.
<+>	The <Plus> key selects the next higher value within a field.
<F2>	The <F2> key loads the previous values.
<F3>	The <F3> key loads the standard default values.
<F4>	The <F4> key saves the current settings and exit the uEFI BIOS setup.
<=> or <←>	The <Left/Right> arrows selects major setup menus on the menu bar. For example: Main, Advanced, Security, etc.
<↑> or <↓>	The <Up/Down> arrows selects fields in the current menu. For example: A setup function or a sub-screen.
<ESC>	The <ESC> key exits a major setup menu and enter the Exit setup menu. Pressing the <ESC> key in a sub-menu displays the next higher menu level.
<RERURN>	The <RETURN> key executes a command or select a submenu.

## 12.2. Setup Menus

The Setup utility features shows six menus in the selection bar at the top of the screen:

- ▶ Main
- ▶ Advanced
- ▶ Power
- ▶ Boot
- ▶ Security
- ▶ Save & Exit

The Setup menus are selected via the left and right arrow keys. The currently active menu and the currently active uEFI BIOS Setup item are highlighted in white. Each Setup menu provides two main frames. The left frame displays all available functions. Functions that can be configured are displayed in blue. Functions displayed in gray provide information about the status or the operational configuration. The right frame displays an Item Specific Help window providing an explanation of the respective function.

### 12.2.1. Main Setup Menu

Upon entering the uEFI BIOS Setup program, the Main Setup menu is displayed. This screen lists the Main Setup menu sub-screens and provides basic system information. Additionally functions for setting the system time and date are offered.

**Table 18: Main Setup Menu Sub-Screens and Functions**

Function	Description
BIOS Information	Read only field. Displays information about the system BIOS
Memory Information	Read only field. Displays information about total memory
ME Information	Read only field. Displays information about Intel Management Engine (ME) version
Firmware Information	Code version and firmware information
System Date	Set System Date
System Time	Set System Time

Figure 18: BIOS Main Menu Screen System Data and Time

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Product Information					
Product Name		KBox N-200			
BIOS Version		R0.03 (x64)			
BIOS Build Date		10/29/2018			
ME FW Version		0B:4.0.4.181			
CPU Information					
Intel® Atom® CPU C3338 @ 1.50GHz					
Microcode Revision		24h			
Processor Cores		2 / 2		→ ←: Select Screen	
Memory Information					
Total Size		4096 MB (DDR4)		↑ ↓: Select Item	
Frequency		1866 MHz		Enter: Select	
System Date		[Wed 01/16/2019]		+/-: Change Opt.	
System Time		[14:43:03]		F1: General Help	
Access Level		Administrator		F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
System Date	[dd/mm/yyyy]	Set the Date. Use Tab to switch between Data elements.
System Time	[hh:mm:ss]	Set the Time. Use Tab to switch between Time elements.

## 12.2.2. Advanced Setup Menu

The Advanced setup menu provides sub-screens and functions for advanced configurations. The following sub-screen functions are included in the menu:

- ▶ LAN Configuration
- ▶ FIA HSI010 Configuration
- ▶ CPU Chipset Configuration
- ▶ NVMe Configuration
- ▶ SATA Configuration
- ▶ USB Configuration
- ▶ Network Stack Configuration
- ▶ Super IO Configuration
- ▶ Serial Port Console Redirection
- ▶ H/W Monitor

---

**NOTICE**

Setting items on this screen to incorrect values may cause the system to malfunction.

---

Figure 19: BIOS Advanced Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Load X553 1GbE UNDI		[Disabled]			
> CPU Chipset Configuration > CPU Chipset Configuration > NVMe Configuration > SATA Configuration > USB Configuration > Network Stack Configuration > Super IO Configuration > Serial Port Console Redirection > H/W Monitor				→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
Load X553 1GbE UNDI	[Disabled], [Enabled]	Select whether to load onboard UNDI (Universal Network Driver Interface) for X553 1GbE.

Figure 20: BIOS Advanced Menu - FIA HSI010 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Flexible I/O Adapter HSI010 Configuration					
Lane 18: XHCI-A		[XHCI Enabled]		→ ←: Select Screen	
Lane 19: XHCI-B		[XHCI Enabled]		↑ ↓: Select Item	
Lane 10: mPCIe1 / mSATA1		[JP3 with mPCIe]		Enter: Select	
Lane 6: M.2 Key-B (SATA)		[JP2 with SATA]		+/-: Change Opt.	
Lane12: M.2 Key-M (SATA)		[M.2 Key-M with PCIe]		F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
Lane 18: XHCI-A	[Lane Disabled], [XHCI Enabled]	Select Lane to work as Disabled or XHCI-A.
Lane 19: XHCI-B	[Lane Disabled], [XHCI Enabled]	Select Lane to work as Disabled or XHCI-B.
Lane 10: mPCIe1 / mSATA1	[Lane Disabled], [PCIe Enabled], [SATA Enabled], [JP3 with mPCIe / mSATA]	Select Lane to work as Disabled, mPCIe1 or mSATA1. When selecting [PCIe Enabled] or [SATA Enabled], the function of mPCIe / mSATA socket is defined by the BIOS. When selecting [JP3 with mPCIe / mSATA], its function is defined by the jumper.
Lane 6: M.2 Key-B (SATA)	[Lane Disabled], [PCIe Enabled], [SATA Enabled], [JP2 with SATA / PCIe]	Select Lane to work as Disabled or M.2 Key-B (SATA). When selecting [PCIe Enabled] or [SATA Enabled], the function of M.2 Key B socket is defined by the BIOS. When selecting [JP2 with SATA / PCIe], its function is defined by the jumper.
Lane12: M.2 Key M (SATA)	[Lane Disabled], [M.2 Key-M with PCIe]	Select Lane to work as Disabled or M.2 Key-M (SATA).

Figure 21: BIOS Advanced Menu - CPU Chipset Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
CPU Chipset Configuration					
EIST		[Enabled]			
Turbo Mode		[Enabled]			
CPU C State		[Enabled]		→ ←: Select Screen	
Active Processor Core		0		↑ ↓: Select Item	
VMX		[Enabled]		Enter: Select	
VT-d		[Enabled]		+/-: Change Opt.	
VT-d Interrupt Remapping		[Enabled]		F1: General Help	
Max CPUID Value Limit		[Disabled]		F2: Previous Values	
Execute Disable Bit		[Enabled]		F3: Optimized Defaults	
IQAT		[Enabled]		F4: Save & Exit	
Fast Boot		[Enabled]		ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
EIST	[Disabled], [Enabled]	Select whether to enable or disable Enhanced Intel SpeedStep Technology.
Turbo Mode	[Disabled], [Enabled]	Select whether to enable or disable CPU Turbo capability to allow the processor core to run faster.
CPU C State	[Disabled], [Enabled]	Select whether to enable or disable the enhanced Cx state of the CPU.
VMX	[Disabled], [Enabled]	Select whether to enable or disable the Vanderpool Technology
VT-d	[Disabled], [Enabled]	Select whether to enable or disable VT-d.
VT-d Interrupt Remapping	[Disabled], [Enabled]	Select whether to enable or disable VT-d Interrupt Remapping. If Interrupt Remapping is disabled, the XAPIC mode will be disabled.
Max CPUID Value Limit	[Disabled], [Enabled]	Select whether to limit CPUID maximum value. It should be enabled in order to boot legacy OSes that cannot support CPUs with extended CPUID functions.
Execute Disable Bit	[Disabled], [Enabled]	Select whether to enable or disable Execute Disable Bit functionality, which prevents malicious buffer overflow attacks. When disabled, forces the XD feature flag to always return 0.
IQAT	[Disabled], [Enabled]	Select whether to enable or disable Intel QuickAssist Technology device from an OS.
Fast Boot	[Disabled], [Enabled]	Select whether to enable or disable fast boot which skips memory training and attempts to boot using last known good configuration.

Figure 22: BIOS Advanced Menu - NVMe Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
NVMe controller and Drive information					
No NVME Device Found				→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Figure 23: BIOS Advanced Menu - SATA Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
SATA Configuration					
SATA Controller 0		[Enabled]		→ ←: Select Screen	
SATA-0 Port Multiplier		[Disabled]		↑ ↓: Select Item	
SATA Controller 1		[Enabled]		Enter: Select	
SATA-1 Port Multiplier		[Disabled]		+/-: Change Opt.	
M.2 Key-B		Empty		F1: General Help	
M.2 Key B		[Enabled]		F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
SATA Controller 0 / 1	[Enabled], [Disabled]	Select whether to enable or disable SATA controller (D:19, F:0) / (D:20, F:0).
SATA-0 / 1 Port Multiplier	[Enabled], [Disabled]	Select whether to enable or disable SATA Controller 0 / 1 port multiplier support in CAP register of the controller.
M.2 Key-B	[Disabled], [Enabled]	Select whether to enable or disable SATA Controller 0 Port 2.

Figure 24: BIOS Advanced Menu - USB Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
USB Configuration					
USB Devices: None				→ ←: Select Screen ↑ ↓: Select Item Enter: Select	
Legacy USB Support		[Enabled]		+/-: Change Opt.	
XHCI Hand-off		[Enabled]		F1: General Help	
USB Mass Storage Driver Support		[Enabled]		F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
Legacy USB Support	[Enabled], [Disabled], [Auto]	Select whether to enable or disable Legacy USB support. AUTO option disables legacy support if no USB devices are connected.
XHCI Hand-off	[Enabled], [Disabled]	Select whether to enable or disable XHCI Hand-off function. This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	[Disabled], [Enabled]	Select whether to enable or disable USB Mass Storage Driver Support.

Figure 25: BIOS Advanced Menu - Network Stack Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Network Stack Configuration					
LAN Boot X553 1GbE-1		[Disabled]		→ ←: Select Screen	
LAN Boot X553 1GbE-2		[Disabled]		↑ ↓: Select Item	
LAN Boot X553 1GbE-3		[Disabled]		Enter: Select	
LAN Boot X553 1GbE-4		[Disabled]		+/-: Change Opt.	
Ipv4 PXE Support		[Enabled]		F1: General Help	
Ipv6 PXE Support		[Disabled]		F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
LAN Boot X553 1GbE-1	[Disabled], [Load PXE]	Select whether to enable or disable load onboard PXE (Preboot Execution Environment) or uEFI-SNP (Simple Network Protocol). Intel X553 NIC with Marvell 88E1543 Port 1.
LAN Boot X553 1GbE-2	[Disabled], [Load PXE]	Select whether to enable or disable load onboard PXE (Preboot Execution Environment) or uEFI-SNP (Simple Network Protocol). Intel X553 NIC with Marvell 88E1543 Port 2.
LAN Boot X553 1GbE-3	[Disabled], [Load PXE]	Select whether to enable or disable load onboard PXE (Preboot Execution Environment) or uEFI-SNP (Simple Network Protocol). Intel X553 NIC with Marvell 88E1543 Port 3.
LAN Boot X553 1GbE-4	[Disabled], [Load PXE]	Select whether to enable or disable load onboard PXE (Preboot Execution Environment) or uEFI-SNP (Simple Network Protocol). Intel X553 NIC with Marvell 88E1543 Port 4.
Ipv4 PXE Support	[Disabled], [Enabled]	Select whether to enable or disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.
Ipv6 PXE Support	[Disabled], [Enabled]	Select whether to enable or disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.

Figure 26: BIOS Advanced Menu - Super IO Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Super IO Configuration					
> Serial Port 1 Configuration				→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Figure 27: BIOS Advanced Menu - Super IO Configuration - Serial Port 1 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 1 Configuration					
Serial Port		[Enabled]		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Device Settings		IO=3F8h; IRQ=4;			
Change Setting		[Auto]			
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
Serial Port	[Disabled], [Enabled]	Select whether to enable or disable Serial Port (COM).
Change Settings	[Auto], [IO=3F8h; IRQ=4;], [IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;]	Select an optional setting for Super IO device.

Figure 28: BIOS Advanced Menu - Serial Port Console Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
COM1					
Console Redirection		[Enabled]			
> Console Redirection Settings					
COM2 (Disabled)				→ ←: Select Screen	
Console Redirection		Port Is Disabled		↑ ↓: Select Item	
Legacy Console Redirection				Enter: Select	
> Legacy Console Redirection Settings				+/-: Change Opt.	
Serial Port for Out-of-Band Management / Windows Emergency Management Services (EMS)				F1: General Help	
Console Redirection		[Disabled]		F2: Previous Values	
> Console Redirection Settings				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
Console Redirection	[Disabled], [Enabled]	Select whether to enable or disable console redirection.

Figure 29: BIOS Advanced Menu - Serial Port Console Configuration - COM1 Console Redirection Settings

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
COM1					
Console Redirection Settings					
Terminal Type		[ANSI]		→ ←: Select Screen	
Bits per second		[115200]		↑ ↓: Select Item	
Data Bits		[8]		Enter: Select	
Parity		[None]		+/-: Change Opt.	
Stop Bits		[1]		F1: General Help	
Flow Control		[None]		F2: Previous Values	
VT-UTF8 Combo Key Support		[Enabled]		F3: Optimized Defaults	
Recorder Mode		[Disabled]		F4: Save & Exit	
Resolution 100x31		[Disabled]		ESC: Exit	
Putty KeyPad		[VT100]			
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
Terminal Type	[VT100], [VT100+], [VT-UTF8], [ANSI]	VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc.

Feature	Option	Description
		VT-UTF8: Uses UTF8 encoding to map Unicode ANSI: Extended ASCII char set.
Bits per second	[9600], [19200], [38400], [57600], [115200]	Select serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.
Data Bits	[7], [8]	Select data bits.
Parity	[None], [Even], [Odd], [Mark], [Space]	A parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if the num of 1's in the data bits is odd. Mark: parity bit is always 1. Space: parity bit is always 0.
Stop Bits	[1], [2]	Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning.) The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit. The options are 1 and 2 stop bits.
Flow Control	[None], [Hardware RTS/CTS]	Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Software flow control uses start/stop ASCII chars, which slows down the data flow and can be problematic if binary data is being sent. The flow control options are: <ul style="list-style-type: none"> <li>• None</li> <li>• Hardware CTS/RTS: HW flow control uses two wires to send start/stop signals.</li> </ul>
VT-UTF8 Combo Key Support	[Disabled], [Enabled]	Select whether to enable or disable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.
Recorder Mode	[Disabled], [Enabled]	With this mode enabled, only text will be sent. This is to capture terminal data.
Resolution 100x31	[Disabled], [Enabled]	Select whether to enable or disable extended terminal resolution.
Putty KeyPad	[VT100], [LINUX], [XTERMR6], [SCO], [ESCN], [VT400]	Select FunctionKey and KeyPad on Putty.

Figure 30: BIOS Advanced Menu - Serial Port Console Configuration - Legacy Console Redirection Settings

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Legacy Console Redirection Settings					
Redirection COM Port		[COM1]		→ ←: Select Screen	
Resolution		[80x24]		↑ ↓: Select Item	
Redirect After POST		[BootLoader]		Enter: Select	
				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
				F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
Redirection COM Port	[COM1], [COM2 (Disabled)]	Select a COM port to display redirection of Legacy OS and Legacy OPRM Messages.
Resolution	[80x24], [80x25]	Select the number of rows and columns supported redirection on legacy OS.
Redirect After POST	[Always Enabled], [BootLoader]	When BootLoader is selected, the legacy console redirection is disabled before booting to legacy OS. When Always Enabled is selected, the legacy console redirection is enabled for legacy OS.

Figure 31: BIOS Advanced Menu - H/W Monitor

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
PC Health Status					
CPU Temperature-DTS		: +37 C			
CPU Temperature-Thermal		: +38 C			
System Temperature		: +39 C		→ ←: Select Screen	
+VCORE		: +1.048 V		↑ ↓: Select Item	
+VIN		: +12.264 V		Enter: Select	
+3VCC		: +3.344 V		+/-: Change Opt.	
+3VSB		: +3.360 V		F1: General Help	
+VBAT		: +3.104 V		F2: Previous Values	
+5VA		: +5.112 V		F3: Optimized Defaults	
+3VA		: +3.296 V		F4: Save & Exit	
				ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

### 12.2.3. Power Setup Menu

The Power setup menu provides functions and a sub-screen for power configurations. The following sub-screen function is included in the menu:

- ▶ WatchDog Timer Configuration

Figure 32: BIOS Power Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Power Configuration					
Restore AC Power Loss		[Power Off]			
Power Saving Mode		[Disabled]	→ ←: Select Screen		
Resume Event Control			↑ ↓: Select Item		
Resume LAN X553 1GbE-1		[Disabled]	Enter: Select		
Resume LAN X553 1GbE-2		[Disabled]	+/-: Change Opt.		
Resume LAN X553 1GbE-3		[Disabled]	F1: General Help		
Resume LAN X553 1GbE-4		[Disabled]	F2: Previous Values		
Resume By RTC Alarm		[Disabled]	F3: Optimized Defaults		
> WatchDog Timer Configuration			F4: Save & Exit		
			ESC: Exit		
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
Restore AC Power Loss	[Power Off], [Power On], [Last State]	Select AC power state when power is re-applied after a power failure. Select [Power Off] if you want the system to remain off after power restored. Select [Power On] if you use a power strip to turn the system on.
Power Saving Mode	[Disabled], [EUP Enabled]	Configure the power saving mode configuration. EUP Enabled: The system will enter to EUP Power Saving Mode during power off.
Resume LAN X553 1GbE-1	[Disabled], [OS-Driver], [FW-MagicPacket]	Select whether to enable wake from LAN device Intel X553 NIC with Marvell 88E1543 Port 1.
Resume LAN X553 1GbE-2	[Disabled], [OS-Driver], [FW-MagicPacket]	Select whether to enable wake from LAN device Intel X553 NIC with Marvell 88E1543 Port 2.
Resume LAN X553 1GbE-3	[Disabled], [OS-Driver], [FW-MagicPacket]	Select whether to enable wake from LAN device Intel X553 NIC with Marvell 88E1543 Port 3.
Resume LAN X553 1GbE-4	[Disabled], [OS-Driver], [FW-MagicPacket]	Select whether to enable wake from LAN device Intel X553 NIC with Marvell 88E1543 Port 4.
Resume By RTC Alarm	[Disabled], [Enabled]	Select whether to enable or disable Wake Up on Alarm, to turn on your system on a special day of the month.

Figure 33: BIOS Power Setup Menu - WatchDog Timer Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
WatchDog Timer Configuration					
WDT Function		[Disabled]	→ ←: Select Screen		
WDT Count Mode*		[Minute]	↑ ↓: Select Item		
WDT Timer*		3	Enter: Select		
			+/-: Change Opt.		
			F1: General Help		
			F2: Previous Values		
			F3: Optimized Defaults		
			F4: Save & Exit		
			ESC: Exit		
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

\* These items appear only when enabling WDT Function.

Feature	Option	Description
WDT Function	[Disabled], [Enabled]	Select whether to enable or disable WatchDog Timer function.
WDT Count Mode	[Second], [Minute]	Select WatchDog count mode: second or minute.

## 12.2.4. Boot Setup Menu

The boot setup menu lists the for boot device priority order, that is generated dynamically.

Figure 34: BIOS Boot Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Boot Configuration					
Full Screen LOGO Display		[Disabled]			
Setup Prompt Timeout		1			
Bootup NumLock State		[On]			
CSM Support				→ ←: Select Screen	
Boot Option Filter		[Enabled]		↑ ↓: Select Item	
Boot up Available Beep		[EUFi and Legacy]		Enter: Select	
Load built-in Shell		[Enabled]		+/-: Change Opt.	
File System Drivers		[Enabled]		F1: General Help	
LED1 Boot Status		[Driven Low]		F2: Previous Values	
Boot Option Priorities				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Option	Description
Full Screen LOGO Display	[Disabled], [Enabled]	Select whether to enable or disable to display logo screen.
Bootup NumLock State	[On], [Off]	Select the state of the NumLock feature of the keyboard after Startup. [On]: The keys on the keypad will act as numeric keys. [Off]: The keys on the keypad will act as cursor keys.
CSM Support	[Enabled]	Select whether to enable or disable CSM support.
Boot Option Filter	[UEFI and Legacy], [Legacy only], [UEFI only]	Control Legacy / UEFI ROMs priority.
Boot up Available Beep	[Enabled]	Select whether to enable or disable boot up available beep.
Load built-in Shell	[Enabled], [Disabled]	It controls installation of the boot option for a built-in shell.
File System Drivers	[Enabled], [Disabled]	Free software UEFI file system drivers, such as a read-only NTFS or exFAT EFI drivers, courtesy of the GRUB project.
LED1 Boot Status	[Driven High], [Driven Low]	LED1 (UGLED/DGLED) boot status when system BIOS boot ready.

### 12.2.5. Security Setup Menu

The Security setup menu provides information about the passwords and functions for specifying the security settings. The passwords are case-sensitive. The KBox N-200 Series provides no factory-set passwords.

**NOTICE**

If there is already a password installed, the system asks for this first. To clear a password, simply enter nothing and acknowledge by pressing <RETURN>. To set a password, enter it twice and acknowledge by pressing <RETURN>.

Figure 35: BIOS Security Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Password Description  If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights The password length must be in the following range:					
Minimum Length		3		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Maximum length		20			
Administrator Password					
User Password					
HDD Security Configuration:					
HDD 0: WDC WD 1600BE					
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Description
Administrator Password	Set administrator password
User Password	Set user password



If only the administrator's password is set, then only access to setup is limited. The password is only entered when entering setup.

If only the user's password is set, then the password is a power on password and must be entered to boot or enter setup. Within the setup menu the user has administrator rights.

Password length requirements are maximum 20 characters and minimum 3 characters.

### 12.2.5.1. Remember the password

It is highly recommended to keep a record of all passwords in a safe place. Forgotten passwords results in being locked out of the system.

If the system cannot be booted because the User Password or the Supervisor Password are not know, contact Kontron Support for further assistance.



---

**HDD security passwords cannot be cleared using the above method.**

---

### 12.2.6. Save & Exit Setup Menu

The exit setup menu provides functions for handling changes made to the UEFI BIOS settings and the exiting of the setup program.

Figure 36: BIOS Save & Exit Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Save Changes and Reset					
Discard Changes and Reset					
Save Options				→ ←: Select Screen	
Save Changes				↑ ↓: Select Item	
Discard Changes				Enter: Select	
Restore Defaults				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.19.1266. Copyright (C) 2018, American Megatrends, Inc.					

Feature	Description
Save Changes and Exit	Exit system setup after saving the changes. Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved to the CMOS RAM. The CMOS RAM is sustained by an onboard backup battery and stays on even when the PC is turned off. When you select this option, a confirmation window appears. Select [Yes] to save changes and exit.
Discard Changes and Exit	Exit system setup without saving any changes. Select this option only if you do not want to save the changes that you made to the Setup program. If you made changes to fields other than system date, system time, and password, the BIOS asks for a confirmation before exiting.
Save Changes	Save changes done so far to any of the setup values. This option allows you to save the selections you made. After selecting this option, a confirmation appears. Select [Yes] to save any changes.
Discard Changes	Discards changes done so far to any of the setup values. This option allows you to discard the selections you made and restore the previously saved values. After selecting this option, a confirmation appears. Select [Yes] to discard any changes and load the previously saved values.
Restore Defaults	Restore Default values for all the setup values. This option allows you to load optimal default values for each of the parameters on the Setup menus, which will provide the best performance settings for your system. The F9 key can be used for this operation.

## Appendix A: List of Acronyms



The following table does not contain the complete acronyms used in signal names, signal type definitions or similar. A description of the signals is included in the I/O Connector and Internal connector chapters within this user guide.

Table 19: List of Acronyms

<b>2D</b>	Two-Dimensional
<b>3D</b>	Three-Dimensional
<b>AT</b>	Advanced Technology
<b>ATX</b>	Advanced Technology eXtended
<b>BGA</b>	Ball Grid Array
<b>BIOS</b>	Basic Input / Output System
<b>BSP</b>	Board Support Package
<b>CMOS</b>	Complementary Metal Oxide Semiconductor
<b>CPU</b>	Central Processing Unit
<b>DC</b>	Direct Current
<b>DDC</b>	Display Data Channel
<b>DIO</b>	Digital Input / Output
<b>ECC</b>	Error-Correcting Code
<b>EEE</b>	Electrical and Electronic Equipment
<b>EOS</b>	Electrical OverStress
<b>ESD</b>	ElectroStatic Discharge
<b>GbE</b>	Gigabit Ethernet
<b>HDD</b>	Hard Disk Drive
<b>HDMI</b>	High Definition Multimedia Interface
<b>LAN</b>	Local Area Network
<b>LED</b>	Light Emitting Device
<b>LVDS</b>	Low-Voltage Differential Signaling
<b>ME F/W</b>	Management Engine Firmware
<b>mPCIe</b>	mini Peripheral Component Interconnect express
<b>PC-AT</b>	Personal Computer - Advanced Technology
<b>PCB</b>	Printed Circuit Board
<b>PSU</b>	Power Supply Unit
<b>PVC</b>	PolyViny Chloride
<b>PWM</b>	Pulse Width Modulation

<b>RAM</b>	Random Access Memory
<b>ROM</b>	Read-Only Memory
<b>RTC</b>	Real-Time Clock
<b>SATA</b>	Serial Advanced Technology Attachment
<b>SDP</b>	Serial Download Protocol
<b>SELV</b>	Safety Extra-Low Voltage
<b>SIM</b>	Subscriber Identity Module
<b>SMBus</b>	System Management Bus
<b>SoC</b>	System on Chip
<b>SO-DIMM</b>	Small Outline Dual In-line Memory Module
<b>SPD</b>	Serial Presence Detect
<b>SPI</b>	Serial Peripheral Interface
<b>TDP</b>	Thermal Design Power
<b>TPM</b>	Trusted Platform Module
<b>UEFI</b>	Unified Extensible Firmware Interface
<b>USB</b>	Universal Serial Bus
<b>UTP</b>	Update Transfer Protocol
<b>VGA</b>	Video Graphics Array
<b>WDT</b>	WatchDog Timer
<b>WEEE</b>	Waste Electrical and Electronic Equipment



## About Kontron

Kontron is a global leader in embedded computing technology (ECT). As a part of technology group S&T, Kontron offers a combined portfolio of secure hardware, middleware and services for Internet of Things (IoT) and Industry 4.0 applications. With its standard products and tailor-made solutions based on highly reliable state-of-the-art embedded technologies, Kontron provides secure and innovative applications for a variety of industries. As a result, customers benefit from accelerated time-to-market, reduced total cost of ownership, product longevity and the best fully integrated applications overall. Kontron is a listed company. Its shares are traded in the Prime Standard segment of the Frankfurt Stock Exchange and on other exchanges under the symbol "KBC". For more information, please visit: [www.kontron.com](http://www.kontron.com)

---



### HEADQUARTERS

#### **KONTRON S&T AG**

Lise-Meitner-Str. 3-5  
86156 Augsburg  
Germany  
Tel.: +49 821 4086-0  
Fax: +49 821 4086-111  
[info@kontron.com](mailto:info@kontron.com)